 


Bosom, Body and Yoke Cabinet Press

Single and Double Excalibur Models

Refer to Page 5 for Model Numbers

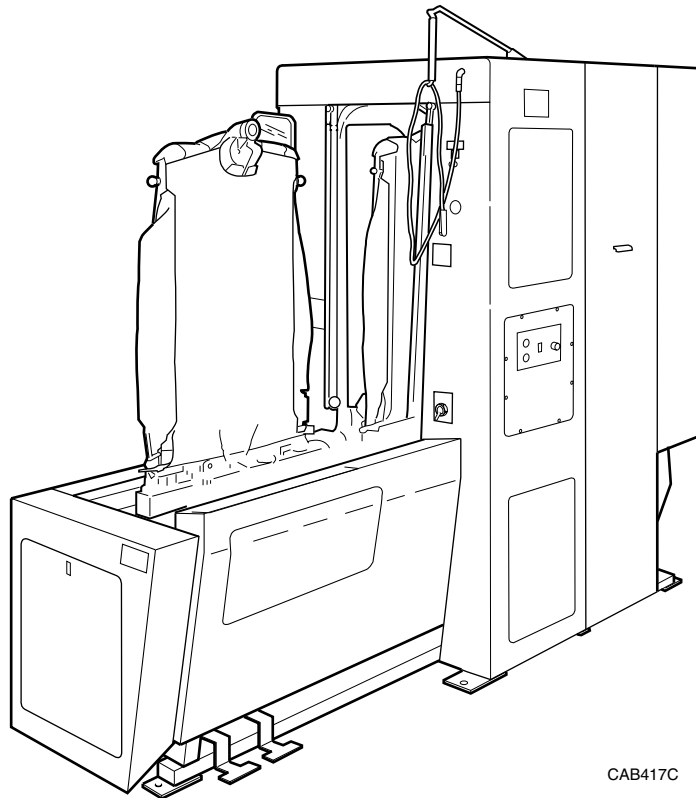

CAB417C

Table of Contents

Title	Page
Parts Ordering Information.....	4
Nameplate Location	4
Model Identification	5
Front Receiving Tube (Drawing 1 of 2)	6
Front Receiving Tube (Drawing 2 of 2)	8
Rear Receiving Tube (Drawing 1 of 2).....	10
Rear Receiving Tube (Drawing 2 of 2).....	12
Carriage Sub-Assembly	14
Shock Absorber Assembly.....	16
Rocker Arm and Cam Components	18
Rear Head Components	20
Head Adjusting Rod Assembly	22
Front Head Open Roller Valve Assembly	24
Buck and Cover Assembly (Drawing 1 of 4)	26
Buck and Cover Assembly (Drawing 2 of 4)	28
Buck and Cover Assembly (Drawing 3 of 4)	30
Buck and Cover Assembly (Drawing 4 of 4)	32
Sleeve Expander Assembly	34
Pedal Base and Valve Assembly	36
Valve Body Assembly	38
Collar Block Assembly (Drawing 1 of 2).....	40
Collar Block Assembly (Drawing 2 of 2).....	42
Collar Block Cylinder Assembly	44
Collar Valve Assembly	46
Collar Block Foot Pedal Valve Assembly	48
Pedal Base Assembly	50
Head Pressing Cylinder Assembly.....	52
External Air Inlet Assembly	54
Gauge Assembly.....	56
Internal Air Inlet Assembly	58
Filter Damper Box Assembly	60
Damper Box Assembly (Drawing 1 of 3)	62
Damper Box Assembly (Drawing 2 of 3)	64
Damper Box Assembly (Drawing 3 of 3)	66
Steam Application	68
Primary Steam Inlet Assembly	70
Steam Return Assembly	72
Rear Head Steam Return Assembly	74
Discharge Tube Assembly	76
Front Head Safety Bar Application.....	78
Rear Head Safety Bar Application	80

© Copyright 2004, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Safety Valve Assembly	82
Safety Valve Assembly – Front Left	84
Safety Valve Assembly – Rear Left	86
Safety Valve Assembly – Front Right	88
Safety Valve Assembly – Rear Right	90
Head Safety Bar Assembly	92
Operating Control Panel Assembly (Drawing 1 of 2)	94
Operating Control Panel Assembly (Drawing 2 of 2)	96
Valve and Bracket Assembly (Drawing 1 of 5).....	98
Valve and Bracket Assembly (Drawing 2 of 5).....	100
Valve and Bracket Assembly (Drawing 3 of 5).....	102
Valve and Bracket Assembly (Drawing 4 of 5).....	104
Valve and Bracket Assembly (Drawing 5 of 5).....	106
Tail Clamp Valve Assembly	108
Operating Valve Assembly (Drawing 1 of 6)	110
Operating Valve Assembly (Drawing 2 of 6)	112
Operating Valve Assembly (Drawing 3 of 6)	114
Operating Valve Assembly (Drawing 4 of 6)	116
Operating Valve Assembly (Drawing 5 of 6)	118
Operating Valve Assembly (Drawing 6 of 6)	120
Reset Valve Assembly	122
Electrical Control Assembly	124
Control Panel Assembly.....	126
Motor and Timer Control Box Cover Assembly.....	128
Heat Exchanger Assembly.....	130
Thermostat Assembly	132
Covers Assembly	134
Label Application.....	136
Completing Parts	138
Frame Completing Parts	140
Vacuum Air Valve Assembly.....	142
Low Pressure Air System (Drawing 1 of 5)	144
Low Pressure Air System (Drawing 2 of 5)	146
Low Pressure Air System (Drawing 3 of 5)	148
Low Pressure Air System (Drawing 4 of 5)	150
Low Pressure Air System (Drawing 5 of 5)	152
Air System (Drawing 1 of 8)	154
Air System (Drawing 2 of 8)	155
Air System (Drawing 3 of 8)	158
Air System (Drawing 4 of 8)	159
Air System (Drawing 5 of 8)	162
Air System (Drawing 6 of 8)	163
Air System (Drawing 7 of 8)	166
Air System (Drawing 8 of 8)	167
Roller Valve Assembly	170
Bracket and Fittings Assembly (Drawing 1 of 6)	172

Bracket and Fittings Assembly (Drawing 2 of 6)	174
Bracket and Fittings Assembly (Drawing 3 of 6)	176
Bracket and Fittings Assembly (Drawing 4 of 6)	178
Bracket and Fittings Assembly (Drawing 5 of 6)	180
Bracket and Fittings Assembly (Drawing 6 of 6)	182
Electrical Parts and Conduit.....	184
Parts Index.....	187

 
Parts Ordering Information

If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.

For technical assistance, call (920) 748-3121.

Nameplate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on nameplate(s) as shown.

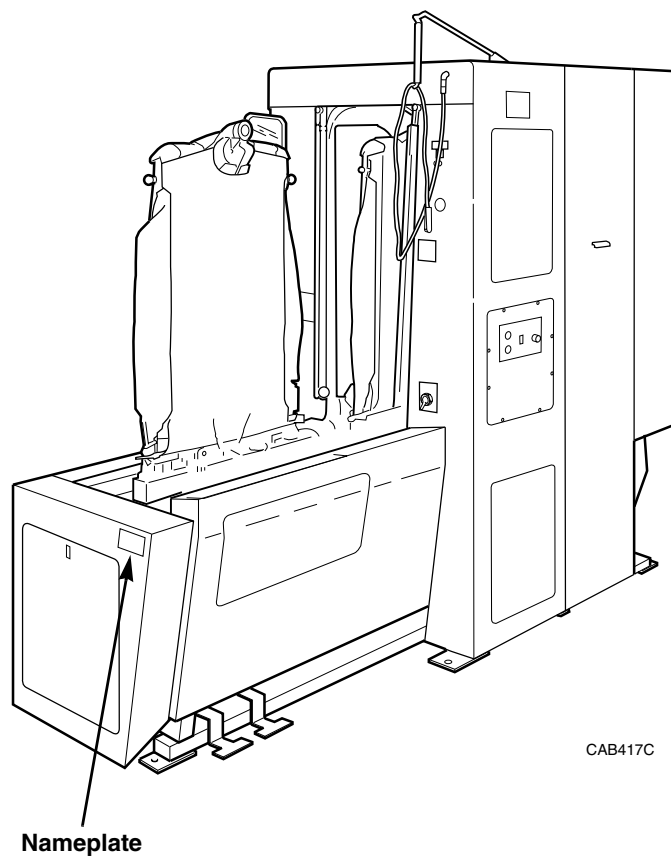


Model Identification

Information in this manual is applicable to these Cabinet Presses:

CBBY-X
CBBY-XV
DFB-X
DFB-XV

Front Receiving Tube (Drawing 1 of 2)

 Models CBBY-X and DFB-X

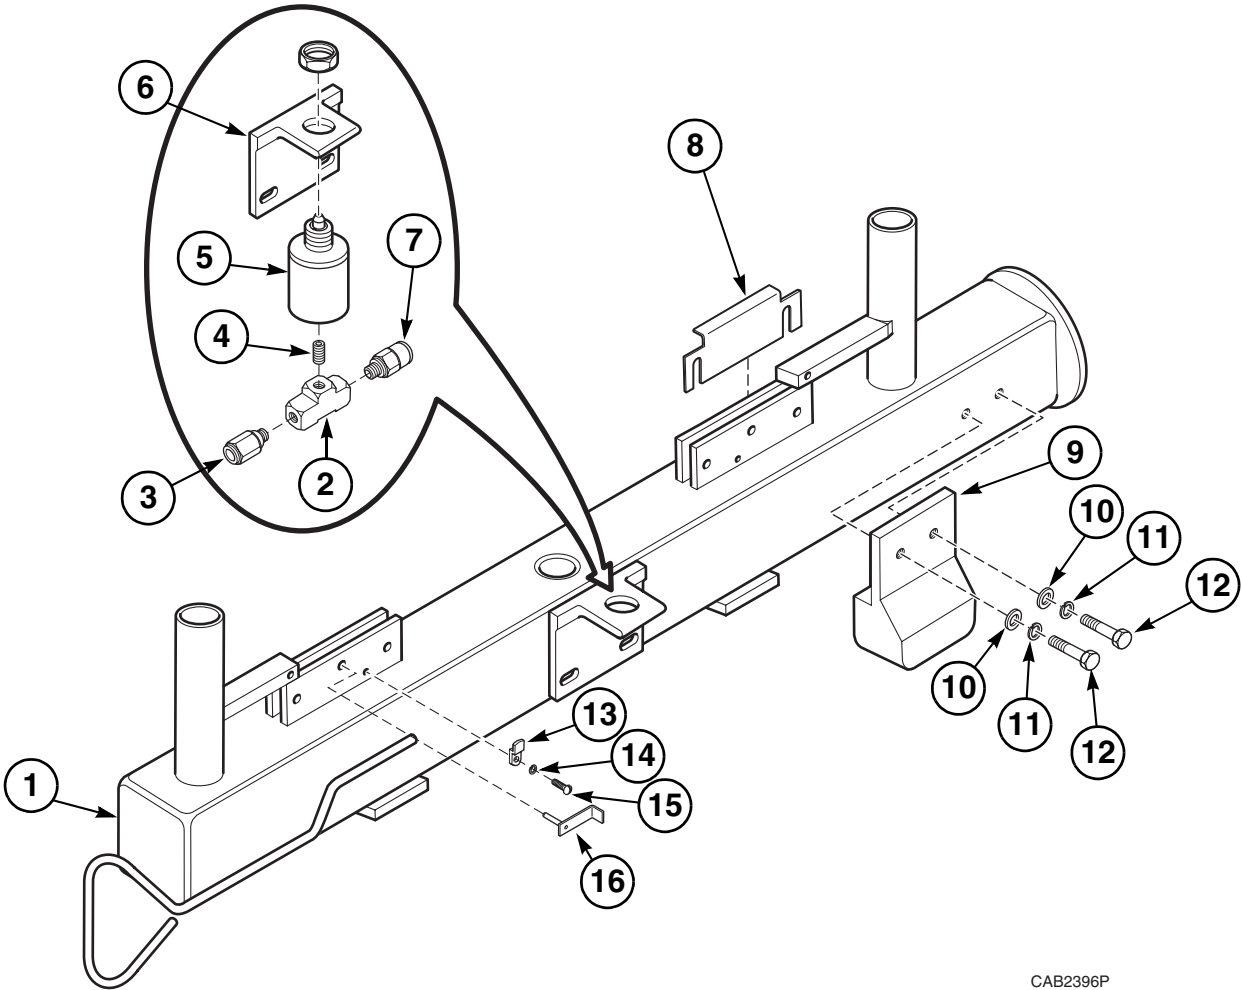


CAB2396P

Front Receiving Tube (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1436914	Receiving Tube Assembly	Includes items 1-16
	J1484609	Cylinder and Carriage Tubing Assembly	Includes items 2-7
1	J1546084	Receiving Tube Weldment	
2	JC-70613	Tee	
3	J1416759	Connector	
4	J1232313	Nipple	
5	J1381607	Tail Clamp Cylinder	
6	J1381599	Bracket	
7	F422101	Connector	
8	J1484393	Shim	
9	JA-23921	Cam	
10	JC-80513	Washer	2 required
11	J1185073	Washer	2 required
12	J1001726	Screw	2 required
13	JA-17207	Clip	
14	J1000975	Washer	
15	M400044	Screw	
16	JA-04749	Key	

Front Receiving Tube (Drawing 2 of 2)

 Models CBBY-XV and DFB-XV

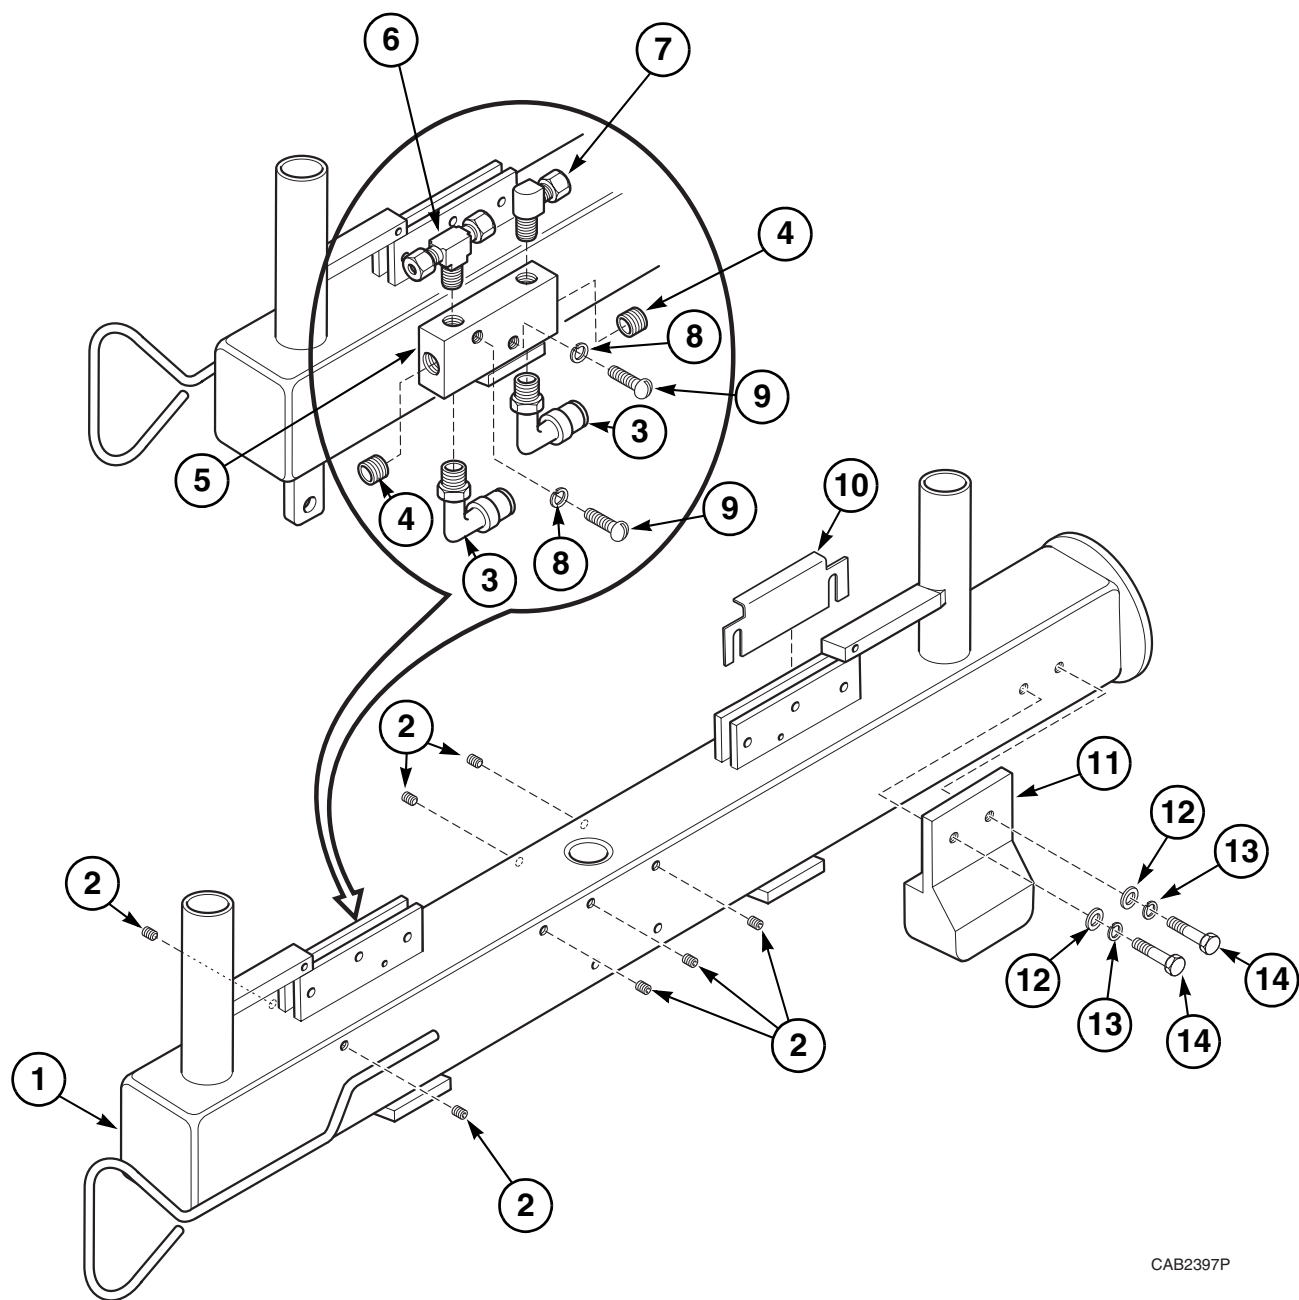

CAB2397P


Front Receiving Tube (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1473156	Air Manifold Assembly	Includes items 3-7
1	J1546084	Receiving Tube Weldment	
2	N/A	Screw	7 required
3	J1407741	Elbow	2 required
4	J1039858	Plug	2 required
5	J1618958	Manifold	
6	JC-30734	Tee	
7	JA-50770	Elbow	
8	J1000975	Washer	2 required
9	JC-61273	Screw	2 required
10	J1484393	Shim	Use as necessary to secure buck
11	JA-23921	Cam	
12	JC-80513	Washer	2 required
13	J1185073	Washer	2 required
14	J1001726	Screw	2 required

N/A = Part no longer available

Rear Receiving Tube (Drawing 1 of 2)

 Model DFB-XV

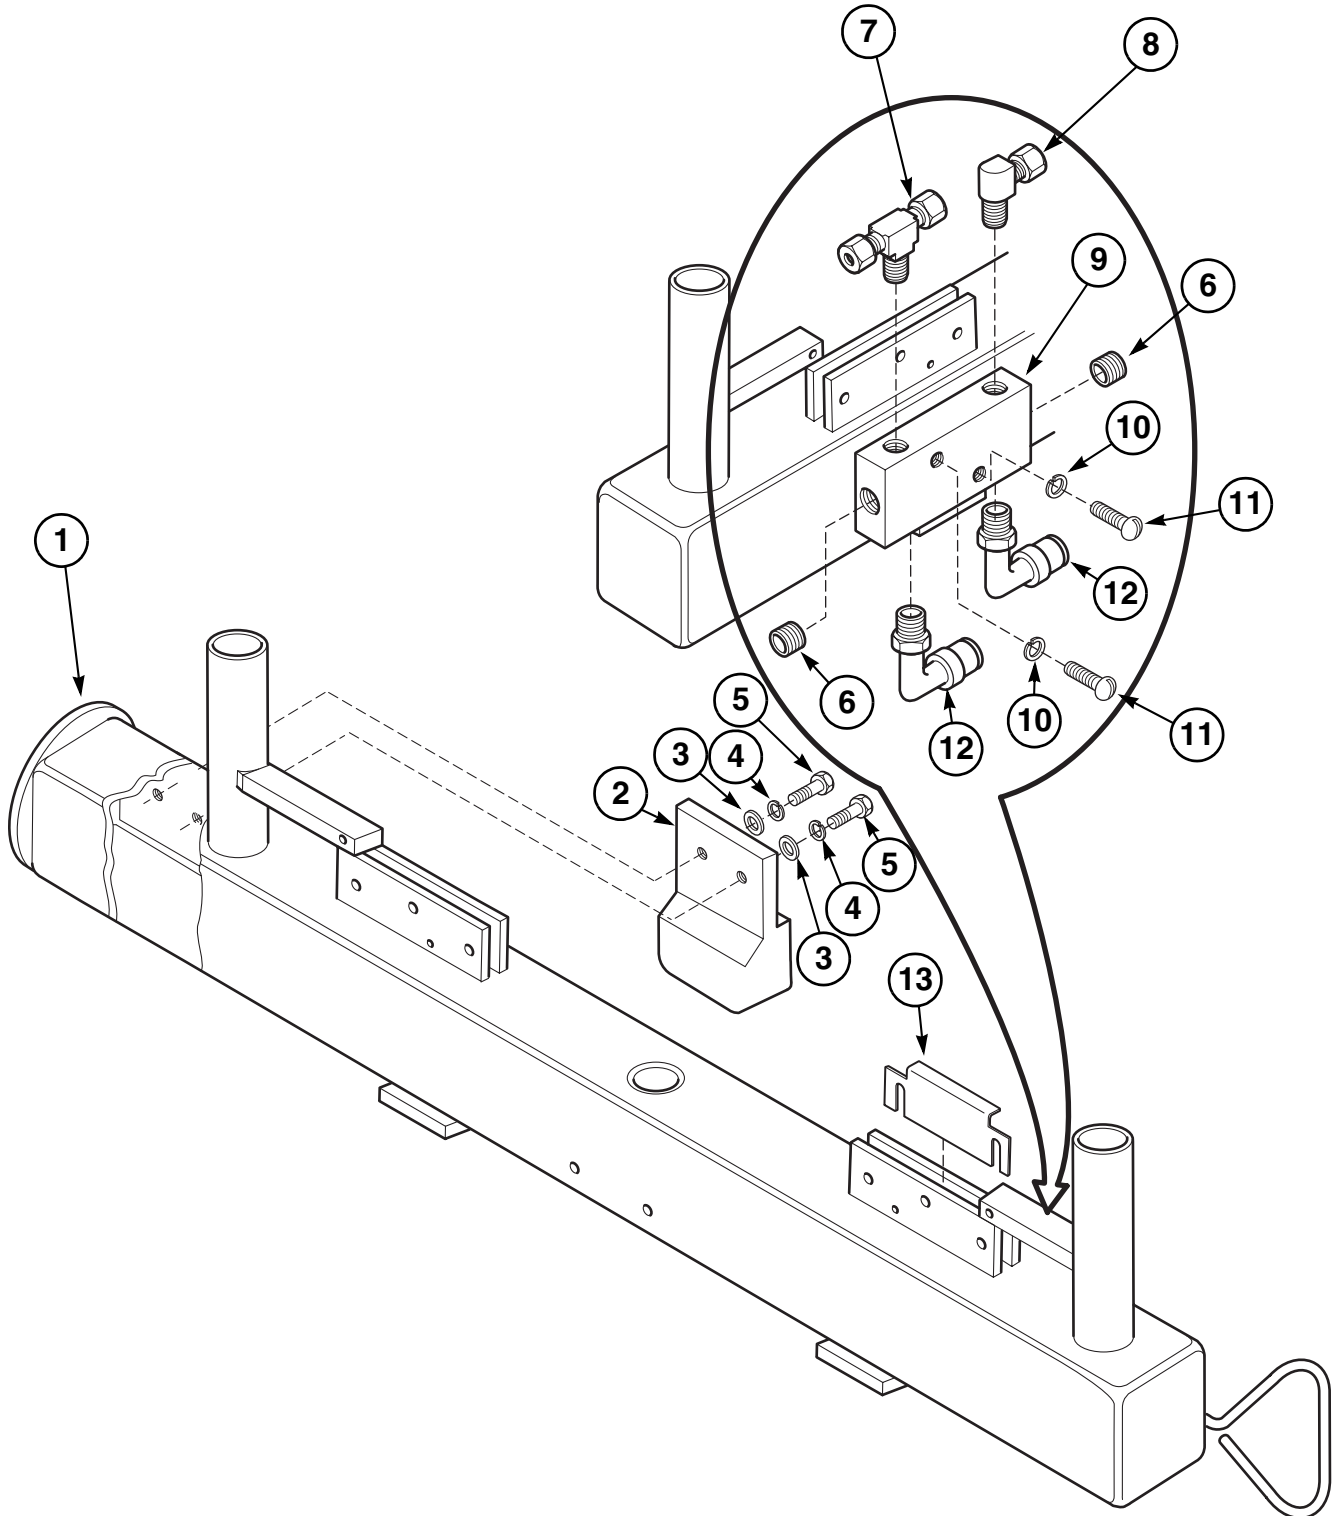


CAB2398P

Rear Receiving Tube (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1473156	Air Manifold Assembly	Includes items 2-6
1	J1546092	Receiving Tube Weldment	
2	JA-23921	Cam	
3	JC-80513	Washer	2 required
4	J1185073	Washer	2 required
5	J1001734	Screw	2 required
6	J1039858	Plug	2 required
7	JC-30734	Tee	
8	JA-50770	Elbow	
9	J1618958	Manifold	
10	J1000975	Washer	2 required
11	JC-61273	Screw	2 required
12	J1407741	Elbow	2 required
13	J1484393	Shim	Use as necessary to secure buck

Rear Receiving Tube (Drawing 2 of 2)

 Model DFB-X

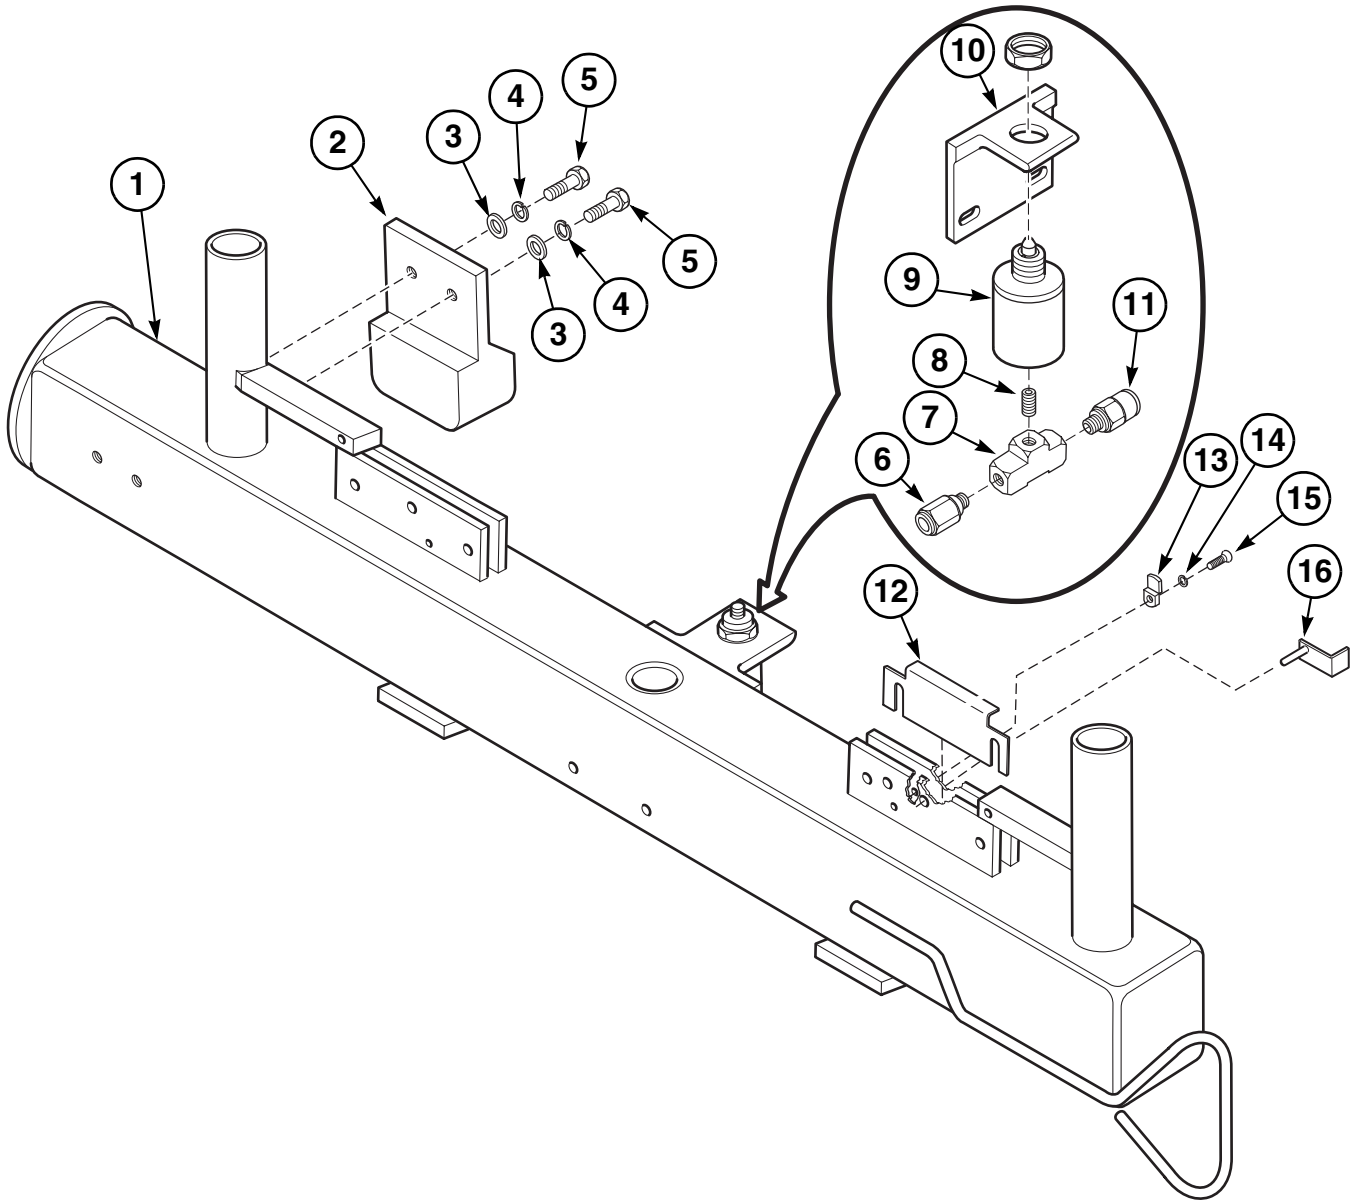


CAB2399P

Rear Receiving Tub (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1436914	Receiving Tube Assembly	Includes items 1-16
	J1484609	Cylinder and Carriage Tubing Assembly	Includes items 6-11
1	J1546092	Receiving Tube Weldment	
2	JA-23921	Cam	
3	JC-80513	Washer	2 required
4	J1185073	Washer	2 required
5	J1001734	Screw	2 required
6	J1416759	Connector	
7	JC-70613	Tee	
8	J1232313	Nipple	
9	J1381607	Tail Clamp Cylinder	Includes nut
10	J1381599	Bracket	
11	F422101	Connector	
12	J1484393	Shim	
13	JA-17207	Clip	
14	J1000975	Washer	
15	M400044	Screw	
16	JA-04749	Key	

 Carriage Sub-Assembly

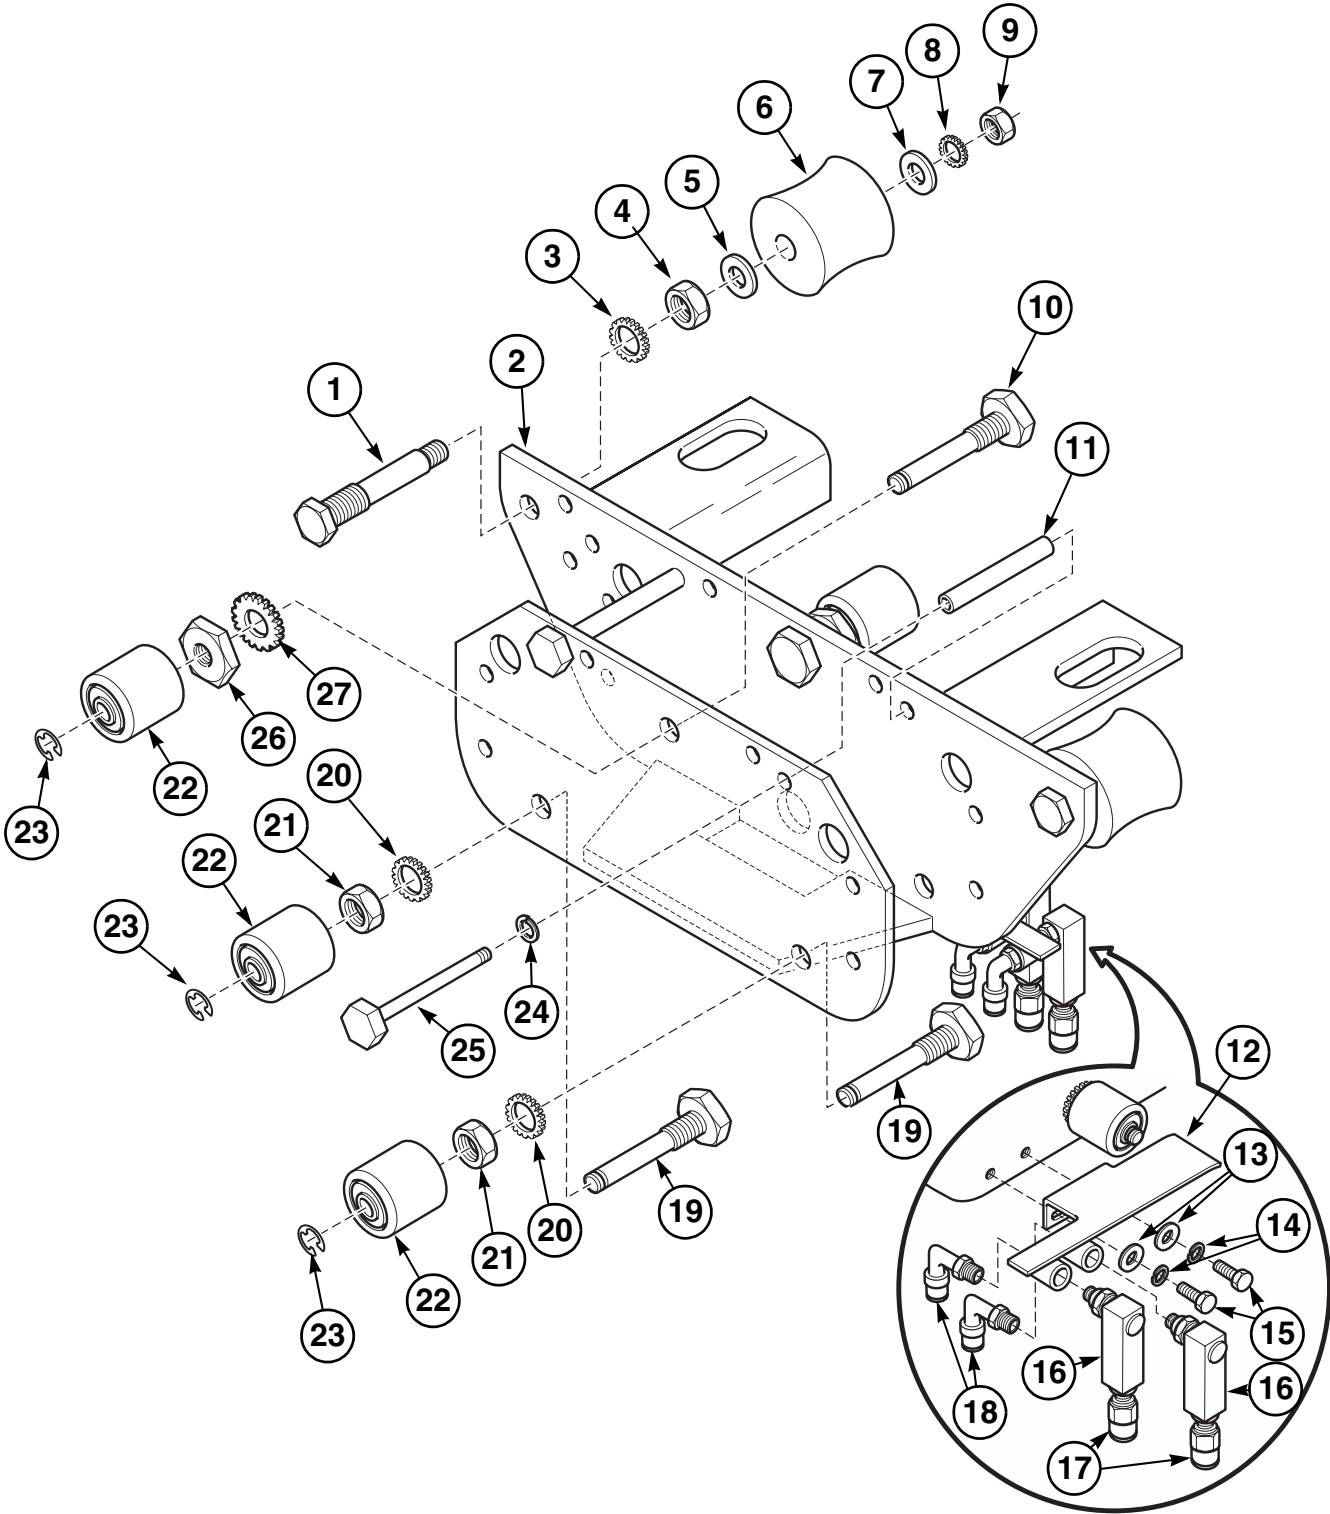


CAB2275P

Carriage Sub-Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1435247	Carriage Sub-Assembly	Includes items 1-11 and 19-27
	J1488816	Front Swivel Bracket Assembly	Models CBBY-X and DFB-X; Includes items 12 and 16-18
	JA-23390	Spacer	.075 thick; Use as necessary to shim buck
	JA-23391	Spacer	.060 thick; Use as necessary to shim buck
	JA-23392	Spacer	.048 thick; Use as necessary to shim buck
	JA-23393	Spacer	.036 thick; Use as necessary to shim buck
	JA-22689	Washer	
	91200	Washer	
	JA-50190	Screw	
1	JA-23284	Shaft	Roller locking; 2 required
2	JA-09243	Front Carriage Weldment	
3	JA-53985	Washer	4 required
4	M400022	Nut	4 required
5	J1618990	Washer	2 required
6	JA-06318	Roller	Concave; 2 required
7	J1001304	Washer	2 required
8	N/A	Washer	2 required
9	20274	Nut	2 required
10	JA-23283	Shaft	Roller adjusting; 2 required
11	JA-23019	Spacer	2 required
12	N/A	Front Swivel Bracket Weldment	
13	JC-80513	Washer	2 required
14	J1185073	Washer	2 required
15	J1023894	Screw	2 required
16	JA-54426	Fitting	2 required
17	F422101	Connector	2 required
18	J1407741	Elbow	2 required
19	JA-23282	Shaft	2 required
20	JA-53985	Washer	4 required
21	M400022	Nut	4 required
22	JA-09186	Flat Roller	4 required
23	JA-53987	Retaining Ring	4 required
24	M400013	Washer	2 required
25	JC-60006	Screw	2 required
26	JA-22687	Nut	2 required
27	JA-53986	Washer	2 required

N/A = Part no longer available

 Shock Absorber Assembly

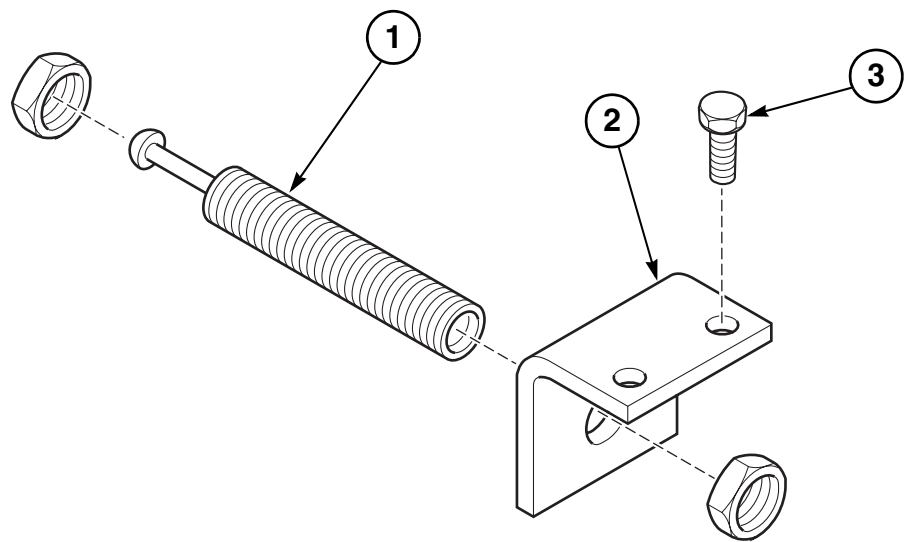


CAB2400P

Shock Absorber Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1626845	Shock Absorber Assembly	Includes items 1 and 2
1	J1626837	Shock Absorber	Includes nuts
2	J1518091	Mounting Bracket	
3	JC-62724	Screw	2 required

 Rocker Arm and Cam Components

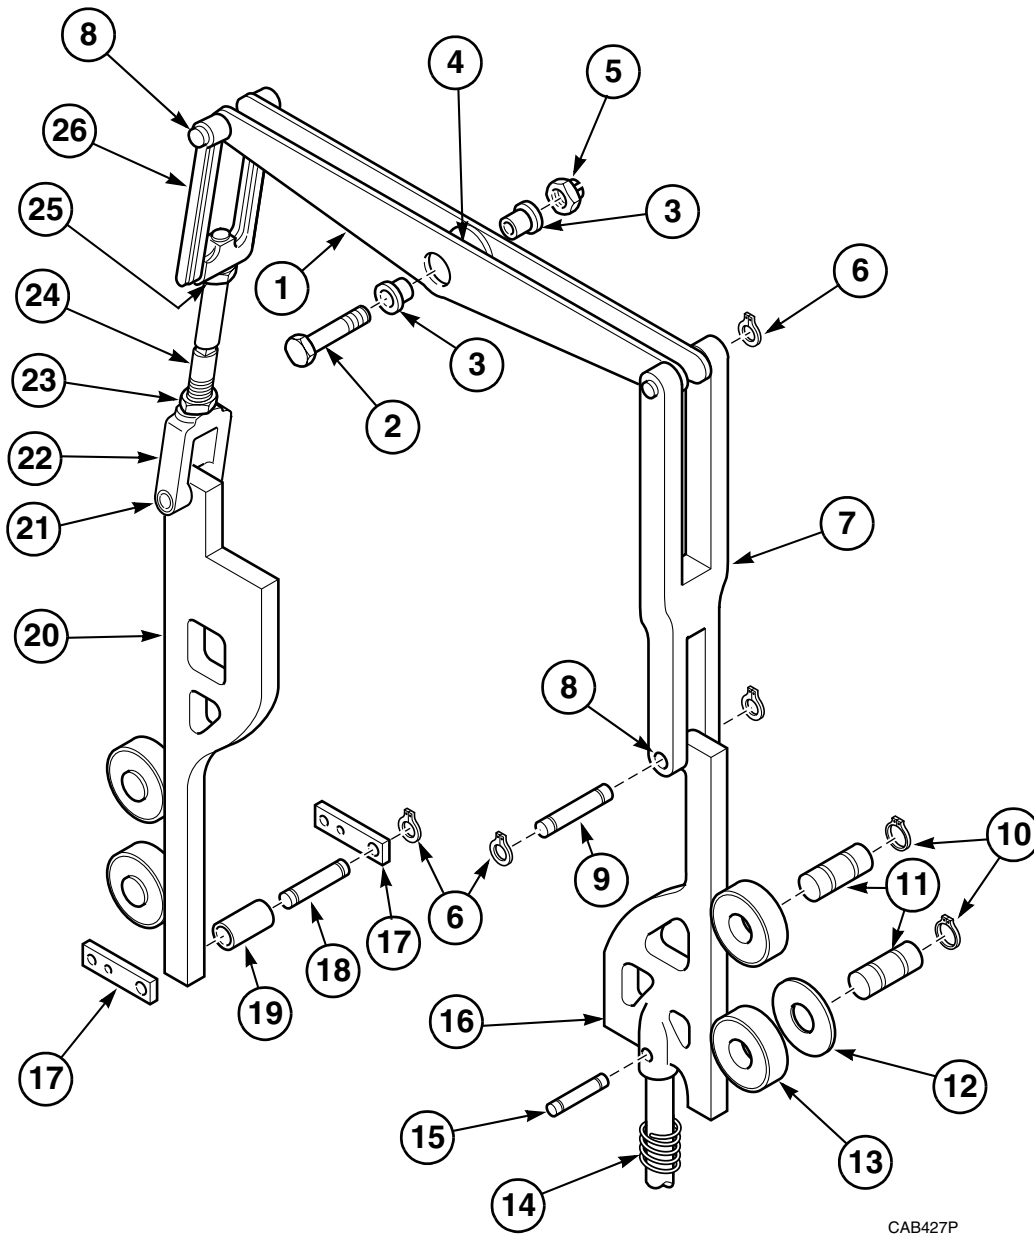


CAB427P

Rocker Arm and Cam Components

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-08726	Rocker Arm Assembly	Includes items 1-15
1	JA-08893	Rocker Arm Weldment	2 required
2	JA-50284	Screw	
3	JA-12024	Bushing	2 required
4	JA-50897	Bearing	2 required
5	JA-50742	Nut	
6	JA-50976	Retaining Ring	10 required
7	JA-08752	Cam Clevis Assembly	Includes item 8
8	JA-50909	Bearing	6 required
9	JA-12257	Cam Clevis Pin	2 required
10	JA-50962	Retaining Ring	8 required
11	JA-22999	Shaft	4 required
12	JA-16924	Shield	Use as required
13	JA-50964	Bearing	4 required
14	J1144732	Compression Spring	2 required
15	JC-54829	Roll Pin	
16	J1444090	Cam	Front
17	JA-12017	Cam Roller Guide	2 required
18	JA-22681	Cam Guide Pin	
19	JA-08829	Cam Roller Guide	
20	JA-24622	Cam	Rear
21	JA-51056	Bearing	2 required
22	JA-08708	Lower Clevis Assembly	Includes item 21
23	JC-48169	Nut	
	JA-52116	Screw	2 required
24	JA-22574	Adjusting Rod	
25	JA-50438	Nut	
	JA-53116	Washer	
26	JA-08723	Upper Clevis Assembly	Includes item 8

 Rear Head Components

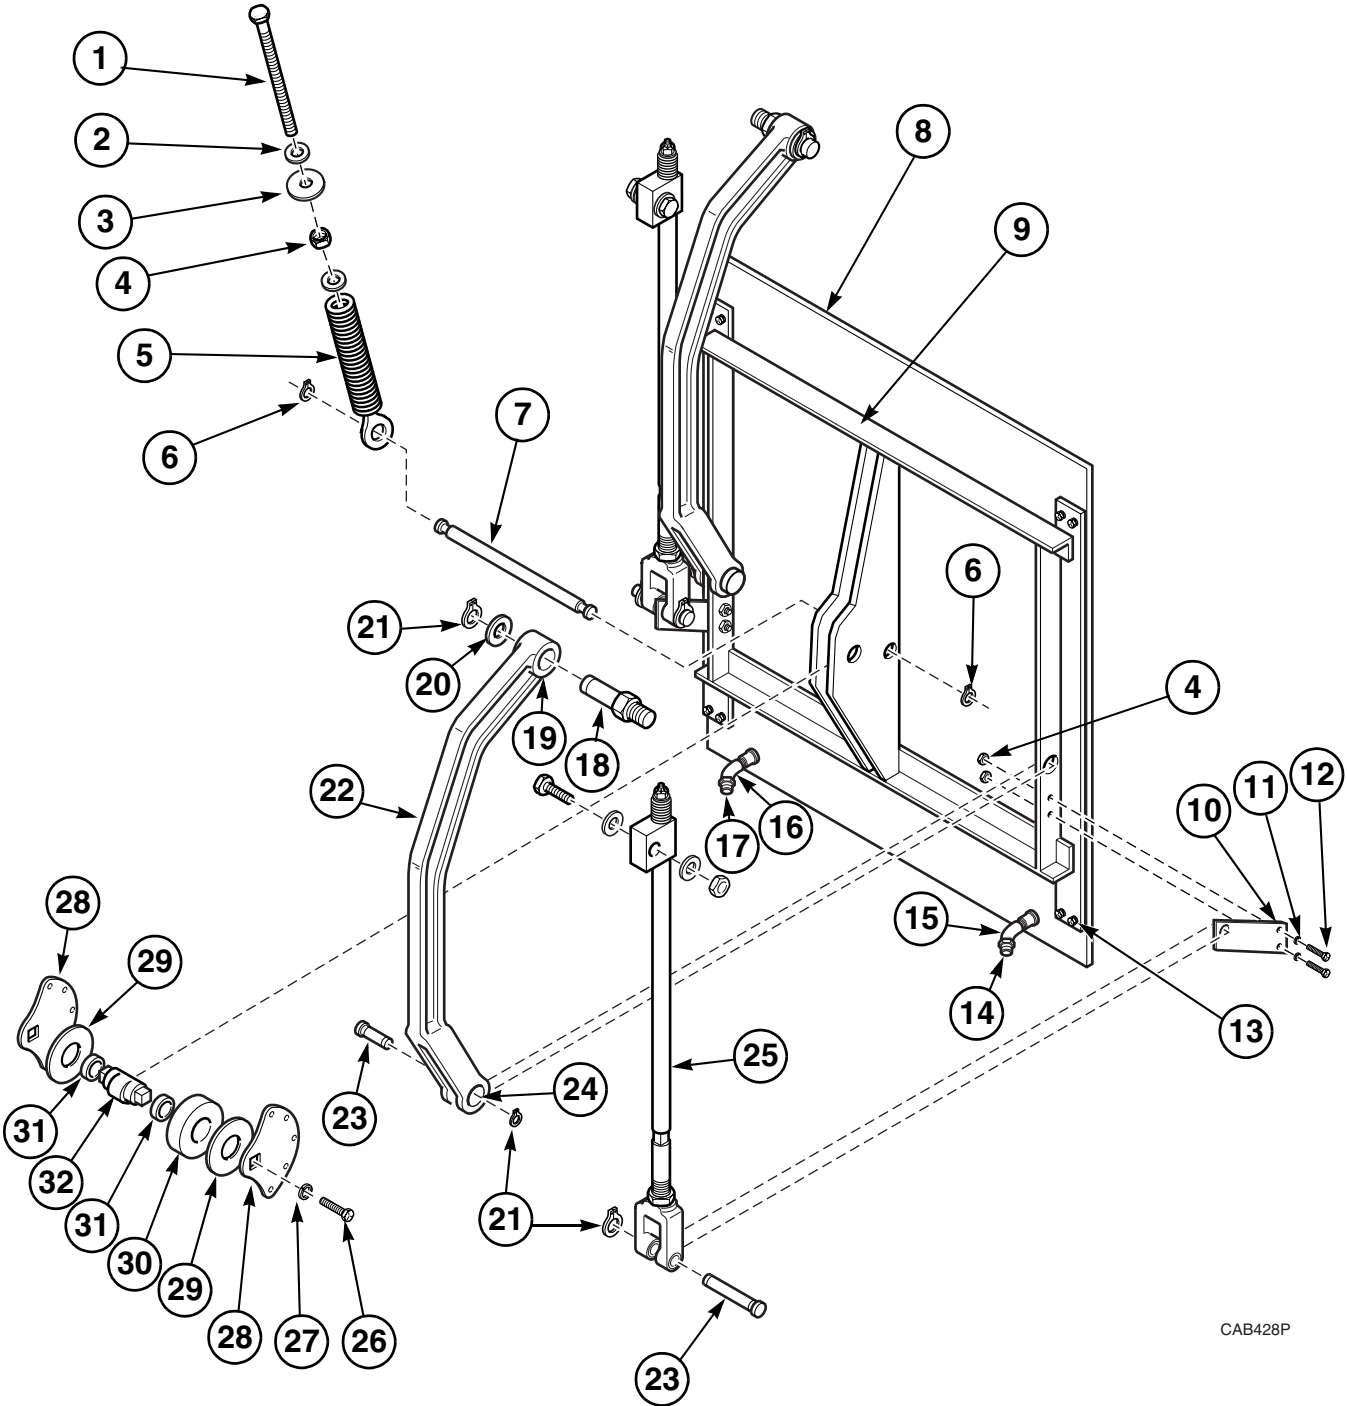


CAB428P

Rear Head Components

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-08711	Head Hanger Actuating Assembly	Includes items 19, 22 and 24; 2 required
1	JA-10158	Screw	2 required
2	N/A	Washer	2 required
3	JA-51527	Gasket	2 required; Rubber
4	N/A	Nut	6 required
5	JA-08705	Spring Assembly	2 required
6	JA-50976	Retaining Ring	2 required
7	JA-22498	Spring Rod	
8	JA-81886	Rear Head Weldment	
9	JA-80097	Rear Head Frame Weldment	
10	JA-22499	Pivot Bracket	2 required
11	M400014	Washer	4 required
12	N/A	Screw	4 required
13	M400057	Screw	16 required
14	J1319276	Connector	
15	J1231521	Elbow	
16	JC-46062	Nipple	
17	JC-28237	Elbow	
18	JA-22497	Pivot Pin	2 required
19	JA-53768	Bearing	2 required
20	JA-53134	Washer	4 required
21	JA-51330	Retaining Ring	8 required
22	N/A	Head Hanger	
23	JA-22505	Hanger Pin	2 required
24	JA-50897	Bearing	
25	JA-09220	Rear Head Adjusting Rod Assembly	2 required; Refer to <i>Rear Head Adjusting Rod Assembly</i> section for parts breakdown
26	JC-62724	Screw	2 required
27	M400013	Washer	Also used with item 13; 18 required
28	JA-11761	Eccentric Quadrant	2 required
29	JA-16924	Shield	Use as required
30	JA-50964	Bearing	
31	JA-11763	Bearing	2 required
32	JA-11762	Eccentric	

N/A = Part no longer available

 
Head Adjusting Rod Assembly

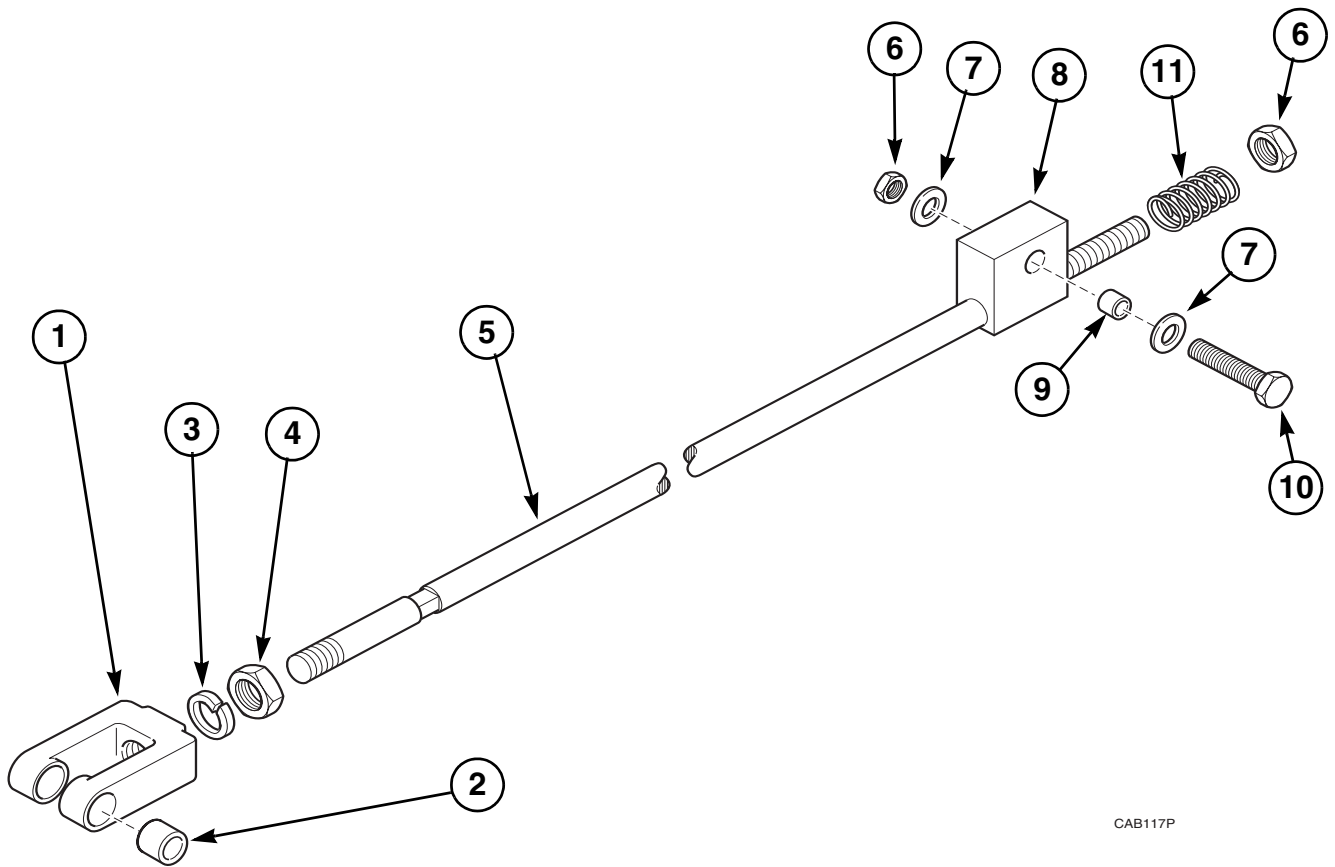

Head Adjusting Rod Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-08727	Front Head Adjusting Rod Assembly	Includes items 1-11
	JA-09220	Rear Head Adjusting Rod Assembly	Includes items 1-11
1	JA-08707	Head Adjusting Clevis	Includes item 2
2	JA-51326	Bearing	2 required
3	JA-53116	Washer	
4	JC-48169	Nut	
5	JA-22686	Front Head Adjusting Rod	24-1/2 inches
	JA-23246	Rear Head Adjusting Rod	23-1/2 inches
6	JA-50742	Nut	2 required
7	J1001338	Washer	2 required
8	JA-05025	Bracket Assembly	Includes item 9
9	JA-51070	Bearing	
10	J1311307	Screw	
11	JA-52276	Spring	

 Front Head Open Roller Valve Assembly

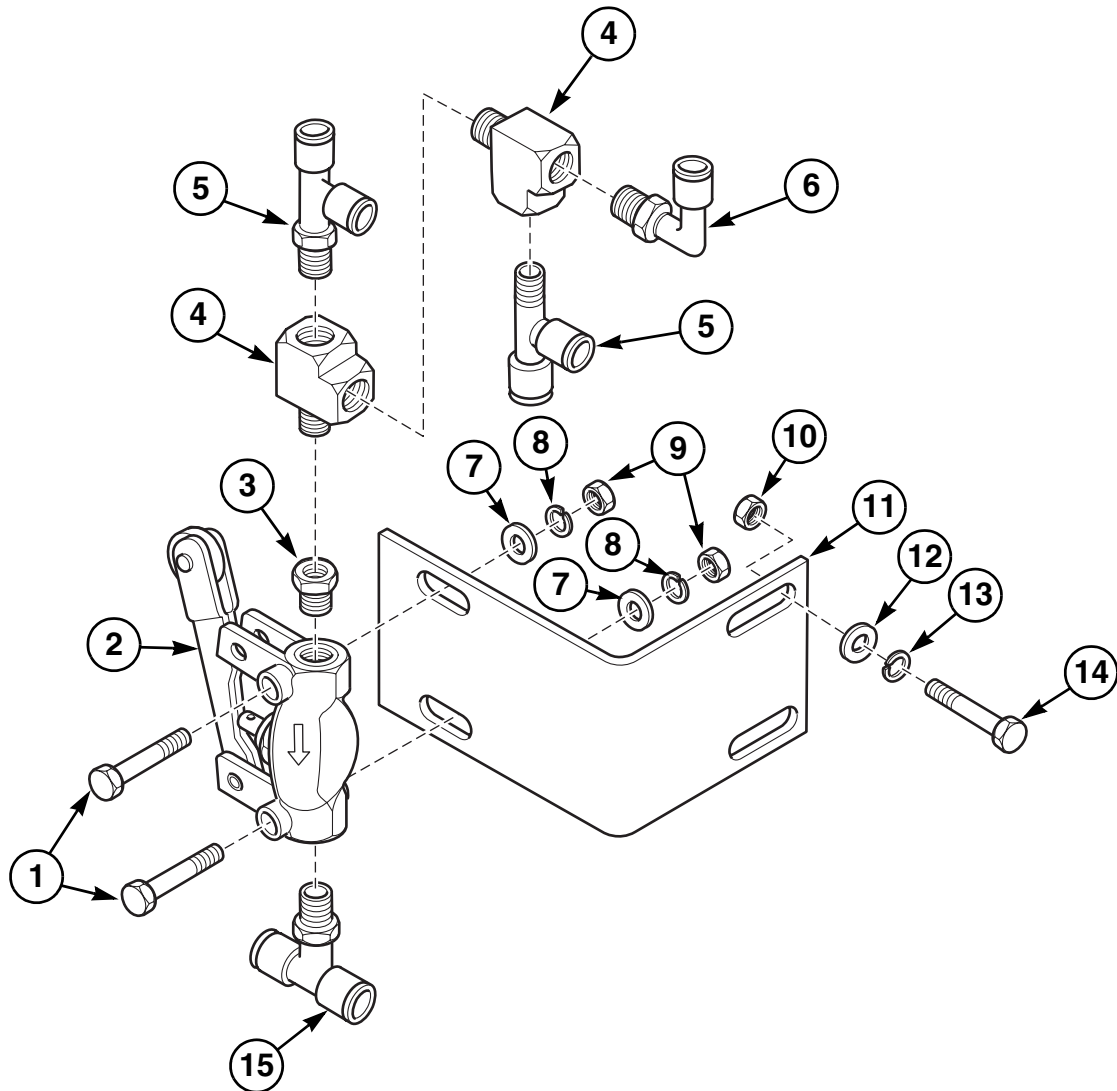

CAB2276P


Front Head Open Roller Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1523935	Front Head Open Roller Valve Assembly	Includes items 2-6 and 15
1	N/A	Screw	
2	JA-53892	Roller Valve	3-way
3	JC-19609	Bushing	
4	JC-30541	Tee	2 required
5	J1438357	Tee	2 required
6	J1407741	Elbow	
7	JC-80513	Washer	
8	J1185073	Washer	
9	20275	Nut	
10	J1000769	Nut	2 required
11	J1438431	Bracket	
12	JC-80513	Washer	2 required
13	J1185073	Washer	2 required
14	JC-63116	Screw	2 required
15	J1460484	Tee	

N/A = Part no longer available

Buck and Cover Assembly (Drawing 1 of 4)

 Models DFB-XV and CBBY-XV

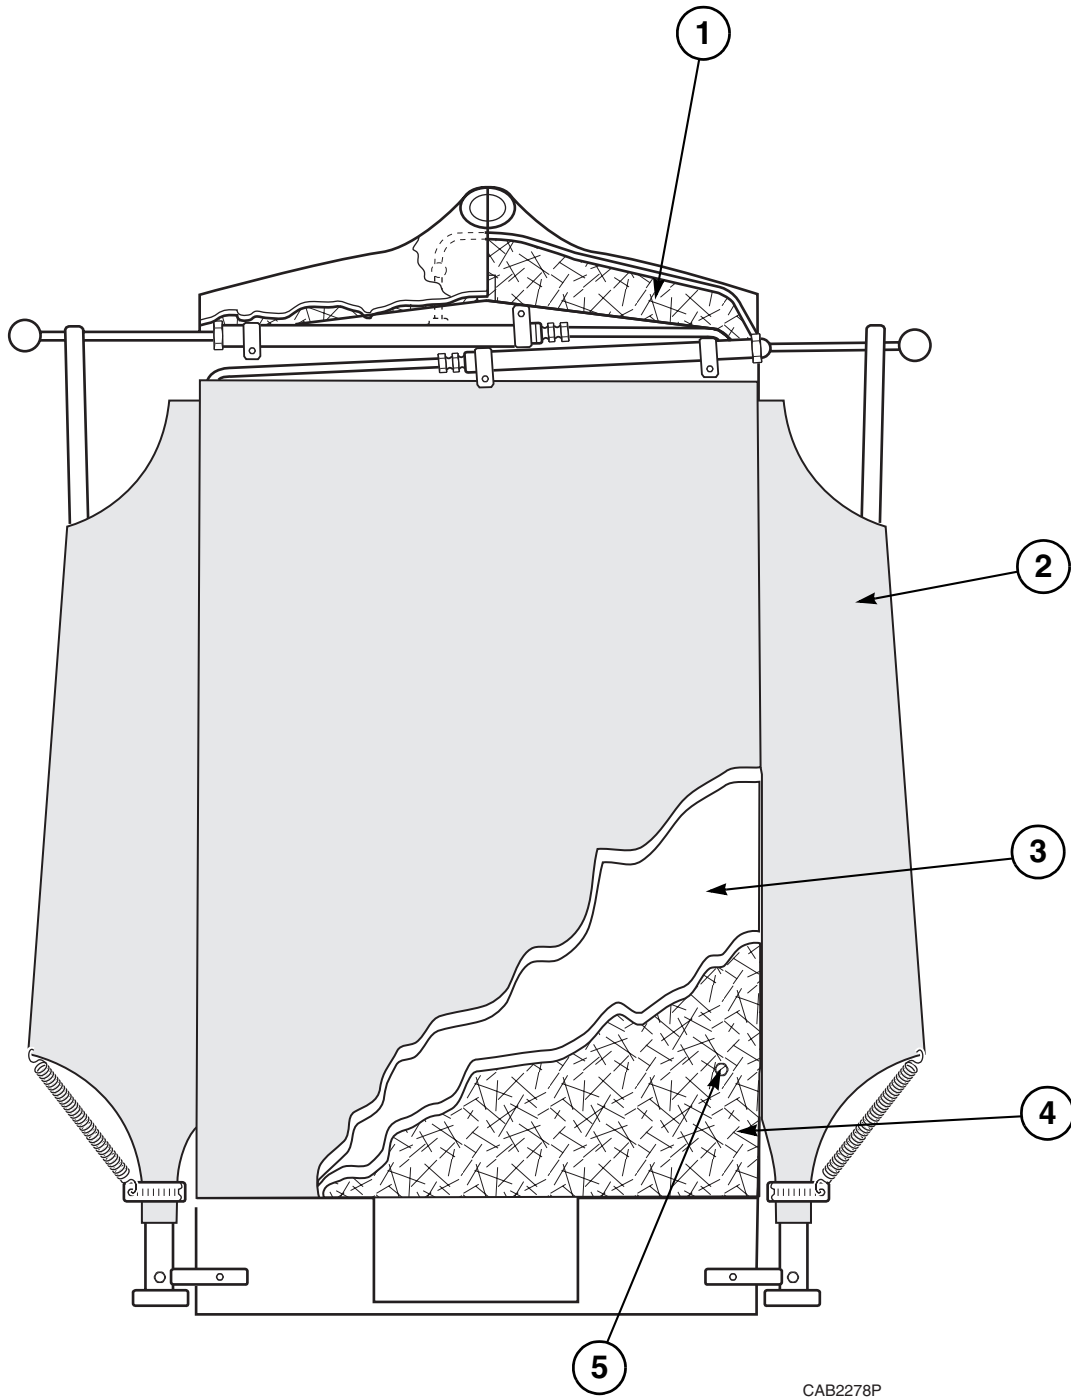


Buck and Cover Assembly (Drawing 1 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1473529	Buck and Cover Assembly	Front; 18 inch models
	J1494293	Buck and Cover Assembly	Front; 20 inch models
	J1473537	Buck and Cover Assembly	Rear; 18 inch models
	J1494301	Buck and Cover Assembly	Rear; 20 inch models
1	J1470285	Spring Padding Assembly	18 inch models
	J1494269	Spring Padding Assembly	20 inch models
2	J1473404	Cover and Bag Assembly	18 inch models
	J1494251	Cover and Bag Assembly	20 inch models
3	J1473412	Flaminel Padding Assembly	30 ounce; 18 inch models
	J1494244	Flaminel Padding Assembly	30 ounce; 20 inch models
4	J1470277	Steel Wool Padding Assembly	18 inch models
	J1494277	Steel Wool Padding Assembly	20 inch models
5	J1333285	Screw	Use to attach steel wool padding

Buck and Cover Assembly (Drawing 2 of 4)

 Models DFB-XV and CBBY-XV

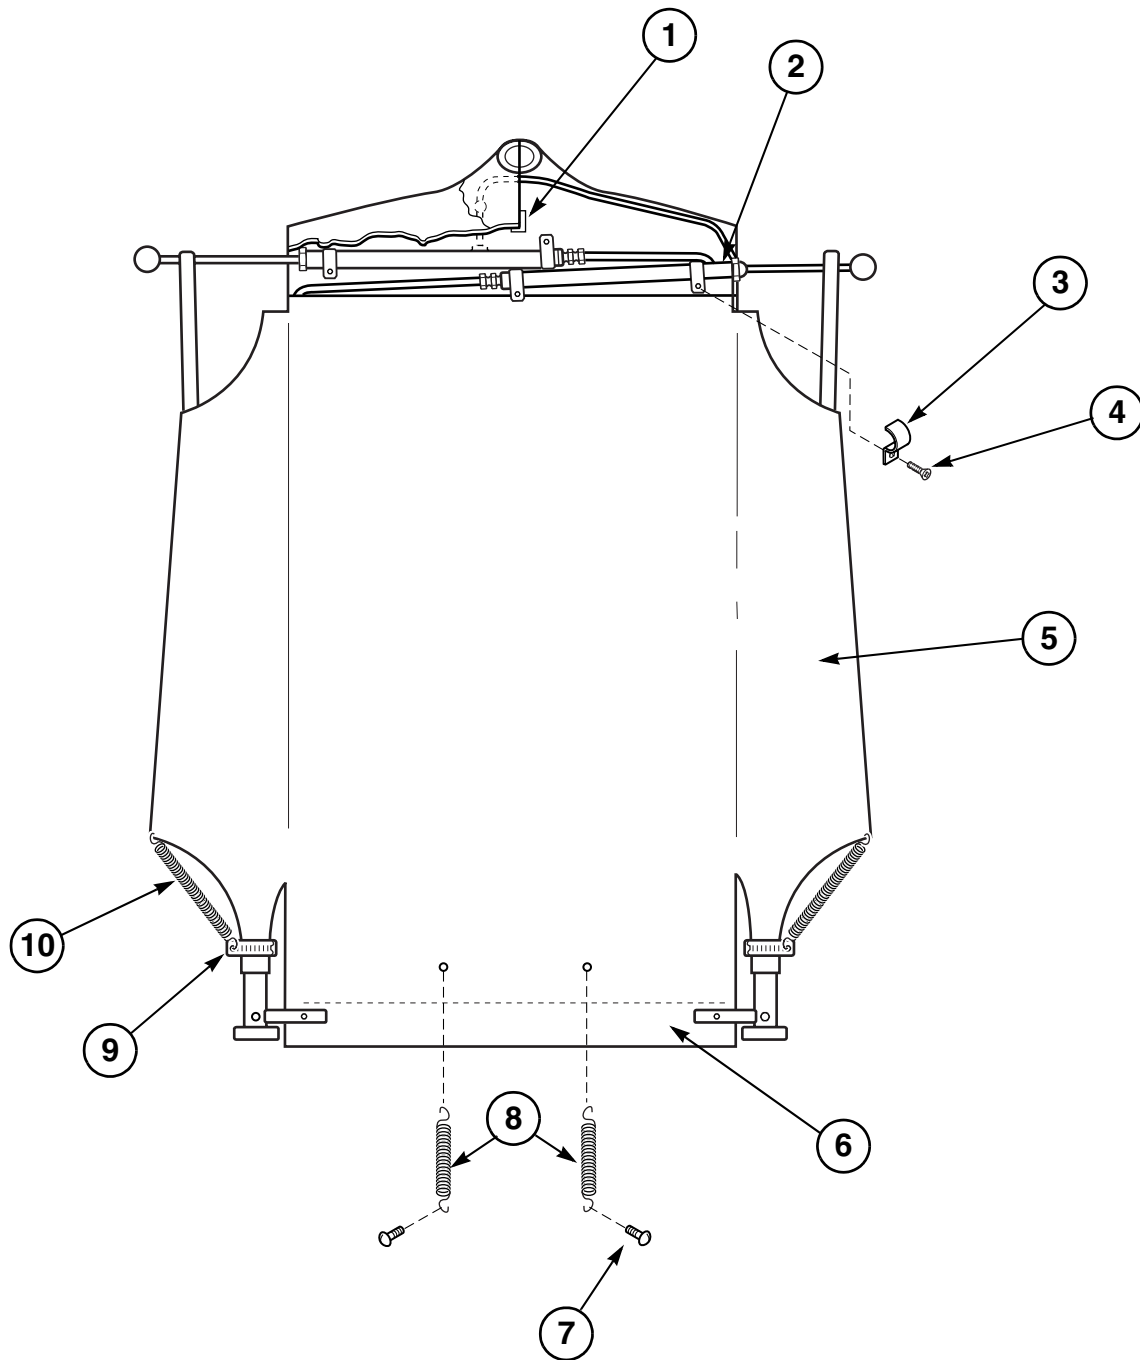

CAB397P


Buck and Cover Assembly (Drawing 2 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-24579	Mounting Bracket Clamp	Use JA-24245 Nut and J1354612 Screw to attach
2	J1473107	Sleeve Expander Assembly	18 inch models
	J1492867	Sleeve Expander Assembly	20 inch models
3	J1187889	Clip	
4	JC-62593	Screw	
5	J1470293	Buck Plate Weldment	Front; 18 inch models
	J1494194	Buck Plate Weldment	Front; 20 inch models
	N/A	Buck Plate Weldment	Rear; 18 inch models
	J1494202	Buck Plate Weldment	Rear; 20 inch models
6	JA-54156	Screw	
7	JA-51399	Spring	
8	JA-51758	Safety Pin	
9	N/A	Spring	
10	J1185073	Washer	
11	20275	Nut	
12	J1528595	Retaining Ring	

N/A = Part no longer available

Buck and Cover Assembly (Drawing 3 of 4)

 Models DFB-X and CBBY-X

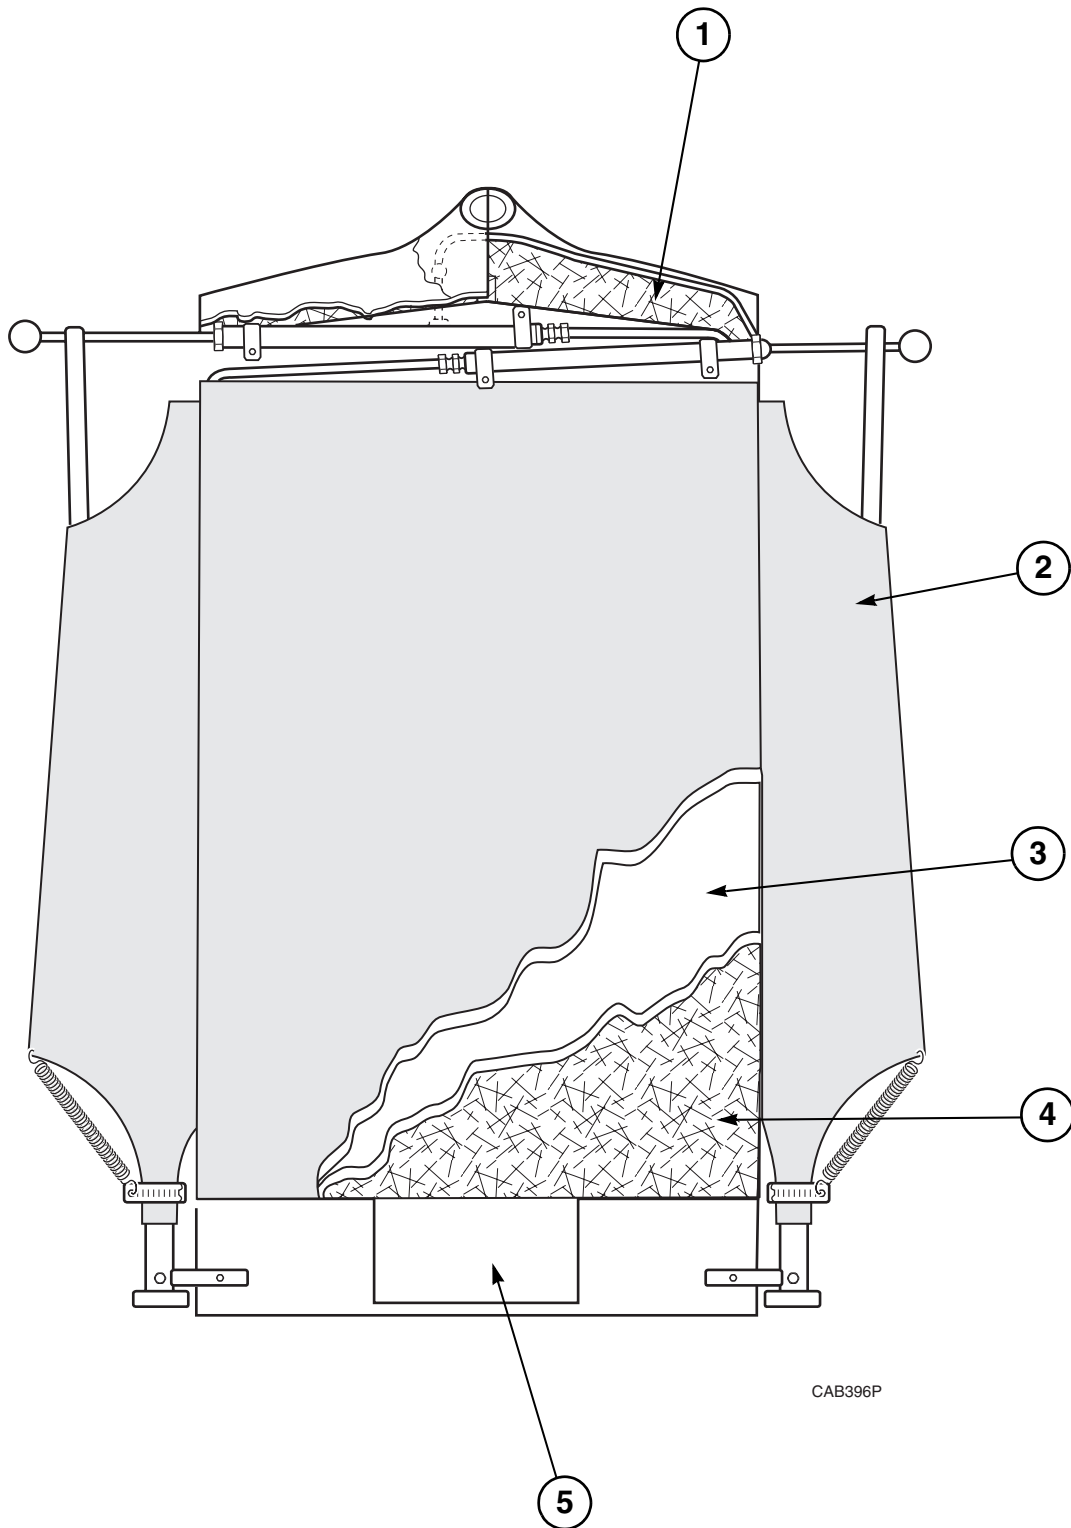

Buck and Cover Assembly (Drawing 3 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1533900	Buck and Cover Assembly	18 inch models
	J1533942	Buck and Cover Assembly	20 inch models
1	JA-09474	Spring Padding Assembly	18 inch models
	JA-09023	Spring Padding Assembly	20 inch models
2	J1473404	Cover and Bag Assembly	18 inch models
	J1494251	Cover and Bag Assembly	20 inch models
3	JA-09476	FlamoneI Padding Assembly	30 ounce; 18 inch models
	JA-09164	FlamoneI Padding Assembly	30 ounce; 20 inch models
4	J1444009	Steel Wool Padding Assembly	18 inch models
	J1530989	Steel Wool Padding Assembly	20 inch models
5	J1531797	Plate	18 inch models
	J1533843	Plate	20 inch models


Models DFB-X and CBBY-X



Buck and Cover Assembly (Drawing 4 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1473107	Sleeve Expander Assembly	18 inch models
	J1492867	Sleeve Expander Assembly	20 inch models
2	JA-24579	Mounting Bracket Clamp	Use JA-24245 Nut and J1354612 Screw to attach
3	JA-52758	Spring	
4	J1187889	Clip	
5	JA-51725	Screw	
6	J1153865	Hose Clamp	
7	JA-80328	Air Bag Tube Assembly	18 inch models
	JA-80329	Air Bag Tube Assembly	20 inch models
8	JA-09835	Elbow and Tee Assembly	
9	J1075175	Connector	
10	JA-51399	Spring	
11	JA-09836	Elbow and Connector Assembly	
12	JA-19037	Shaft Guide	Models through December 1994
	J1541820	Shaft Guide	Models starting December 1994
13	JA-54156	Screw	
14	J1185073	Washer	
15	JA-19051	Tail Clamp Shaft	
16	J1299262	Tail Clamp Pivot Weldment	
17	JA-51455	Spring	
18	JC-62593	Screw	
19	J1299296	Tail Clamp Assembly	
20	JA-51758	Safety Pin	
21	J1528595	Retaining Ring	

 Sleeve Expander Assembly

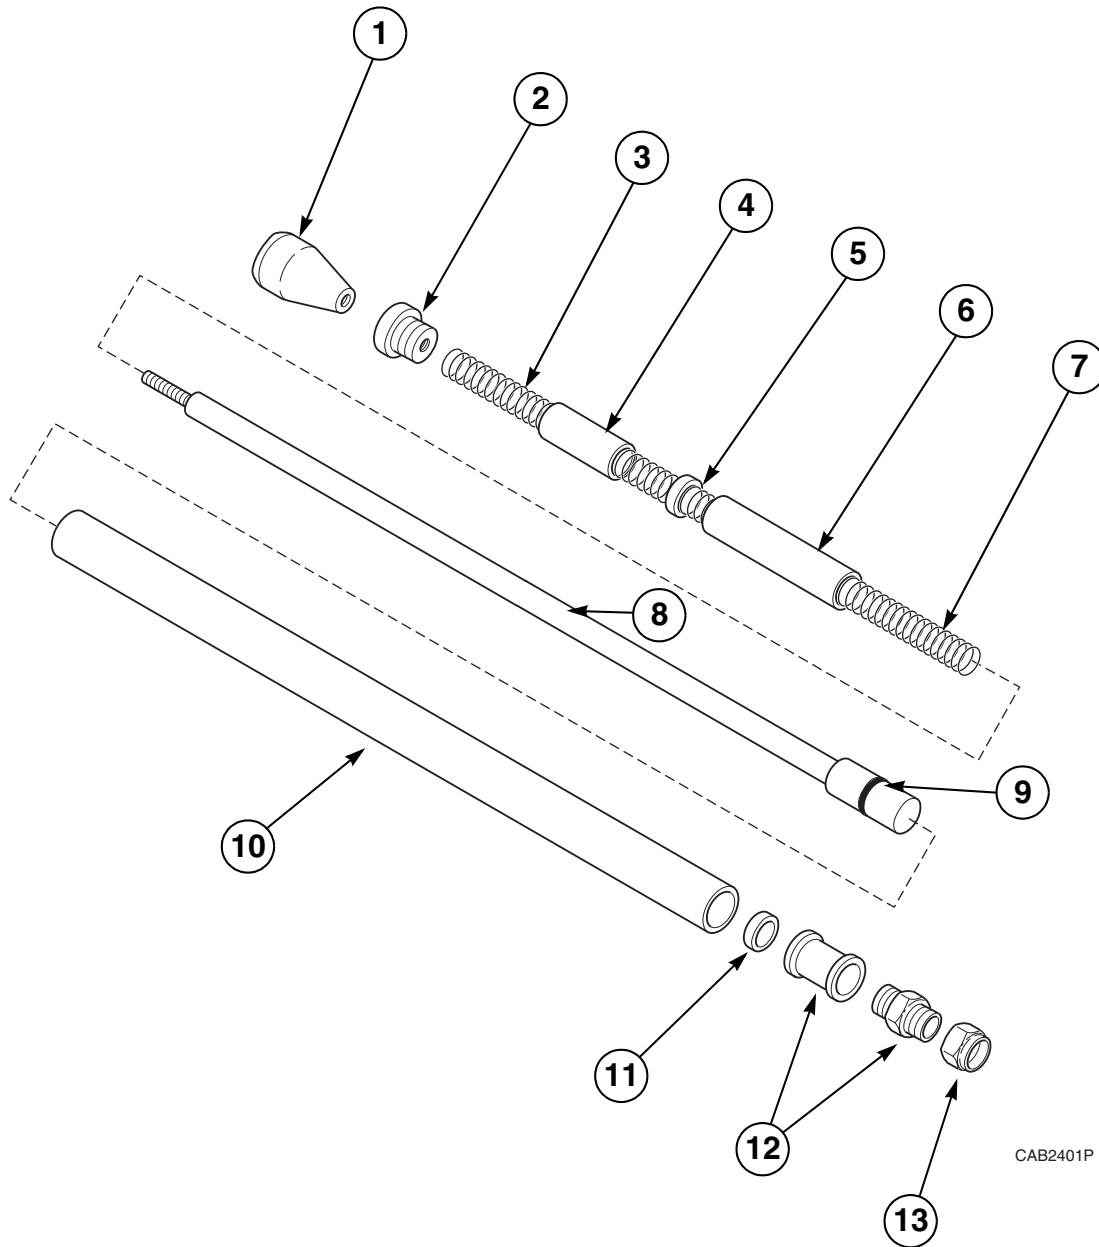


Sleeve Expander Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1473107	Sleeve Expander Assembly	2 required; 18 inch models; Includes items 1-13
	J1492867	Sleeve Expander Assembly	2 required; 20 inch models; Includes items 1-4, 6, 7 and 9-13
	JKIT-00220	Sleeve Expander Kit	Replaces Sleeve Expander J1444181; 18 inch models through April 1992
	J1492867P	Sleeve Expander Kit	Replaces Sleeve Expanders JA-07014 and JA-08098; 20 inch models through April 1992
1	J1467968	Sleeve Expander Knob	Includes o-ring
2	J1473792	Bushing	Front
3	JA-53077	Spring	Shorter
4	JA-19785	Spacer	
5	JA-12217	Separator	
6	JA-16120	Spacer	
7	JA-50932	Spring	Longer
8	N/A	Shaft and Piston Assembly	18 inch models; Includes items 2 and 9
	J1616408	Shaft and Piston Assembly	20 inch models; Includes items 2 and 9
9	J1473800	Seal	
10	J1473784	Sleeve Expander Tube	18 inch models
	N/A	Sleeve Expander Tube	20 inch models
11	J1507342	Spacer	
12	J1473776	Bushing	
13	J1151661	Connector	

N/A = Part no longer available

 Pedal Base and Valve Assembly

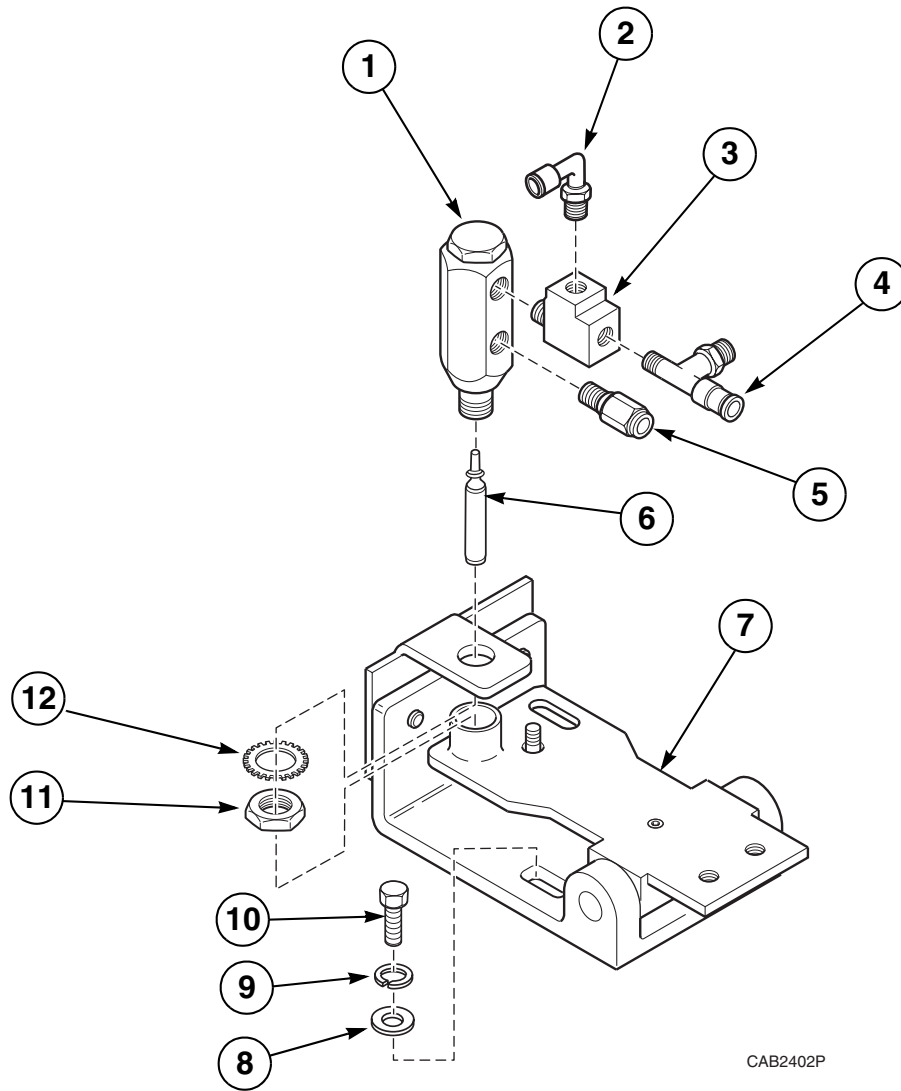


Pedal Base and Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	N/A	Pedal Base and Valve Assembly	Models through September 1996; Includes items 1-7, 11 and 12
	J1484682	Pedal Base and Valve Assembly	Models starting September 1996; Includes items 1, 3-7, 11 and 12
1	JA-06430	Valve Body Assembly	Refer to <i>Valve Body Assembly</i> section for parts breakdown
2	J1407741	Elbow	Models through September 1996
3	JC-30541	Tee	
4	J1438357	Tee	
5	F422101	Connector	
6	J1611417	Valve Stem	
7	J1484930	Pedal Base Assembly	Refer to <i>Pedal Base Assembly</i> section for parts breakdown
8	M400081	Washer	2 required
9	M400014	Washer	2 required
10	M400043	Screw	2 required
11	JA-51474	Nut	
12	JA-52196	Washer	

N/A = Part no longer available

 Valve Body Assembly

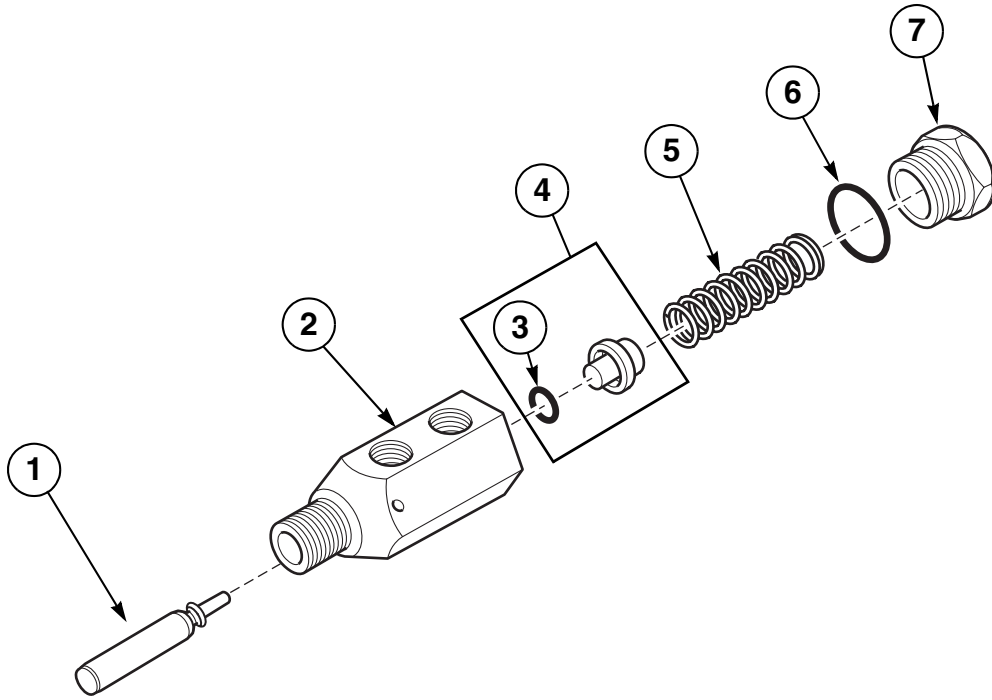


SCR1842P

Valve Body Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-06430	Valve Body Assembly	Includes items 1-7
1	J1611417	Valve Stem	
2	JA-10514	Valve Body	
3	J1403310	O-Ring	Viton; Models starting June 1998
4	JA-11599	Valve	Includes item 3
5	JA-51336	Spring	
6	JC-57441	O-Ring	
7	JA-10515	Valve Cap	

Collar Block Assembly (Drawing 1 of 2)

 Models Starting October 1993

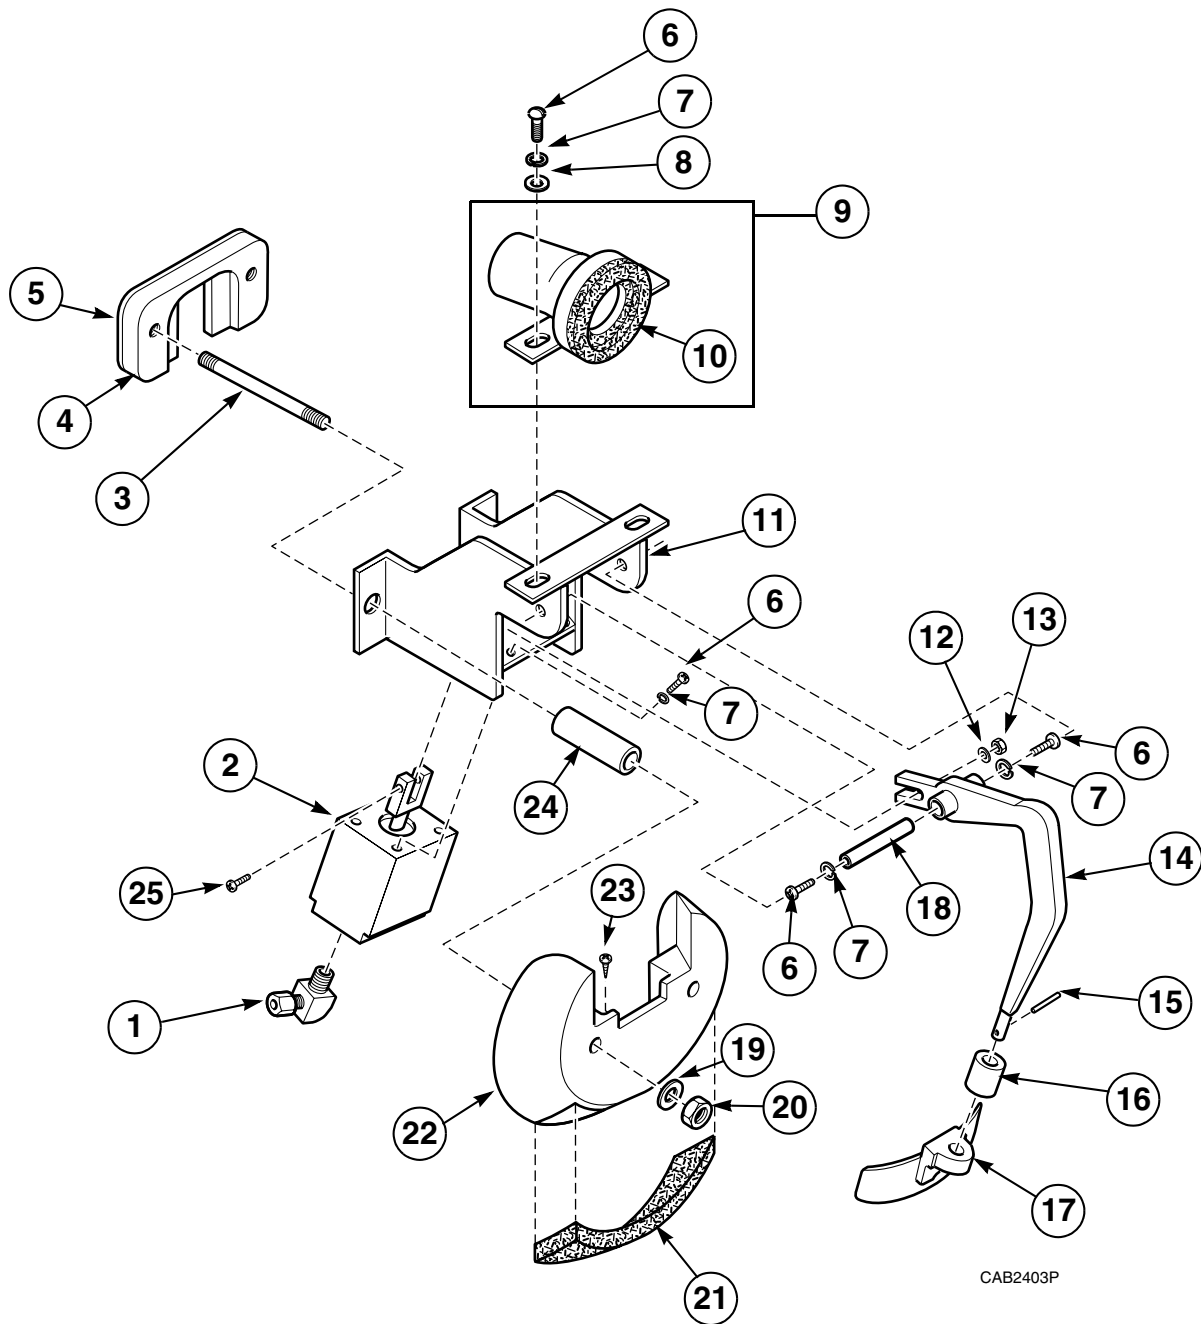


CAB2403P

Collar Block Assembly (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1484294	Collar Block Assembly	Includes items 1-25
1	JA-50770	Elbow	
2	J1504018	Collar Block Cylinder Assembly	Refer to <i>Collar Block Cylinder Assembly</i> section for parts breakdown
3	JA-24248	Stud	
4	JA-24249	Plate	
5	J1413087	Tape	
6	J1185107	Screw	
7	J1000975	Washer	
8	JC-80759	Washer	
9	JA-09174	Collar Tube Assembly	Includes item 10
10	J1401389	Seal	
11	J1484344	Collar Housing Weldment	
12	J1085984	Washer	
13	J1209113	Nut	
14	J1624774	Collar Block Arm Assembly	
15	J1407725	Roll Pin	
16	J1001270	Washer	
17	JA-22812	Clamp	
18	J1484401	Axle	
19	F431134	Washer	
20	M400026	Nut	
21	JA-09244	Insert Assembly	
22	JA-24340	Collar Block	
23	JA-50454	Screw	
24	J1488873	Spacer	2 required
25	J1489053	Screw	

Collar Block Assembly (Drawing 2 of 2)

 Models Through October 1993

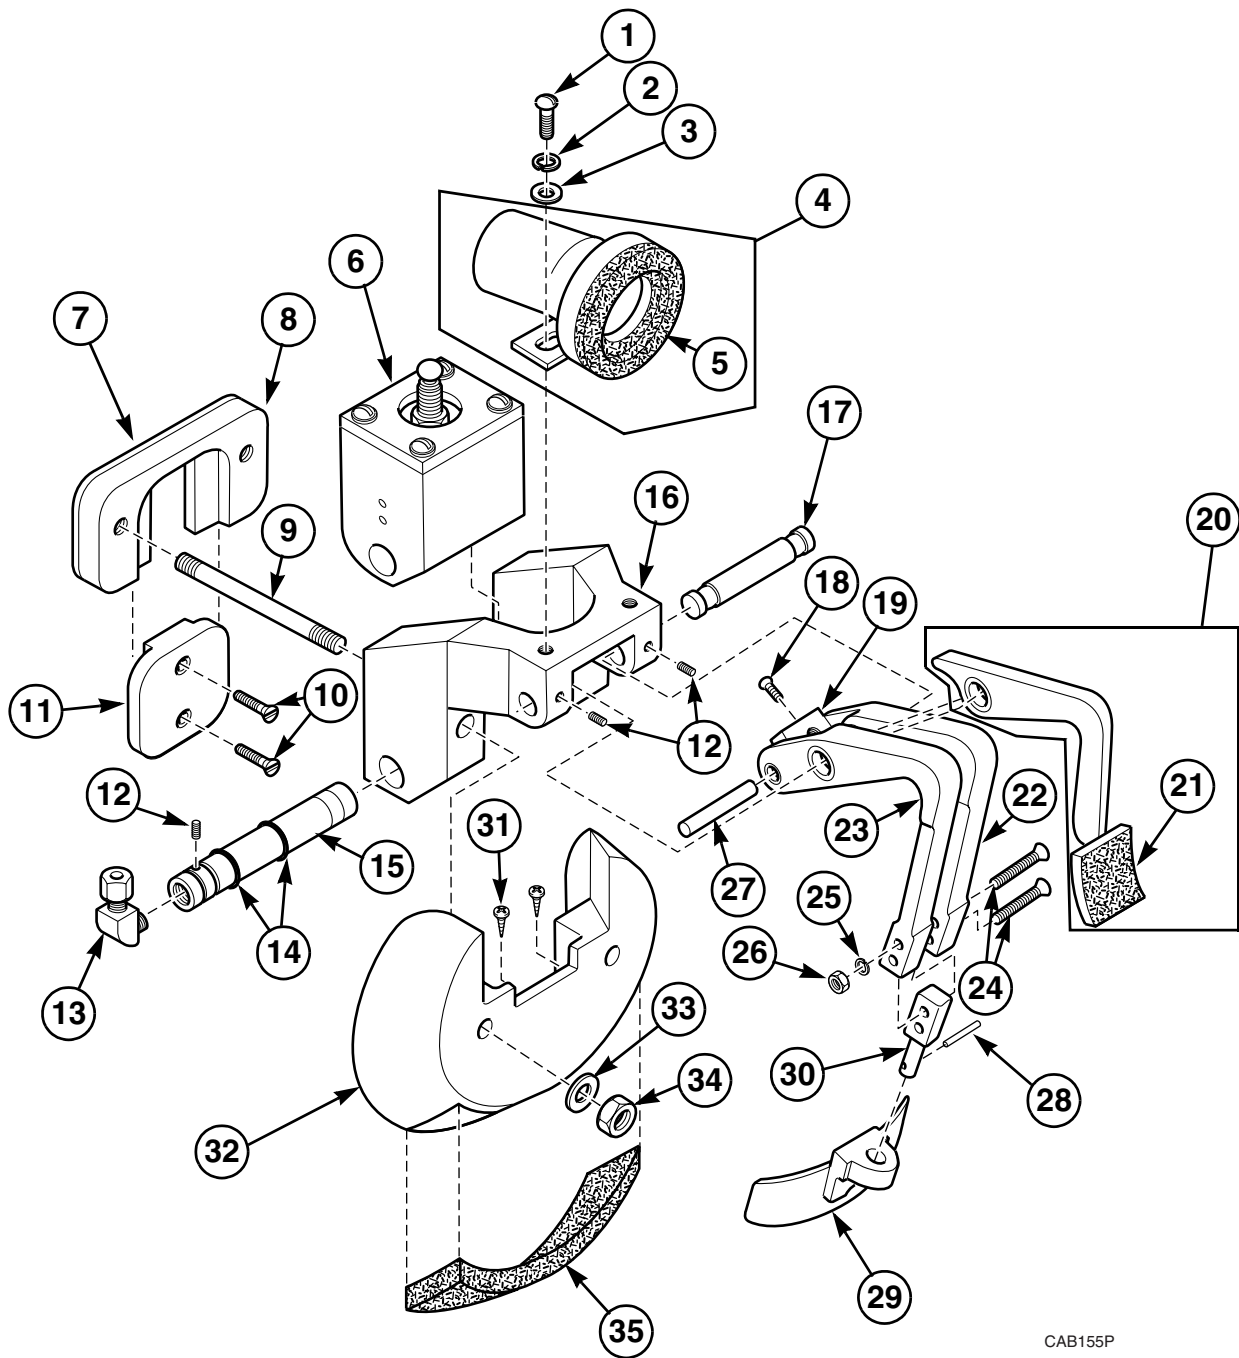


CAB155P

Collar Block Assembly (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-08877	Collar Block Assembly	Includes items 1-35
1	J1185107	Screw	2 required
2	J1000975	Washer	2 required
3	JC-80759	Washer	2 required
4	JA-09174	Collar Tube Assembly	Includes item 5
5	J1401389	Seal	
6	JA-09786	Collar Valve Assembly	Refer to <i>Collar Valve Assembly</i> section section for parts breakdown
7	J1413087	Tape	
8	JA-24249	Plate	
9	JA-24248	Stud	2 required
10	J1354612	Screw	
11	JA-24579	Mounting Bracket Clamp	
12	JA-50353	Screw	3 required
13	JA-50770	Elbow	
14	JA-51744	O-Ring	2 required
15	JA-22803	Shaft	
16	JA-22817	Collar Valve Housing	
17	JA-22798	Shaft	
18	JC-61344	Screw	
19	JA-22799	Nut	
20	JA-22813	Valve Release Arm	Includes item 21
21	J1433895	Plastic Boot	
22	JA-23719	Operating Arm	
23	JA-23720	Arm	
24	JA-54087	Screw	2 required
25	J1188473	Washer	2 required
26	J1000736	Nut	2 required
27	JA-54204	Dowel Pin	
28	J1407725	Roll Pin	
29	JA-22812	Clamp	
30	JA-22797	Swivel Pin	
31	JA-50454	Screw	2 required
32	JA-24340	Collar Block	
33	J1001304	Washer	2 required
34	M400026	Nut	2 required
35	JA-09244	Insert Assembly	

Collar Block Cylinder Assembly

 Models Starting October 1993

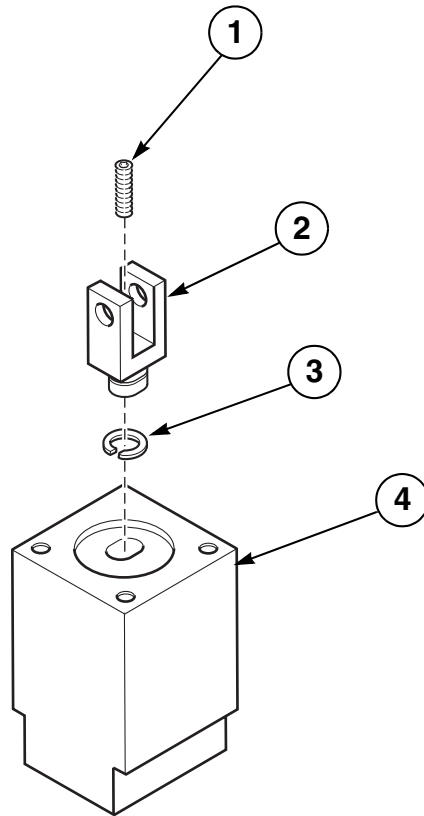


CAB2199P

Collar Block Cylinder Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1504018	Collar Block Cylinder Assembly	Includes items 1-4
	J1537398	Cylinder Repair Kit	Use to repair J1504018 Air Cylinder; Kit contains 4 Viton O-Ring piston seals, 1 internal return spring and 1 snap ring
1	JA-50358	Screw	
2	J1484419	Clevis	
3	J1000975	Washer	
4	J1484260	Collar Block Cylinder	

Collar Valve Assembly

 Models Through October 1993

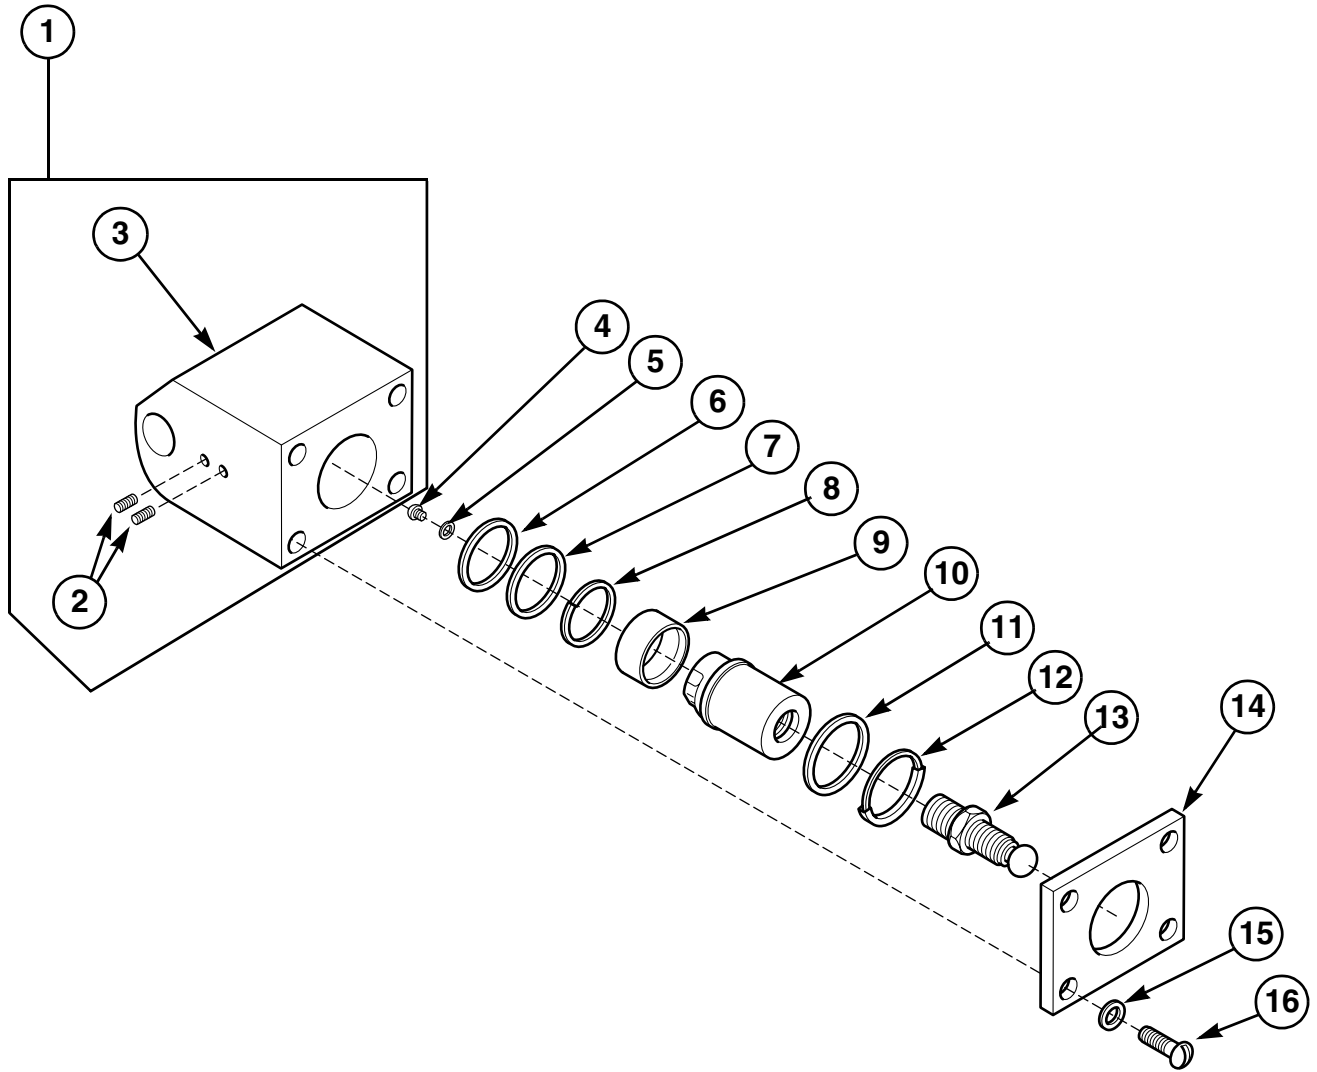


CAB1962P

Collar Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-09786	Collar Valve Assembly	Includes items 1-16
1	J1504091	Valve Body Assembly	Includes items 2 and 3
2	J1133990	Screw	
3	J1504091	Valve Body Assembly	
4	J1187228	Screw	2 required
5	JA-54044	Washer	2 required
6	JA-23554	Washer	
7	JA-54046	Kapseal	Must use JA-24476 Collar Block Adapter to replace
8	JA-53879	O-Ring	
9	JA-24476	Collar Clip Adapter	
10	JA-23560	Washer	
11	JA-53865	O-Ring	
12	JA-54045	Kapseal	
13	JA-53893	Bleeder Valve	Must use JA-80069 Spanner Wrench to replace
14	J1643410	Plate	
15	J1000975	Washer	4 required
16	J1185107	Screw	4 required

 
Collar Block Foot Pedal Valve Assembly

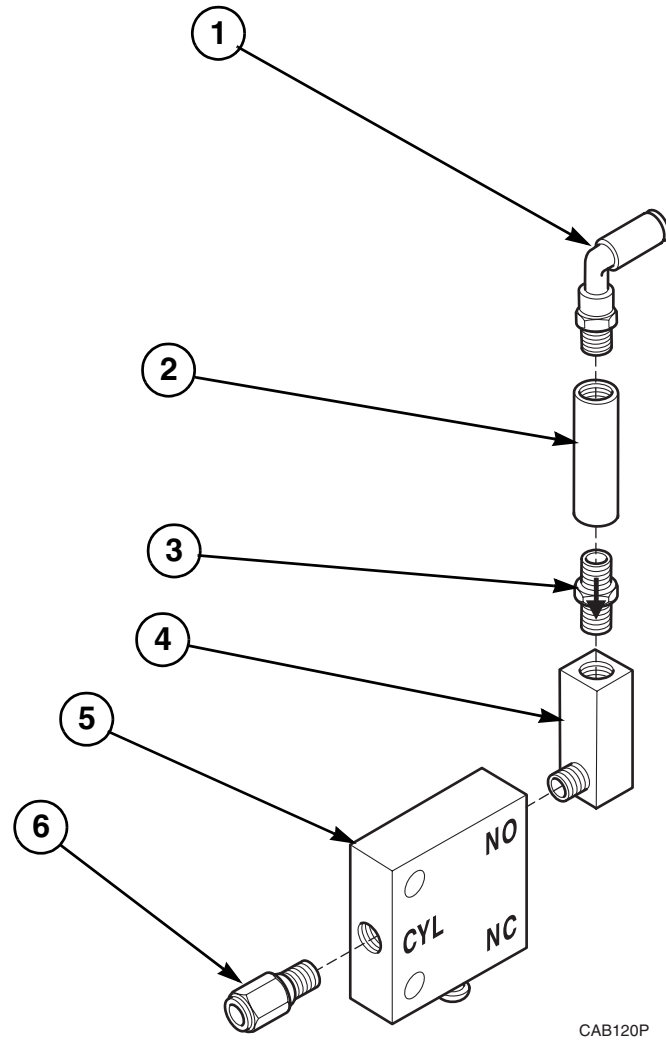

Collar Block Foot Pedal Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1485010	Collar Block Foot Pedal Valve Assembly	Includes items 1-6
	M400014	Washer	2 required
	M400081	Washer	2 required
	M400043	Screw	2 required
	J1484930	Pedal Base Assembly	
1	J1407741	Elbow	
2	J1018571	Coupling	
3	JA-54042	Check Valve	
4	J1381623	Elbow	
5	J1142504	Ball Check Valve	3-way
6	F422101	Connector	

 Pedal Base Assembly

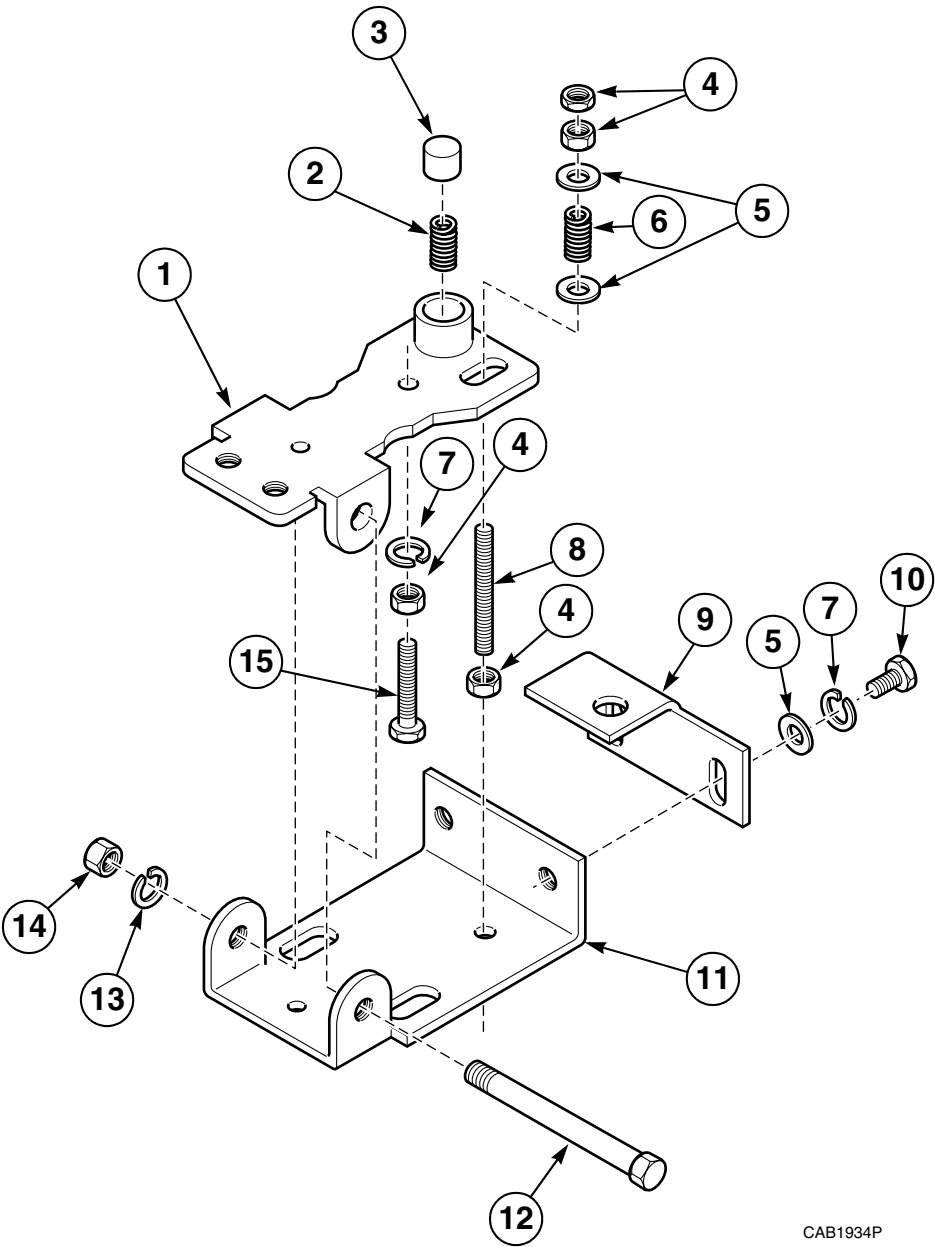


CAB1934P

Pedal Base Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1484930	Pedal Base Assembly	Includes items 1-15
	J1521285	Pedal Bracket	
	JA-50134	Screw	2 required
	M400013	Washer	2 required
1	J1387778	Pedal Bracket Weldment	Top
2	JA-52466	Compression Spring	
3	JA-26238	Actuating Pad	
4	20275	Nut	4 required
5	JC-80513	Washer	4 required
6	JA-51376	Spring	Compression
7	JA-51475	Washer	3 required
8	J1390673	Stud	
9	JA-25995	Pedal Bracket	
10	J1001726	Screw	2 required
11	J1387794	Pedal Base	
12	JC-62832	Screw	
13	M400013	Washer	
14	70142	Nut	
15	JC-62724	Screw	

 Head Pressing Cylinder Assembly

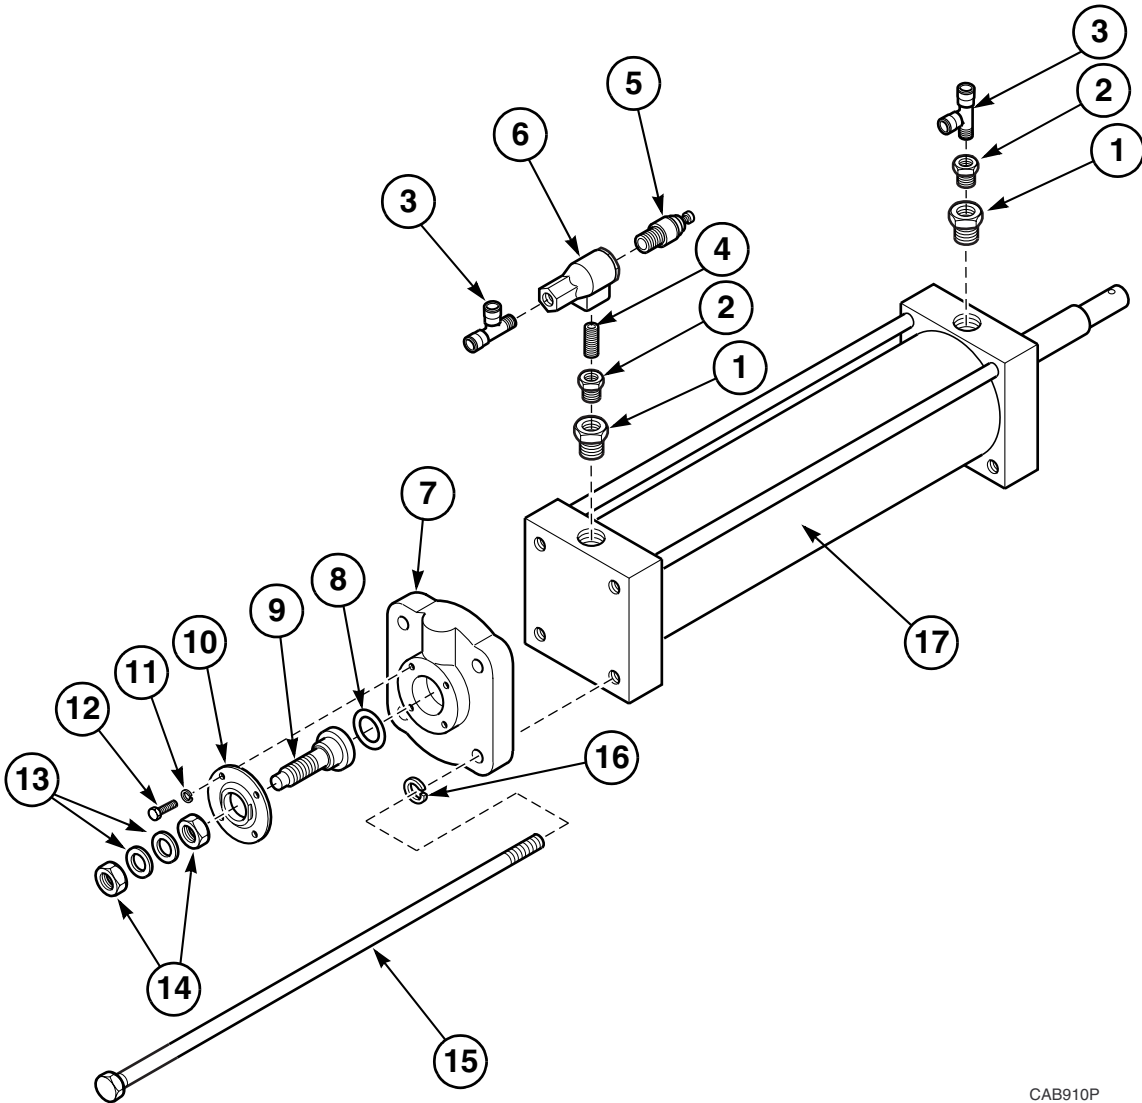


CAB910P

Head Pressing Cylinder Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1523984	Head Pressing Cylinder Assembly	Includes items 1-17
1	JC-19682	Bushing	2 required
2	JC-19609	Bushing	2 required
3	J1438357	Tee	2 required
4	J1232313	Nipple	
5	J1352327	Muffler	
6	JA-56925	Quick Exhaust Valve	
7	J1536390	Cylinder Pivot	
8	JA-10341	Ball Seat	
9	JA-22639	Ball Pin	
10	JA-10672	Pin Ball Flange	
11	J1001007	Washer	4 required
12	02422	Screw	4 required
13	N/A	Washer	2 required
14	JA-50434	Nut	2 required
15	N/A	Screw	4 required
16	91200	Washer	4 required
17	J1523562	Head Pressing Cylinder	
	J1537406	Head Pressing Cylinder Repair Kit	

N/A = Part no longer available

 External Air Inlet Assembly

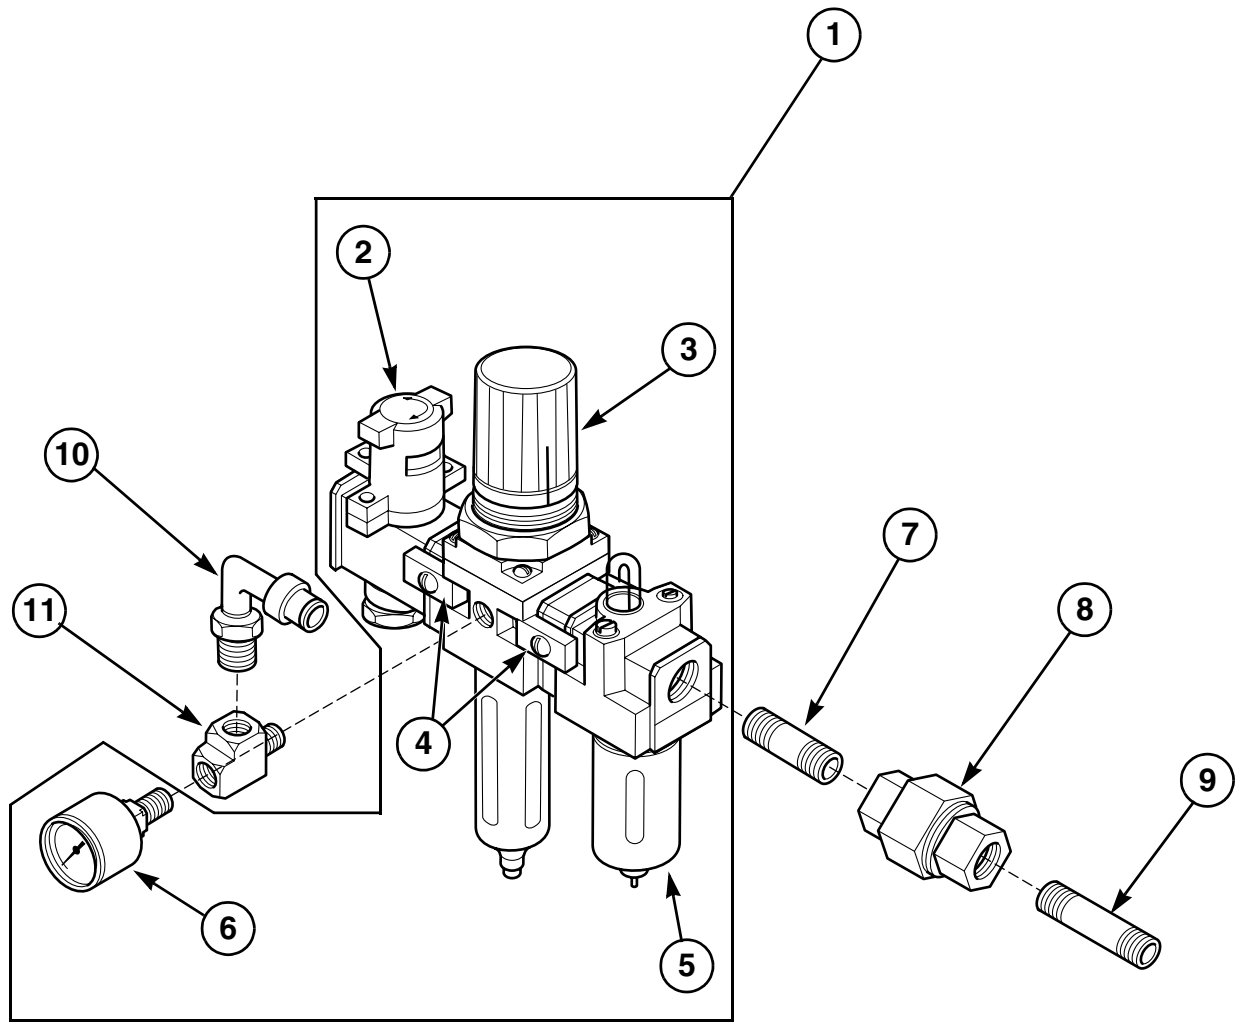


CAB124P

External Air Inlet Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1484245	External Air Inlet Assembly	Includes items 1-11
	J1637636	Filter/Regulator Maintenance Kit	Use with item 3
	J1637644	Filter/Regulator Auto Drain Kit	Use with item 3
	J1637628	Lubricator Maintenance Kit	Use with item 5
	J1647536	Lubricator Bowl	Use with item 5
1	J1557479	Filter/Regulator/Lubricator Assembly	Includes items 2-6
2	J1557503	Lock-Out Valve	
3	J1557487	Filter/Regulator	0-125 psig; Includes items J1637636 Filter/Regulator Maintenance Kit and J1637644 Filter/Regulator Auto Drain Kit
4	J1571413	Spacer	2 required
5	J1557495	Lubricator	Includes items J1637636 Filter/Regulator Maintenance Kit and J1637644 Filter/Regulator Auto Drain Kit
6	J1477959	Pressure Gauge	0-160 psig
7	J1026335	Nipple	
8	JC-76012	Union	
9	JC-46131	Nipple	
10	J1407741	Elbow	
11	JC-30541	Tee	

 Gauge Assembly

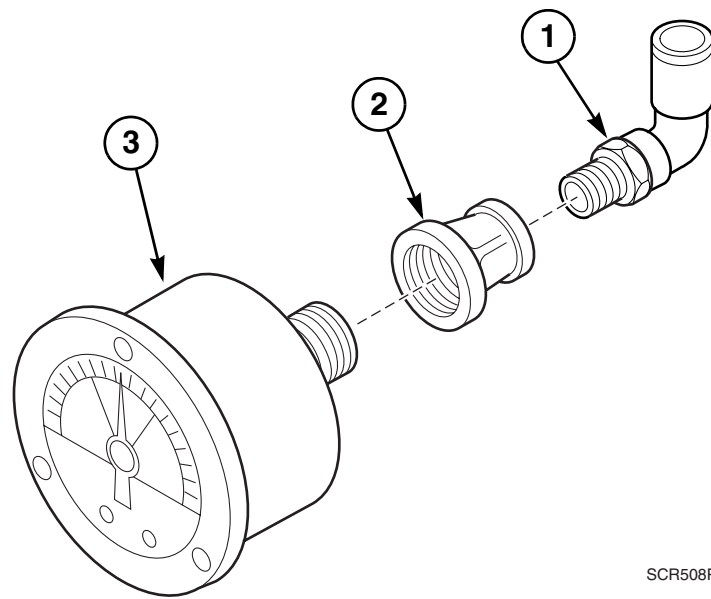


Gauge Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	N/A	Gauge Assembly	Includes items 1-3
1	JA-50770	Elbow	
2	J1018571	Coupling	
3	J1531060	Pressure Gauge	0-100 psi

N/A = Part no longer available

 Internal Air Inlet Assembly

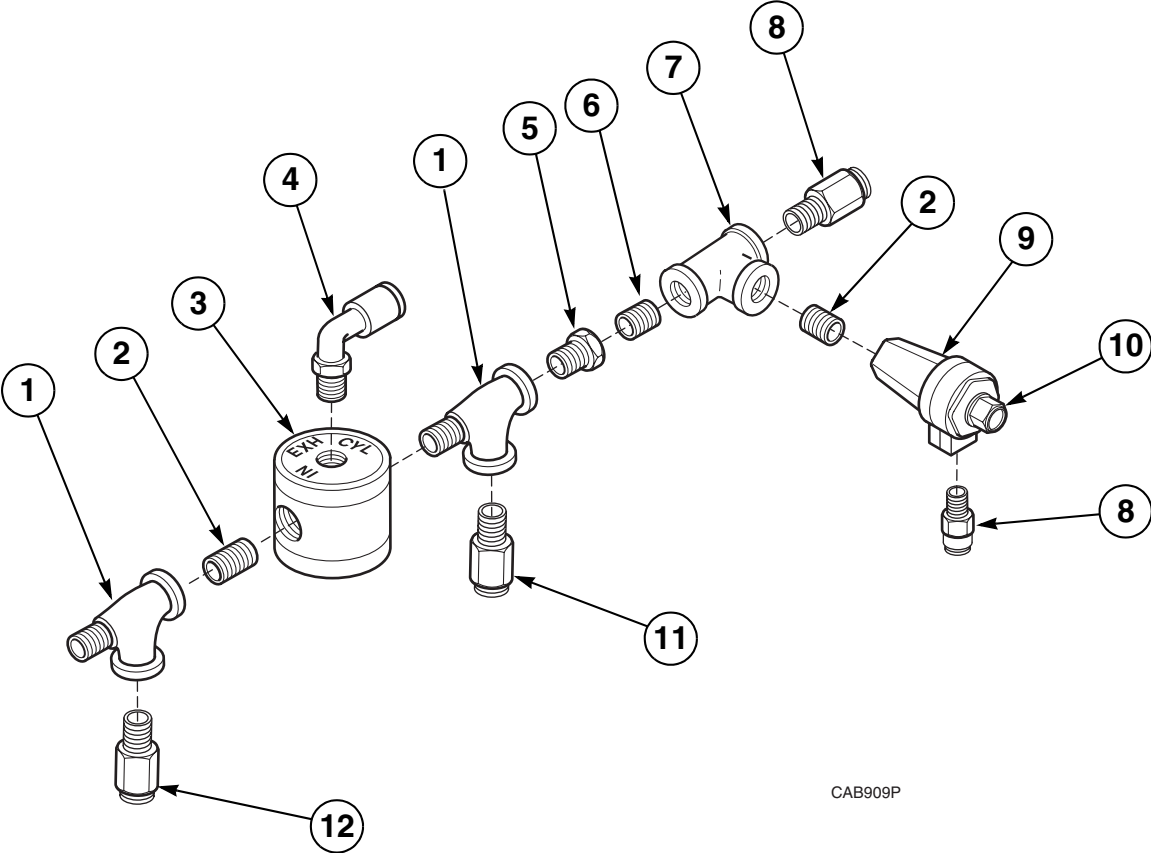


CAB909P

Internal Air Inlet Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1523794	Internal Air Inlet Assembly	Includes items 1-12
1	J1188242	Tee	2 required
2	J1232313	Nipple	2 required
3	JA-53550	Dump Valve	
4	J1407741	Elbow	
5	JC-19609	Bushing	
6	J115175201	Nipple	
7	JC-70613	Tee	
8	F422101	Connector	2 required
9	JA-56925	Quick Exhaust Valve	
10	N/A	Muffler	
11	J1408020	Connector	
12	J1463835-00	Connector	

N/A = Part no longer available

 Filter Damper Box Assembly

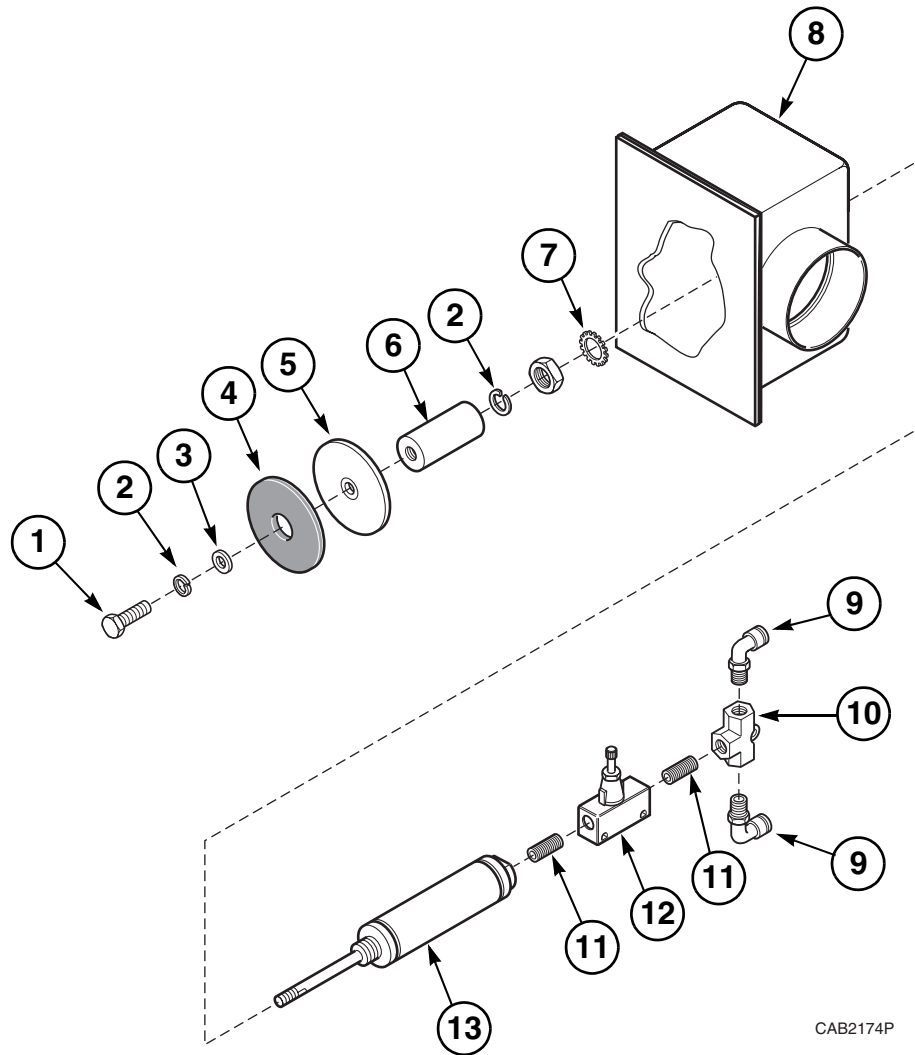


CAB2174P

Filter Damper Box Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1479484	Filter Box Damper Assembly	Includes items 1-13
1	JC-62851	Screw	
2	M400013	Washer	2 required
3	J1398452	Washer	Shim
4	J1398460	Washer	Rubber
5	J1398478	Washer	Large
6	J1398445	Coupling	
7	JA-53116	Washer	
8	J1479492	Damper Box Weldment	
9	J1407741	Elbow	2 required
10	JA-53602	Shuttle Valve	
11	J1232313	Nipple	2 required
12	J0380121-00	Flow Control	
13	J1390806	Air Cylinder	Single acting; Includes nut

 Model CBBY-XV

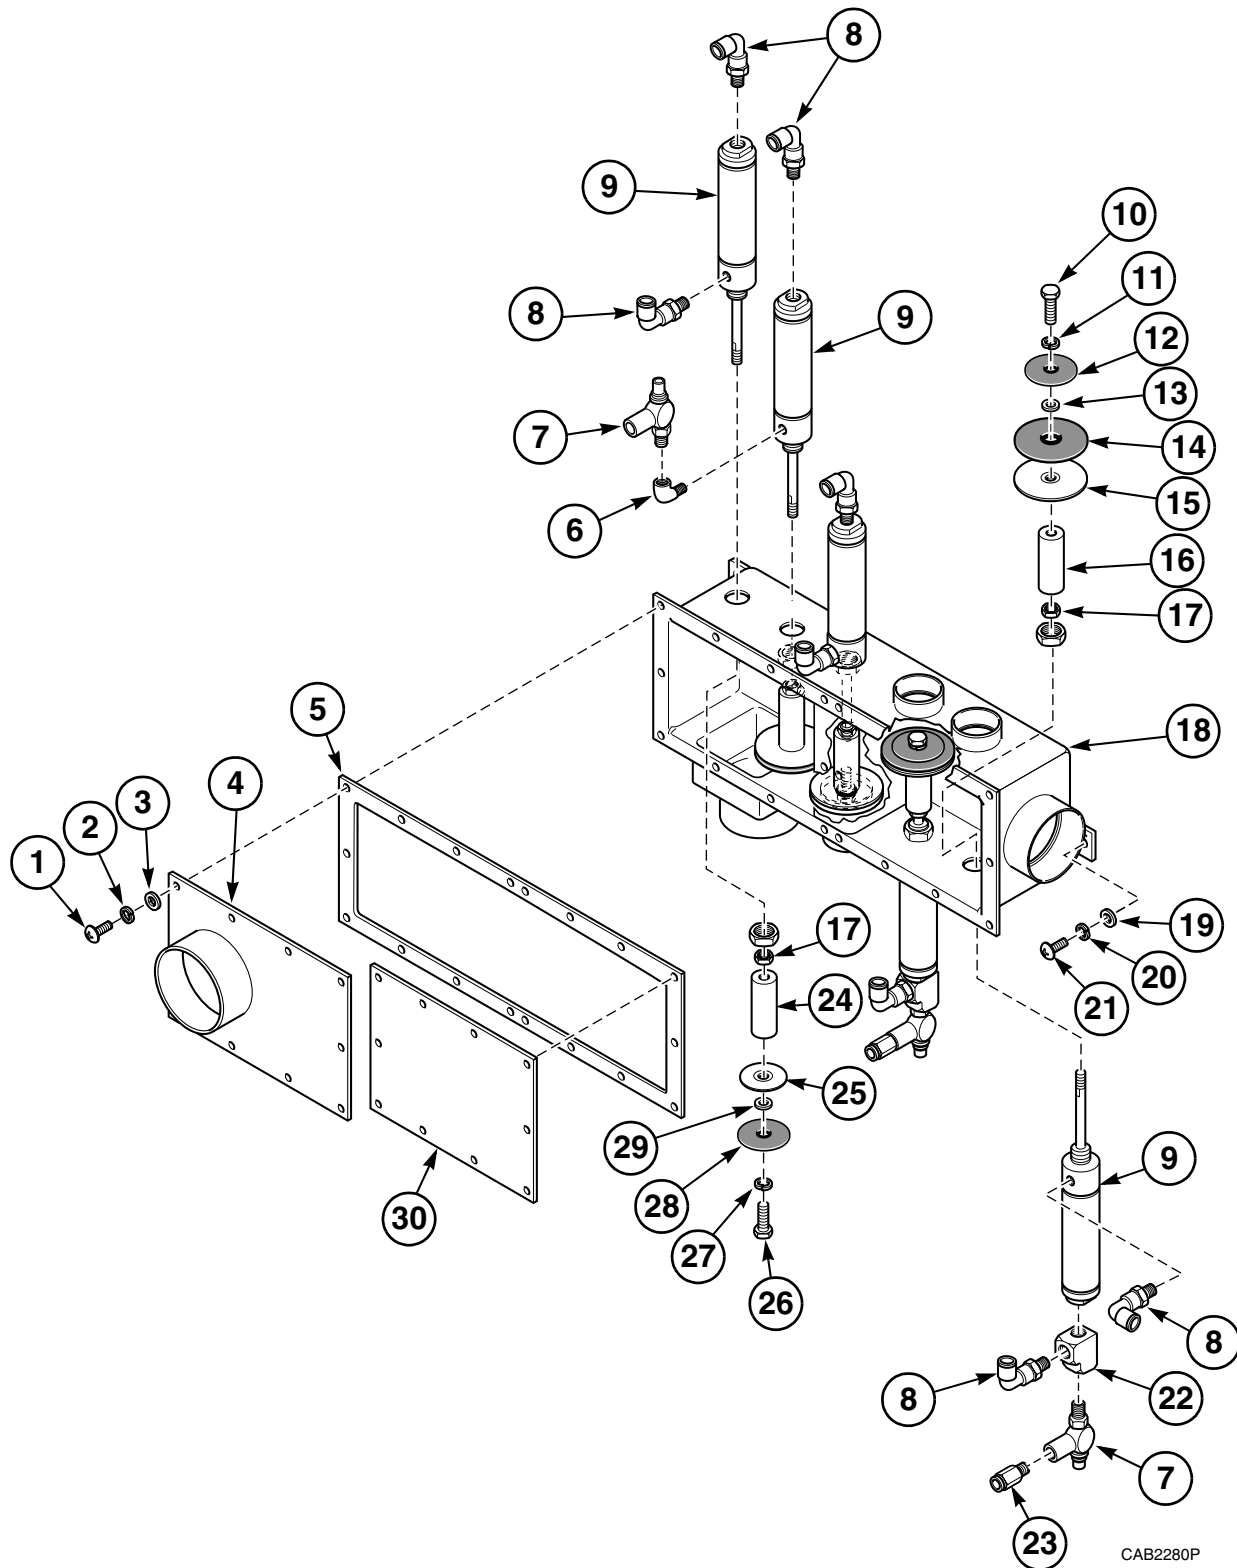


Damper Box Assembly (Drawing 1 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1523711	Damper Box Assembly	Includes items 1-18 and 22-30
1	J1185107	Screw	20 required
2	J1000975	Washer	20 required
3	JC-80759	Washer	20 required
4	J1521020	Damper Box Cover	
5	J1521004	Gasket	
6	JC-28317	Elbow	
7	J1455781	Flow Control Valve	3 required
8	J1407741	Elbow	9 required
9	J1437060	Air Cylinder	5 required
10	JC-62851	Screw	4 required
11	M400013	Washer	4 required
12	J1398437	Washer	Outside; Small; 4 required
13	J1398452	Washer	4 required
14	J1398460	Washer	Rubber; Small; 4 required
15	J1398478	Washer	Inside; Small; 4 required
16	J1398445	Coupling	4 required
17	JC-48289	Nut	5 required
18	N/A	Damper Box Weldment	
19	JC-80513	Washer	2 required
20	J1185073	Washer	2 required
21	02422	Screw	2 required
22	JC-30541	Tee	2 required
23	F422101	Connector	2 required
24	J1531821	Coupling	
25	J1531813	Washer	Outside; Small
26	JA-52116	Screw	
27	JC-43221	Washer	
28	J1531805	Washer	Rubber; Small
29	J1393354	Washer	
30	J1523604	Damper Box Cover	Right

N/A = Part no longer available

Damper Box Assembly (Drawing 2 of 3)

 Model DFB-XV

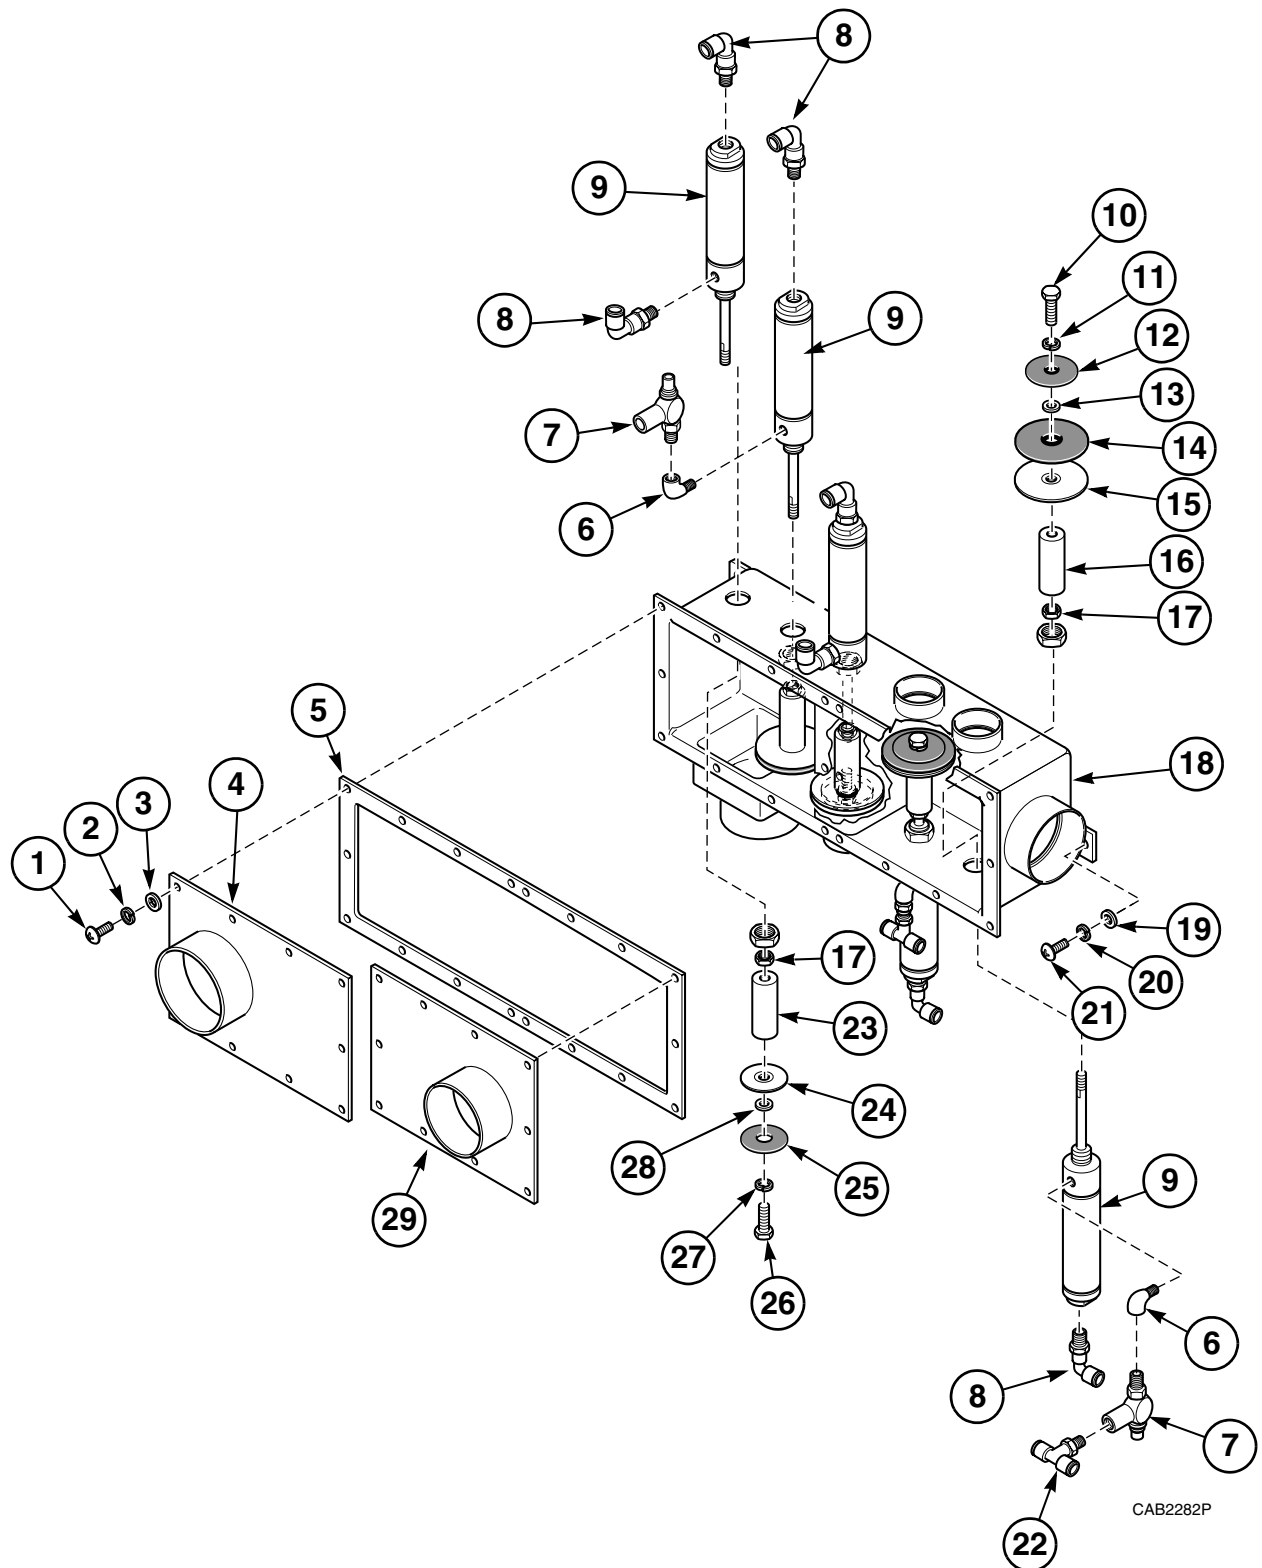


Damper Box Assembly (Drawing 2 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1521079	Damper Box Assembly	Includes items 1-18 and 22-29
1	J1185107	Screw	20 required
2	J1000975	Washer	20 required
3	JC-80759	Washer	20 required
4	J1521020	Damper Box Cover	Right
5	J1521004	Gasket	
6	JC-28317	Elbow	3 required
7	J1455781	Flow Control Valve	3 required
8	J1407741	Elbow	7 required
9	N/A	Air Cylinder	5 required
10	JC-62851	Screw	4 required
11	M400013	Washer	4 required
12	J1398437	Washer	Outside; Small; 4 required
13	J1398452	Washer	4 required
14	J1398460	Washer	Rubber; Small; 4 required
15	J1398478	Washer	Inside; Small; 4 required
16	J1398445	Coupling	4 required
17	JC-48289	Nut	5 required
18	N/A	Damper Box Weldment	
19	JC-80513	Washer	2 required
20	J1185073	Washer	2 required
21	02422	Screw	2 required
22	J1437029	Tee	2 required
23	J1531821	Coupling	
24	J1531805	Washer	Rubber; Small
25	J1531813	Washer	Outside; Small
26	JA-52116	Screw	
27	JC-43221	Washer	
28	J1393354	Washer	
29	J1521038	Damper Box Cover	Left

N/A = Part no longer available

Damper Box Assembly (Drawing 3 of 3)

 Models DFB-X and CBBY-X

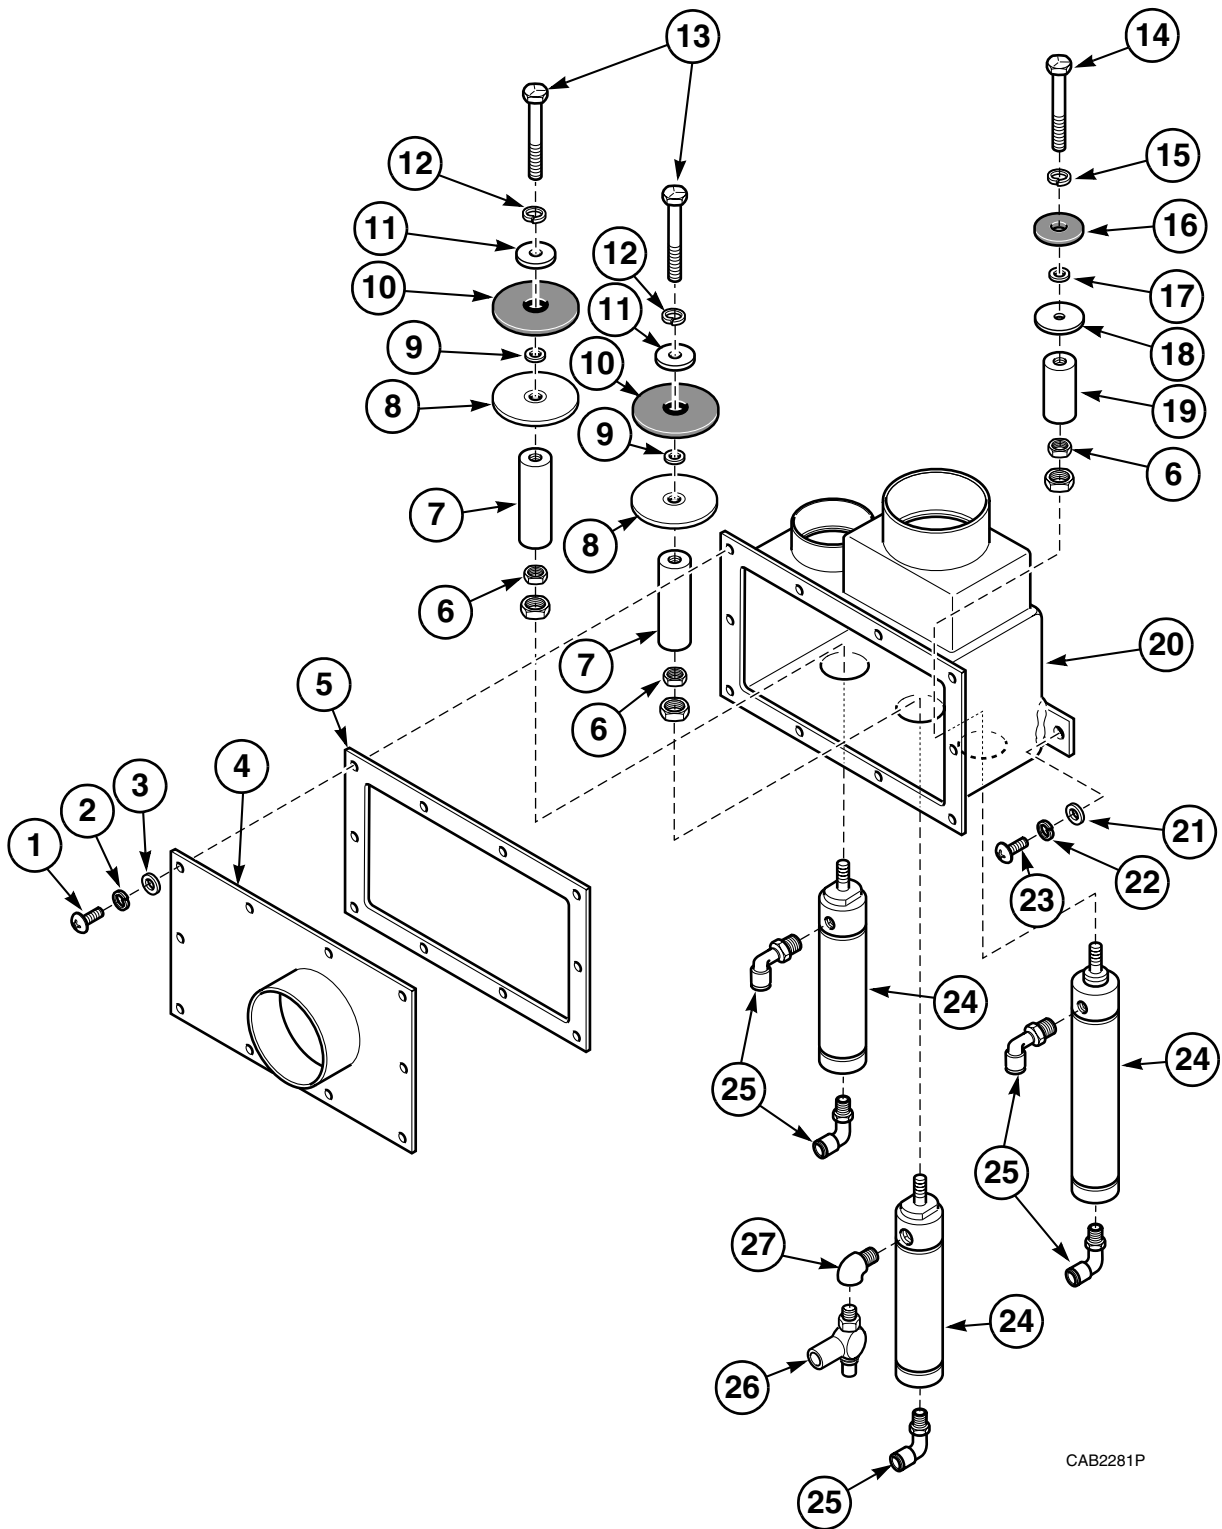


CAB2281P

Damper Box Assembly (Drawing 3 of 3)


REF	PART NO.	DESCRIPTION	COMMENTS
	J1522440	Damper Box Assembly	Includes items 1-20 and 24-27
1	J1185107	Screw	10 required
2	J1000975	Washer	10 required
3	JC-80759	Washer	10 required
4	N/A	Damper Box Cover	
5	J1531763	Gasket	
6	JC-48289	Nut	3 required
7	J1398445	Coupling	2 required
8	J1398478	Washer	Inside; Small; 2 required
9	J1398452	Washer	2 required
10	J1398460	Washer	Rubber; Small; 2 required
11	J1398437	Washer	Outside; Small; 2 required
12	M400013	Washer	2 required
13	JC-62851	Screw	2 required
14	JA-52116	Screw	
15	J1185073	Washer	
16	J1531813	Washer	Outside; Small
17	J1393354	Washer	
18	J1531805	Washer	Rubber; Small
19	J1531821	Coupling	
20	J1522424	Damper Box Weldment	
21	JC-80513	Washer	2 required
22	J1185073	Washer	2 required
23	02422	Screw	2 required
24	J1437060	Air Cylinder	3 required
25	J1407741	Elbow	5 required
26	J1455781	Flow Control Valve	
27	JC-28317	Elbow	

N/A = Part no longer available

 Steam Application

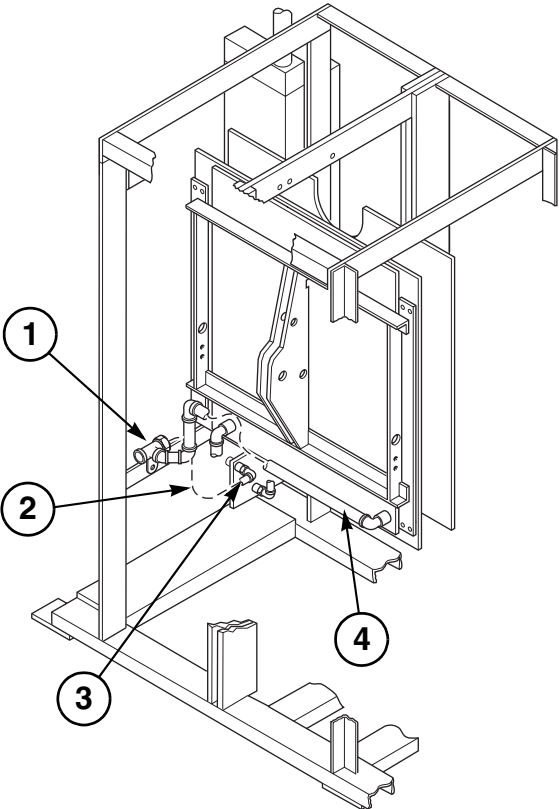

Rear View

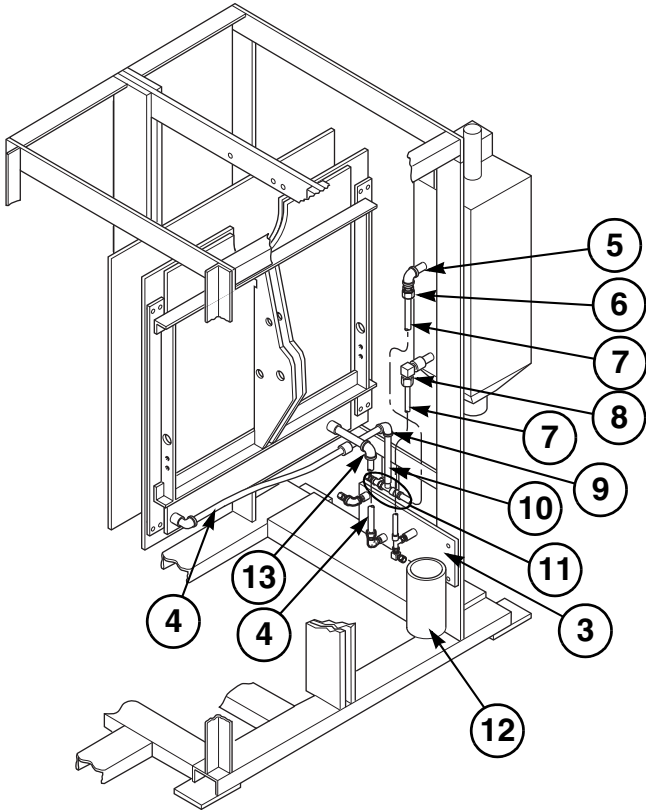 


Front View

CAB411P

Steam Application

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-12279	Coil Mounting Bar	Use with J1471234 Condenser Coil
	JA-09231	Condenser Flow Control	Use with J1471234 Condenser Coil
	JA-52038	Screw	Use with J1471234 Condenser Coil
	J1000975	Washer	Use with J1471234 Condenser Coil
	J1000736	Nut	Use with J1471234 Condenser Coil
1	J1521707	Rear Head Steam Return Assembly	Refer to <i>Rear Head Steam Return Assembly</i> section for parts breakdown
2	J1106665	Tubing	
3	J1521715	Steam Return Assembly	Refer to <i>Steam Return Assembly</i> section for parts breakdown
4	J1319268	Steam Hose	
5	J1084011	Elbow	
6	JC-30857	Connector	
7	J1117191	Tubing	
8	JC-30454	Elbow	
9	J1231422	Elbow	
	JC-46349	Nipple	
	J1007442	Coupling	
10	JC-46144	Nipple	
11	J1521723	Primary Steam Inlet Assembly	Refer to <i>Primary Steam Inlet Assembly</i> section for parts breakdown
12	J1471234	Condenser Coil	
13	JA-50635	Elbow	
	JA-51540	Nipple	

 Primary Steam Inlet Assembly

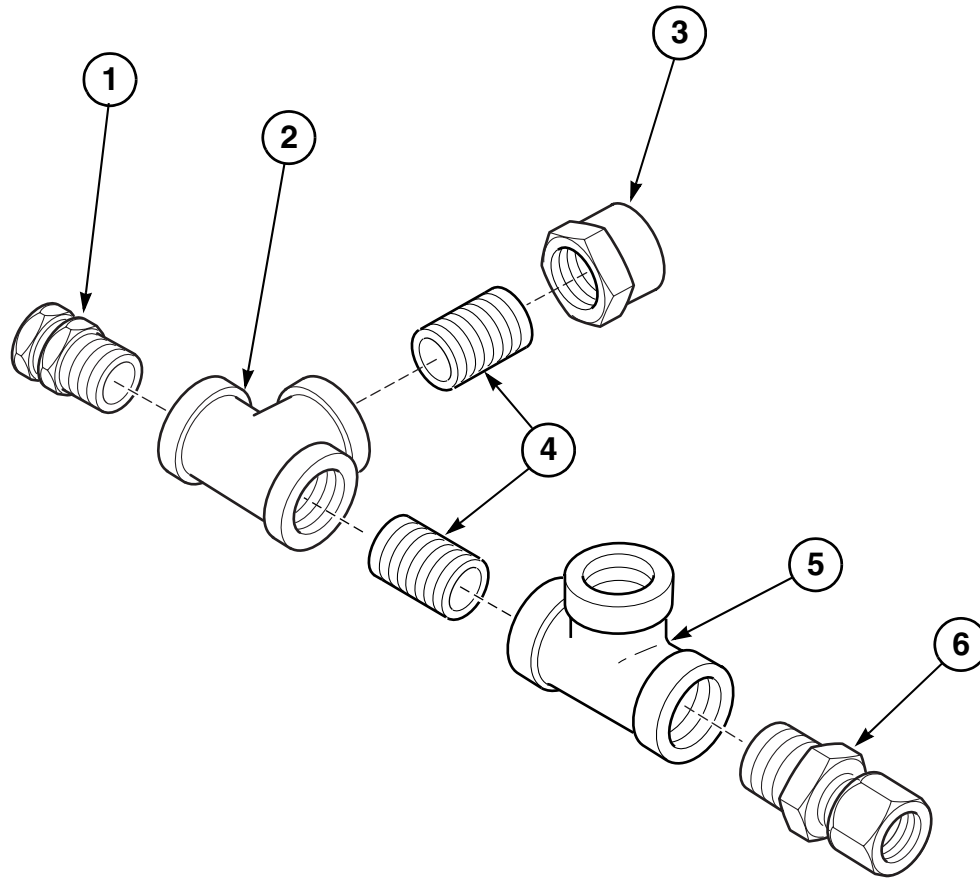


CAB908P

Primary Steam Inlet Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1521723	Primary Steam Inlet Assembly	Includes items 1-6
1	JC-19662	Bushing	
2	J1018423	Tee	
3	J1468347	Bushing	
4	431206	Nipple	2 required
5	JC-70620	Tee	
6	JC-30857	Connector	

 Steam Return Assembly

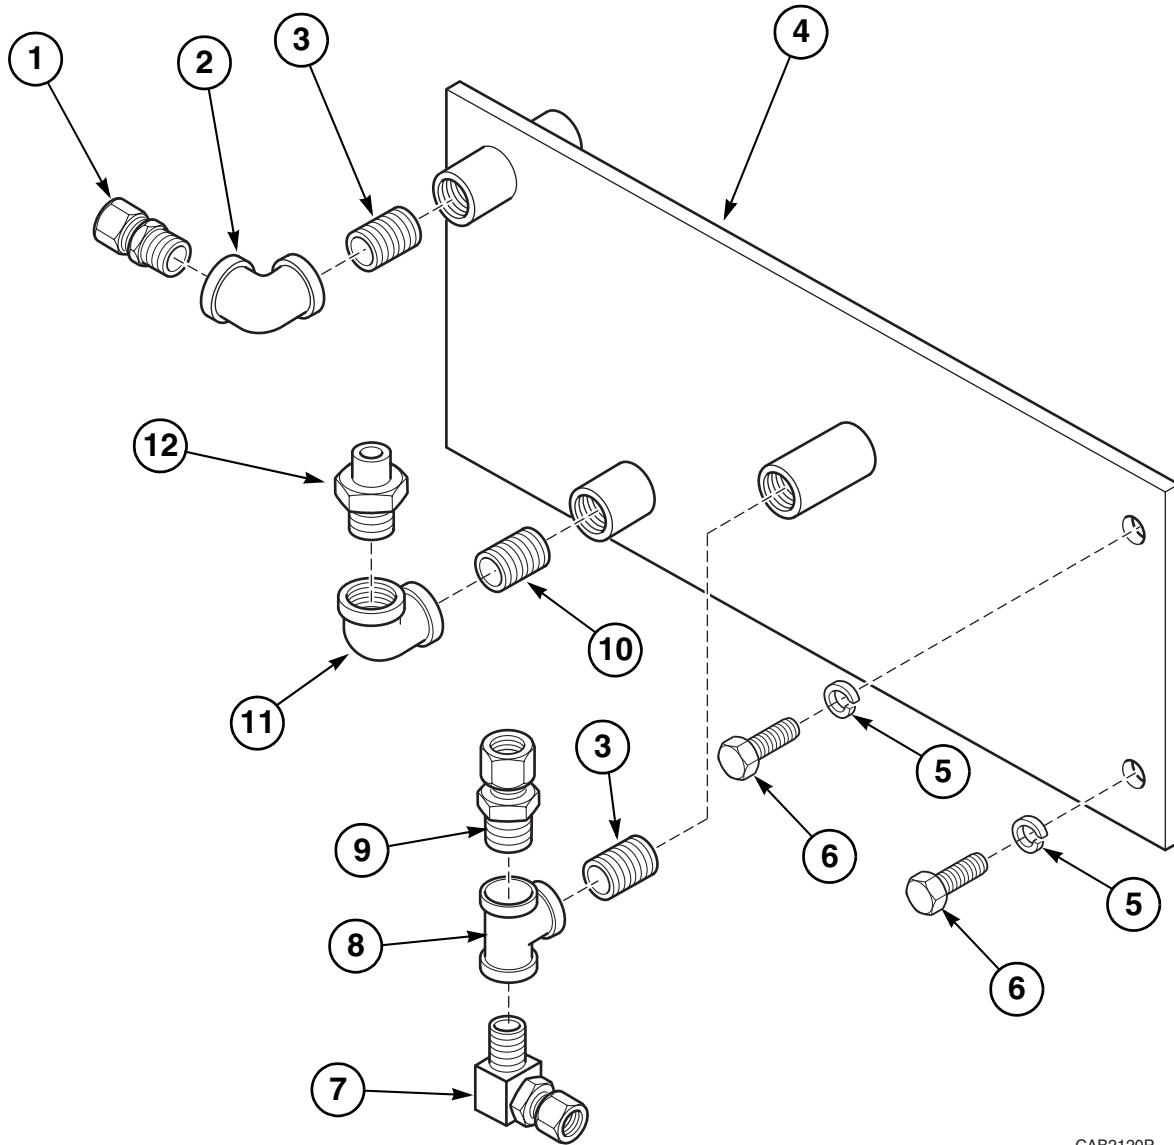


CAB2120P

Steam Return Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1521715	Steam Return Assembly	Includes items 1-4 and 7-12
1	JA-50765	Connector	
2	J1084011	Elbow	
3	J1239334	Nipple	2 required
4	J200017300	Steam Return Assembly Weldment	
5	M400014	Washer	2 required
6	N/A	Screw	2 required
7	JC-30211	Elbow	
8	JC-31374	Connector	
9	J1161272	Connector	
10	J1026665	Nipple	
11	JA-51007	Elbow	
12	J1319276	Connector	

N/A = Part no longer available

 
Rear Head Steam Return Assembly

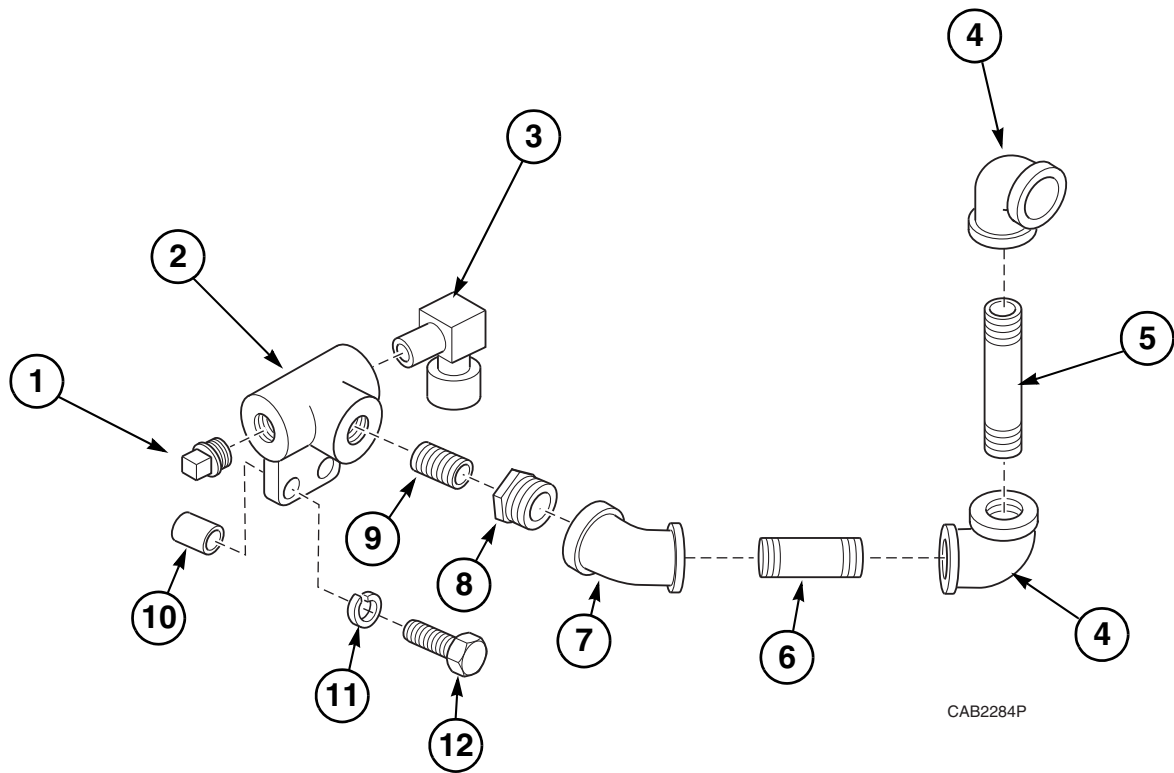

Rear Head Steam Return Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1521707	Rear Head Steam Return Assembly	Includes items 1-9
1	J1161421	Plug	
2	JA-23840	Mounting Bracket Tee	
3	JC-30719	Elbow	
4	J1231422	Elbow	2 required
5	JC-46337	Nipple	
6	J1026665	Nipple	
7	JC-28237	Elbow	
8	JC-19682	Bushing	
9	J1236553	Nipple	
10	JA-24365	Manifold Spacer	2 required
11	M400013	Washer	2 required
12	JA-52808	Screw	2 required

 Discharge Tube Assembly

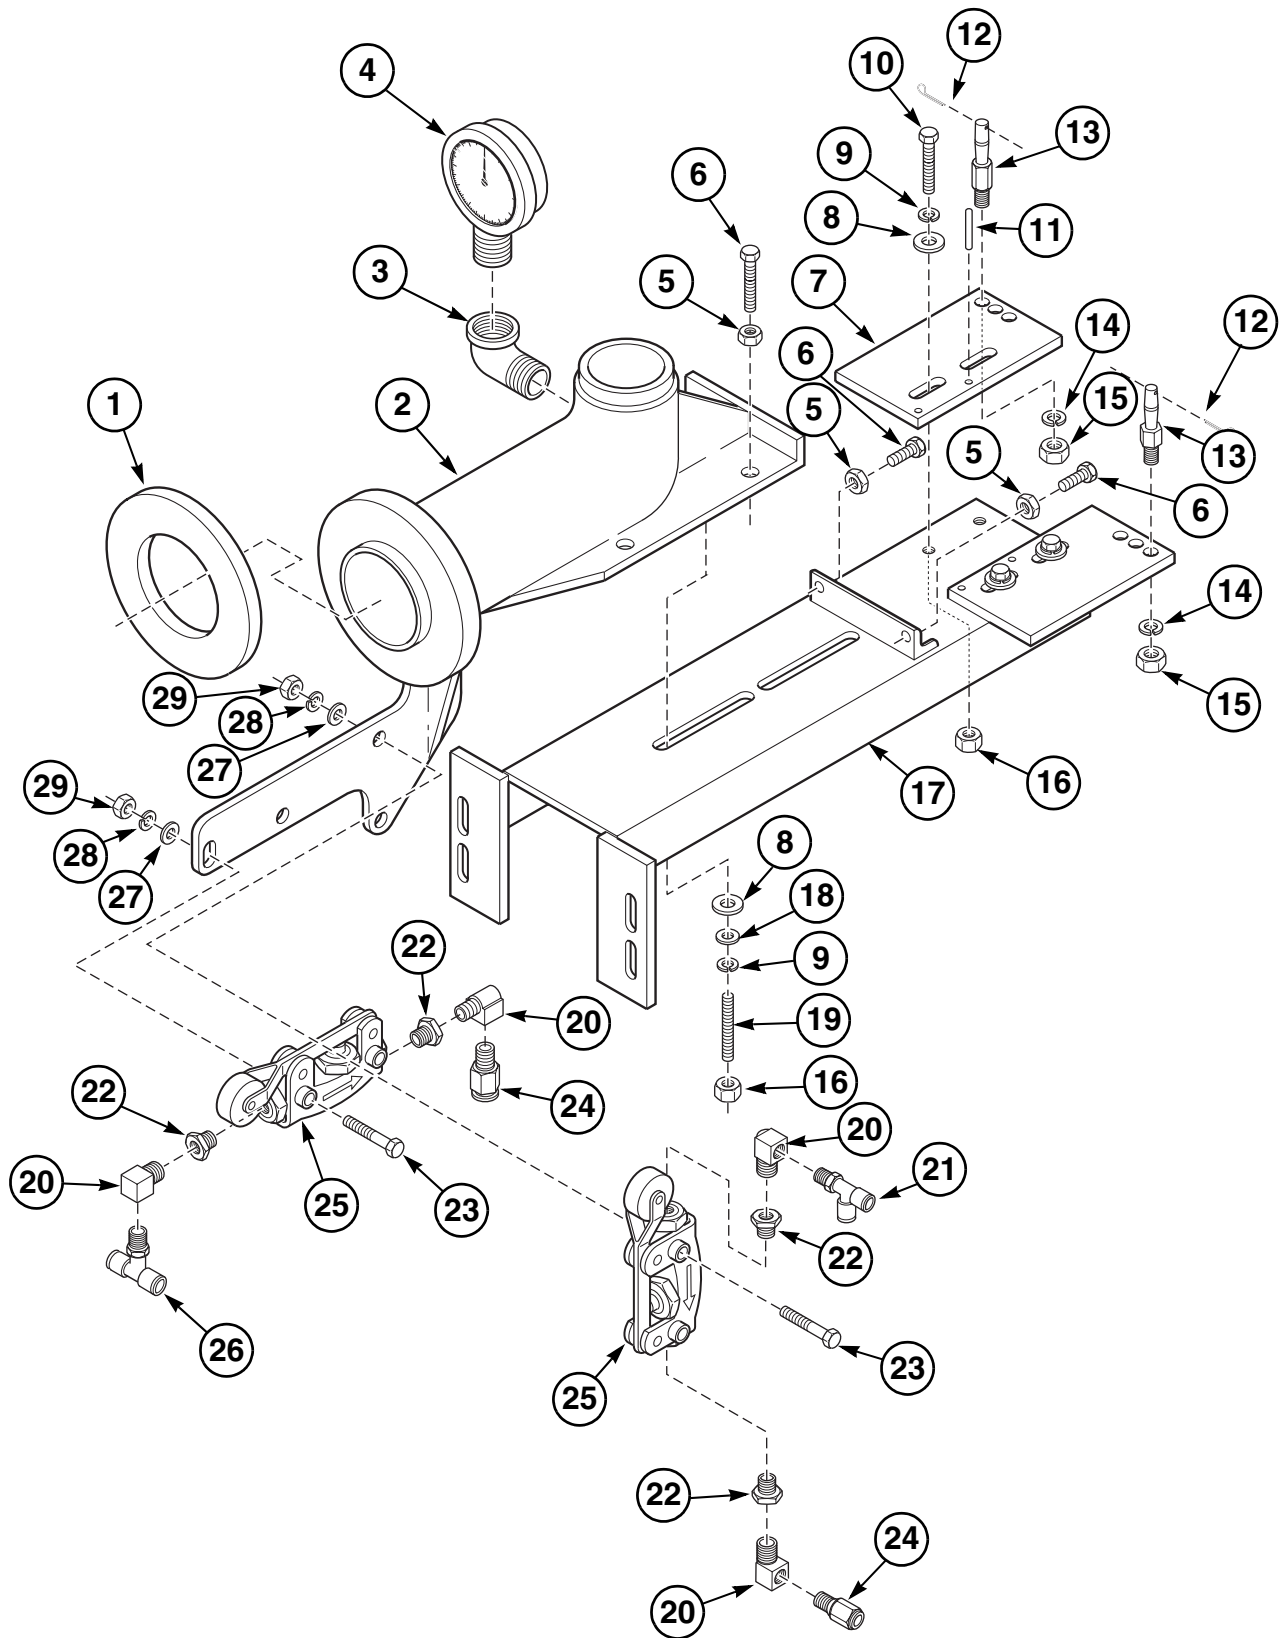


CAB2283P

Discharge Tube Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1523927	Discharge Tube Assembly	Model DFB; Includes items 1-28
	J1531003	Discharge Tube Assembly	Model CBBY; Includes items 1-28
1	J1471531	Gasket	
2	JA-23305	Discharge Tube	
3	J1231521	Elbow	
4	JA-51283	Air Gauge	0-5 psi
5	20275	Nut	10 required
6	JA-54156	Screw	6 required
7	JA-24692	Cylinder Support	2 required
8	M400081	Washer	5 required
9	M400014	Washer	5 required
10	430648	Screw	4 required
11	N/A	Roll Pin	2 required
12	JA-50497	Cotter Pin	2 required
13	JA-22763	Cylinder Mounting Pin	2 required; Includes item 12
14	91200	Washer	2 required
15	J1000850	Nut	2 required
16	20274	Nut	5 required
17	JA-09212	Discharge Tube Channel Weldment	
18	J1178391	Washer	
19	JA-51951	Screw	
20	JC-28317	Elbow	4 required
21	J1438357	Tee	
22	JC-19609	Bushing	4 required
23	JA-50128	Screw	4 required
24	F422101	Connector	2 required
25	JA-53892	Roller Valve	2 required
26	J1437029	Tee	
27	JC-80583	Washer	4 required
28	J1185073	Washer	4 required

N/A = Part no longer available

 Front Head Safety Bar Application

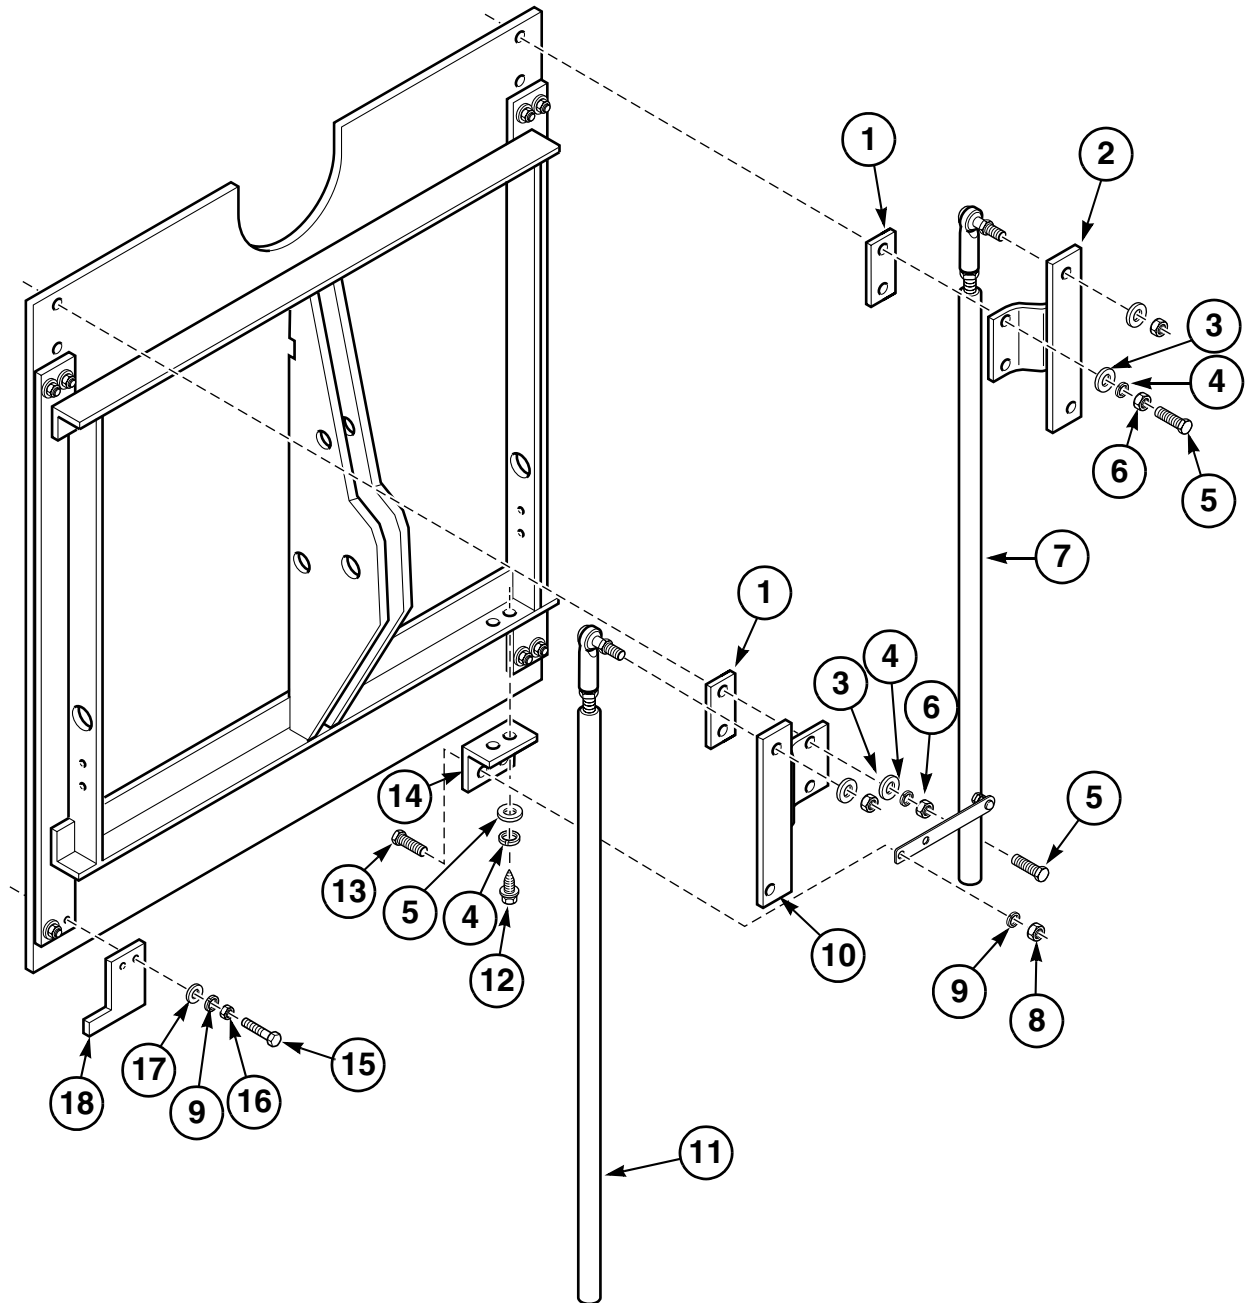


CAB2286P

Front Head Safety Bar Application

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1546118	Gasket	2 required
2	J1521954	Safety Valve Assembly – Front Right	Refer to <i>Safety Valve Assembly – Front Right</i> section for parts breakdown
3	JC-80513	Washer	6 required
4	J1185073	Washer	6 required
5	J1615194	Screw	4 required
6	20275	Nut	4 required
7	J1522903	Head Safety Bar Assembly	Refer to <i>Head Safety Bar Assembly</i> section for parts breakdown
8	F431004	Nut	2 required
9	M400013	Washer	4 required
10	J1571041	Safety Valve Assembly – Front Left	Refer to <i>Safety Valve Assembly – Front Left</i> section for parts breakdown
11	J1570951	Safety Bar Assembly	Left
12	JA-53020	Screw	2 required
13	JA-50134	Screw	2 required
14	J1521962	Head Mounting Safety Bar Bracket	
15	91202	Screw	2 required
16	70142	Nut	2 required
17	J1001270	Washer	2 required
18	J1570001	Safety Bar Bracket	Lower left

 
Rear Head Safety Bar Application

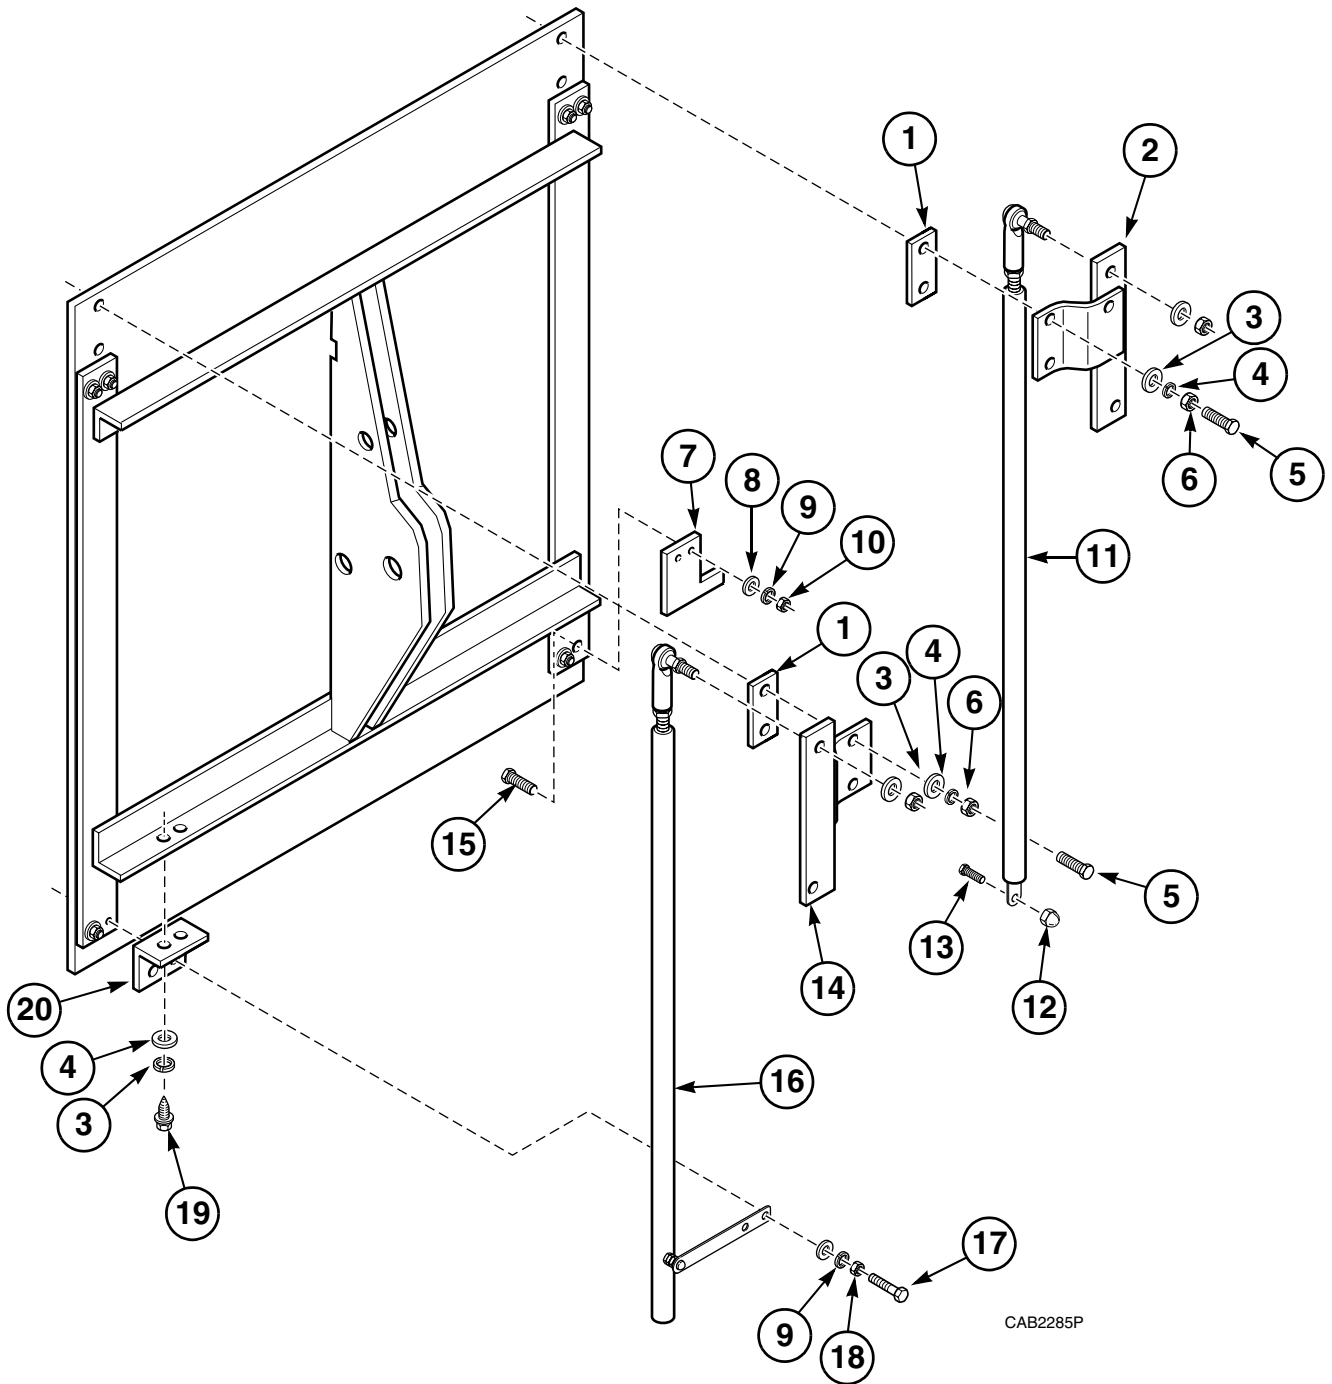

Rear Head Safety Bar Application

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1546118	Gasket	
2	J1571058	Safety Valve Assembly– Rear Left	Refer to <i>Safety Valve Assembly – Rear Left</i> section for parts breakdown
3	JC-80513	Washer	
4	J1185073	Washer	
5	J1615194	Screw	
6	20275	Nut	
7	J1570001	Safety Bar Bracket	Lower left
8	J1001270	Washer	
9	M400013	Washer	
10	70142	Nut	
11	J1570951	Safety Bar Assembly	Left
12	JC-48494	Nut	
13	J1007434	Screw	
14	J1521947	Safety Valve Assembly – Rear Right	Refer to <i>Safety Valve Assembly – Rear Right</i> section for parts breakdown
15	91202	Screw	
16	J1522903	Head Safety Bar Assembly	Refer to <i>Head Safety Bar Assembly</i> section for parts breakdown
17	JA-50134	Screw	
18	F431004	Nut	
19	JA-53020	Screw	
20	J1521962	Head Mounting Safety Bar Bracket	

 Safety Valve Assembly

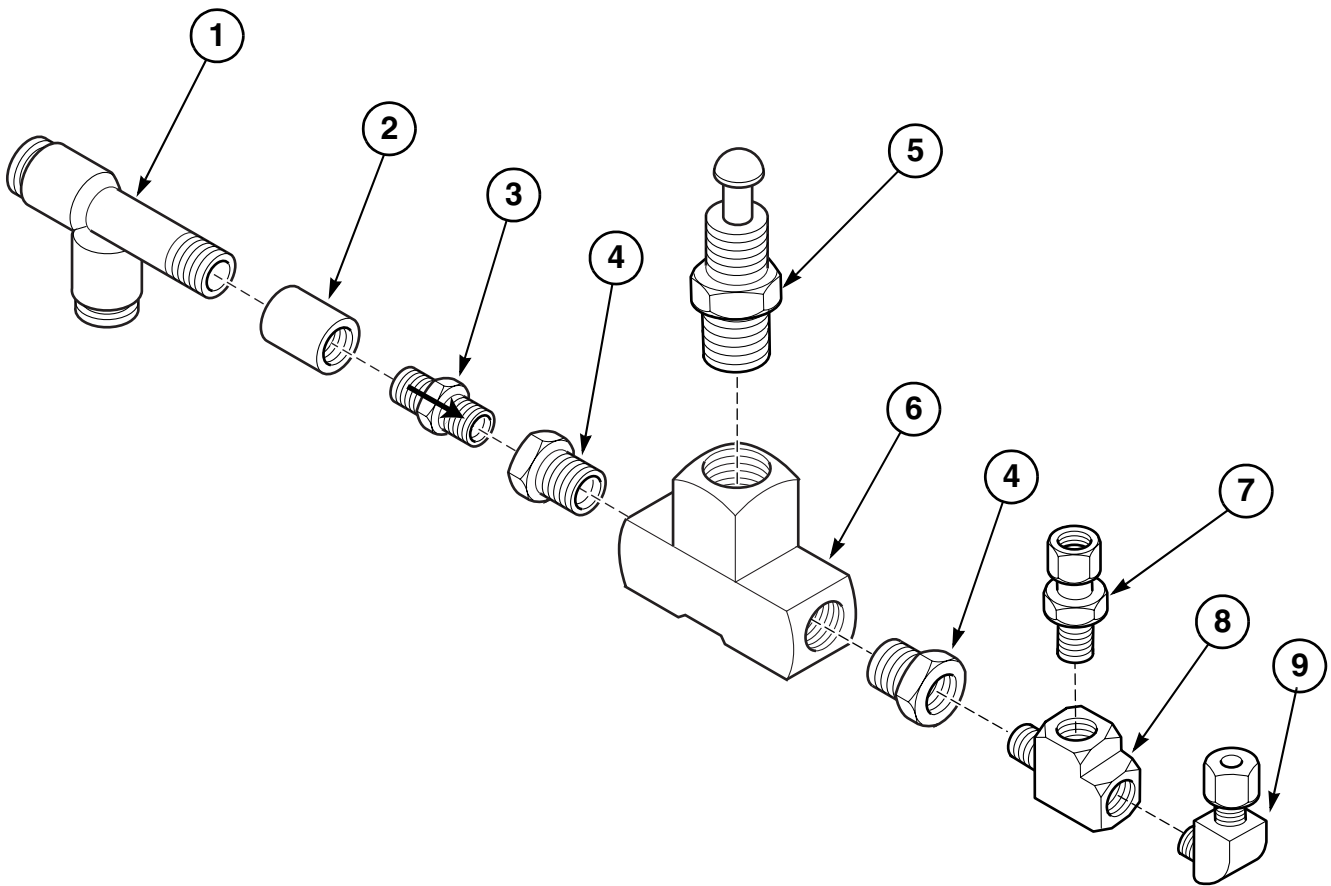


CAB437P

Safety Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	N/A	Safety Valve Assembly	Includes items 1-9
1	J1438357	Tee	Replaced J1407741 Elbow in this location starting April 1993
2	J1018571	Coupling	
3	JA-54042	Check Valve	1/8 NPT
4	JC-19609	Bushing	2 required
5	JA-53893	Bleeder Valve	2-way
6	J1188242	Tee	
7	J1151661	Connector	
8	JA-50770	Elbow	
9	N/A	Elbow	

N/A = Part no longer available

 
Safety Valve Assembly – Front Left

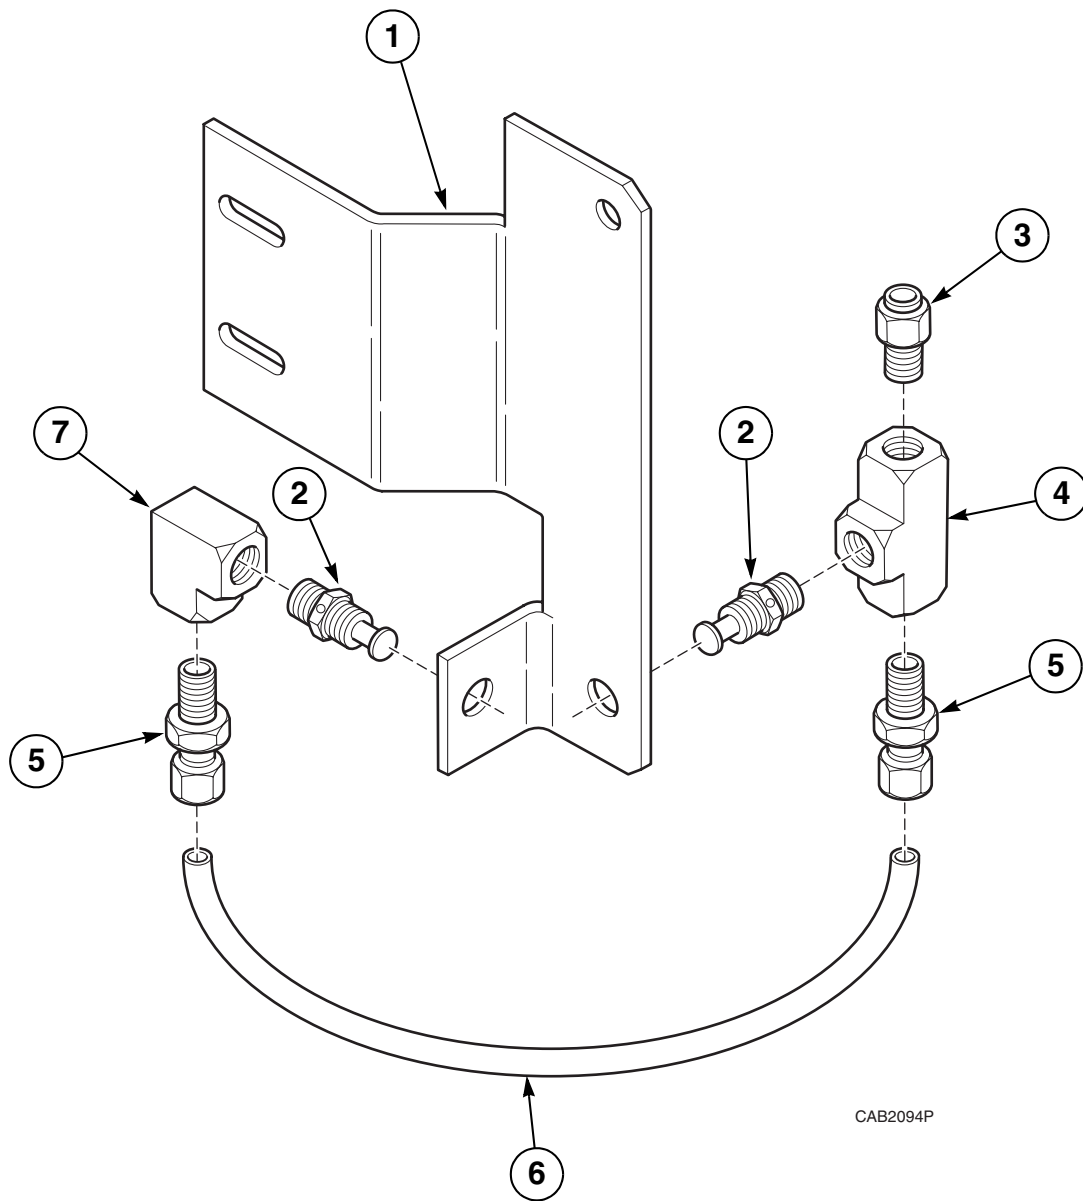

Safety Valve Assembly – Front Left

REF	PART NO.	DESCRIPTION	COMMENTS
	J1571041	Safety Valve Assembly – Front Left	Includes items 1-7
1	J1569888	Safety Bar Bracket	
2	JA-53893	Bleeder Valve	2 required
3	J1463835-00	Connector	
4	J1188242	Tee	
5	J1075175	Connector	2 required
6	J1106699	Tubing	Copper; 6 inches required
7	J1188192	Elbow	

 
Safety Valve Assembly – Rear Left

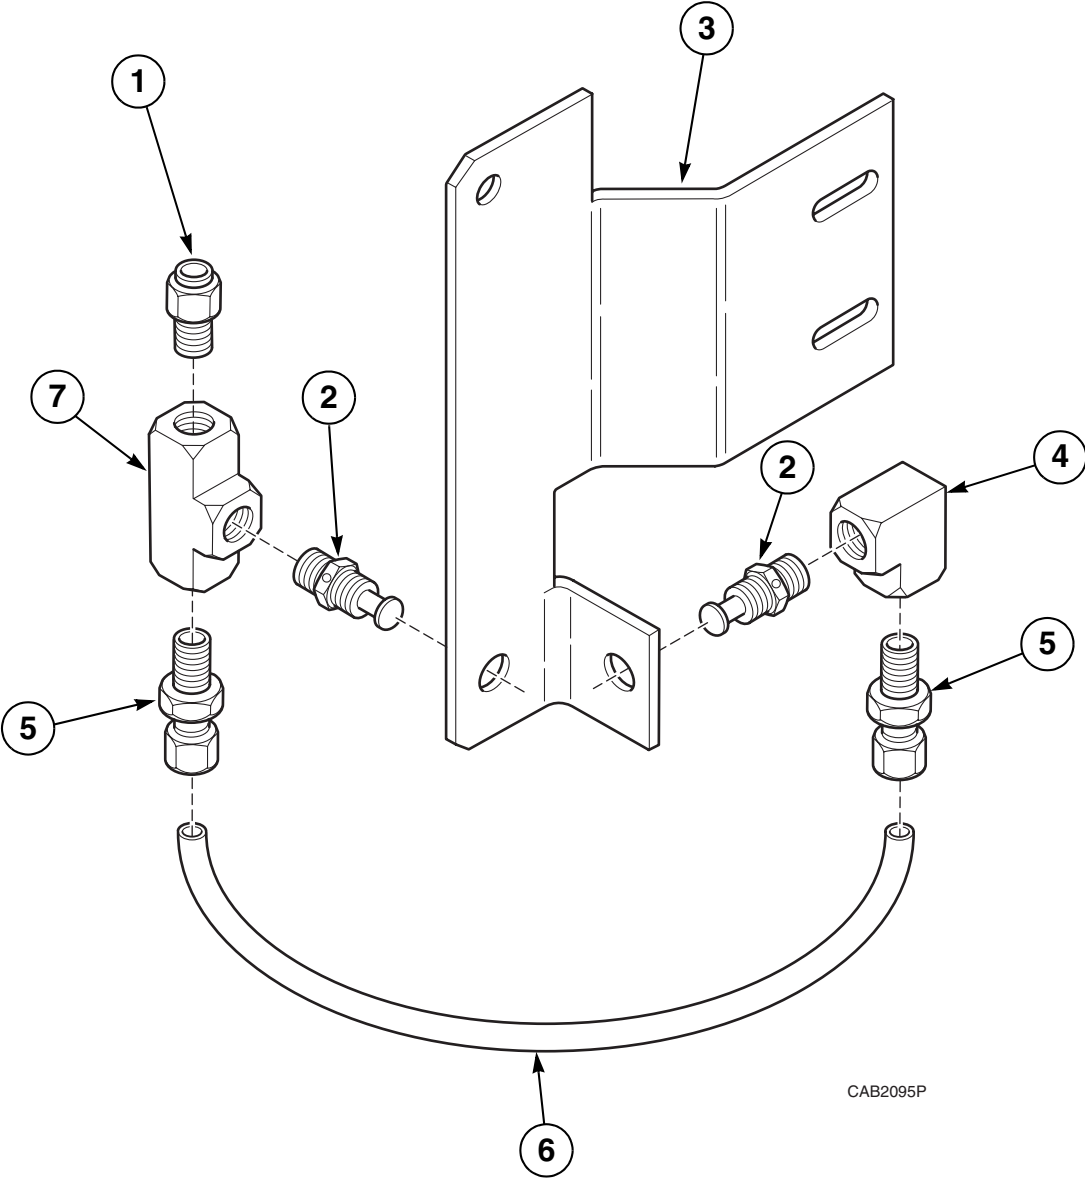

Safety Valve Assembly – Rear Left

REF	PART NO.	DESCRIPTION	COMMENTS
	J1571058	Safety Valve Assembly – Rear Left	Includes items 1-7
1	J1463835-00	Connector	
2	JA-53893	Bleeder Valve	2 required
3	J1569870	Safety Bar Bracket	
4	J1188192	Elbow	
5	J1075175	Connector	2 required
6	J1106699	Tubing	Copper; 6 inches required
7	J1188242	Tee	

 
Safety Valve Assembly – Front Right

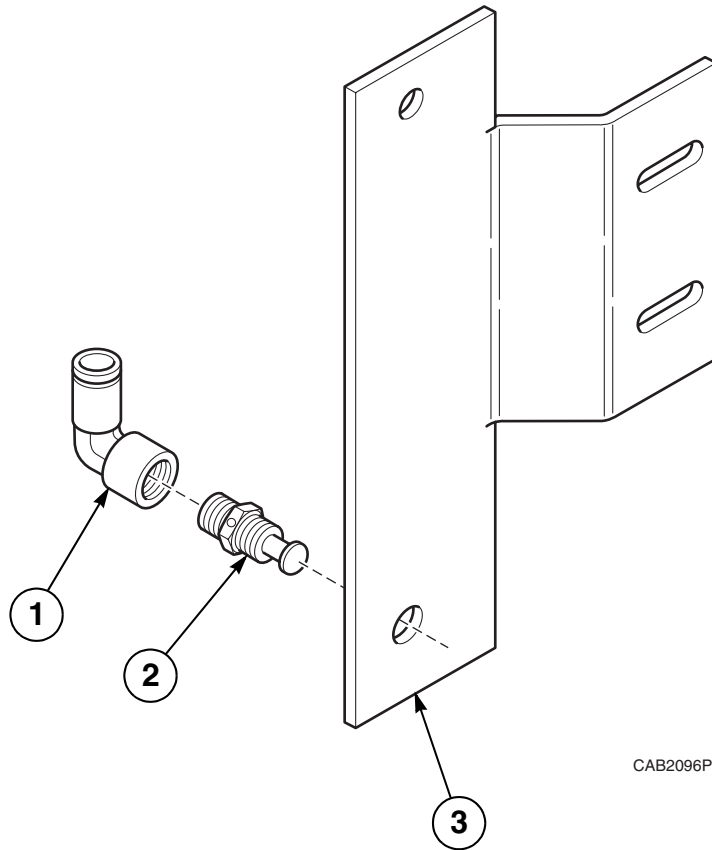

Safety Valve Assembly – Front Right

REF	PART NO.	DESCRIPTION	COMMENTS
	J1521954	Safety Valve Assembly – Front Right	Includes items 1-3
1	J1571025	Elbow	
2	JA-53893	Bleeder Valve	
3	J1520279	Safety Bar Bracket	

 
Safety Valve Assembly – Rear Right

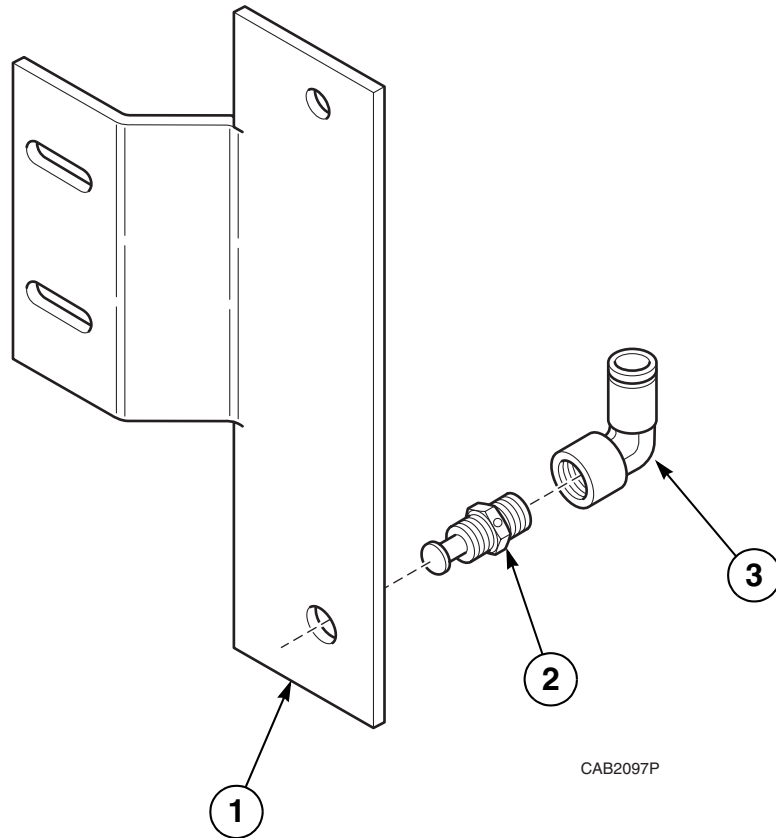

Safety Valve Assembly – Rear Right

REF	PART NO.	DESCRIPTION	COMMENTS
	J1521947	Safety Valve Assembly – Rear Right	Includes items 1-3
1	J1520261	Safety Bar Bracket	
2	JA-53893	Bleeder Valve	
3	J1571025	Elbow	

 Head Safety Bar Assembly

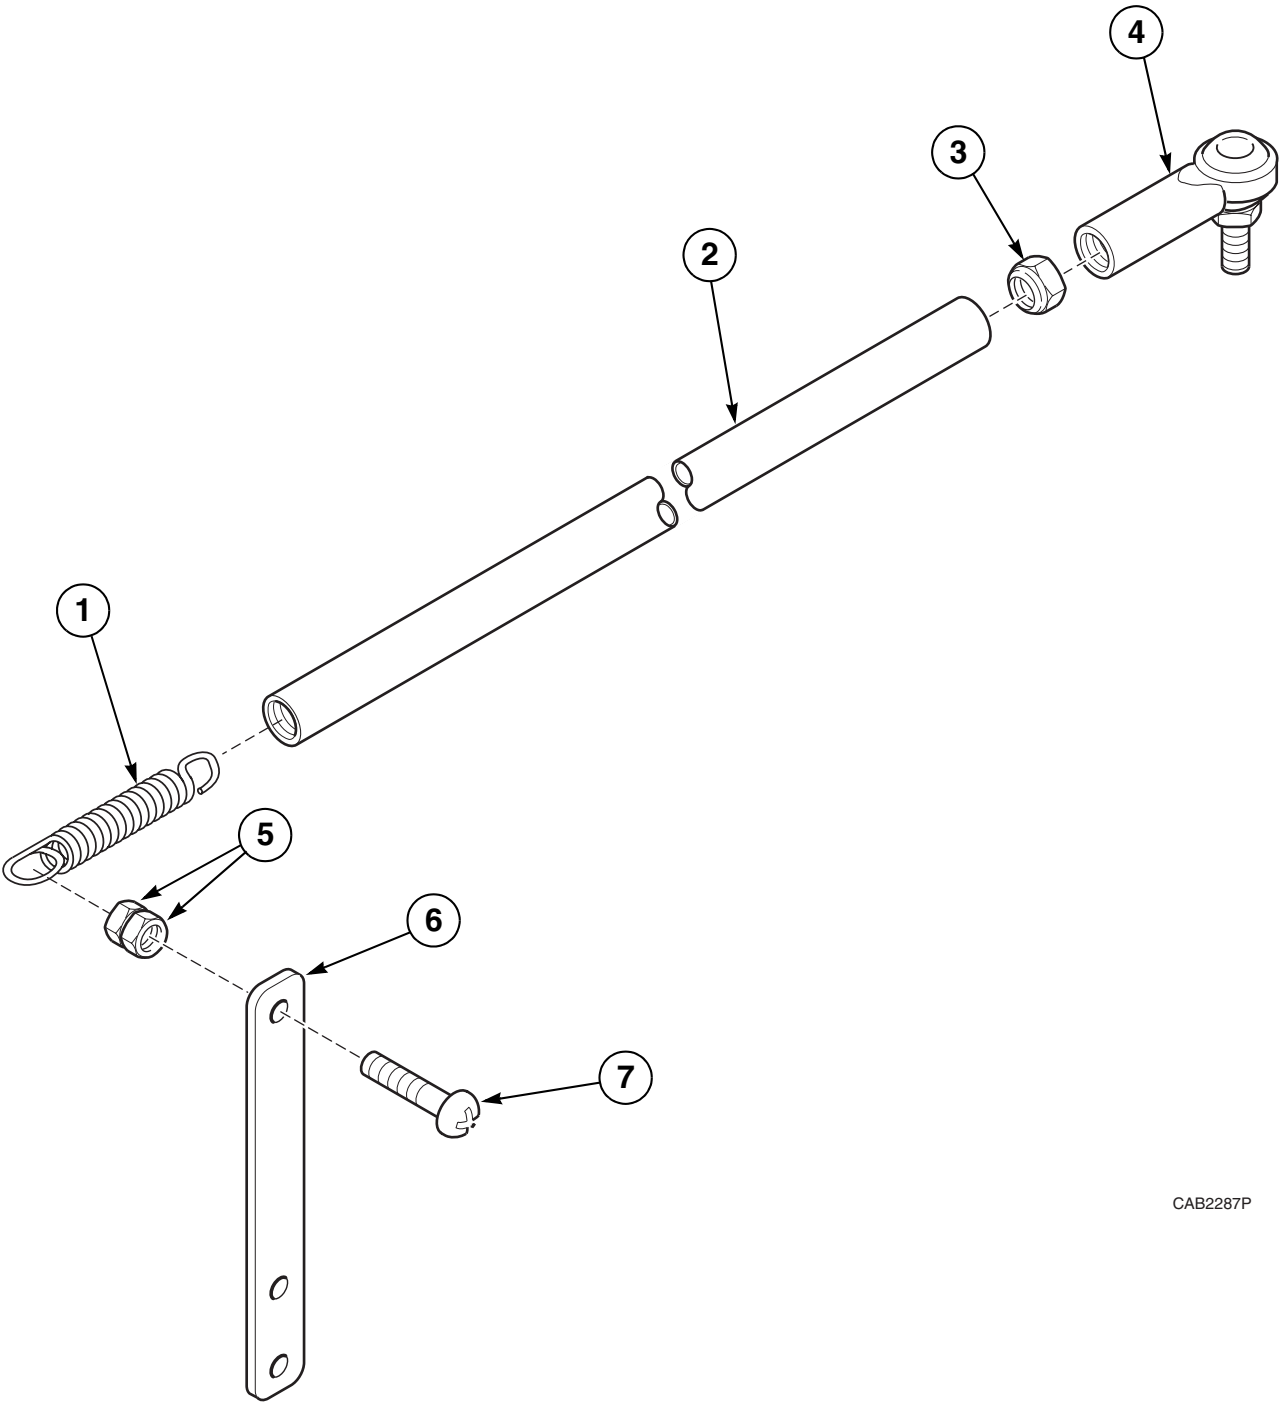

CAB2287P


Head Safety Bar Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1522903	Head Safety Bar Assembly	Includes items 1-7
1	J1570993	Spring	
2	J1522887	Safety Bar Weldment	
3	N/A	Nut	
4	JA-53860	Rod End Bearing	
5	20275	Nut	2 required
6	J1521970	Safety Bar Mounting Tie	
7	JA-52524	Screw	

N/A = Part no longer available

Operating Control Panel Assembly (Drawing 1 of 2)

 Models CBBY-X and CBBY-XV

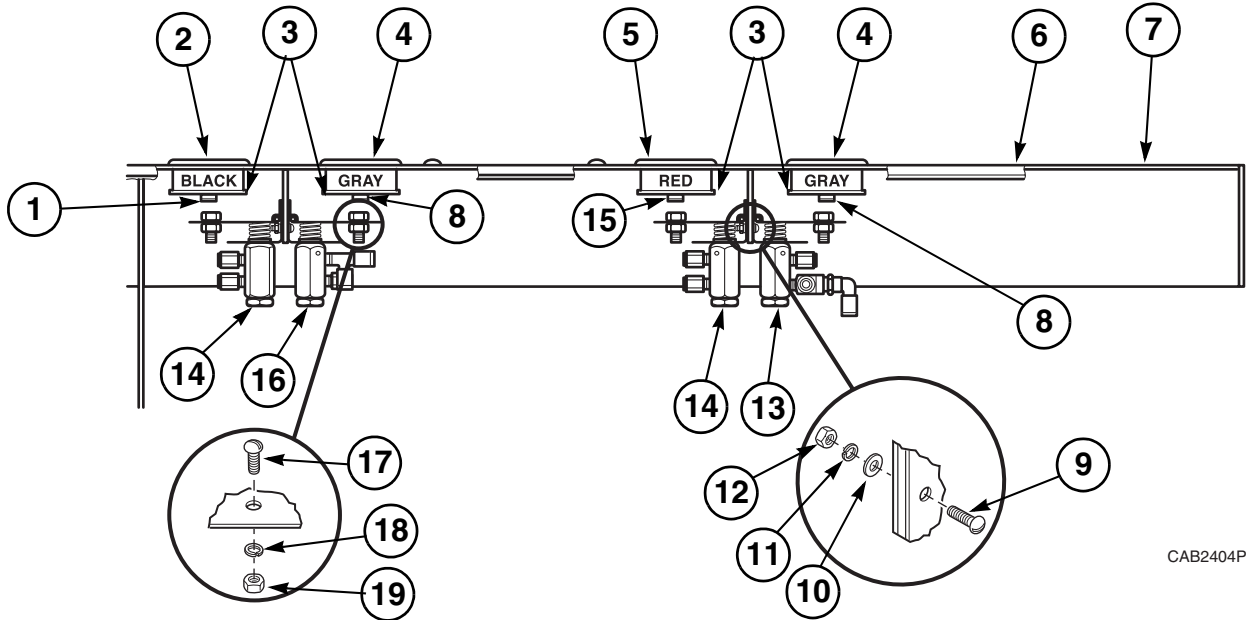


CAB2404P

Operating Control Panel Assembly (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525203	Operating Control Assembly	Includes items 1-19
	J1111095	Screw	Used with item 6; 2 required
1	J1544048	Pushbutton Assembly	Black
2	J1591346	Grommet	Black; Replaces old gray assembly
3	JA-17705	Locking Ring	4 required
4	J1591304	Grommet	Gray; Replaces old red assembly; 2 required
5	J1591320	Grommet	Red; Replaces old gray assembly
6	JA-23315	Pushbutton Cover	
7	J1520931	Control Console Weldment	
8	J1538958	Pushbutton Assembly	Gray; 2 required
9	JC-61269	Screw	4 required
10	JC-80759	Washer	8 required
11	J1000975	Washer	4 required
12	J1000736	Nut	4 required
13	J1525195	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
14	J1438373	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
15	JA-04665	Pushbutton Assembly	Red
16	J1541838	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
17	JA-50134	Screw	4 required
18	M400013	Washer	4 required
19	70142	Nut	4 required

Operating Control Panel Assembly (Drawing 2 of 2)

 Models DFB-X and DFB-XV

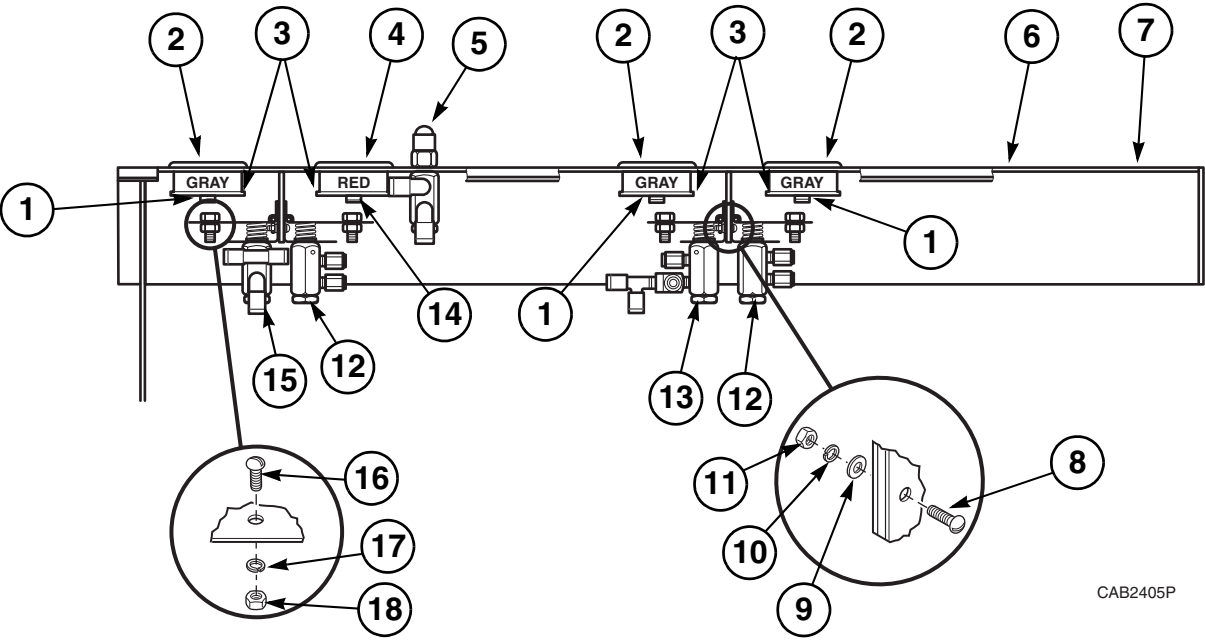


CAB2405P

Operating Control Panel Assembly (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1521095	Operating Control Assembly	Includes items 1-18
	J1111095	Screw	Used with item 6; 2 required
1	JA-04665	Pushbutton Assembly	Red
2	J1591320	Grommet	Red
3	JA-17705	Locking Ring	4 required
4	J1591304	Grommet	Gray; 3 required
5	J1525245	Tail Clamp Valve Assembly	Refer to <i>Tail Clamp Valve Assembly</i> section for parts breakdown
6	J1520915	Pushbutton Cover	
7	J1520931	Control Console Weldment	
8	JC-61269	Screw	4 required
9	JC-80759	Washer	8 required
10	J1000975	Washer	4 required
11	J1000736	Nut	4 required
12	J1438373	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
13	J1520907	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
14	J1538958	Pushbutton Assembly	Gray; 3 required
15	J1541846	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
	J1438381	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
16	JA-50134	Screw	4 required
17	M400013	Washer	4 required
18	70142	Nut	4 required

 Valve and Bracket Assembly (Drawing 1 of 5)

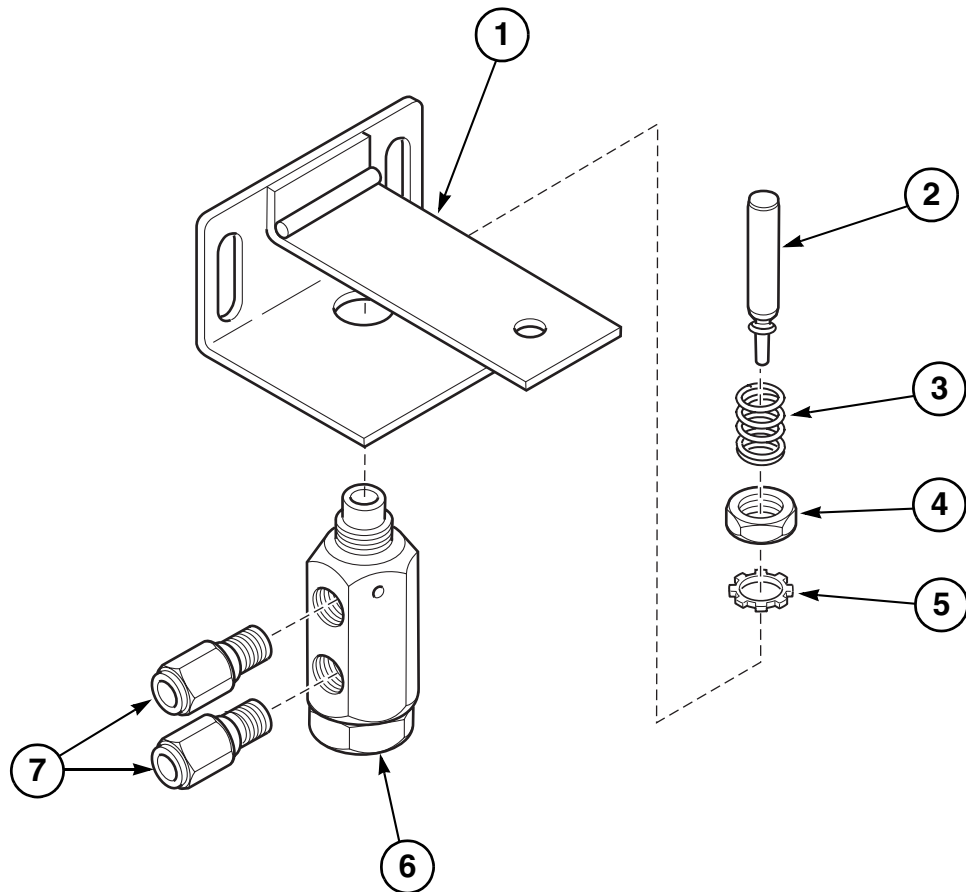


CAB2376P

Valve and Bracket Assembly (Drawing 1 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1438373	Valve and Bracket Assembly	Includes items 1-7
1	JA-00546	Bracket Assembly	
2	J1611417	Valve Stem	
3	JA-50447	Compression Spring	
4	JA-12900	Nut	
5	JA-52196	Washer	
6	JA-06430	Valve Body Assembly	Refer to <i>Valve Body Assembly</i> section for parts breakdown
7	F422101	Connector	2 required

Valve and Bracket Assembly (Drawing 2 of 5)

 CBBY Models

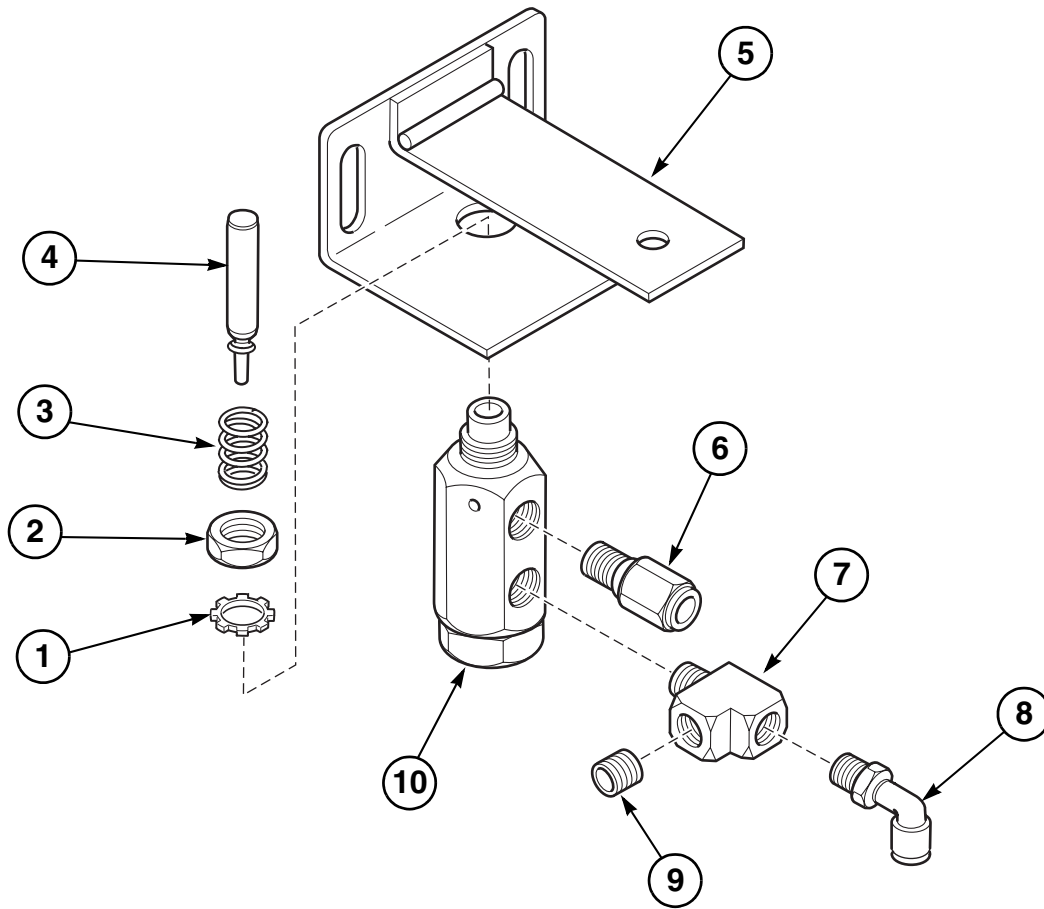


CAB2288P

Valve and Bracket Assembly (Drawing 2 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525195	Valve and Bracket Assembly	Includes items 1-10
1	JA-52196	Washer	
2	JA-12900	Nut	
3	JA-50447	Compression Spring	
4	J1611417	Valve Stem	
5	JA-00546	Bracket Assembly	
6	F422101	Connector	
7	JC-30541	Tee	
8	J1407741	Elbow	
9	J1039858	Plug	
10	JA-06430	Valve Body Assembly	Refer to <i>Valve Body Assembly</i> section for parts breakdown

Valve and Bracket Assembly (Drawing 3 of 5)

 DFB Models

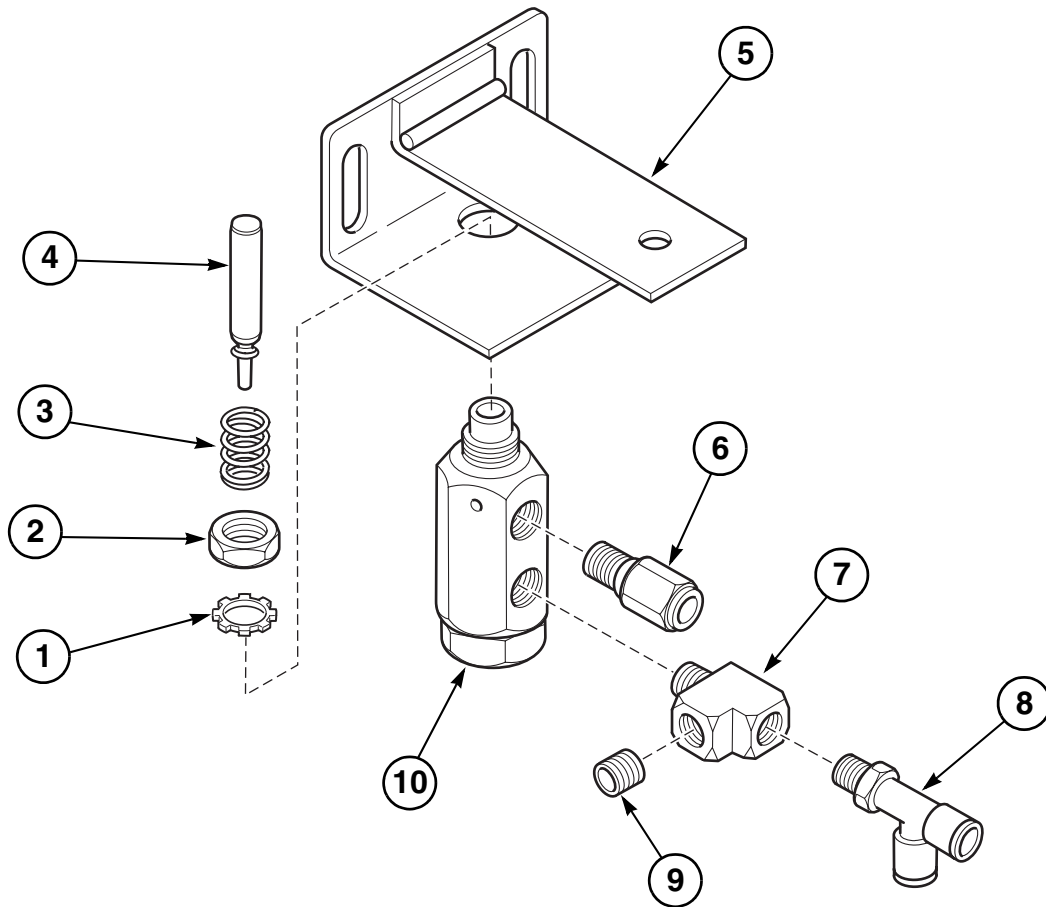


CAB2289P

Valve and Bracket Assembly (Drawing 3 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1520907	Valve and Bracket Assembly	Includes items 1-10
1	JA-52196	Washer	
2	JA-12900	Nut	
3	JA-50447	Compression Spring	
4	J1611417	Valve Stem	
5	JA-00546	Bracket Assembly	
6	F422101	Connector	
7	JC-30541	Tee	
8	J1438357	Tee	
9	J1039858	Plug	
10	JA-06430	Valve Body Assembly	Refer to <i>Valve Body Assembly</i> section for parts breakdown

Valve and Bracket Assembly (Drawing 4 of 5)

 CBBY Models

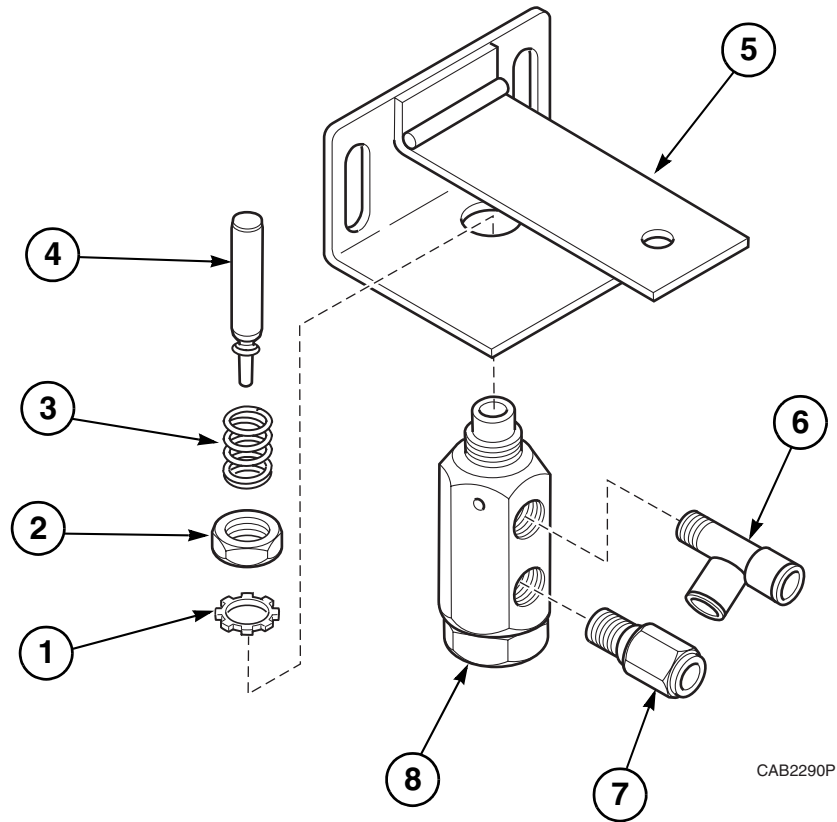


Valve and Bracket Assembly (Drawing 4 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1541838	Valve and Bracket Assembly	Includes items 1-8
1	JA-52196	Washer	
2	JA-12900	Nut	
3	JA-50447	Compression Spring	
4	J1611417	Valve Stem	
5	JA-00546	Bracket Assembly	
6	J1438357	Tee	
7	F422101	Connector	
8	JA-06430	Valve Body Assembly	Refer to <i>Valve Body Assembly</i> section for parts breakdown

Valve and Bracket Assembly (Drawing 5 of 5)

 DFB Models

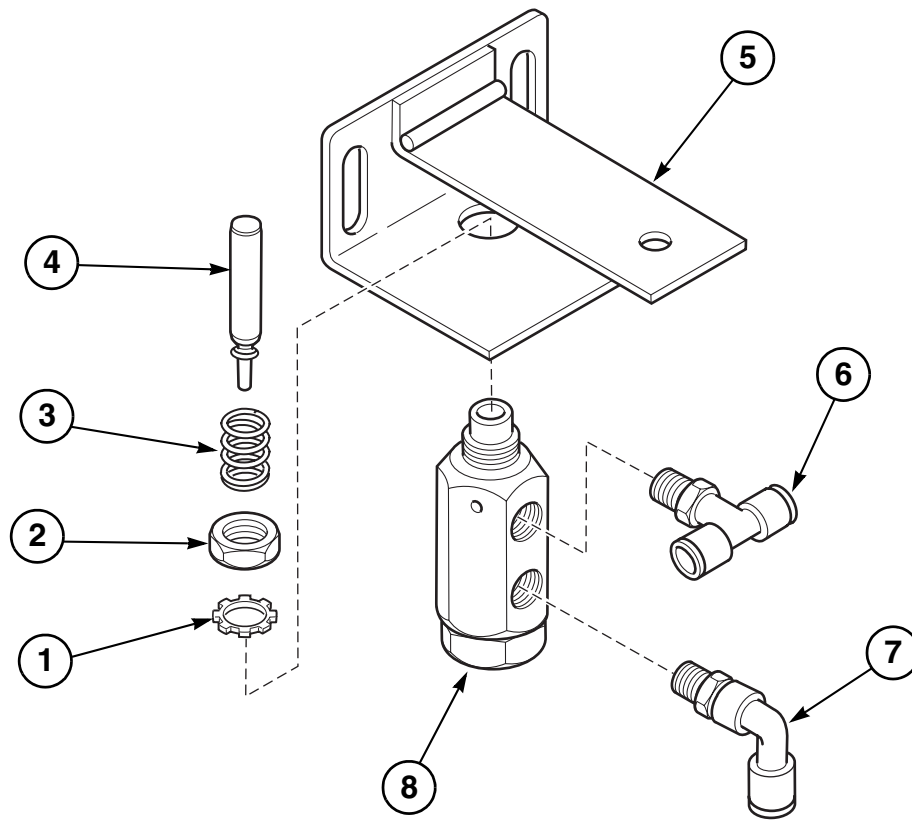


CAB2291P

Valve and Bracket Assembly (Drawing 5 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1541846	Valve and Bracket Assembly	Includes items 1-8
1	JA-52196	Washer	
2	JA-12900	Nut	
3	JA-50447	Compression Spring	
4	J1611417	Valve Stem	
5	JA-00546	Bracket Assembly	
6	J1437029	Tee	
7	J1407741	Elbow	
8	JA-06430	Valve Body Assembly	Refer to <i>Valve Body Assembly</i> section for parts breakdown

Tail Clamp Valve Assembly

 Model DFB

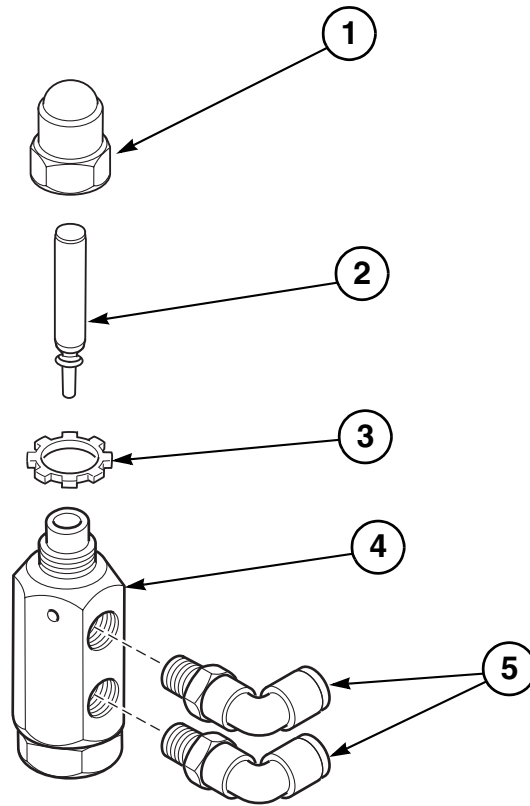


CAB2406P

Tail Clamp Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525245	Tail Clamp Valve Assembly	Includes items 1-5
1	JA-00397	Pushbutton Assembly	
2	J1611417	Valve Stem	
3	JA-52196	Washer	
4	JA-06430	Valve Body Assembly	Refer to <i>Valve Body Assembly</i> section for parts breakdown
5	J1407741	Elbow	2 required

Operating Valve Assembly (Drawing 1 of 6)

 Models DFB-X and DFB-XV

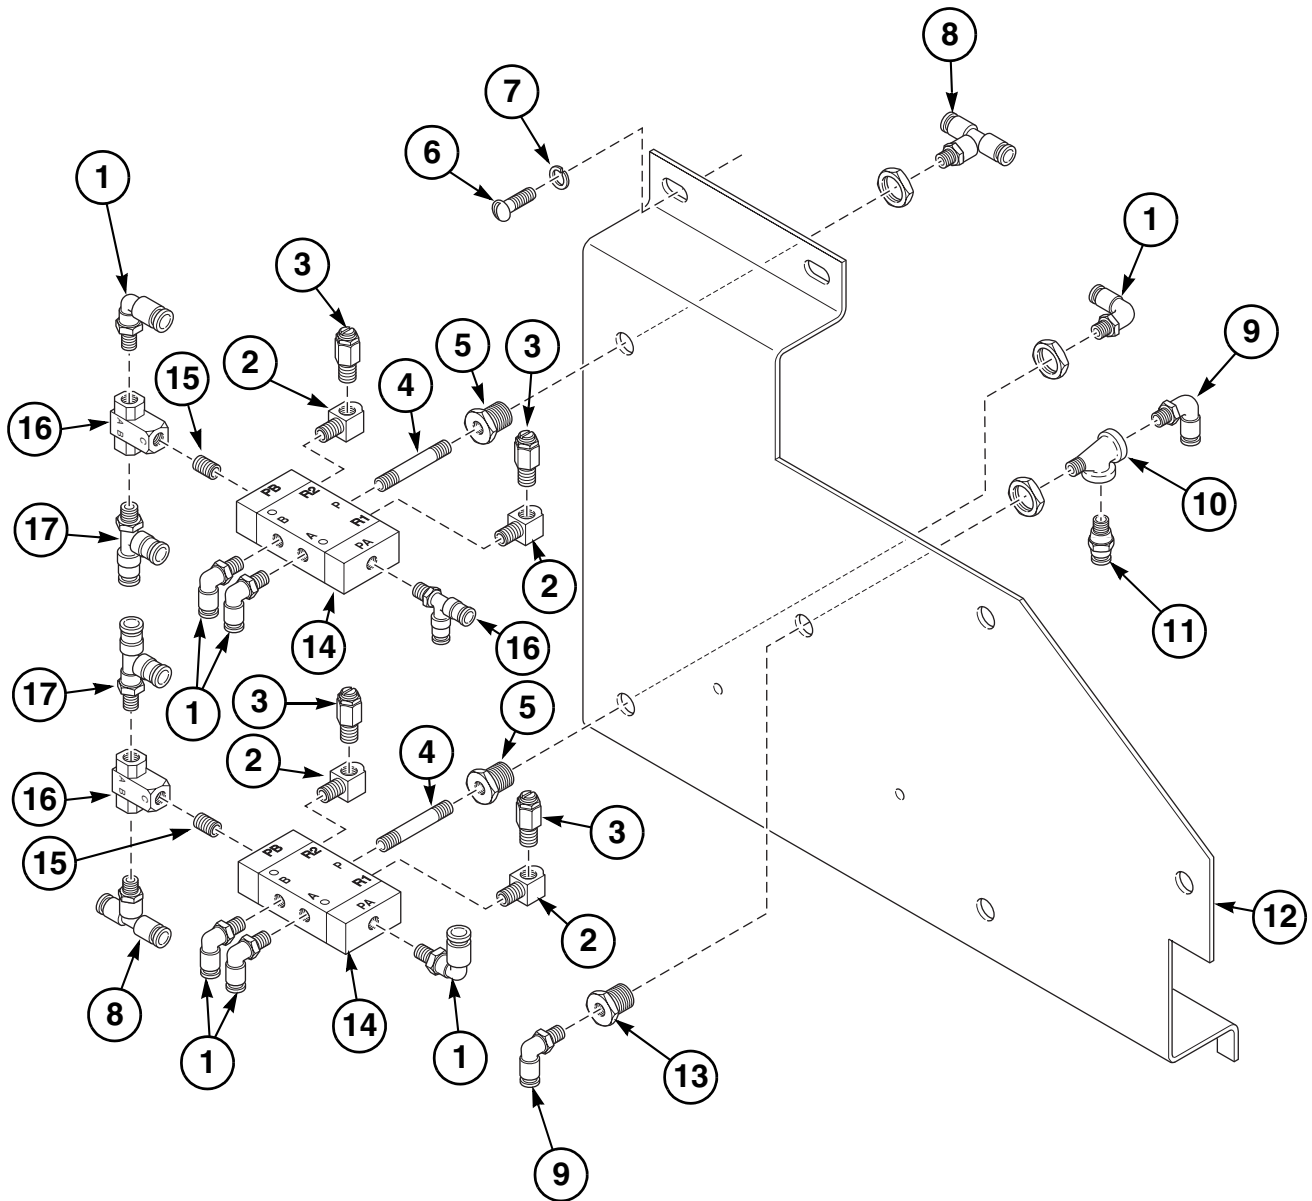


CAB2292P

Operating Valve Assembly (Drawing 1 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1523786	Operating Valve Assembly	
1	J1407741	Elbow	17 required in whole assembly
2	JC-23817	Elbow	4 required in whole assembly
3	J1548403	Flow Control Valve	Swivel; 4 required in whole assembly
4	J1026103	Nipple	2 required in whole assembly
5	J1598911	Bulkhead Fitting	5 required in whole assembly; Includes nut
6	J1238518	Screw	4 required
7	J1185073	Washer	4 required
8	J1437029	Tee	5 required in whole assembly
9	J1419811	Elbow	2 required in whole assembly
10	J1266808	Tee	
11	J1408020	Connector	
12	J1524156	Valve Mounting Bracket	
13	J1482389	Bulkhead Fitting	Includes nuts
14	J1548783	Valve	4-way; Double pilot; 5 required in whole assembly
15	J1232313	Nipple	6 required in whole assembly
16	J1523596	Shuttle Valve	3 required in whole assembly
17	J1438357	Tee	4 required in whole assembly

Operating Valve Assembly (Drawing 2 of 6)

 Models DFB-X and DFB-XV

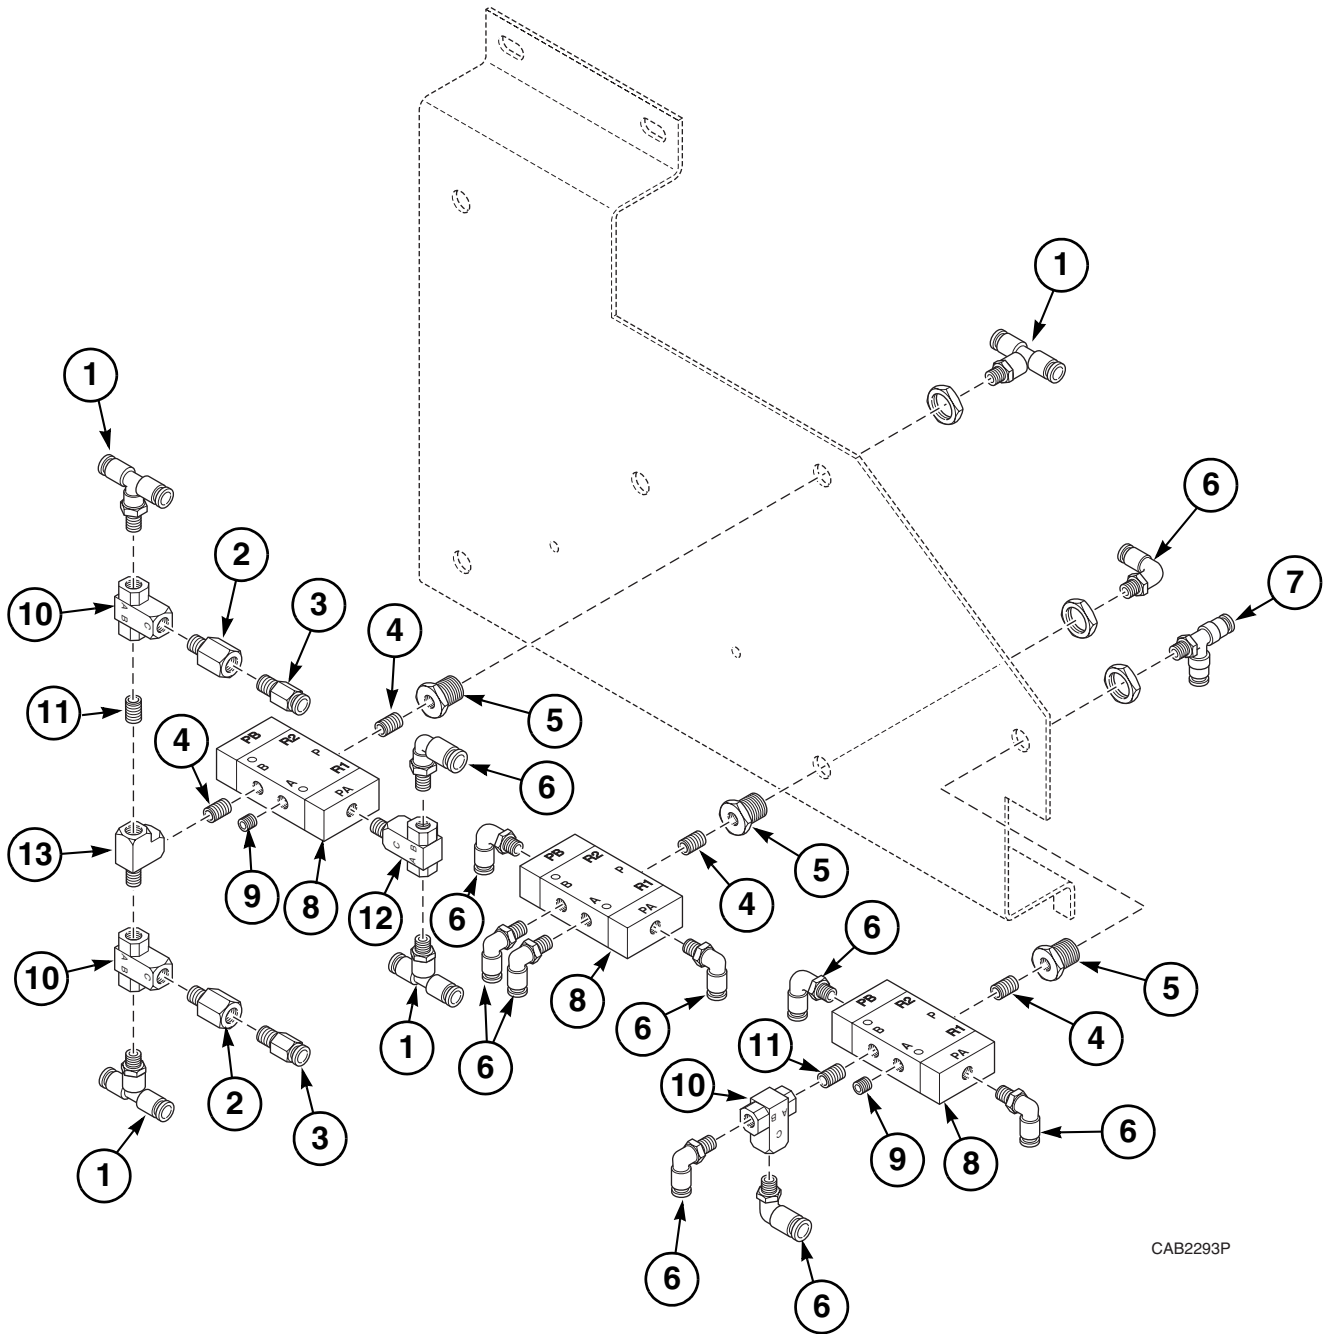


CAB2293P

Operating Valve Assembly (Drawing 2 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1523786	Operating Valve Assembly	
1	J1437029	Tee	5 required in whole assembly
2	J1392158	Orifice	2 required in whole assembly
3	F422101	Connector	2 required in whole assembly
4	J1232313	Nipple	6 required in whole assembly
5	J1598911	Bulkhead Fitting	5 required in whole assembly; Includes nut
6	J1407741	Elbow	17 required in whole assembly
7	J1438357	Tee	4 required in whole assembly
8	J1548783	Valve	4-way; Double pilot; 5 required in whole assembly
9	J1039858	Plug	2 required in whole assembly
10	JA-53602	Shuttle Valve	3 required in whole assembly
11	J1026103	Nipple	2 required
12	J1523596	Shuttle Valve	3 required in whole assembly
13	JC-30541	Tee	

Operating Valve Assembly (Drawing 3 of 6)

 Model CBBY-XV

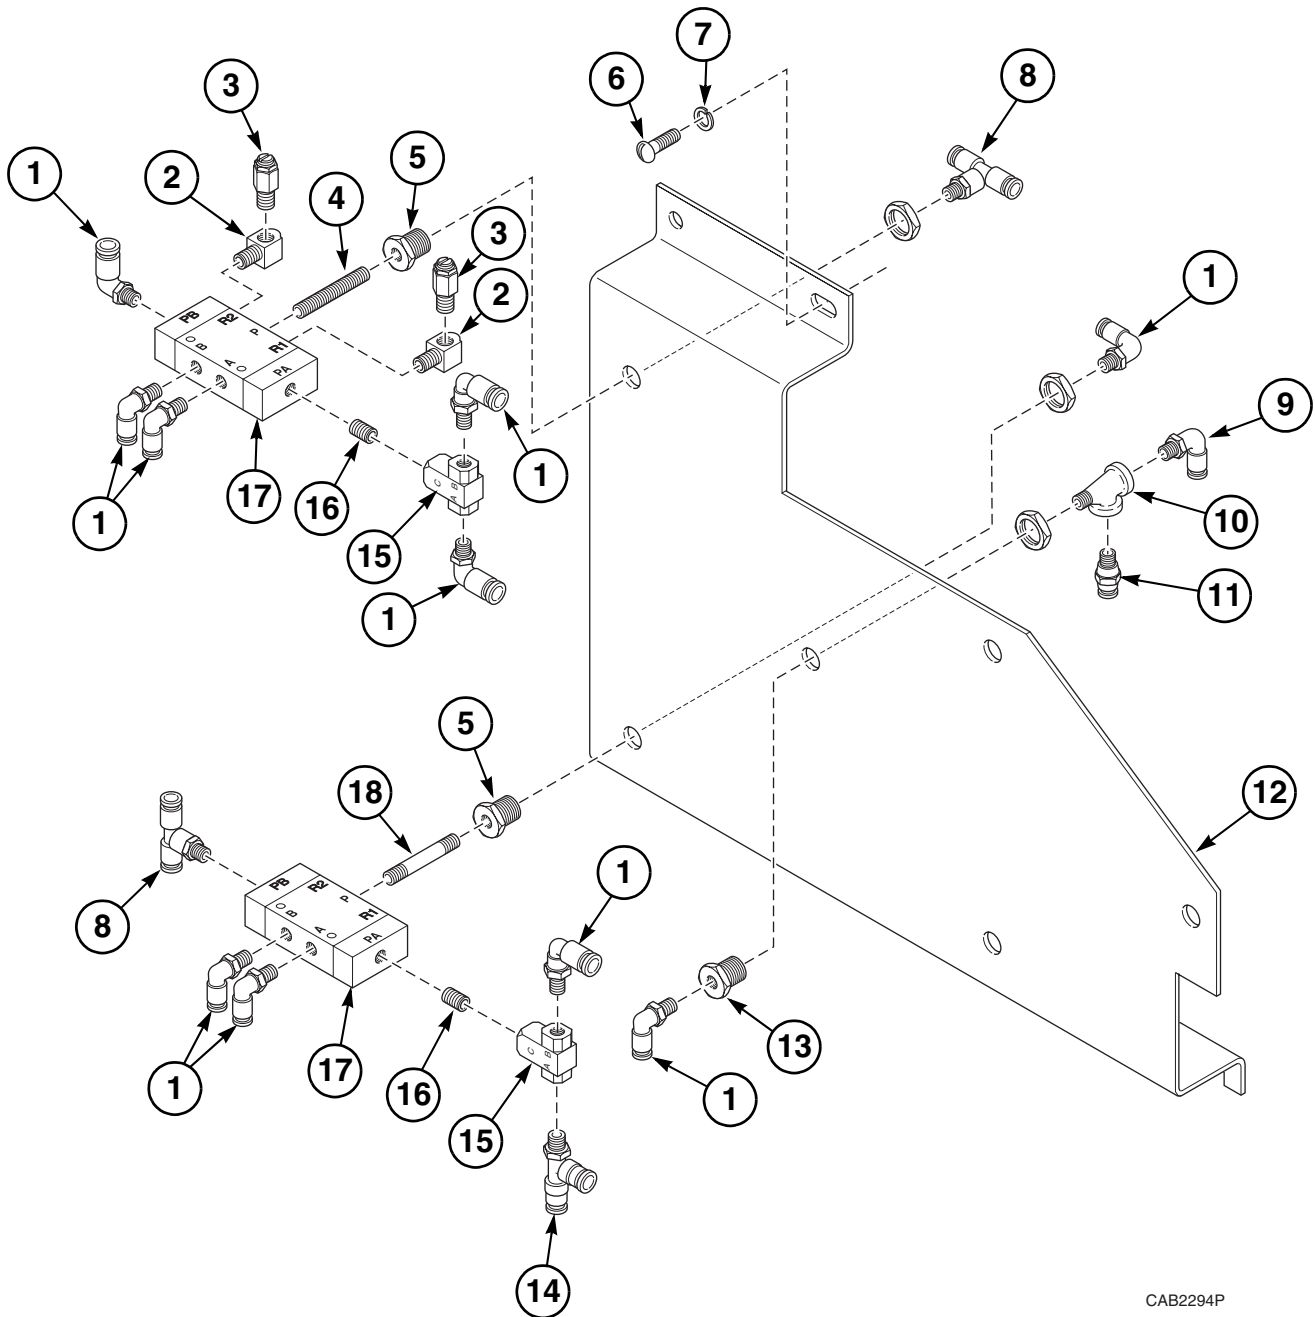

CAB2294P


Operating Valve Assembly (Drawing 3 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525211	Operating Valve Assembly	
1	J1407741	Elbow	15 required for whole assembly
2	JC-28317	Elbow	3 required for whole assembly
3	J1548403	Flow Control Valve	2 required for whole assembly
4	J1026103	Nipple	
5	J1598911	Bulkhead Fitting	Includes nut; 5 required for whole assembly
6	J1238518	Screw	4 required
7	J1185073	Washer	4 required
8	J1437029	Tee	6 required for whole assembly
9	J1419811	Elbow	5 required for whole assembly
10	J1266808	Tee	
11	J1408020	Connector	
12	J1524156	Valve Mounting Bracket	
13	J1482389	Bulkhead Fitting	Includes nut; 5 required for whole assembly
14	J1438357	Tee	3 required for whole assembly
15	J1523596	Shuttle Valve	3 required for whole assembly
16	J1232313	Nipple	7 required for whole assembly
17	J1548783	Valve	4-way; Double pilot; 5 required for whole assembly
18	N/A	Nipple	

N/A = Part no longer available

Operating Valve Assembly (Drawing 4 of 6)

 Model CBBY-XV

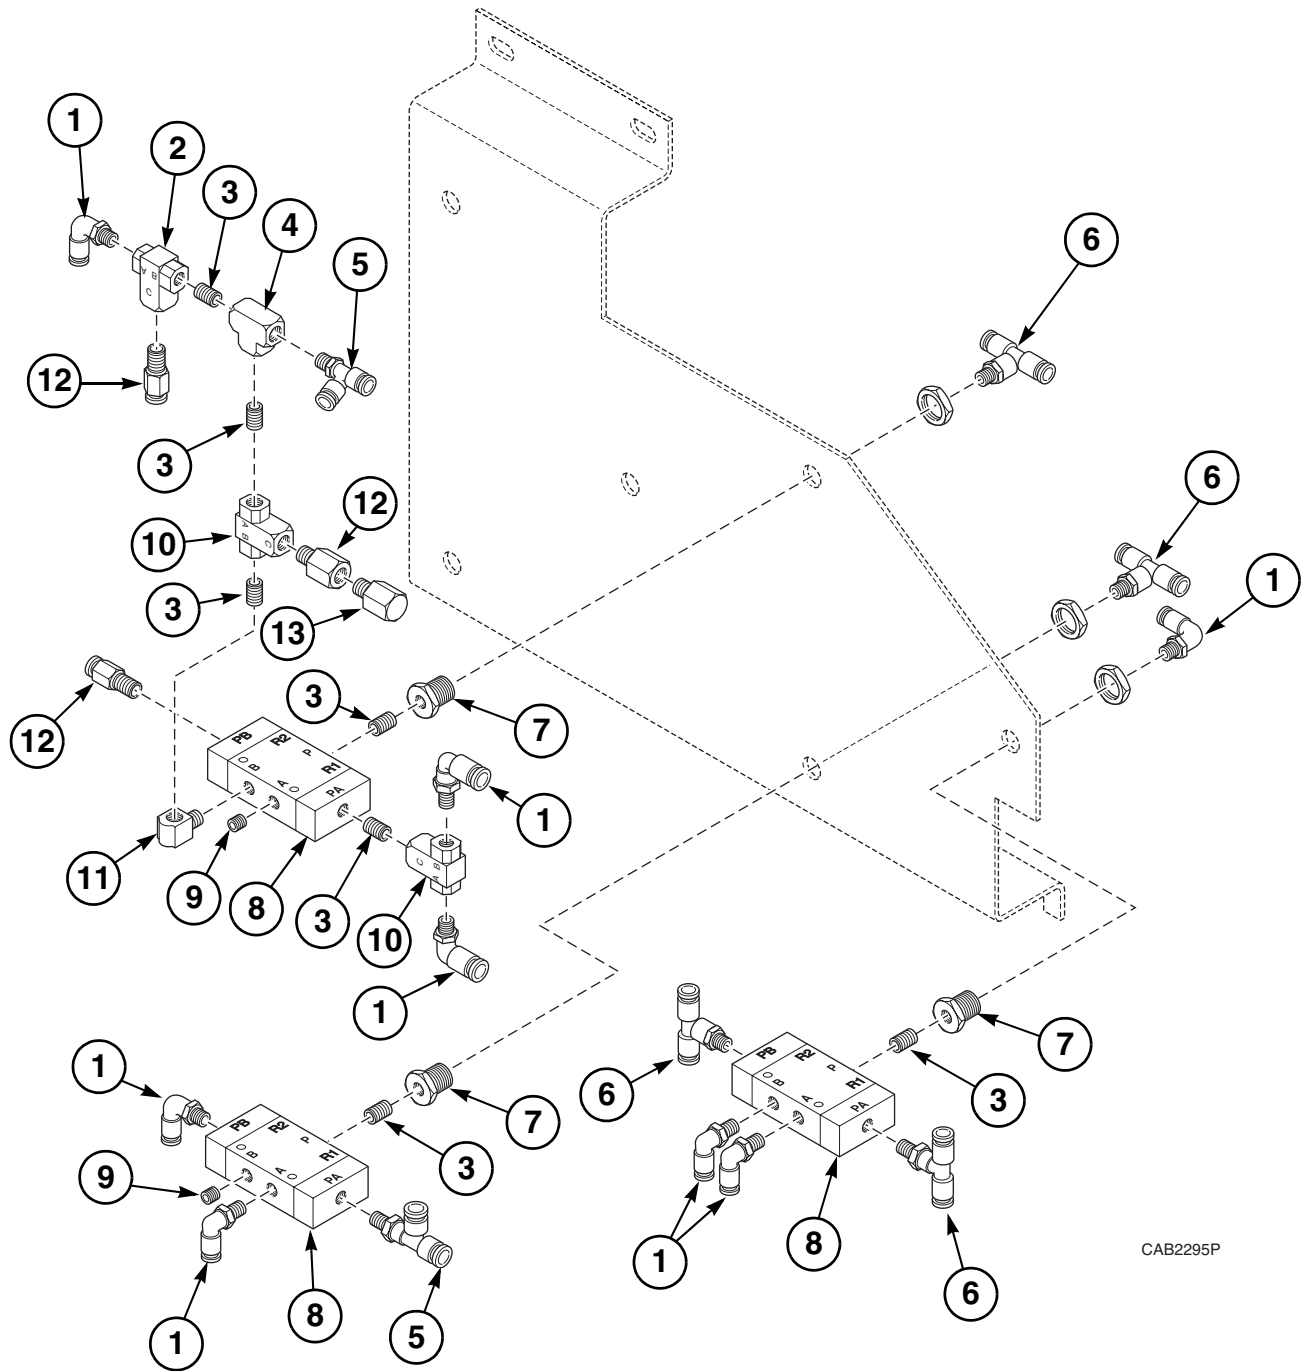


CAB2295P

Operating Valve Assembly (Drawing 4 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525211	Operating Valve Assembly	
1	J1407741	Elbow	15 required for whole assembly
2	JA-53602	Shuttle Valve	2 required for whole assembly
3	J1232313	Nipple	7 required for whole assembly
4	JC-70613	Tee	
5	J1438357	Tee	3 required for whole assembly
6	J1437029	Tee	6 required for whole assembly
7	J1598911	Bulkhead Fitting	5 required for whole assembly; Includes nut
8	J1548783	Valve	4-way; Double pilot; 5 required for whole assembly
9	J1039858	Plug	2 required for whole assembly
10	J1523596	Shuttle Valve	3 required for whole assembly
11	JC-28317	Elbow	3 required for whole assembly
12	F422101	Connector	3 required for whole assembly
13	J1392158	Orifice	

Operating Valve Assembly (Drawing 5 of 6)

 Model CBBY-X

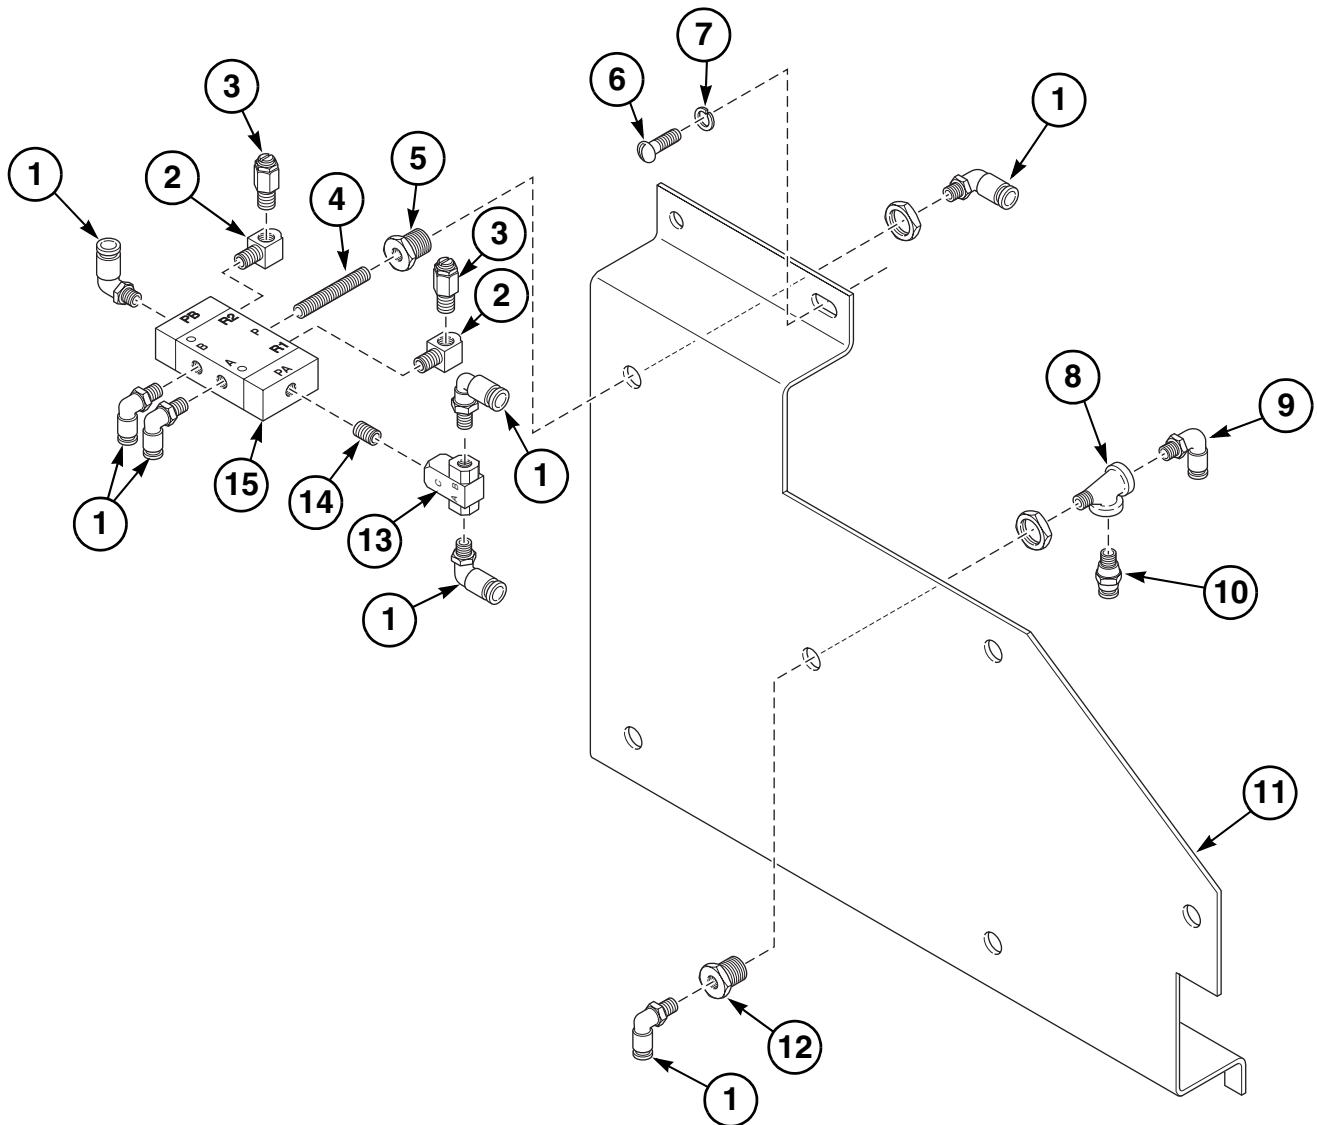


CAB2296P

Operating Valve Assembly (Drawing 5 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525229	Operating Valve Assembly	
1	J1407741	Elbow	13 required for whole assembly
2	JC-28317	Elbow	3 required for whole assembly
3	J1548403	Flow Control Valve	2 required for whole assembly
4	J1026103	Nipple	
5	J1598911	Bulkhead Fitting	Includes nut; 4 required for whole assembly
6	J1238518	Screw	
7	J1185073	Washer	
8	J1266808	Tee	
9	J1419811	Elbow	2 required for whole assembly
10	J1408020	Connector	
11	J1524156	Valve Mounting Bracket	
12	J1482389	Bulkhead Fitting	Includes nut
13	J1523596	Shuttle Valve	2 required for whole assembly
14	J1232313	Nipple	6 required for whole assembly
15	J1548783	Valve	4-way; Double pilot; 4 required for whole assembly

Operating Valve Assembly (Drawing 6 of 6)

 Model CBBY-X

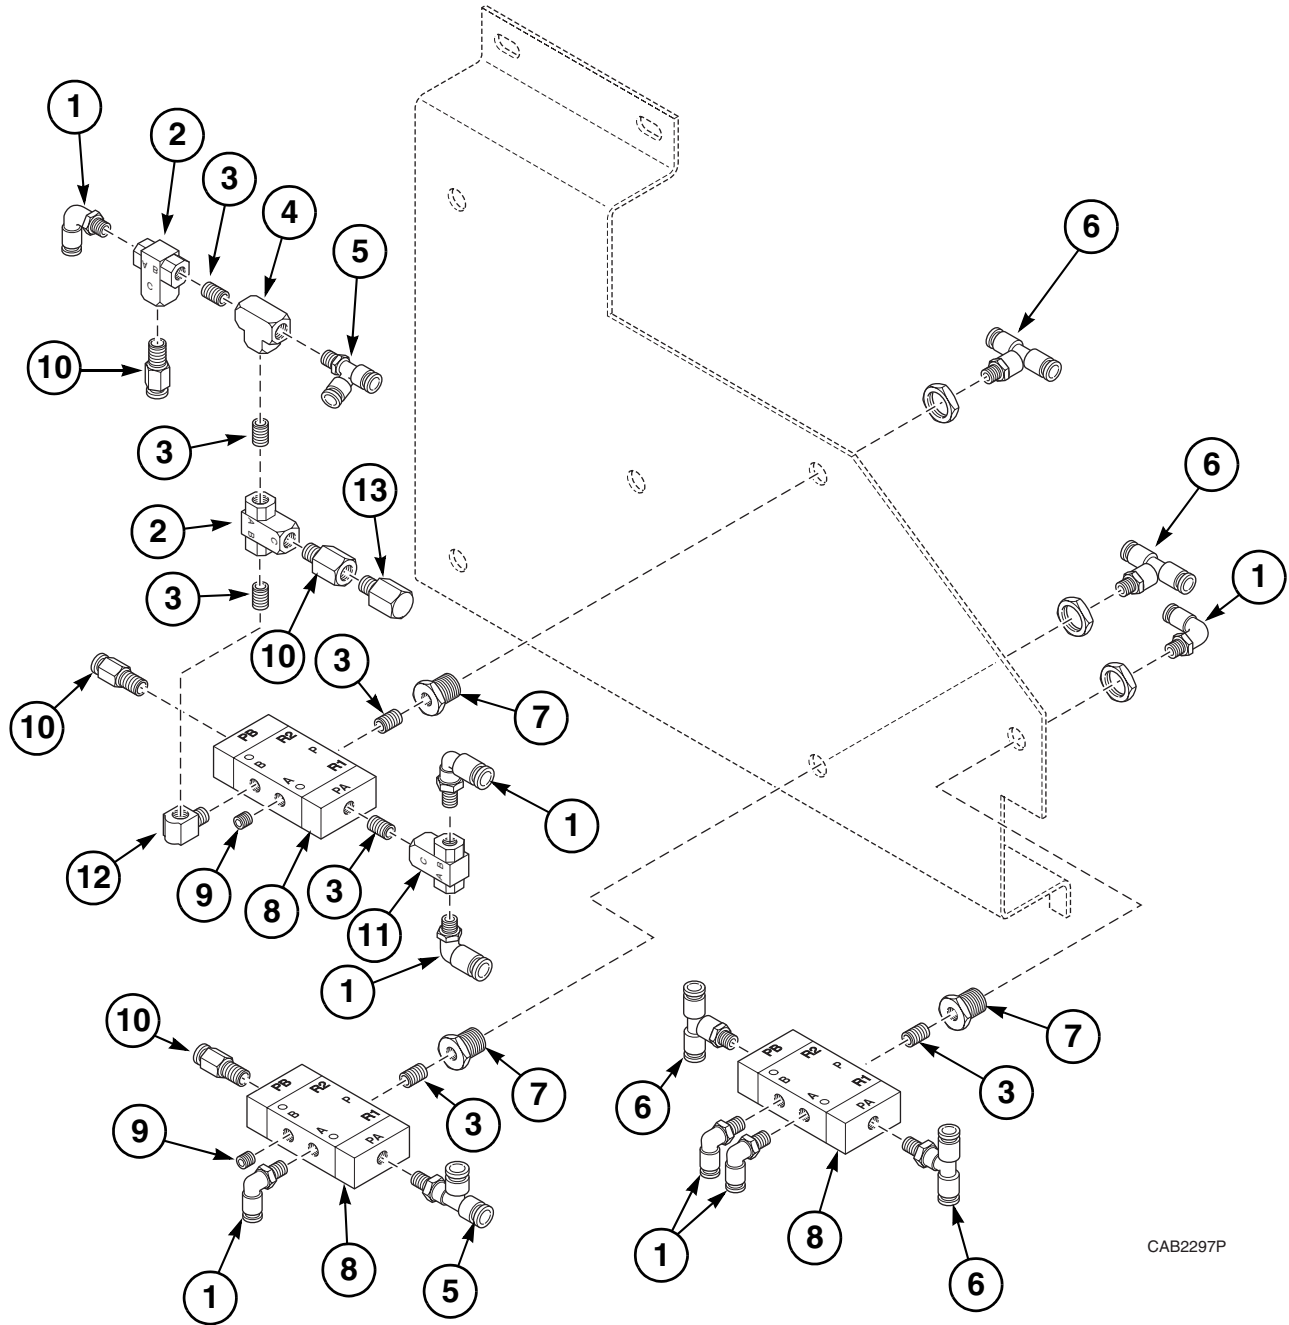


CAB2297P

Operating Valve Assembly (Drawing 6 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525229	Operating Valve Assembly	
1	J1407741	Elbow	13 required for whole assembly
2	JA-53602	Shuttle Valve	2 required for whole assembly
3	J1232313	Nipple	6 required for whole assembly
4	JC-70613	Tee	
5	J1438357	Tee	
6	J1437029	Tee	4 required for whole assembly
7	J1598911	Bulkhead Fitting	Includes nut; 4 required for whole assembly
8	J1548783	Valve	4-way; Double pilot; 4 required for whole assembly
9	J1039858	Plug	2 required for whole assembly
10	F422101	Connector	4 required for whole assembly
11	J1523596	Shuttle Valve	2 required for whole assembly
12	JC-28317	Elbow	3 required for whole assembly
13	J1392158	Orifice	

 Reset Valve Assembly

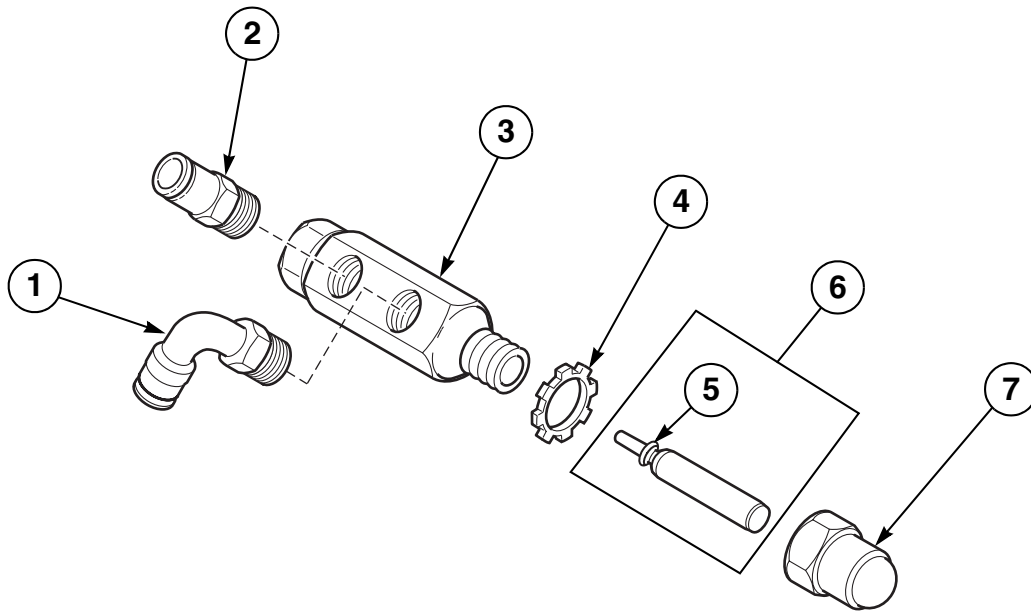


CAB2373P

Reset Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1445303	Reset Valve Assembly	Includes items 1-4 and 6-7
1	J1407741	Elbow	
2	F422101	Connector	
3	JA-06430	Valve Body Assembly	
4	JA-52196	Washer	
5	J1403310	O-Ring	
6	J1611417	Valve Stem	Includes item 5
7	JA-00397	Pushbutton Assembly	

 Electrical Control Assembly

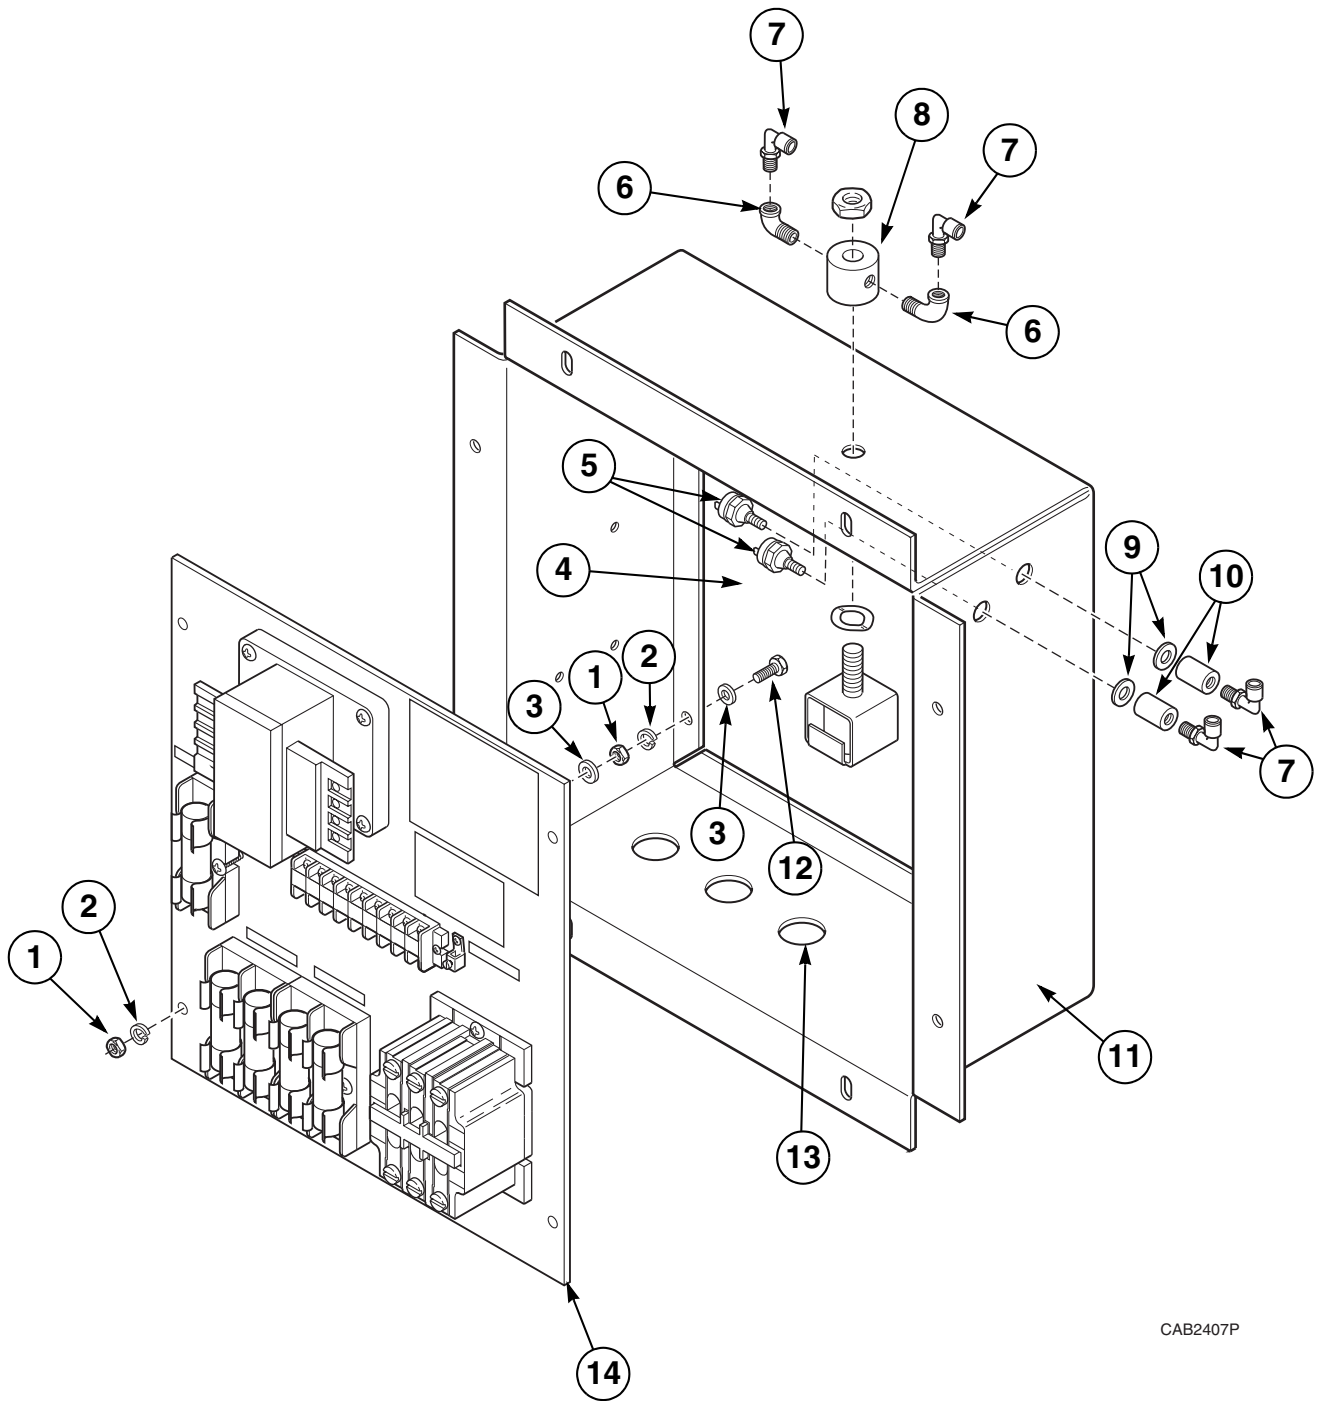


CAB2407P

Electrical Control Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1531698	Insulation	
1	20275	Nut	8 required
2	J1185073	Washer	8 required
3	JC-80513	Washer	8 required
4	N/A	Backplate	
5	J1364181	Pressure Switch	2 required
6	JC-28235	Elbow	2 required
7	J1398288	Elbow	4 required
8	J1362854	Solenoid Valve	
9	J1001304	Washer	2 required
10	N/A	Coupling	2 required
11	N/A	Enclosure Weldment	
12	JC-62724	Screw	4 required
13	J1427103	Vent Plug	8 required
14	J1547041	Control Box Assembly	Below 250 Volt/3 Phase/50-60 Hertz; Refer to <i>Control Box Assembly</i> section for parts breakdown
	J1547058	Control Box Assembly	460 Volt/3 Phase/60 Hertz; Refer to <i>Control Box Assembly</i> section for parts breakdown
	N/A	Control Box Assembly	575 Volt/3 Phase/60 Hertz; Refer to <i>Control Box Assembly</i> section for parts breakdown
	J1547074	Control Box Assembly	380-415 Volt/3 Phase/50 Hertz; Refer to <i>Control Box Assembly</i> section for parts breakdown

N/A = Part no longer available

 Control Panel Assembly

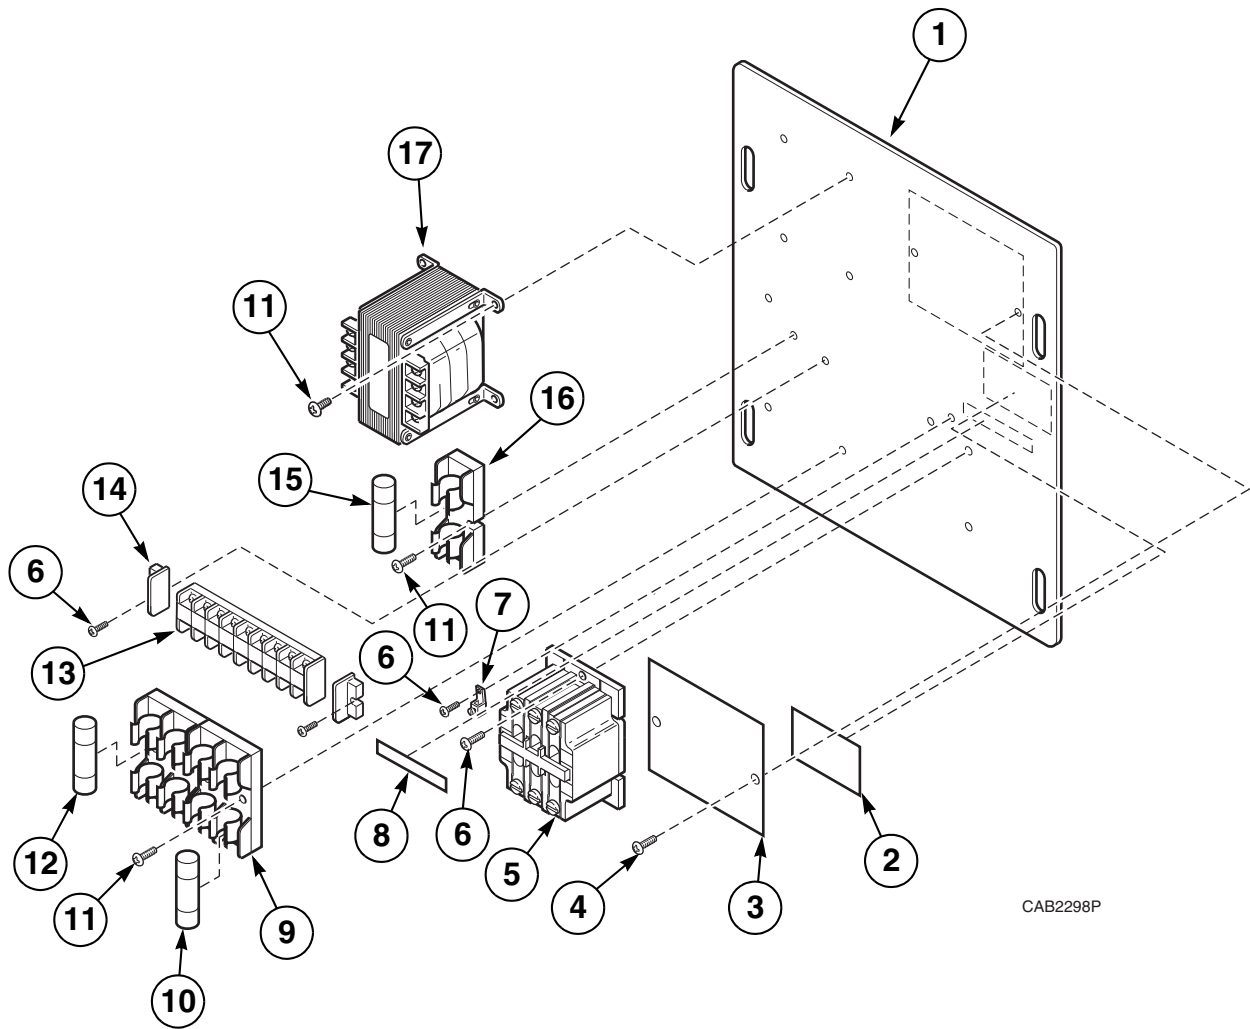


CAB2298P

Control Panel Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JC-57855	Contactator	Used with item 5
1	N/A	Control Panel	
2	N/A	UL Label	
3	N/A	Nameplate	Below 250 Volt
	N/A	Nameplate	Above 250 Volt
4	J1378603	Screw	2 required
5	JC-25008	Auxillary Contact	
6	JC-64014	Screw	5 required
7	J1189125	Ground Lug	
8	J10-607	Label	Ground wire
9	J1235142	Fuse Block	2 required; Below 250 Volt
	J1401884	Fuseholder	2 required; Above 250 Volt
10	J1234665	Fuse	2 required; 10 Amp; 250; Below 250 Volt
	J1422930	Fuse	2 required; 6 Amp; 600 Volt; Above 250 Volt
	J1408780	Fuse	2 required; 5 Amp; 460/575 Volt; Above 250 Volt
11	J1323153	Screw	8 required
12	JC-31691	Fuse	2 required; 2 Amp, 250 Volt; Below 250 Volt
	J1477496	Fuse	2 required; 1 Amp; 380/415/460 Volt; Above 250 Volt
	J1545417	Fuse	2 required; .8 Amp; 575 Volt; Above 250 Volt
13	J1081793	Terminal Block	9 required
14	J1085943	Terminal Block End	
15	J1235944	Fuse	1 Amp; 250 Volt
16	J1081710	Fuse Block	
17	J1475938	Transformer	208-230-460 Volt/3 Phase/50-60 Hertz
	J1475946	Transformer	575 Volt/3 Phase/60 Hertz
	J1475953	Transformer	380-415 Volt/3 Phase/50-60 Hertz

N/A = Part no longer available

 Motor and Timer Control Box Cover Assembly

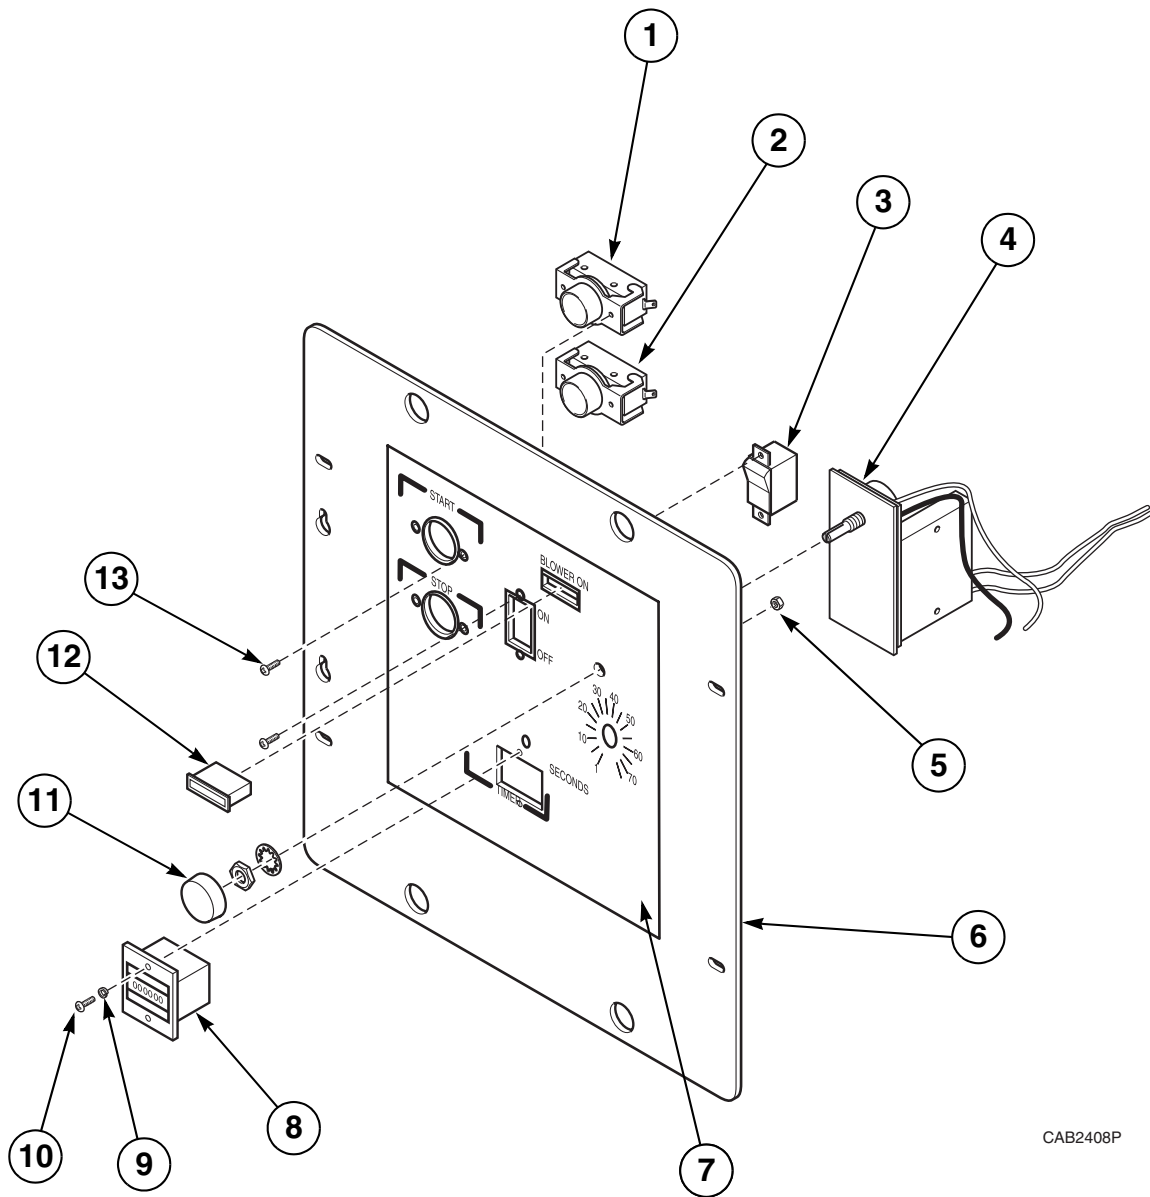


CAB2408P

Motor and Timer Control Box Cover Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1531086	Motor and Timer Control Box Cover Assembly	Includes items 1-13
1	M400954P	Pushbutton	Black
2	N/A	Pushbutton	Red
3	J1236306	Rocker Switch	SPDT
4	J1478601	Timer Assembly	115 Volt
	J200050400	Common Timer Circuit Board Kit	Order to replace J1478601 Timer Assembly
5	02788	Nut	
6	J1518026	Control Box Cover	
7	J1516921	Operating Control Nameplate	
8	J1530765	Counter	
9	J1216357	Washer	
10	J1112887	Screw	
11	JE-66022	Knob	
12	JST-163-2	Lamp	110 Volt
13	J1233162	Screw	

N/A = Part no longer available

 Heat Exchanger Assembly

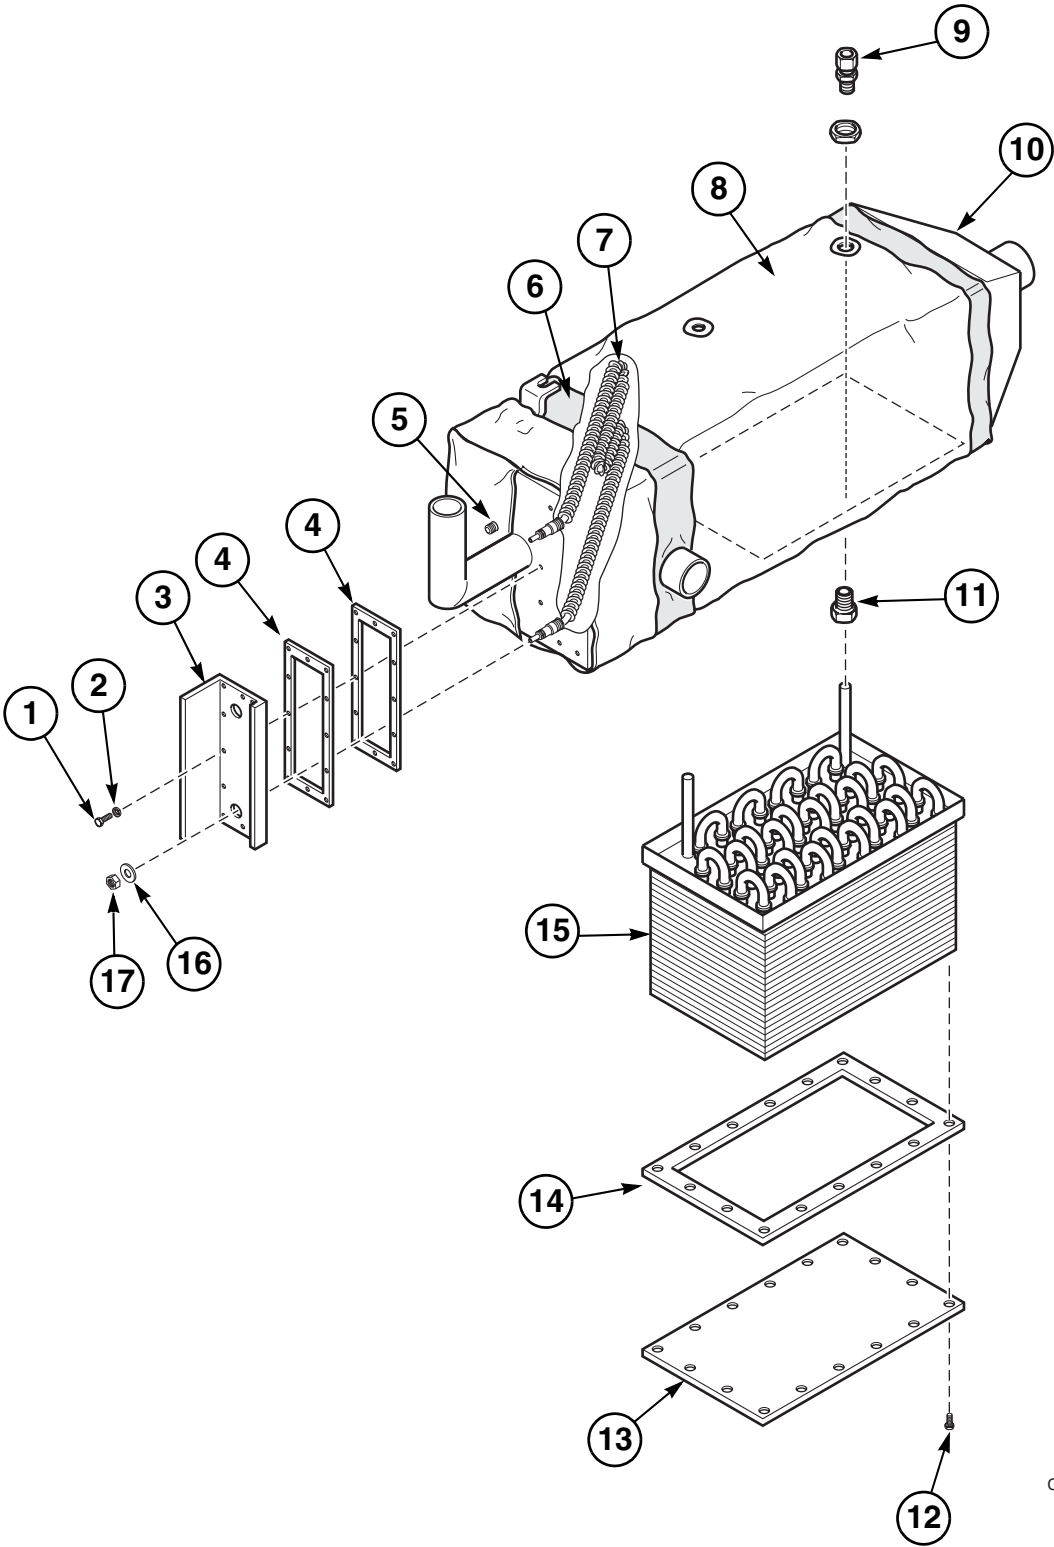


CAB2079P

Heat Exchanger Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525237	Heat Exchanger Assembly	Includes items 1-17
1	J1571371	Screw	12 required
2	J1000975	Washer	12 required
3	JA-22982	Plate	
4	JA-23801	Gasket	2 required
5	JA-24122	Fitting	
6	J0440160-00	Duct Tape	
7	JA-53883	Heater Element	1500 Watts; 230 Volt
8	J1540749	Insulation	
9	JC-31374	Connector	2 required
10	J1538750	Heat Exchanger Housing Weldment	
11	J1540731	Bulkhead Fitting	2 required
12	H88214572	Screw	16 required
13	J1562818	Heat Exchanger Cover	
14	J1540814	Gasket	4 feet required
15	J1536382	Steam Coil Weldment	
16	JC-80565	Washer	2 required
17	JC-48312	Nut	2 required


 
Thermostat Assembly

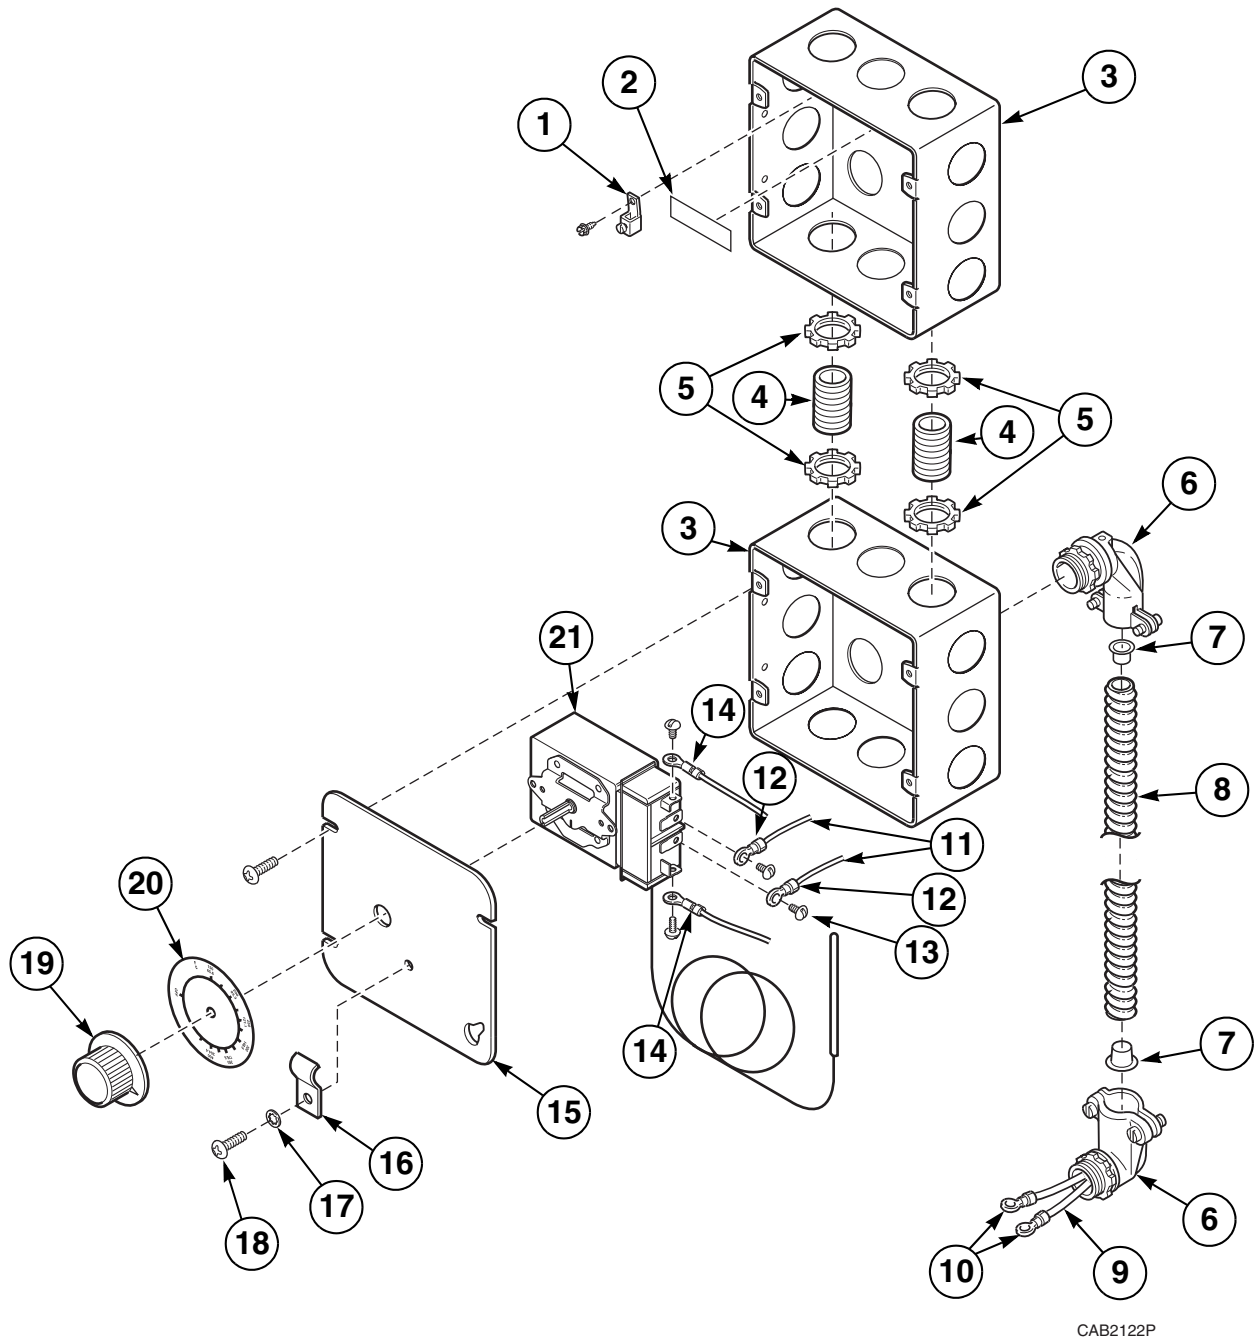

Thermostat Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1531094	Thermostat Assembly	Includes items 1-21, JM-99961 Sleeving and J1066919 Bushing
	JM-99961	Sleeving	Fiberglass; 3 feet required; Used with item 9
	J1066919	Bushing	
1	J1189125	Ground Lug	
2	J10-607	Label	Ground wire
3	JC-18268	Electric Box	2 required
4	JC-46347	Nipple	2 required
5	J1210988	Nut	8 required
6	J1086115	Connector	2 required
7	J1232990	Bushing	2 required
8	J1108497	Conduit	
9	JR-90132	Wire	12 gauge; 3 feet required
10	J1285147	Terminal Ring	2 required
11	JM-99150	Wire	14 gauge; 2 feet required
12	J1190370	Terminal Ring	2 required
13	J1233659	Screw	2 required
14	JT-168-4	Terminal Ring	2 required
15	JA-24123	Thermostat Mounting Plate	
16	J1244623	Clamp	
17	J1085984	Washer	
18	J1199389	Screw	
19	JA-56916	Knob	
20	JA-86858	Decals	
21	JA-54183	Thermostat	150 – 400° F

  Covers Assembly

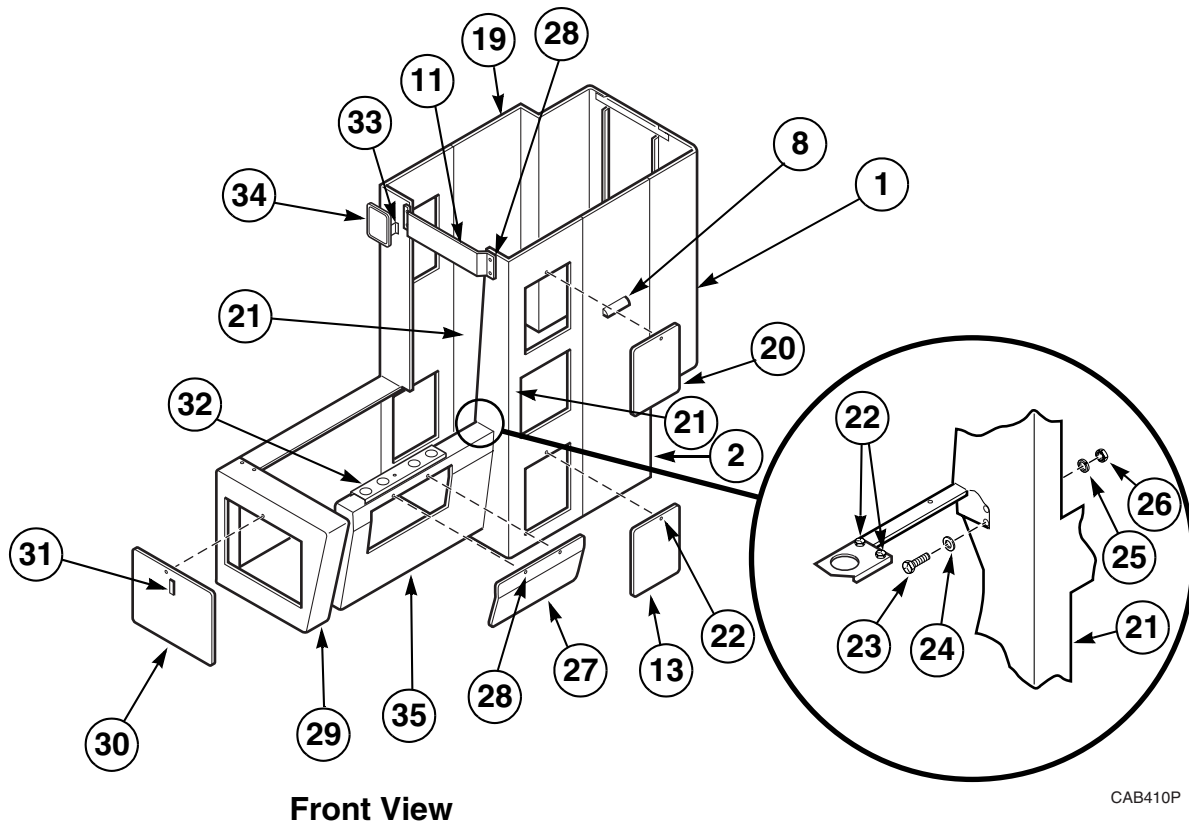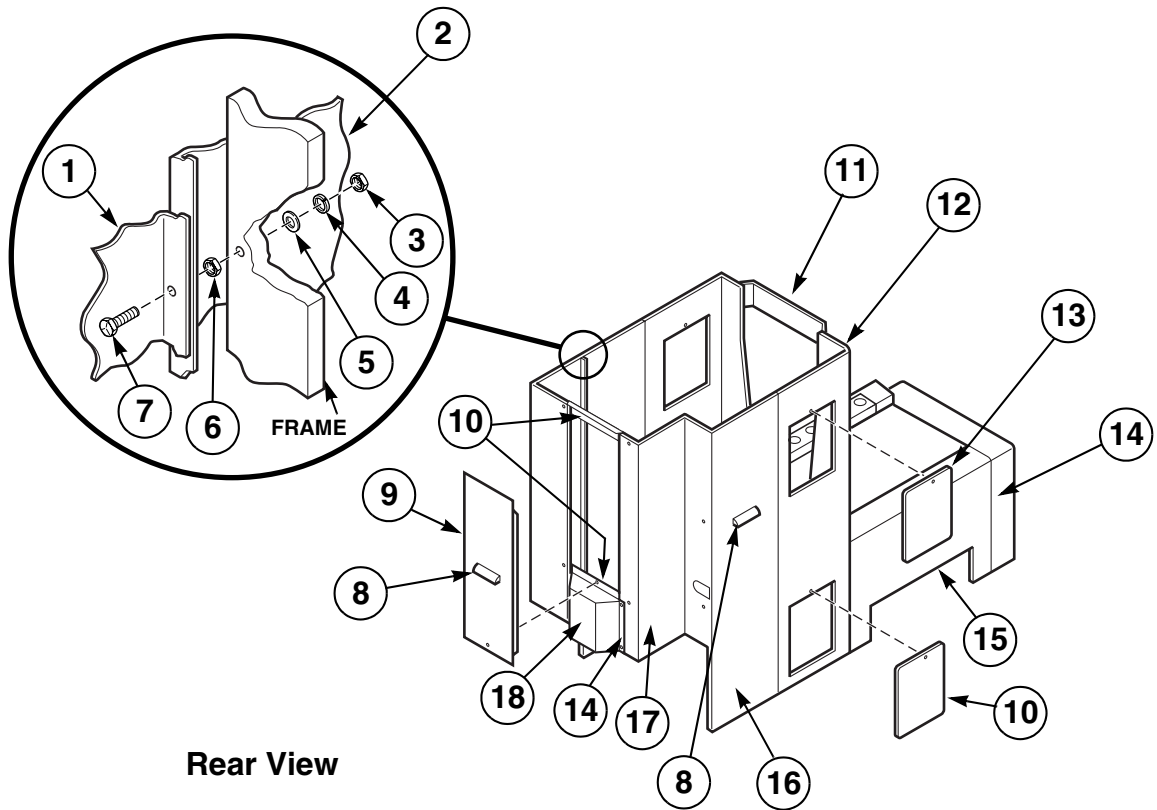


CAB410P


Covers Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1520410	Cover	Front right
2	J1520295	Cover	Front center
3	70142	Nut	
4	M400013	Washer	
5	J1001270	Washer	
6	70142	Nut	
7	J1531789	Screw	
8	J1240985	Handle	
	J1085984	Washer	
	J1187228	Screw	
9	J1520329	Cover	Right
10	J1520311	Support Cover	Rear
11	J0637775-00	Head Cabinet Guard	Top left
12	J1520386	Cover	Rear left
13	J1520360	Access Panel Cover Weldment	
14	J1111095	Screw	
	J1348192	Nut	
15	J1520394	Rail Cover	Rear
16	J1520402	Cover	Rear center
17	J1520378	Cover	Rear right
18	JA-22938	Cover	Drive cylinder
19	J1320738	Roller Pin	
20	J1541895	Access Panel Cover Weldment	
21	J1534056	Cover Weldment	Left front
22	J1111095	Screw	
23	JA-53020	Screw	
24	J1185073	Washer	
25	JC-80583	Washer	
26	20275	Nut	
27	J1440593	Door Panel Assembly	
28	J1063619	Screw	
29	J1523026	Cover Weldment	Left
30	J1520345	Access Panel Weldment	Left
31	J1614809	Latch	
32	J1521095	Operating Control Assembly	
33	J1528579	Mirror Bracket	Use JA-50394 Screw, J1185073 Lockwasher and J1000769 Nut to attach
34	J1530955	Mirror	
35	J1520436	Control Panel Cover	

 
Label Application

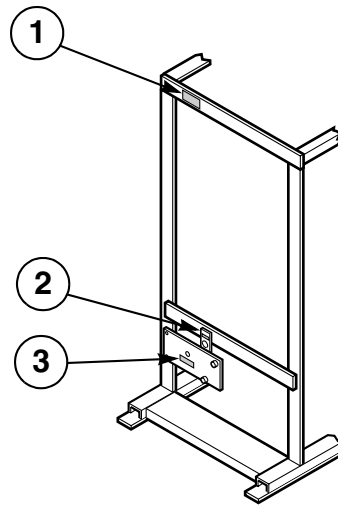

Internal Rear View

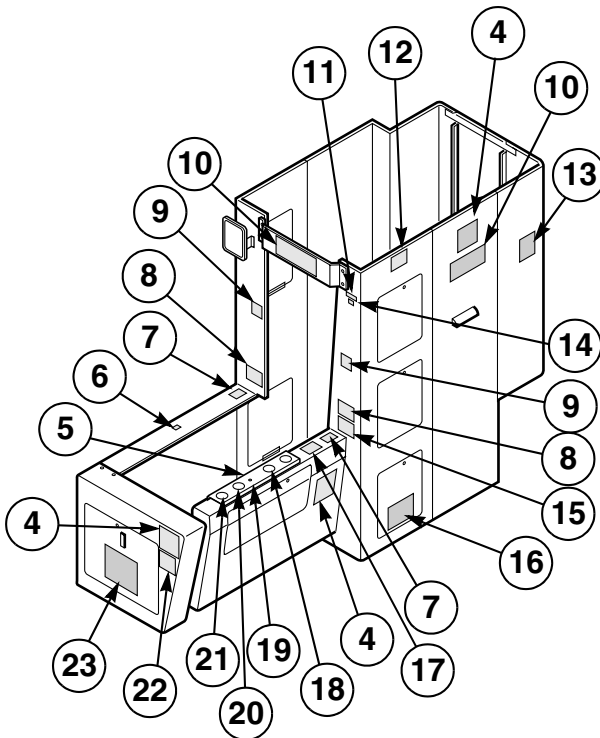 

Front View

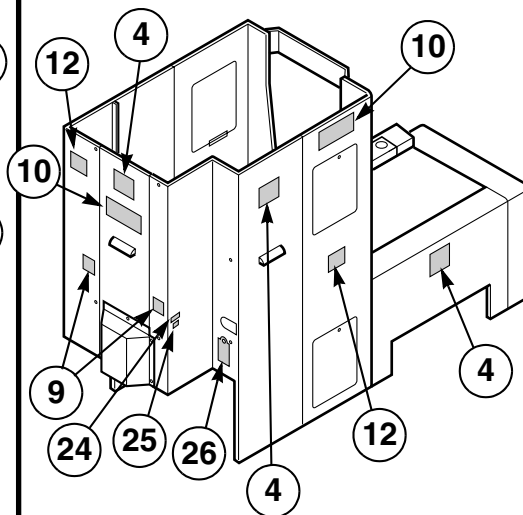 

Rear View




CAB412P

Label Application

REF	PART NO.	DESCRIPTION	COMMENTS
	J1323724	Rivet	42 required
	JA-18833	Label	Quadrant; 2 required
	JA-24671	Label	Adjust quadrant
1	J1312545	Nameplate	Supply wire; Use (2) J1040476 Screw and (2) J1000975 Lockwasher to secure
2	JA-17841	Label	Steam inlet
3	JA-17840	Label	Steam return
4	J1450931	Label	6 required; Before removing panel
5	JA-18602	Label	Tail clamp release; CBBY-X models only
6	JA-24370	Label	Clean filter weekly
7	J1556471	Label	2 required; Warning: To avoid injury ...
8	J1443688	Nameplate	2 required; Warning hot surface
9	J1411925	Label	4 required; Warning, Release bar
10	70240801	Nameplate	4 required; Ajax
11	J1411313	Label	Reset Button
12	J1162718	Label	3 required; Guards in place
13	N/A	Label	
14	J1411339	Label	Release bar
15	J1524719	Label	Buck selection
16	J1547553	Label	High/Low pressure adjustment
17	JA-22464	Decal	Start-up
18	JA-24822	Label	Carriage in
19	J1472208	Label	Sleeve expander
20	JA-18606	Label	Head release
21	JA-18289	Label	In
22	N/A	Nameplate	Serial/Rating
23	J1547587	Label	Operating valves adjustment; Model CBBY-X
	J1547579	Label	Operating valves adjustment; Model CBBY-XV
	J1547561	Label	Operating valves adjustment; DFB Models
24	J1326156	Label	Air pressure 80-100 psi
25	JA-17842	Label	Air inlet
26	J1546274	Tag	Weekly filter maintenance

N/A = Part no longer available

   Completing Parts

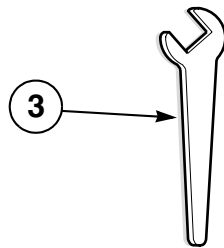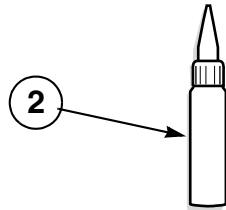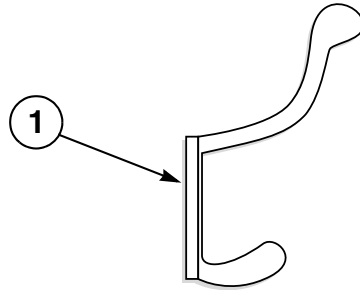


CAB2336P

Completing Parts

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1410901	Hook	
2	J1490598	Lubricant	High temperature; 1 oz. bottle
3	J1484732	Wrench	Eccentric

 Frame Completing Parts

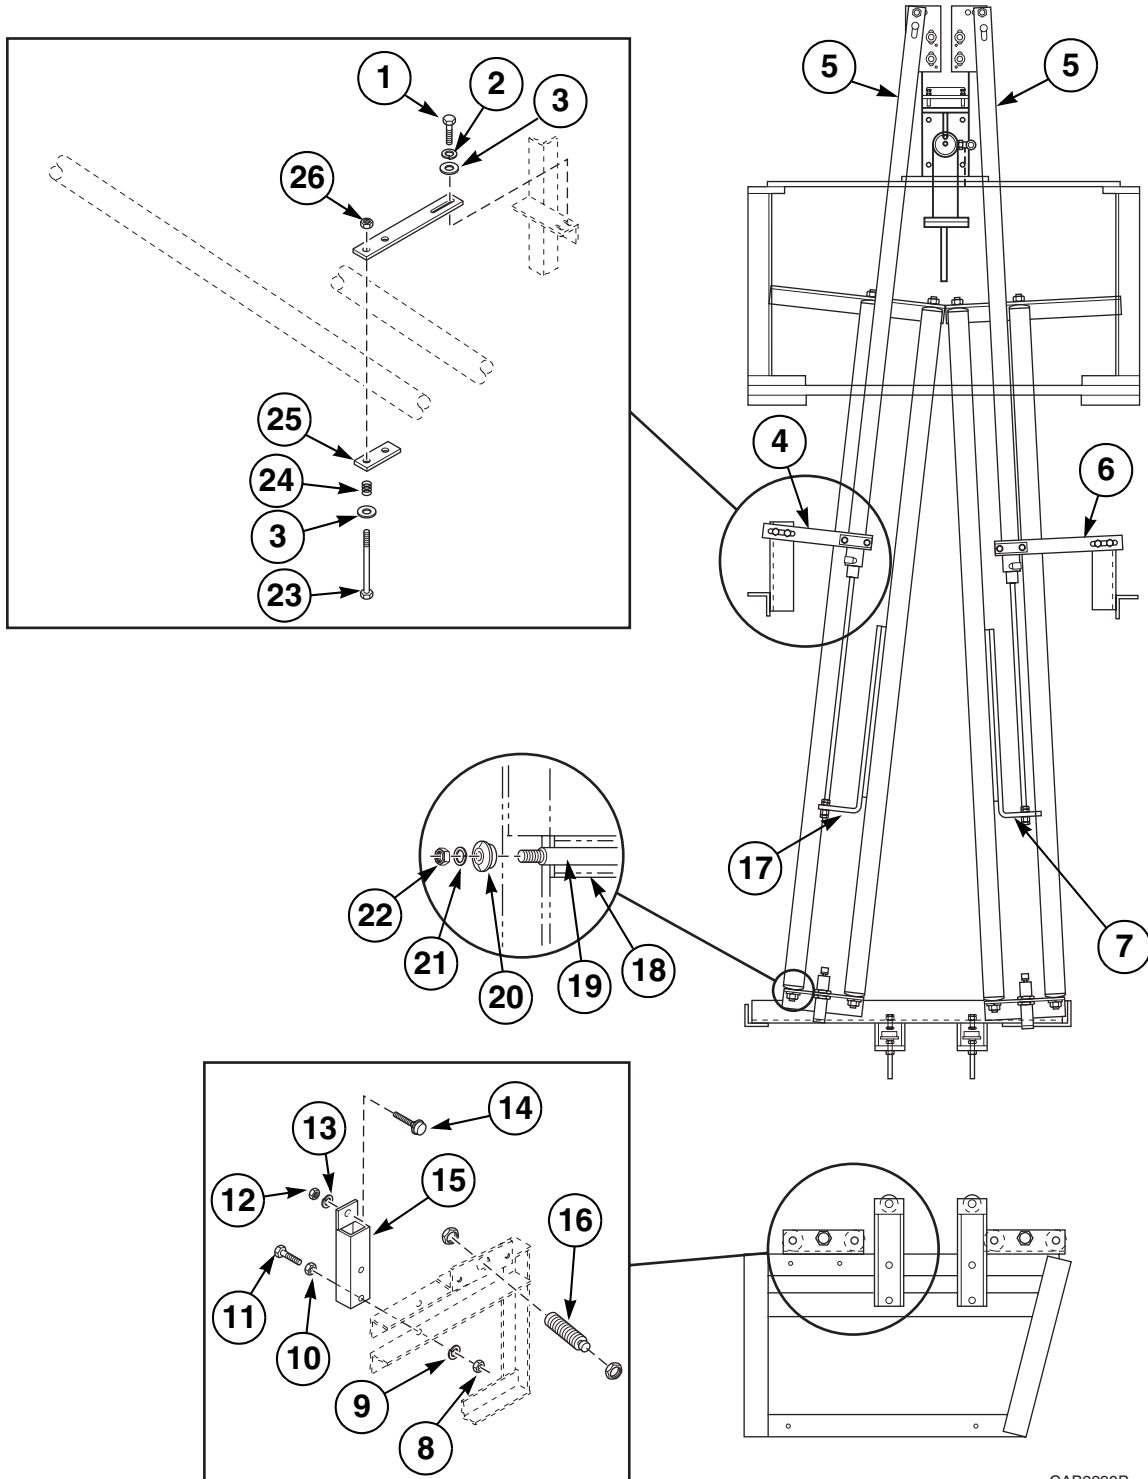

CAB2299P


Frame Completing Parts

REF	PART NO.	DESCRIPTION	COMMENTS
	J1010-000745	Indexing Cylinder Suspension Kit	CBBY models
	J1010-000746	Indexing Cylinder Suspension Kit	DFB models
	J1457308	Cylinder Repair Kit	Use with item 5
1	J1238518	Screw	2 required for CBBY models; 4 required for DFB models
2	J1185073	Washer	2 required for CBBY models; 4 required for DFB models
3	JC-80513	Washer	4 required for CBBY models; 8 required for DFB models
4	J1612936	Indexing Cylinder Support Plate	DFB models only
5	J1457290P	Indexing Cylinder Assembly	
6	J1612944	Front Indexing Cylinder Support Plate	
7	N/A	Front Cylinder Mounting Weldment	
8	70142	Nut	2 required for CBBY models; 4 required for DFB models
9	M400013	Washer	2 required for CBBY models; 4 required for DFB models
10	70142	Nut	2 required for CBBY models; 4 required for DFB models
11	91202	Screw	2 required for CBBY models; 4 required for DFB models
12	20274	Nut	DFB models; 2 required
13	M400014	Washer	DFB models; 2 required
14	JA-56790	Bumper	DFB models; 2 required
15	JA-23959	Buck Stop Bumper	DFB models; 2 required
16	J1626845	Shock Absorber Assembly	Refer to <i>Shock Absorber Assembly</i> section for parts breakdown
17	N/A	Rear Cylinder Mounting Weldment	
18	J200041100	Tube	2 required for CBBY models; 4 required for DFB models
19	JA-23189	Rail Rod	2 required for CBBY models; 4 required for DFB models
20	J200041000	Rail Slug	4 required for CBBY models; 8 required for DFB models
21	91200	Washer	4 required for CBBY models; 8 required for DFB models
22	J1000850	Nut	4 required for CBBY models; 8 required for DFB models
23	J1410026	Screw	2 required for CBBY models; 4 required for DFB models
24	J1039676	Spring	2 required for CBBY models; 4 required for DFB models
25	J1611987	Indexing Cylinder Support Nylon	DFB models; 2 required
26	20275	Nut	2 required for CBBY models; 4 required for DFB models

N/A = Part no longer available

Vacuum Air Valve Assembly

 Model DFB-XV

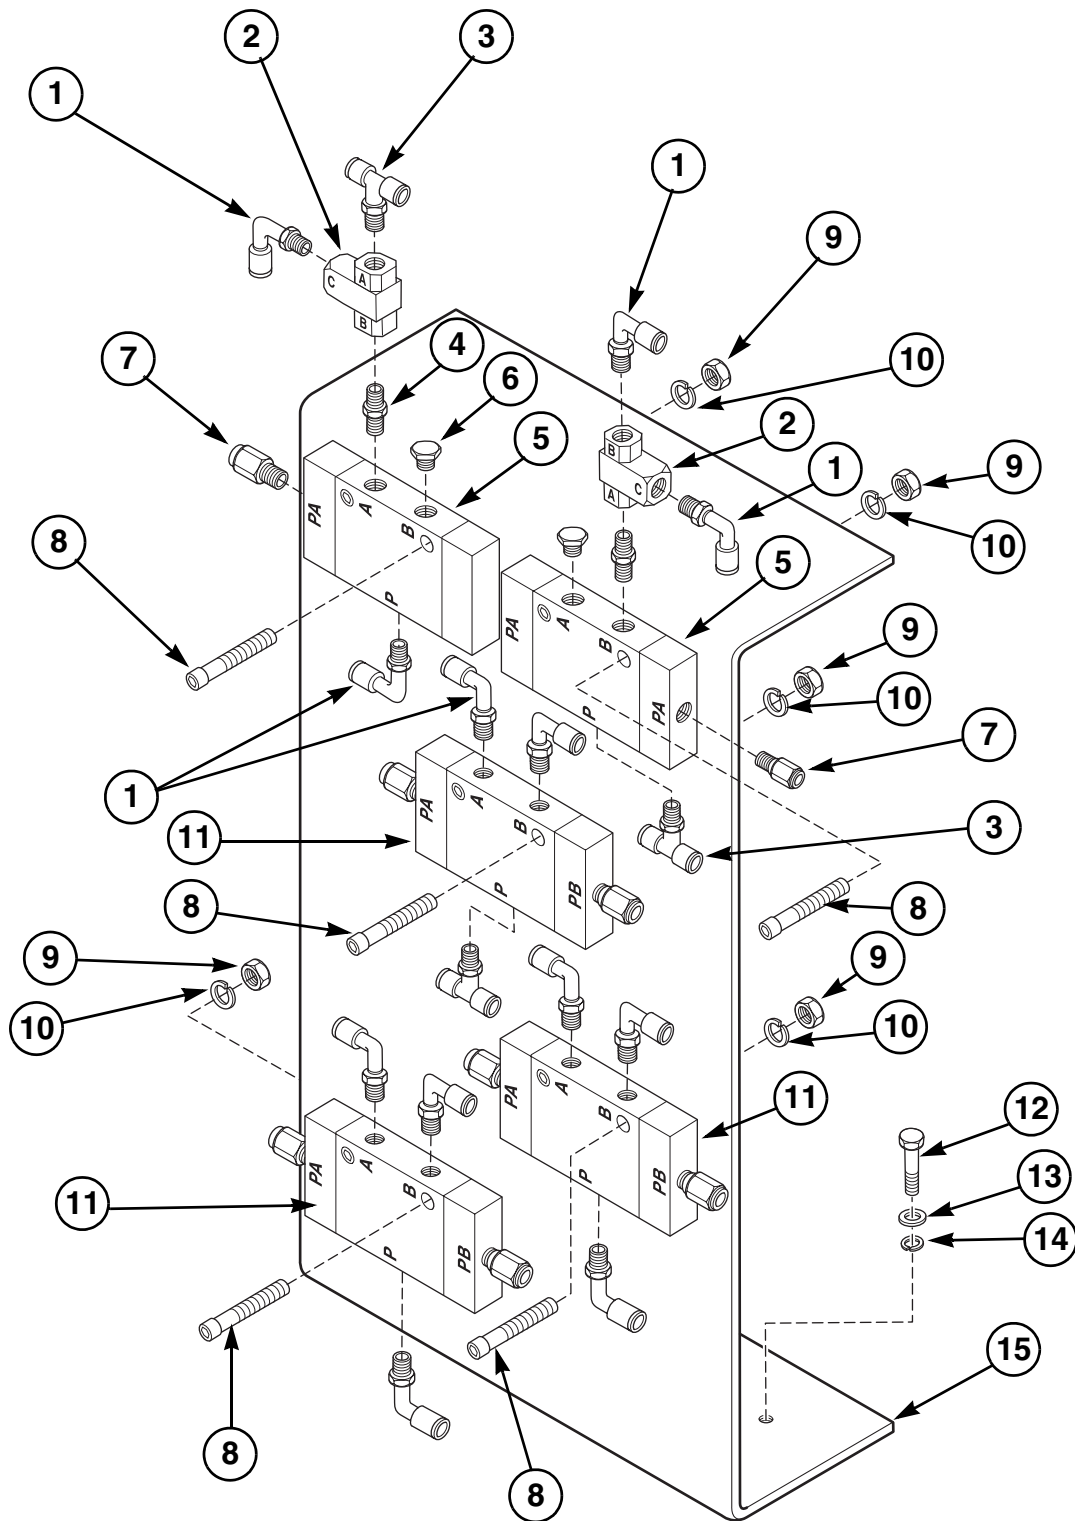


CAB2305P

Vacuum Air Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1531078	Vacuum Air Valve Assembly	Includes items 1-11 and 15; Models starting August 1997
	J1548379	Valve Assembly	4-way; Single pilot; Includes items 5 and 7
	J1548361P	Valve Assembly	4-way; Double pilot; Includes items 7 and 11
	J758P3	Repair Kit	Use with J1489483 Blue/Black Automatic Valve Co. valve; Also use with J1489491 Blue/Black Automatic Valve Co. valve; Models through August 1997
	J757P3	Repair Kit	Use with J1489491 Blue/Black Automatic Valve Co. valve; Includes fittings to adapt 1/4 NPT to 1/8 NPT
	J1103970-00	Tubing	Use as required
1	J1407741	Elbow	12 required
2	JA-53602	Shuttle Valve	2 required
3	J1437029	Tee	4 required
4	J1232313	Nipple	3 required
5	J1548791	Valve	2 required; Single pilot; Models starting August 1997; Replaces J1489483 Blue/Black Automatic Valve Co. valve
6	J1039858	Plug	2 required
7	F422101	Connector	7 required
8	J1548353	Screw	10 required
9	JC-48125	Nut	10 required
10	JC-43265	Washer	10 required
11	J1548783	Valve	3 required; 4-way; Double pilot; Models starting August 1997; Replaces J1489491 Blue/Black Automatic Valve Co. valve
12	J1001726	Screw	2 required
13	J1185073	Washer	2 required
14	JC-80513	Washer	2 required
15	J1548429	Bracket	

Low Pressure Air System (Drawing 1 of 5)

 Model CBBY-XV

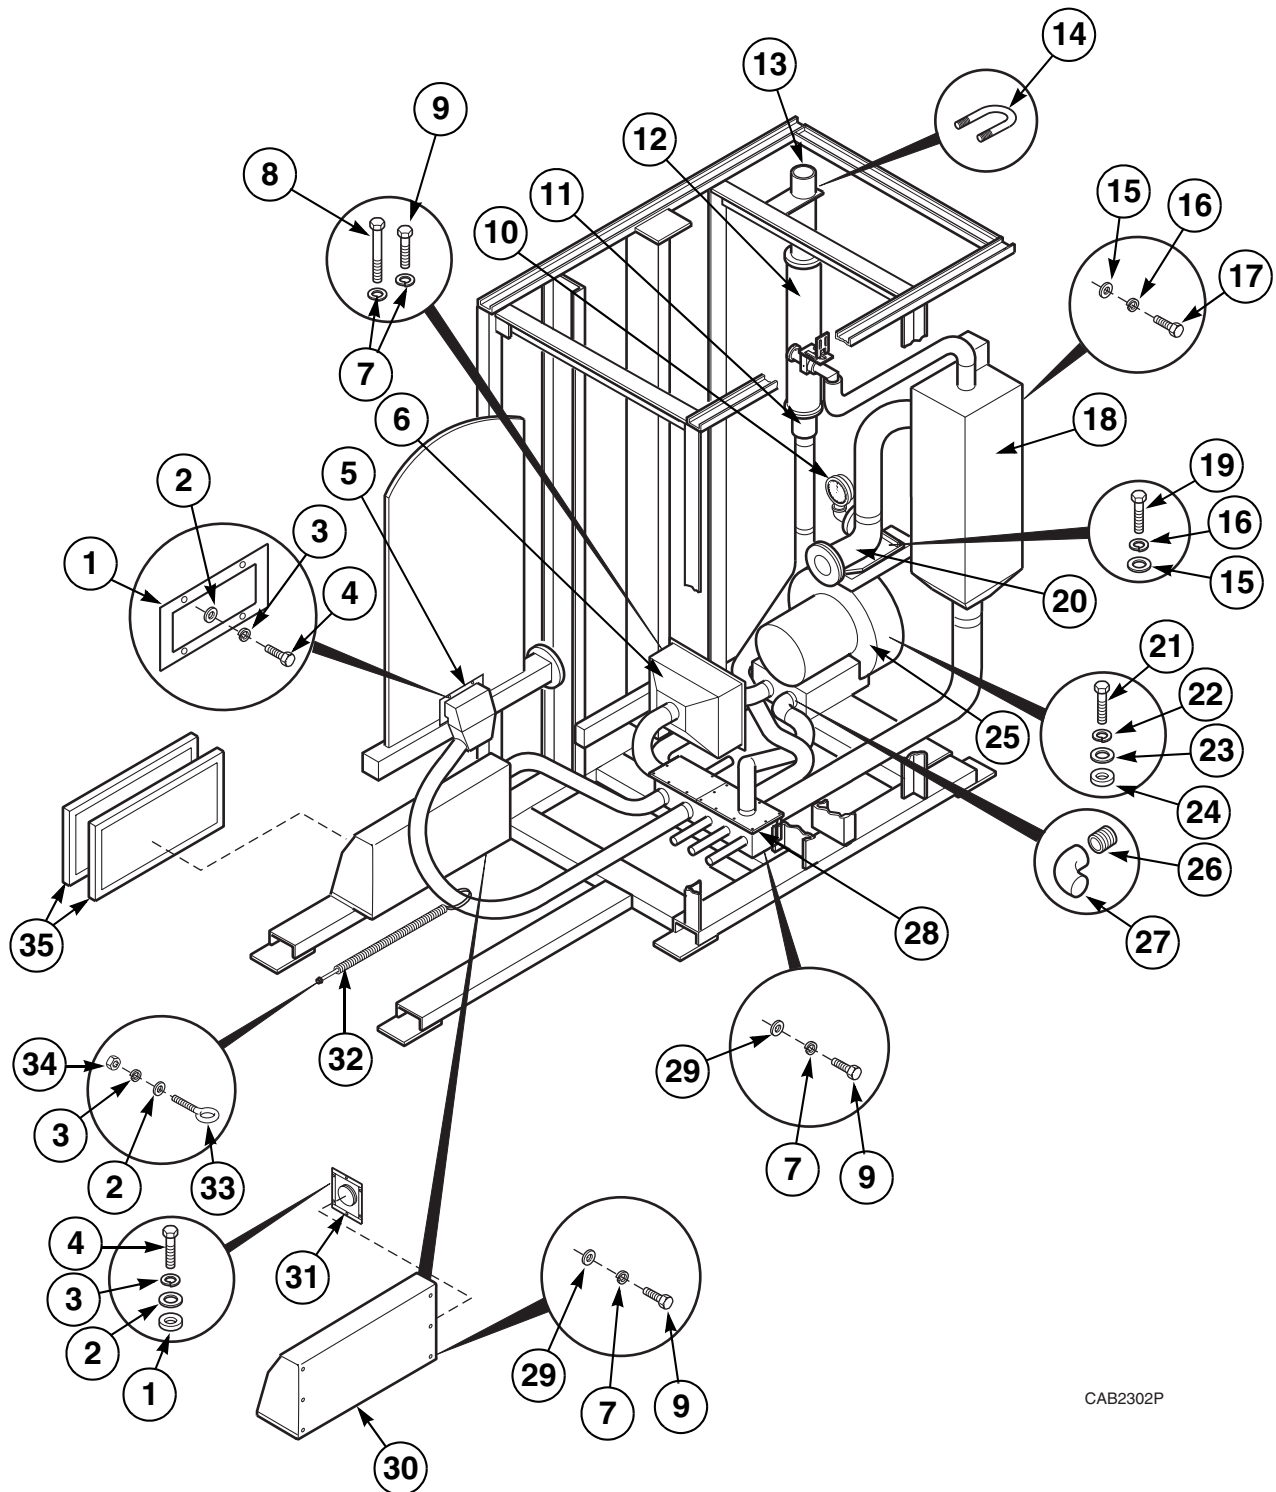


CAB2302P

Low Pressure Air System (Drawing 1 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1398544	Nipple	
	JC-21541	Clamp	2 required
1	J1372937	Seal	
2	JC-80759	Washer	10 required
3	J1000975	Washer	10 required
4	JC-61269	Screw	10 required
5	J1479542	Front Vacuum Inlet Box Weldment	
6	J1475169	Filter Housing Assembly	Includes filter
7	J1185073	Washer	2 required
8	JC-63376	Screw	2 required
9	JA-53020	Screw	2 required
10	JA-51283	Air Gauge	5 psi; Use with discharge tube assembly
11	J1370543	Nipple	
12	J1370550	Nipple	
13	J1370691	Muffler	
14	J1351204	U-Clamp	
15	M400080	Washer	2 required; Used to bolt heat exchanger to frame
16	M400013	Washer	2 required; Used to bolt heat exchanger to frame
17	M400057	Screw	2 required; Used to bolt heat exchanger to frame
18	J1525237	Heat Exchanger Assembly	Refer to <i>Heat Exchanger Assembly</i> section for parts breakdown
19	M400056	Screw	4 required
20	J1531003	Discharge Tube Assembly	Refer to <i>Discharge Tube Assembly</i> section for parts breakdown
21	J1122118	Screw	4 required
22	M400014	Washer	4 required
23	J1001304	Washer	4 required
24	JA-51527	Gasket	4 required; Mounted under blower; Rubber
25	J1567775	Blower	200 Volt/3 Phase/50 Hertz
	J0220243-00	Blower	220-480 Volt/3 Phase/50-60 Hertz
	J1567767	Blower	575 Volt/3 Phase/60 Hertz
26	J1438993	Nipple Weldment	
27	JC-28268	Elbow	
28	J1523711	Damper Box Assembly	Refer to <i>Damper Box Assembly</i> section for parts breakdown
29	JC-80513	Washer	8 required
30	J1475409	Filter Box Weldment	
31	J1475425	Filter Box Adapter Weldment	
32	JA-50949	Spring	
33	JA-51665	Hook	
34	J1000736	Nut	
35	JA-53679	Air Filter	2 required

Low Pressure Air System (Drawing 2 of 5)

 Model CBBY-XV

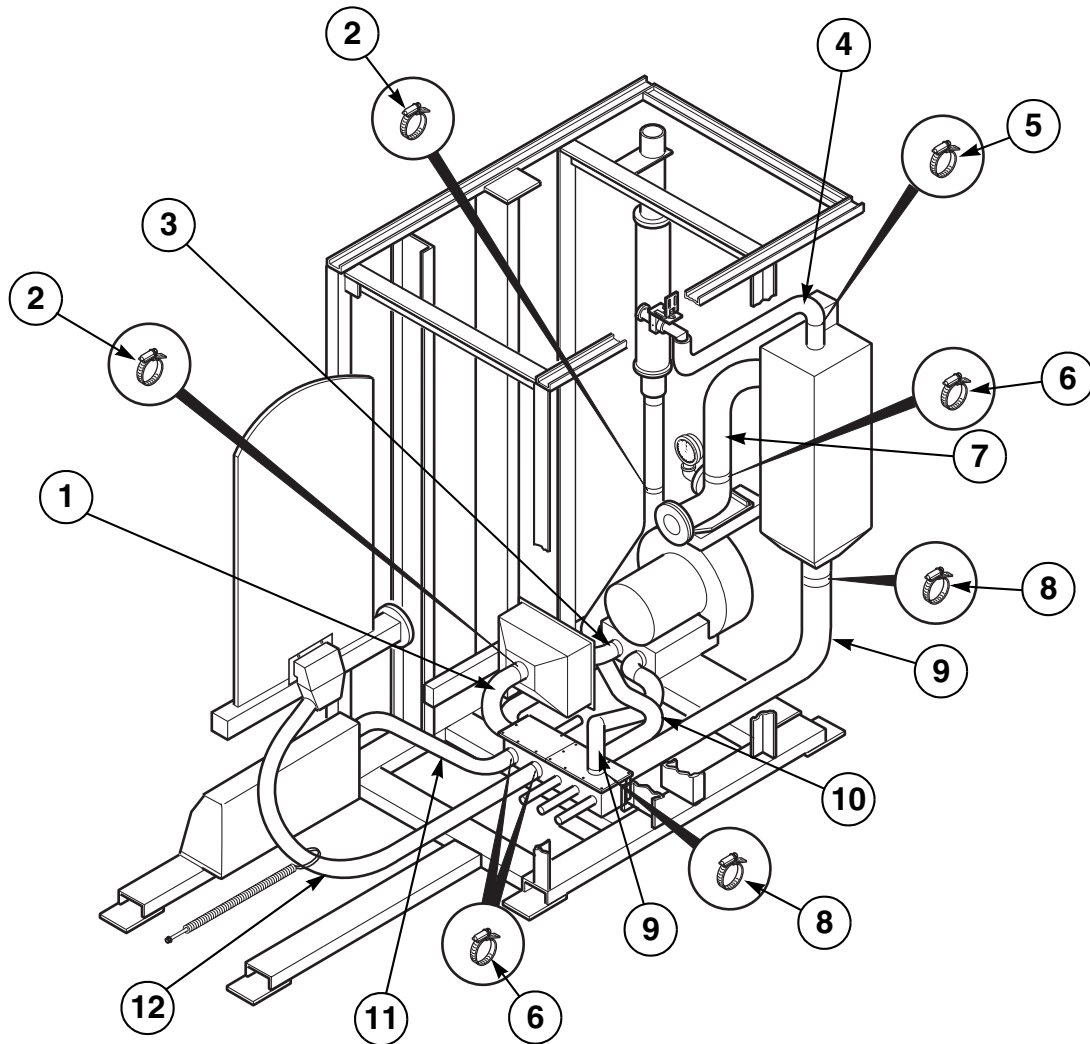


CAB2319P

Low Pressure Air System (Drawing 2 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1476175	Hose	2-1/2 inch diameter
2	JC-21522	Clamp	4 required
3	J1471671	Hose	2-1/2 inch diameter
4	J1394782	Hose	1-1/8 inch diameter
5	JC-21541	Clamp	2 required
6	20391	Hose Clamp	4 required
7	J1439157	Hose	2 inch diameter; 2 required
8	J1156967	Hose Clamp	10 required
9	JM-96005	Hose	3 inch diameter
10	J1439140	Hose	3 inch diameter
11	J1439141	Hose	2 inch diameter
12	J1564178	Hose	2 inch diameter

Low Pressure Air System (Drawing 3 of 5)

 Model DFB-XV

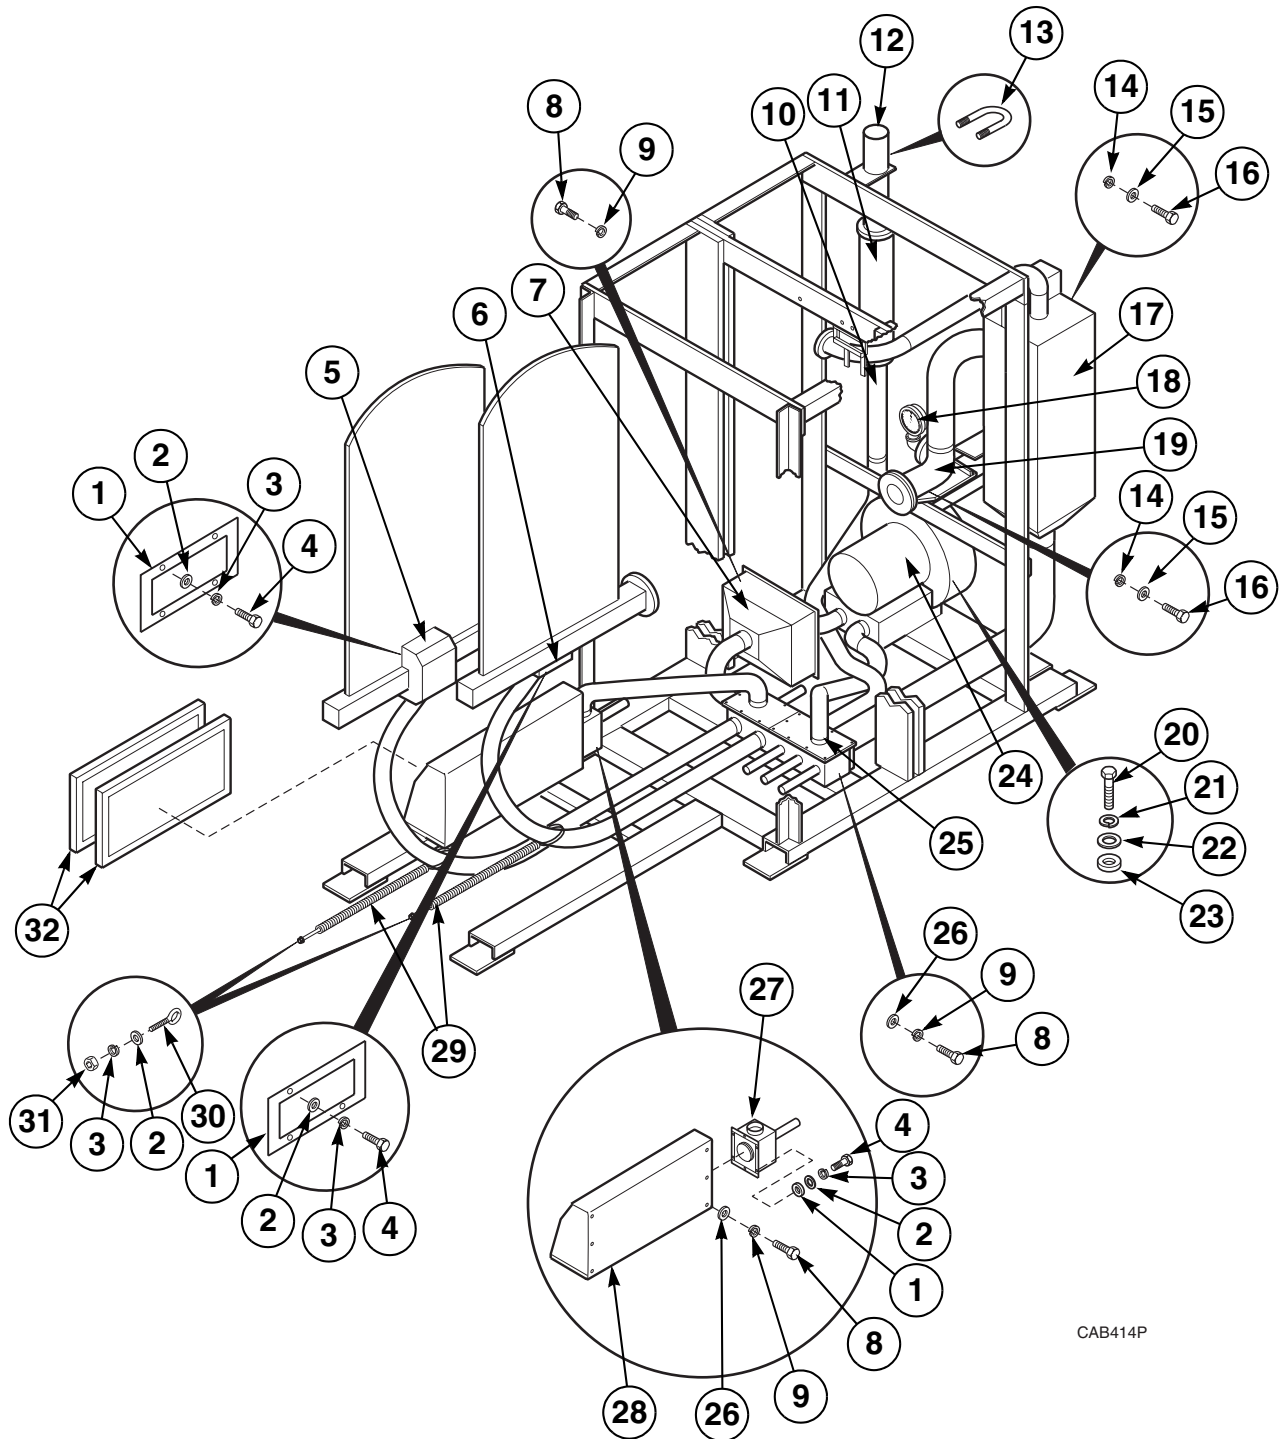


CAB414P

Low Pressure Air System (Drawing 3 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1398544	Nipple	Use with blower
	J1438993	Nipple Weldment	Use with blower
	JC-28268	Elbow	Use with blower
1	J1372937	Seal	
2	JC-80759	Washer	12 required
3	J1000975	Washer	12 required
4	JC-61269	Screw	12 required
5	J1479559	Vacuum Box Weldment	Rear Buck
6	J1479542	Front Vacuum Inlet Box Weldment	
7	J1475169	Filter Housing Assembly	Includes filter
8	JA-53020	Screw	6 required
9	J1185073	Washer	6 required
10	J1370543	Nipple	
11	J1370550	Nipple	
12	J1370691	Muffler	
13	J1351204	U-Clamp	
14	M400013	Washer	2 required
15	M400080	Washer	2 required
16	M400057	Screw	2 required
17	J1525237	Heat Exchanger Assembly	Refer to <i>Heat Exchanger Assembly</i> section for parts breakdown
18	JA-51283	Air Gauge	5 psi
19	J1523927	Discharge Tube Assembly	Refer to <i>Discharge Tube Assembly</i> section for parts breakdown
20	J1122118	Screw	4 required
21	M400014	Washer	4 required
22	J1001304	Washer	4 required
23	JA-51527	Gasket	Rubber; 4 required
24	J1567775	Blower	200 Volt/3 Phase/50 Hertz
	J0220243-00	Blower	220-480 Volt/3 Phase/50-60 Hertz
	J1567767	Blower	575 Volt/3 Phase/60 Hertz
25	J1521079	Damper Box Assembly	Refer to <i>Damper Box Assembly</i> section for parts breakdown
26	JC-80513	Washer	6 required
27	J1479484	Filter Box Damper Assembly	Refer to <i>Filter Box Damper Assembly</i> section for parts breakdown
28	J1475409	Filter Box Weldment	
29	JA-50949	Spring	2 required
30	JA-51665	Hook	2 required
31	J1000736	Nut	2 required
32	JA-53679	Air Filter	2 required

Low Pressure Air System (Drawing 4 of 5)

 Model DFB-XV

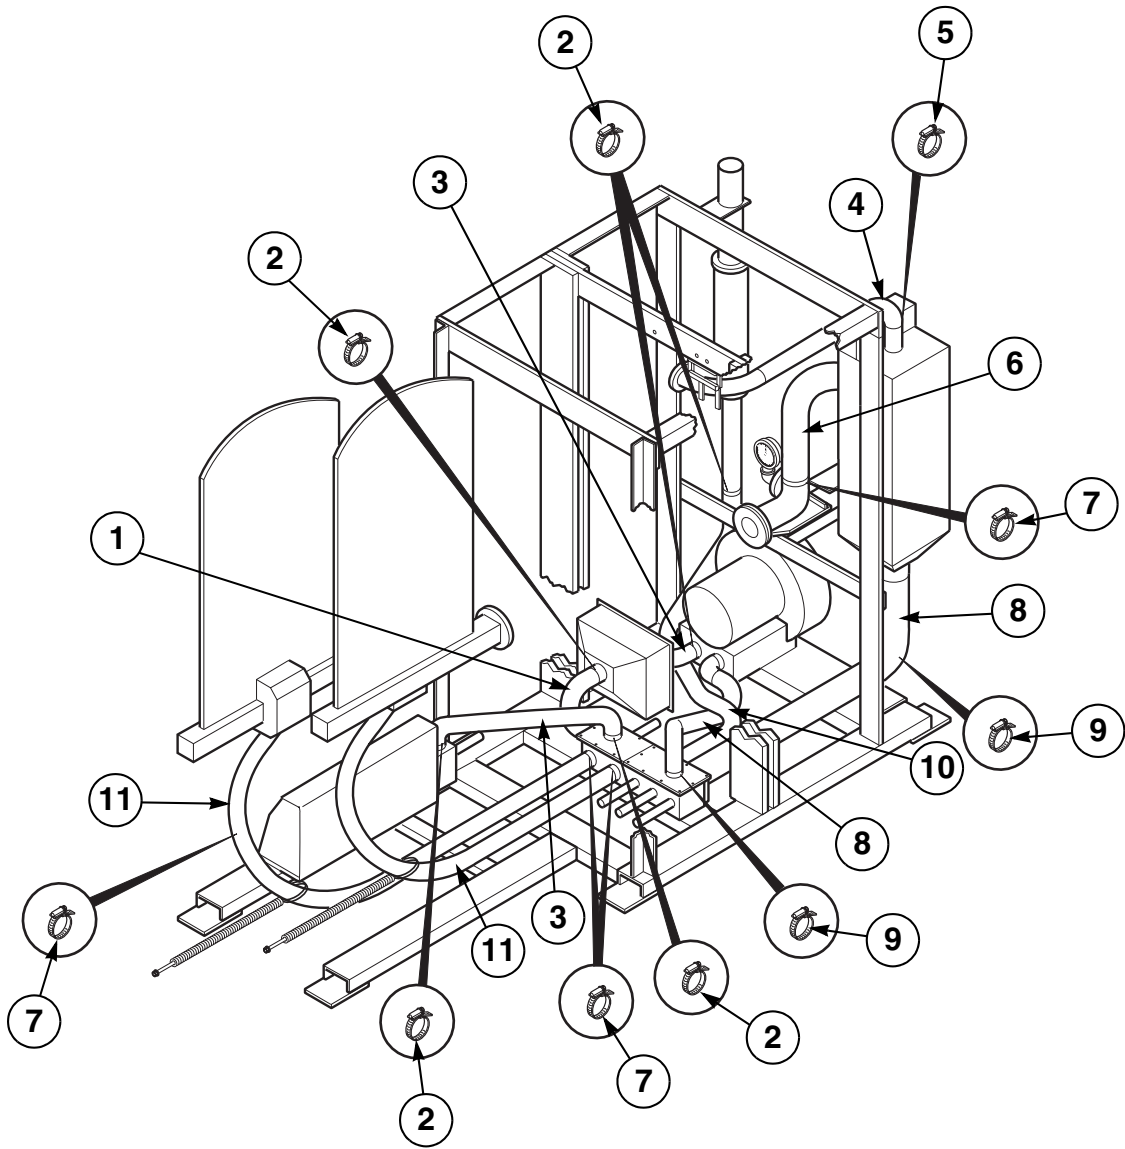


CAB2320P

Low Pressure Air System (Drawing 4 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1476175P	Hose	2-1/2 inch diameter
2	JC-21522	Clamp	6 required
3	J1471671	Hose	2-1/2 inch diameter
4	J1394782	Hose	1-1/8 inch diameter
5	JC-21541	Clamp	2 required
6	J1439157P	Hose	2 inch diameter
7	JA-50960	Hose Clamp	6 required
8	JM-96005	Hose	3 inch diameter
9	J1156967	Hose Clamp	4 required
10	J1439140P	Hose	2-1/2 inch diameter
11	J1564178	Hose	2 inch diameter

Low Pressure Air System (Drawing 5 of 5)

 Models CBBY-X and DFB-X

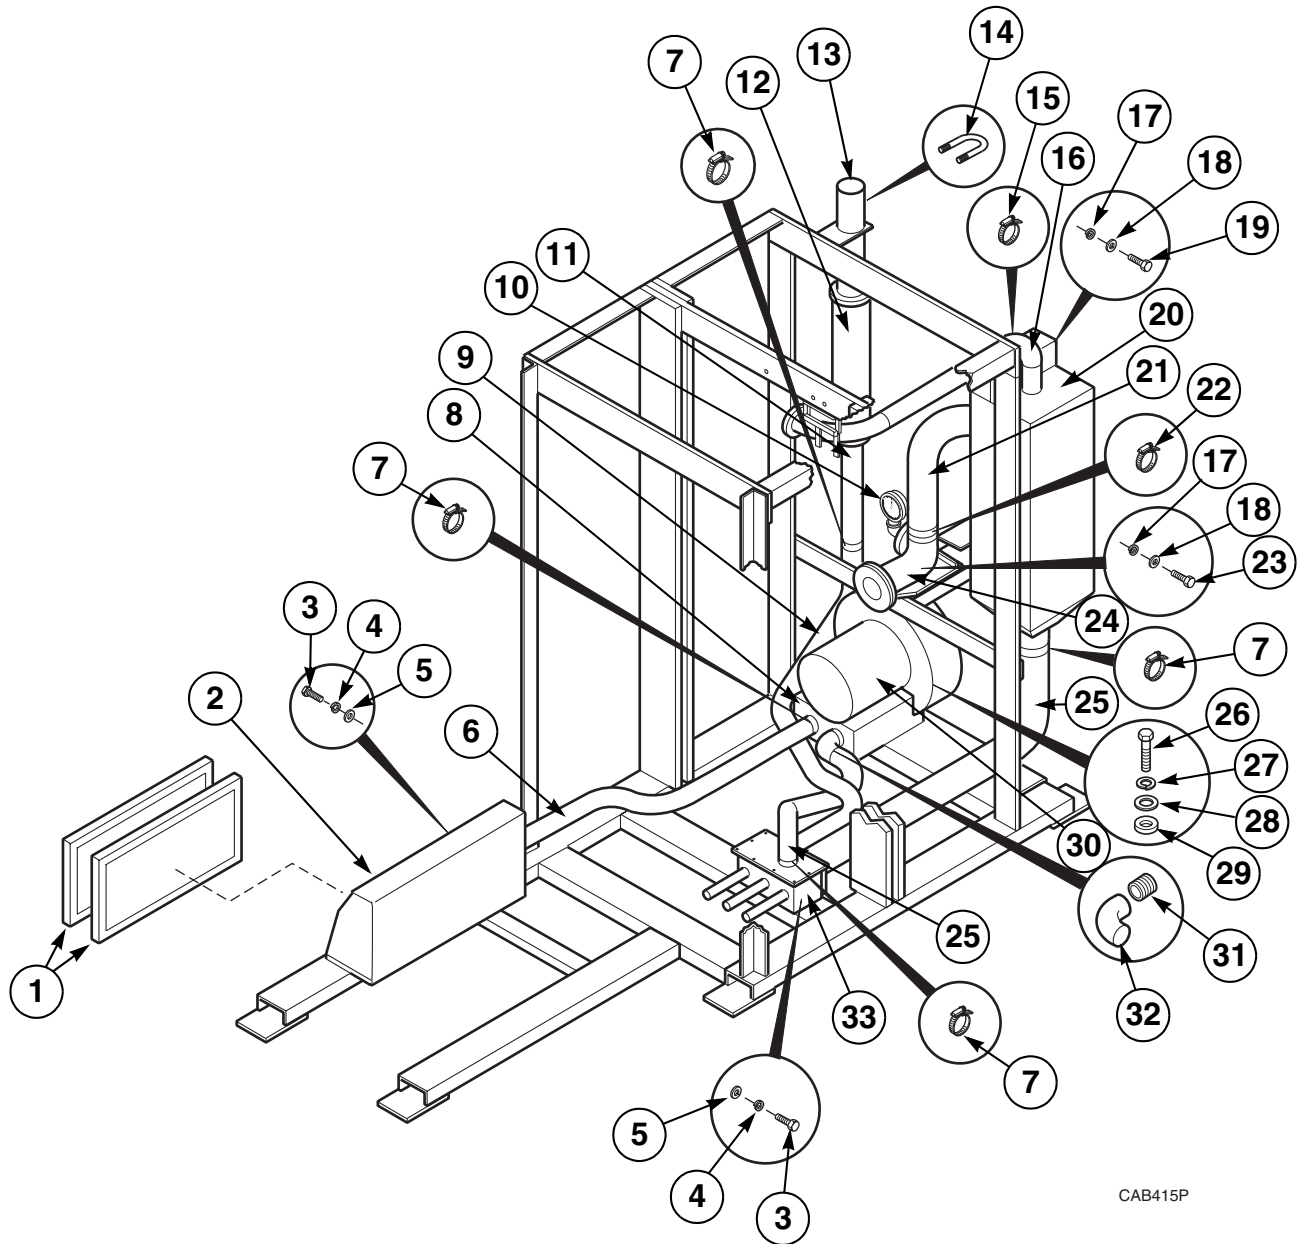


CAB415P

Low Pressure Air System (Drawing 5 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-53679	Air Filter	2 required
2	J1439025	Filter Box Weldment	
3	JA-53020	Screw	2 required
4	J1185073	Washer	2 required
5	JC-80513	Washer	8 required
6	J1471671	Hose	2-1/2 inch diameter
7	J1156967	Hose Clamp	4 required
8	J1398544	Nipple	
9	J1439140P	Hose	2-1/2 inch diameter
10	JA-51283	Air Gauge	5 psi
11	J1370543	Nipple	
12	J1370550	Nipple	Use with item 14
13	J1370691	Muffler	
14	J1351204	U-Clamp	
15	JC-21541	Clamp	2 required
16	J1394782	Hose	1-1/8 inch diameter
17	M400013	Washer	2 required
18	M400080	Washer	2 required
19	M400057	Screw	2 required
20	J1525237	Heat Exchanger Assembly	Refer to <i>Heat Exchanger Assembly</i> section for parts breakdown
21	J1439157P	Hose	2 inch diameter
22	JA-50960	Hose Clamp	2 required
23	M400056	Screw	4 required
24	J1523927	Discharge Tube Assembly	Refer to <i>Discharge Tube Assembly</i> section for parts breakdown
25	JM-96005	Hose	3 inch diameter
26	J1122118	Screw	4 required
27	M400014	Washer	4 required
28	J1001304	Washer	4 required
29	JA-51527	Gasket	Rubber; 4 required
30	J1567775	Blower	200 Volt/3 Phase/50 Hertz
	J0220243-00	Blower	220-480 Volt/3 Phase/50-60 Hertz
	J1567767	Blower	575 Volt/3 Phase/60 Hertz
31	J1438993	Nipple Weldment	
32	JC-28268	Elbow	
33	J1522440	Damper Box Assembly	Refer to <i>Damper Box Assembly</i> section for parts breakdown


Air System (Drawing 1 of 8)

 Model DFB-XV

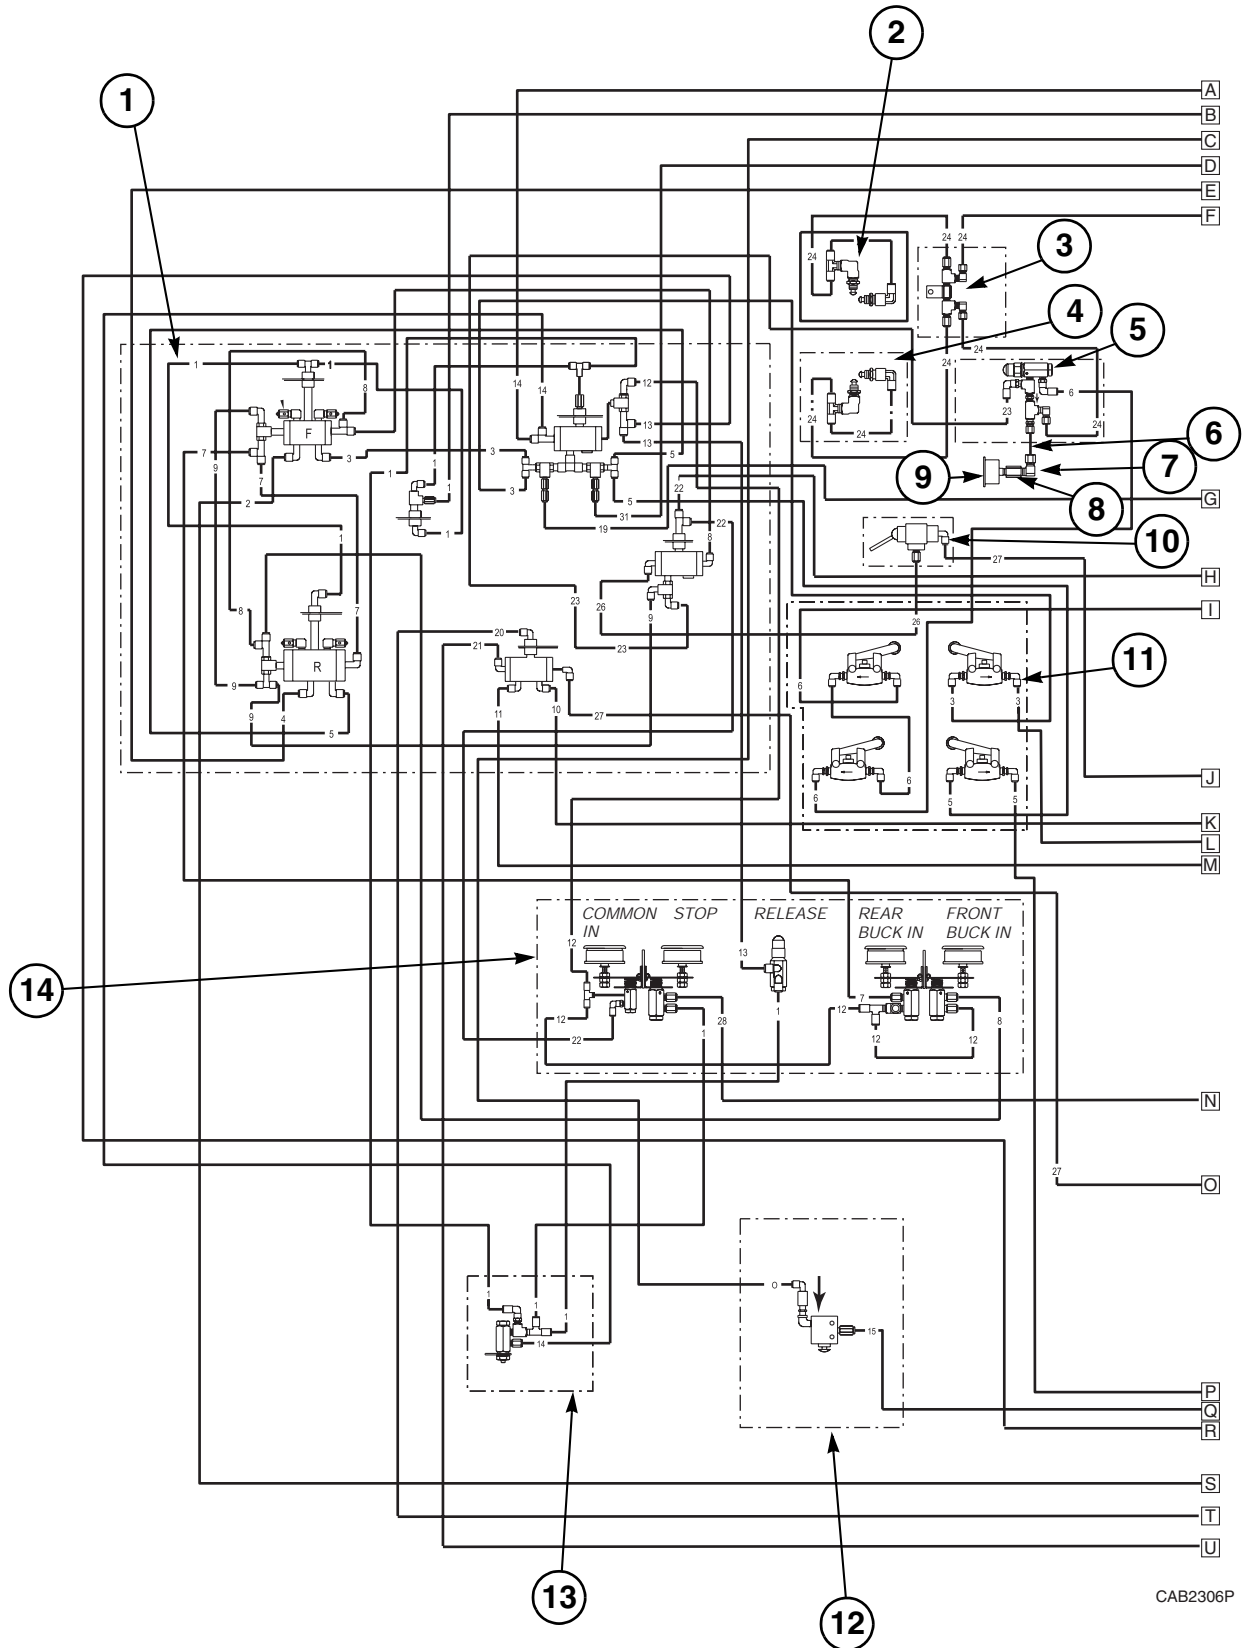

CAB2306P

 Model DFB-XV



Air System (Drawing 1 of 8)

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1523786	Operating Valve Assembly	Refer to <i>Operating Valve Assembly</i> section for parts breakdown
2	J1571058	Safety Valve Assembly – Rear Left	Refer to <i>Safety Valve Assembly – Rear Left</i> section for parts breakdown
3	J1523844	Bracket and Fittings Assembly	2 required; Refer to <i>Bracket and Fittings Assembly</i> section for parts breakdown
4	J1571041	Safety Valve Assembly – Front Left	Refer to <i>Safety Valve Assembly – Front Left</i> section for parts breakdown
5	J1583103	Reset Valve Assembly	Refer to <i>Reset Valve Assembly</i> section for parts breakdown
6	J1106699	Tubing	Copper
7	JA-50770	Elbow	
8	J1018571	Coupling	
9	J1531060	Pressure Gauge	0-100 psi
10	J1505411	Selector Switch	
11	J1523976	Roller Valve Assembly	4 required; Refer to <i>Roller Valve Assembly</i> section for parts breakdown
12	J1485010	Collar Block Foot Pedal Base Assembly	Refer to <i>Collar Block Foot Pedal Base Assembly</i> section for parts breakdown
13	J1484682	Pedal Base and Valve Assembly	Refer to <i>Pedal Base and Valve Assembly</i> section for parts breakdown
14	J1521095	Operating Control Assembly	Refer to <i>Operating Control Assembly</i> section for parts breakdown


Air System (Drawing 2 of 8)

REF	PART NO.	DESCRIPTION	COMMENTS
15	J1521947	Safety Valve Assembly – Rear Right	Refer to <i>Safety Valve Assembly – Rear Right</i> section for parts breakdown
16	J1523794	Internal Air Inlet Assembly	Refer to <i>Internal Air Inlet Assembly</i> section for parts breakdown
17	J1484245	External Air Inlet Assembly	Refer to <i>External Air Inlet Assembly</i> section for parts breakdown
18	J1526920	Rear Roller Valve Assembly	Refer to <i>Rear Roller Valve Assembly</i> section for parts breakdown
19	J1523927	Discharge Tube Assembly	Refer to <i>Discharge Tube Assembly</i> section for parts breakdown
20	J1523935	Front Head Open Roller Valve Assembly	Refer to <i>Front Head Open Roller Valve Assembly</i> section for parts breakdown
21	J1521079	Damper Box Assembly	Refer to <i>Damper Box Assembly</i> section for parts breakdown
22	J1531078	Vacuum Air Valve Assembly	Refer to <i>Vacuum Air Valve Assembly</i> section for parts breakdown
23	J1523885	Bracket and Fittings Assembly	Refer to <i>Bracket and Fittings Assembly</i> section for parts breakdown
24	J1531839	Bracket and Fittings Assembly	Refer to <i>Bracket and Fittings Assembly</i> section for parts breakdown
25	N/A	Electrical Control Assembly	Refer to <i>Electrical Control Assembly</i> section for parts breakdown
26	J1364181	Pressure Switch	2 required
27	J1457290P	Indexing Cylinder Assembly	2 required
28	J1479484	Filter Box Damper Assembly	Refer to <i>Filter Box Damper Assembly</i> section for parts breakdown
29	J1521954	Safety Valve Assembly – Front Right	Refer to <i>Safety Valve Assembly – Front Right</i> section for parts breakdown

N/A = Part no longer available


Air System (Drawing 3 of 8)

 Model DFB-X

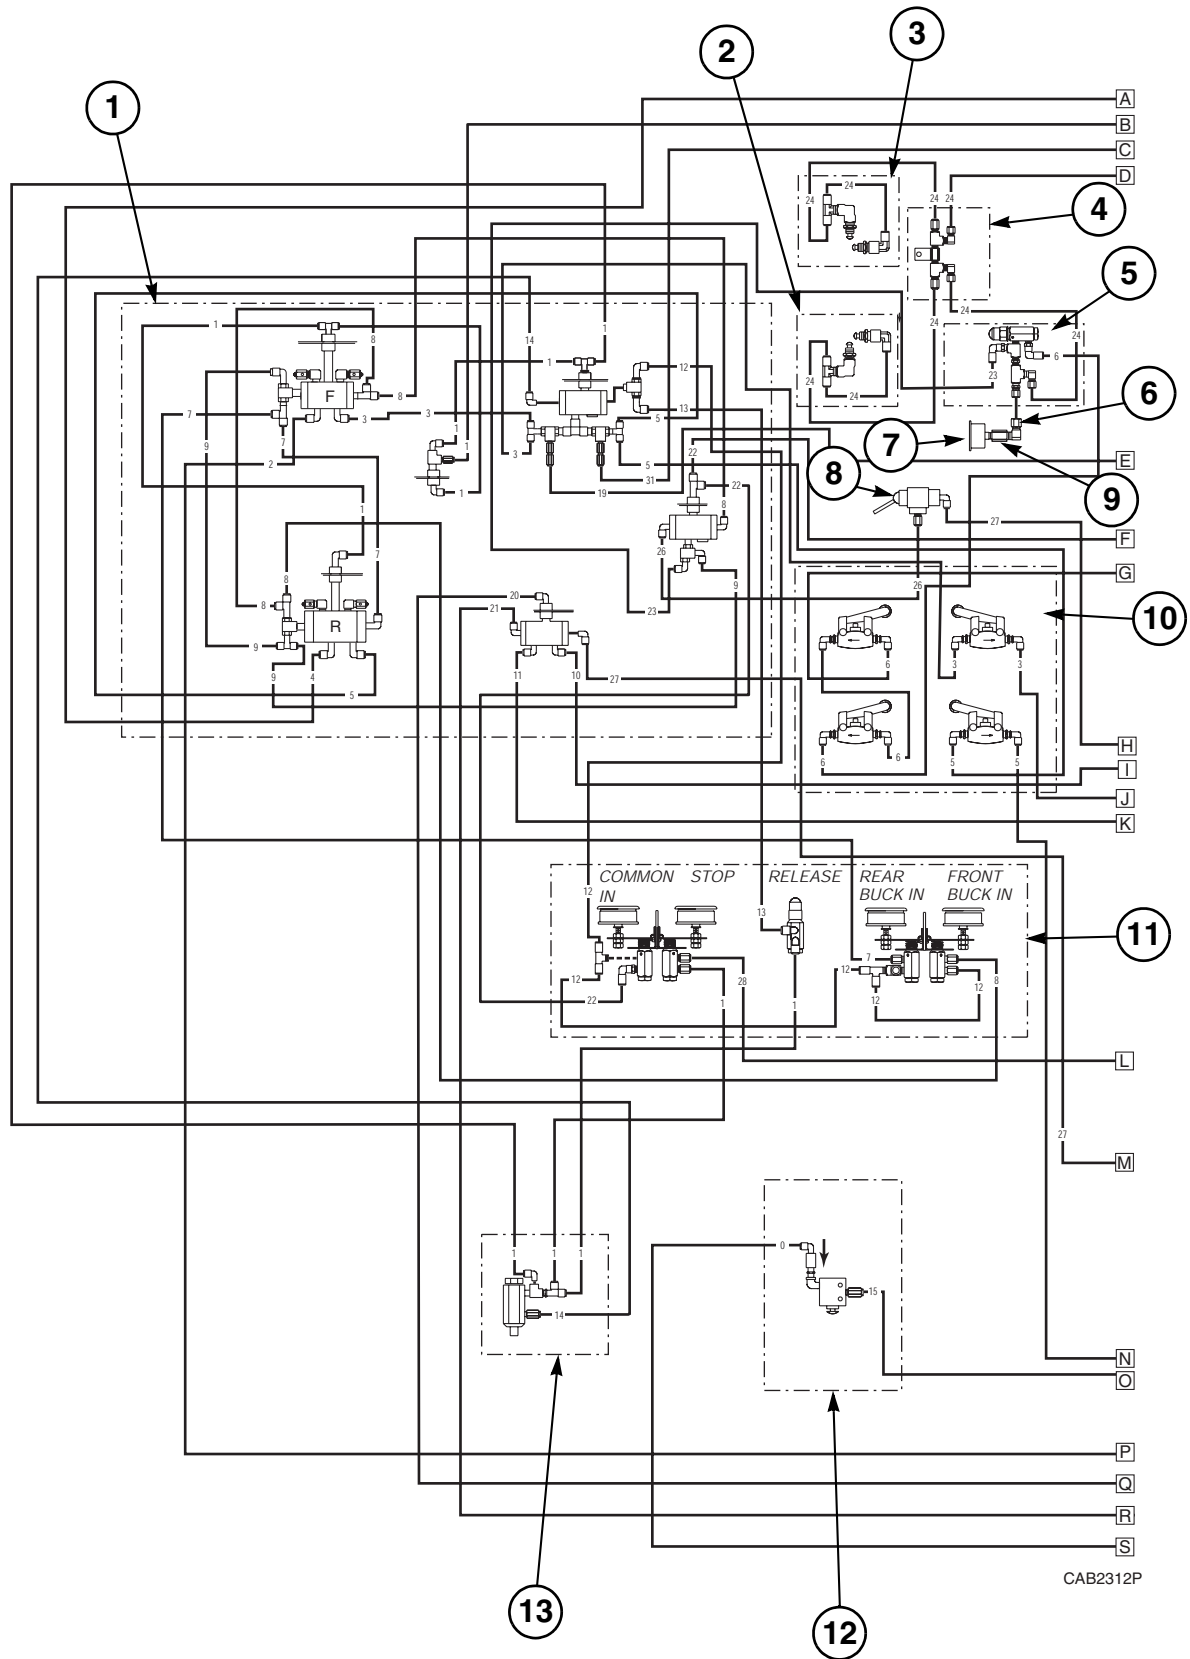

Air System (Drawing 4 of 8)

 Model DFB-X

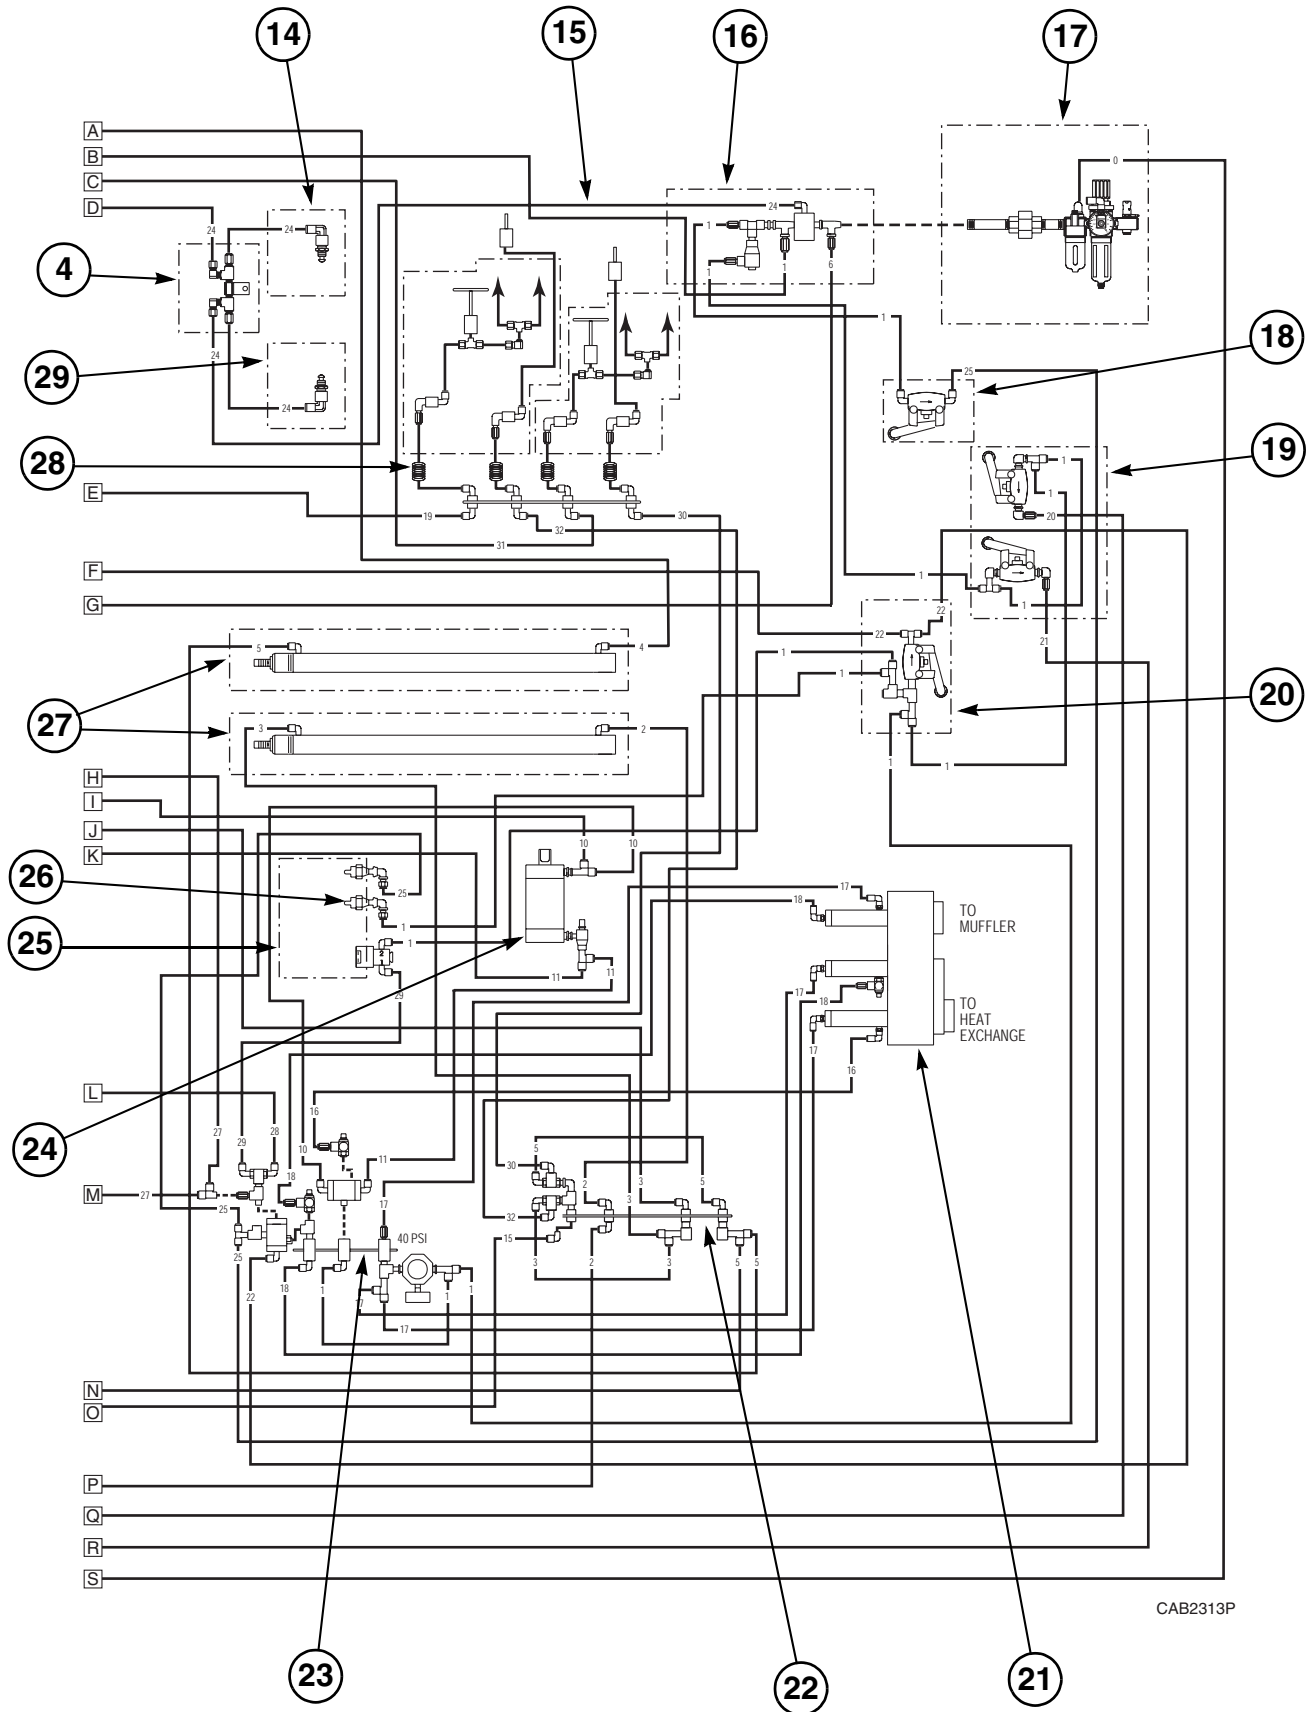

Air System (Drawing 3 of 8)

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1523786	Operating Valve Assembly	Refer to <i>Operating Valve Assembly</i> section for parts breakdown
2	J1571041	Safety Valve Assembly – Front Left	Refer to <i>Safety Valve Assembly – Front Left</i> section for parts breakdown
3	J1571058	Safety Valve Assembly – Rear Left	Refer to <i>Safety Valve Assembly – Rear Left</i> section for parts breakdown
4	J1523844	Bracket and Fittings Assembly	2 required; Refer to <i>Bracket and Fittings Assembly</i> section for parts breakdown
5	J1583103	Reset Valve Assembly	Refer to <i>Reset Valve Assembly</i> section for parts breakdown
6	JA-50770	Elbow	
7	J1531060	Pressure Gauge	0-100 psi
8	J1505411	Selector Switch	
9	J1018571	Coupling	
10	J1523976	Roller Valve Assembly	4 required; Refer to <i>Roller Valve Assembly</i> section for parts breakdown
11	J1521095	Operating Control Assembly	Refer to <i>Operating Control Assembly</i> section for parts breakdown
12	J1485010	Collar Block Foot Pedal Base Assembly	Refer to <i>Collar Block Foot Pedal Base Assembly</i> section for parts breakdown
13	J1484682	Pedal Base and Valve Assembly	Refer to <i>Pedal Base and Valve Assembly</i> section for parts breakdown


Air System (Drawing 4 of 8)

REF	PART NO.	DESCRIPTION	COMMENTS
14	J1571041	Safety Valve Assembly – Front Left	Refer to <i>Safety Valve Assembly – Front Left</i> section for parts breakdown
15	J1106699	Tubing	Copper
16	J1523794	Internal Air Inlet Assembly	Refer to <i>Internal Air Inlet Assembly</i> section for parts breakdown
17	J1484245	External Air Inlet Assembly	Refer to <i>External Air Inlet Assembly</i> section for parts breakdown
18	J1526920	Rear Roller Valve Assembly	Refer to <i>Rear Roller Valve Assembly</i> section for parts breakdown
19	J1523927	Discharge Tube Assembly	Refer to <i>Discharge Tube Assembly</i> section for parts breakdown
20	J1523935	Front Head Open Roller Valve Assembly	Refer to <i>Front Head Open Roller Valve Assembly</i> section for parts breakdown
21	J1522440	Damper Box Assembly	Refer to <i>Damper Box Assembly</i> section for parts breakdown
22	J1525252	Bracket and Fittings Assembly	Refer to <i>Bracket and Fittings Assembly</i> section for parts breakdown
23	J1531839	Bracket and Fittings Assembly	Refer to <i>Bracket and Fittings Assembly</i> section for parts breakdown
24	J1523984	Head Pressing Cylinder Assembly	Refer to <i>Head Pressing Cylinder Assembly</i> section for parts breakdown
25	N/A	Electrical Control Assembly	Refer to <i>Electrical Control Assembly</i> section for parts breakdown
26	J1364181	Pressure Switch	2 required
27	J1457290P	Indexing Cylinder Assembly	2 required
28	J1492693	Tubing	4 required
29	J1521954	Safety Valve Assembly – Front Right	Refer to <i>Safety Valve Assembly – Front Right</i> section for parts breakdown

N/A = Part no longer available


Air System (Drawing 5 of 8)

 Model CBBY-XV

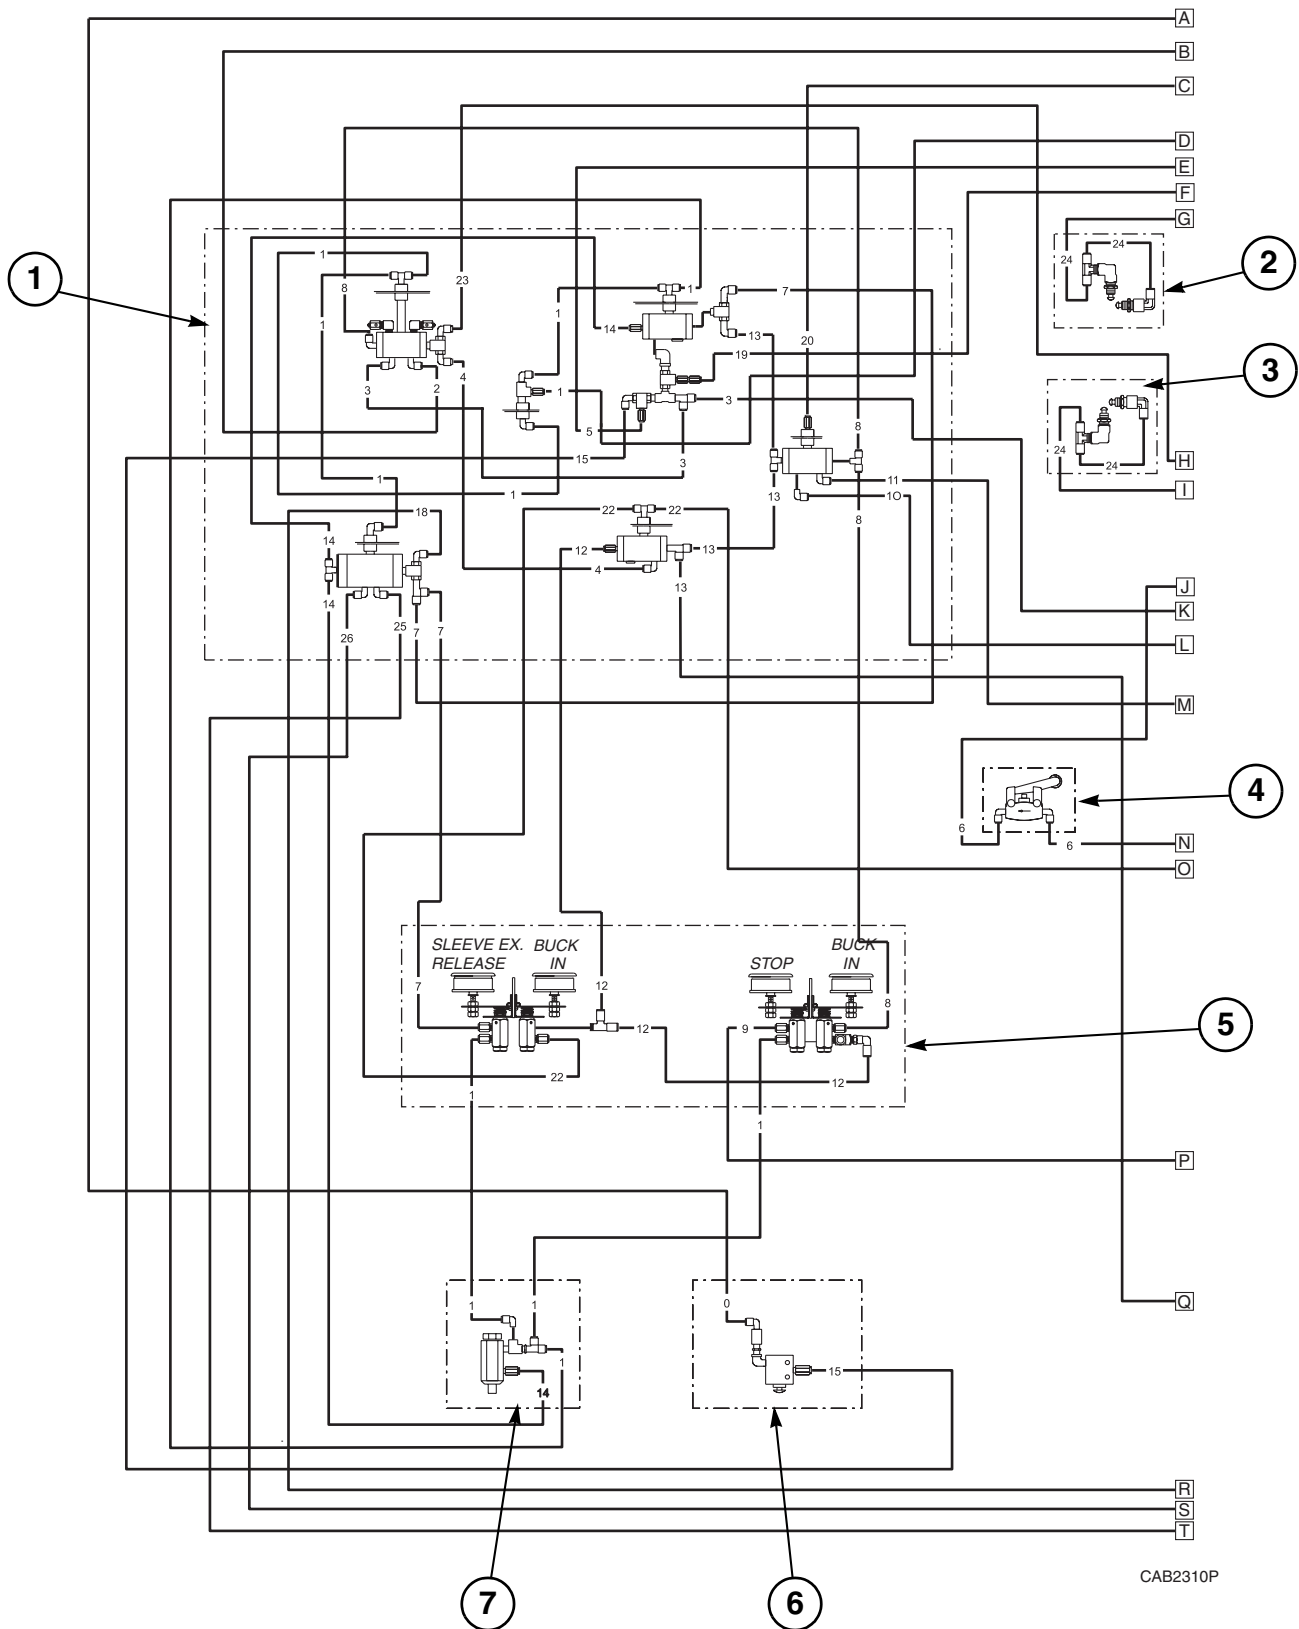

Air System (Drawing 6 of 8)

 Model CBBY-XV

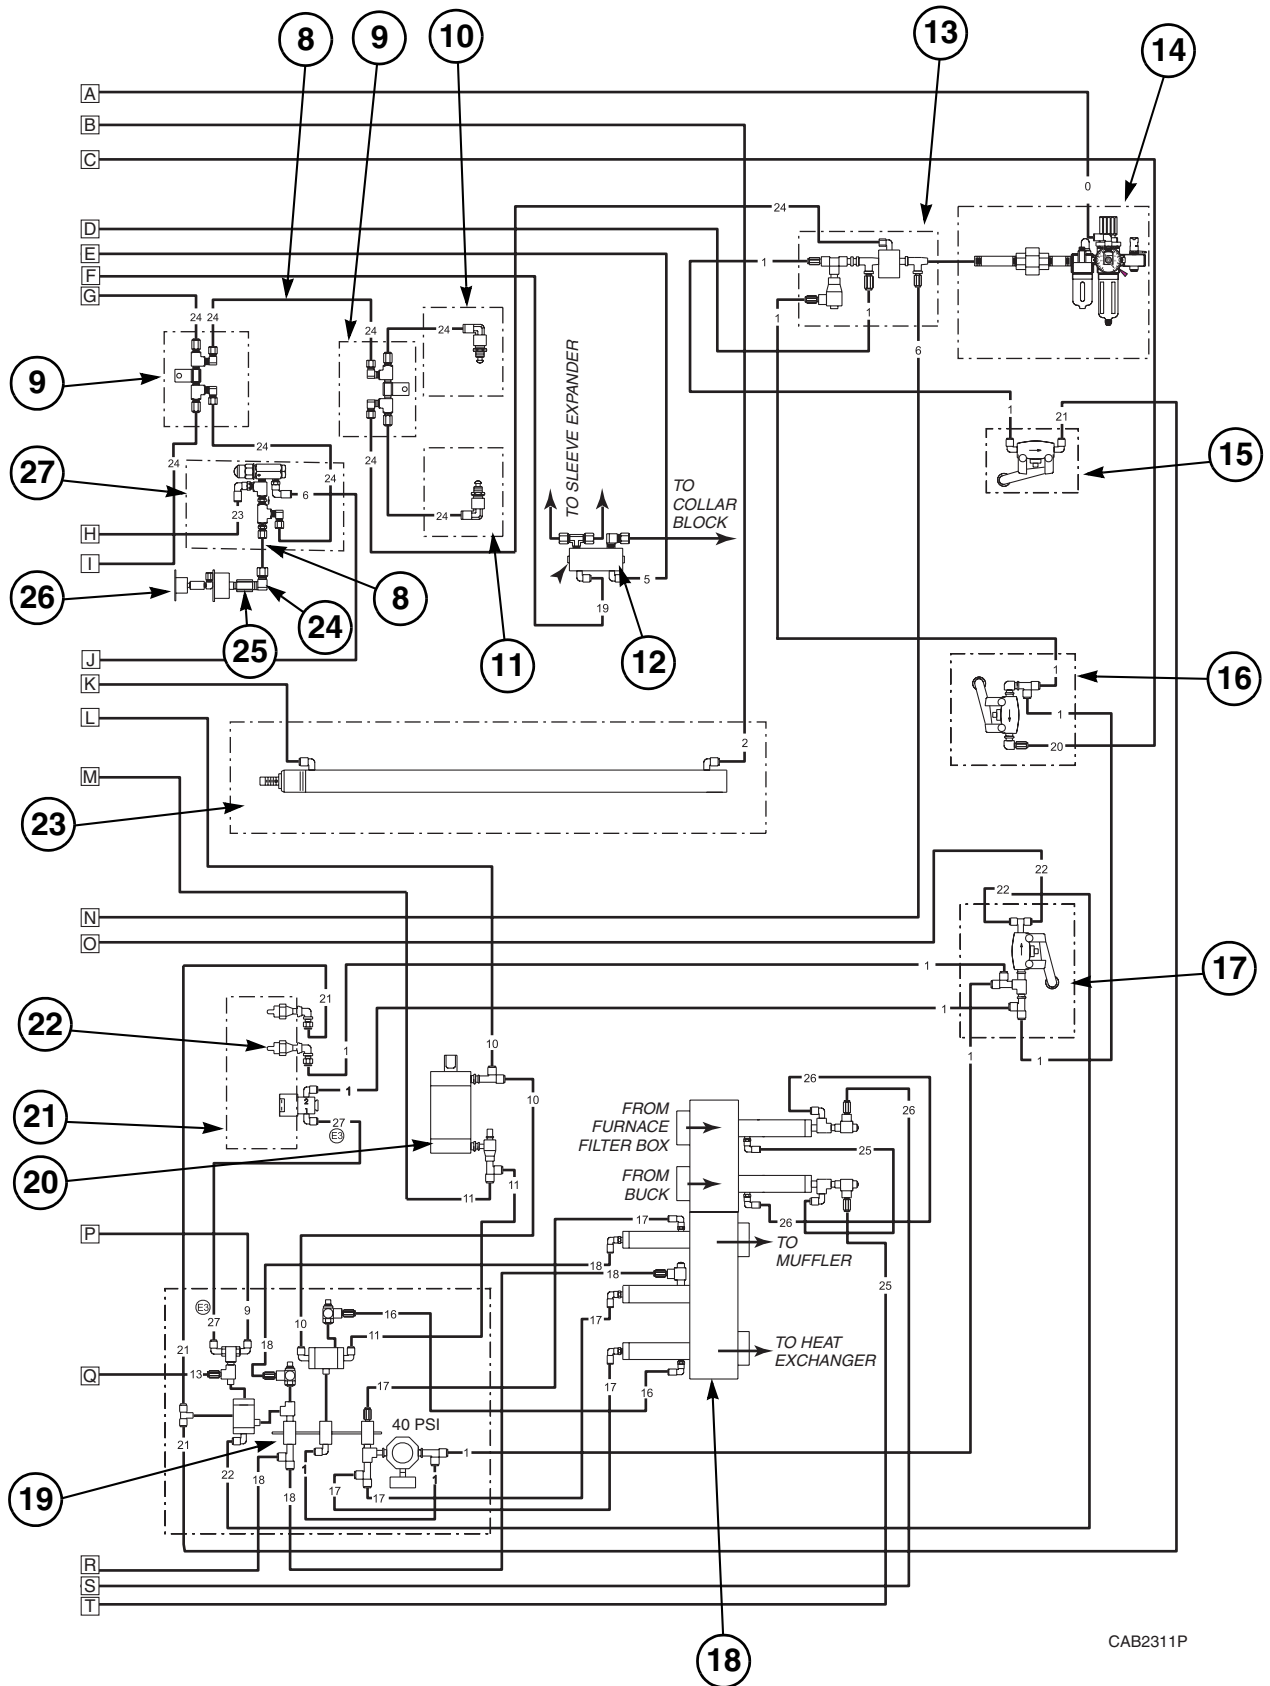

CAB2311P

Air System (Drawing 5 of 8)

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1525211	Operating Valve Assembly	Refer to <i>Operating Valve Assembly</i> section for parts breakdown
2	J1571058	Safety Valve Assembly – Rear Left	Refer to <i>Safety Valve Assembly – Rear Left</i> section for parts breakdown
3	J1571041	Safety Valve Assembly – Front Left	Refer to <i>Safety Valve Assembly – Front Left</i> section for parts breakdown
4	J1523976	Roller Valve Assembly	4 required; Refer to <i>Roller Valve Assembly</i> section for parts breakdown
5	J1525203	Operating Control Assembly	Refer to <i>Operating Control Assembly</i> section for parts breakdown
6	J1485010	Collar Block Foot Pedal Base Assembly	Refer to <i>Collar Block Foot Pedal Base Assembly</i> section for parts breakdown
7	J1484682	Pedal Base and Valve Assembly	Refer to <i>Pedal Base and Valve Assembly</i> section for parts breakdown


Air System (Drawing 6 of 8)

REF	PART NO.	DESCRIPTION	COMMENTS
8	J1106699	Tubing	Copper
9	J1523844	Bracket and Fittings Assembly	2 required; Refer to <i>Bracket and Fittings Assembly</i> section for parts breakdown
10	J1521947	Safety Valve Assembly – Rear Right	Refer to <i>Safety Valve Assembly – Rear Right</i> section for parts breakdown
11	J1571041	Safety Valve Assembly – Front Left	Refer to <i>Safety Valve Assembly – Front Left</i> section for parts breakdown
12	J1473156	Air Manifold Assembly	Refer to <i>Air Manifold Assembly</i> section for parts breakdown
13	J1523794	Internal Air Inlet Assembly	Refer to <i>Internal Air Inlet Assembly</i> section for parts breakdown
14	J1484245	External Air Inlet Assembly	Refer to <i>External Air Inlet Assembly</i> section for parts breakdown
15	J1526920	Rear Roller Valve Assembly	Refer to <i>Rear Roller Valve Assembly</i> section for parts breakdown
16	J1531003	Discharge Tube Assembly	Refer to <i>Discharge Tube Assembly</i> section for parts breakdown
17	J1534064	Front Head Open Roller Valve Assembly	Refer to <i>Front Head Open Roller Valve Assembly</i> section for parts breakdown
18	J1523711	Damper Box Assembly	Refer to <i>Damper Box Assembly</i> section for parts breakdown
19	J1525260	Bracket and Fittings Assembly	Refer to <i>Bracket and Fittings Assembly</i> section for parts breakdown
20	J1523984	Head Pressing Cylinder Assembly	Refer to <i>Head Pressing Cylinder Assembly</i> section for parts breakdown
21	N/A	Electrical Control Assembly	Refer to <i>Electrical Control Assembly</i> section for parts breakdown
22	J1364181	Pressure Switch	2 required
23	J1457290P	Indexing Cylinder Assembly	2 required
24	JA-50770	Elbow	
25	J1018571	Coupling	
26	J1531060	Pressure Gauge	0-100 psi
27	J1583103	Reset Valve Assembly	Refer to <i>Reset Valve Assembly</i> section for parts breakdown

N/A = Part no longer available

Air System (Drawing 7 of 8)

 
Model CBBY-X

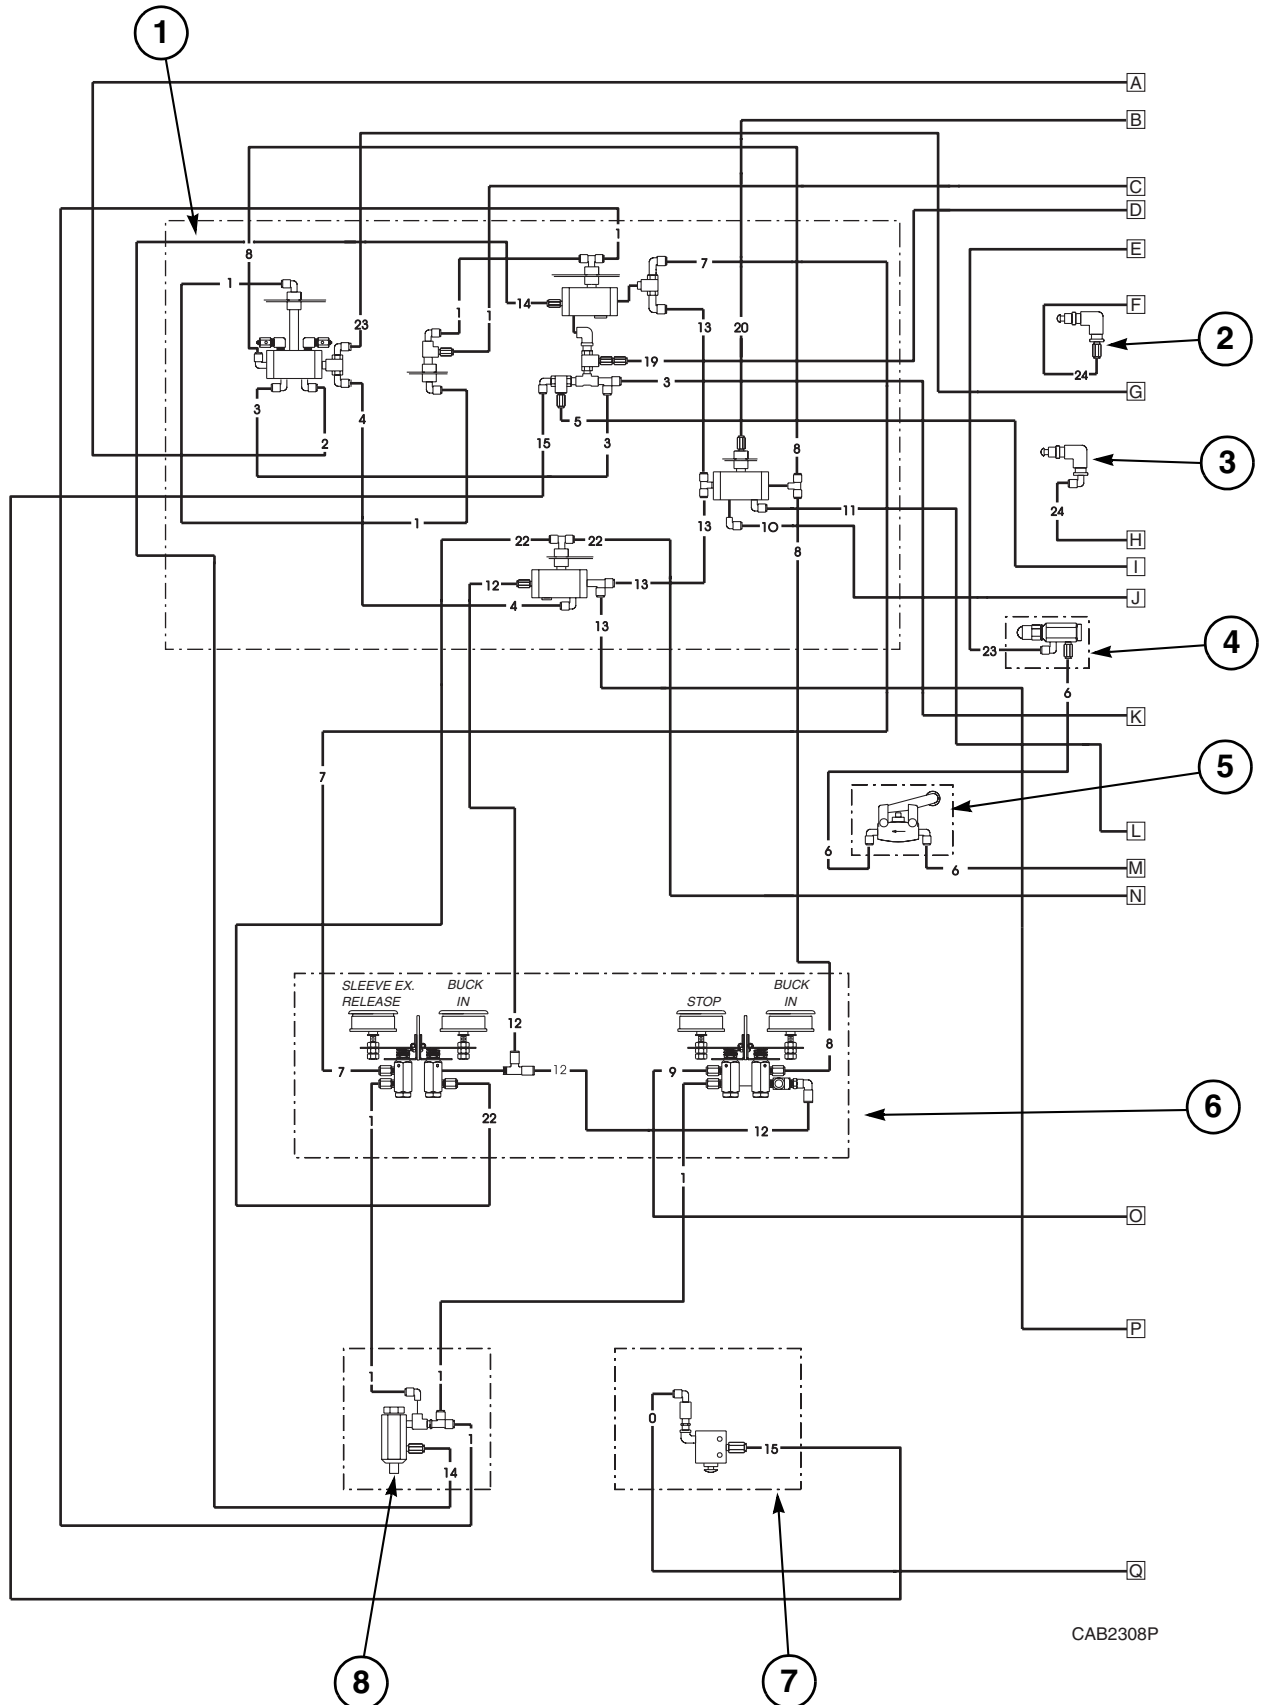

CAB2308P

Air System (Drawing 8 of 8)

 Model CBBY-X

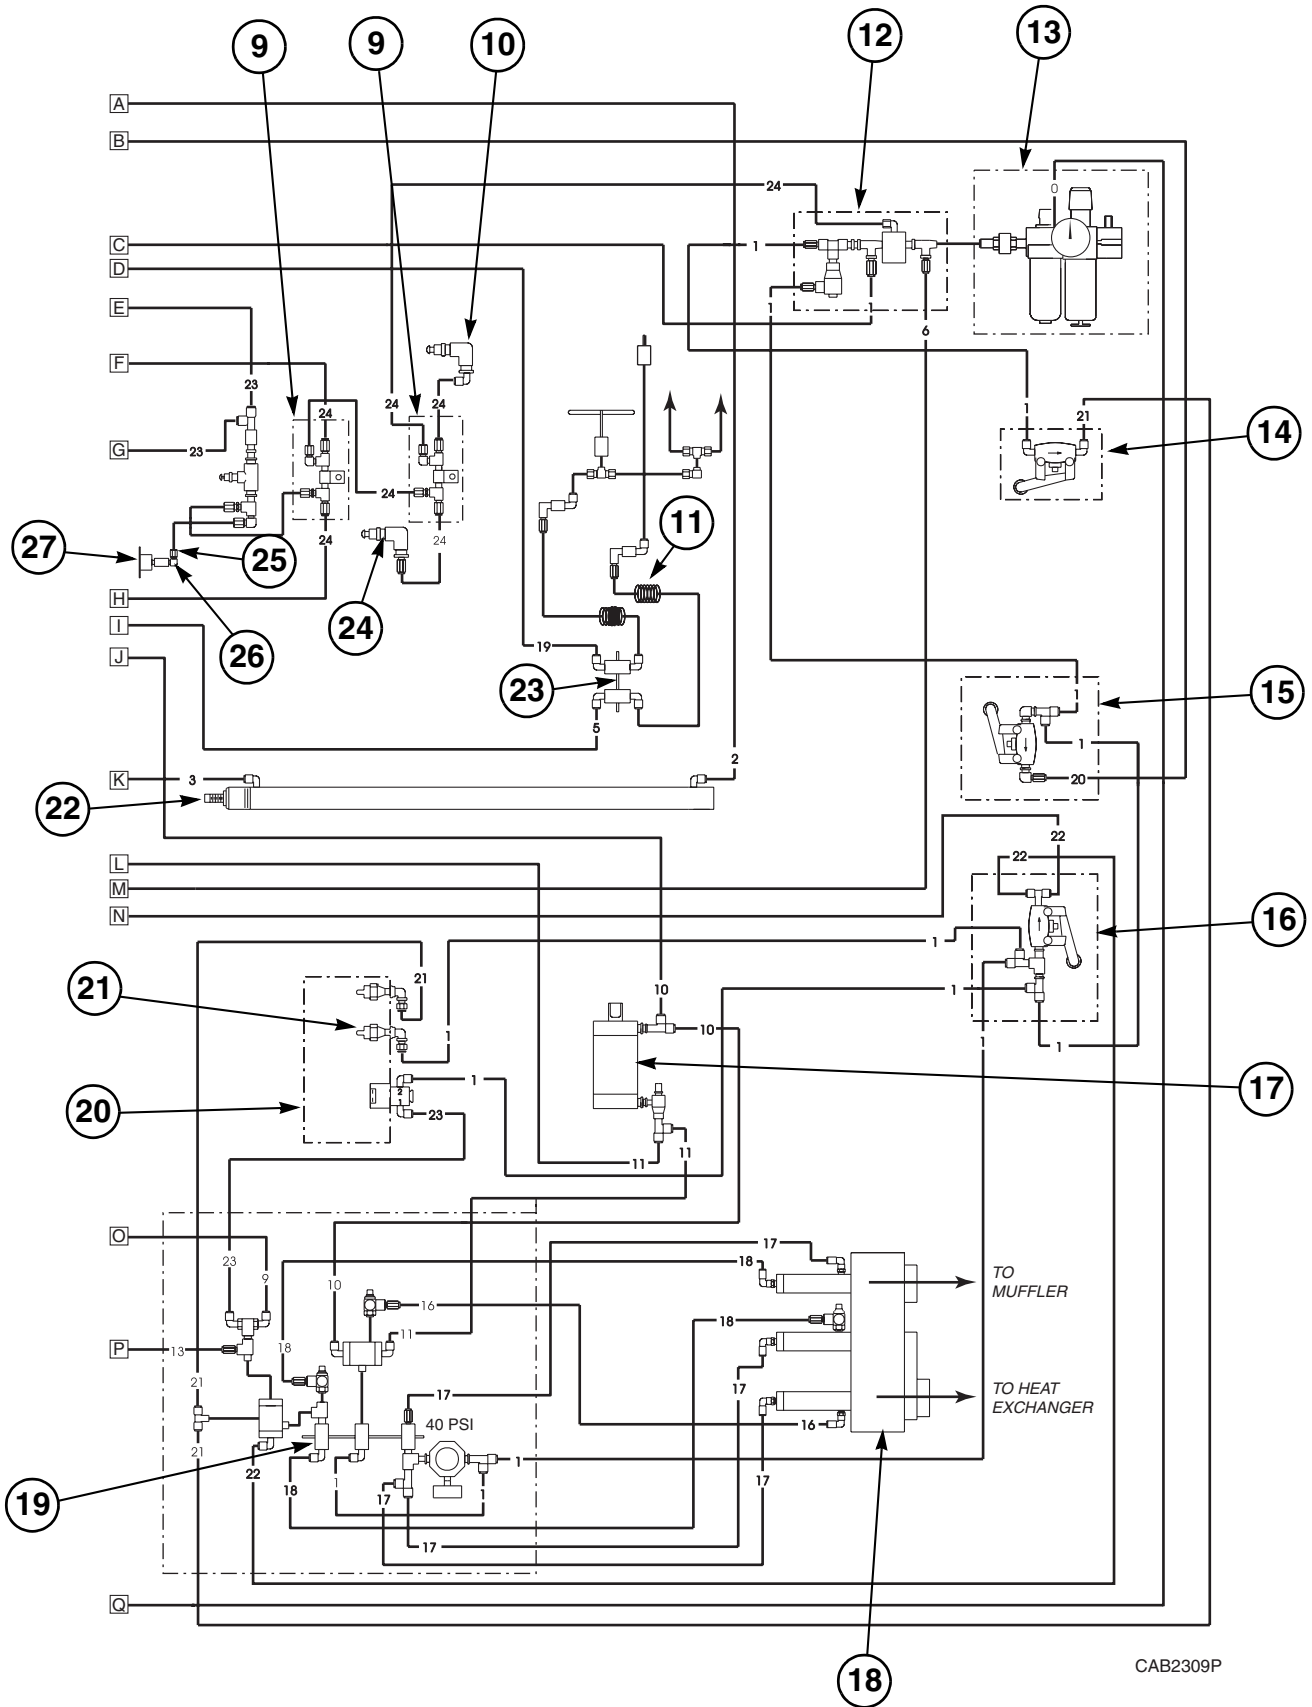

Air System (Drawing 7 of 8)


REF	PART NO.	DESCRIPTION	COMMENTS
1	J1525229	Operating Valve Assembly	Refer to <i>Operating Valve Assembly</i> section for parts breakdown
2	J1571058	Safety Valve Assembly – Rear Left	Refer to <i>Safety Valve Assembly – Rear Left</i> section for parts breakdown
3	J1571041	Safety Valve Assembly – Front Left	Refer to <i>Safety Valve Assembly – Front Left</i> section for parts breakdown
4	J1583103	Reset Valve Assembly	Refer to <i>Reset Valve Assembly</i> section for parts breakdown
5	J1523976	Roller Valve Assembly	4 required; Refer to <i>Roller Valve Assembly</i> section for parts breakdown
6	J1525203	Operating Control Assembly	Refer to <i>Operating Control Assembly</i> section for parts breakdown
7	J1485010	Collar Block Foot Pedal Base Assembly	Refer to <i>Collar Block Foot Pedal Base Assembly</i> section for parts breakdown
8	J1484682	Pedal Base and Valve Assembly	Refer to <i>Pedal Base and Valve Assembly</i> section for parts breakdown

Air System (Drawing 8 of 8)

REF	PART NO.	DESCRIPTION	COMMENTS
9	J1523844	Bracket and Fittings Assembly	2 required; Refer to <i>Bracket and Fittings Assembly</i> section for parts breakdown
10	J1521947	Safety Valve Assembly – Rear Right	Refer to <i>Safety Valve Assembly – Rear Right</i> section for parts breakdown
11	J1492693	Tubing	
12	J1523794	Internal Air Inlet Assembly	Refer to <i>Internal Air Inlet Assembly</i> section for parts breakdown
13	J1484245	External Air Inlet Assembly	Refer to <i>External Air Inlet Assembly</i> section for parts breakdown
14	J1526920	Rear Roller Valve Assembly	Refer to <i>Rear Roller Valve Assembly</i> section for parts breakdown
15	J1531003	Discharge Tube Assembly	Refer to <i>Discharge Tube Assembly</i> section for parts breakdown
16	J1534064	Front Head Open Roller Valve Assembly	Refer to <i>Front Head Open Roller Valve Assembly</i> section for parts breakdown
17	J1523984	Head Pressing Cylinder Assembly	Refer to <i>Head Pressing Cylinder Assembly</i> section for parts breakdown
18	J1522440	Damper Box Assembly	Refer to <i>Damper Box Assembly</i> section for parts breakdown
19	J1525260	Bracket and Fittings Assembly	Refer to <i>Bracket and Fittings Assembly</i> section for parts breakdown
20	N/A	Electrical Control Assembly	Refer to <i>Electrical Control Assembly</i> section for parts breakdown
21	J1364181	Pressure Switch	2 required
22	J1457290P	Indexing Cylinder Assembly	2 required
23	J1488824	Bracket and Fittings Assembly	
24	J1521954	Safety Valve Assembly – Front Right	Refer to <i>Safety Valve Assembly – Front Right</i> section for parts breakdown
25	JA-50770	Elbow	
26	J1018571	Coupling	
27	J1531060	Pressure Gauge	0-100 psi

N/A = Part no longer available

 Roller Valve Assembly

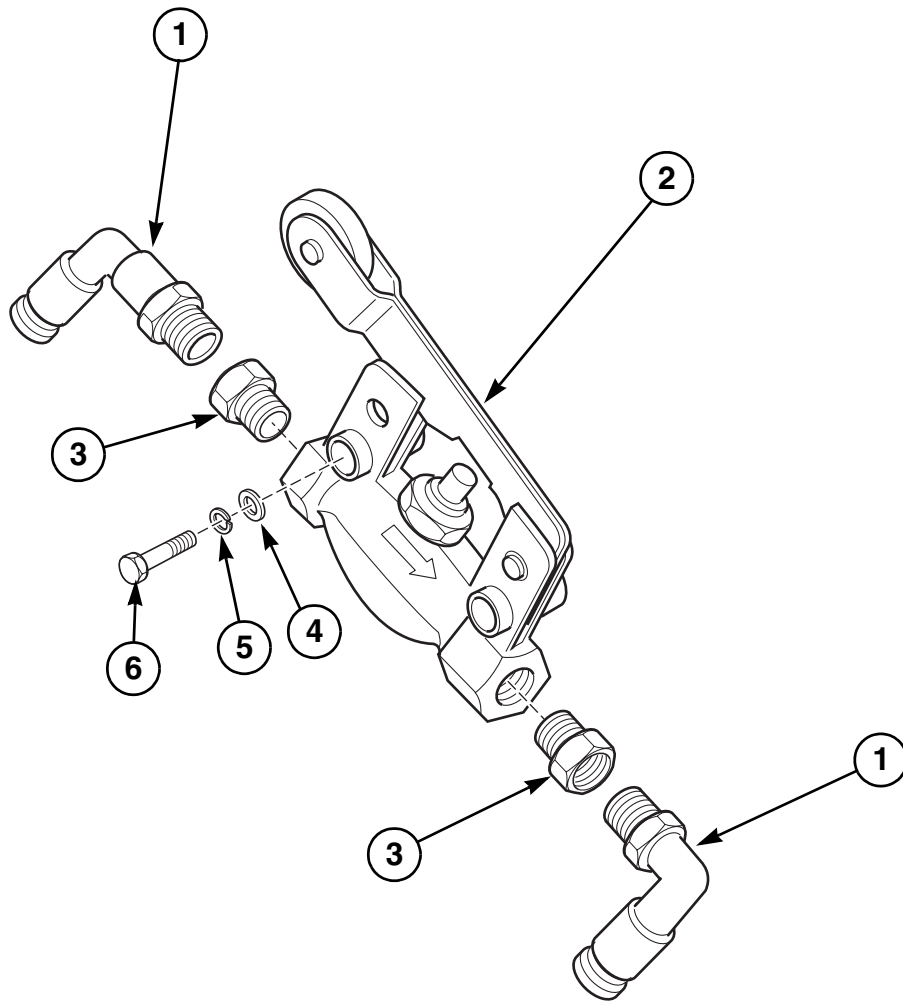


CAB426P

Roller Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1523976	Roller Valve Assembly	Includes items 1-3
1	J1407741	Elbow	2 required
2	JA-53892	Roller Valve	3-way
3	JC-19609	Bushing	2 required
4	JC-80513	Washer	2 required
5	J1185073	Washer	2 required
6	JC-63116	Screw	2 required

Bracket and Fittings Assembly (Drawing 1 of 6)

 Model DFB-X

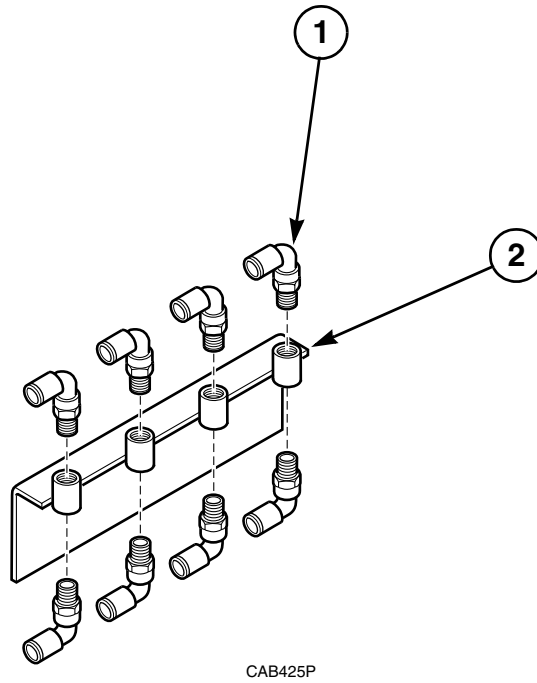


Bracket and Fittings Assembly (Drawing 1 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1531755	Bracket and Fittings Assembly	Includes item 1 and 2
1	J1407741	Elbow	
2	J1523877	Manifold Weldment	8 required; 4 coupling

Bracket and Fittings Assembly (Drawing 2 of 6)

 Model DFB-XV

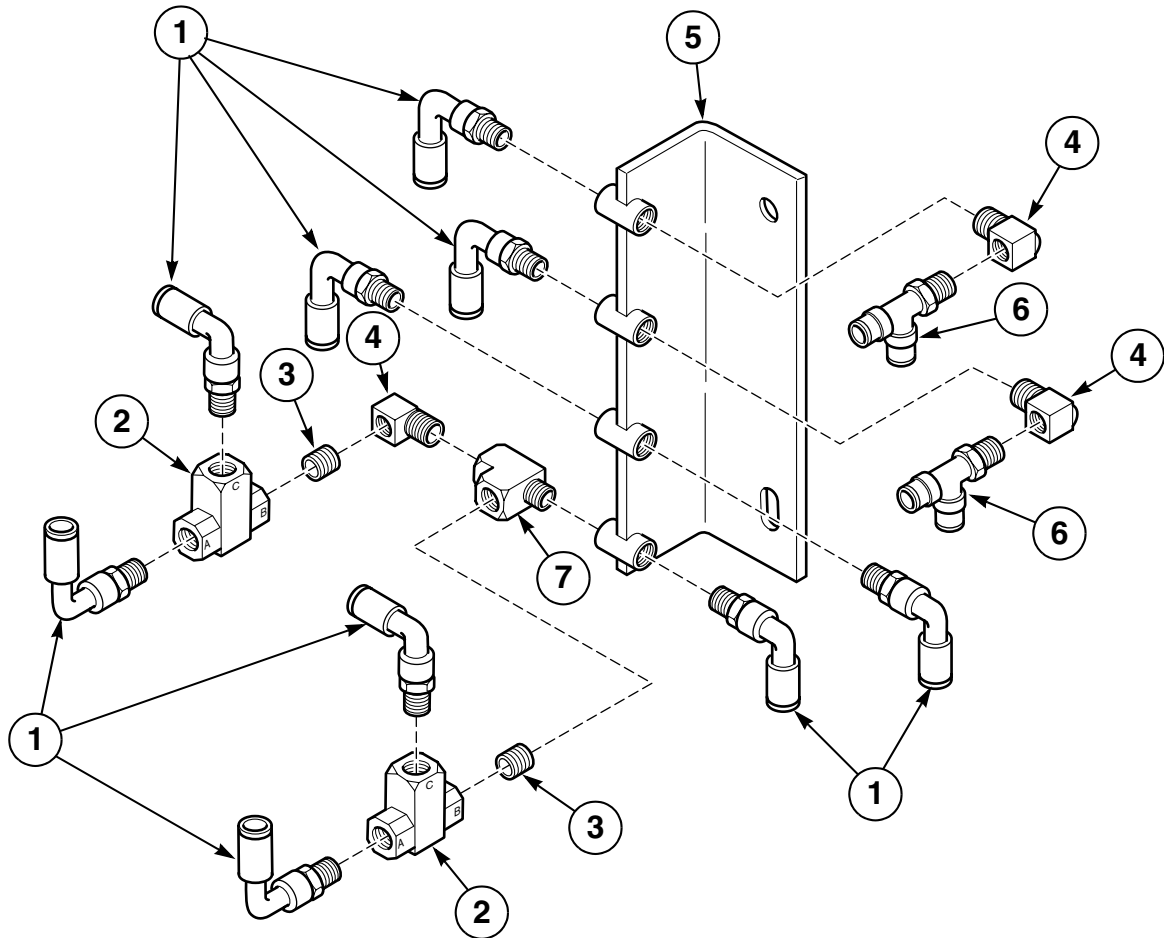


CAB2113P

Bracket and Fittings Assembly (Drawing 2 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525252	Bracket and Fittings Assembly	Includes items 1-7
1	J1407741	Elbow	9 required
2	JA-53602	Shuttle Valve	2 required
3	J1232313	Nipple	2 required
4	JC-28317	Elbow	3 required
5	J1523877	Manifold Weldment	
6	J1438357	Tee	2 required
7	JC-30541	Tee	

Bracket and Fittings Assembly (Drawing 3 of 6)

 Model DFB-XV

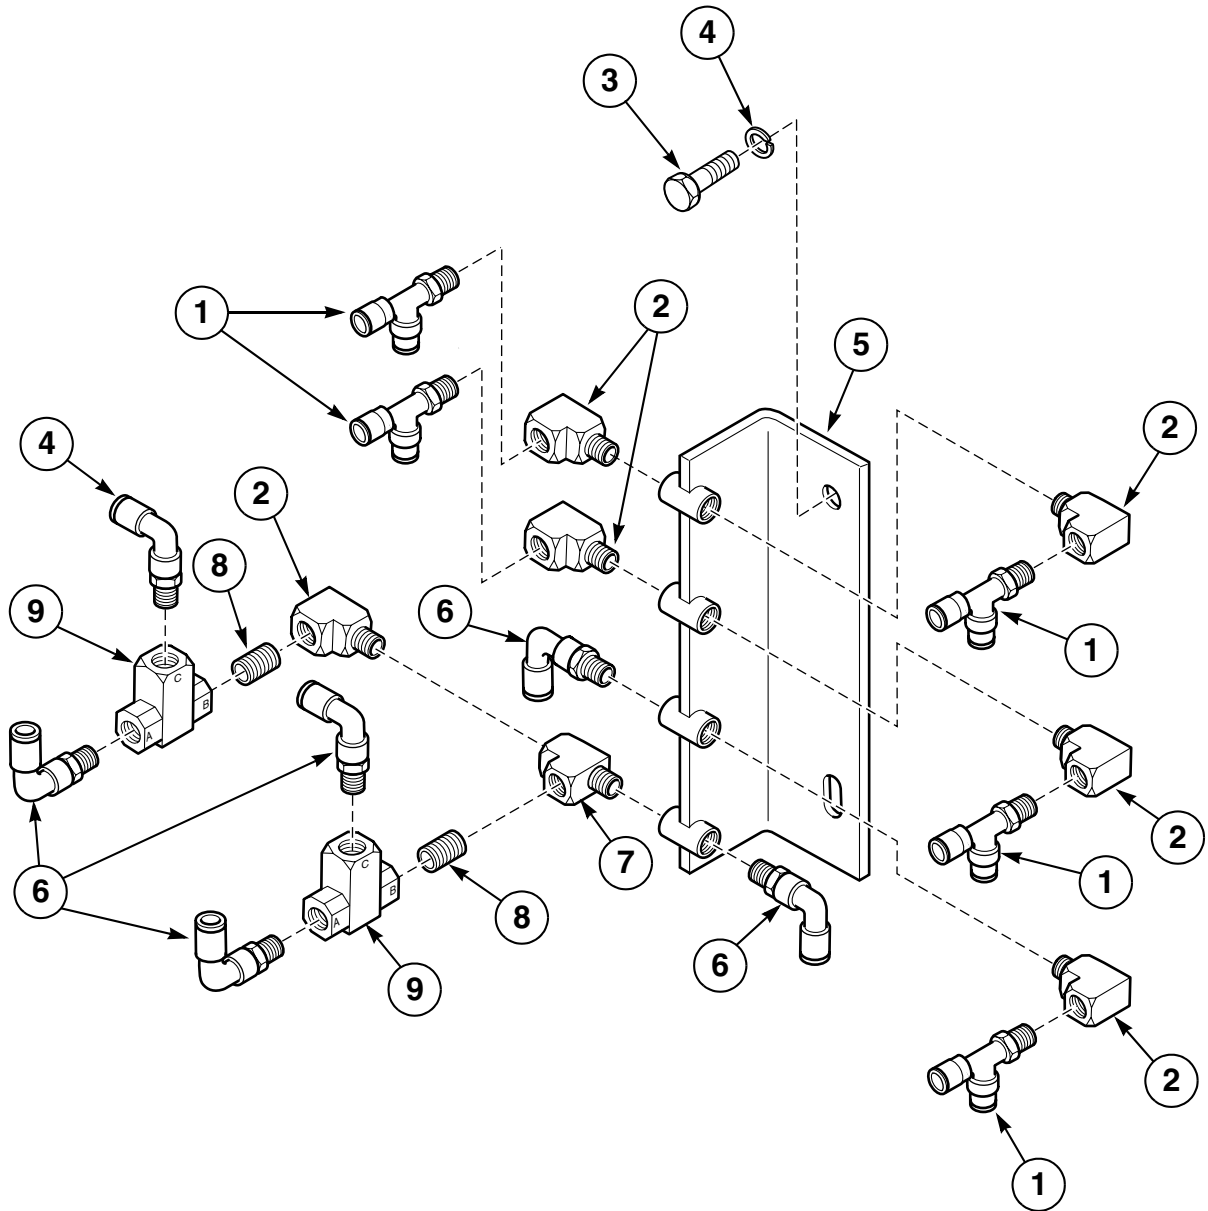


CAB2304P

Bracket and Fittings Assembly (Drawing 3 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1523885	Bracket and Fittings Assembly	Includes items 1, 2 and 5-9
1	J1438357	Tee	5 required
2	JC-28317	Elbow	6 required
3	J1238518	Screw	2 required
4	J1185073	Washer	2 required
5	J1523877	Manifold Weldment	
6	J1407741	Elbow	6 required
7	JC-30541	Tee	
8	J1232313	Nipple	2 required
9	JA-53602	Shuttle Valve	2 required

 Bracket and Fittings Assembly (Drawing 4 of 6)

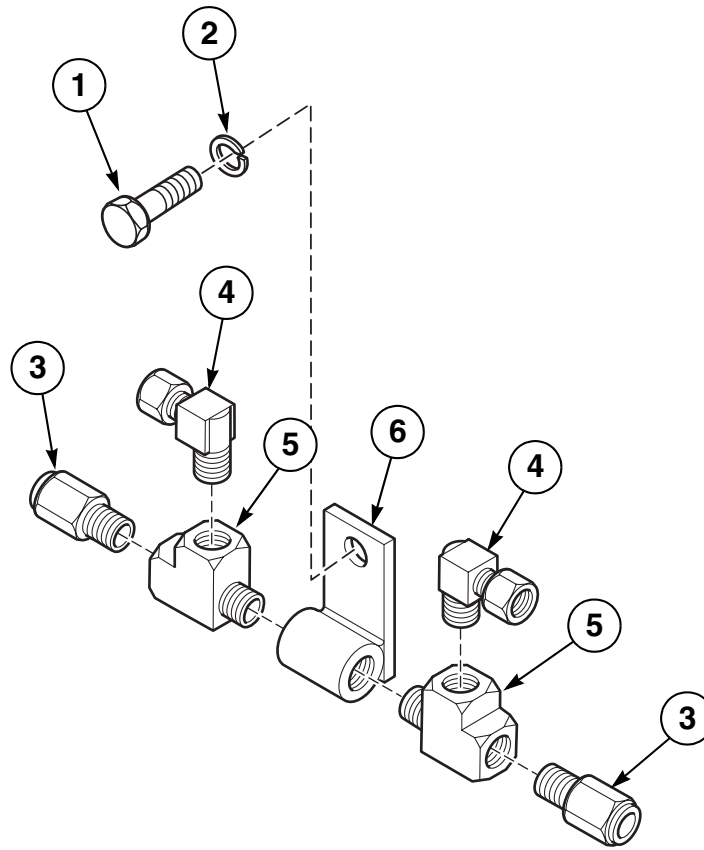


CAB2303P

Bracket and Fittings Assembly (Drawing 4 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1523844	Bracket and Fittings Assembly	Includes items 2-6
1	J1238518	Screw	
2	J1185073	Washer	
3	F422101	Connector	2 required
4	JA-50770	Elbow	2 required
5	JC-30541	Tee	2 required
6	J1523828	Bracket Weldment	

Bracket and Fittings Assembly (Drawing 5 of 6)

 Models DFB-X and DFB-XV

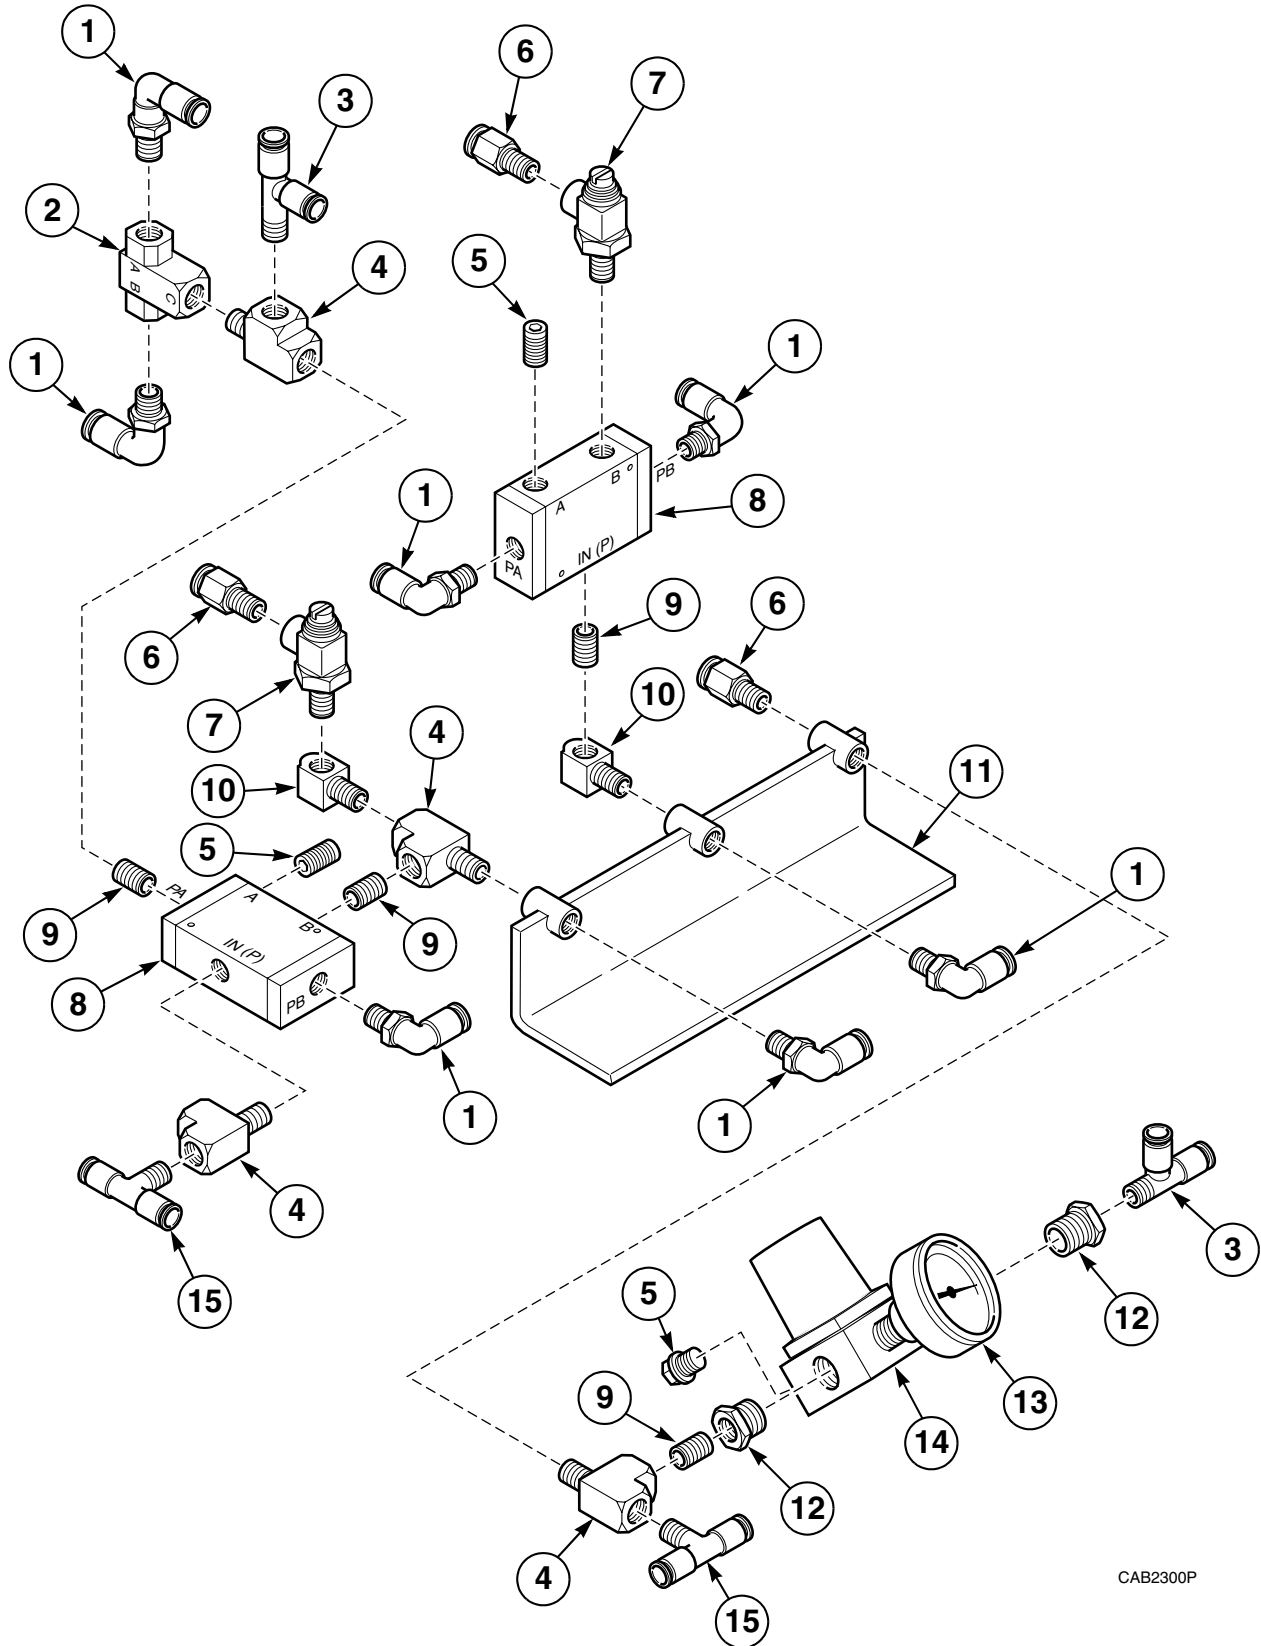


CAB2300P

Bracket and Fittings Assembly (Drawing 5 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1531839	Bracket and Fittings Assembly	3 coupling; Includes items 1-15
1	J1407741	Elbow	7 required
2	JA-53602	Shuttle Valve	
3	J1438357	Tee	2 required
4	JC-30541	Tee	4 required
5	J1039858	Plug	3 required
6	F422101	Connector	3 required
7	J1455781	Flow Control Valve	2 required
8	J1548783	Valve	4-way; Double pilot; 2 required
9	J1232313	Nipple	4 required
10	JC-28317	Elbow	2 required
11	J1523802	Manifold Weldment	Left; 3 coupling
12	JC-19609	Bushing	2 required
13	J1477959	Pressure Gauge	0-160 psig
14	J1421981	Regulator	
15	J1437029	Tee	2 required

Bracket and Fittings Assembly (Drawing 6 of 6)

 Models CBBY-X and CBBY-XV

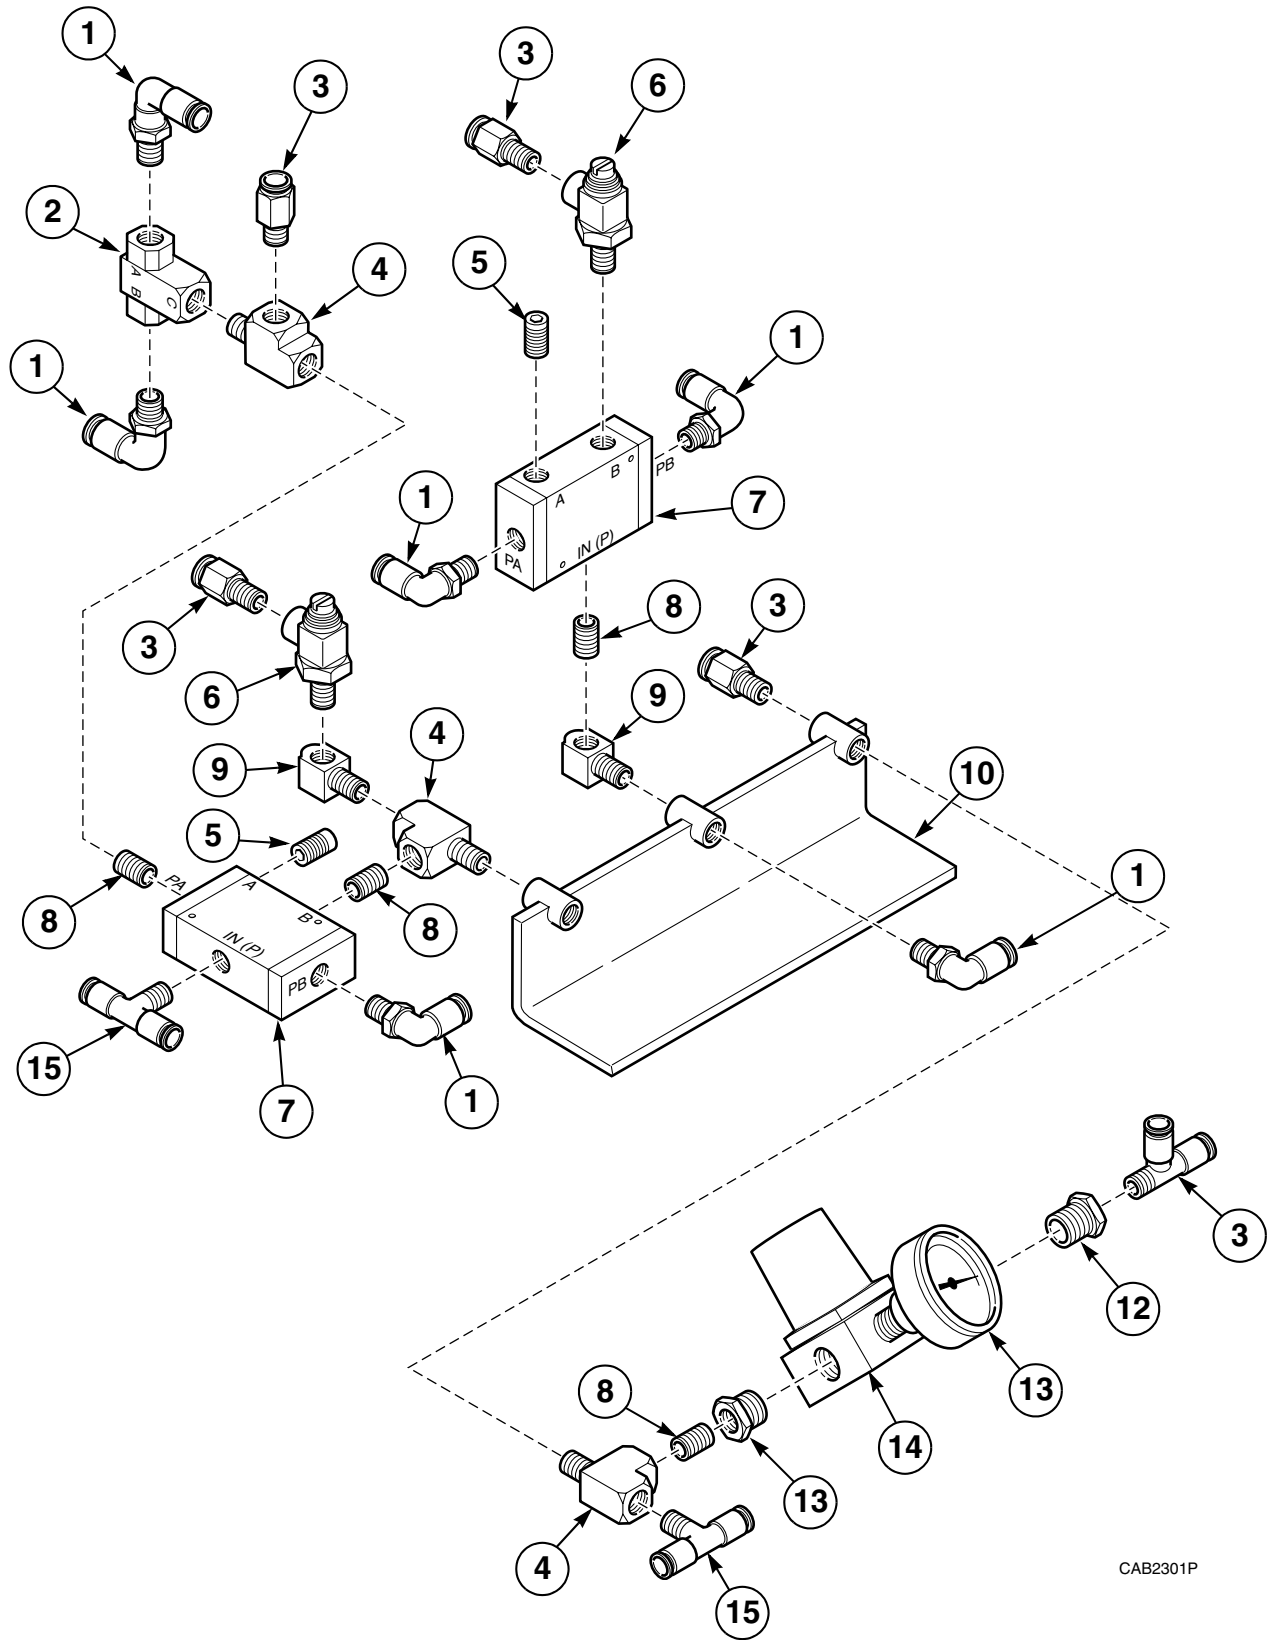


CAB2301P

Bracket and Fittings Assembly (Drawing 6 of 6)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525260	Bracket and Fittings Assembly	3 coupling; Includes items 1-15
1	J1407741	Elbow	6 required
2	JA-53602	Shuttle Valve	
3	F422101	Connector	4 required
4	JC-30541	Tee	3 required
5	J1039858	Plug	2 required
6	J1455781	Flow Control Valve	2 required
7	J1548783	Valve	4-way; 2 required
8	J1232313	Nipple	4 required
9	JC-28317	Elbow	2 required
10	J1523802	Manifold Weldment	Left; 3 coupling
11	J1438357	Tee	
12	JC-19609	Bushing	2 required
13	J1477959	Pressure Gauge	0-160 psig
14	J1421981	Regulator	
15	J1437029	Tee	2 required

 Electrical Parts and Conduit

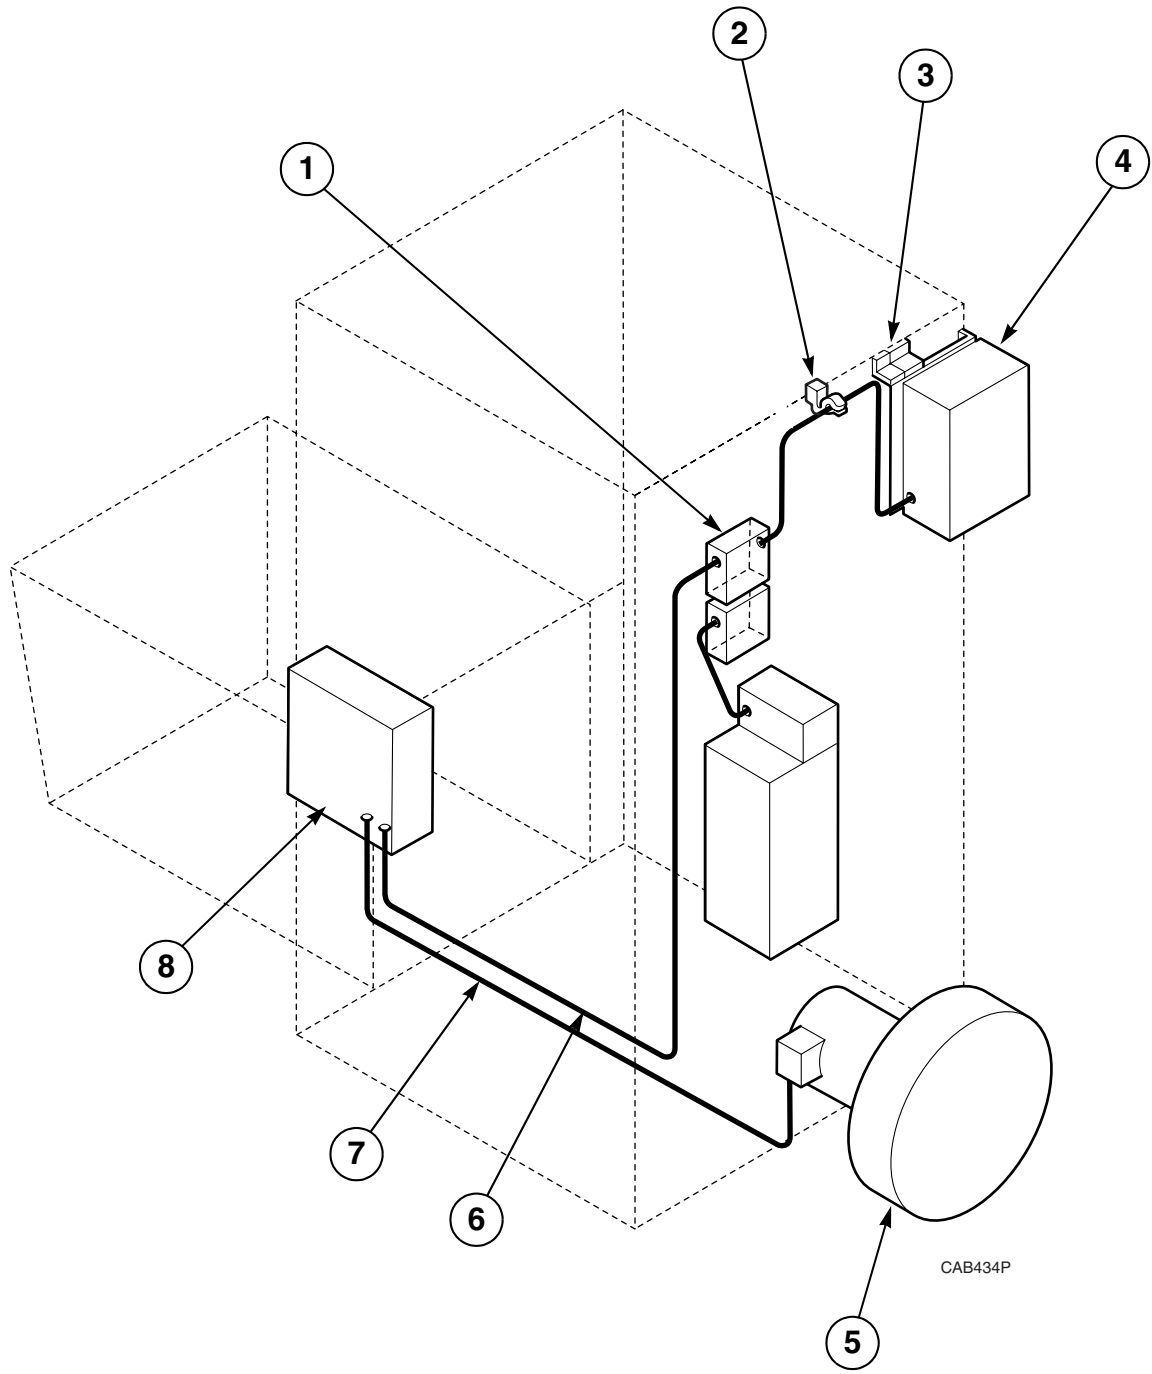

Electrical Parts and Conduit

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1531094	Thermostat Assembly	Refer to <i>Thermostat Assembly</i> section for parts breakdown
2	J1235696	Clamp	
3	J1441955	Bracket	460/575 Volt
	J1441963	Bracket	380/415 Volt
4	JC-72982	Transformer	460 Volt
	N/A	Transformer	575 Volt
	J1142090	Transformer	380-415 Volt
5	J1567775	Blower	200 Volt/3 Phase/50 Hertz
	J0220243-00	Blower	220-480 Volt/3 Phase/50/60 Hertz
	J1567767	Blower	575 Volt/3 Phase/60 Hertz
6	J1531680	Conduit Assembly	Control box to thermostat
7	J1531672	Conduit Assembly	Control box to motor
8	J1547041	Control Box Assembly	200-240 Volt/3 Phase/50/60 Hertz
	J1547058	Control Box Assembly	460 Volt/3 Phase/60 Hertz
	N/A	Control Box Assembly	575 Volt/3 Phase/60 Hertz
	J1547074	Control Box Assembly	380-415 Volt/3 Phase/50 Hertz

N/A = Part no longer available

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Parts Index

A

Access Panel Cover Weldment	
J1520360	135
J1541895	135
Access Panel Weldment	
J1520345	135
Actuating Pad	
JA-26238	51
Adjusting Rod	
JA-22574	19
Air Bag Tube Assembly	
JA-80328	33
JA-80329	33
Air Cylinder	
J1390806	61
J1437060	63, 67
Air Filter	
JA-53679	145, 149, 153
Air Gauge	
JA-51283	77, 145, 149, 153
Air Manifold Assembly	
J1473156	9, 11, 165
Arm	
JA-23720	43
Auxillary Contact	
JC-25008	127
Axle	
J1484401	41

B

Ball Check Valve	
J1142504	49
Ball Pin	
JA-22639	53
Ball Seat	
JA-10341	53
Bearing	
JA-11763	21
JA-50897	19, 21
JA-50909	19
JA-50964	19, 21
JA-51056	19
JA-51070	23
JA-51326	23
JA-53768	21
Bleeder Valve	
JA-53893	47, 83, 85, 87, 89, 91
Blower	
J0220243-00	145, 149, 153, 185
J1567767	145, 149, 153, 185
J1567775	145, 149, 153, 185
Bracket	
J1381599	7, 13
J1438431	25
J1441955	185
J1441963	185
J1548429	143

Bracket and Fittings Assembly	
J1488824	169
J1523844	156, 160, 165, 169, 179
J1523885	157, 177
J1525252	161, 175
J1525260	165, 169, 183
J1531755	173
J1531839	157, 161, 181
Bracket Assembly	
JA-00546	99, 101, 103, 105, 107
JA-05025	23
Bracket Weldment	
J1523828	179
Buck and Cover Assembly	
J1473529	27
J1473537	27
J1494293	27
J1494301	27
J1533900	31
J1533942	31
Buck Plate Weldment	
J1470293	29
J1494194	29
J1494202	29
Buck Stop Bumper	
JA-23959	141
Bulkhead Fitting	
J1482389	111, 115, 119
J1540731	131
J1598911	111, 113, 115, 117, 119, 121
Bumper	
JA-56790	141
Bushing	
J1066919	133
J1232990	133
J1468347	71
J1473776	35
J1473792	35
JA-12024	19
JC-19609	25, 53, 59, 77, 83, 171, 181, 183
JC-19662	71
JC-19682	53, 75

C

Cam	
J1444090	19
JA-23921	7, 9, 11, 13
Cam Clevis Assembly	
JA-08752	19
Cam Clevis Pin	
JA-12257	19
Cam Guide Pin	
JA-22681	19
Cam Roller Guide	
JA-08829	19
JA-12017	19
Carriage Sub-Assembly	
J1435247	15
Check Valve	
JA-54042	49, 83

N/A items do not appear in index.

Clamp		JC-30857	69, 71
J1235696	185	JC-31374	73, 131
J1244623	133	Contactor	
JA-22812	41, 43	JC-57855	127
JC-21522	147, 151	Control Box Assembly	
JC-21541	145, 147, 151, 153	J1547041	125, 185
Clevis		J1547058	125, 185
J1484419	45	J1547074	125, 185
Clip		Control Box Cover	
J1187889	29, 33	J1518026	129
JA-17207	7, 13	Control Console Weldment	
Coil Mounting Bar		J1520931	95, 97
JA-12279	69	Control Panel Cover	
Collar Block		J1520436	135
JA-24340	41, 43	Cotter Pin	
Collar Block Arm Assembly		JA-50497	77
J1624774	41	Counter	
Collar Block Assembly		J1530765	129
J1484294	41	Coupling	
JA-08877	43	J1007442	69
Collar Block Cylinder		J1018571	49, 57, 83, 156, 160, 165, 169
J1484260	45	J1398445	61, 63, 65, 67
Collar Block Cylinder Assembly		J1531821	63, 65, 67
J1504018	41, 45	Cover	
Collar Block Foot Pedal Base Assembly		J1520295	135
J1485010	156, 160, 164, 168	J1520329	135
Collar Block Foot Pedal Valve Assembly		J1520378	135
J1485010	49	J1520386	135
Collar Clip Adapter		J1520402	135
JA-24476	47	J1520410	135
Collar Housing Weldment		JA-22938	135
J1484344	41	Cover and Bag Assembly	
Collar Tube Assembly		J1473404	27, 31
JA-09174	41, 43	J1494251	27, 31
Collar Valve Assembly		Cover Weldment	
JA-09786	43, 47	J1523026	135
Collar Valve Housing		J1534056	135
JA-22817	43	Cylinder and Carriage Tubing Assembly	
Common Timer Circuit Board Kit		J1484609	7, 13
J200050400	129	Cylinder Mounting Pin	
Compression Spring		JA-22763	77
J1144732	19	Cylinder Pivot	
JA-50447	99, 101, 103, 105, 107	J1536390	53
JA-52466	51	Cylinder Repair Kit	
Condenser Coil		J1457308	141
J1471234	69	J1537398	45
Condenser Flow Control		Cylinder Support	
JA-09231	69	JA-24692	77
Conduit			
J1108497	133		
Conduit Assembly			
J1531672	185		
J1531680	185		
Connector			
F422101 ... 7, 13, 15, 37, 49, 59, 63, 77, 99, 101, 103, 105, 113, 117, 121, 123, 143, 179, 181, 183			
J1075175	33, 85, 87		
J1086115	133		
J1151661	35, 83		
J1161272	73		
J1319276	21, 73		
J1408020	59, 111, 115, 119		
J1416759	7, 13		
J1463835-00	59, 85, 87		
JA-50765	73		

D

Damper Box Assembly		J1521079	65, 149, 157
J1522440	67, 153, 161, 169	J1523711	63, 145, 165
Damper Box Cover		J1521020	63, 65
J1521038	65	J1523604	63
Damper Box Weldment		J1479492	61
J1522424	67		
Decal		JA-22464	137

N/A items do not appear in index.

Decals	
JA-86858	133
Discharge Tube	
JA-23305	77
Discharge Tube Assembly	
J1523927	77, 149, 153, 157, 161
J1531003	77, 145, 165, 169
Discharge Tube Channel Weldment	
JA-09212	77
Door Panel Assembly	
J1440593	135
Dowel Pin	
JA-54204	43
Duct Tape	
J0440160-00	131
Dump Valve	
JA-53550	59

E

Eccentric	
JA-11762	21
Eccentric Quadrant	
JA-11761	21
Elbow	
J1084011	69, 73
J1188192	85, 87
J1231422	69, 75
J1231521	21, 77
J1381623	49
J1398288	125
J1407741	9, 11, 15, 25, 37, 49, 55, 59, 61, 63, 65, 67, 101, 107, 109, 111, 113, 115, 117, 119, 121, 123, 143, 171, 173, 175, 177, 181, 183
J1419811	111, 115, 119
J1571025	89, 91
JA-50635	69
JA-50770	9, 11, 41, 43, 57, 83, 156, 160, 165, 169, 179
JA-51007	73
JC-23817	111
JC-28235	125
JC-28237	21, 75
JC-28268	145, 149, 153
JC-28317	63, 65, 67, 77, 115, 117, 119, 121, 175, 177, 181, 183
JC-30211	73
JC-30454	69
JC-30719	75
Elbow and Connector Assembly	
JA-09836	33
Elbow and Tee Assembly	
JA-09835	33
Electric Box	
JC-18268	133
External Air Inlet Assembly	
J1484245	55, 157, 161, 165, 169

F

Filter Box Adapter Weldment	
J1475425	145

Filter Box Damper Assembly	
J1479484	61, 149, 157
Filter Box Weldment	
J1439025	153
J1475409	145, 149
Filter Housing Assembly	
J1475169	145, 149
Filter/Regulator	
J1557487	55
Filter/Regulator Auto Drain Kit	
J1637644	55
Filter/Regulator Maintenance Kit	
J1637636	55
Filter/Regulator/Lubricator Assembly	
J1557479	55
Fitting	
JA-24122	131
JA-54426	15
Flaminel Padding Assembly	
J1473412	27
J1494244	27
Flamonel Padding Assembly	
JA-09164	31
JA-09476	31
Flat Roller	
JA-09186	15
Flow Control	
J0380121-00	61
Flow Control Valve	
J1455781	63, 65, 67, 181, 183
J1548403	111, 115, 119
Front Carriage Weldment	
JA-09243	15
Front Head Adjusting Rod	
JA-22686	23
Front Head Adjusting Rod Assembly	
JA-08727	23
Front Head Open Roller Valve Assembly	
J1523935	25, 157, 161
J1534064	165, 169
Front Indexing Cylinder Support Plate	
J1612944	141
Front Swivel Bracket Assembly	
J1488816	15
Front Vacuum Inlet Box Weldment	
J1479542	145, 149
Fuse	
J1234665	127
J1235944	127
J1408780	127
J1422930	127
J1477496	127
J1545417	127
JC-31691	127
Fuse Block	
J1081710	127
J1235142	127
Fuseholder	
J1401884	127

N/A items do not appear in index.

G

Gasket	
J1471531	77
J1521004	63, 65
J1531763	67
J1540814	131
J1546118	79, 81
JA-23801	131
JA-51527	21, 145, 149, 153
Grommet	
J1591304	95, 97
J1591320	95, 97
J1591346	95
Ground Lug	
J1189125	127, 133

H

Handle	
J1240985	135
Hanger Pin	
JA-22505	21
Head Adjusting Clevis	
JA-08707	23
Head Cabinet Guard	
J0637775-00	135
Head Hanger Actuating Assembly	
JA-08711	21
Head Mounting Safety Bar Bracket	
J1521962	79, 81
Head Pressing Cylinder	
J1523562	53
Head Pressing Cylinder Assembly	
J1523984	53, 161, 165, 169
Head Pressing Cylinder Repair Kit	
J1537406	53
Head Safety Bar Assembly	
J1522903	79, 81, 93
Heat Exchanger Assembly	
J1525237	131, 145, 149, 153
Heat Exchanger Cover	
J1562818	131
Heat Exchanger Housing Weldment	
J1538750	131
Heater Element	
JA-53883	131
Hook	
J1410901	139
JA-51665	145, 149
Hose	
J1394782	147, 151, 153
J1439140	147
J1439140P	151, 153
J1439141	147
J1439157	147
J1439157P	151, 153
J1471671	147, 151, 153
J1476175	147
J1476175P	151
J1564178	147, 151
JM-96005	147, 151, 153

Hose Clamp	
20391	147
J1153865	33
J1156967	147, 151, 153
JA-50960	151, 153

I

Indexing Cylinder Assembly	
J1457290P	141, 157, 161, 165, 169
Indexing Cylinder Support Nylon	
J1611987	141
Indexing Cylinder Support Plate	
J1612936	141
Indexing Cylinder Suspension Kit	
J1010-000745	141
J1010-000746	141
Insert Assembly	
JA-09244	41, 43
Insulation	
J1531698	125
J1540749	131
Internal Air Inlet Assembly	
J1523794	59, 157, 161, 165, 169

K

Kapseal	
JA-54045	47
JA-54046	47
Key	
JA-04749	7, 13
Knob	
JA-56916	133
JE-66022	129

L

Label	
J10-607	127, 133
J1162718	137
J1326156	137
J1411313	137
J1411339	137
J1411925	137
J1450931	137
J1472208	137
J1524719	137
J1547553	137
J1547561	137
J1547579	137
J1547587	137
J1556471	137
JA-17840	137
JA-17841	137
JA-17842	137
JA-18289	137
JA-18602	137
JA-18606	137
JA-18833	137
JA-24370	137
JA-24671	137
JA-24822	137

N/A items do not appear in index.

Lamp	
JST-163-2	129
Latch	
J1614809	135
Locking Ring	
JA-17705	95, 97
Lock-Out Valve	
J1557503	55
Lower Clevis Assembly	
JA-08708	19
Lubricant	
J1490598	139
Lubricator	
J1557495	55
Lubricator Bowl	
J1647536	55
Lubricator Maintenance Kit	
J1637628	55

M

Manifold	
J1618958	9, 11
Manifold Spacer	
JA-24365	75
Manifold Weldment	
J1523802	181, 183
J1523877	173, 175, 177
Mirror	
J1530955	135
Mirror Bracket	
J1528579	135
Motor and Timer Control Box Cover Assembly	
J1531086	129
Mounting Bracket	
J1518091	17
Mounting Bracket Clamp	
JA-24579	29, 33, 43
Mounting Bracket Tee	
JA-23840	75
Muffler	
J1352327	53
J1370691	145, 149, 153

N

Nameplate	
70240801	137
J1312545	137
J1443688	137
Nipple	
431206	71
J1026103	111, 113, 115, 119
J1026335	55
J1026665	73, 75
J115175201	59
J1232313	7, 13, 53, 59, 61, 111, 113, 115, 117, 119, 121, 143, 175, 177, 181, 183
J1236553	75
J1239334	73
J1370543	145, 149, 153
J1370550	145, 149, 153
J1398544	145, 149, 153

JA-51540	69
JC-46062	21
JC-46131	55
JC-46144	69
JC-46337	75
JC-46347	133
JC-46349	69

Nipple Weldment	
J1438993	145, 149, 153

Nut	
02788	129
20274	15, 77, 141
20275	25, 29, 51, 77, 79, 81, 93, 125, 135, 141
70142	51, 79, 81, 95, 97, 135, 141
F431004	79, 81
J1000736	43, 69, 95, 97, 145, 149
J1000769	25
J1000850	77, 141
J1209113	41
J1210988	133
J1348192	135
JA-12900	99, 101, 103, 105, 107
JA-22687	15
JA-22799	43
JA-50434	53
JA-50438	19
JA-50742	19, 23
JA-51474	37
JC-48125	143
JC-48169	19, 23
JC-48289	63, 65, 67
JC-48312	131
JC-48494	81
M400022	15
M400026	41, 43

O

Operating Arm	
JA-23719	43
Operating Control Assembly	
J1521095	97, 135, 156, 160
J1525203	95, 164, 168
Operating Control Nameplate	
J1516921	129
Operating Valve Assembly	
J1523786	111, 113, 156, 160
J1525211	115, 117, 164
J1525229	119, 121, 168
Orifice	
J1392158	113, 117, 121
O-Ring	
J1403310	39, 123
JA-51744	43
JA-53865	47
JA-53879	47
JC-57441	39

P

Pedal Base	
J1387794	51
Pedal Base and Valve Assembly	
J1484682	37, 164, 168

N/A items do not appear in index.

Pedal Base Assembly	
J1484682	156, 160
J1484930	37, 49, 51
Pedal Bracket	
J1521285	51
JA-25995	51
Pedal Bracket Weldment	
J1387778	51
Pin Ball Flange	
JA-10672	53
Pivot Bracket	
JA-22499	21
Pivot Pin	
JA-22497	21
Plastic Boot	
J1433895	43
Plate	
J1531797	31
J1533843	31
J1643410	47
JA-22982	131
JA-24249	41, 43
Plug	
J1039858	9, 11, 101, 103, 113, 117, 121, 143, 181, 183
J1161421	75
Pressure Gauge	
J1477959	55, 181, 183
J1531060	57, 156, 160, 165, 169
Pressure Switch	
J1364181	125, 157, 161, 165, 169
Primary Steam Inlet Assembly	
J1521723	69, 71
Pushbutton	
M400954P	129
Pushbutton Assembly	
J1538958	95, 97
J1544048	95
JA-00397	109, 123
JA-04665	95, 97
Pushbutton Cover	
J1520915	97
JA-23315	95

Q

Quick Exhaust Valve	
JA-56925	53, 59

R

Rail Cover	
J1520394	135
Rail Rod	
JA-23189	141
Rail Slug	
J200041000	141
Rear Cam	
JA-24622	19
Rear Head Adjusting Rod	
JA-23246	23

Rear Head Adjusting Rod Assembly	
JA-09220	21, 23
Rear Head Frame Weldment	
JA-80097	21
Rear Head Steam Return Assembly	
J1521707	69, 75
Rear Head Weldment	
JA-81886	21
Rear Roller Valve Assembly	
J1526920	157, 161, 165, 169
Receiving Tube Assembly	
J1436914	7, 13
Receiving Tube Weldment	
J1546084	7, 9
J1546092	11, 13
Regulator	
J1421981	181, 183
Repair Kit	
J757P3	143
J758P3	143
Reset Valve Assembly	
J1445303	123
J1583103	156, 160, 165, 168
Retaining Ring	
J1528595	29, 33
JA-50962	19
JA-50976	19, 21
JA-51330	21
JA-53987	15
Rivet	
J1323724	137
Rocker Arm Assembly	
JA-08726	19
Rocker Arm Weldment	
JA-08893	19
Rocker Switch	
J1236306	129
Rod End Bearing	
JA-53860	93
Roll Pin	
J1407725	41, 43
JC-54829	19
Roller	
JA-06318	15
Roller Pin	
J1320738	135
Roller Valve	
JA-53892	25, 77, 171
Roller Valve Assembly	
J1523976	156, 160, 164, 168, 171

S

Safety Bar Assembly	
J1570951	79, 81
Safety Bar Bracket	
J1520261	91
J1520279	89
J1569870	87
J1569888	85
J1570001	79, 81
Safety Bar Mounting Tie	
J1521970	93

N/A items do not appear in index.

Safety Bar Weldment J1522887	93	JC-62832	51
Safety Pin JA-51758	29, 33	JC-62851	61, 63, 65, 67
Safety Valve Assembly - Front Left J1571041	79, 85, 156, 160, 161, 164, 165, 168	JC-63116	25, 171
Safety Valve Assembly - Front Right J1521954	79, 89, 157, 161, 169	JC-63376	145
Safety Valve Assembly - Left Rear J1571058	160	JC-64014	127
Safety Valve Assembly - Rear Left J1571058	81, 87, 156, 164, 168	M400043	37, 49
Safety Valve Assembly - Rear Right J1521947	81, 91, 157, 165, 169	M400044	7, 13
Screw		M400056	145, 153
02422	53, 63, 65, 67	M400057	21, 145, 149, 153
430648	77	Seal	
91202	79, 81, 141	J1372937	145, 149
H88214572	131	J1401389	41, 43
J1001726	7, 9, 51, 143	J1473800	35
J1001734	11, 13	Selector Switch	
J1007434	81	J1505411	156, 160
J1023894	15	Separator	
J1063619	135	JA-12217	35
J1111095	95, 97, 135	Shaft	
J1112887	129	JA-22798	43
J1122118	145, 149, 153	JA-22803	43
J1133990	47	JA-22999	19
J1185107	41, 43, 47, 63, 65, 67	JA-23282	15
J1187228	47, 135	JA-23283	15
J1199389	133	JA-23284	15
J1233162	129	Shaft and Piston Assembly	
J1233659	133	J1616408	35
J1238518	111, 115, 119, 141, 177, 179	Shaft Guide	
J1311307	23	J1541820	33
J1323153	127	JA-19037	33
J1333285	27	Shield	
J1354612	43	JA-16924	19, 21
J1378603	127	Shim	
J1410026	141	J1484393	7, 9, 11, 13
J1489053	41	Shock Absorber	
J1531789	135	J1626837	17
J1548353	143	Shock Absorber Assembly	
J1571371	131	J1626845	17, 141
J1615194	79, 81	Shuttle Valve	
JA-10158	21	J1523596	111, 113, 115, 117, 119, 121
JA-50128	77	JA-53602	61, 113, 117, 121, 143, 175, 177, 181, 183
JA-50134	51, 79, 81, 95, 97	Sleeve Expander Assembly	
JA-50190	15	J1473107	29, 33, 35
JA-50284	19	J1492867	29, 33, 35
JA-50353	43	Sleeve Expander Kit	
JA-50358	45	J1492867P	35
JA-50454	41, 43	JKIT-00220	35
JA-51725	33	Sleeve Expander Knob	
JA-51951	77	J1467968	35
JA-52038	69	Sleeve Expander Tube	
JA-52116	19, 63, 65, 67	J1473784	35
JA-52524	93	J1492859	35
JA-52808	75	Sleeving	
JA-53020	79, 81, 135, 145, 149, 153	JM-99961	133
JA-54087	43	Solenoid Valve	
JA-54156	29, 33, 77	J1362854	125
JC-60006	15	Spacer	
JC-61269	95, 97, 145, 149	J1488873	41
JC-61273	9, 11	J1507342	35
JC-61344	43	J1571413	55
JC-62593	29, 33	JA-16120	35
JC-62724	17, 21, 51, 125	JA-19785	35
		JA-23019	15
		JA-23390	15
		JA-23391	15
		JA-23392	15

N/A items do not appear in index.

JA-23393	15
Spring	
J1039676	141
J1570993	93
JA-50932	35
JA-50949	145, 149
JA-51336	39
JA-51376	51
JA-51399	29, 33
JA-51455	33
JA-52276	23
JA-52758	33
JA-53077	35
Spring Assembly	
JA-08705	21
Spring Padding Assembly	
J1470285	27
J1494269	27
JA-09023	31
JA-09474	31
Spring Rod	
JA-22498	21
Steam Coil Weldment	
J1536382	131
Steam Hose	
J1319268	69
Steam Return Assembly	
J1521715	69, 73
Steam Return Assembly Weldment	
J200017300	73
Steel Wool Padding Assembly	
J1444009	31
J1470277	27
J1494277	27
J1530989	31
Stud	
J1390673	51
JA-24248	41, 43
Support Cover	
J1520311	135
Swivel Pin	
JA-22797	43

T

Tag	
J1546274	137
Tail Clamp Assembly	
J1299296	33
Tail Clamp Cylinder	
J1381607	7, 13
Tail Clamp Pivot Weldment	
J1299262	33
Tail Clamp Shaft	
JA-19051	33
Tail Clamp Valve Assembly	
J1525245	97, 109
Tape	
J1413087	41, 43
Tee	
J1018423	71
J1188242	59, 83, 85, 87
J1266808	111, 115, 119

J1437029	65, 77, 107, 111, 113, 115, 117, 121, 143, 181, 183
J1438357	25, 37, 53, 77, 83, 103, 105, 111, 113, 115, 117, 121, 175, 177, 181, 183
J1460484	25
JC-30541	25, 37, 55, 63, 101, 103, 113, 175, 177, 179, 181, 183
JC-30734	9, 11
JC-70613	7, 13, 59, 117, 121
JC-70620	71
Terminal Block	
J1081793	127
Terminal Block End	
J1085943	127
Terminal Ring	
J1190370	133
J1285147	133
JT-168-4	133
Thermostat	
JA-54183	133
Thermostat Assembly	
J1531094	133, 185
Thermostat Mounting Plate	
JA-24123	133
Timer Assembly	
J1478601	129
Transformer	
J1142090	185
J1475938	127
J1475946	127
J1475953	127
JC-72982	185
Tube	
J200041100	141
Tubing	
J1103970-00	143
J1106665	69
J1106699	85, 87, 156, 161, 165
J1117191	69
J1492693	161, 169

U

U-Clamp	
J1351204	145, 149, 153
Union	
JC-76012	55
Upper Clevis Assembly	
JA-08723	19

V

Vacuum Air Valve Assembly	
J1531078	143, 157
Vacuum Box Weldment	
J1479559	149
Valve	
J1548783	111, 113, 115, 117, 119, 121, 143, 181, 183
J1548791	143
JA-11599	39
Valve and Bracket Assembly	
J1438373	95, 97, 99

N/A items do not appear in index.

J1438381	97
J1520907	97, 103
J1525195	95, 101
J1541838	95, 105
J1541846	97, 107
Valve Assembly	
J1548361P	143
J1548379	143
Valve Body	
JA-10514	39
Valve Body Assembly	
J1504091	47
JA-06430	37, 39, 99, 101, 103, 105, 107, 109, 123
Valve Cap	
JA-10515	39
Valve Mounting Bracket	
J1524156	111, 115, 119
Valve Release Arm	
JA-22813	43
Valve Stem	
J1611417	37, 39, 99, 101, 103, 105, 107, 109, 123
Vent Plug	
J1427103	125

JC-80759	41, 43, 63, 65, 67, 95, 97, 145, 149
M400013	15, 21, 51, 61, 63, 65, 67, 75, 79, 81, 95, 97, 135, 141, 145, 149, 153
M400014	21, 37, 49, 73, 77, 141, 145, 149, 153
M400080	145, 149, 153
M400081	37, 49, 77

Wire	
JM-99150	133
JR-90132	133
Wrench	
J1484732	139

W

Washer	
91200	15, 53, 77, 141
F431134	41
J1000975	7, 9, 11, 13, 41, 43, 45, 47, 63, 65, 67, 69, 95, 97, 131, 145, 149
J1001007	53
J1001270	41, 79, 81, 135
J1001304	15, 43, 125, 145, 149, 153
J1001338	23
J1085984	41, 133, 135
J1178391	77
J1185073	7, 9, 11, 13, 15, 25, 29, 33, 63, 65, 67, 77, 79, 81, 111, 115, 119, 125, 135, 141, 143, 145, 149, 153, 171, 177, 179
J1188473	43
J1216357	129
J1393354	63, 65, 67
J1398437	63, 65, 67
J1398452	61, 63, 65, 67
J1398460	61, 63, 65, 67
J1398478	61, 63, 65, 67
J1531805	63, 65, 67
J1531813	63, 65, 67
J1618990	15
JA-22689	15
JA-23554	47
JA-23560	47
JA-51475	51
JA-52196	37, 99, 101, 103, 105, 107, 109, 123
JA-53116	19, 23, 61
JA-53134	21
JA-53985	15
JA-53986	15
JA-54044	47
JC-43221	63, 65
JC-43265	143
JC-80513	7, 9, 11, 13, 15, 25, 51, 63, 65, 67, 79, 81, 125, 141, 143, 145, 149, 153, 171
JC-80565	131
JC-80583	77, 135

N/A items do not appear in index.