


Legacy

Bosom, Body and Yoke Cabinet Press
Double Buck

ALC265LLV

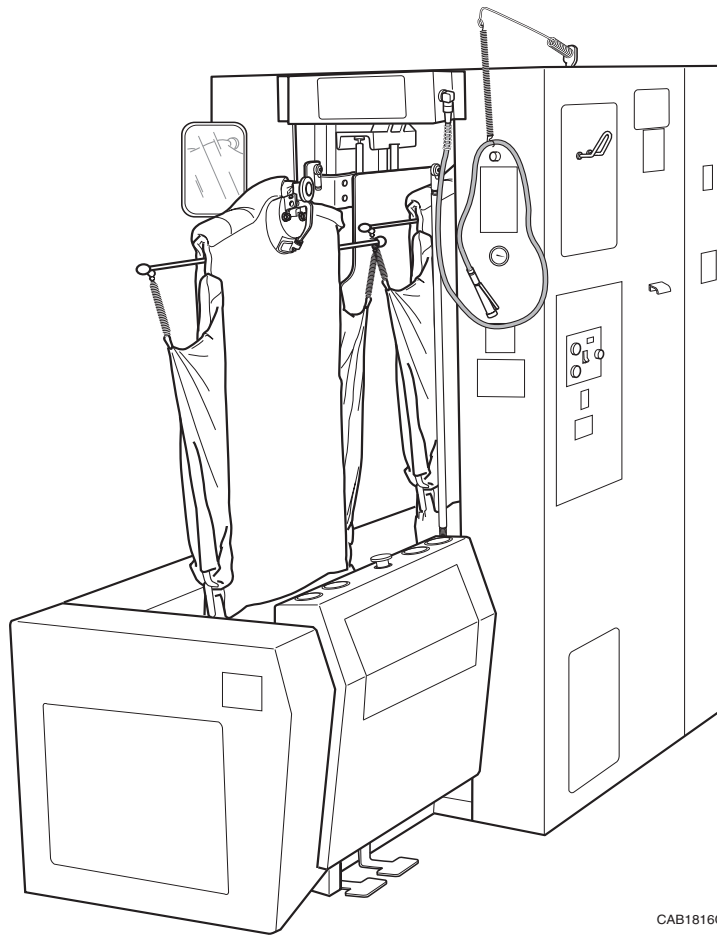

CAB1816C

Table of Contents

Title	Page
Parts Ordering Information.....	3
Nameplate Location	3
Model Identification	5
Front Head Assembly	6
Rear Head Assembly	8
Head Closing Mechanism Assembly (Drawing 1 of 2)	10
Head Closing Mechanism Assembly (Drawing 2 of 2)	12
Front Head Closing Cylinder Assembly	14
Head Air Bag Assembly	16
Rear Head Closing Cylinder Assembly – Models Through June 20, 2003	18
Rear Head Closing Cylinder Assembly – Models Starting June 21, 2003	20
Head Bumper Assembly	22
Cover and Padding Assembly (Drawing 1 of 2)	24
Cover and Padding Assembly (Drawing 2 of 2)	26
Collar Block Assembly (Drawing 1 of 2)	28
Collar Block Assembly (Drawing 2 of 2)	30
Collar Block Cylinder Assembly	32
Sleeve Expander Assembly – Models Through October 7, 2003	34
Sleeve Expander – Models Starting October 8, 2003	36
Front Head Close Toggle Assembly	38
Roller Bracket Assembly	40
Front Receiving Tube and Carriage Assembly	42
Rear Receiving Tube and Carriage Assembly	44
Front Carriage Assembly	46
Rear Carriage Assembly	48
Buck to Receiving Tube Assembly	50
Air Manifold Assembly	52
Buck Index Cylinder Assembly	54
Rear Roller Support Assembly	56
Front Roller Support Assembly	58
Air System – Models Through July 11, 2004 (Drawing 1 of 2)	60
Air System – Models Through July 11, 2004 (Drawing 2 of 2)	62
Air System – Models Starting July 12, 2004 Through November 30, 2004 (Drawing 1 of 2)	64
Air System – Models Starting July 12, 2004 Through November 30, 2004 (Drawing 2 of 2)	66
Air System – Models Starting December 1, 2004 (Drawing 1 of 2)	68
Air System – Models Starting December 1, 2004 (Drawing 2 of 2)	70
External Air Inlet Assembly – Models Through December 1, 2004	72
Filter/Regulator/Lubricator Assembly – Models Starting December 2, 2004 Through February 9, 2005	74
Filter/Regulator/Mist Separator Assembly – Models Starting February 10, 2005	76
Air Inlet Assembly – Models Through April 26, 2005	78
Air Inlet Assembly – Models Starting April 27, 2005	80

© Copyright 2005, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Valve Assembly	82
Pedal Base Assembly	84
Pedal Base and Valve Assembly	86
Reset Valve Assembly	88
Valve Body Assembly	90
Emergency Stop Button Assembly	92
Rear Left Safety Bar Bracket Assembly	94
Front Left Safety Bar Bracket Assembly	96
Pneumatic Manifold Assembly – Models Through July 11, 2004.....	98
Fitting to Manifold Assembly – Models Starting July 12, 2004.....	100
Manifold to Bracket Assembly – Models Through July 11, 2004	102
Manifold to Bracket Assembly – Models Starting July 12, 2004	104
Valve and Bracket Assembly	106
Valve and Bracket Assembly – Models Through December 8, 2004.....	108
Valve and Bracket Assembly – Models Starting December 9, 2004.....	110
Quick Exhaust Valve Assembly	112
Rear Limit Switch Assembly	114
Low Pressure Air System.....	116
Low Pressure Valve Assembly	118
Snorkel Tube Assembly	120
Discharge Tube Assembly	122
Heat Exchanger Assembly.....	124
Damper Assembly.....	126
Filter Box Damper Assembly	128
Butterfly Valve Assembly	130
Steam System (Front View)	132
Steam System (Rear View).....	134
Middle Steam Inlet Assembly.....	136
Rear Head Steam Return Assembly.....	138
Steam Return Assembly	140
Spray Gun Assembly	142
Machine Electrical Parts and Conduit	144
Blower Assembly	146
Thermostat Assembly	148
Control Enclosure	150
Control Panel Assembly.....	152
Control Box Cover Assembly	154
Operator Control Panel Assembly	156
Shipped Box Items	158
Panels Assembly (Front View).....	160
Panels Assembly (Rear View)	162
Label Application (Front View)	164
Label Application (Rear View).....	166
Completing Parts	168
Parts Index.....	171


Parts Ordering Information

If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.

For technical assistance, call (920) 748-3121.

Nameplate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on nameplate(s) as shown.

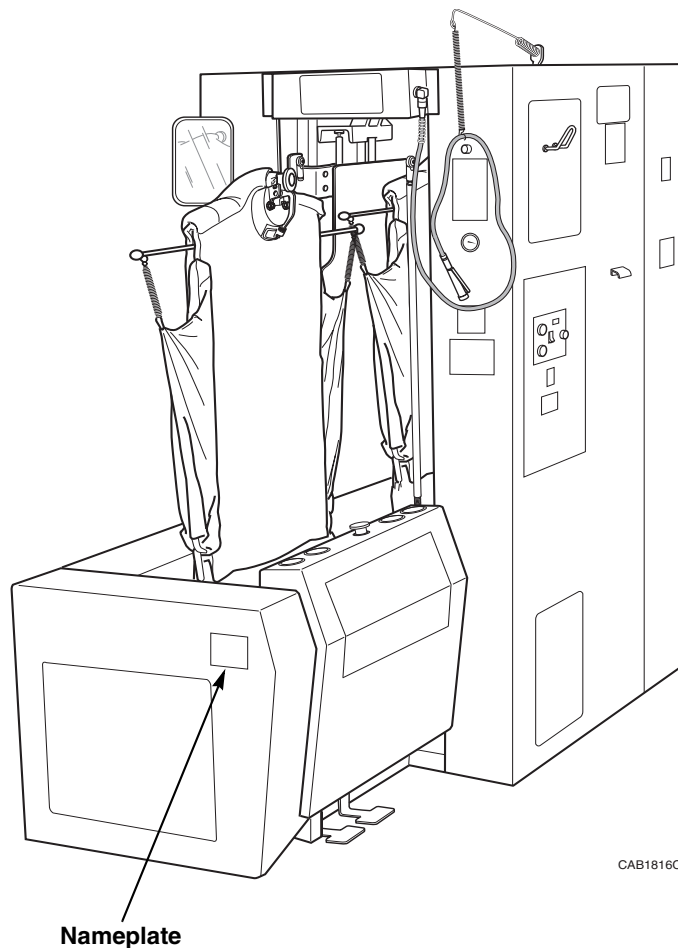


[illegible]

Model Identification

Information in this manual is applicable to this model:

ALC265LLV

Front Head Assembly

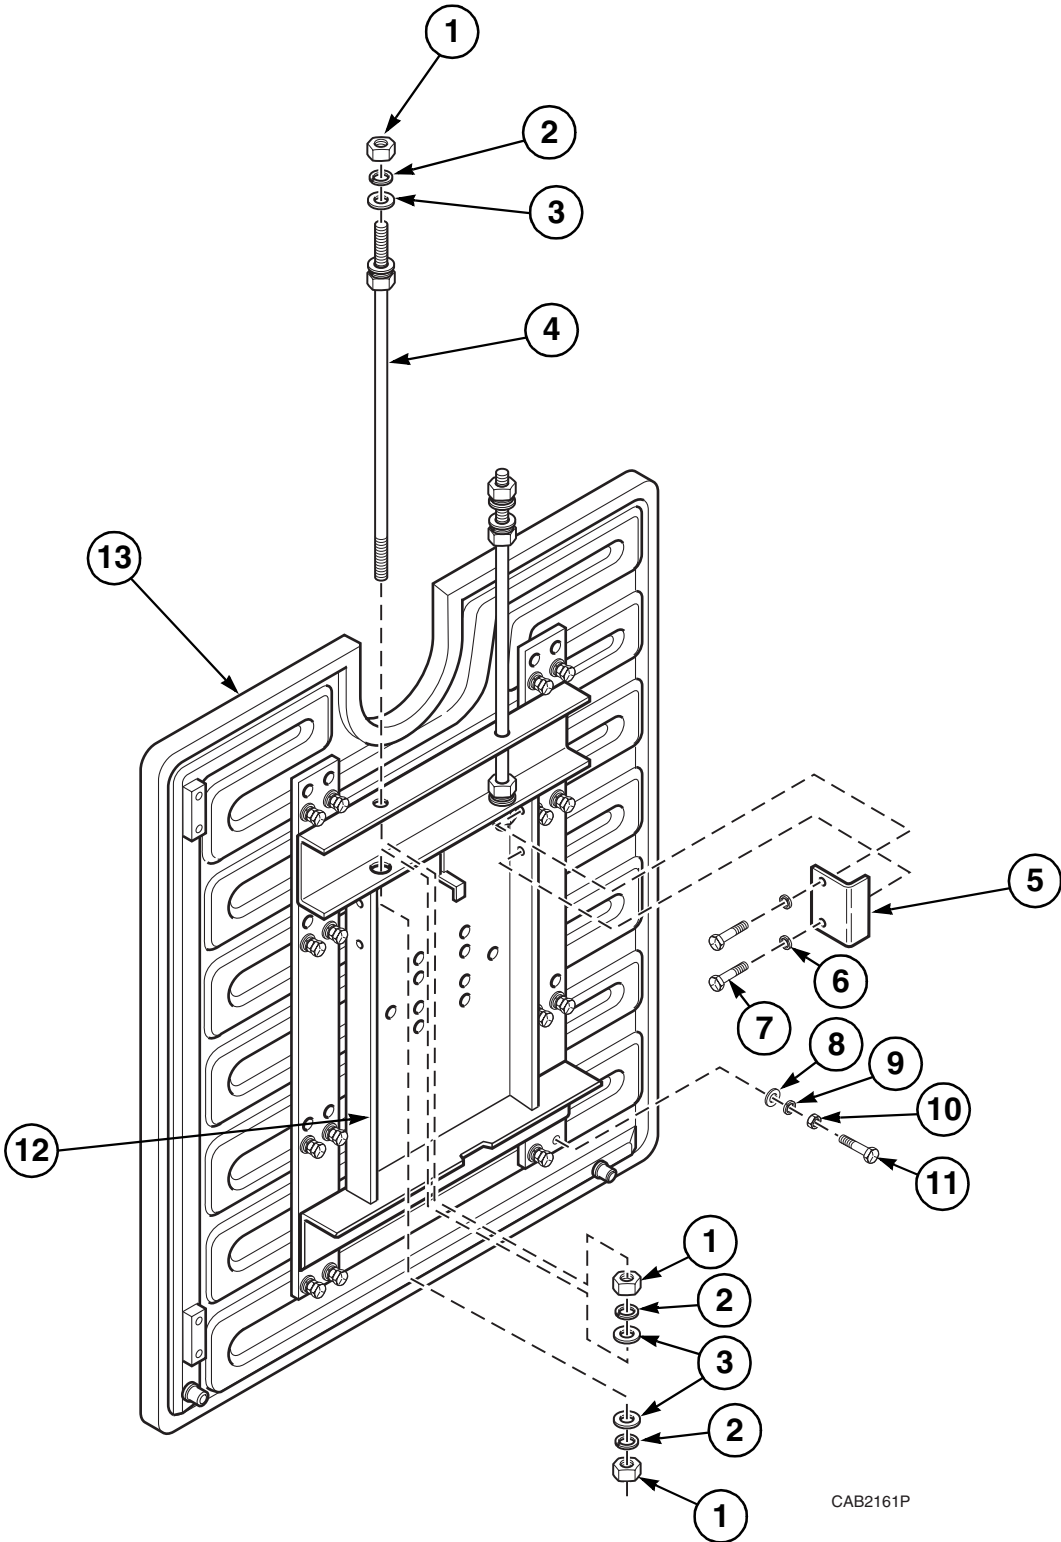


CAB2161P

Front Head Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200004300	Front Head Assembly	Includes items 1-13
1	F430246	Nut	8 required
2	F430308	Washer	8 required
3	F430326	Washer	8 required
4	J1550755	Head Mounting Rod	2 required
5	J1550961	Plate Cover	
6	J1185073	Washer	2 required
7	JA-53020	Screw	2 required
8	F431105	Washer	16 required
9	F431137	Washer	16 required
10	F431004	Nut	16 required
11	F430946	Screw	16 required
12	J200004200	Front Head Frame Weldment	
13	J200050100	Front Head Weldment	


Rear Head Assembly

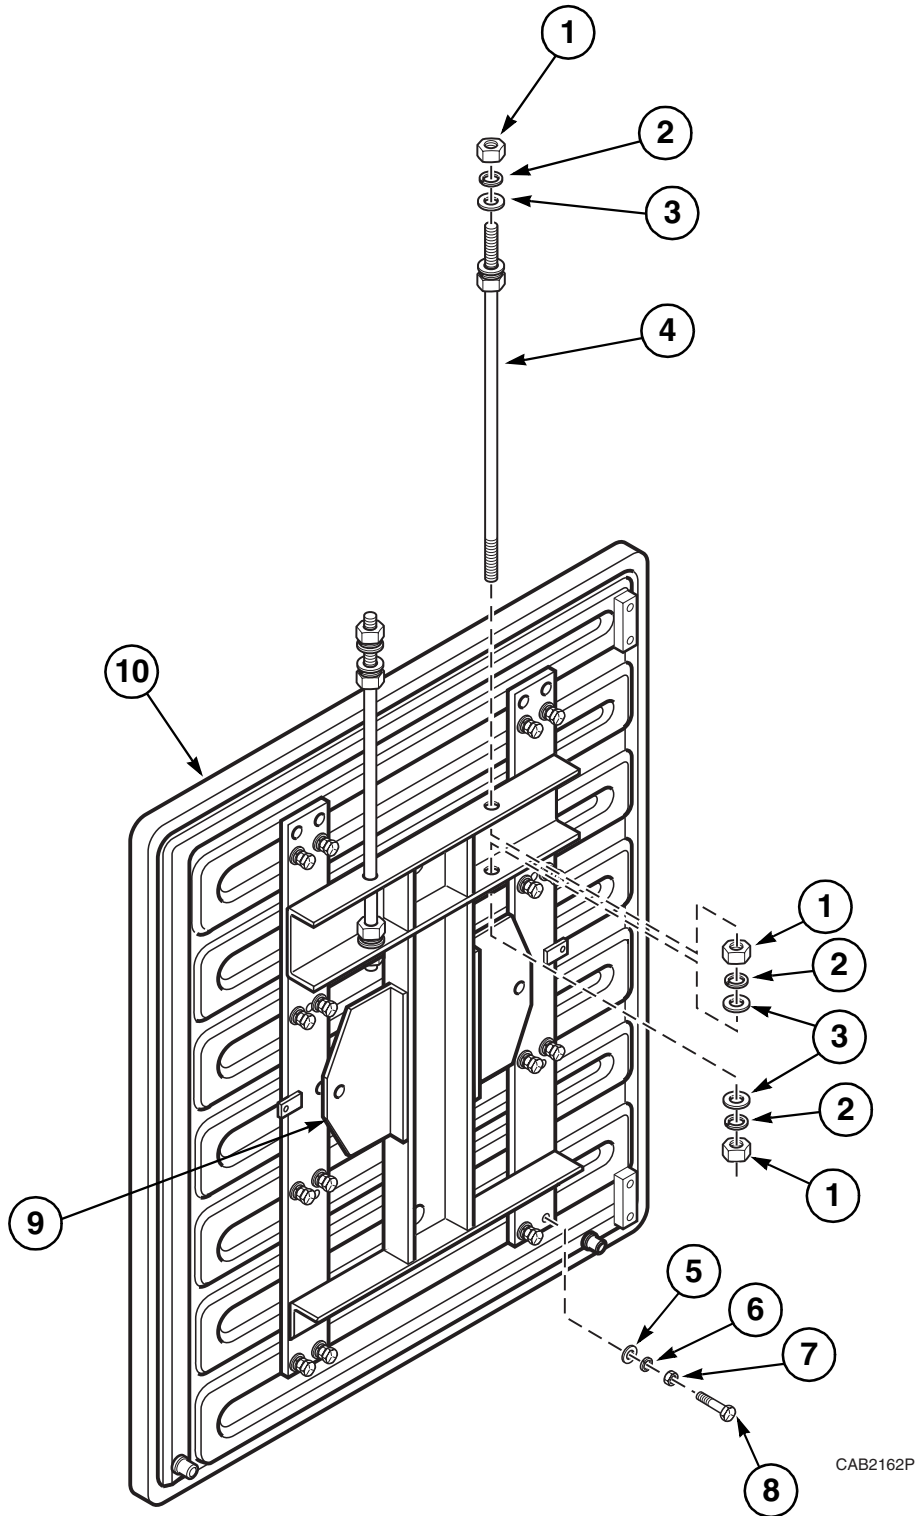

Rear Head Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200005000	Rear Head Assembly	Includes items 1-10
1	F430246	Nut	8 required
2	F430308	Washer	8 required
3	F430326	Washer	8 required
4	J1550755	Head Mounting Rod	2 required
5	F431105	Washer	16 required
6	F431137	Washer	16 required
7	F431004	Nut	16 required
8	F430946	Screw	16 required
9	J200004700	Rear Head Frame Weldment	
10	J200050200	Rear Head Weldment	

Head Closing Mechanism Assembly (Drawing 1 of 2)

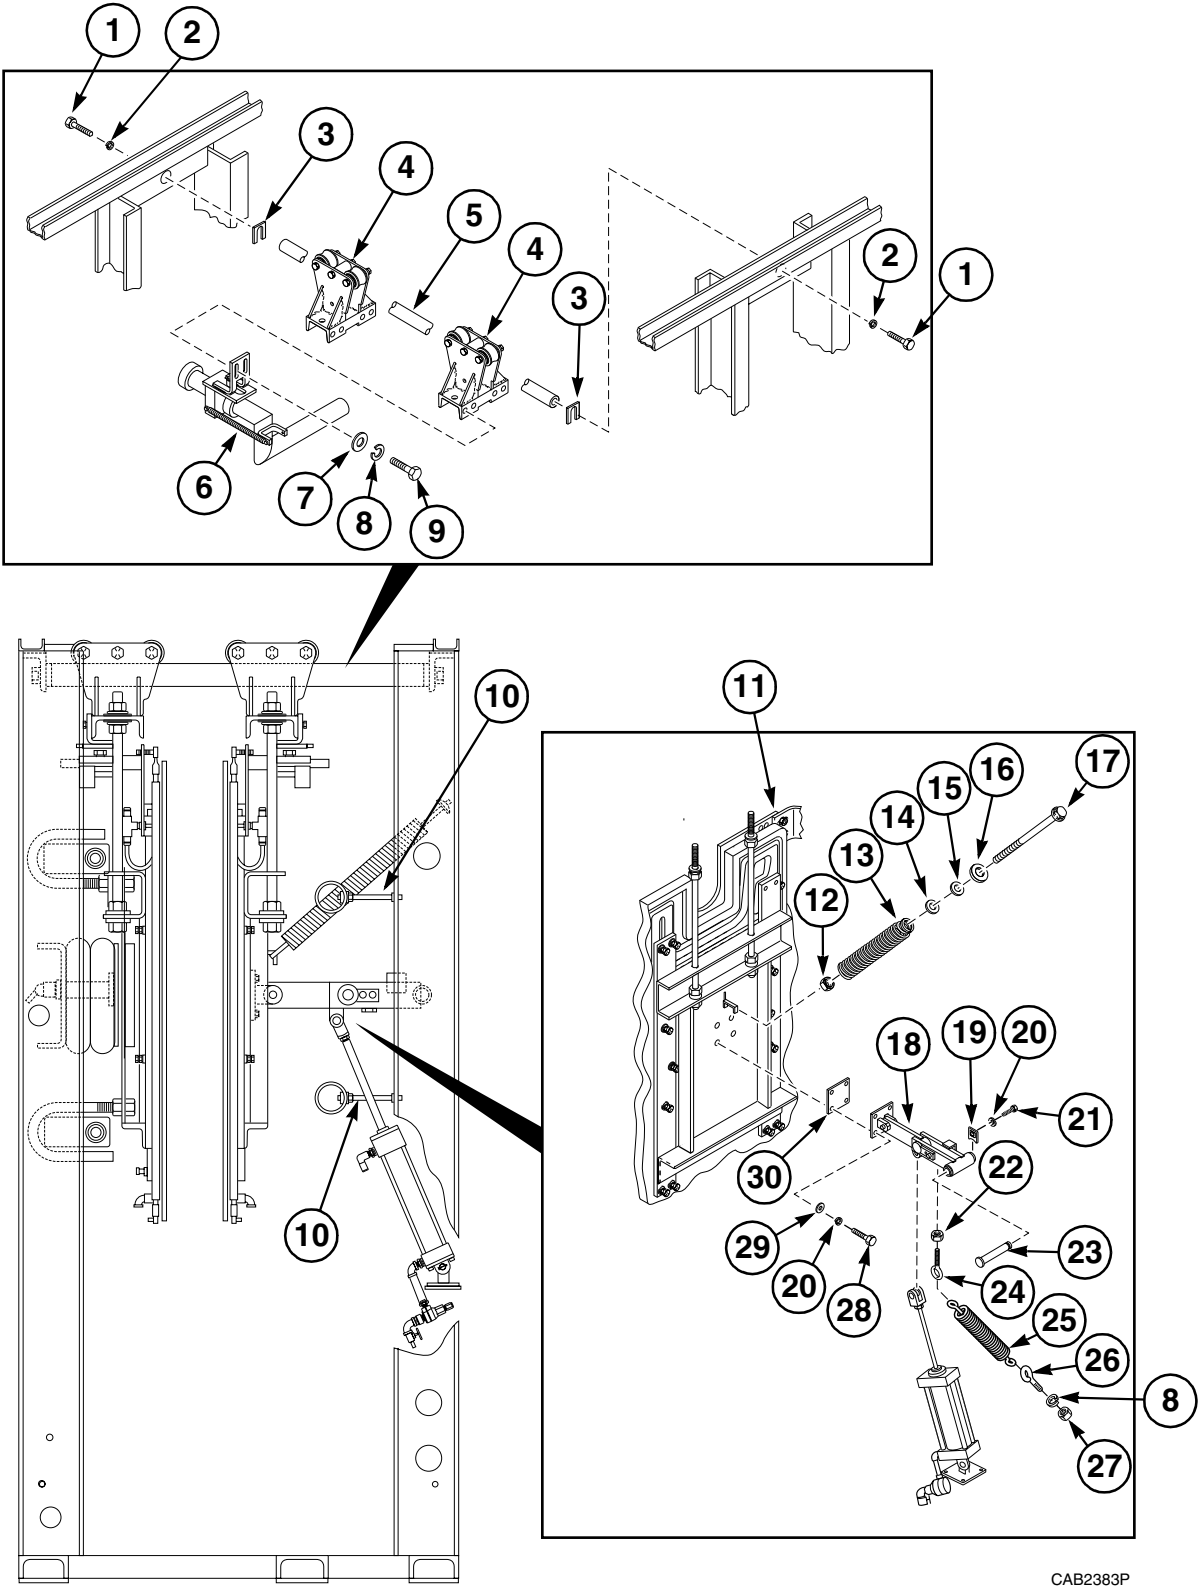


CAB2383P

Head Closing Mechanism Assembly (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	JC-63204	Screw	2 required in whole assembly
2	JC-43257	Washer	2 required in whole assembly
3	J200187100	Head Rail Spacer Plate	
4	J1405786	Roller Bracket Assembly	2 required; Refer to <i>Roller Bracket Assembly</i> section for parts breakdown
5	J1550789	Head Rail Weldment	
6	J200010900	Snorkel Tube Assembly	Refer to <i>Snorkel Tube Assembly</i> section for parts breakdown
7	J1001270	Washer	2 required in whole assembly
8	M400013	Washer	3 required in whole assembly
9	M400057	Screw	2 required in whole assembly
10	J1562842	Head Bumper Assembly	4 required; Refer to <i>Head Bumper Assembly</i> section for parts breakdown
11	J200004300	Front Head Assembly	Refer to <i>Front Head Assembly</i> section for parts breakdown
12	20274	Nut	11 required in whole assembly
13	JA-08705	Spring Assembly	
14	J1001304	Washer	7 required in whole assembly
15	J1178391	Washer	8 required in whole assembly
16	JA-51527	Gasket	Rubber
17	JA-10158	Screw	
18	J159468800	Front Head Close Toggle Assembly	Refer to <i>Front Head Close Toggle Assembly</i> section for parts breakdown
19	J1438209	Retainer Clip	
20	J1185073	Washer	5 required in whole assembly
21	JA-53020	Screw	
22	20275	Nut	
23	J1594662	End Toggle Pin	
24	J1442730	Bolt	
25	J1474774	Extension Spring	
26	J1447846	Bolt	
27	70142	Nut	2 required in whole assembly
28	J1238518	Screw	4 required in whole assembly
29	JC-80513	Washer	4 required in whole assembly
30	J1437821	Plate Mounting and Bearing Shim	2 required in whole assembly

Head Closing Mechanism Assembly (Drawing 2 of 2)

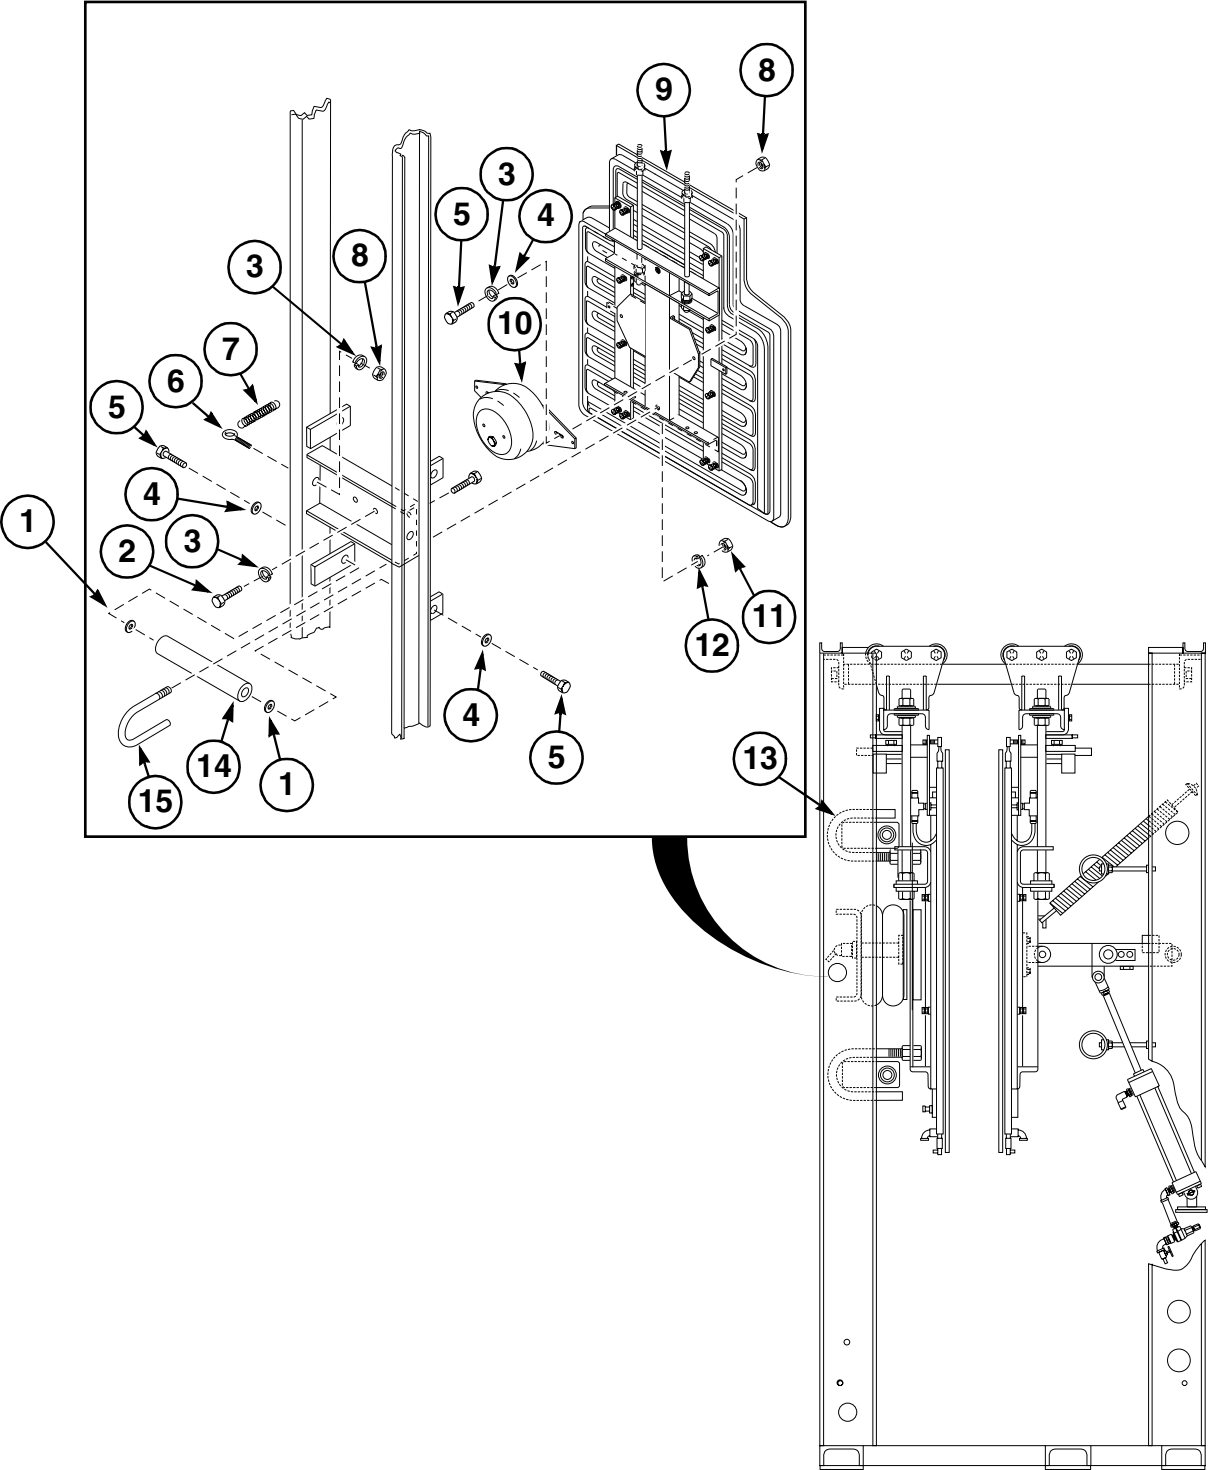


CAB2386P

Head Closing Mechanism Assembly (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-56790	Bumper Assembly	2 required in whole assembly
1	J1545185	Washer	4 required in whole assembly
2	JC-62959	Screw	2 required in whole assembly
3	M400014	Washer	10 required in whole assembly
4	J1001304	Washer	7 required in whole assembly
5	J1122118	Screw	6 required in whole assembly
6	JC-18058	Bolt	2 required in whole assembly
7	J1055029	Extension Spring	2 required in whole assembly
8	20274	Nut	11 required in whole assembly
9	J200005000	Rear Head Assembly	Refer to <i>Rear Head Assembly</i> section for parts breakdown
10	J200012800	Head Air Bag Assembly	Refer to <i>Head Air Bag Assembly</i> section for parts breakdown
11	F430246	Nut	2 required in whole assembly
12	JA-53116	Washer	2 required in whole assembly
13	J1545144	Head Stop Hook	
14	J1545169	Head Stop Rod	2 required in whole assembly
15	J1594696	Head Stop Hook	

Front Head Closing Cylinder Assembly

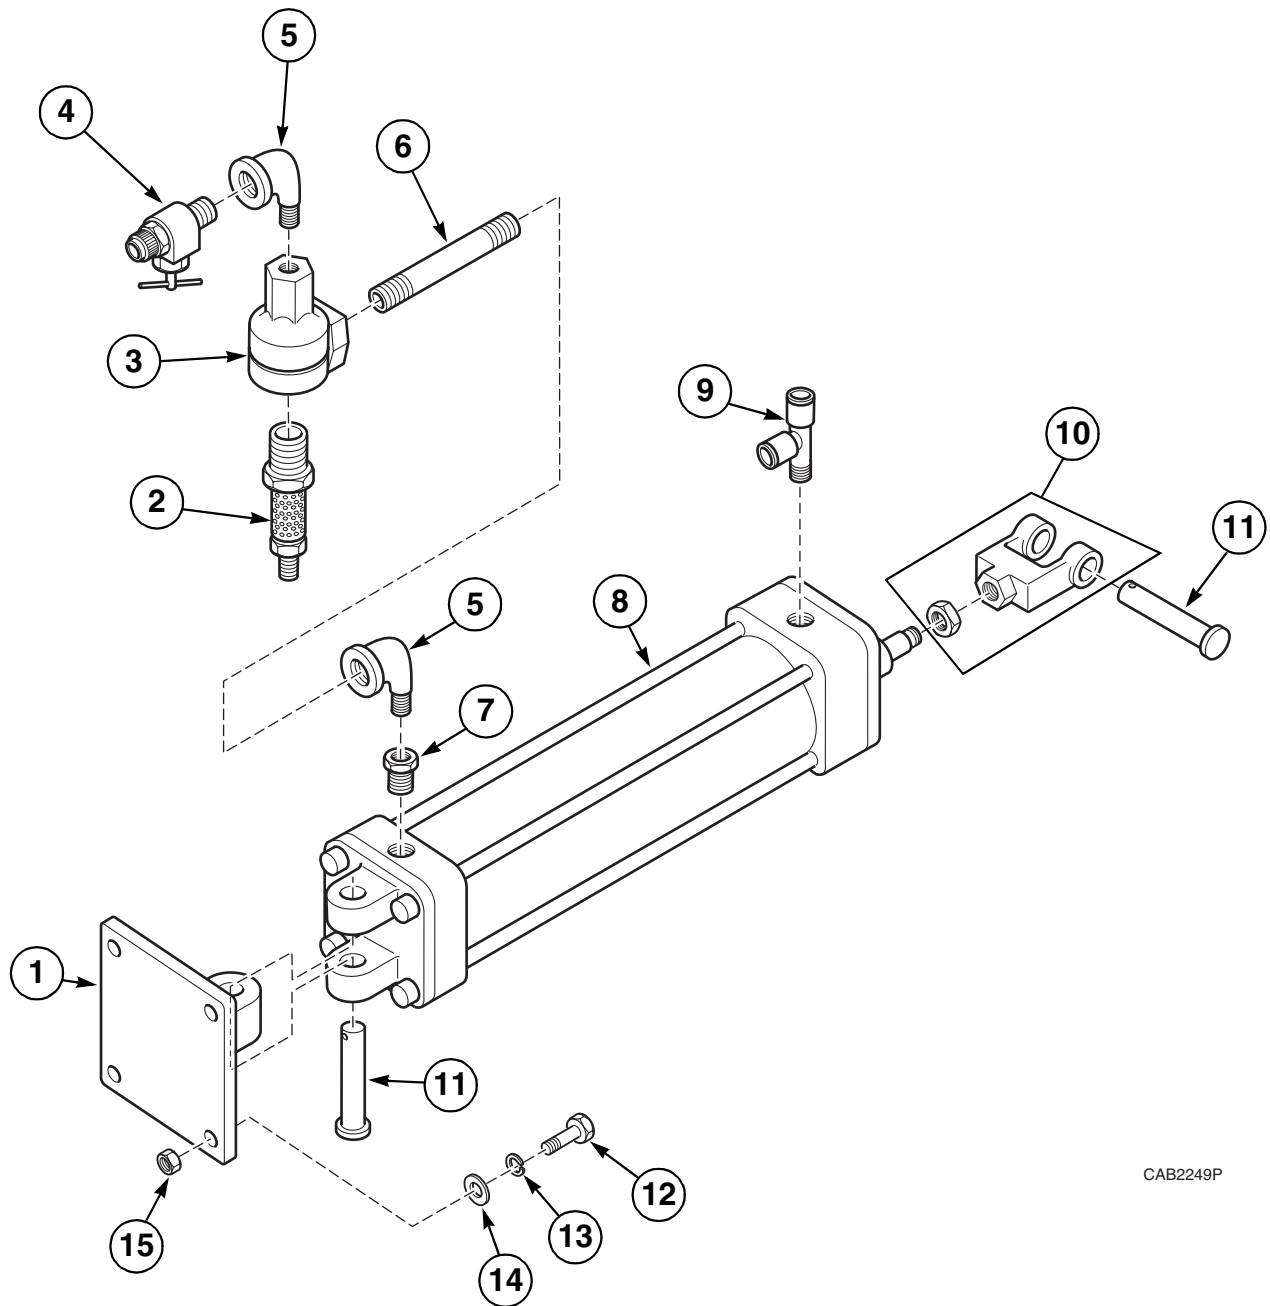


CAB2249P

Front Head Closing Cylinder Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200055700	Front Head Closing Cylinder Assembly	Includes items 1-11
	J1634906	Repair Kit	
1	J1545193	Head Cylinder Bracket Weldment	
2	J1352327	Air Muffler	Adjustable
3	JA-56925	Quick Exhaust Air Valve	
4	J1110998	Needle Valve	Brass
5	J200056000	Street Pipe Elbow	2 required
6	J200056100	Pipe Nipple	
7	J1184506	Reducing Bushing	
8	J1562966	Air Cylinder	Double acting
9	J200055800	Male Run Tee	
10	J1562974	Clevis	Includes nut
11	J1451145	Cylinder Pivot Pin	2 required; Includes retaining rings
12	91202	Screw	4 required
13	M400013	Washer	4 required
14	M400080	Washer	4 required
15	70142	Nut	4 required

Head Air Bag Assembly

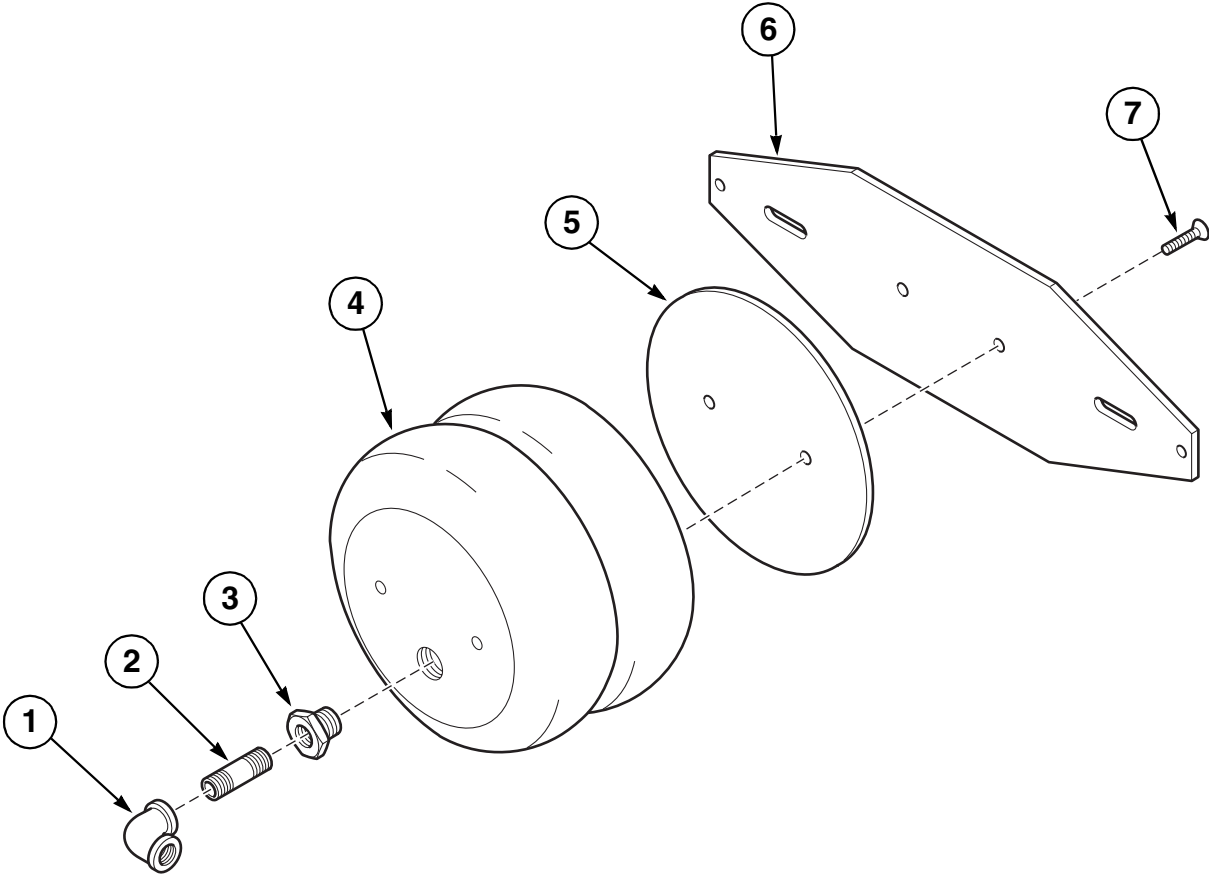


CAB2248P

Head Air Bag Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200012800	Head Air Bag Assembly	Includes items 1-7
1	F420501	Elbow	
2	F420101	Nipple	
3	J1161140	Reducing Bushing	
4	J1562867	Air Bag Actuator	
5	J1555127	Air Bag Heat Protection Plate	
6	J1601939	Air Bag Mounting Plate	
7	JC-62286	Screw	2 required

Rear Head Closing Cylinder Assembly – Models Through June 20, 2003

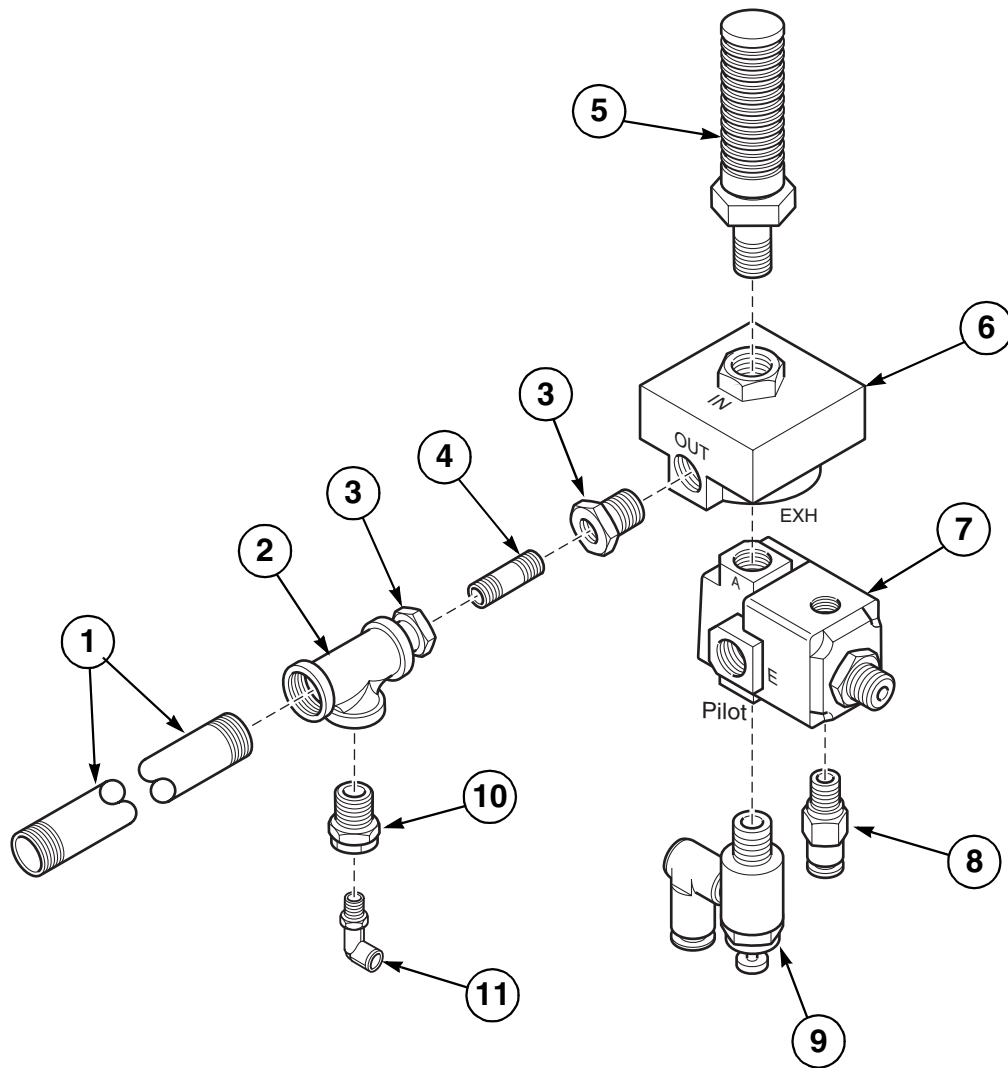


CAB2549P

Rear Head Closing Cylinder Assembly – Models Through June 20, 2003

REF	PART NO.	DESCRIPTION	COMMENTS
	J200012900	Rear Head Closing Cylinder Assembly	Includes items 1-11
	J0180100-00	Quick Exhaust Assembly	Includes items 5-9
	J025081107	O-Ring	Use with item 6
	J025081108	Quick Exhaust Valve	Use with item 6
1	JC-46219	Pipe Nipple	
2	JC-70628	Pipe Tee	
3	JC-19682	Reducing Bushing	2 required
4	J1026335-01	Pipe Nipple	
5	J0140353-00	Silencer	
6	J025081106	Quick Exhaust Valve	
7	J0381776-00	Air Valve	
8	J1408004	Connector	
9	N/A	Flow Control	
10	JC-19624	Pipe Bushing	
11	J0260211-00	Male Elbow	

N/A = Part no longer available

Rear Head Closing Cylinder Assembly – Models Starting June 21, 2003

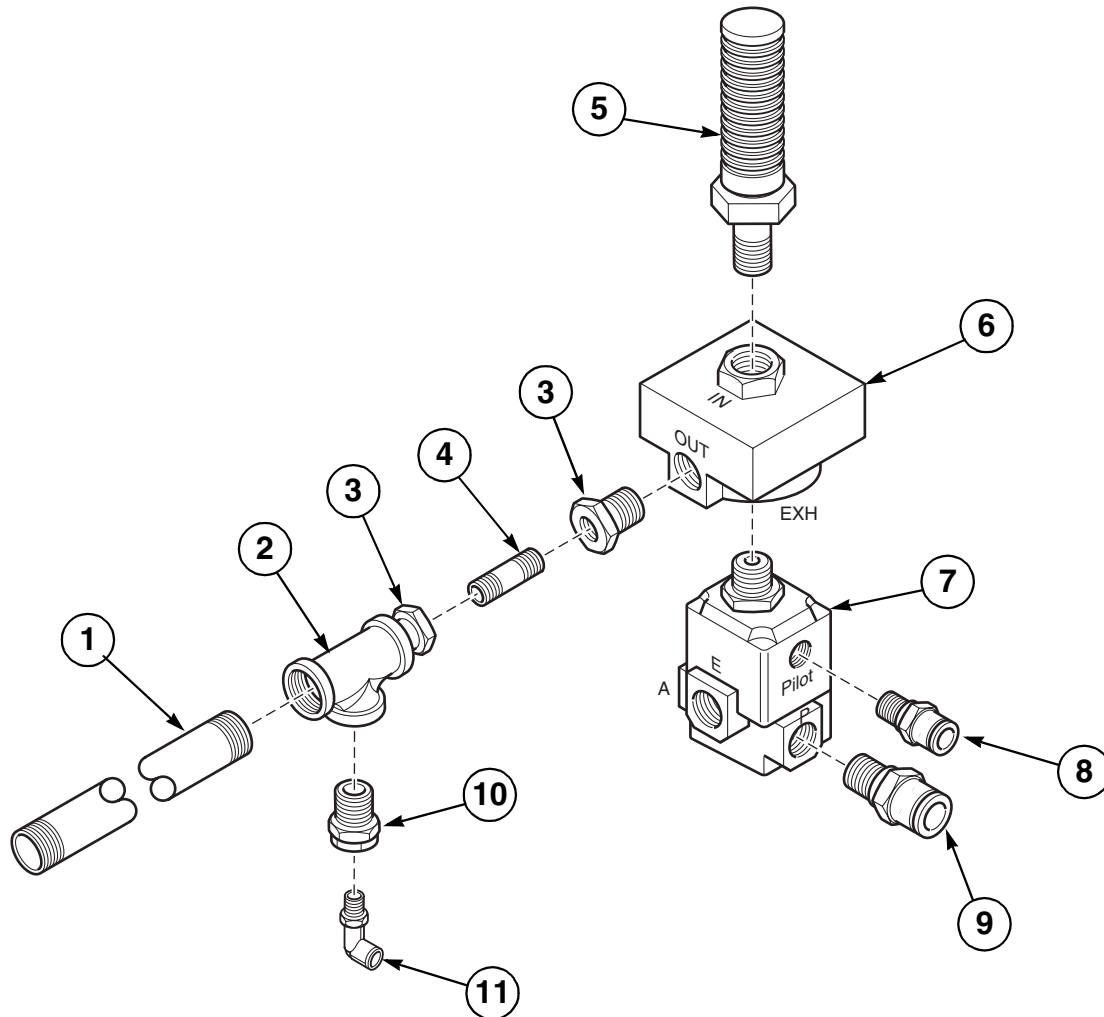


CAB2173P

Rear Head Closing Cylinder Assembly – Models Starting June 21, 2003

REF	PART NO.	DESCRIPTION	COMMENTS
	J200012900	Rear Head Closing Cylinder Assembly	Includes items 1-11
	J0180100-00	Quick Exhaust Assembly	Includes items 5-9
	J025081107	O-Ring	Use with item 6
	J025081108	Quick Exhaust Valve	Use with item 6
1	JC-46219	Pipe Nipple	
2	JC-70628-01	Pipe Tee	
3	JC-19682	Reducing Bushing	2 required
4	J1026335-01	Pipe Nipple	
5	J0140353-00	Silencer	
6	J025081106	Quick Exhaust Valve	
7	J0381776-00	Air Valve	
8	J1408004	Connector	
9	J1408020	Tubing Connector	
10	JC-19624	Pipe Bushing	
11	J0260211-00	Male Elbow	

Head Bumper Assembly

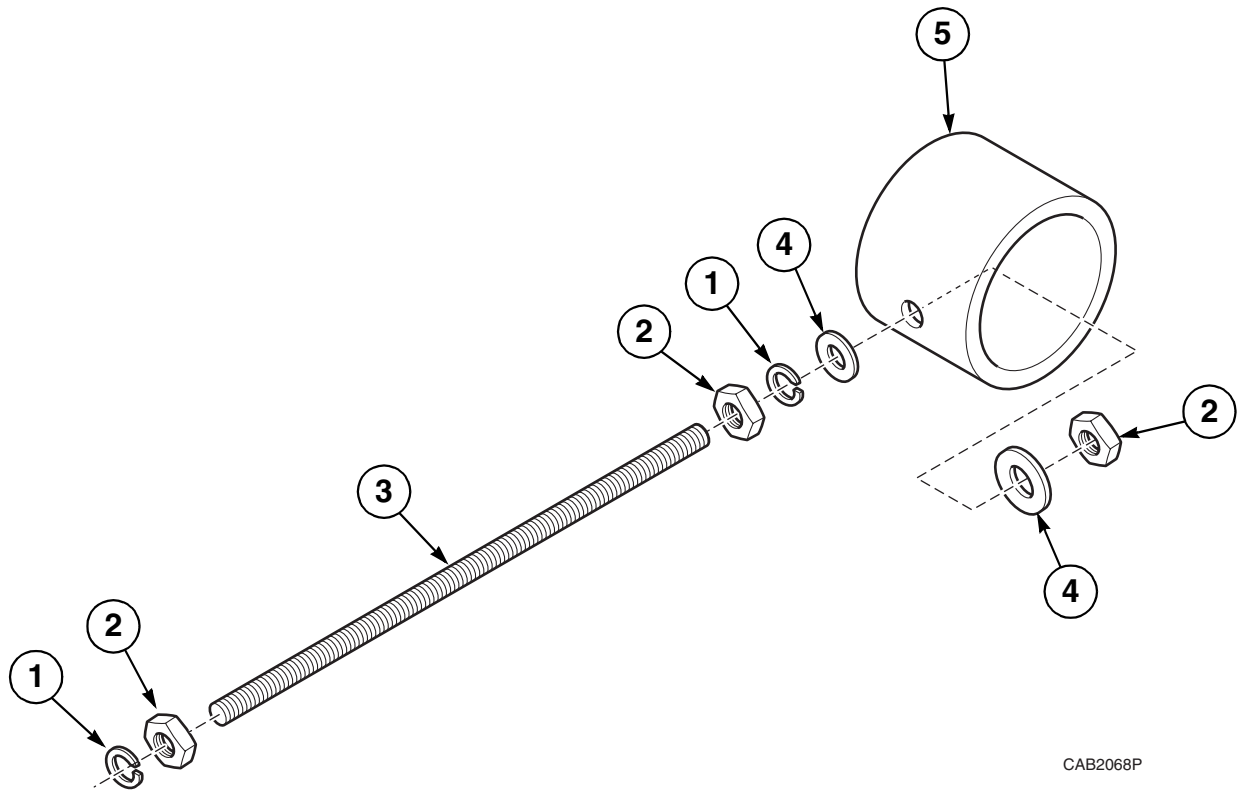


CAB2068P

Head Bumper Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1562842	Head Bumper Assembly	4 required; Includes items 1-5
1	M400014	Washer	2 required
2	M400026	Nut	3 required
3	J1562834	Rod	
4	JC-80505	Washer	2 required
5	J1438472	Bumper	

Cover and Padding Assembly (Drawing 1 of 2)

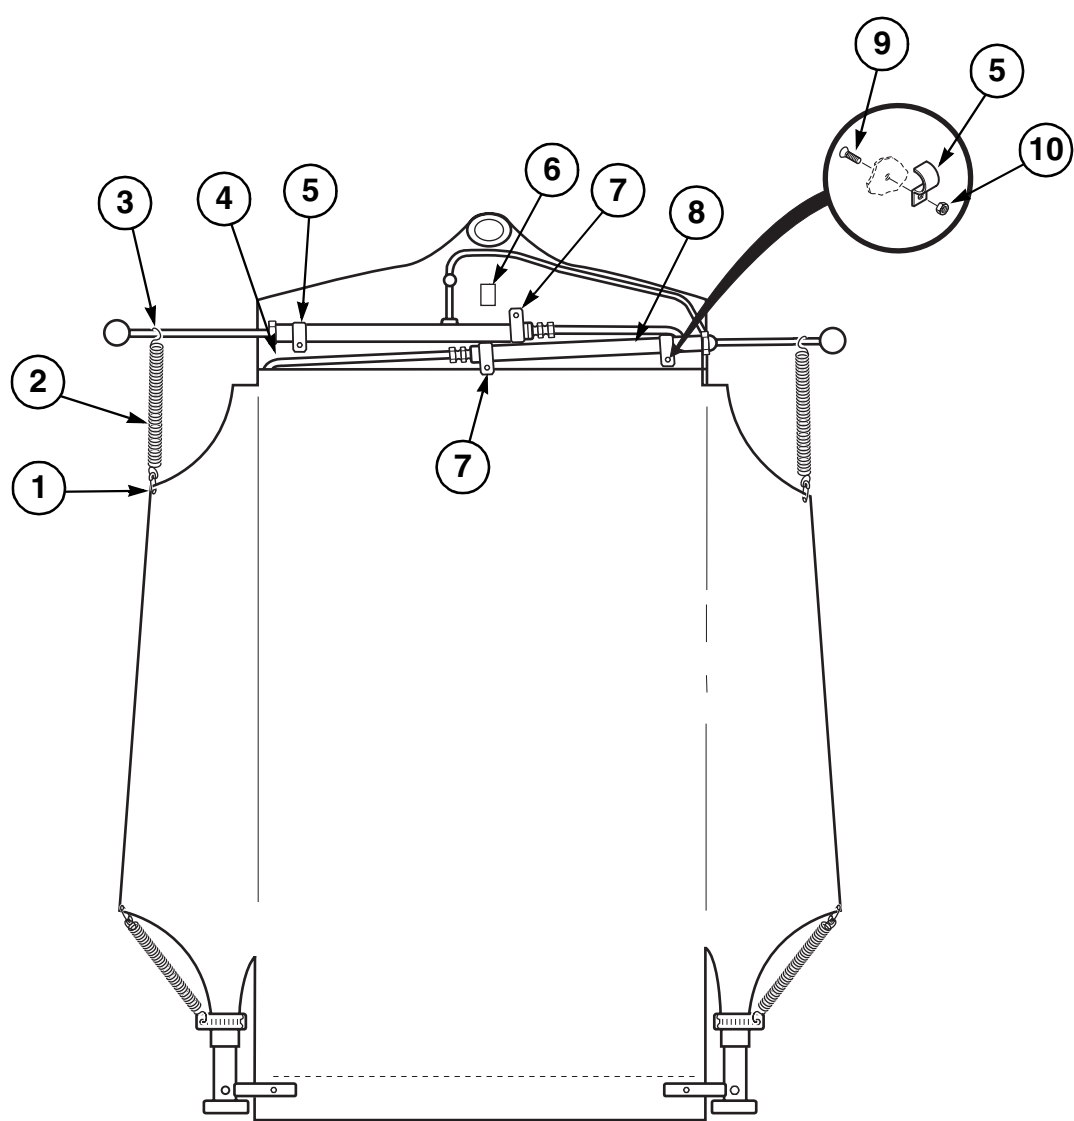


CAB2074P

Cover and Padding Assembly (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1333285	Screw	2 required
	JA-24245	Nut	2 required
1	JA-51758	Safety Pin	8 required
2	JA-52758	Spring	4 required
3	J1528595	Retaining Ring	Elastic; 4 required
4	J1106699	Tubing	Copper; 15 feet required
5	J118788901	Pipe Clip	2 required
6	J200155100	Mounting Bracket Clamp	Use M400057 Screw and M400013 Washer to attach
7	J1187889	Jiffy Clip	2 required
8	J200055100	Sleeve Expander	2 required; 16 inch buck
	J200055200	Sleeve Expander	2 required; 18 and 20 inch buck
9	J1142447	Screw	4 required
10	J1000736	Nut	4 required

Cover and Padding Assembly (Drawing 2 of 2)

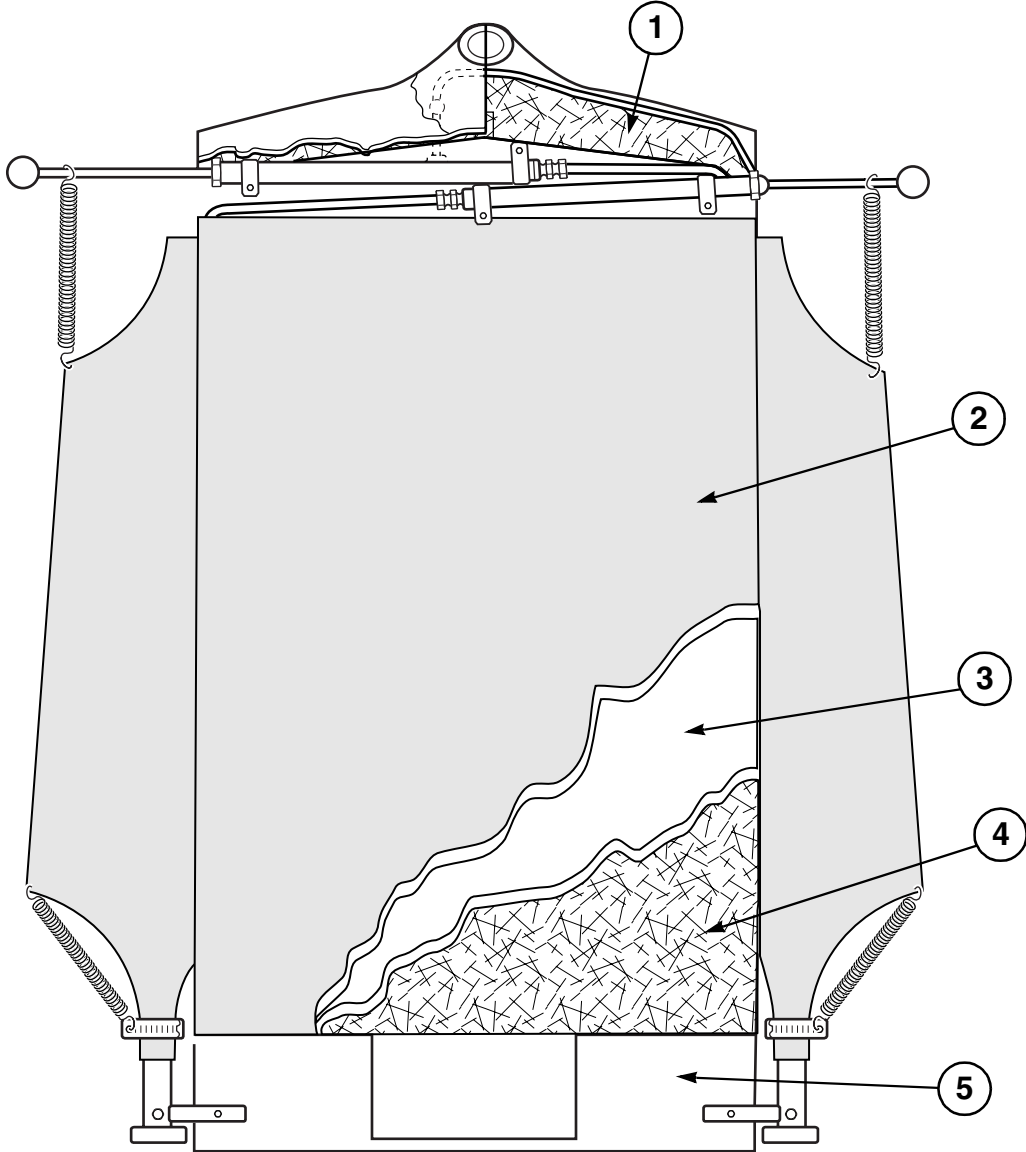


CAB1959P

Cover and Padding Assembly (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J200180300	16 Inch Front Buck Kit	
	J200180400	16 Inch Rear Buck Kit	
	J1591197	Buck and Cover Assembly	Rear; 18 inch buck
	J1610377	Buck and Cover Assembly	Rear; 20 inch buck
1	J1578301-00	Spring Padding Assembly	16 inch buck
	J1618859	Spring Padding Assembly	18 inch buck
	J1618875	Spring Padding Assembly	20 inch buck
2	J200151000	Bag Cover Assembly	16 inch buck
	J1473404	Air Bag	18 inch buck
	J1494251	Cover and Bag Assembly	20 inch buck
3	J1578327-00	Padding Assembly	30 ounce flannel; 16 inch buck
	J1473412	Flannel Pad	30 ounce flannel; 18 inch buck
	J1494244	Flannel Pad	30 ounce flannel; 20 inch buck
4	J1578228-00	Padding	16 inch buck; Steel wool
	J1591114	Padding	18 inch buck; Steel wool
	J1610492	Padding	20 inch buck; Steel wool
5	J1578202-00	Buck Plate Weldment	16 inch buck
	J1590561	Rear Vacuum Buck Plate	18 inch buck
	J1610369	Rear Vacuum Buck Plate	20 inch buck
	J1586015	Front Vacuum Buck Weldment	18 inch buck
	J1613637	Front Vacuum Buck Plate Weldment	20 inch buck

Collar Block Assembly (Drawing 1 of 2)

Models Through March 2004

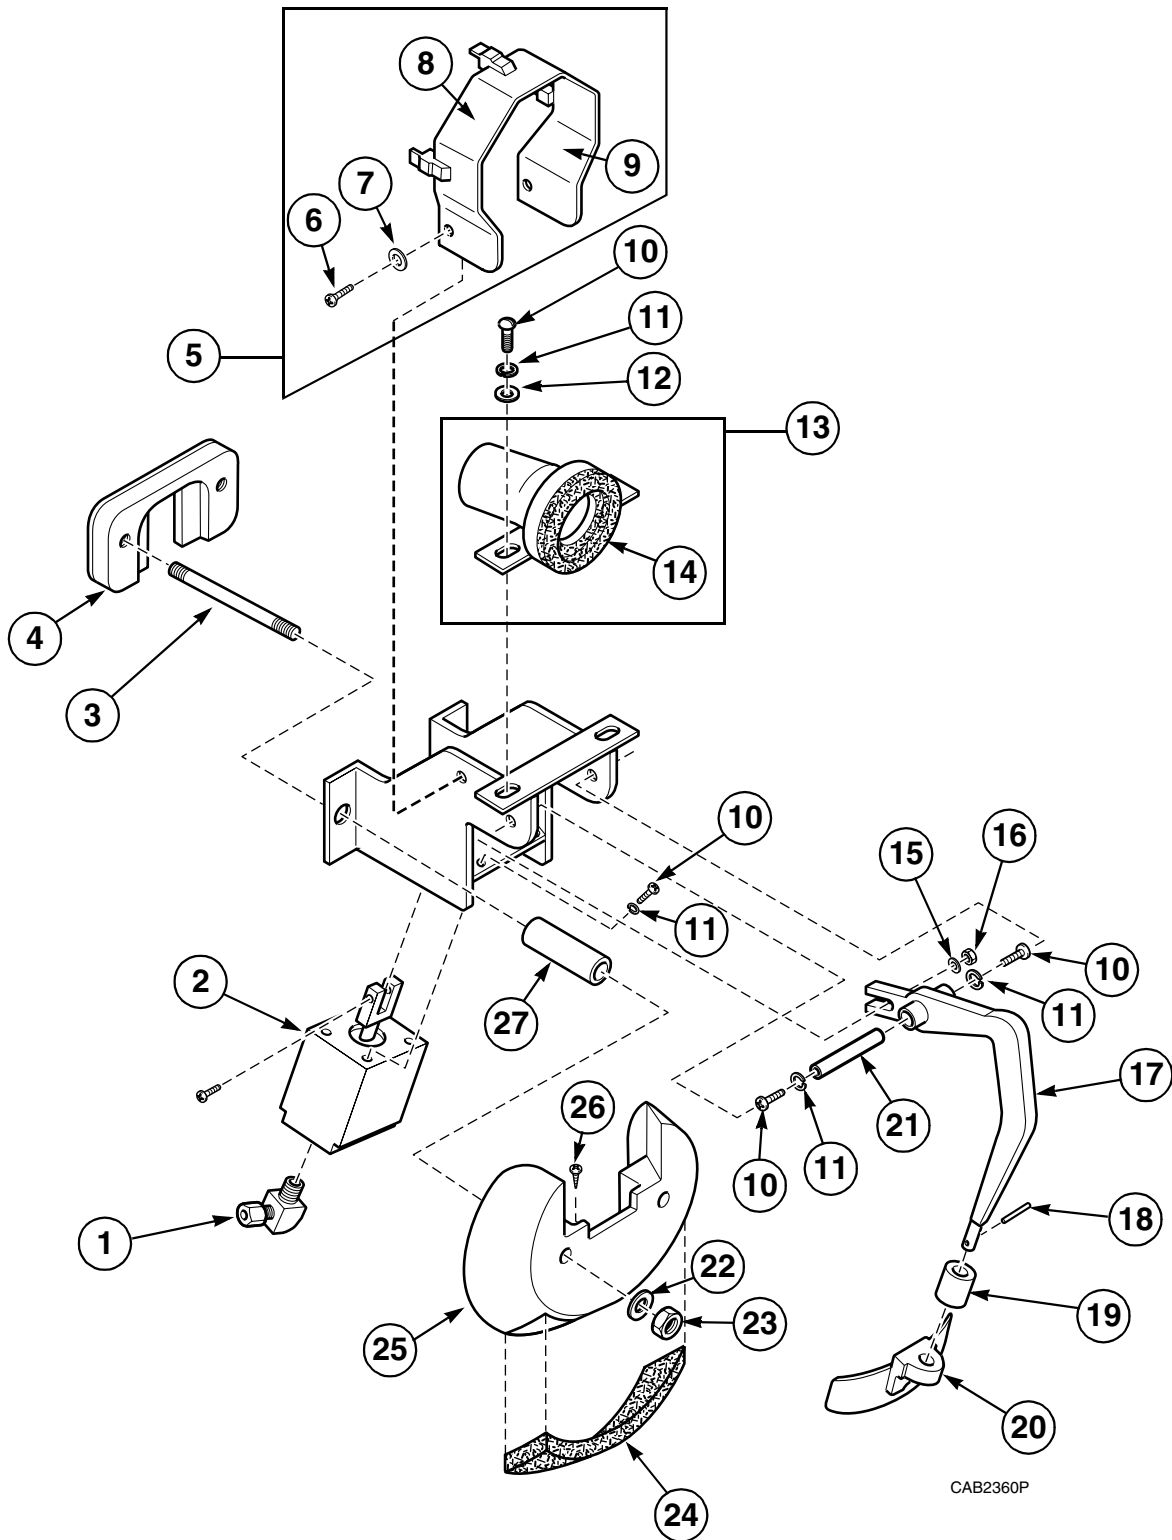


CAB2360P

Collar Block Assembly (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-50770	Male Compression Elbow	
2	J1504018	Collar Block Cylinder Assembly	Refer to <i>Collar Block Cylinder Assembly</i> section for parts breakdown
3	J200144100	Screw	2 required
4	J200103900	Mounting Bracket Plate	
5	J0637755-00	Heat Shield and Cover Assembly	Includes items 6-9
6	F430909	Screw	2 required
7	F430311	Washer	
8	J0150523-00	Heat Shield Cover	
9	J0637754-00	Heat Shield	
10	J1185107	Screw	8 required
11	J1000975	Washer	9 required
12	J1001213	Washer	8 required
13	JA-09174	Collar Tube Assembly	Includes item 14
14	J1401389	Seal	Silicon
15	J1085984	Washer	
16	J1489053	Screw	
17	J1624774	Collar Block Arm Assembly	
18	J1407725	Roll Pin	
19	J1648831	Collar Block Spacer	
20	JA-22812	Swivel Clamp	
21	J1484401	Collar Block Axle	
22	F431134	Washer	2 required
23	M400026	Nut	2 required
24	JA-09244	Insert Assembly	
25	JA-24340	Collar Block	
26	JA-50454	Screw	2 required
27	J1488873	Collar Block Spacer	2 required

Collar Block Assembly (Drawing 2 of 2)

Models Starting March 2004

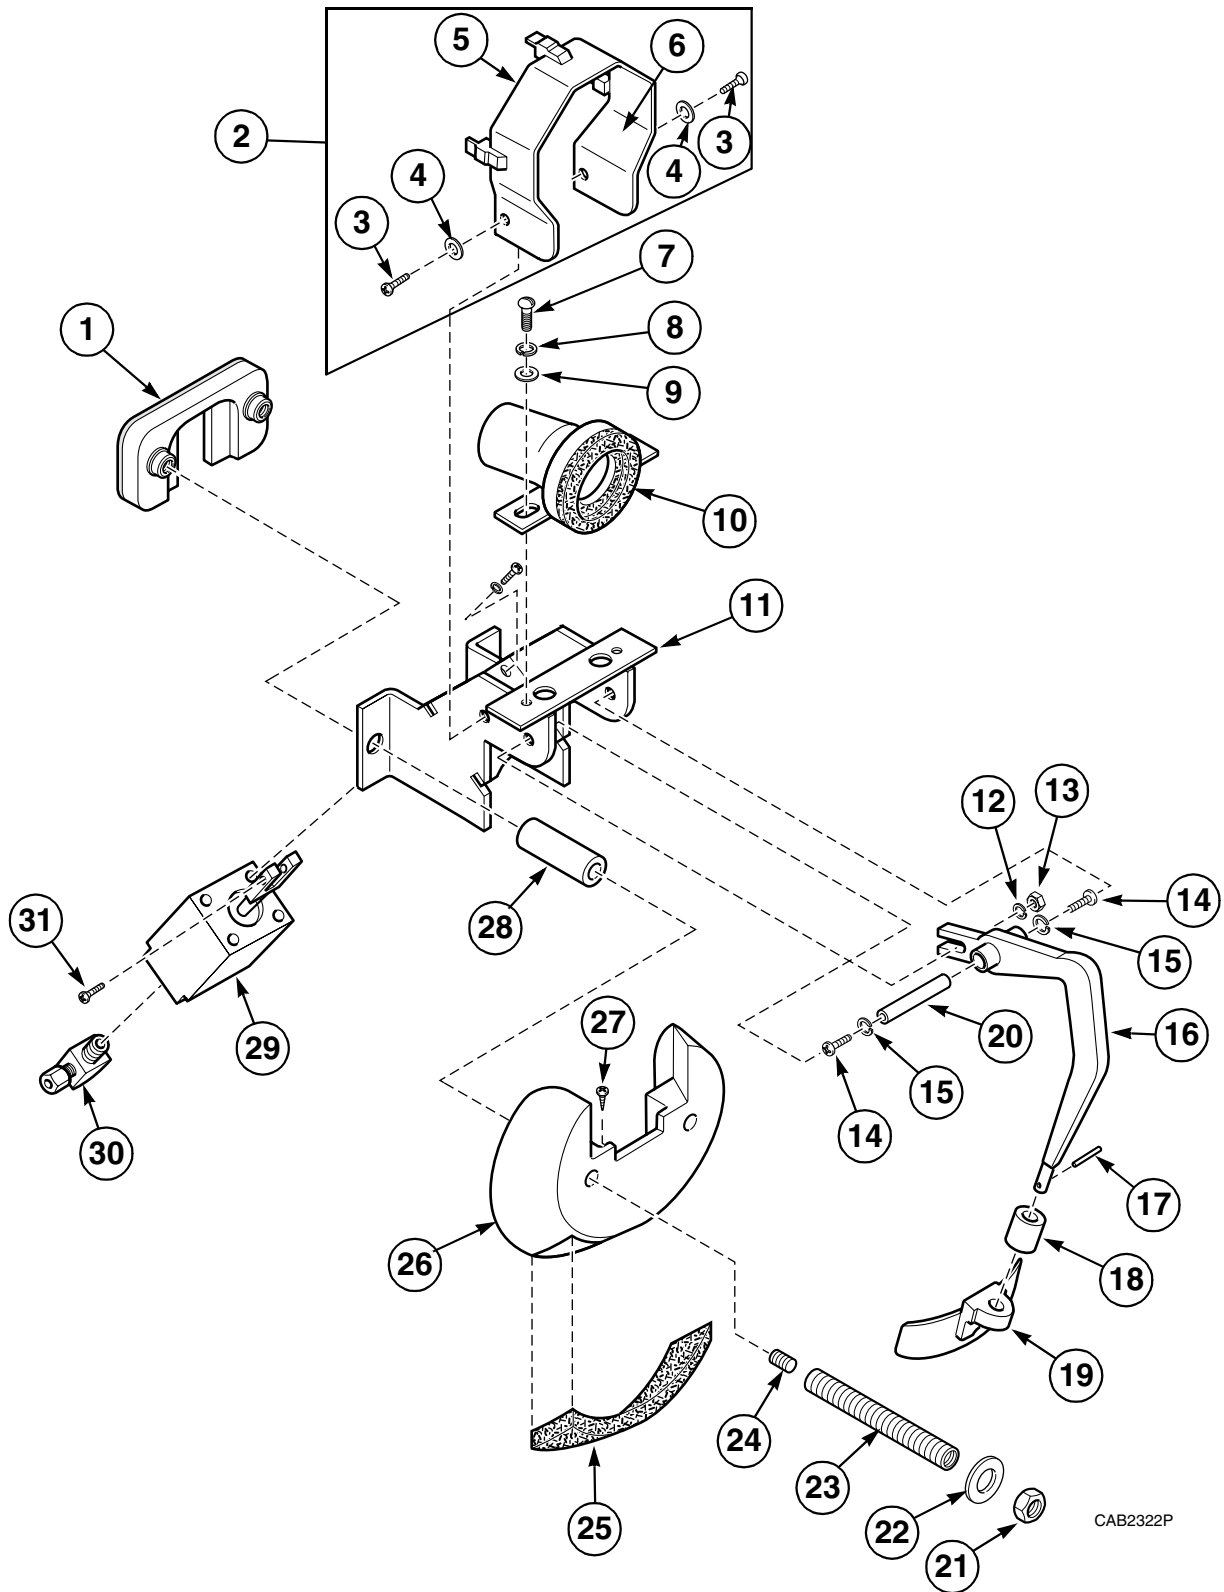


CAB2322P

Collar Block Assembly (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J200104200	Collar Block Assembly	Includes items 1-2 and 7-31
1	J200103900	Mounting Bracket Plate	
2	J0637755-00	Heat Shield and Cover Assembly	Includes items 3-6
3	F430909	Screw	2 required
4	F430311	Washer	2 required
5	J0150523-00	Heat Shield Cover	Nomex
6	J0637754-00	Heat Shield	
7	J1185107	Screw	6 required
8	J1000975	Washer	6 required
9	J1001213	Washer	2 required
10	JA-09174	Collar Tube Assembly	
11	J200109000	Collar Housing Weldment	
12	J1085984	Washer	
13	J1209113	Nut	
14	J0430281-00	Screw	2 required
15	F430311	Washer	
16	J1624774	Collar Block Arm Assembly	
17	J1407725	Roll Pin	
18	J1648831	Collar Block Spacer	
19	JA-22812	Swivel Clamp	
20	J1484401	Collar Block Axle	
21	M400026	Nut	2 required
22	F431134	Washer	2 required
23	J200144100	Screw	2 required
24	JC-62303	Screw	2 required
25	JA-09244	Insert Assembly	
26	JA-24340	Collar Block	
27	JA-50454	Screw	2 required
28	J200108900	Collar Block Spacer	2 required
29	J1504018	Collar Block Cylinder Assembly	Refer to <i>Collar Block Cylinder Assembly</i> section for parts breakdown
30	JA-50770	Male Compression Elbow	
31	J1489053	Screw	

Collar Block Cylinder Assembly

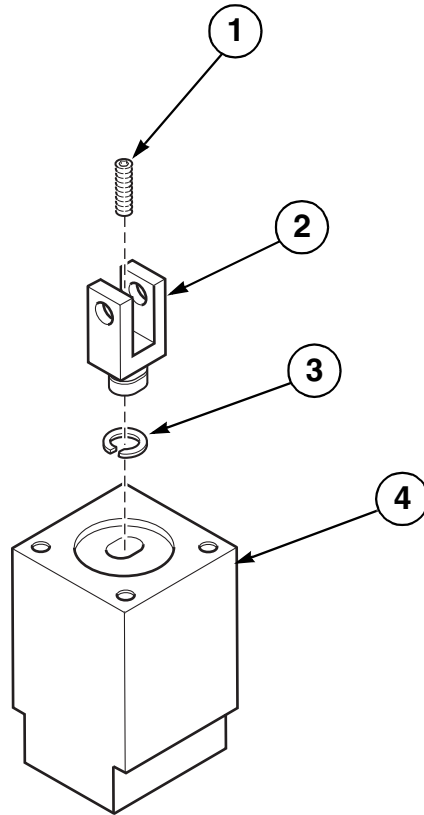


CAB2199P

Collar Block Cylinder Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1504018	Collar Block Cylinder Assembly	Includes items 1 through 4
	J1537398	Collar Block Cylinder Assembly Repair Kit	Use to repair J1504018 Collar Block Cylinder Assembly; Kit contains 4 Viton O-Ring piston seals, 1 internal return spring and 1 snap ring
1	JA-50358	Screw	
2	J1484419	Collar Block Clevis	
3	J1000975	Washer	
4	J1484260	Collar Block Cylinder	


Sleeve Expander Assembly – Models Through October 7, 2003

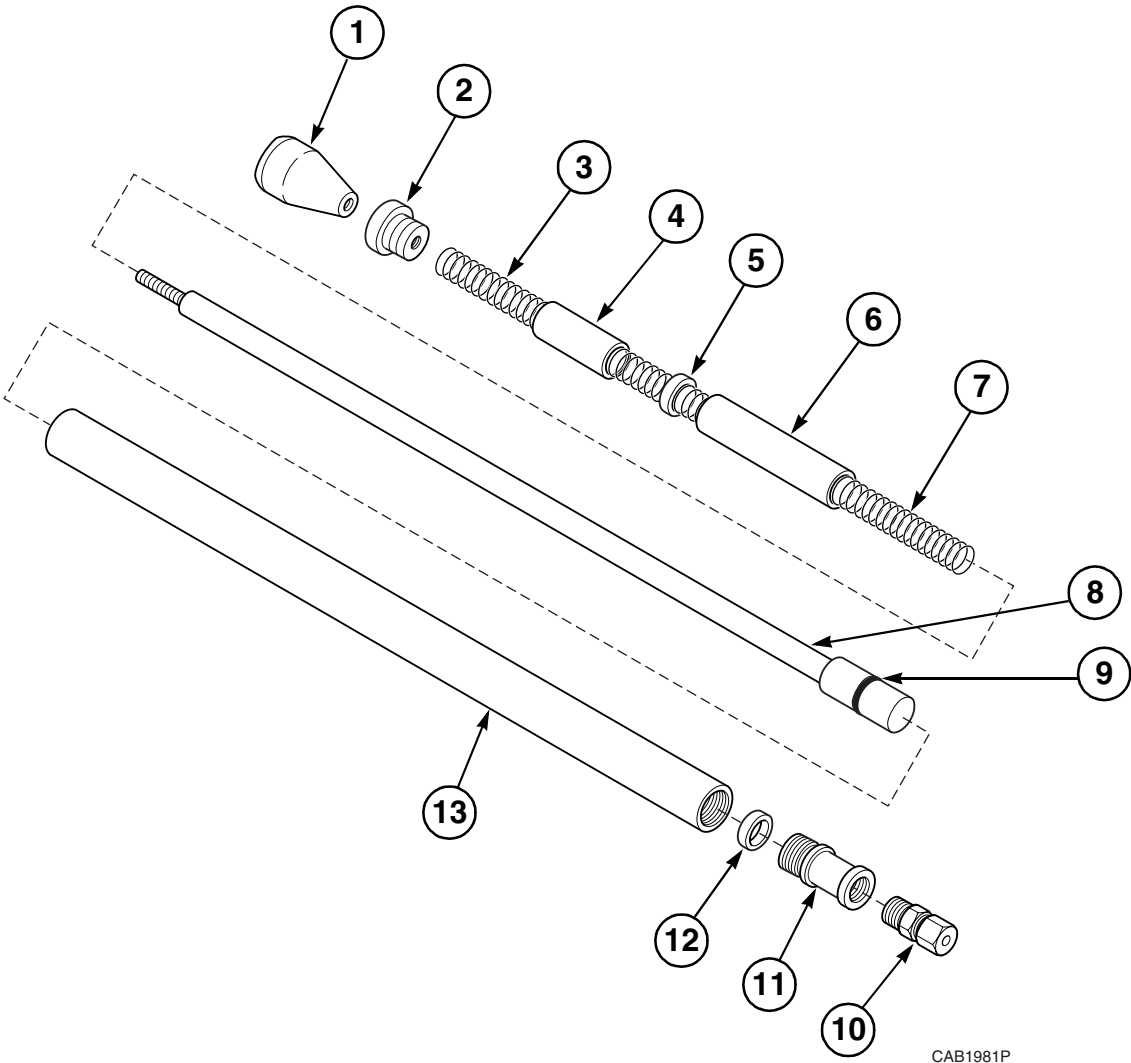

Sleeve Expander Assembly – Models Through October 7, 2003

REF	PART NO.	DESCRIPTION	COMMENTS
	J1473107	Sleeve Expander	2 required; Includes items 1-13
	J1492867	Sleeve Expander	2 required; Includes items 1-13
1	J1467968	Sleeve Expander Knob	
2	J1473792	Front Bushing	
3	JA-53077	Spring	
4	JA-19785	Spacer	
5	JA-12217	Spring Separator	
6	JA-16120	Spacer	
7	JA-50932	Spring	
8	J1616408	Shaft and Piston Assembly	
9	J1473800	Piston Seal	U-Cup
10	J1151661	Compression Connector	
11	J1473776	Rear Bushing	
12	J1507342	Rear Head Spacer	
13	J1473784	Sleeve Expander Tube	

Sleeve Expander – Models Starting October 8, 2003

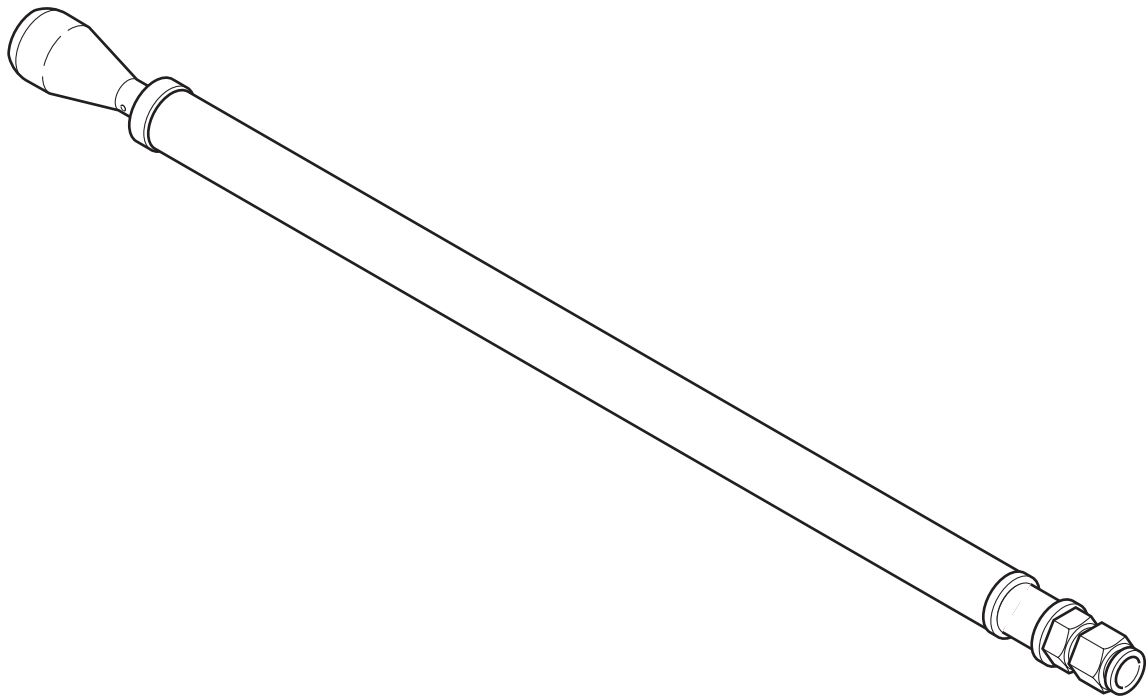


CAB2361P

Sleeve Expander – Models Starting October 8, 2003

REF	PART NO.	DESCRIPTION	COMMENTS
	J200055100	Sleeve Expander	2 required; 16 inch bucks; Not repairable
	J200055200	Sleeve Expander	2 required; 18 and 20 inch bucks; Not repairable

Front Head Close Toggle Assembly

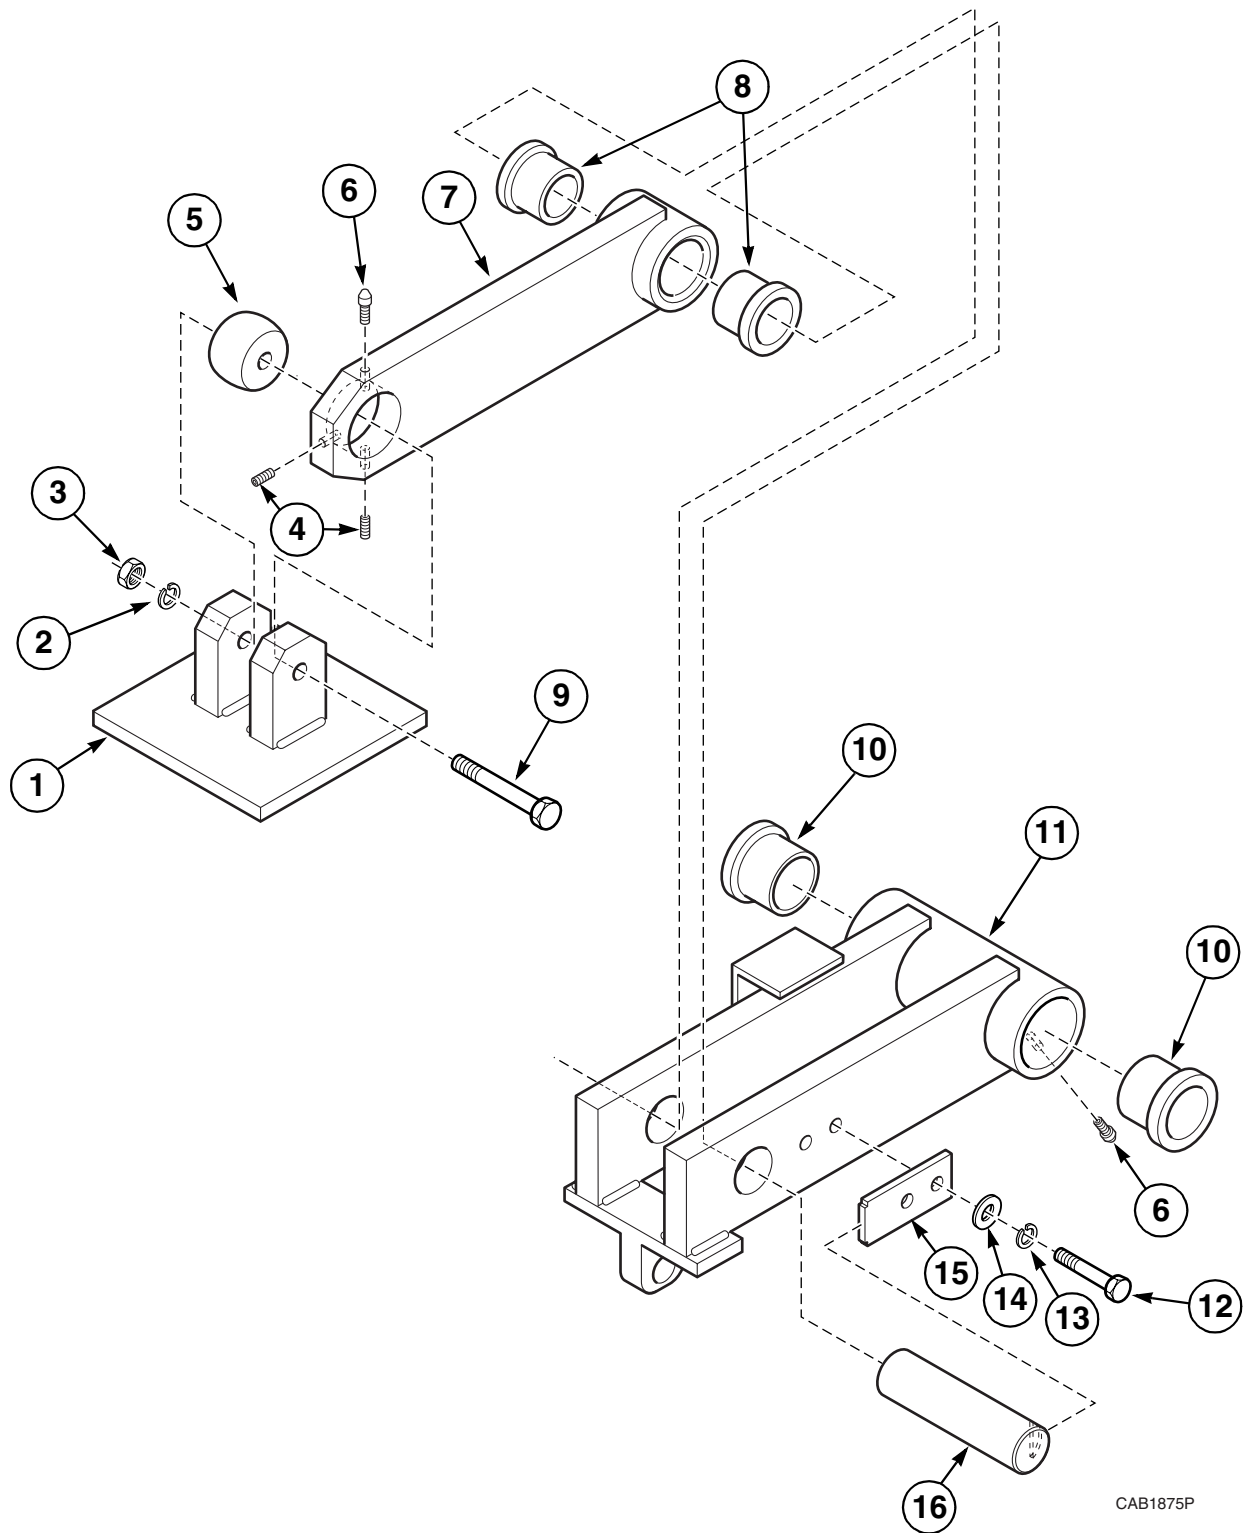


CAB1875P

Front Head Close Toggle Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J159468800	Front Head Close Toggle Assembly	Includes items 1-16
1	J200131100	Head Pivot Bracket Weldment	
2	91200	Washer	
3	J1000850	Nut	4 required
4	JC-63342	Screw	2 required
5	JA-55082	Spherical Bearing	
6	JC-30809	Straight Grease Fitting	2 required
7	J200136100	Toggle Arm Weldment	
8	J1262880	Oilless Flanged Bearing	2 required
9	JA-50197	Screw	
10	J1415553	Oilless Flanged Bearing	2 required
11	J200130400	Female Toggle Arm Weldment	
12	J1001726	Screw	2 required
13	J1185073	Washer	2 required
14	JC-80513	Washer	2 required
15	J154491501	Pivot Tab	
16	J1544907	Pivot Toggle Pin	

Roller Bracket Assembly

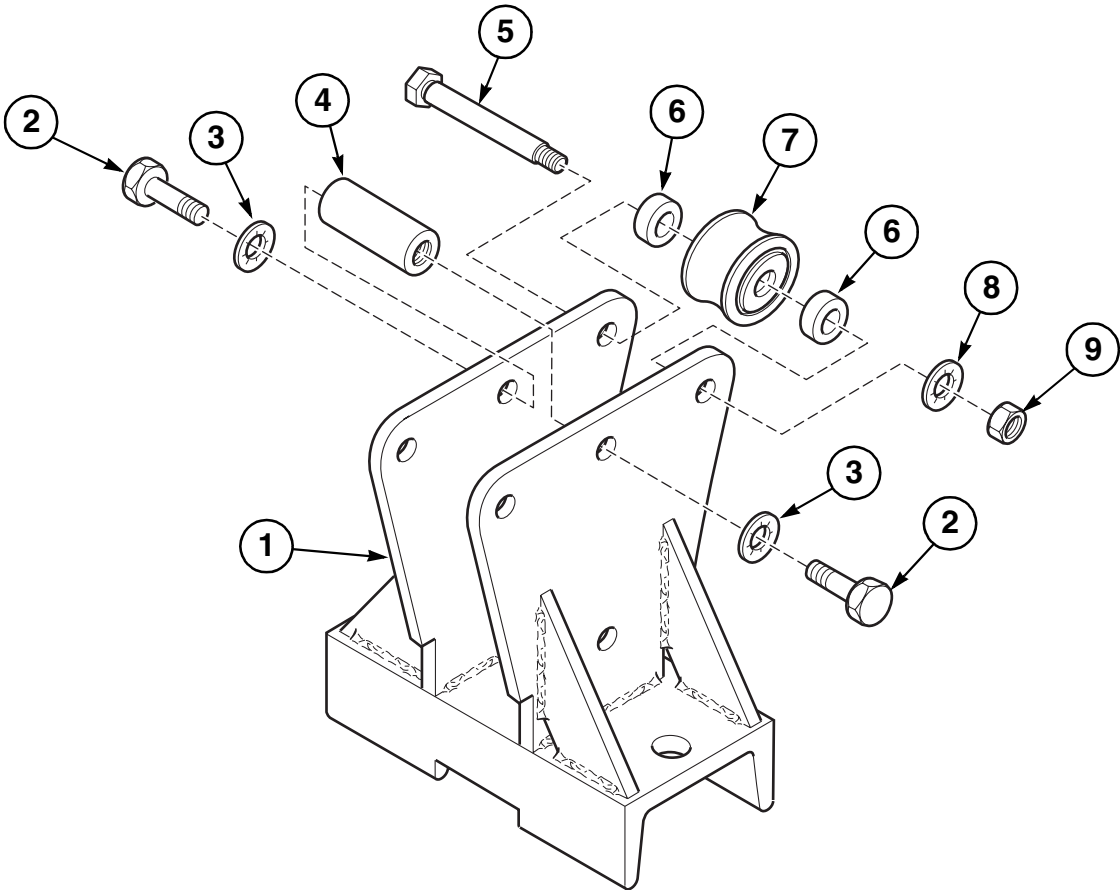


CAB2067P

Roller Bracket Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1405786	Roller Bracket Assembly	2 required; Includes items 1-9
1	J0637851-00	Roller Bracket Weldment	
2	JC-61854	Screw	2 required
3	J1001122	Washer	2 required
4	J1377654	Large Spacer	
5	J1377696	Pin	3 required
6	J200157100	Small Spacer	6 required
7	JA-06318	Roller Assembly	3 required
8	M400014	Washer	3 required
9	20274	Nut	3 required

Front Receiving Tube and Carriage Assembly

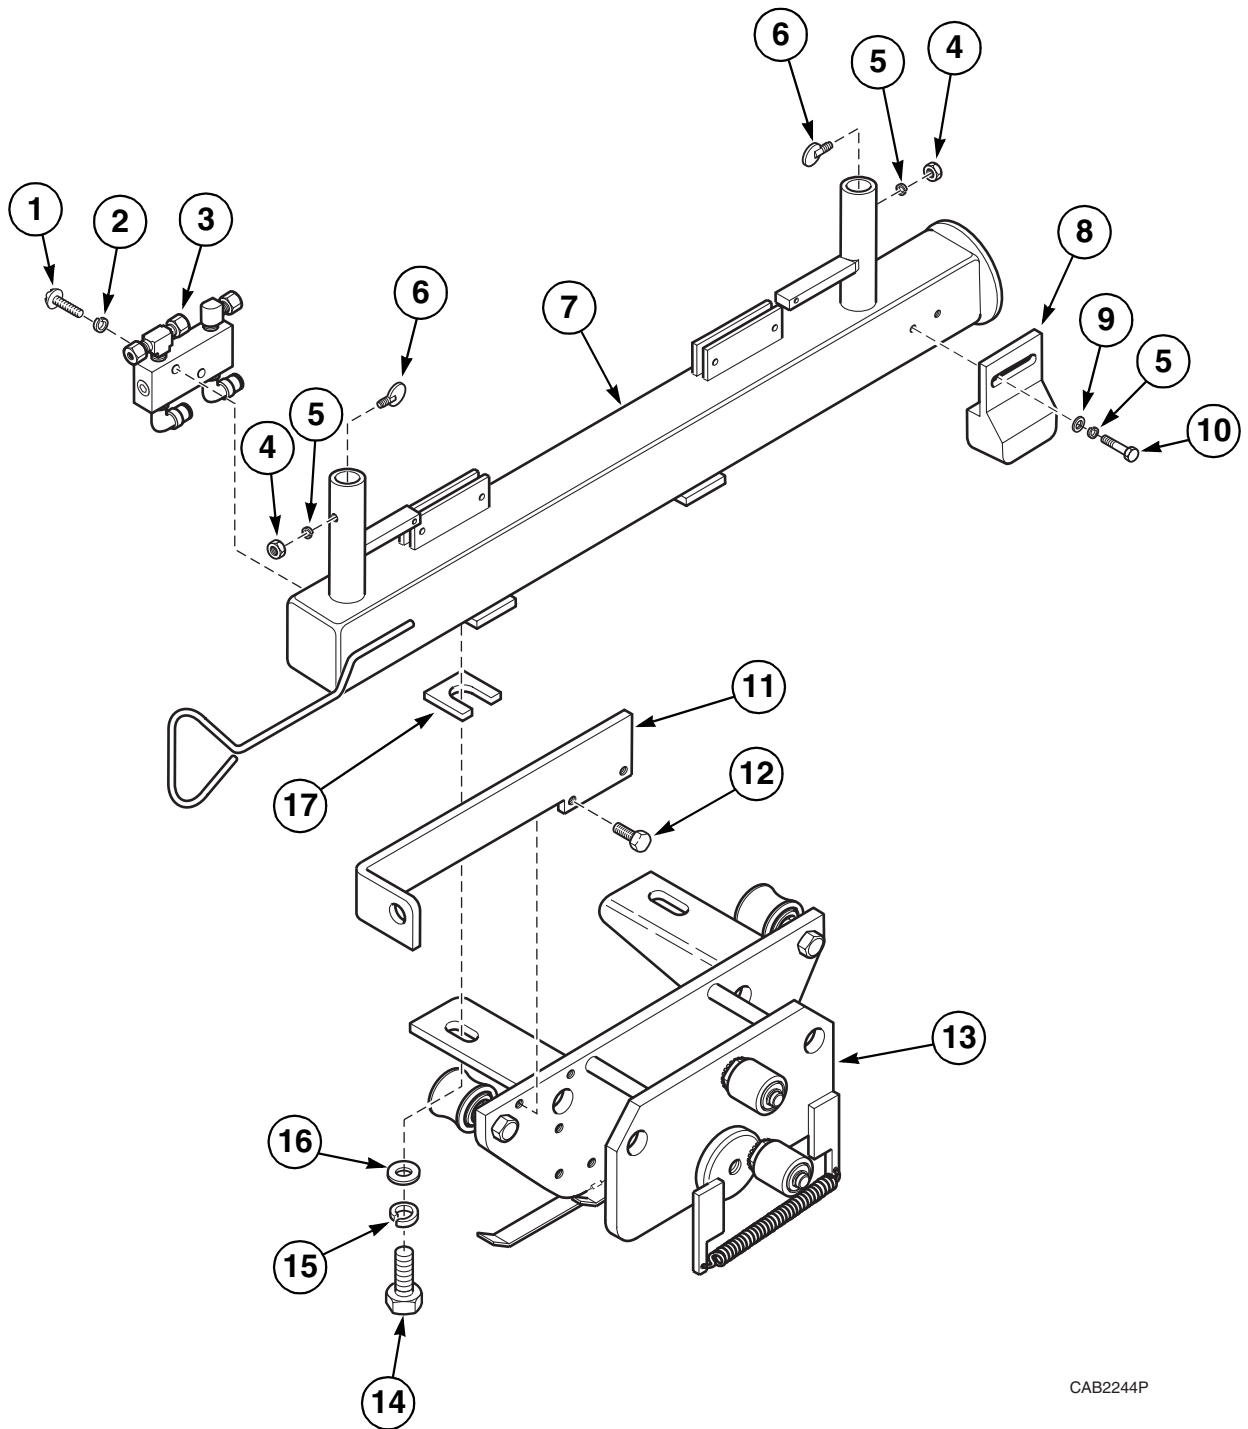


CAB2244P

Front Receiving Tube and Carriage Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200000600	Front Receiving Tube and Carriage Assembly	Includes items 1-17
1	JC-61273	Screw	2 required
2	J1000975	Washer	2 required
3	J1473156	Air Manifold Assembly	Refer to <i>Air Manifold Assembly</i> section for parts break-down
4	20275	Nut	2 required
5	J1185073	Washer	4 required
6	JA-04746	Butterfly Assembly	2 required
7	J1546084	Receiving Tube Weldment	
8	JA-23921	Switch Actuator Cam	
9	JC-80513	Washer	2 required
10	J1001726	Screw	2 required
11	J1613124	Cylinder Mounting Weldment	Front
12	F430907	Screw	2 required
13	J0637986-00	Front Carriage Assembly	Refer to <i>Front Carriage Assembly</i> section for parts break-down
14	JA-50190	Screw	2 required
15	91200	Washer	2 required
16	JA-22689	Washer	2 required
17	JA-23390	Spacer	Use as required

Rear Receiving Tube and Carriage Assembly

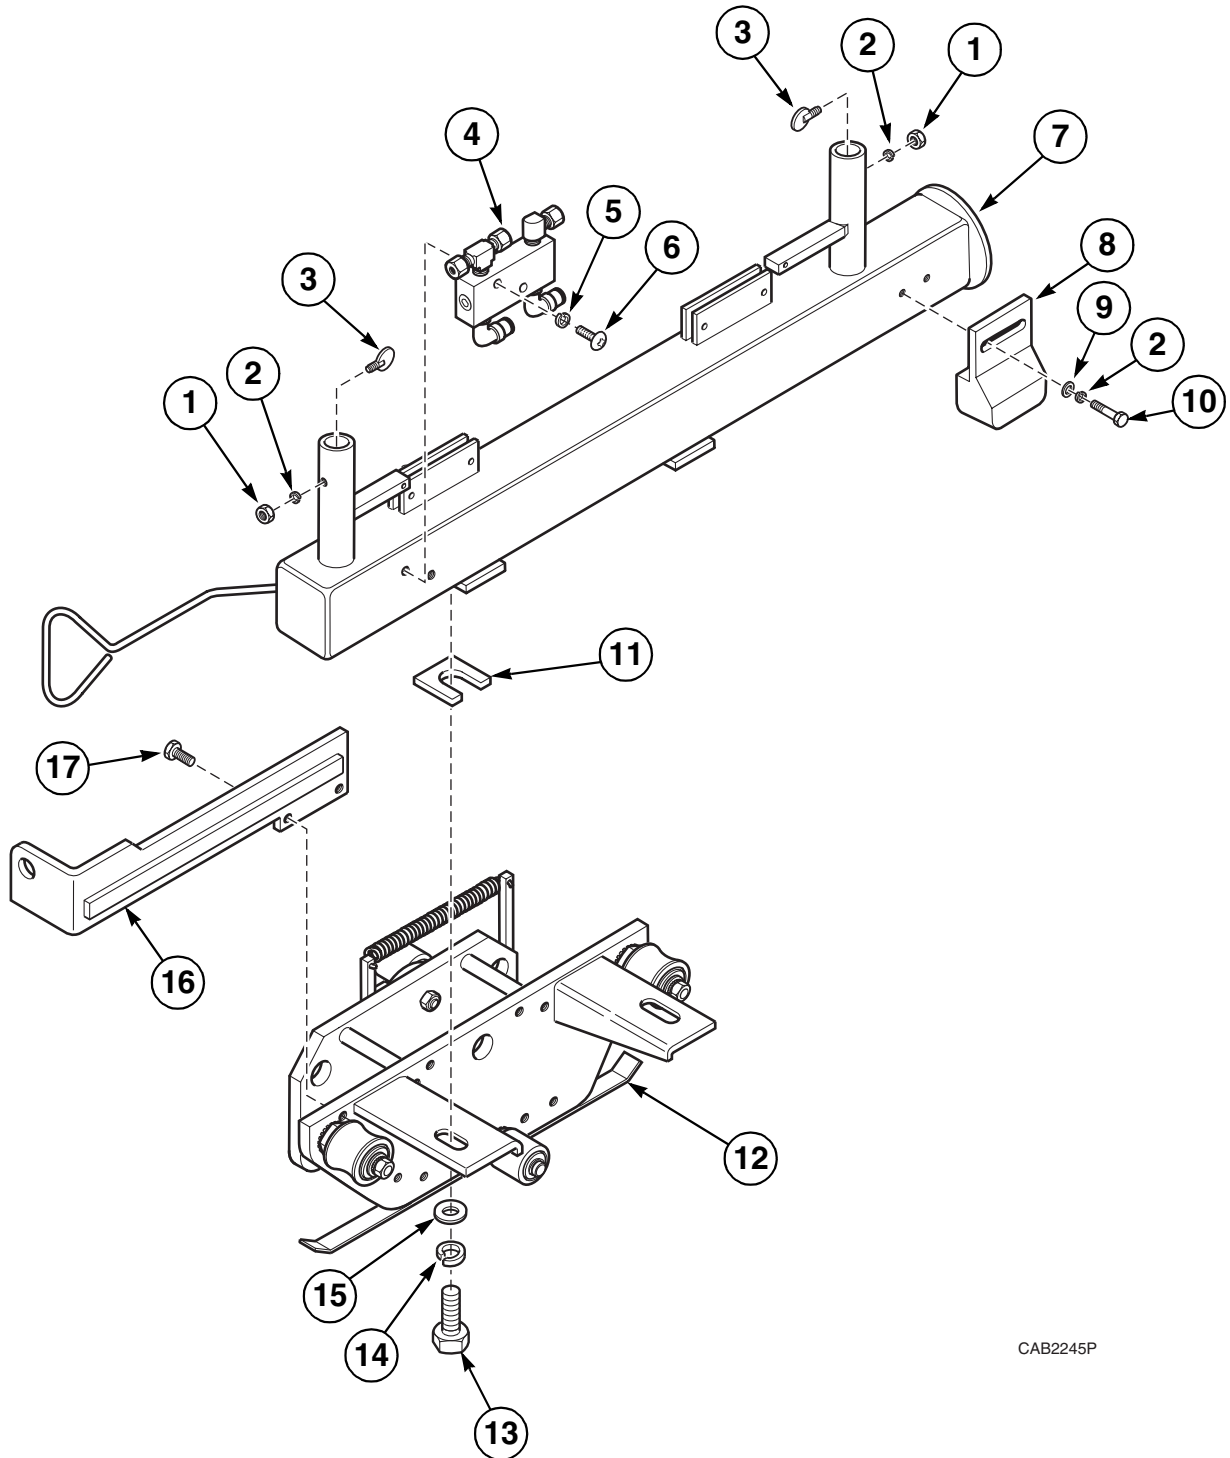


CAB2245P

Rear Receiving Tube and Carriage Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200000700	Rear Receiving Tube and Carriage Assembly	Includes items 1-17
1	20275	Nut	2 required
2	J1185073	Washer	4 required
3	JA-04746	Butterfly Assembly	2 required
4	J1473156	Air Manifold Assembly	Refer to <i>Air Manifold Assembly</i> section for parts break-down
5	J1000975	Washer	2 required
6	JC-61273	Screw	2 required
7	J1546092	Receiving Tube Weldment	
8	JA-23921	Switch Actuator Cam	
9	JC-80513	Washer	2 required
10	J1001726	Screw	2 required
11	JA-23390	Spacer	Use as required
12	J0637987-00	Rear Carriage Assembly	Refer to <i>Rear Carriage Assembly</i> section for parts break-down
13	JA-50190	Screw	2 required
14	91200	Washer	2 required
15	JA-22689	Washer	2 required
16	J1615038	Cylinder Mounting Carriage Weldment	Rear
17	F430907	Screw	2 required

Front Carriage Assembly

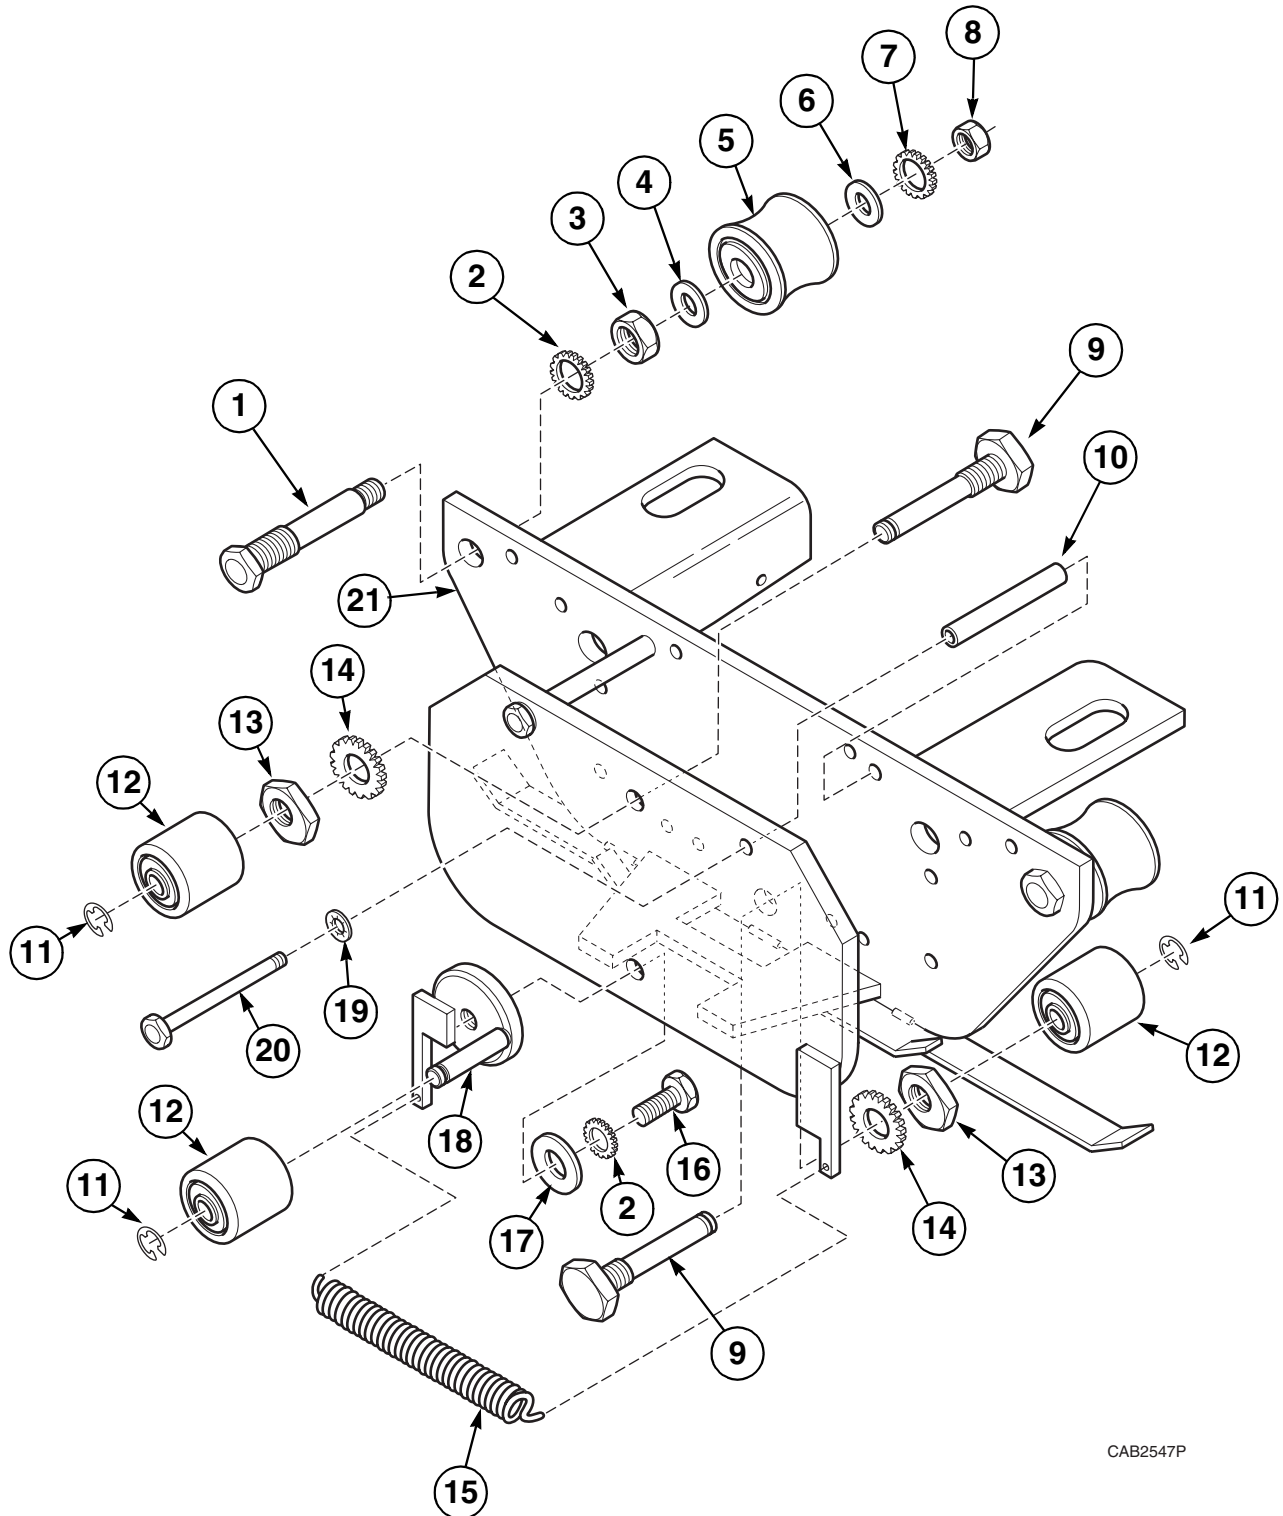


CAB2547P

Front Carriage Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J0637986-00	Front Carriage Assembly	Includes items 1-21
1	J1435791	Roller Locking Shaft	2 required
2	M403958	Washer	3 required
3	M400022	Nut	2 required
4	J1001304	Washer	2 required
5	JA-06318	Roller Assembly	Concave; 2 required
6	J1618990	Washer	2 required
7	JA-53985	Washer	2 required
8	20274	Nut	2 required
9	J1435809	Roller Adjusting Shaft	2 required
10	J1518315	Spacer	2 required
11	JA-53987	Retaining Ring	3 required
12	JA-09186	Flat Roller	3 required
13	J1435783	Nut	2 required
14	JA-53986	Washer	3 required
15	JA-51318	Spring	
16	JA-50148	Screw	
17	J1001338	Washer	
18	J1616044	Tensioner Weldment	
19	M400013	Washer	2 required
20	JA-55433	Screw	2 required
21	J0637984-00	Carriage Bracket Weldment	

Rear Carriage Assembly

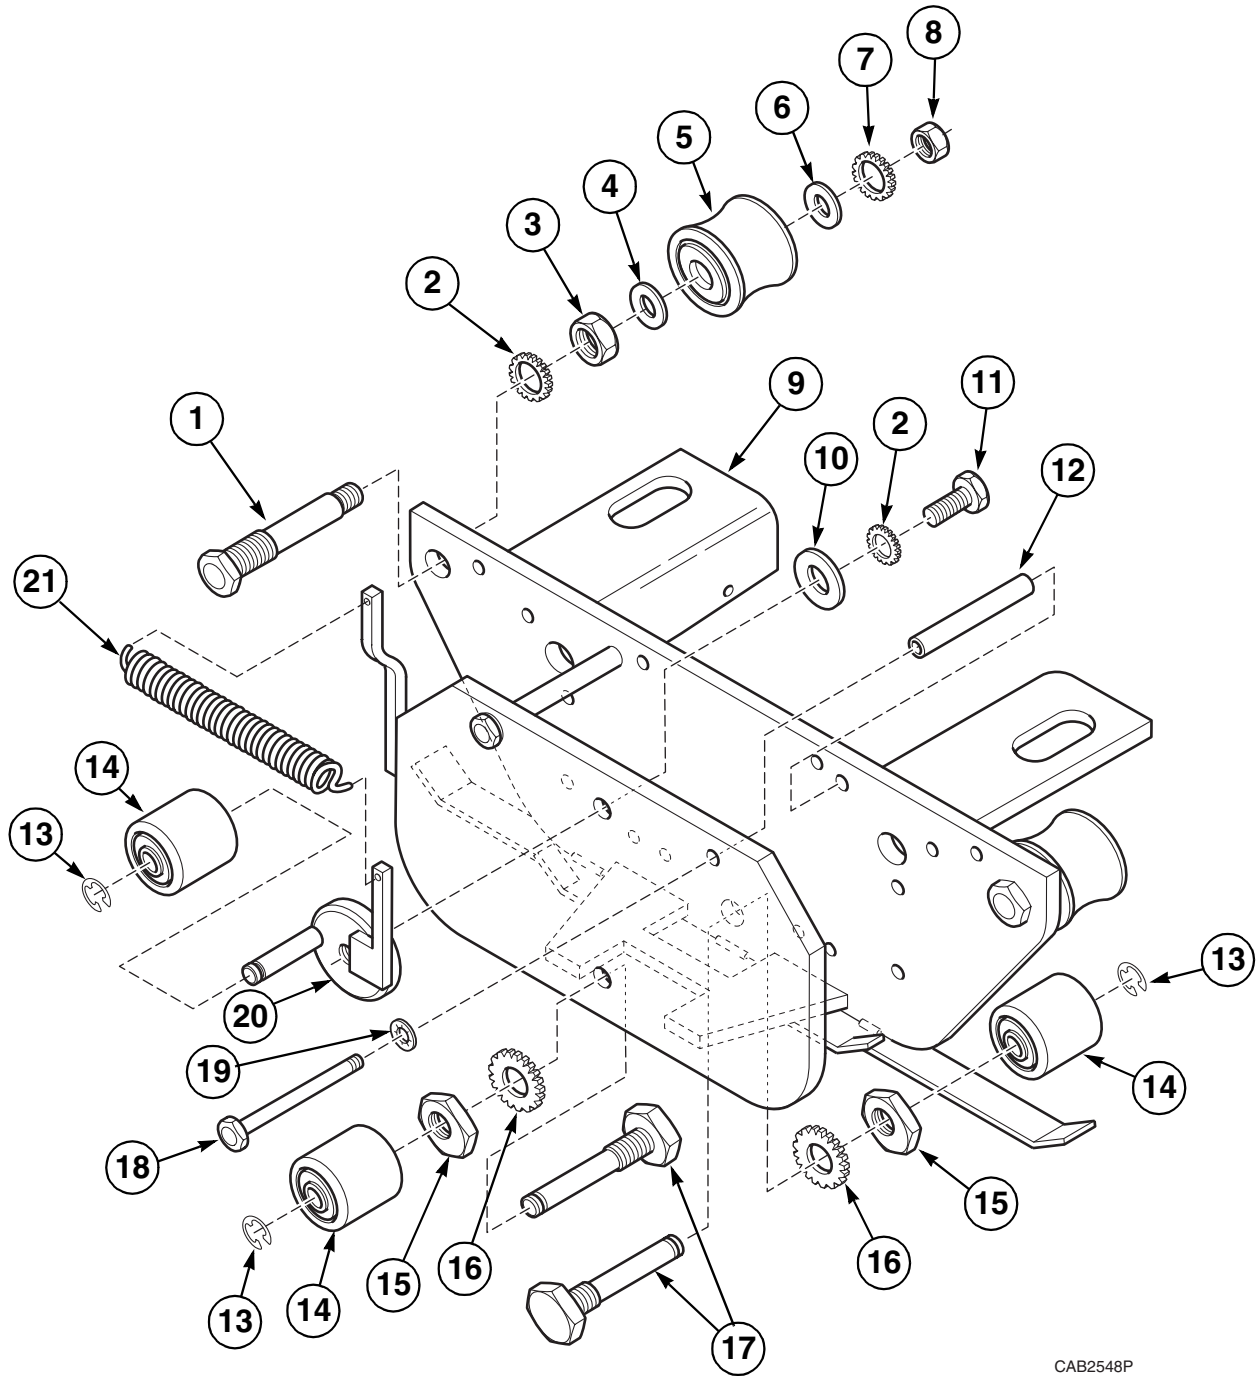


CAB2548P

Rear Carriage Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J0637987-00	Rear Carriage Assembly	Includes items 1-21
1	J1435791	Roller Locking Shaft	2 required
2	M403958	Washer	3 required
3	M400022	Nut	2 required
4	J1001304	Washer	2 required
5	JA-06318	Roller Assembly	Concave; 2 required
6	J1618990	Washer	2 required
7	JA-53985	Washer	2 required
8	20274	Nut	2 required
9	J0637985-00	Carriage Bracket Weldment	
10	J1001338	Washer	4 required
11	JA-50148	Screw	
12	J1518315	Spacer	2 required
13	JA-53987	Retaining Ring	3 required
14	JA-09186	Flat Roller	3 required
15	J1435783	Nut	2 required
16	JA-53986	Washer	2 required
17	J1435809	Roller Adjusting Shaft	2 required
18	JA-55433	Screw	2 required
19	M400013	Washer	2 required
20	J1435833	Tensioner Weldment	
21	JA-51318	Spring	

Buck to Receiving Tube Assembly

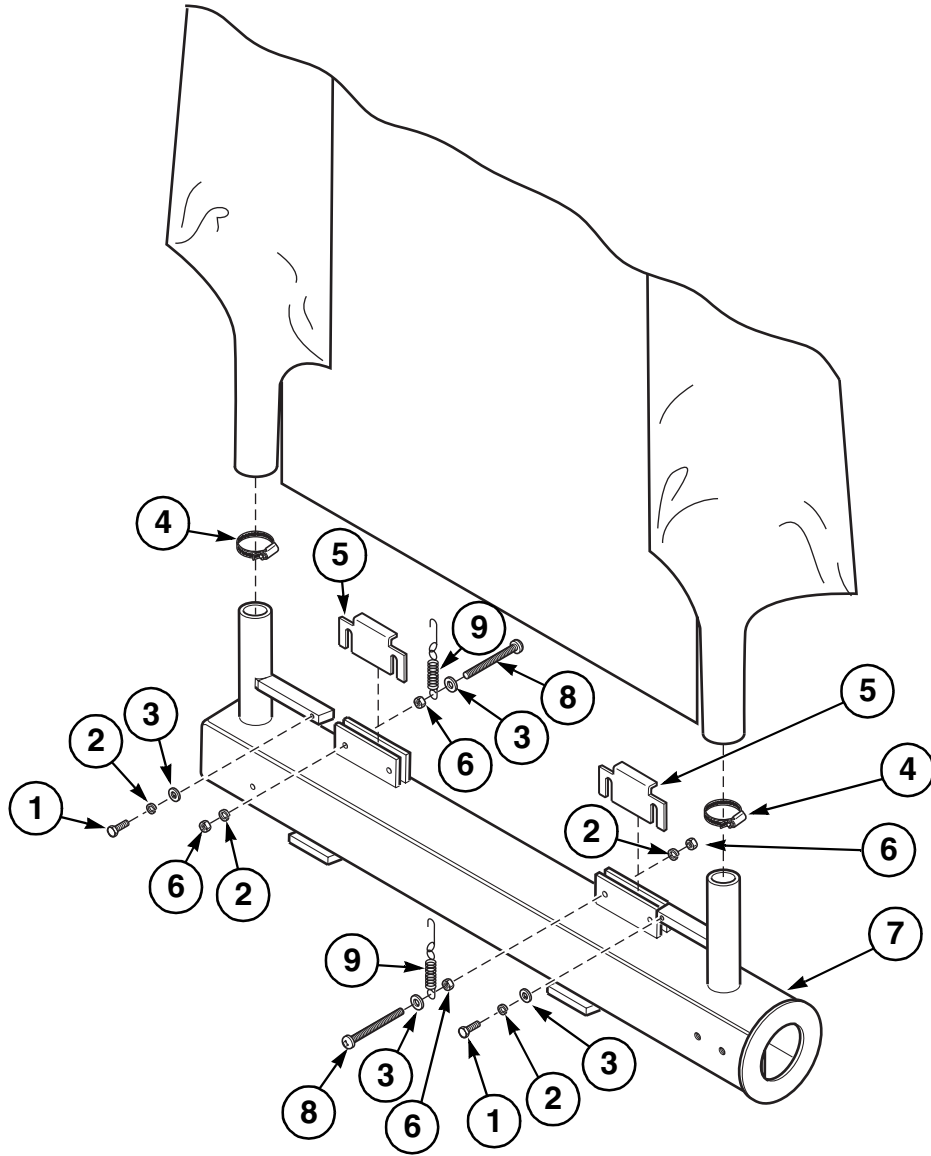


CAB2073P

Buck to Receiving Tube Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-53020	Screw	4 required
2	J1185073	Washer	12 required
3	JC-80583	Washer	12 required
4	J1153865	Worm Gear Clamp	4 required
5	J200095300	Shim Sheet	4 required
6	20275	Nut	8 required
7	J200000600	Front Receiving Tube and Carriage Assembly	Refer to <i>Front Receiving Tube and Carriage Assembly</i> section for parts breakdown
	J200000700	Rear Receiving Tube and Carriage Assembly	Refer to <i>Rear Receiving Tube and Carriage Assembly</i> section for parts breakdown
8	JA-51557	Screw	8 required
9	JA-51399	Extension Spring	8 required


Air Manifold Assembly

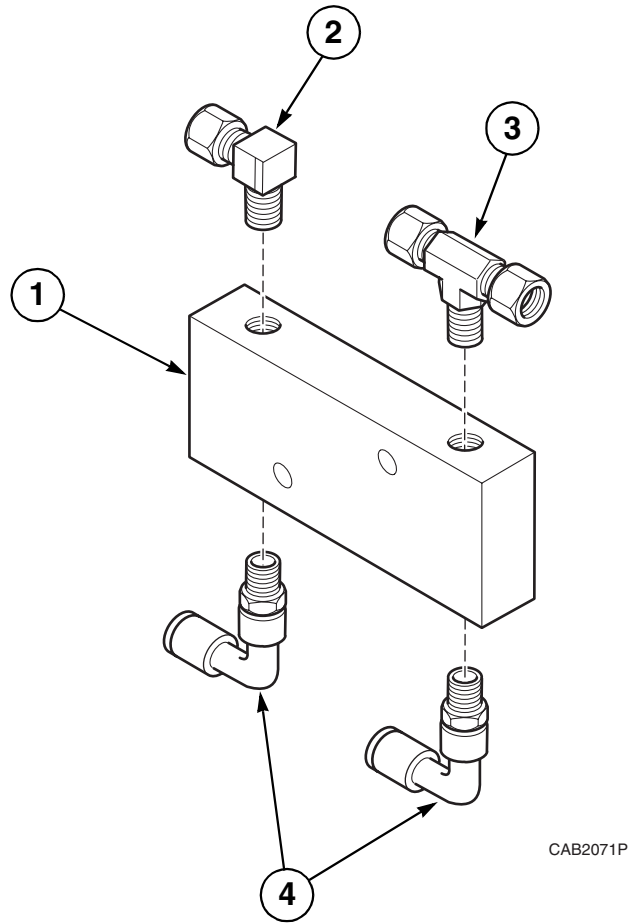

Air Manifold Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1473156	Air Manifold Assembly	2 required; Includes items 1-4
1	J1618958	Manifold	
2	JA-50770	Male Compression Elbow	
3	JC-30734	Male Compression Tee	
4	J1407741	Swivel Tubing Elbow	2 required

Buck Index Cylinder Assembly

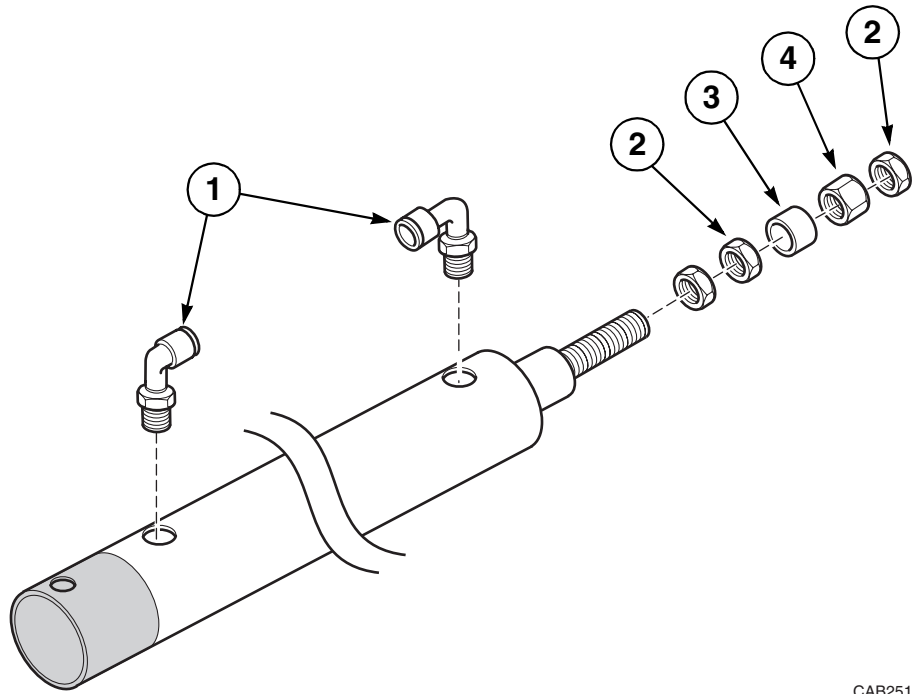


CAB2513P

Buck Index Cylinder Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J0637994-00	Buck Index Cylinder Assembly	Includes items 1-4
	J0250811-00	Cylinder Seal Kit	Use to repair cylinder
1	J1407741	Swivel Tubing Elbow	2 required
2	JA-51474	Nut	2 required
3	JA-15762	Bushing	
4	JC-48229	Nut	

Rear Roller Support Assembly

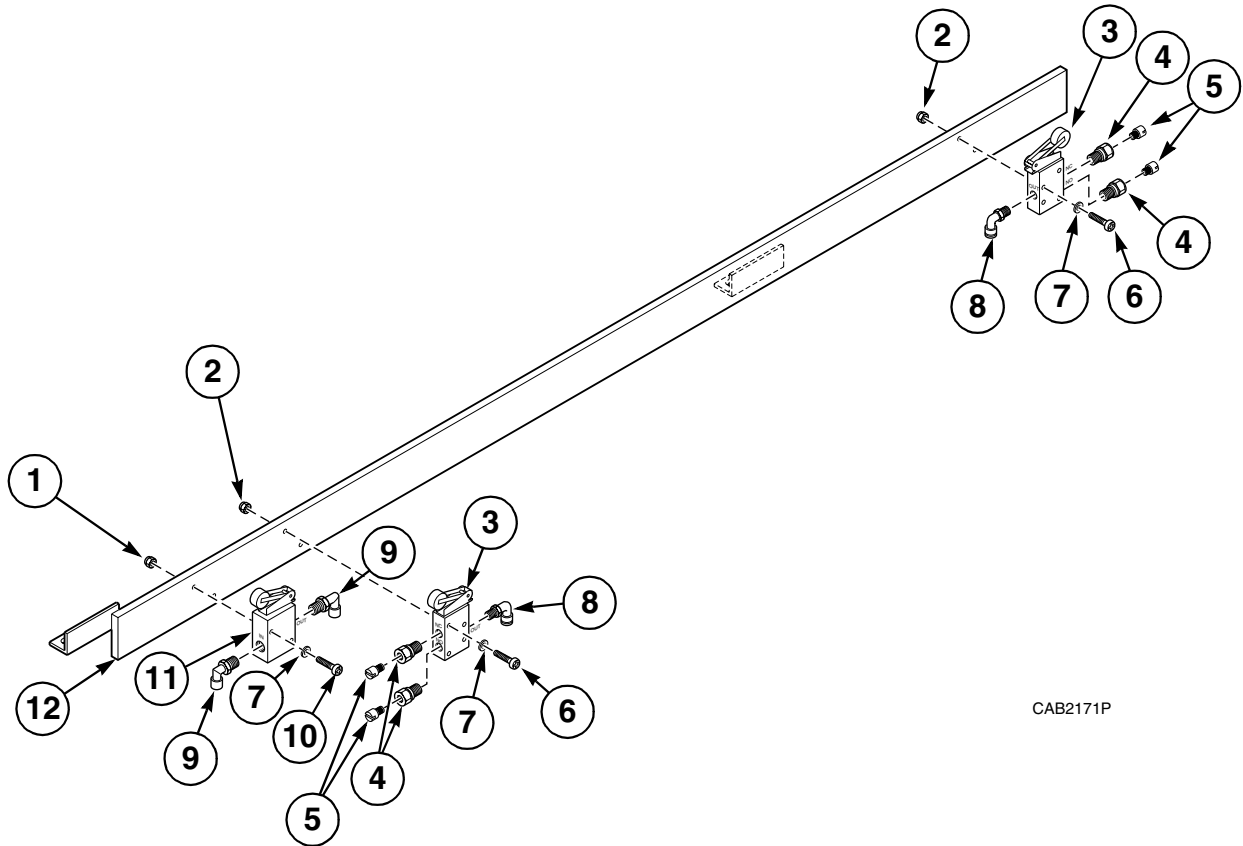


CAB2171P

Rear Roller Support Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200020200	Roller Support Assembly	Includes items 1-12
	J200012100	Roller Valve Assembly	Includes items 9 and 11
	J200020000	Roller Valve Assembly	2 required; Includes items 3-5 and 8
1	F430220	Nut	4 required
2	F430232	Nut	2 required
3	J200126800	Speed Change Valve	2 required
4	J1346105	Screw	4 required
5	J1358357	Male Adapter Bushing	4 required
6	F432252	Screw	4 required
7	F431123	Washer	14 required
8	J1407741	Swivel Tubing Elbow	2 required
9	J1419811	Swivel Tubing Elbow	2 required
10	J200055600	Screw	2 required
11	J200154800	Limit Switch Valve	
12	J200021300	Roller Mounting Weldment	

Front Roller Support Assembly

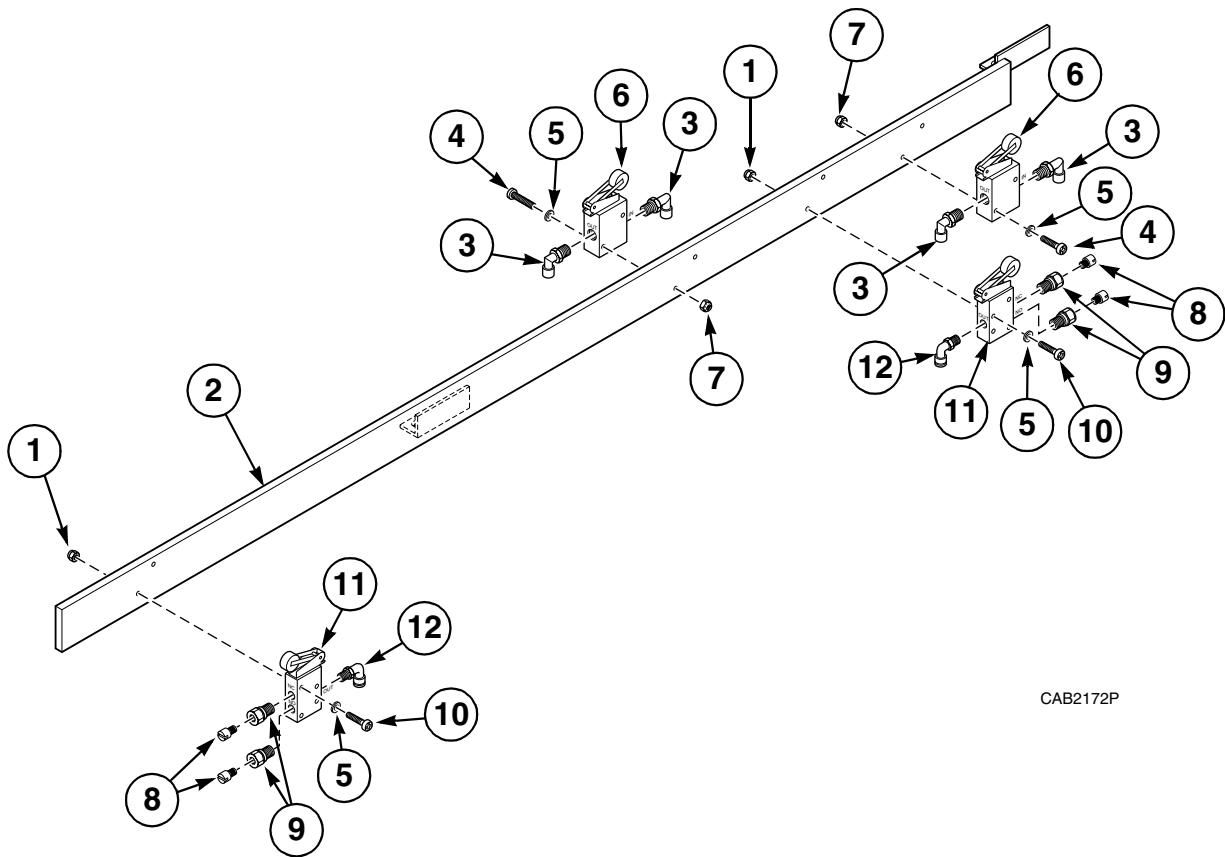


CAB2172P

Front Roller Support Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200020300	Roller Support Assembly	Includes items 1-12; Front
	J200012100	Roller Valve Assembly	2 required; Includes items 3 and 6
	J200020000	Roller Valve Assembly	2 required; Includes items 8-9 and 11-12
1	F430232	Nut	4 required
2	J200021400	Roller Mounting Weldment	Front
3	J1419811	Swivel Tubing Elbow	4 required
4	F432252	Screw	4 required
5	F431123	Washer	16 required
6	J200154800	Limit Switch Valve	2 required
7	F430220	Nut	4 required
8	J1346105	Screw	4 required
9	J1358357	Male Adapter Bushing	4 required
10	J200055600	Screw	4 required
11	J200126800	Speed Change Valve	2 required
12	J1407741	Swivel Tubing Elbow	2 required

Air System – Models Through July 11, 2004 (Drawing 1 of 2)

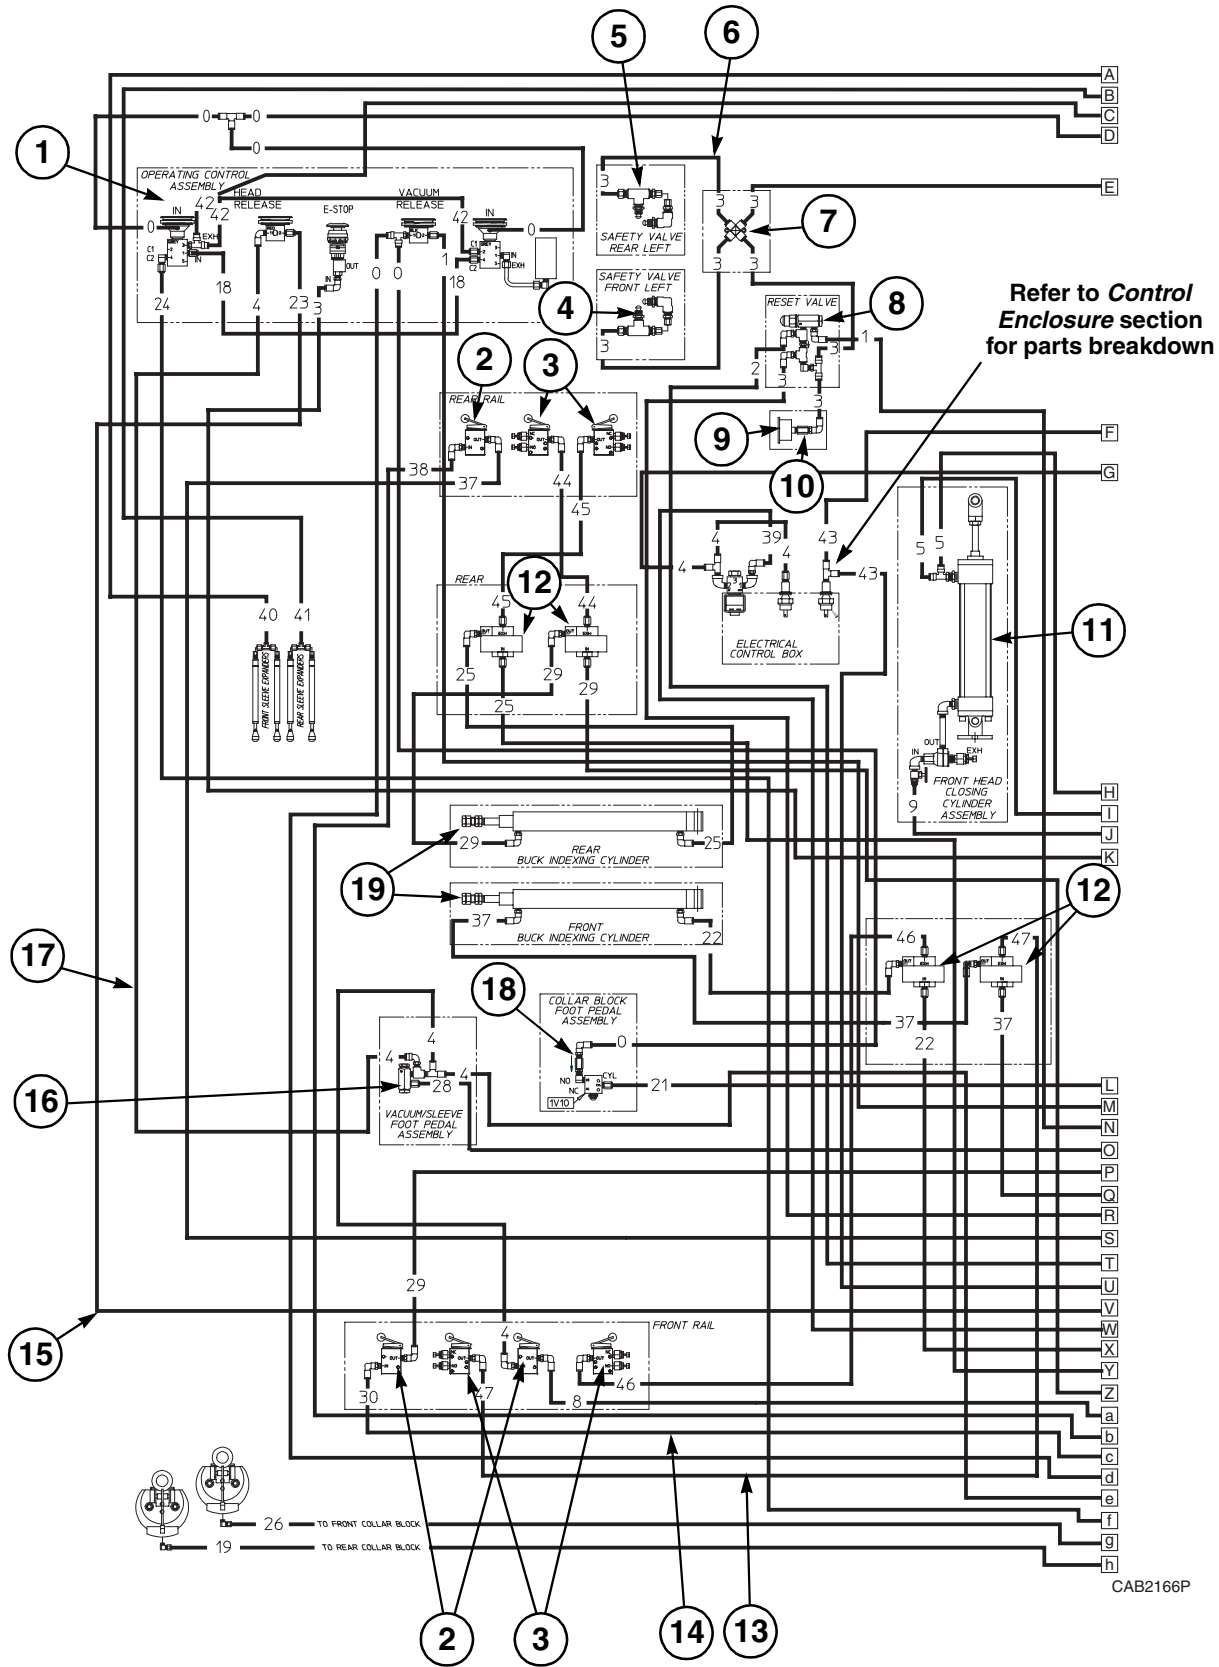


Air System – Models Through July 11, 2004 (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1484930	Pedal Base Assembly	Used with item 16
1	J200096400	Operator Control Panel Assembly	Refer to <i>Operator Control Panel Assembly</i> section for parts breakdown
2	J200012100	Roller Valve Assembly	3 required
3	J200020000	Roller Valve Assembly	4 required
4	J1571041	Front Left Safety Bar Bracket Assembly	Refer to <i>Front Left Safety Bar Bracket Assembly</i> section for parts breakdown
5	J1571058	Rear Left Safety Bar Bracket Assembly	Refer to <i>Rear Left Safety Bar Bracket Assembly</i> section for parts breakdown
6	JM-93516	Sleeve	6 feet required
7	J200054900	Cross Union	
8	J200054300	Reset Valve Assembly	Refer to <i>Reset Valve Assembly</i> section for parts breakdown
9	J200128200	Pressure Gauge	0-100 psi
10	J1018571	Pipe Coupling	
11	J200055700	Front Head Closing Cylinder Assembly	Refer to <i>Front Head Closing Cylinder Assembly</i> section for parts breakdown
12	N/A	Quick Exhaust Valve Assembly	4 required
13	J0141704-00	Tubing	Yellow; 1/4 inch OD
14	J0141703-00	Tubing	Green; 1/4 inch OD
15	J0141706-00	Tubing	Purple; 1/4 inch OD
16	J1484682	Pedal Base and Valve Assembly	Refer to <i>Pedal Base and Valve Assembly</i> section for parts breakdown
17	J0141710-00	Tubing	Black; 1/4 inch OD
18	J1485010	Valve Assembly	Refer to <i>Foot Pedal and Collar Block Valve Assembly</i> section for parts breakdown
19	J0637994-00	Buck Index Cylinder Assembly	2 required; Refer to <i>Buck Index Cylinder Assembly</i> section for parts breakdown

N/A = Part no longer available

Air System – Models Through July 11, 2004 (Drawing 2 of 2)

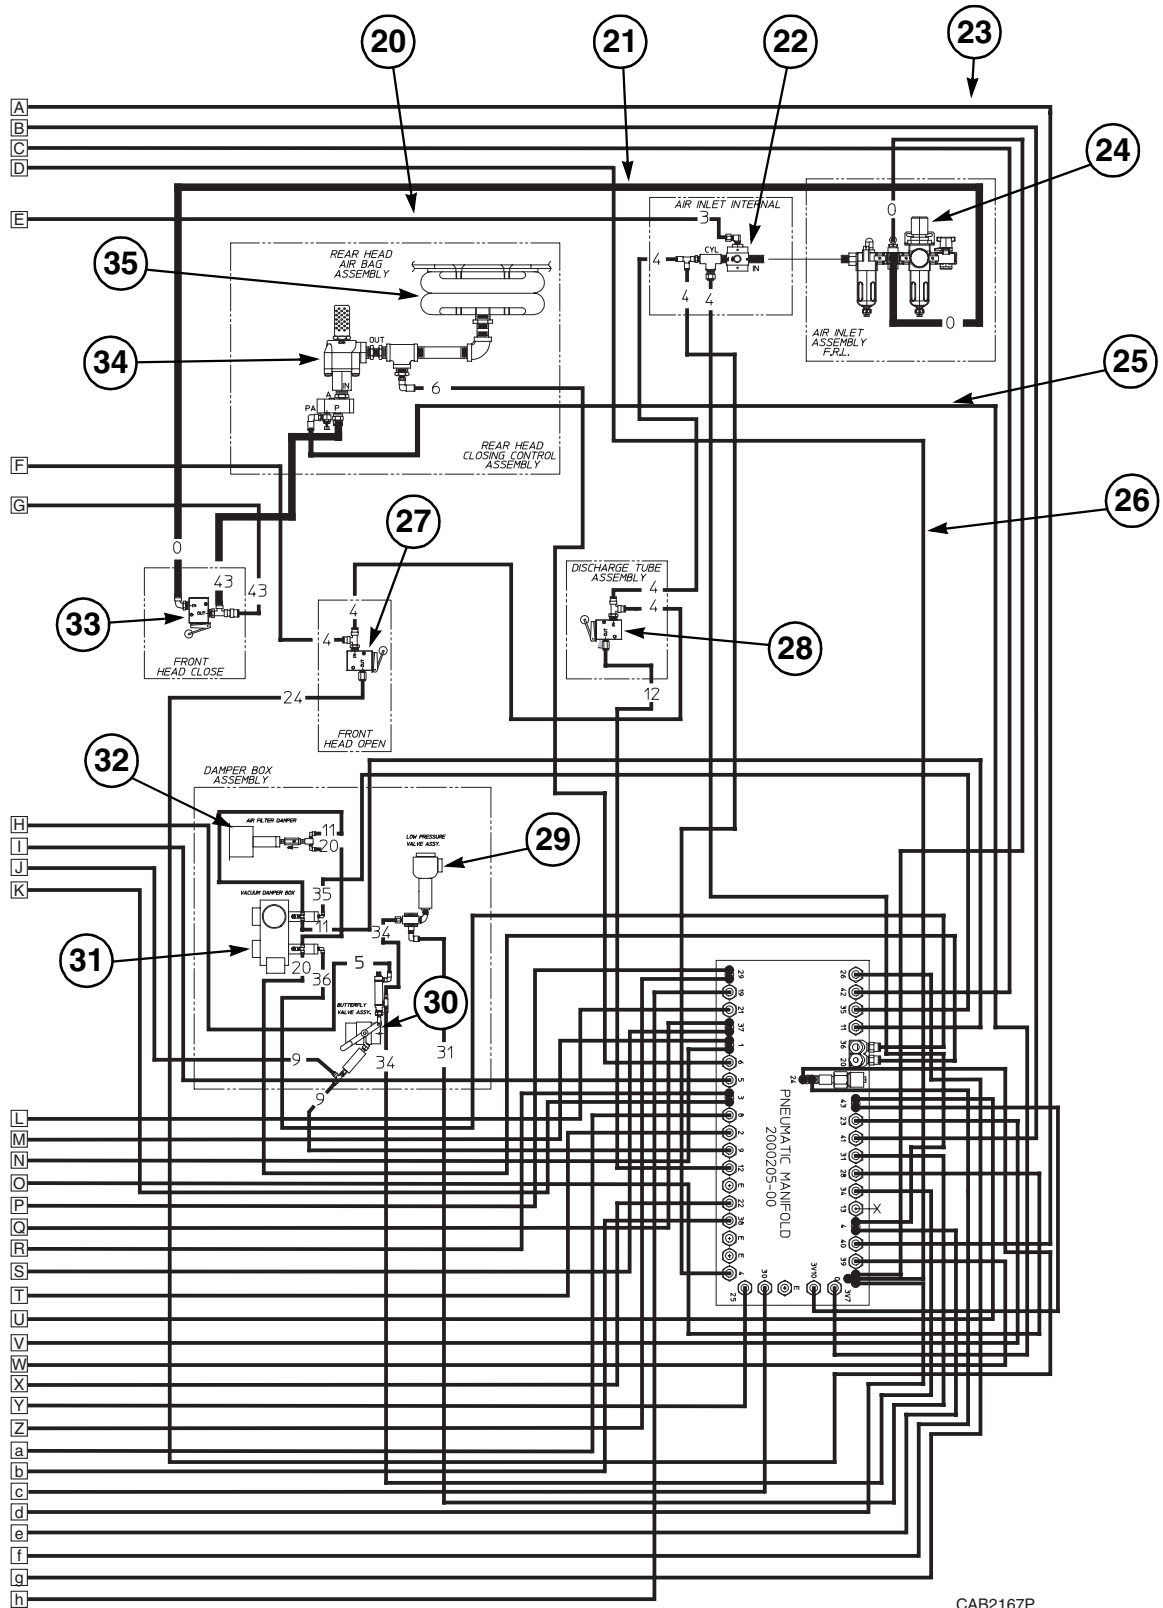


CAB2167P

Air System – Models Through July 11, 2004 (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
20	J0141708-00	Tubing	Red; 1/4 inch OD
21	J0140951-00	Tubing	3/8 inch OD
22	J200055500	Air Inlet Assembly	Refer to <i>Air Inlet Assembly</i> section for parts breakdown
23	J1103970-00	Tubing	Blue; 1/4 inch OD
24	J200273800	External Air Inlet Assembly	Refer to <i>External Air Inlet Assembly</i> section for parts breakdown
25	J0141701-00	Tubing	Neon green; 1/4 inch OD
26	J0141705-00	Tubing	Gray; 1/4 inch OD
27	J200002300	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
28	J200001300	Discharge Tube Assembly	Refer to <i>Discharge Tube Assembly</i> section for parts breakdown
29	J200053300	Low Pressure Valve Assembly	Refer to <i>Low Pressure Valve Assembly</i> section for parts breakdown
30	J200044100	Butterfly Valve Assembly	Refer to <i>Butterfly Valve Assembly</i> section for parts breakdown
31	J147924501	Damper Assembly	Refer to <i>Damper Assembly</i> section for parts breakdown
32	J1479484	Filter Box Damper Assembly	Refer to <i>Filter Damper Box Assembly</i> section for parts breakdown
33	J200024700	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
34	J200012900	Rear Head Closing Cylinder Assembly	Refer to <i>Rear Head Closing Cylinder Assembly</i> section for parts breakdown
35	J200012800	Head Air Bag Assembly	Refer to <i>Head Air Bag Assembly</i> section for parts breakdown


Air System – Models Starting July 12, 2004 Through November 30, 2004 (Drawing 1 of 2)

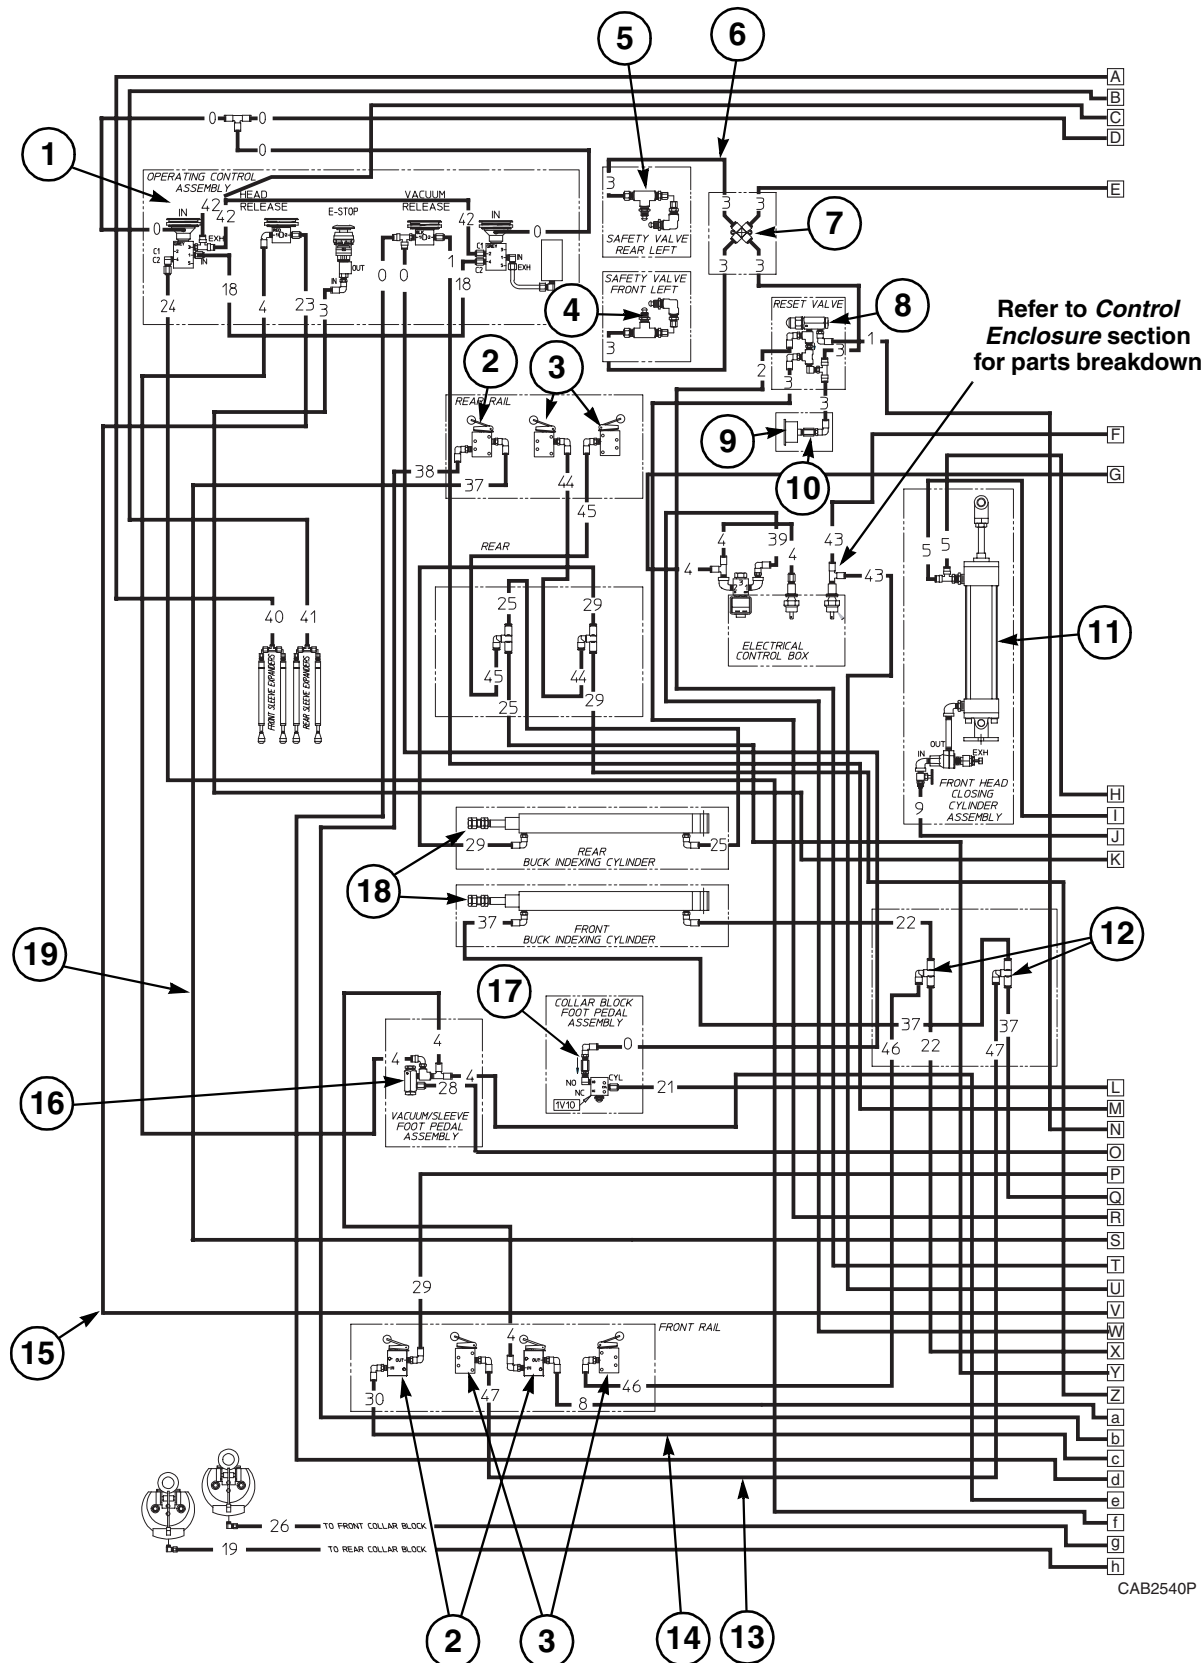

Air System – Models Starting July 12, 2004 Through November 30, 2004 (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1484930	Pedal Base Assembly	Used with item 16
1	J200096400	Operator Control Panel Assembly	Refer to <i>Operator Control Panel Assembly</i> section for parts breakdown
2	J200012100	Roller Valve Assembly	3 required
3	J200020000	Roller Valve Assembly	4 required
4	J1571041	Front Left Safety Bar Bracket Assembly	Refer to <i>Front Left Safety Bar Bracket Assembly</i> section for parts breakdown
5	J1571058	Rear Left Safety Bar Bracket Assembly	Refer to <i>Rear Left Safety Bar Bracket Assembly</i> section for parts breakdown
6	JM-93516	Sleeve	6 feet required
7	J200054900	Cross Union	
8	J200054300	Reset Valve Assembly	Refer to <i>Reset Valve Assembly</i> section for parts breakdown
9	J200128200	Pressure Gauge	0-100 psi
10	J1018571	Pipe Coupling	
11	J200055700	Front Head Closing Cylinder Assembly	Refer to <i>Front Head Closing Cylinder Assembly</i> section for parts breakdown
12	J200102400	Quick Exhaust Valve	4 required
13	J0141704-00	Tubing	Yellow; 1/4 inch OD
14	J0141703-00	Tubing	Green; 1/4 inch OD
15	J0141706-00	Tubing	Purple; 1/4 inch OD
16	J1484682	Pedal Base and Valve Assembly	Refer to <i>Pedal Base and Valve Assembly</i> section for parts breakdown
17	J1485010	Valve Assembly	Refer to <i>Foot Pedal and Collar Block Valve Assembly</i> section for parts breakdown
18	J0637994-00	Buck Index Cylinder Assembly	2 required; Refer to <i>Buck Index Cylinder Assembly</i> section for parts breakdown
19	J0141710-00	Tubing	Black; 1/4 inch OD

Air System – Models Starting July 12, 2004 Through November 30, 2004 (Drawing 2 of 2)

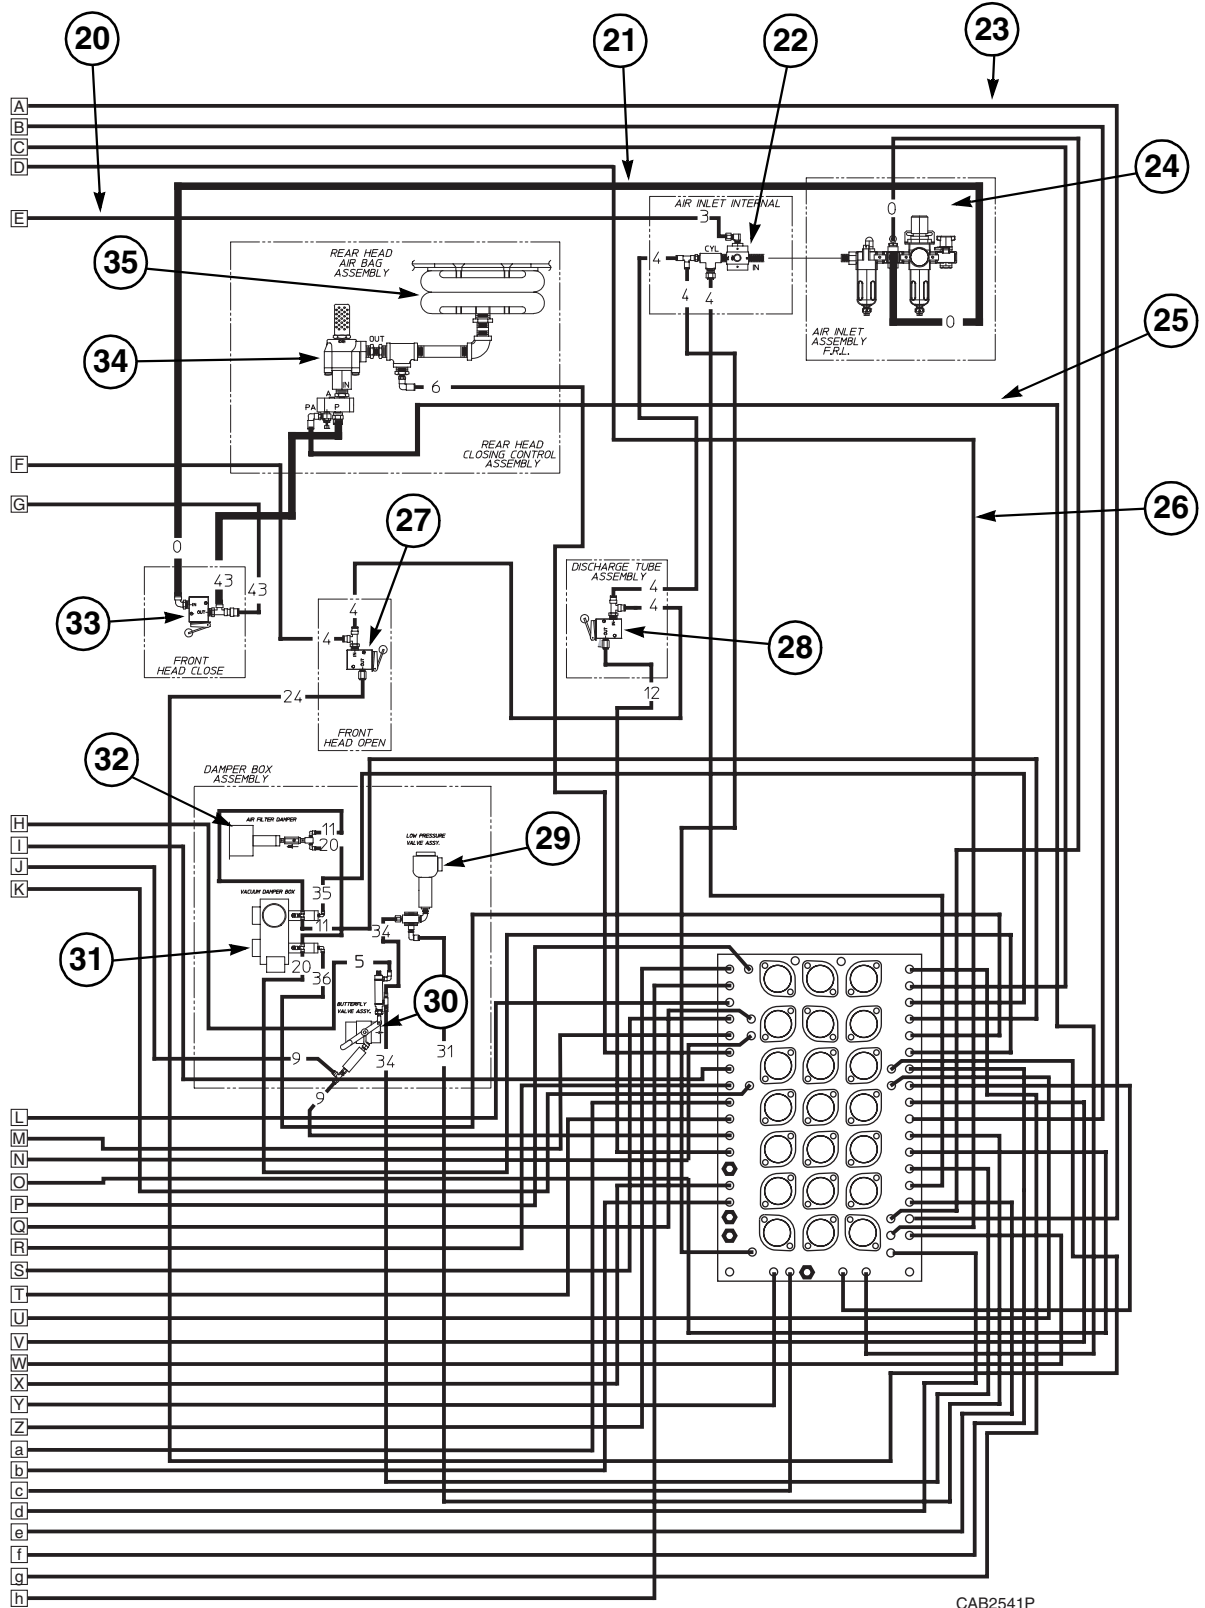


CAB2541P

Air System – Models Starting July 12, 2004 Through November 30, 2004 (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
20	J0141708-00	Tubing	Red; 1/4 inch OD
21	J0140951-00	Tubing	3/8 inch OD
22	J200055500	Air Inlet Assembly	Refer to <i>Air Inlet Assembly</i> section for parts breakdown
23	J1103970-00	Tubing	Blue; 1/4 inch OD
24	J200273800	External Air Inlet Assembly	Refer to <i>External Air Inlet Assembly</i> section for parts breakdown
25	J0141701-00	Tubing	Neon green; 1/4 inch OD
26	J0141705-00	Tubing	Gray; 1/4 inch OD
27	J200002300	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
28	J200001300	Discharge Tube Assembly	Refer to <i>Discharge Tube Assembly</i> section for parts breakdown
29	J200053300	Low Pressure Valve Assembly	Refer to <i>Low Pressure Valve Assembly</i> section for parts breakdown
30	J200044100	Butterfly Valve Assembly	Refer to <i>Butterfly Valve Assembly</i> section for parts breakdown
31	J147924501	Damper Assembly	Refer to <i>Damper Assembly</i> section for parts breakdown
32	J1479484	Filter Box Damper Assembly	Refer to <i>Filter Damper Box Assembly</i> section for parts breakdown
33	J200024700	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
34	J200012900	Rear Head Closing Cylinder Assembly	Refer to <i>Rear Head Closing Cylinder Assembly</i> section for parts breakdown
35	J200012800	Head Air Bag Assembly	Refer to <i>Head Air Bag Assembly</i> section for parts breakdown


Air System – Models Starting December 1, 2004 (Drawing 1 of 2)

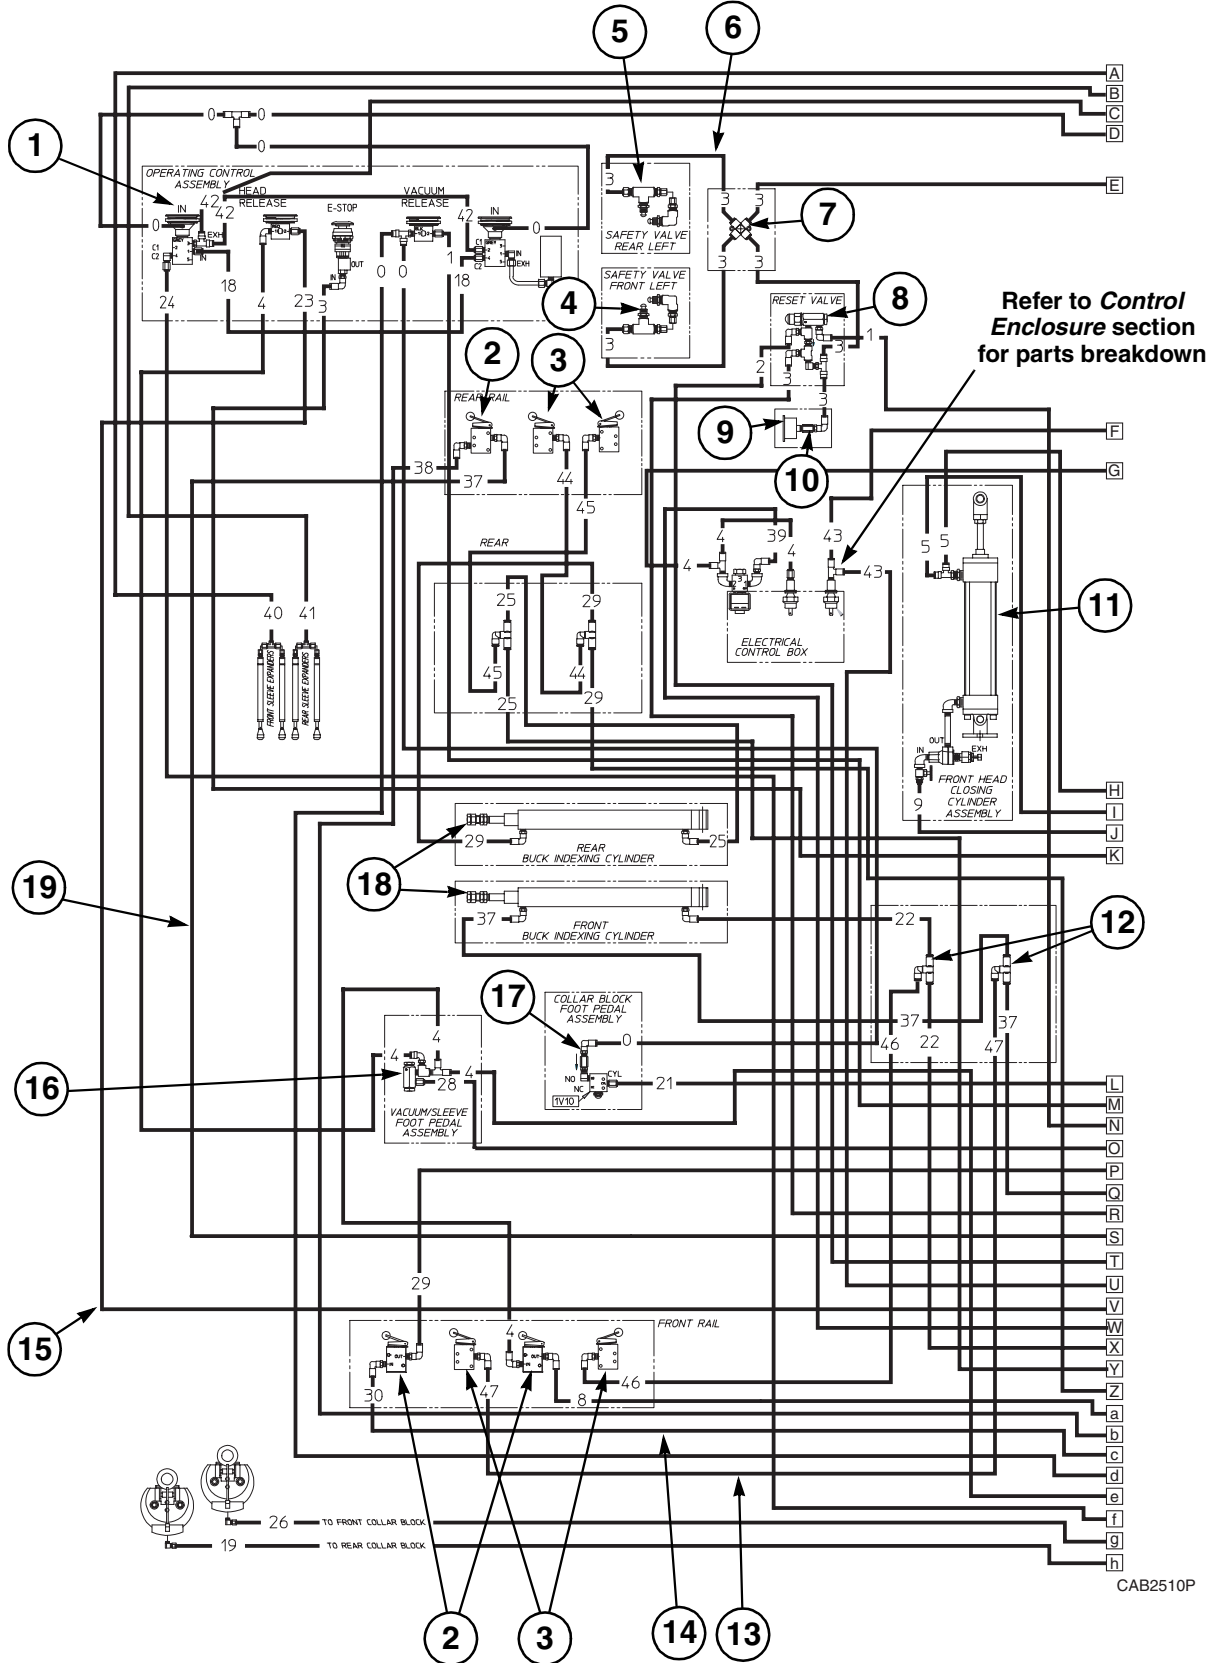

Air System – Models Starting December 1, 2004 (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1484930	Pedal Base Assembly	Used with item 16
1	J200096400	Operator Control Panel Assembly	Refer to <i>Operator Control Panel Assembly</i> section for parts breakdown
2	J200012100	Roller Valve Assembly	3 required
3	J200020000	Roller Valve Assembly	4 required
4	J1571041	Front Left Safety Bar Bracket Assembly	Refer to <i>Front Left Safety Bar Bracket Assembly</i> section for parts breakdown
5	J1571058	Rear Left Safety Bar Bracket Assembly	Refer to <i>Rear Left Safety Bar Bracket Assembly</i> section for parts breakdown
6	JM-93516	Sleeve	6 feet required
7	J200054900	Cross Union	
8	J200054300	Reset Valve Assembly	Refer to <i>Reset Valve Assembly</i> section for parts breakdown
9	J200128200	Pressure Gauge	0-100 psi
10	J1018571	Pipe Coupling	
11	J200055700	Front Head Closing Cylinder Assembly	Refer to <i>Front Head Closing Cylinder Assembly</i> section for parts breakdown
12	J200102400	Quick Exhaust Valve	4 required
13	J0141704-00	Tubing	Yellow; 1/4 inch OD
14	J0141703-00	Tubing	Green; 1/4 inch OD
15	J0141706-00	Tubing	Purple; 1/4 inch OD
16	J1484682	Pedal Base and Valve Assembly	Refer to <i>Pedal Base and Valve Assembly</i> section for parts breakdown
17	J1485010	Valve Assembly	Refer to <i>Foot Pedal and Collar Block Valve Assembly</i> section for parts breakdown
18	J0637994-00	Buck Index Cylinder Assembly	2 required; Refer to <i>Buck Index Cylinder Assembly</i> section for parts breakdown
19	J0141710-00	Tubing	Black; 1/4 inch OD

Air System – Models Starting December 1, 2004 (Drawing 2 of 2)

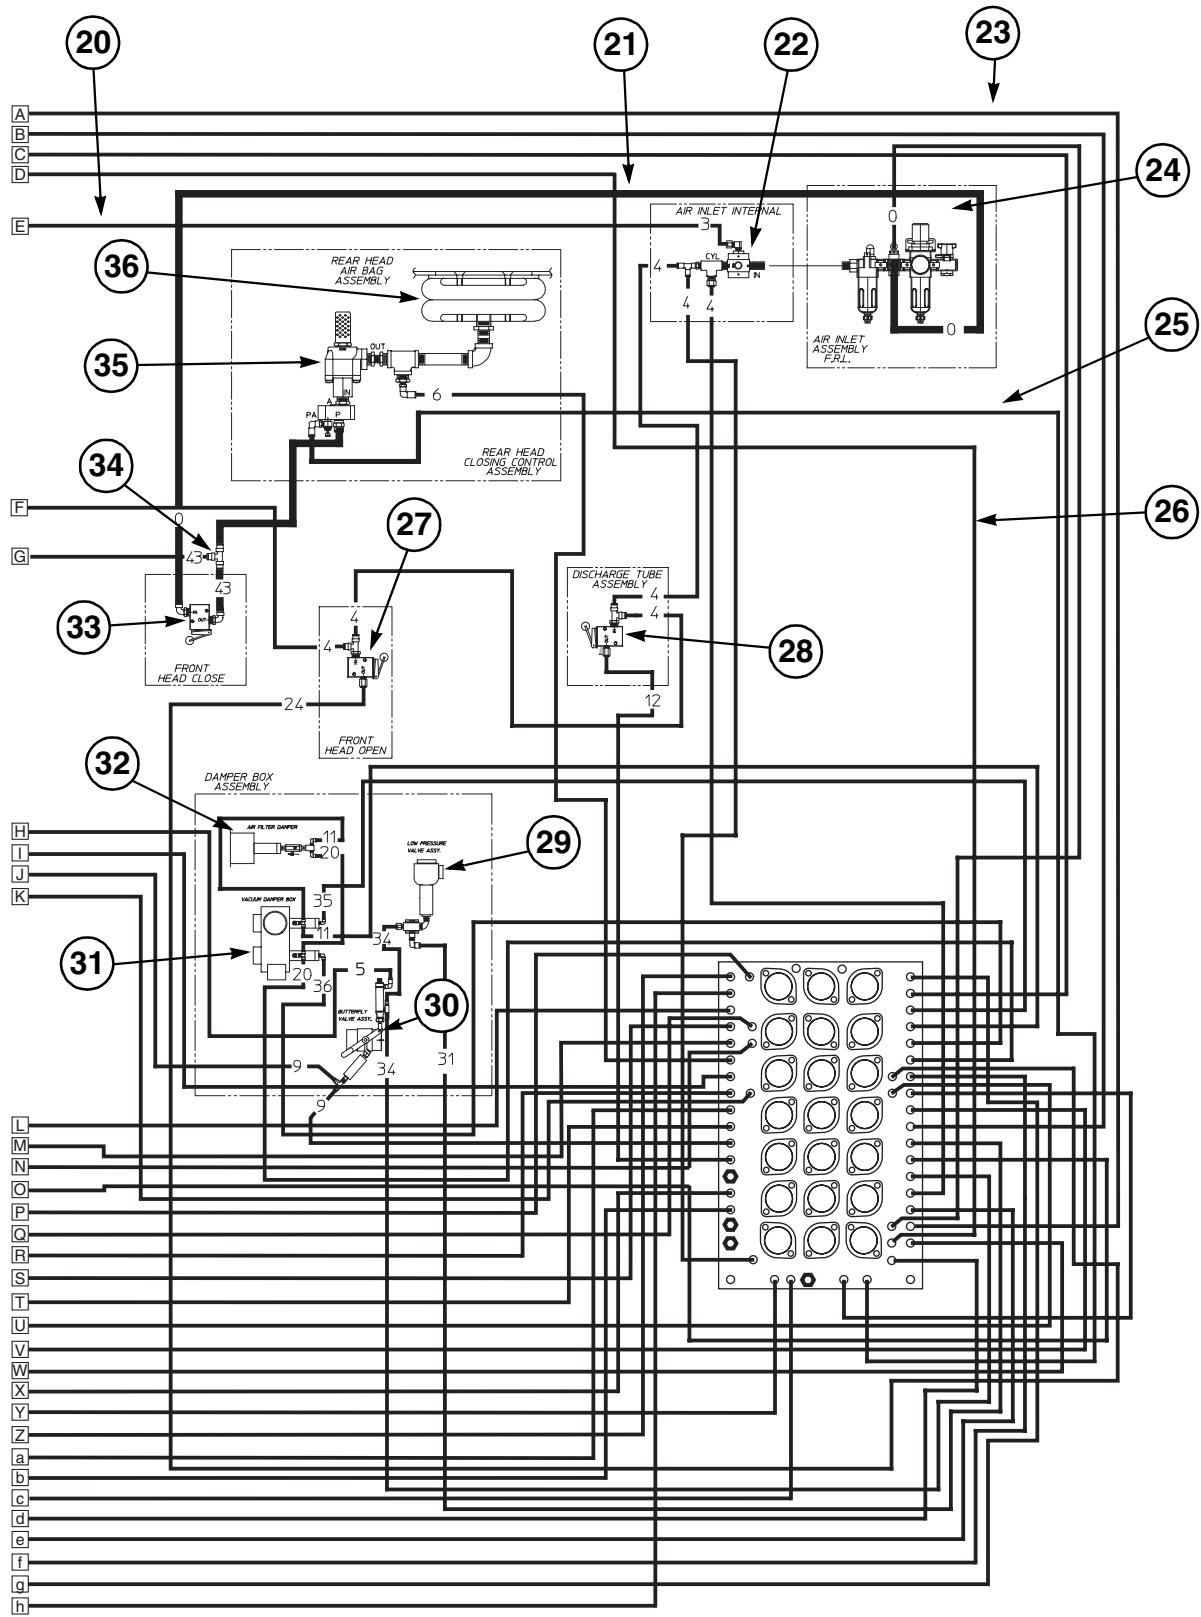


CAB2511P

Air System – Models Starting December 1, 2004 (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
20	J0141708-00	Tubing	Red; 1/4 inch OD
21	J0140951-00	Tubing	3/8 inch OD
22	J200055500	Air Inlet Assembly	Refer to <i>Internal Air Inlet Assembly</i> section for parts breakdown
23	J1103970-00	Tubing	Blue; 1/4 inch OD
24	J200273800	External Air Inlet Assembly	Refer to <i>External Air Inlet Assembly</i> section for parts breakdown
25	J0141701-00	Tubing	Neon green; 1/4 inch OD
26	J0141705-00	Tubing	Gray; 1/4 inch OD
27	J200002300	Valve and Bracket Assembly	Refer to <i>Valve to Bracket Assembly</i> section for parts breakdown
28	J200001300	Discharge Tube Assembly	Refer to <i>Discharge Tube Assembly</i> section for parts breakdown
29	J200053300	Low Pressure Valve Assembly	Refer to <i>Low Pressure Valve Assembly</i> section for parts breakdown
30	J200044100	Butterfly Valve Assembly	Refer to <i>Butterfly Valve Assembly</i> section for parts breakdown
31	J147924501	Damper Assembly	Refer to <i>Damper Assembly</i> section for parts breakdown
32	J1479484	Filter Box Damper Assembly	Refer to <i>Filter Damper Box Assembly</i> section for parts breakdown
33	J200024700	Valve and Bracket Assembly	Refer to <i>Valve to Bracket Assembly</i> section for parts breakdown
34	J0140950-00	Union Tee	
	J0260213-00	Plug-In Reducer	
35	J200012900	Rear Head Closing Cylinder Assembly	Refer to <i>Rear Head Closing Cylinder Assembly</i> section for parts breakdown
36	J200012800	Head Air Bag Assembly	Refer to <i>Head Air Bag Assembly</i> section for parts breakdown

External Air Inlet Assembly – Models Through December 1, 2004

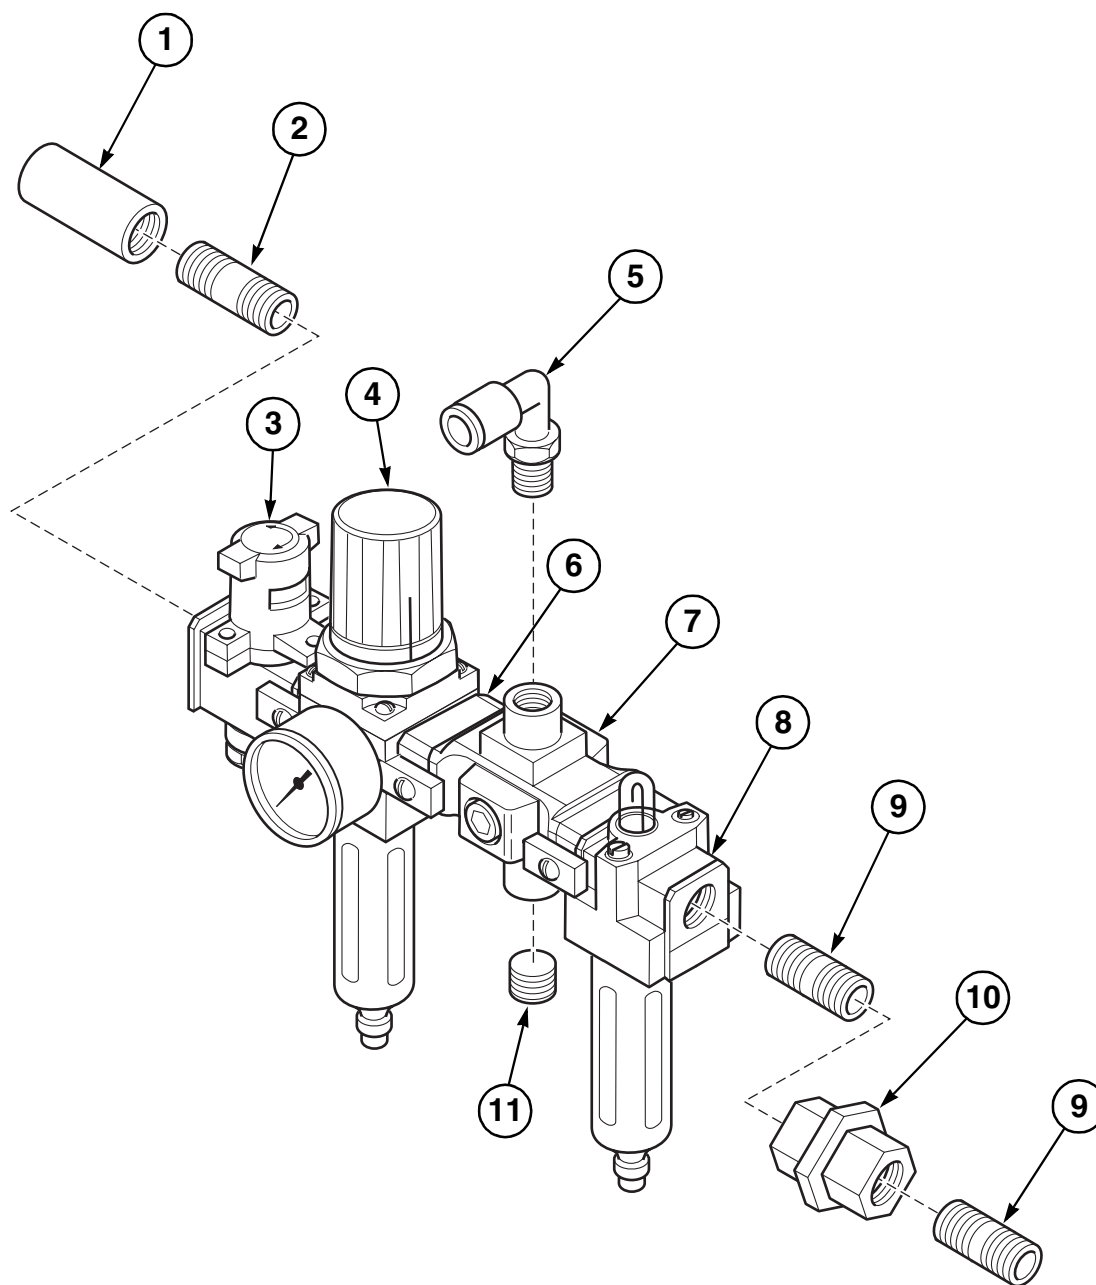


CAB2168P

External Air Inlet Assembly – Models Through December 1, 2004

REF	PART NO.	DESCRIPTION	COMMENTS
	J200273800	External Air Inlet Assembly	Includes items 1-11
	J0270328-00P	Filter/Regulator/Lubricator Assembly	Includes items 3-8 and 11
	J200032100	Filter Kit	
	J200032200	Regulator Kit	
	J1637644	Filter/Regulator Auto Drain Kit	
	J200032400	Lubricator Kit	
1	J100744201	Pipe Coupling	
2	JA-5706401	Pipe Nipple	
3	J1557503	Lock-Out Valve	
4	J0270327-00	Filter/Regulator	
5	J1410323	Male Tubing Elbow	
6	J1571413	Spacer	3 required
7	J0432327-00	Cross Spacer	
8	J0550000-00	Lubricator	
9	J115175201	Pipe Nipple	2 required
10	JC-7601201	Pipe Union	
11	JA-53076	Pipe Plug	

Filter/Regulator/Lubricator Assembly – Models Starting December 2, 2004 Through February 9, 2005

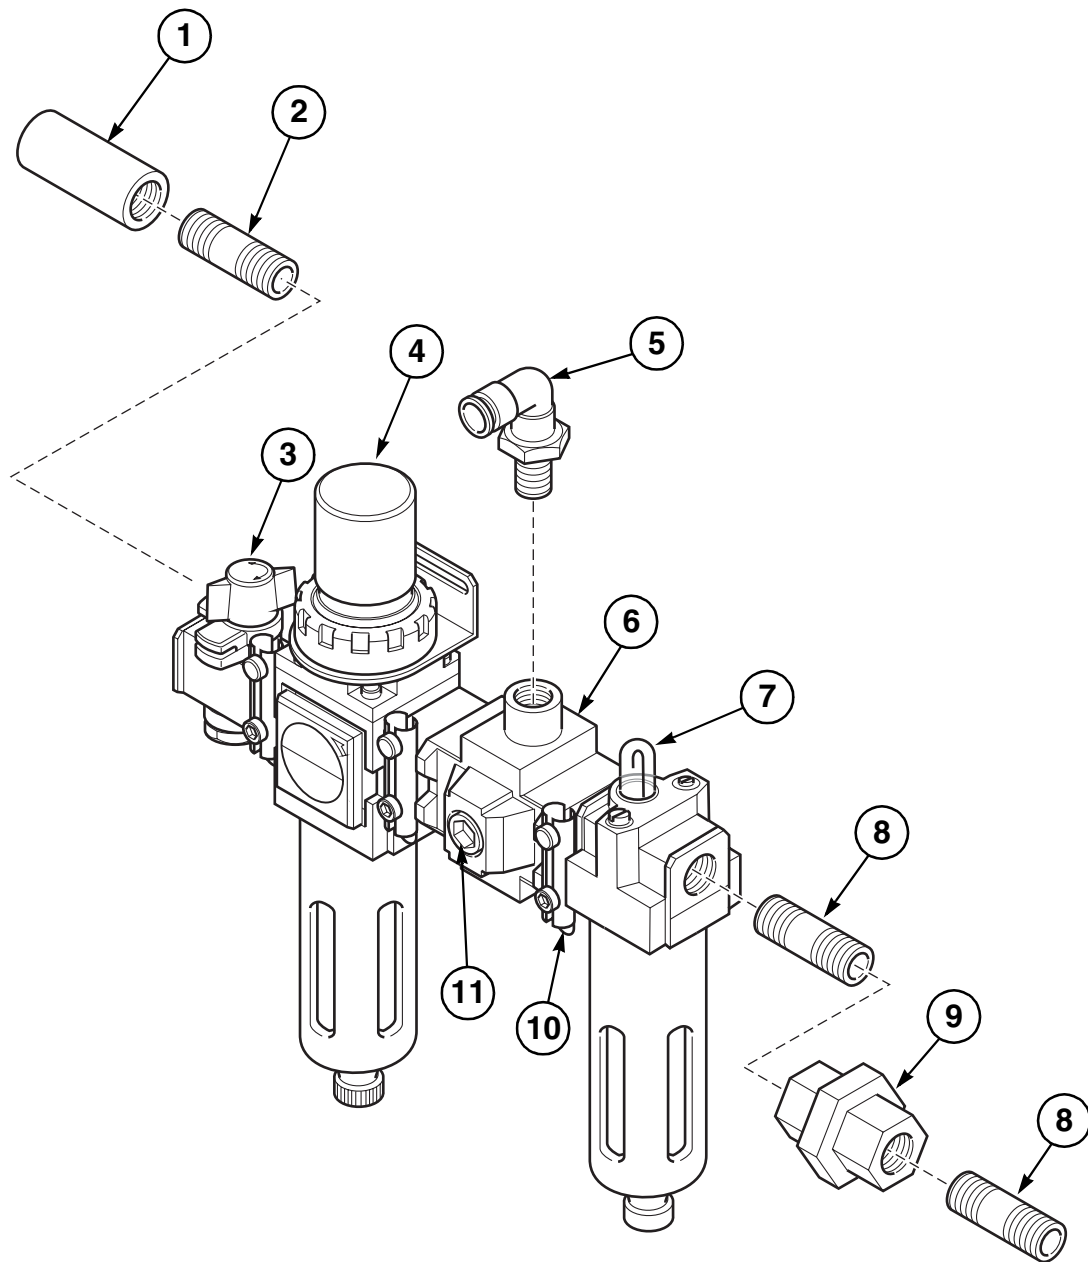


CAB2501P

Filter/Regulator/Lubricator Assembly – Models Starting December 2, 2004 Through February 9, 2005

REF	PART NO.	DESCRIPTION	COMMENTS
	J200180000	Filter/Regulator/Lubricator Assembly	Includes items 3-7, 10 and 11
	J200032100	Filter Kit	
	J200032200	Regulator Kit	
	J1637644	Filter/Regulator Auto Drain Kit	
	J200032400	Lubricator Kit	
1	JC-23002	Pipe Coupling	
2	JC-4606101	Pipe Nipple	
3	J200179000	Lock-Out Valve	
4	J200201000	Filter/Regulator Assembly	
5	J1419811	Swivel Tubing Elbow	
6	J200179400	Cross Spacer	
7	J200200000	Mist Separator	
8	J115175201	Pipe Nipple	2 required
9	JC-7601201	Pipe Union	
10	J200179300	Connector Assembly	3 required
11	JA-54394	Pipe Plug	3 required


Filter/Regulator/Mist Separator Assembly – Models Starting February 10, 2005

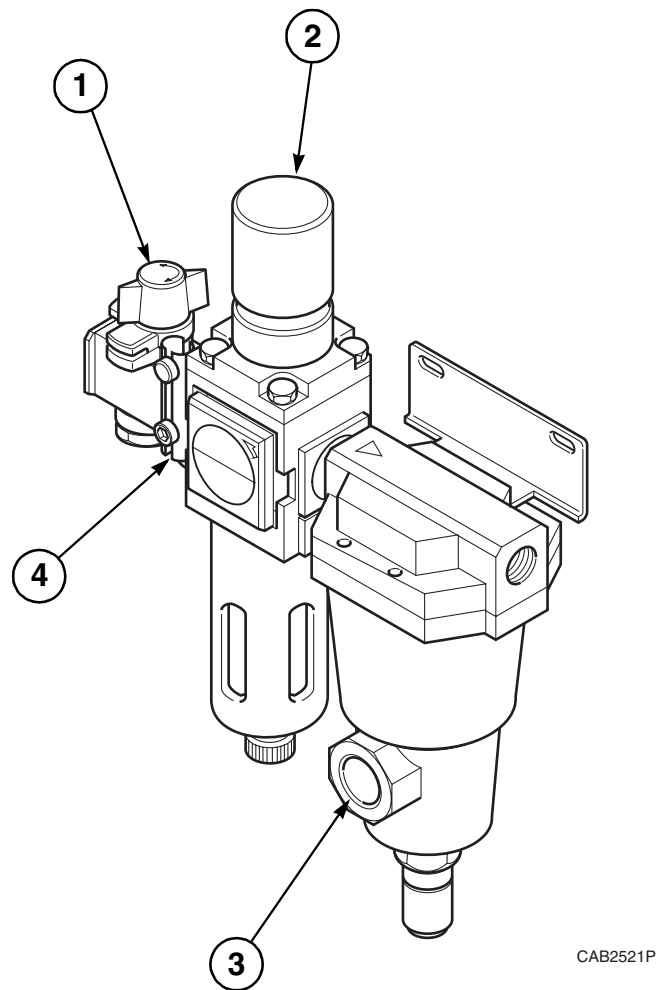

Filter/Regulator/Mist Separator Assembly – Models Starting February 10, 2005

REF	PART NO.	DESCRIPTION	COMMENTS
	J200200300	Filter/Regulator/Mist Separator Assembly	Includes items 1-4
	J200200100	Element Replacement Kit	Use with item 3
	J200203300	Filter Element Kit	Use with item 2
1	J200179000	Lock-Out Valve	
2	J200201000	Filter/Regulator Assembly	
3	J200199900	Mist Separator	
4	J200179300	Connector Assembly	


Air Inlet Assembly – Models Through April 26, 2005

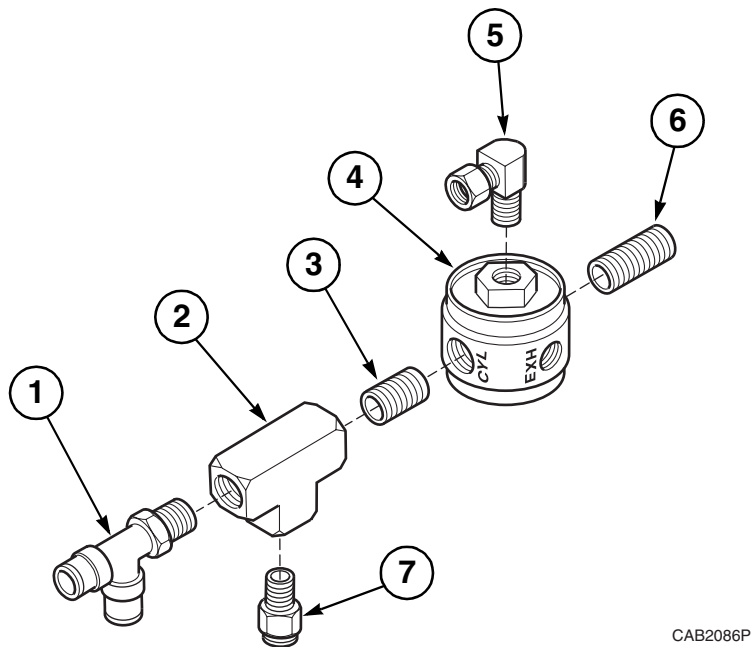

Air Inlet Assembly – Models Through April 26, 2005

REF	PART NO.	DESCRIPTION	COMMENTS
	J200055500	Air Inlet Assembly	Includes items 1-7
	JA-54069	Valve Kit	Use with item 4
1	J200010800	Male Run Tee	
2	J1188242	Pipe Tee	
3	J115175201	Pipe Nipple	
4	JA-53550	3-Way Dump Valve	250AA; Use JA-54069 Valve Kit
5	J1407741	Swivel Tubing Elbow	
6	J1026335-01	Pipe Nipple	
7	J1463835-00	Quick Tubing Connector	

Air Inlet Assembly – Models Starting April 27, 2005

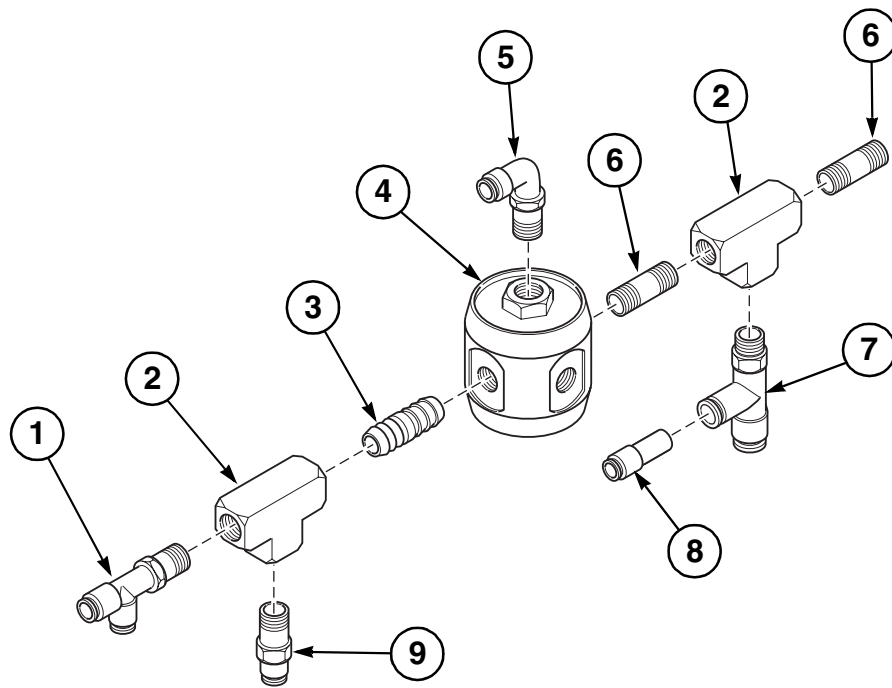


CAB2542P

Air Inlet Assembly – Models Starting April 27, 2005

REF	PART NO.	DESCRIPTION	COMMENTS
	J200055500	Air Inlet Assembly	Includes items 1-9
	JA-54069	Valve Kit	Use with item 4
1	J200010800	Male Run Tee	
2	J1188242	Pipe Tee	2 required
3	J115175201	Pipe Nipple	
4	JA-53550	3-Way Dump Valve	250AA; Use JA-54069 Valve Kit
5	J1407741	Swivel Tubing Elbow	
6	J1026335-01	Pipe Nipple	2 required
7	J0260207-00	Male Run Tee	
8	J0260213-00	Plug-In Reducer	
9	J1463835-00	Quick Tubing Connector	


Valve Assembly

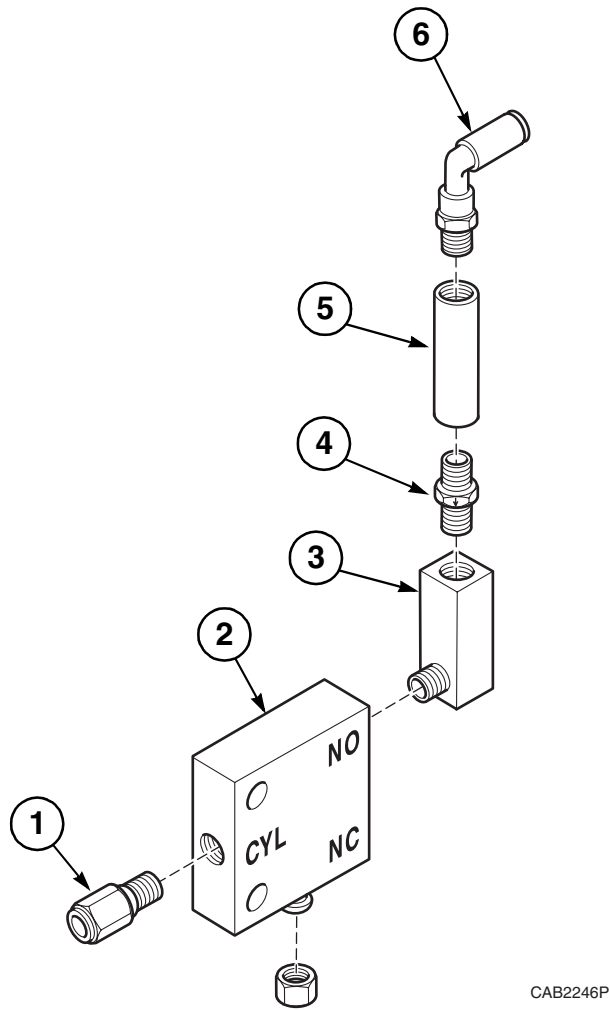

Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1485010	Valve Assembly	Includes items 1-6; Foot pedal collar block
1	J1408004	Connector	
2	J1142504	3-Way Valve	Includes nut
3	J1381623	Street Elbow	
4	JA-54042	Check Valve	
5	J1018571	Pipe Coupling	
6	J1407741	Swivel Tubing Elbow	

Pedal Base Assembly

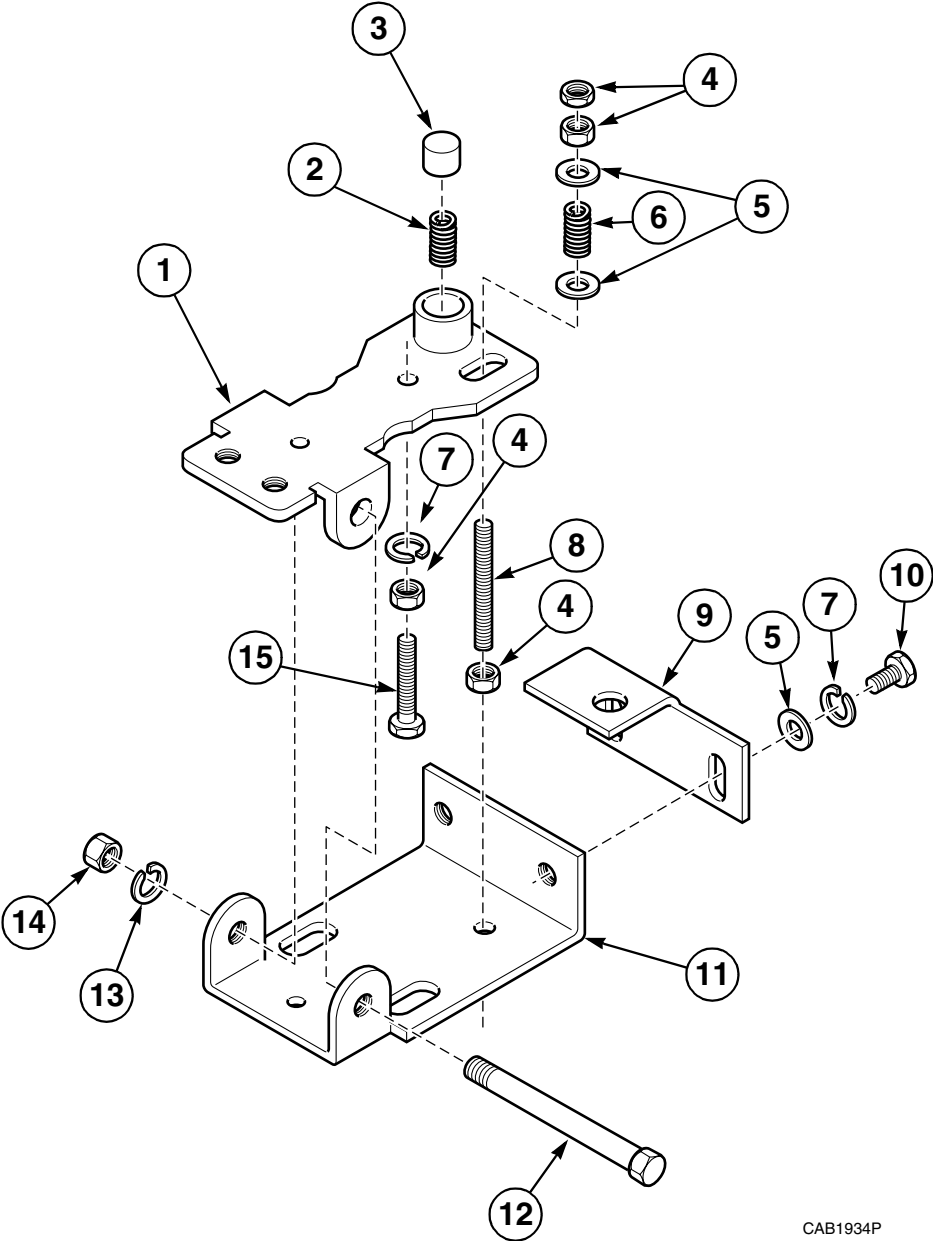


CAB1934P

Pedal Base Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1484930	Pedal Base Assembly	Includes items 1-15
1	J1387778	Pedal Bracket Weldment	Top
2	JA-52466	Spring	
3	JA-26238	Actuating Pad	
4	20275	Nut	4 required
5	JC-80513	Washer	4 required
6	JA-51376	Spring	
7	JA-51475	Washer	3 required
8	J1390673	Stud	
9	JA-25995	Pedal Bracket	
10	J1001726	Screw	2 required
11	J1387794	Pedal Base	
12	JC-62832	Screw	
13	M400013	Washer	
14	70142	Nut	
15	JA-52426	Screw	

Pedal Base and Valve Assembly

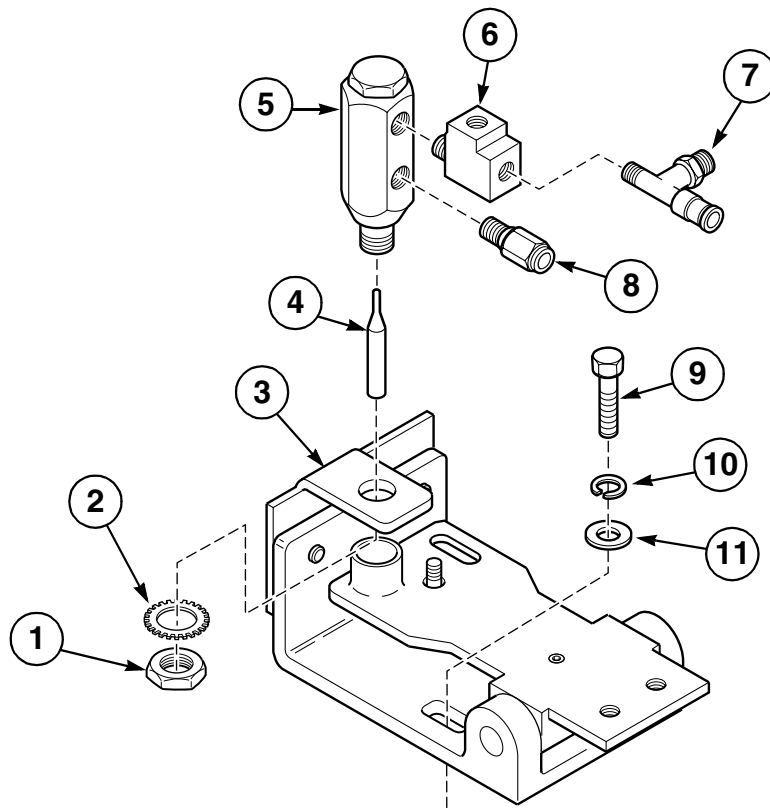


CAB2543P

Pedal Base and Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1484682	Pedal Base and Valve Assembly	Includes items 1-8
1	JA-51474	Nut	
2	JA-52196	Washer	
3	J1484930	Pedal Base Assembly	Refer to <i>Pedal Base Assembly</i> section for parts break-down
4	J1611417	Valve Stem Assembly	
5	JA-06430	Valve Body Assembly	Refer to <i>Valve Body Assembly</i> section for parts break-down
6	JC-30541	Street Pipe Tee	
7	J1438357	Quick Tubing Tee	
8	J1408004	Connector	
9	M400043	Screw	2 required
10	M400014	Washer	2 required
11	M400081	Washer	2 required

Reset Valve Assembly

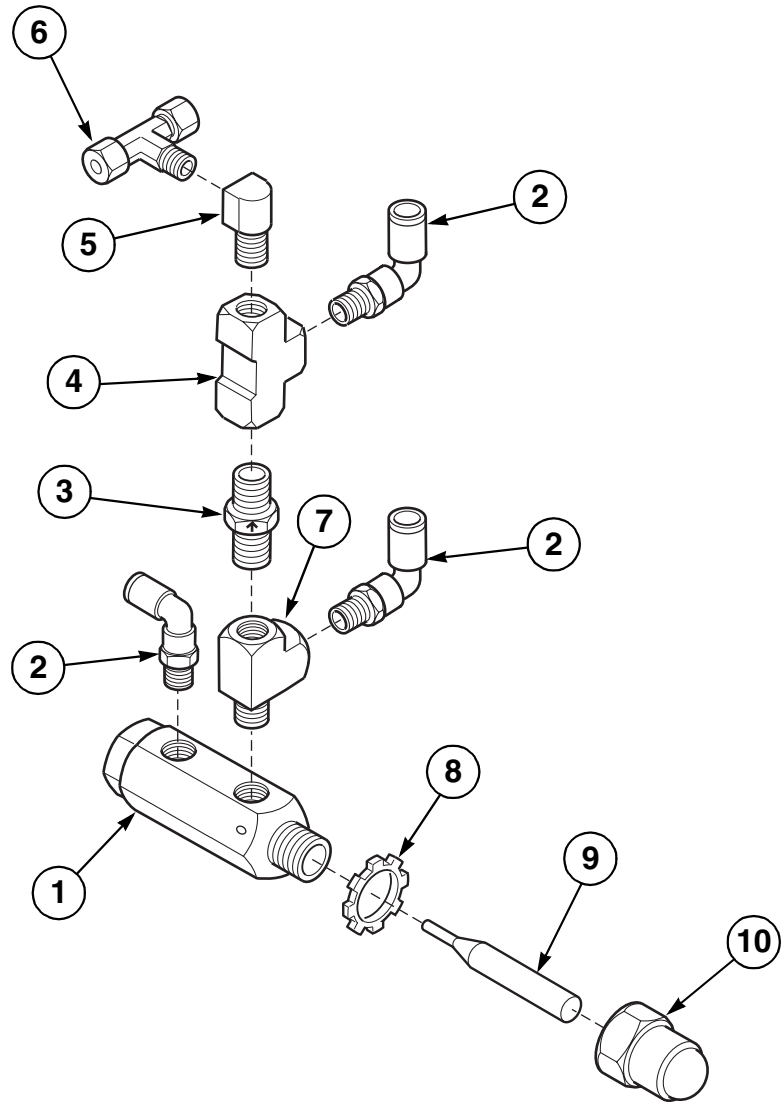


CAB2088P

Reset Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200054300	Reset Valve Assembly	Includes items 1-10
1	JA-06430	Valve Body Assembly	Refer to <i>Valve Body Assembly</i> section for parts break-down
2	J1407741	Swivel Tubing Elbow	3 required
3	JA-54042	Check Valve	
4	JC-70613	Pipe Tee	
5	JC-28317	Street Pipe Elbow	
6	J1437029	Quick Tubing Tee	
7	JC-30541	Street Pipe Tee	
8	JA-52196	Washer	
9	J1611417	Valve Stem Assembly	
10	JA-00397	Pushbutton Assembly	

Valve Body Assembly

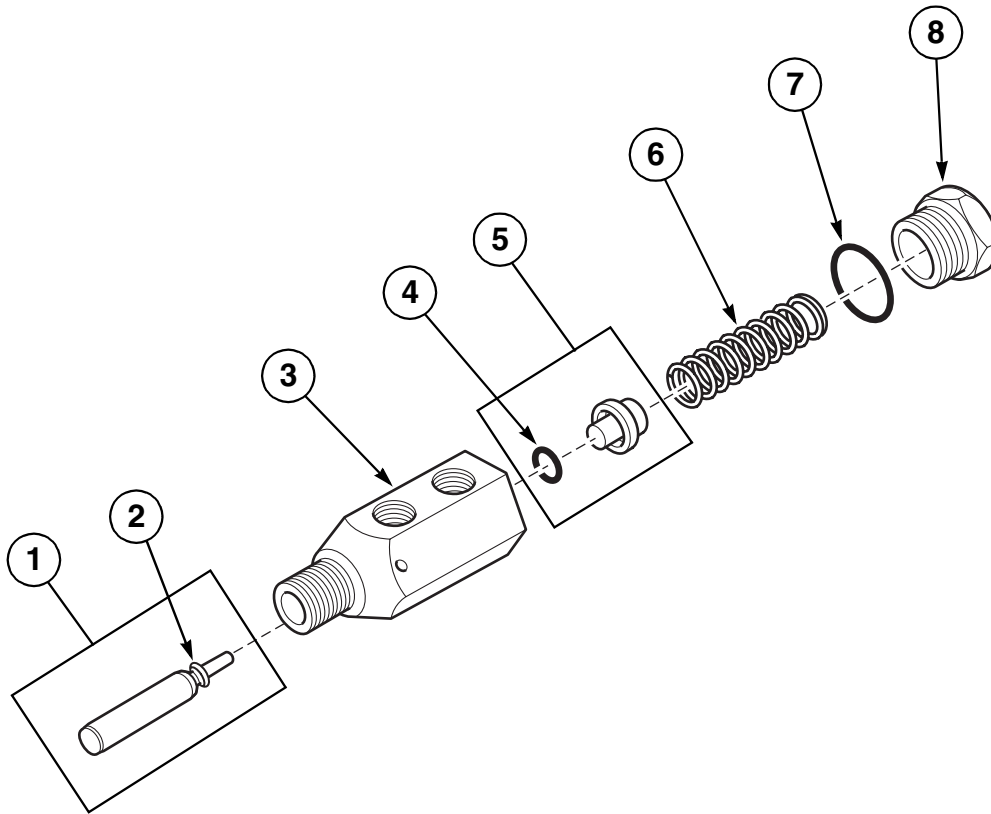


SCR1842P

Valve Body Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-06430	Valve Body Assembly	Includes items 3-8
1	J1611417	Valve Stem Assembly	Includes item 2
2	J1403310	O-Ring	
3	JA-10514	Valve Body	
4	J1403310	O-Ring	Viton
5	JA-11599	Valve	Includes item 4
6	JA-51336	Compression Spring	
7	JC-57441	O-Ring	
8	JA-10515	Valve Cap	

Emergency Stop Button Assembly

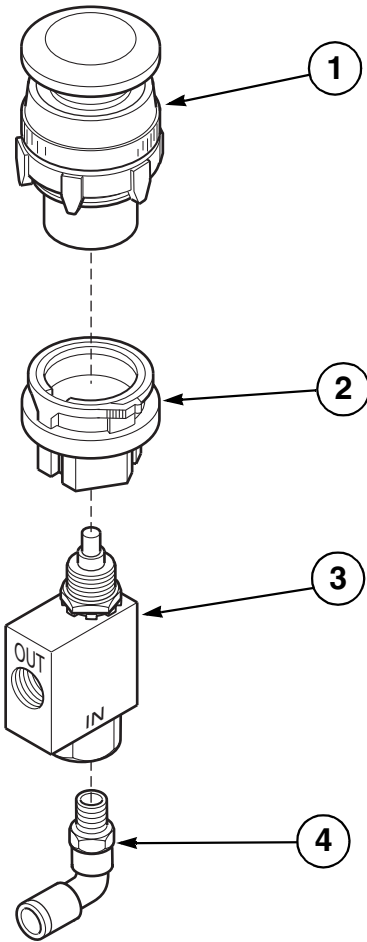


CAB2130P

Emergency Stop Button Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1635069	Emergency Stop Button Assembly	Includes items 1-4
	J1639798	Emergency Stop Button	Includes items 1-3
1	J1635044	Emergency Stop Head Button	
2	J1635051	Valve Adapter	
3	J1422740	3-Way Valve	
4	J1407741	Swivel Tubing Elbow	


Rear Left Safety Bar Bracket Assembly

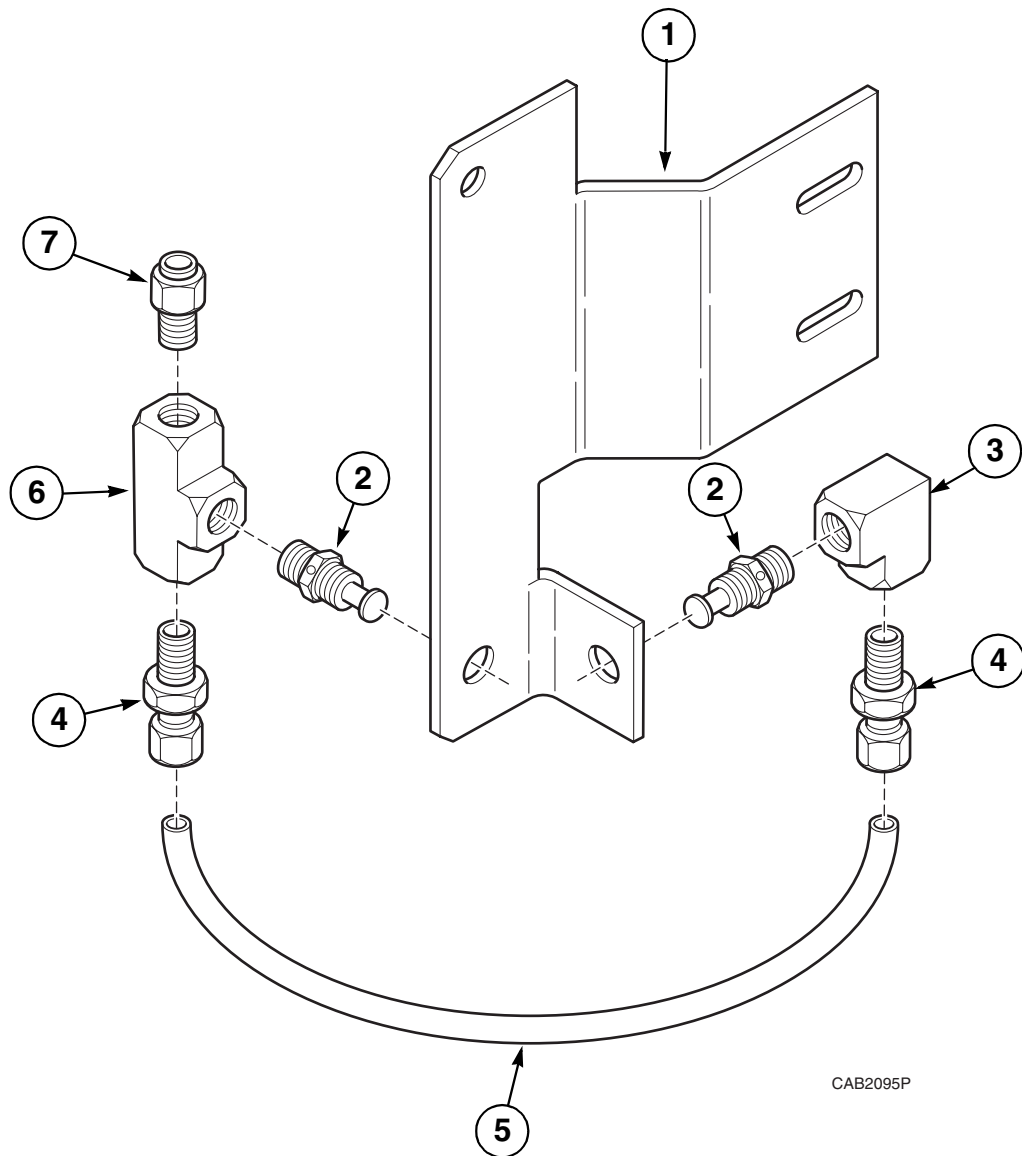

Rear Left Safety Bar Bracket Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1571058	Rear Left Safety Bar Bracket Assembly	Includes items 1-7
1	J200139000	Rear Left Safety Bar Bracket	
2	JA-53893	Bleeder Valve	2 required
3	J1188192	Pipe Elbow	
4	J1075175	Compression Connector	2 required
5	J1106699	Tubing	Copper; 6 inches required
6	J1188242	Pipe Tee	
7	J1463835-00	Quick Tubing Connector	


Front Left Safety Bar Bracket Assembly

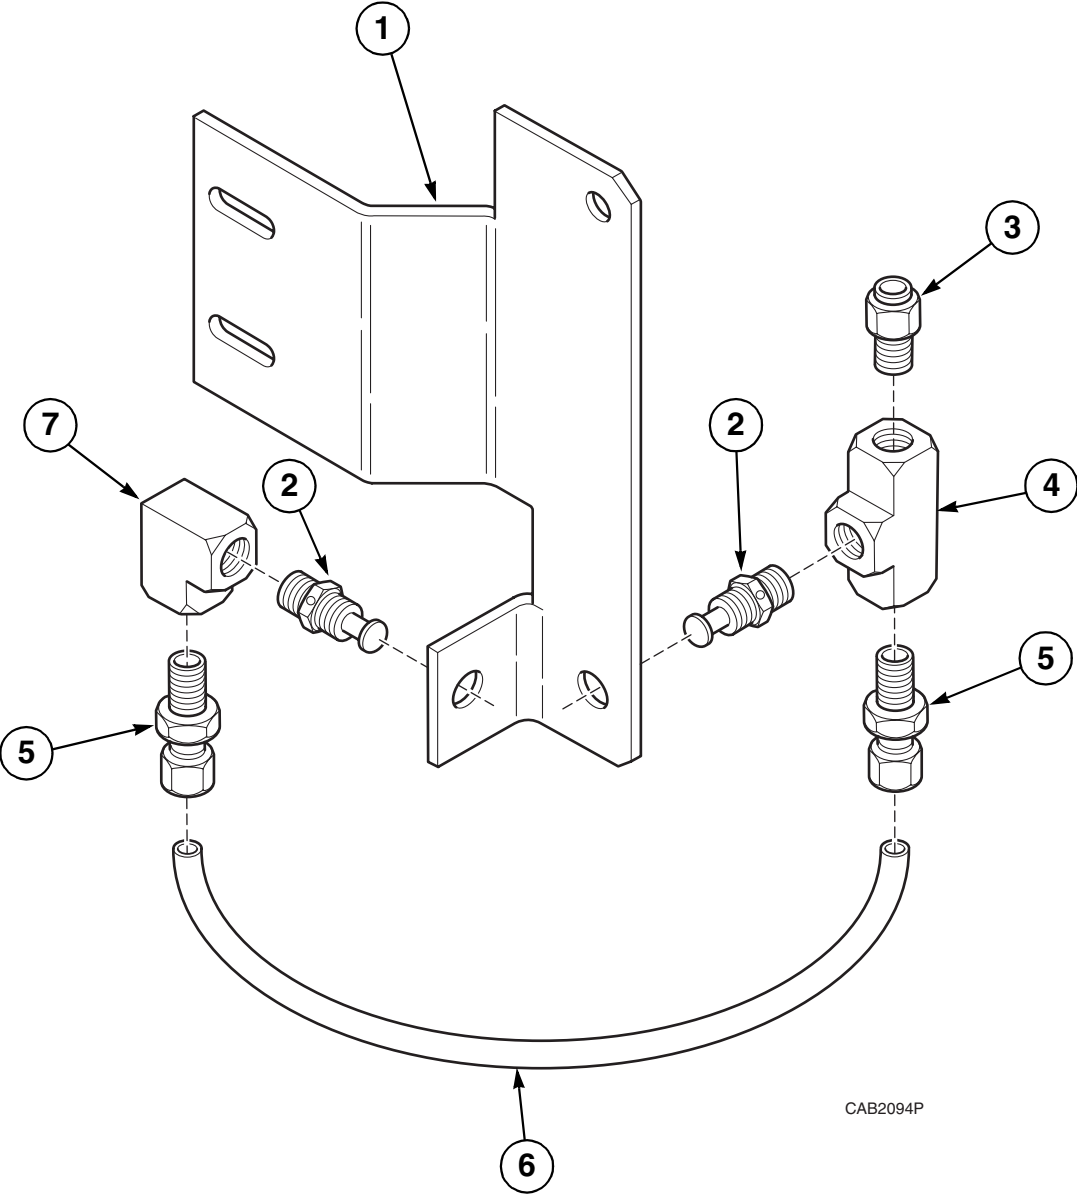

Front Left Safety Bar Bracket Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1571041	Front Left Safety Bar Bracket Assembly	Includes items 1-7
1	J200139100	Front Left Safety Bar Bracket	
2	JA-53893	Bleeder Valve	2 required
3	J1463835-00	Quick Tubing Connector	
4	J1188242	Pipe Tee	
5	J1075175	Compression Connector	2 required
6	J1106699	Tubing	Copper; 6 inches required
7	J1188192	Pipe Elbow	

Pneumatic Manifold Assembly – Models Through July 11, 2004

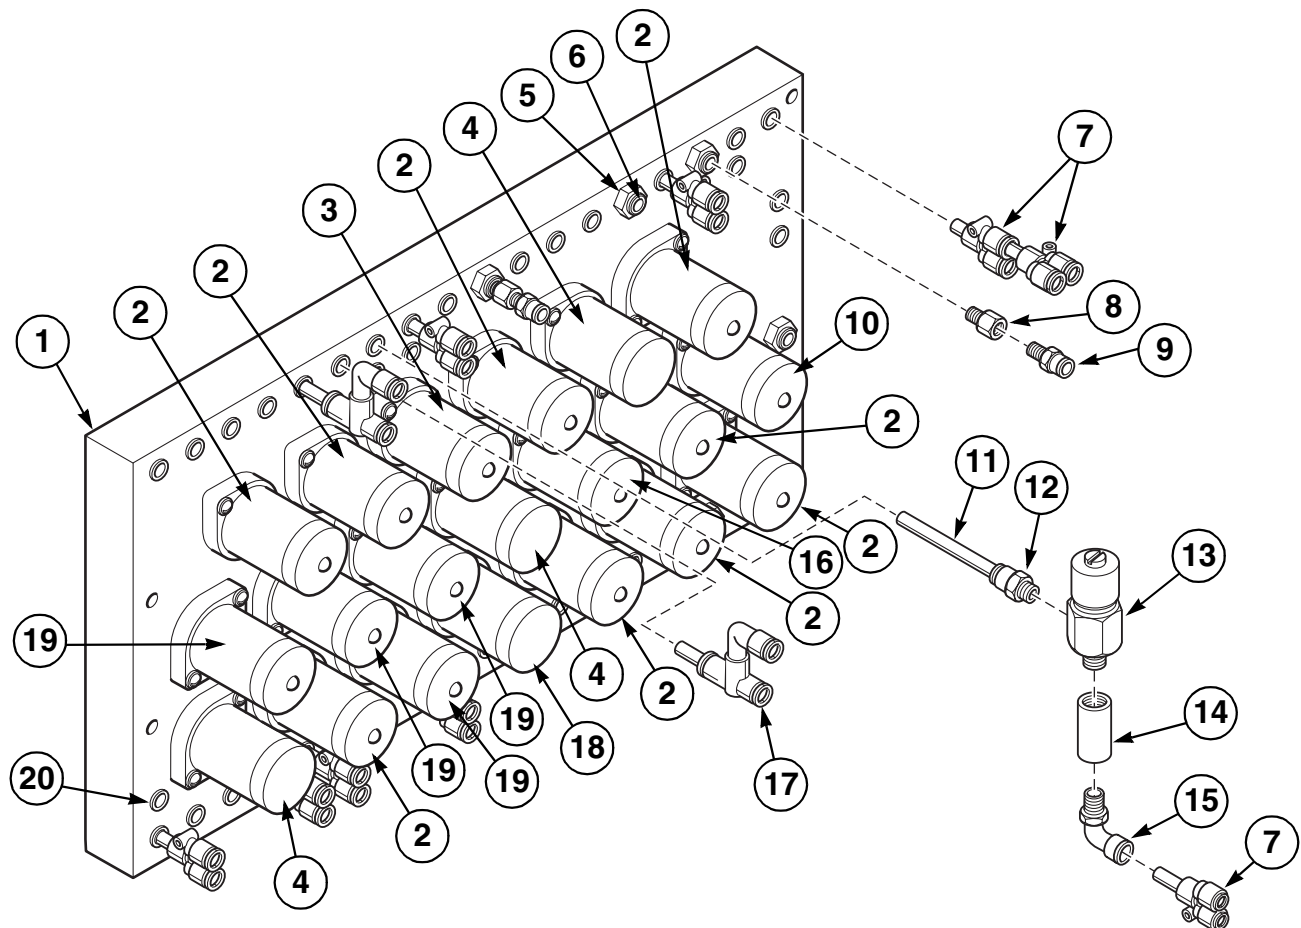


CAB2553P

Pneumatic Manifold Assembly – Models Through July 11, 2004

REF	PART NO.	DESCRIPTION	COMMENTS
	J0320375-00	Pneumatic Manifold	Includes items 1-6, 10, 16 and 18-20
1	J0380818-00	Manifold Base	
2	J1633122-00	Solenoid Valve	9 required
3	J0380813-00	3-Way and Shuttle Valve	
4	J0380814-00	Dual Shuttle Valve	3 required
5	J0380821-00	Bushing	7 required
6	J0380820-00	Internal Plug	
7	J200018700	Y Connector	9 required
8	J1392158	Orifice	2 required
9	J1408004	Connector	2 required
10	J1633114	Solenoid Valve	
11	J1103970-00	Tubing	Blue; 1/4 inch OD; Use as required
12	J0140961-00	Connector	
13	J200053400	Pulse Valve	
14	J1018571	Pipe Coupling	
15	J1407741	Swivel Tubing Elbow	
16	J0380816-00	3-Way Valve	
17	J200102400	Quick Exhaust Valve	2 required
18	J0380817-00	Dual Shuttle Valve	
19	J0380815-00	3-Way and Shuttle Valve	4 required
20	J0440180-00	Carstick Cartridge	34 required

Fitting to Manifold Assembly – Models Starting July 12, 2004

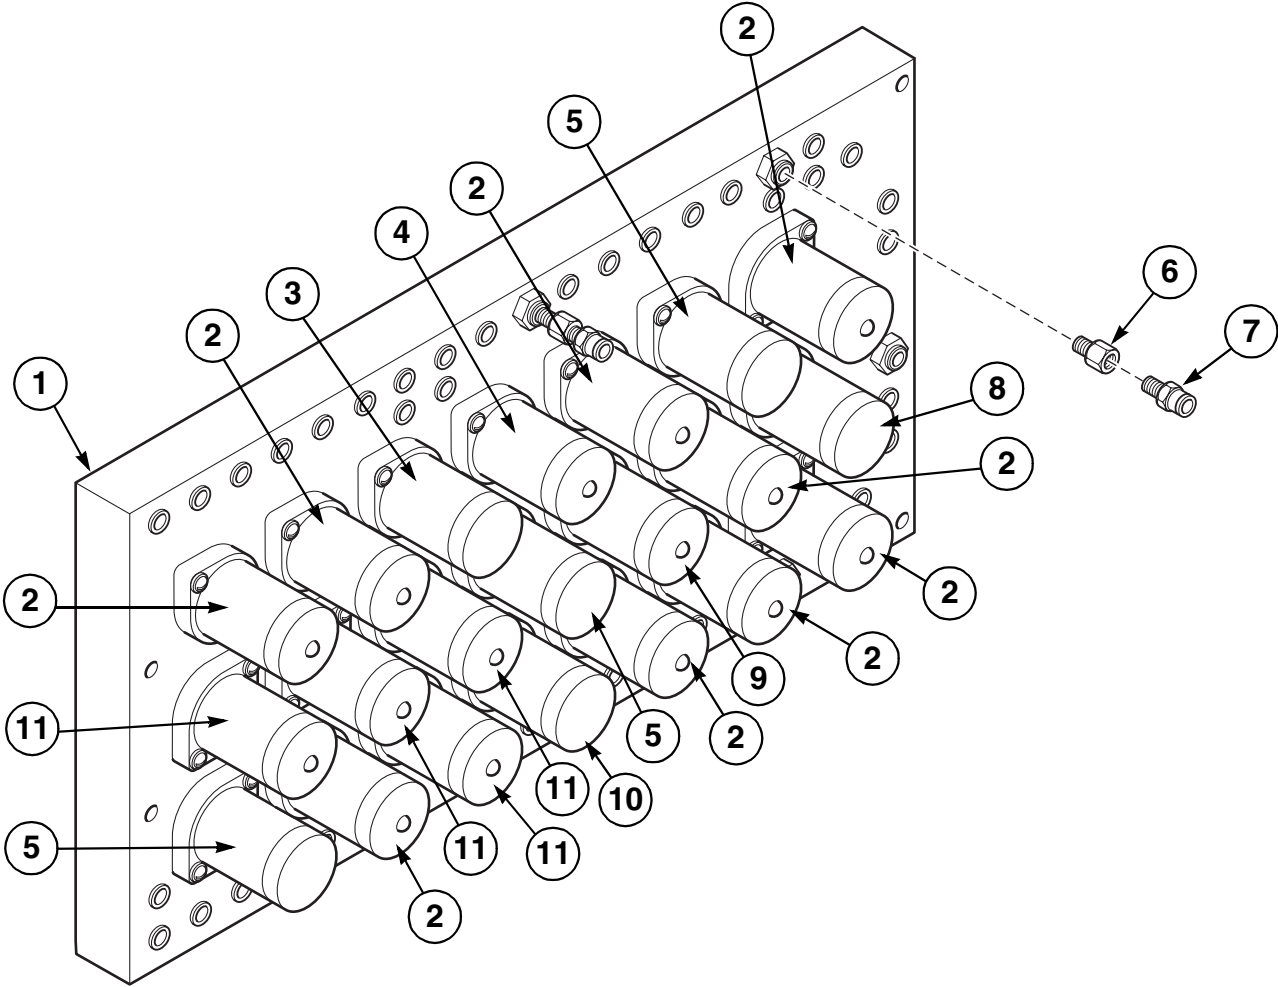


CAB2554P

Fitting to Manifold Assembly – Models Starting July 12, 2004

REF	PART NO.	DESCRIPTION	COMMENTS
	J200115600	Fitting to Manifold Assembly	Includes items 1 and 6-7
1	J200094800	Pneumatic Manifold	Includes items 2-5 and 8-10
2	J1633122-00	Binary Redirect Assembly	9 required
3	J200115301	Pulse Valve	
4	J0380813-00	3-Way and Shuttle Valve	
5	J0380814-00	Dual Shuttle Valve	3 required
6	J1392158	Orifice	2 required
7	J1408004	Connector	2 required
8	J1633114-00	Solenoid Valve	
9	J0380816-00	3-Way Valve	
10	J0380817-00	Dual Shuttle Valve	
11	J0380815-00	3-Way and Shuttle Valve	4 required


Manifold to Bracket Assembly – Models Through July 11, 2004

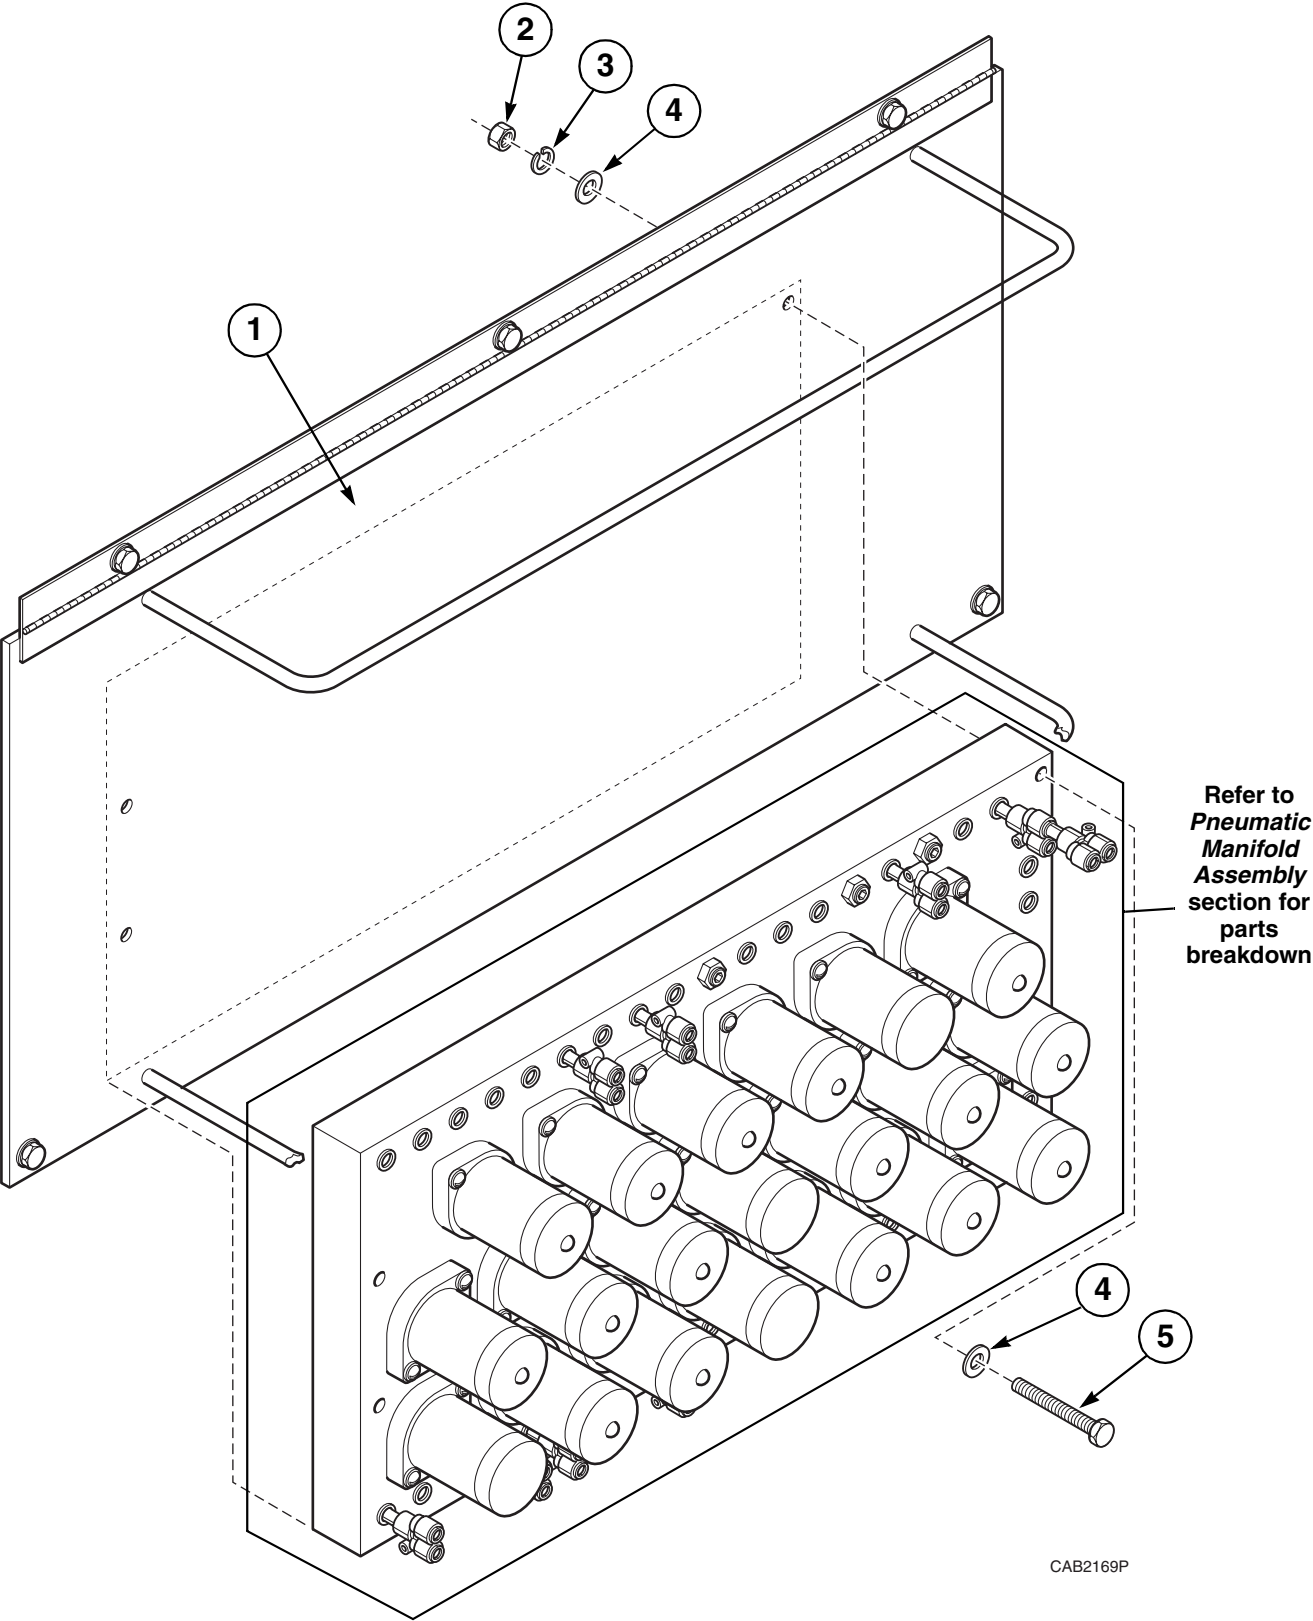

Manifold to Bracket Assembly – Models Through July 11, 2004

REF	PART NO.	DESCRIPTION	COMMENTS
1	J0637728-00	Manifold Bracket Weldment	Models through April 7, 2004
	J200291400	Manifold Bracket Weldment	Models starting April 8, 2004
2	F431005	Nut	3 required
3	F430322	Washer	3 required
4	F430317	Washer	6 required
5	JA-50128	Screw	3 required

Manifold to Bracket Assembly – Models Starting July 12, 2004

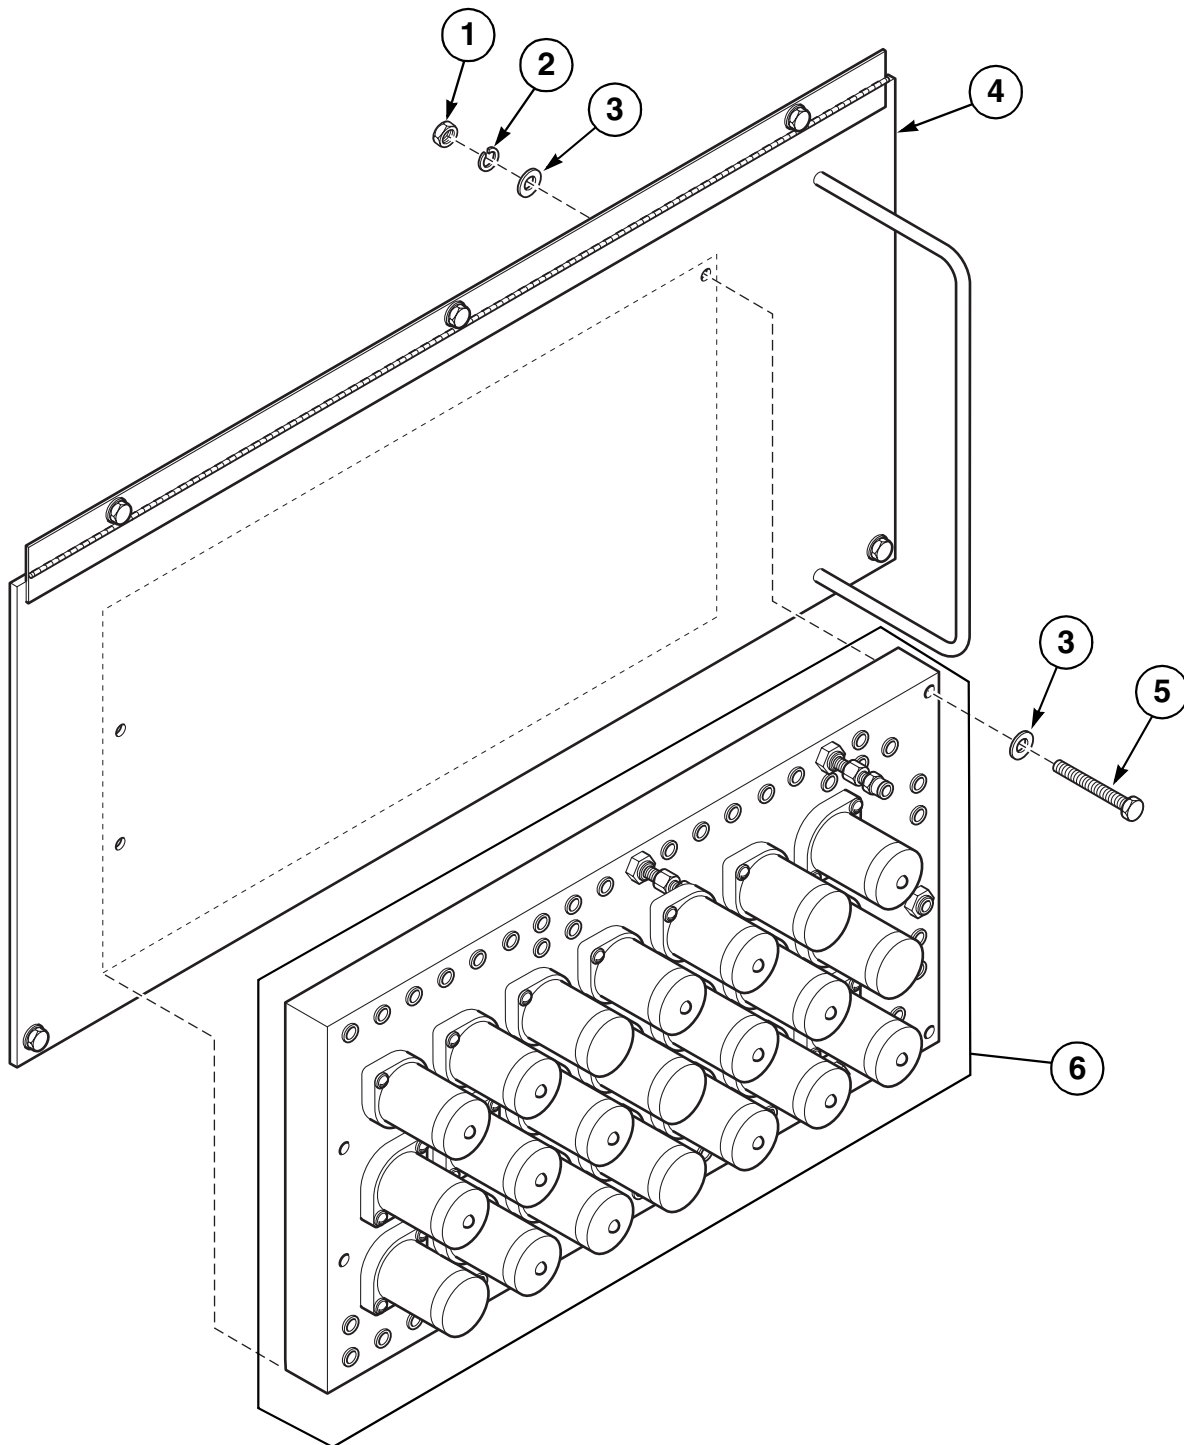


CAB2555P

Manifold to Bracket Assembly – Models Starting July 12, 2004

REF	PART NO.	DESCRIPTION	COMMENTS
1	F431005	Nut	3 required
2	F430322	Washer	3 required
3	F430317	Washer	6 required
4	J200291400	Manifold Bracket Weldment	
5	JA-50128	Screw	3 required
6	J200115600	Fitting to Manifold Assembly	Refer to <i>Fitting to Manifold Assembly</i> section for parts breakdown


Valve and Bracket Assembly

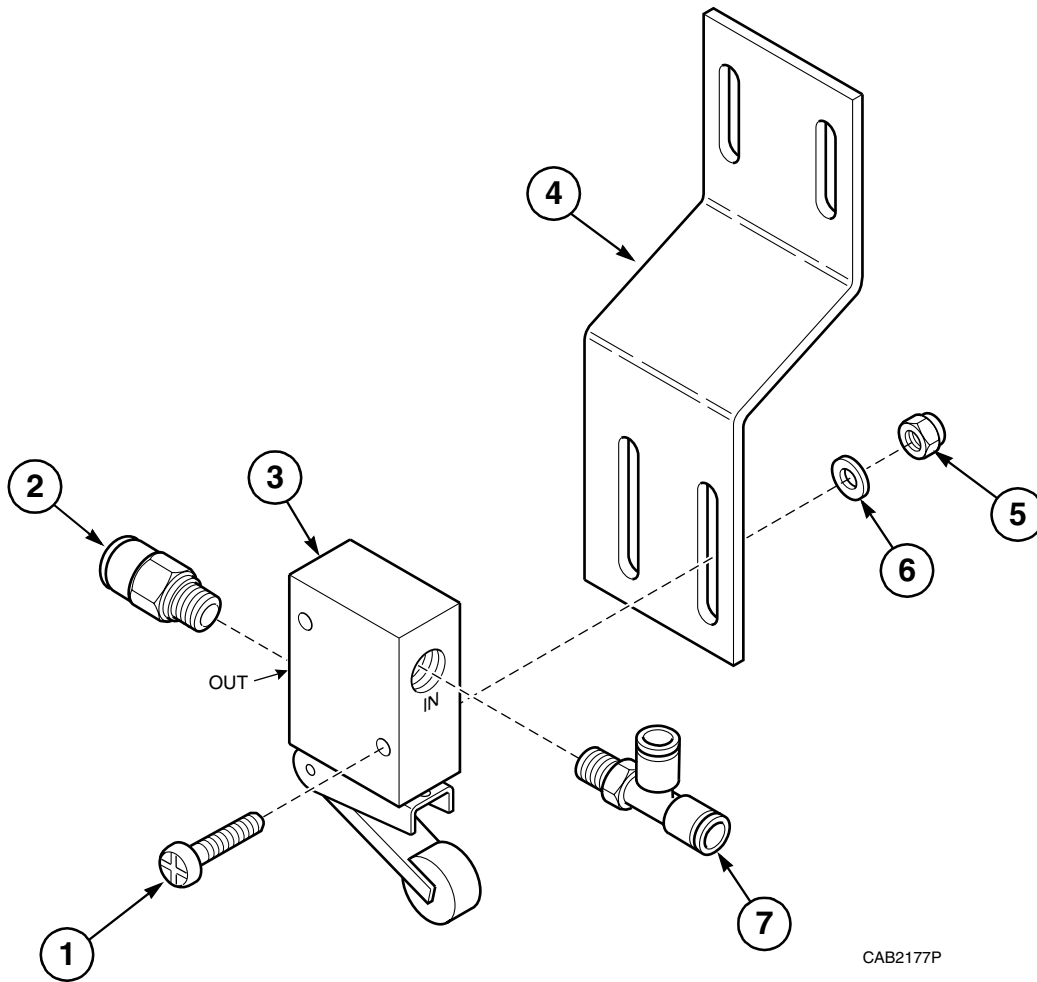

Valve and Bracket Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200002300	Valve and Bracket Assembly	Includes items 1-7
1	F432252	Screw	2 required
2	J1463835-00	Quick Tubing Connector	
3	J200154800	Limit Switch Valve	
4	J200011600	Valve Mounting Bracket	
5	F430220	Nut	2 required
6	F431123	Washer	2 required
7	J200010800	Male Run Tee	

Valve and Bracket Assembly – Models Through December 8, 2004

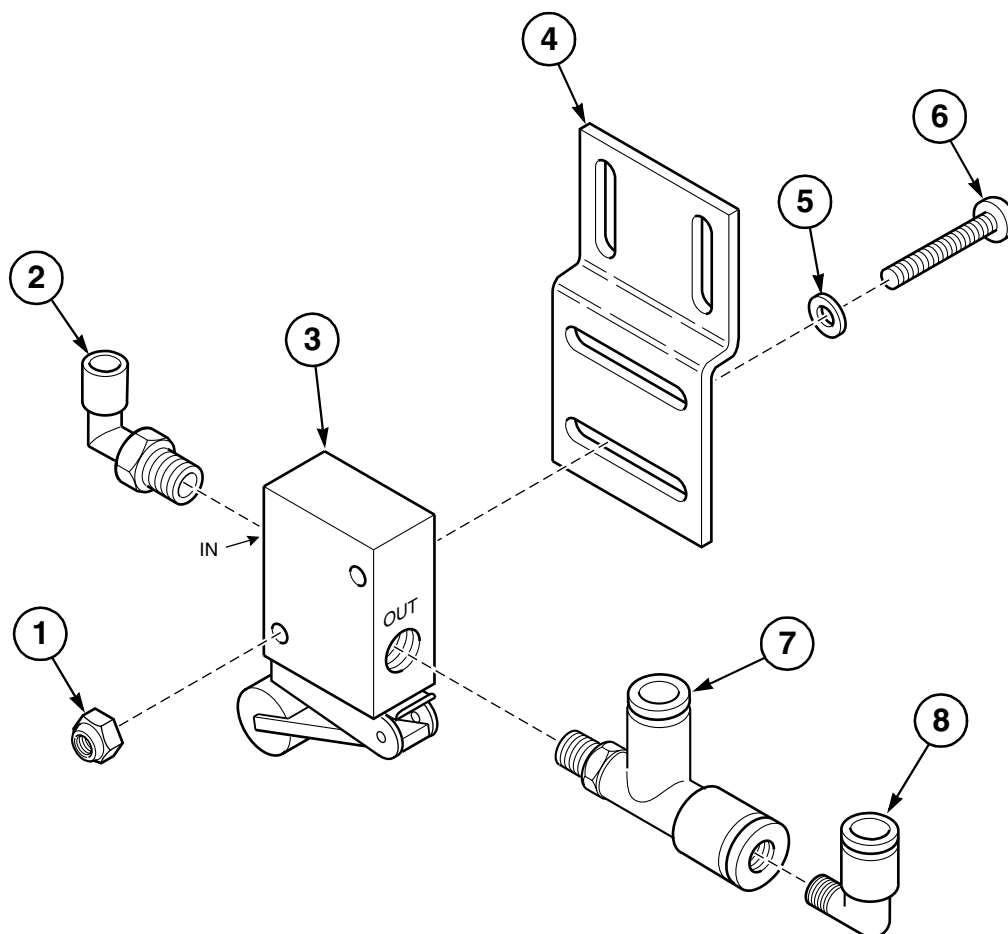


CAB2250P

Valve and Bracket Assembly – Models Through December 8, 2004

REF	PART NO.	DESCRIPTION	COMMENTS
	J200024700	Valve and Bracket Assembly	Includes items 1-8
1	F430220	Nut	2 required
2	J1410323	Male Tubing Elbow	
3	J200154800	Limit Switch Valve	
4	J200093800	Roller Valve Bracket	
5	F431123	Washer	2 required
6	F432252	Screw	2 required
7	J0260207-00	Male Run Tee	
8	J200011100	Reducer Elbow	

Valve and Bracket Assembly – Models Starting December 9, 2004

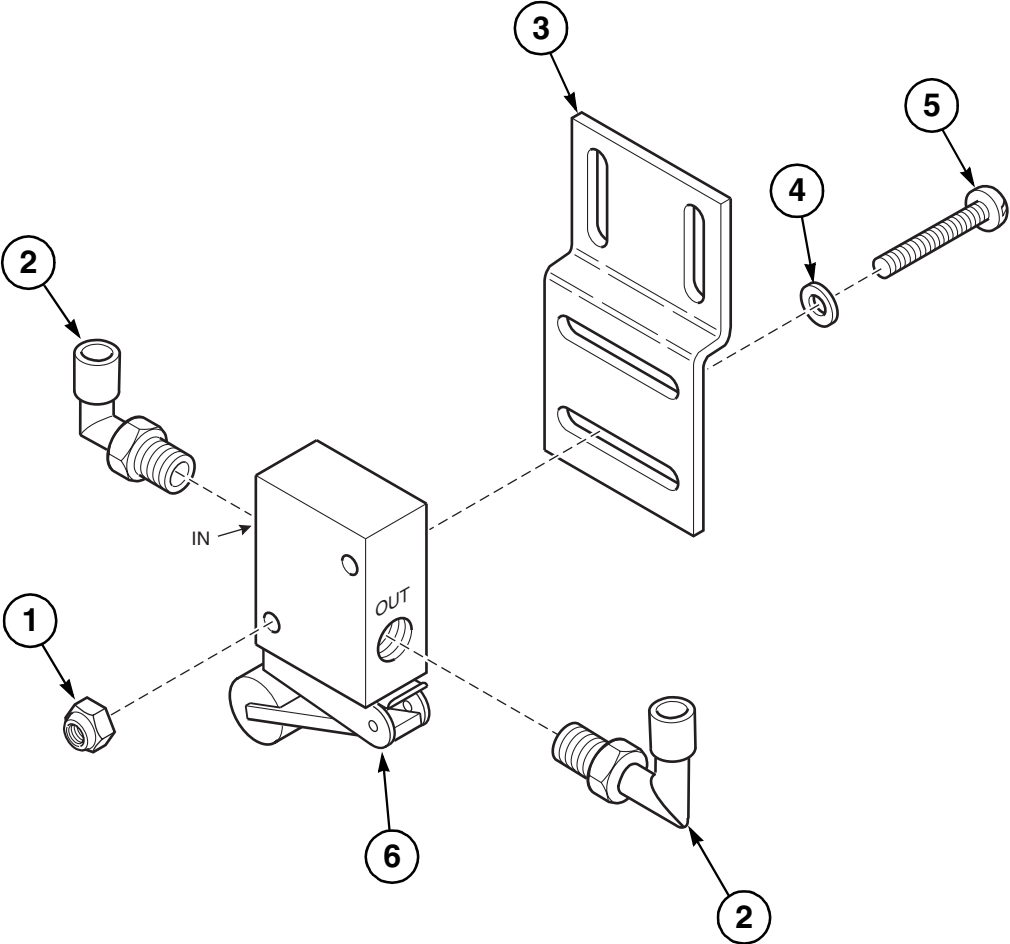


CAB2507P

Valve and Bracket Assembly – Models Starting December 9, 2004

REF	PART NO.	DESCRIPTION	COMMENTS
	J200024700	Valve and Bracket Assembly	Includes items 1-6
1	F430220	Nut	2 required
2	J1410323	Male Tubing Elbow	2 required
3	J200093800	Roller Valve Bracket	
4	F431123	Washer	2 required
5	F432252	Screw	2 required
6	J200154800	Limit Switch Valve	

Quick Exhaust Valve Assembly

Models Through February 2004

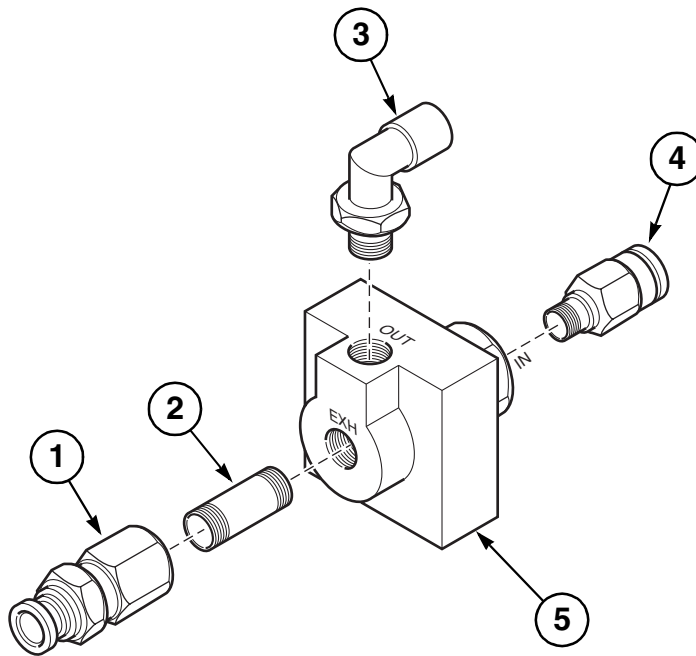


CAB2178P

Quick Exhaust Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	N/A	Quick Exhaust Valve Assembly	Includes items 1-5
	J025081105	O-Ring	Use with item 5
	J025081106	Quick Exhaust Valve	Use with item 5
1	N/A	Bulkhead Fitting	
2	J1026335-01	Pipe Nipple	
3	J1419811	Swivel Tubing Elbow	
4	J1463835-00	Quick Tubing Connector	
5	J200102400	Quick Exhaust Valve	

N/A = Part no longer available

Rear Limit Switch Assembly

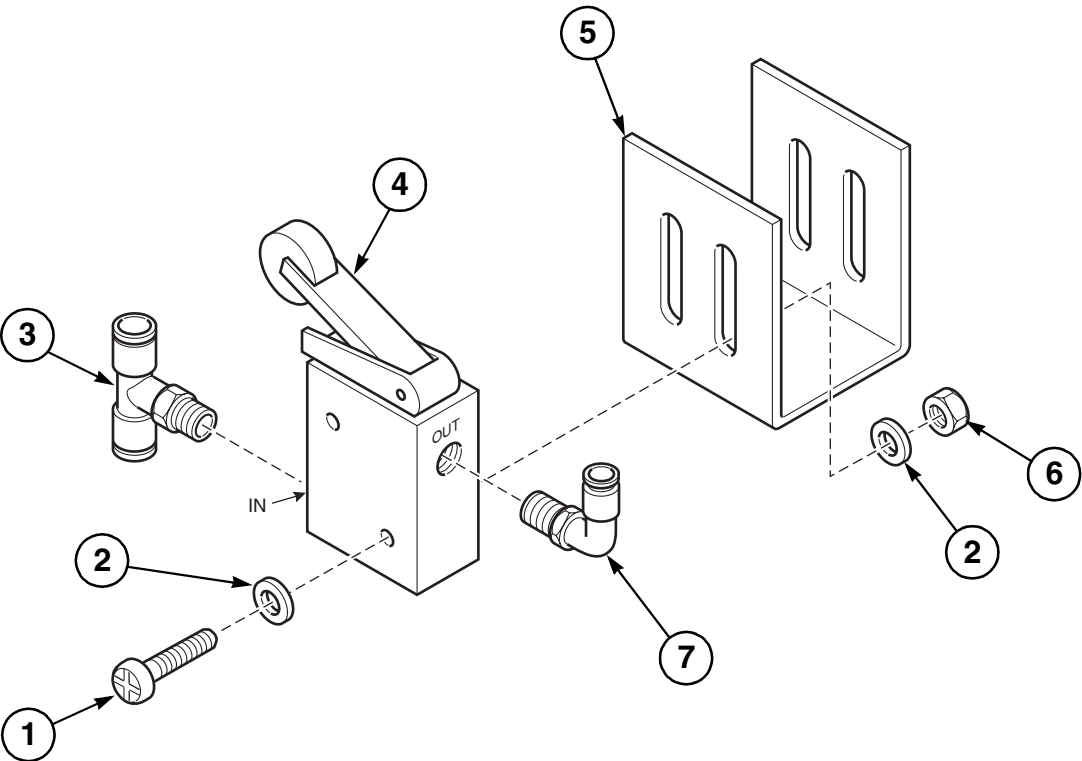


CAB2512P

Rear Limit Switch Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J063793900	Rear Limit Switch Assembly	Includes items 1-7
1	F432252	Screw	2 required
2	F431123	Washer	4 required
3	J1460484	Quick Tubing Tee	
4	J200154800	Limit Switch Valve	
5	J0637938-00	Rear Limit Bracket	
6	F430220	Nut	2 required
7	J1419811	Swivel Tubing Elbow	

Low Pressure Air System

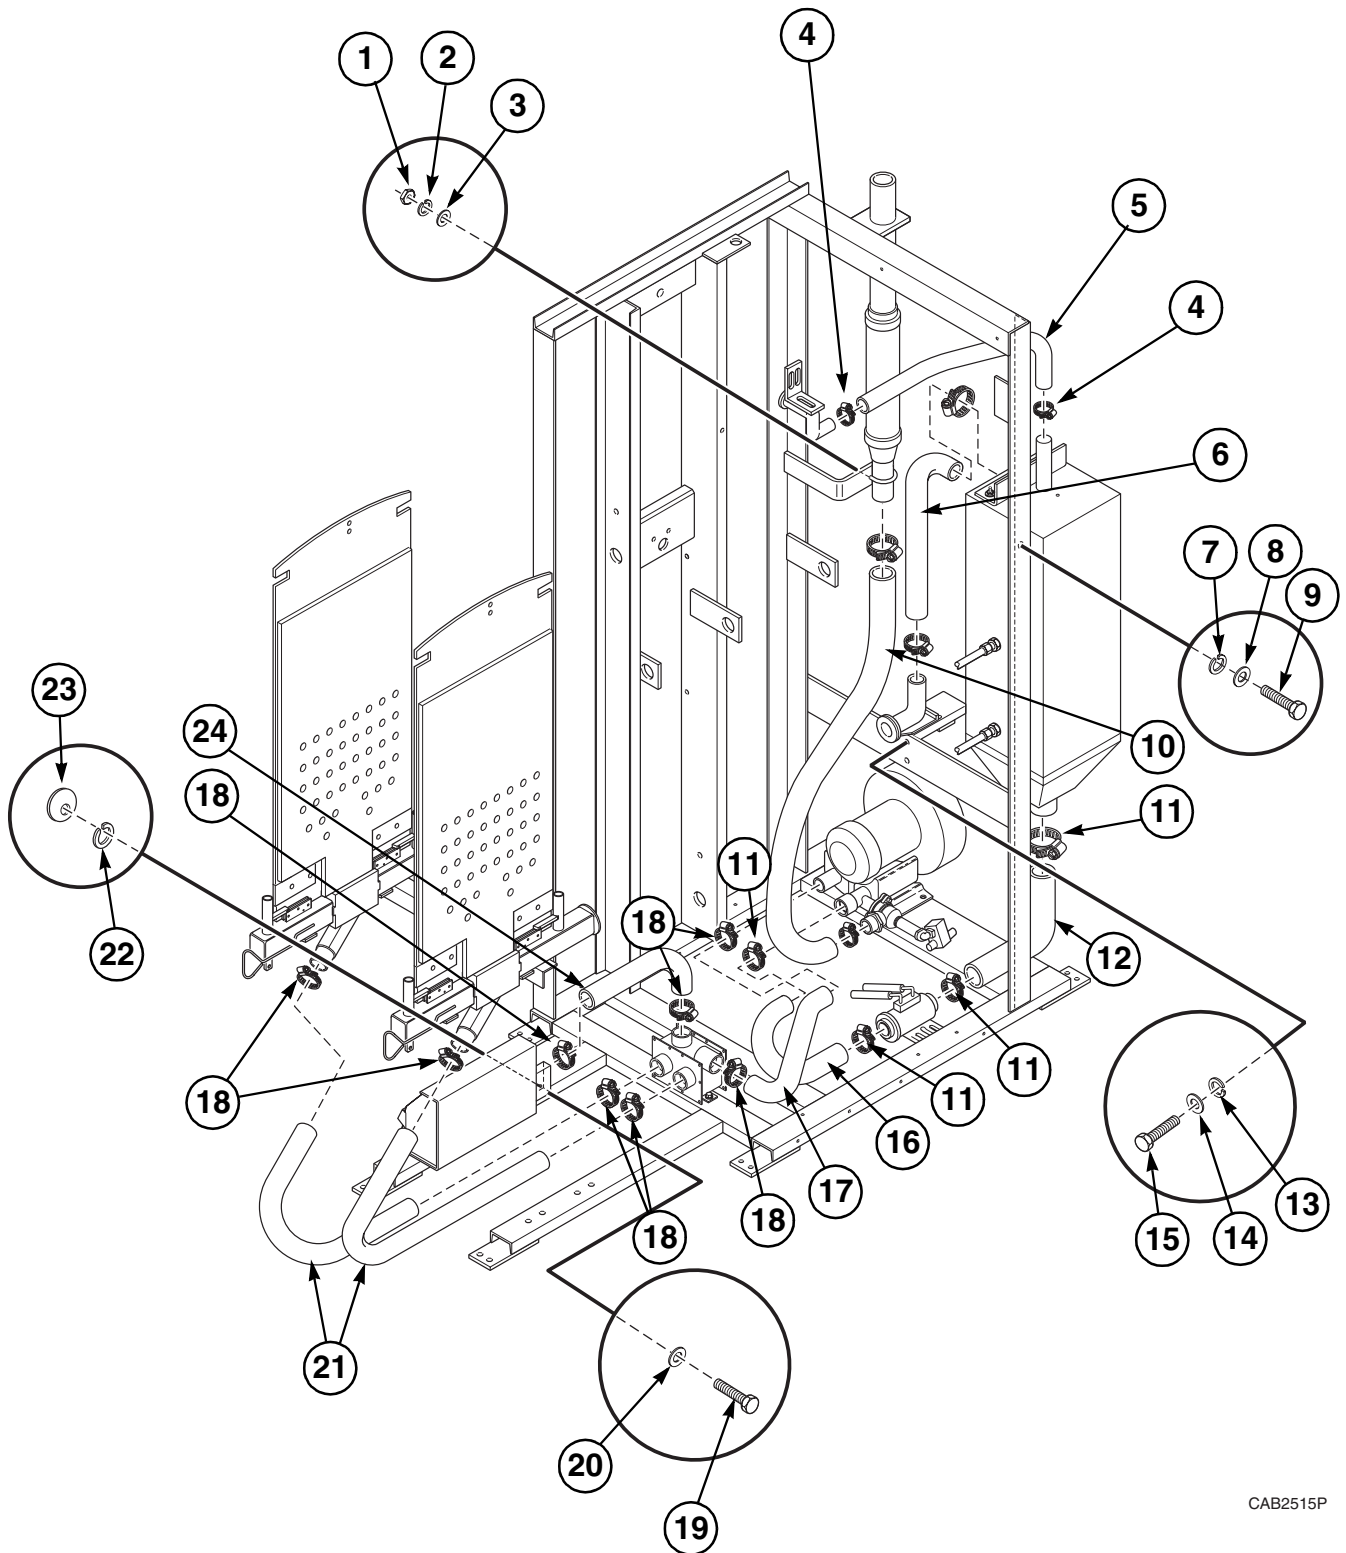


CAB2515P

Low Pressure Air System

REF	PART NO.	DESCRIPTION	COMMENTS
	F140606	Cable Tie	2 required
	J1000736	Nut	4 required
	J1000975	Washer	2 required
	JA-50949	Spring	2 required
	JA-51665	Hook	2 required
1	20275	Nut	4 required
2	F430322	Washer	6 required
3	F430317	Washer	6 required
4	JC-21541	Worm Gear Clamp	2 required
5	J1394782	Hose	Snorkel to heat exchanger; 32 inches
6	J200118600	Heat Exchanger Hose	26 inches
7	F431137	Washer	4 required
8	F430304	Washer	4 required
9	F430908	Screw	2 required
10	J200180609	Hose	48 inches
11	J200270900	Spiral Hose Clamp	6 required
12	J200187406	Hose	27 inches
13	M400014	Washer	8 required
14	F430301	Washer	8 required
15	F430109	Screw	4 required
16	J200187403	Hose	26 inches
17	J200180603	Hose	37 inches
18	J200270800	Spiral Hose Clamp	10 required
19	J1414788	Screw	6 required
20	F430312	Washer	6 required
21	J200180501	Hose	2 required; 44 inches
22	F431102	Washer	6 required
23	J150285500	Hold Down Clamp	2 required
24	J200180602	Hose	30 inches

Low Pressure Valve Assembly

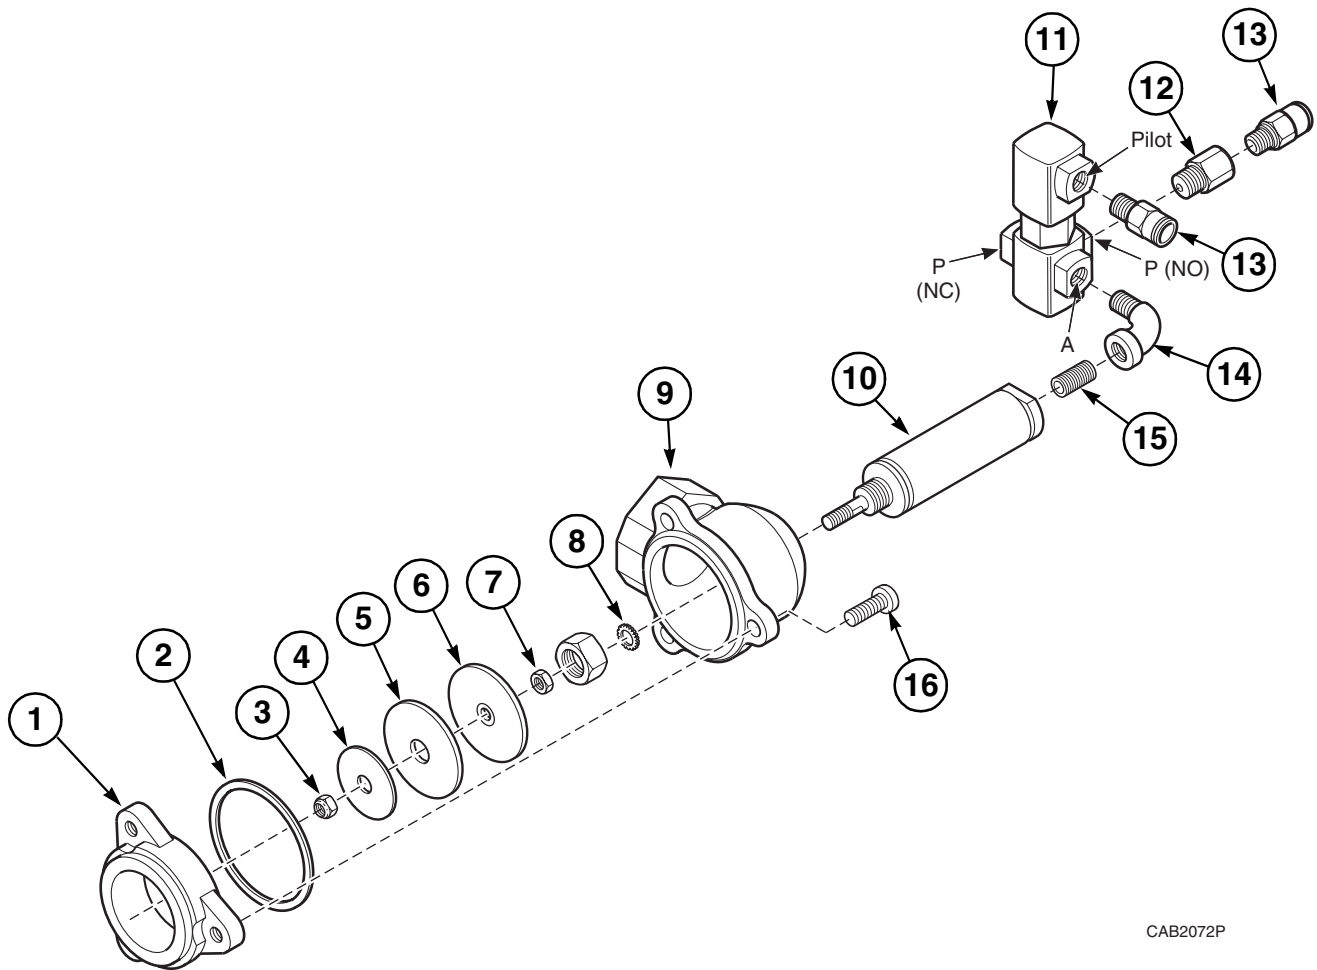


CAB2072P

Low Pressure Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200053300	Low Pressure Valve Assembly	Includes items 1-16
1	JA-50577	Cover	
2	JA-50578	Gasket	
3	J1391515	Nut	
4	J1359892	Washer	
5	J1359884	Seal	
6	J1359876	Washer	
7	N/A	Nut	
8	J1338565	Washer	
9	J1383116	Valve Body	
10	J1390806	Air Cylinder	Includes nut
11	J200053200	Air Valve	3-way; NO; Single air pilot
12	JA-19559	Closing Speed Orifice	
13	J1408004	Connector	2 required
14	J200056000	Street Pipe Elbow	
15	J1232313	Pipe Nipple	
16	JA-50055	Screw	3 required

N/A = Part no longer available

Snorkel Tube Assembly

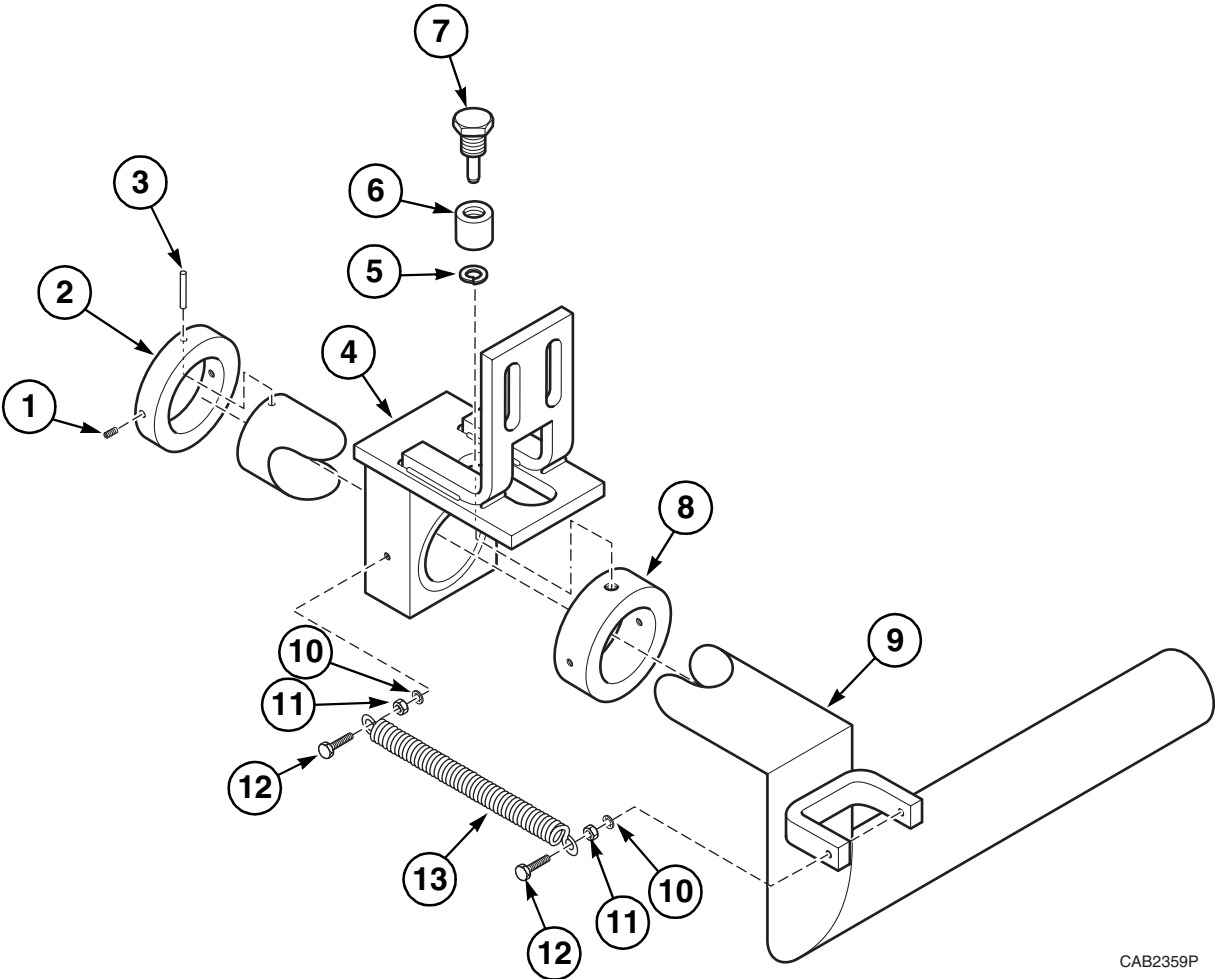


CAB2359P

Snorkel Tube Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200010900	Snorkel Tube Assembly	Includes items 1-13
1	J1179308	Screw	4 required
2	J1544808	Snorkel Tube Ring	
3	JA-51144	Roll Pin	
4	J200010200	Block Plate Assembly	
5	J1001007	Washer	
6	JA-55745	Needle Bearing	
7	J1417310	Screw	4 required
8	J1544790	Set Collar	
9	J200011000	Snorkel Air Tube Weldment	
10	J1000975	Washer	4 required
11	J1000736	Nut	4 required
12	J1019561	Screw	4 required
13	J1555697	Extension Spring	2 required

Discharge Tube Assembly

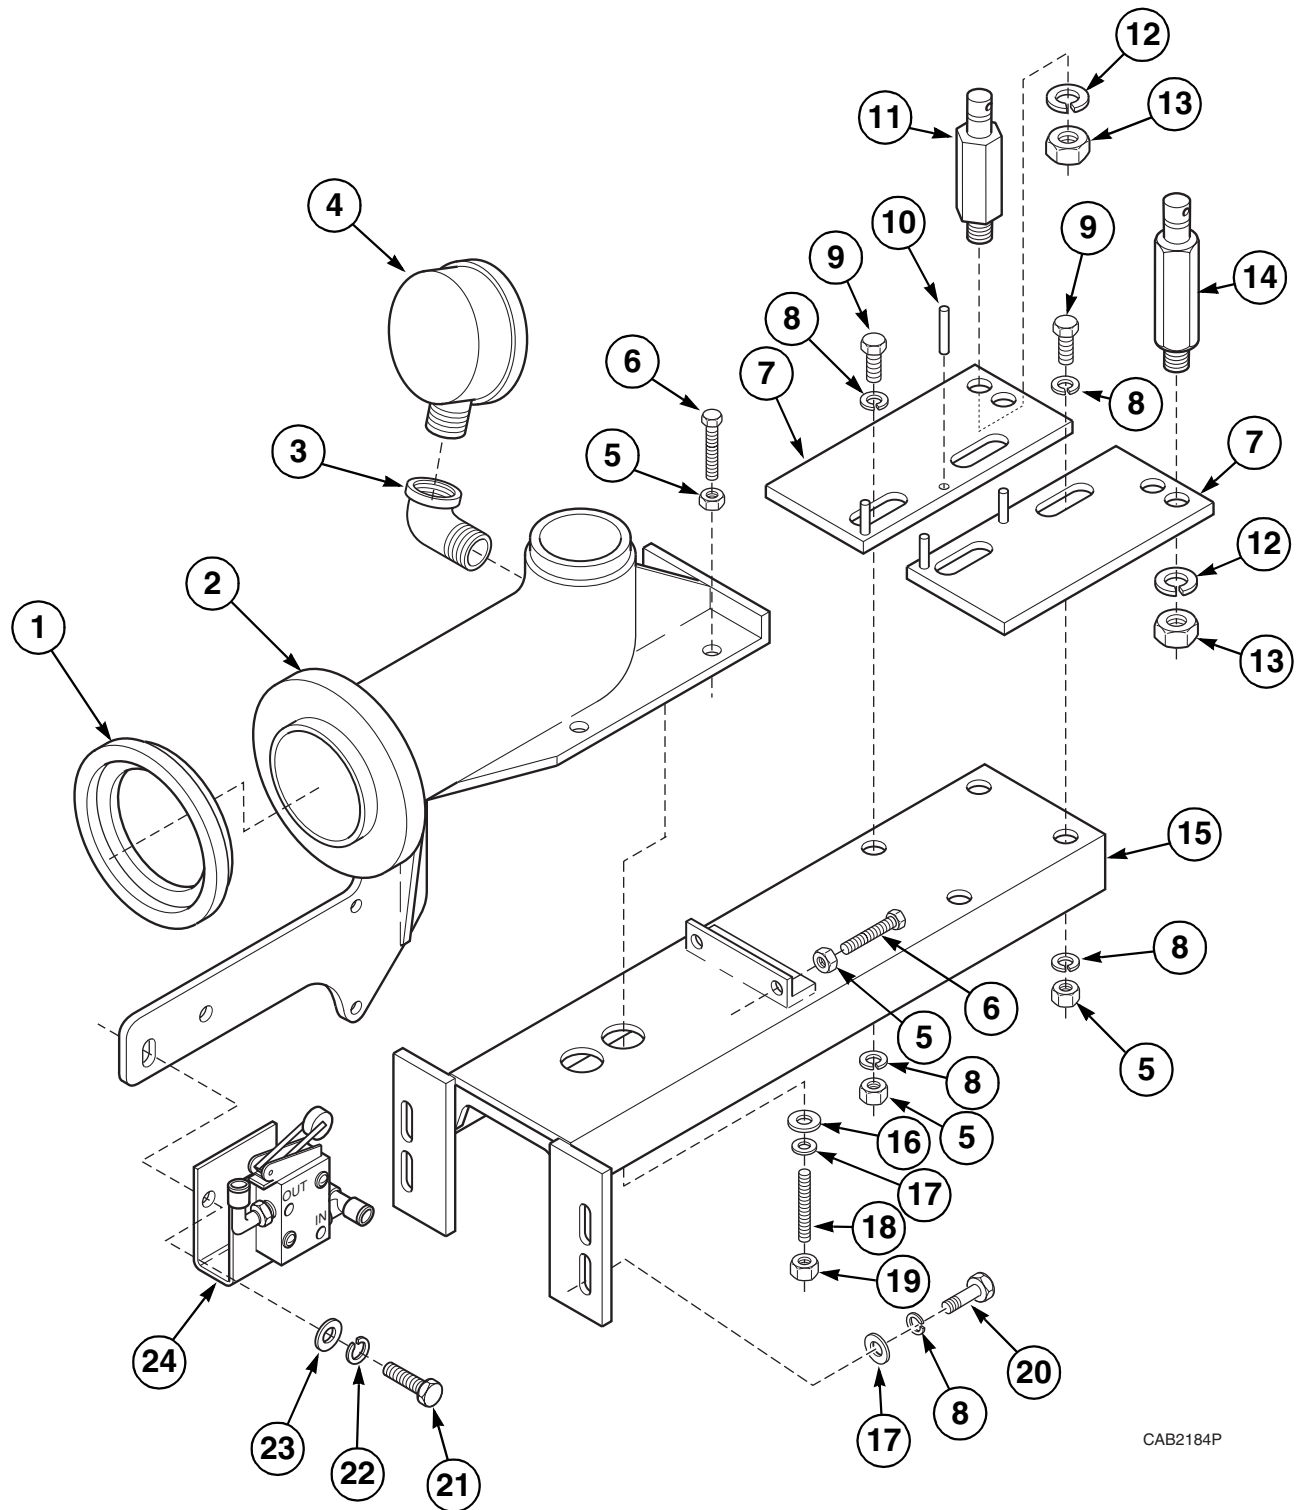


CAB2184P

Discharge Tube Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200001300	Discharge Tube Assembly	Includes items 1-19 and 21-24
	F410102	Clear Sealant	Used to bond item 1 to item 2
1	J1471531	Discharge Flange Gasket	
2	JA-23305	Discharge Tube	
3	J1231521	Street Pipe Elbow	
4	JA-51283	Diaphragm Gauge	0-5 psi
5	20275	Nut	8 required
6	JA-54156	Screw	6 required
7	J1612910	Index Cylinder Mounting Plate	2 required
8	M400014	Washer	7 required
9	430648	Screw	4 required
10	JA-51970	Dowel Pin	4 required
11	J200051800	Cylinder Mounting Pin	Includes cotter pin
12	91200	Washer	2 required
13	J1000850	Nut	2 required
14	J200051900	Cylinder Mounting Pin	Includes cotter pin
15	JA-09212	Cylinder Mounting	
16	J1001338	Washer	
17	M400081	Washer	7 required
18	JA-51951	Screw	
19	20274	Nut	
20	M400043	Screw	2 required
21	F430107	Screw	2 required
22	F430322	Washer	2 required
23	JC-80583	Washer	4 required
24	J063793900	Rear Limit Switch Assembly	Refer to <i>Rear Limit Switch Assembly</i> section for parts breakdown

Heat Exchanger Assembly

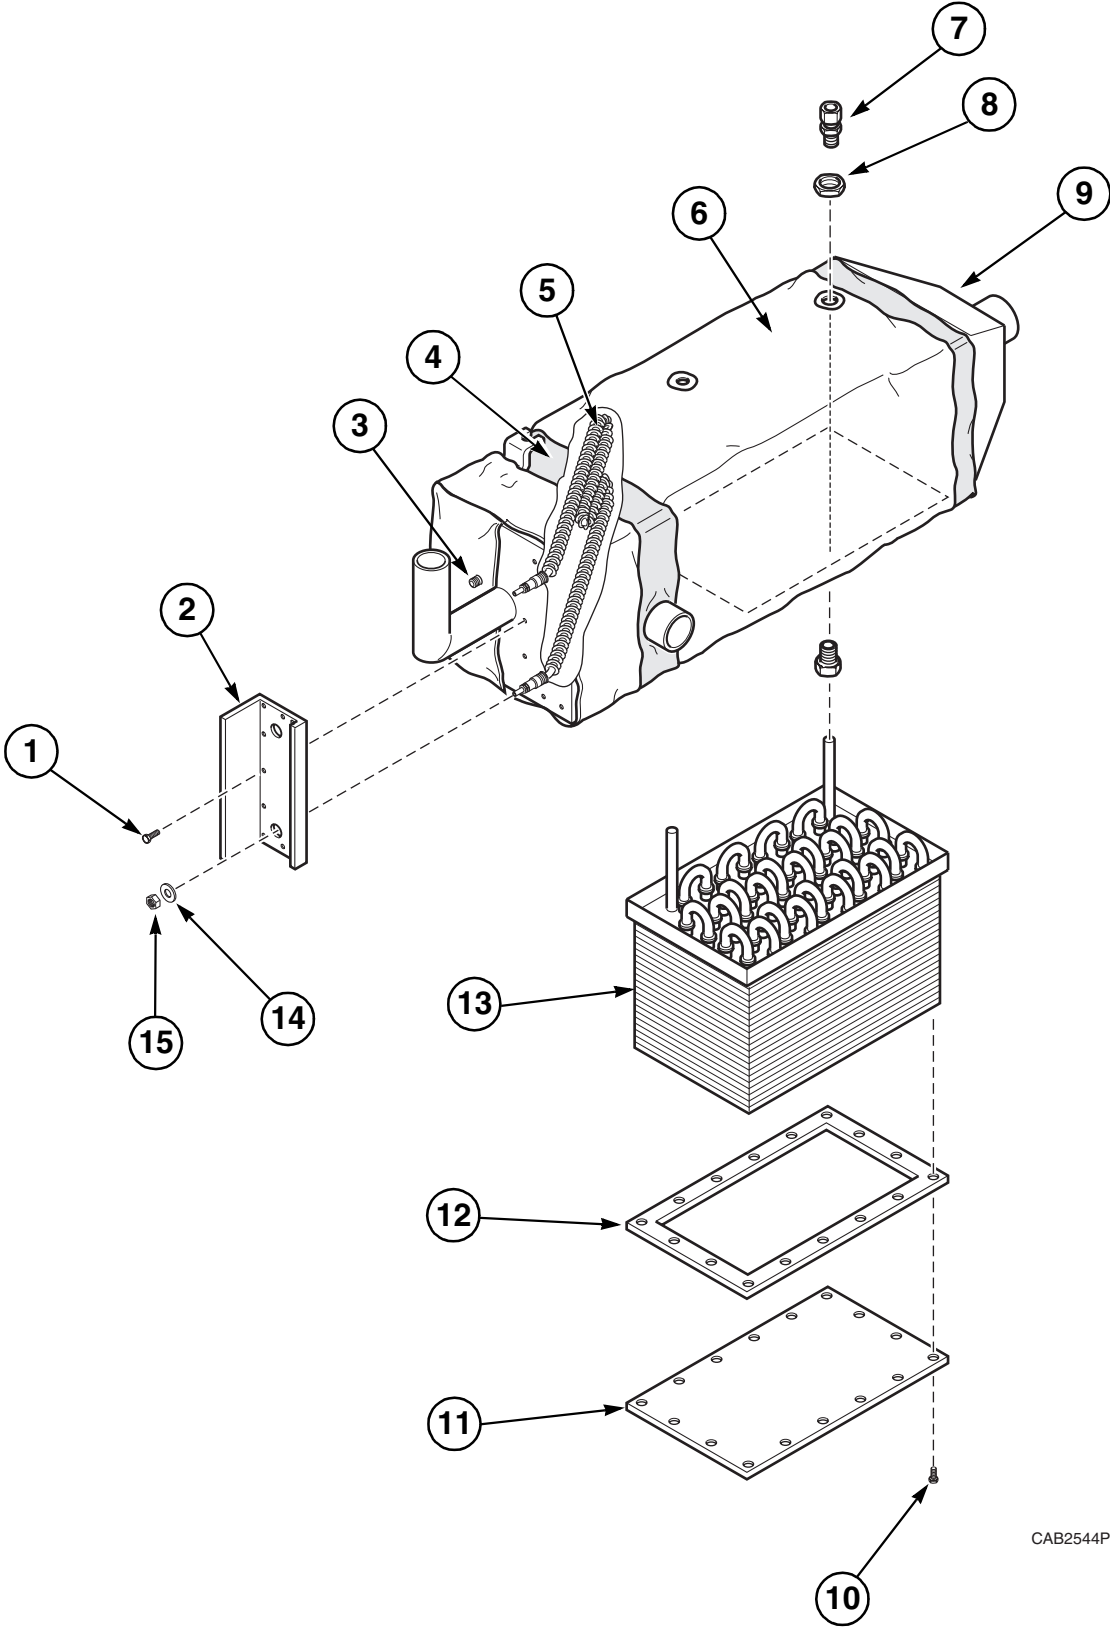


CAB2544P

Heat Exchanger Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1525237	Heat Exchanger Assembly	Includes items 1-15
1	J1571371	Screw	10 required
2	JA-22982	Heater Plate	
3	JA-24122	Fitting	
4	J0440160-00	Duct Tape	
5	JA-53883	Heater Element	1500 Watts; 230 Volt
6	J1540749	Insulation	
7	J1161272	Male Compression Connector	2 required
8	J1540731	Bulkhead Fitting	2 required
9	J1538750	Housing Weldment	
10	J1414788	Screw	4 required
11	J1562818	Heat Exchanger Cover Plate	
12	J1540814	Joint Sealant Gasket	4 feet required
13	J1536382	Steam Coil Weldment	
14	JA-55802	Washer	2 required
15	JC-48312	Nut	2 required

Damper Assembly

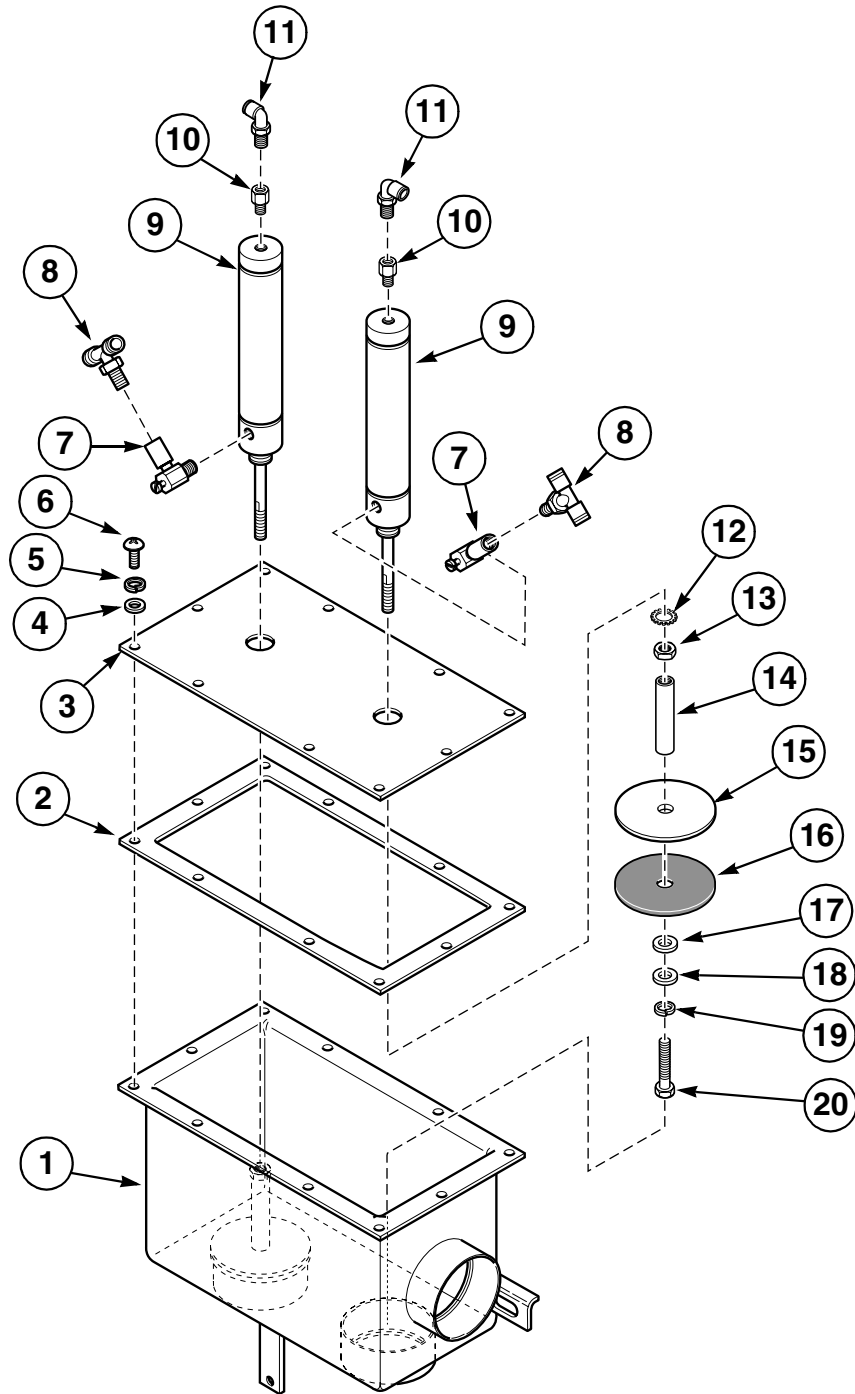


CAB2509P

Damper Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J147924501	Damper Assembly	Includes items 1-20
1	J200108300	Vacuum Damper Box Weldment	
2	J1437078	Damper Box Gasket	
3	J200101600	Damper Box Cover	
4	J1001213	Washer	10 required
5	J1000975	Washer	10 required
6	J1185107	Screw	10 required
7	J1455781	Swivel Flow Control Valve	2 required
8	J1438357	Quick Tubing Tee	2 required
9	J1437060	Air Cylinder	2 required
10	JA-19559	Closing Speed Orifice	2 required; Models starting April 15, 2004
11	J1407741	Swivel Tubing Elbow	2 required
12	J1338565	Washer	2 required
13	JC-48289	Nut	2 required
14	J200101500	Cylinder Coupling	2 required
15	J1398478	Washer	Large; 2 required
16	J1398460	Washer	Rubber; 2 required
17	J1398452	Washer	Shim; 2 required
18	J1398437	Washer	Outside; 2 required
19	M400013	Washer	2 required
20	JC-62851	Screw	2 required


Filter Box Damper Assembly

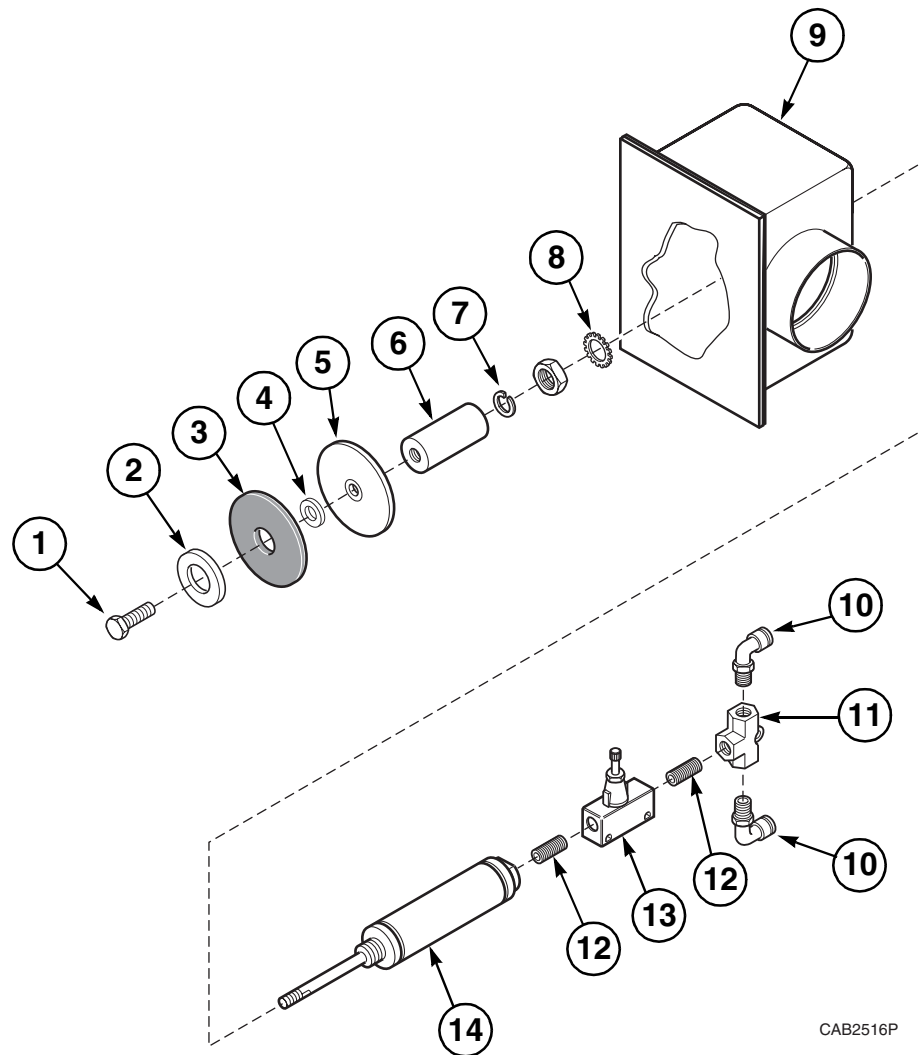

Filter Box Damper Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1479484	Filter Box Damper Assembly	Includes items 1-14
1	JC-62851	Screw	
2	J1398437	Washer	
3	J1398460	Washer	Rubber
4	J1398452	Washer	Shim
5	J1398478	Washer	Large
6	J200101500	Cylinder Coupling	
7	M400013	Washer	
8	J1338565	Washer	
9	J1479492	Filter Box Damper Weldment	
10	J1407741	Swivel Tubing Elbow	2 required
11	JA-53602	Shuttle Valve	
12	J1232313	Pipe Nipple	2 required
13	J0380121-00	Flow Control	
14	J1390806	Air Cylinder	Single acting; Includes nut

Butterfly Valve Assembly

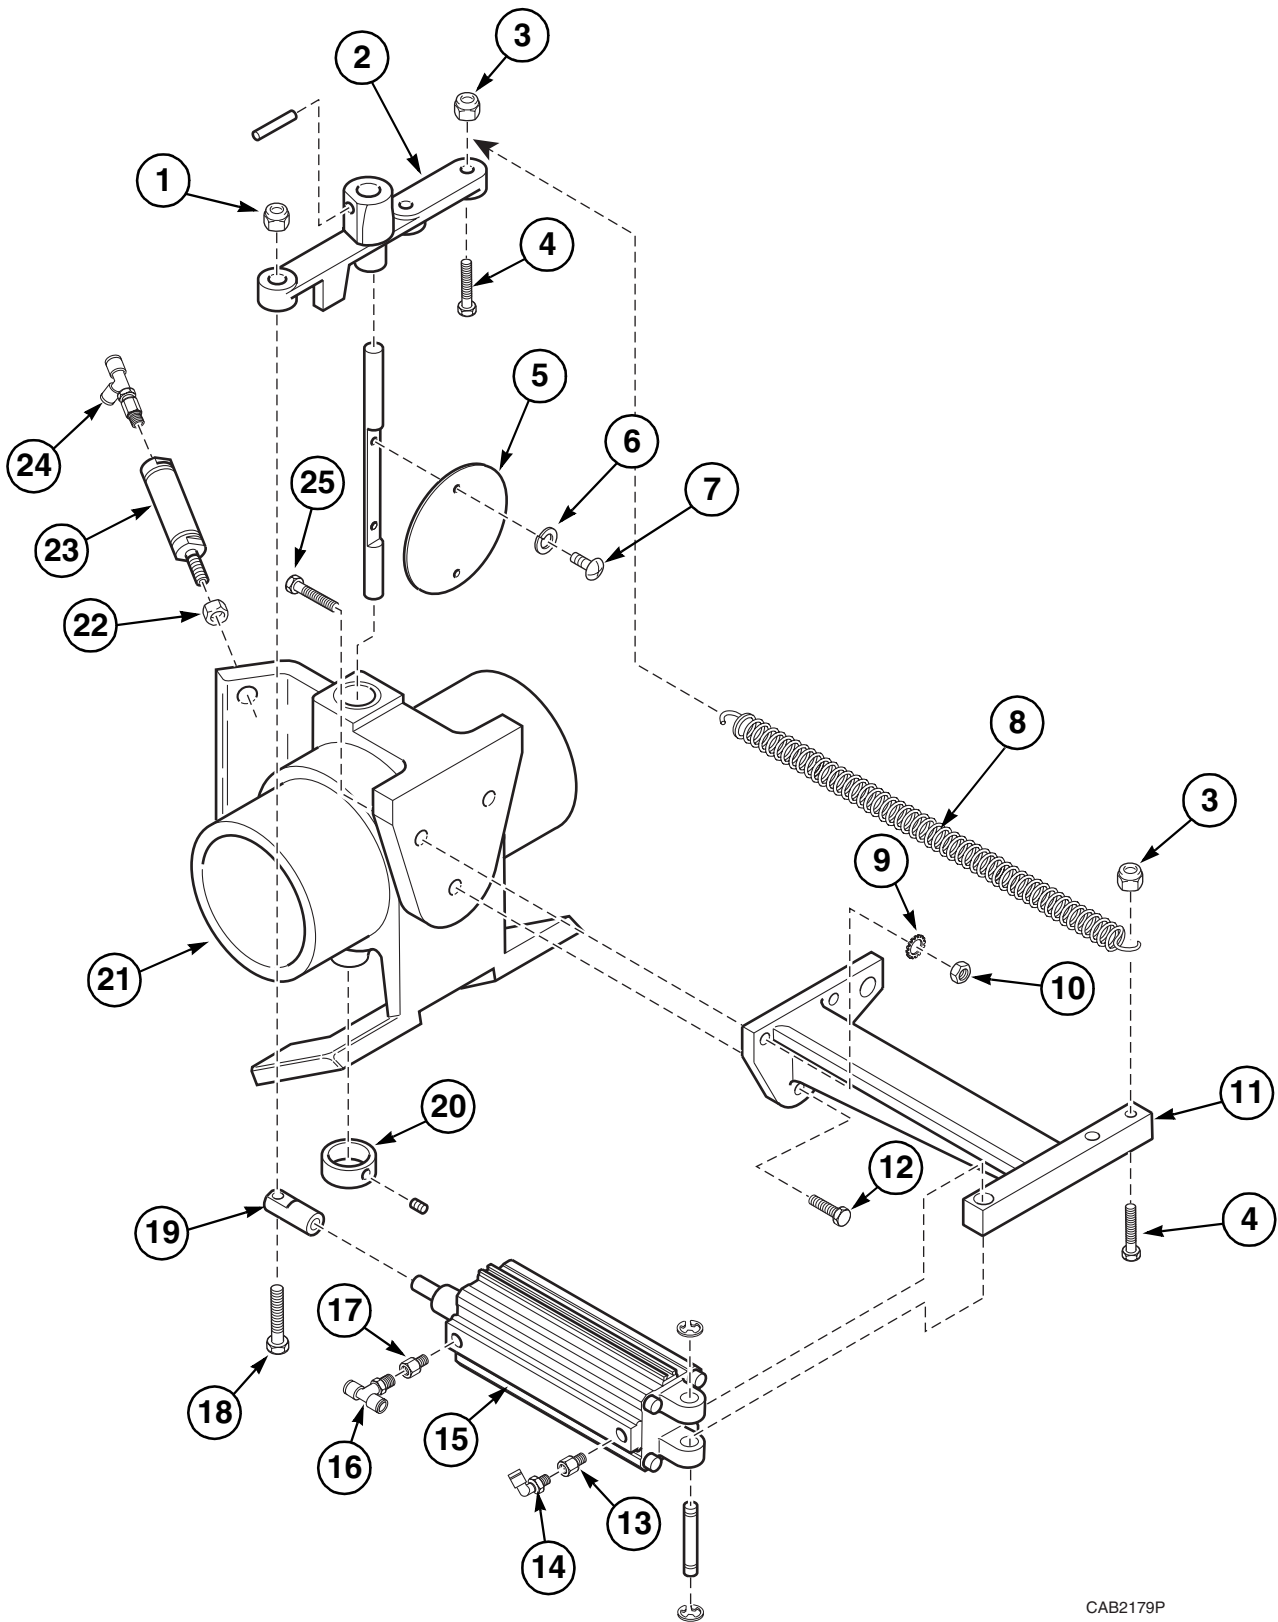


CAB2179P

Butterfly Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200044100	Butterfly Valve Assembly	Includes items 1-25
	J0250811-01	Cylinder Seal Kit	Use with item 15
1	F431011	Nut	
2	JA-08867	Actuating Arm and Shaft Assembly	
3	52566	Nut	2 required
4	JC-62516	Screw	2 required
5	JA-21889	Butterfly	
6	J1000975	Washer	2 required
7	M400044	Screw	2 required
8	JA-54004	Extension Spring	
9	JA-52154	Washer	3 required
10	20275	Nut	2 required
11	J200043900	Housing Bracket Weldment	
12	JA-53020	Screw	
13	JA-19559	Closing Speed Orifice	
14	J1407741	Swivel Tubing Elbow	
15	J0250115-00	Damper Box Control Cylinder	
16	J1437029	Quick Tubing Tee	
17	JA-25828	Closing Orifice	2 required
18	F430942	Screw	
19	J200052600	Rod End Clevis	
20	JA-50994	Safety Collar	Includes setscrew
21	JA-08327	Butterfly Housing	
22	JA-50434	Nut	
23	J0250114-00	Damper Box Cracking Cylinder	
24	J1438357	Quick Tubing Tee	
25	J1238518	Screw	2 required

Steam System (Front View)

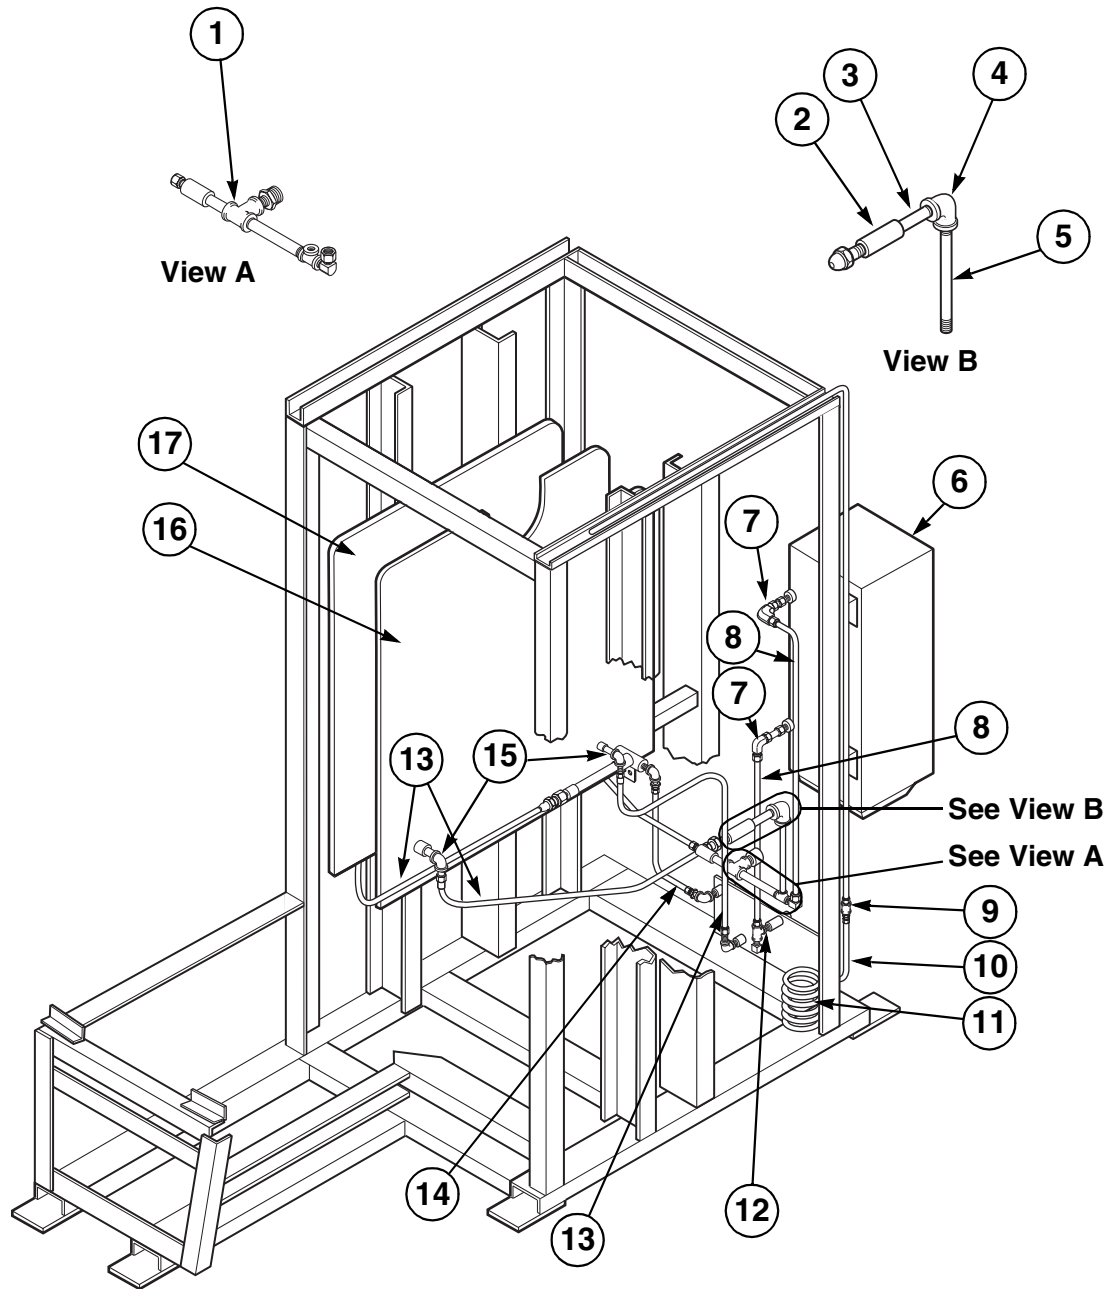


CAB2545P

Steam System (Front View)

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1615814	Middle Steam Inlet Assembly	Refer to <i>Middle Steam Inlet Assembly</i> section for parts breakdown
2	JC-23002	Pipe Coupling	
3	JA-52273	Pipe Nipple	
4	J1231422	Pipe Elbow	
5	JC-46349	Nipple	
6	J1525237	Heat Exchanger Assembly	Refer to <i>Heat Exchanger Assembly</i> section for parts breakdown
7	JC-30454	Union Compression Elbow	2 required
8	J1117191	Tubing	Copper; 1/2 inch OD
9	JA-09231	Condenser Flow Control	
10	J1106699	Tubing	Copper; 3/16 inch OD
11	J1471234	Condenser Coil	
12	J1521715	Steam Return Assembly	Refer to <i>Steam Return Assembly</i> section for parts breakdown
13	J1319268	Steam Hose	4 required
14	J1106665	Tubing	Copper; 3/8 inch OD
15	JC-28236	Street Pipe Elbow	2 required
16	J200004300	Front Head Assembly	Refer to <i>Front Head Assembly</i> section for parts breakdown
17	J200005000	Rear Head Assembly	Refer to <i>Rear Head Assembly</i> section for parts breakdown


Steam System (Rear View)

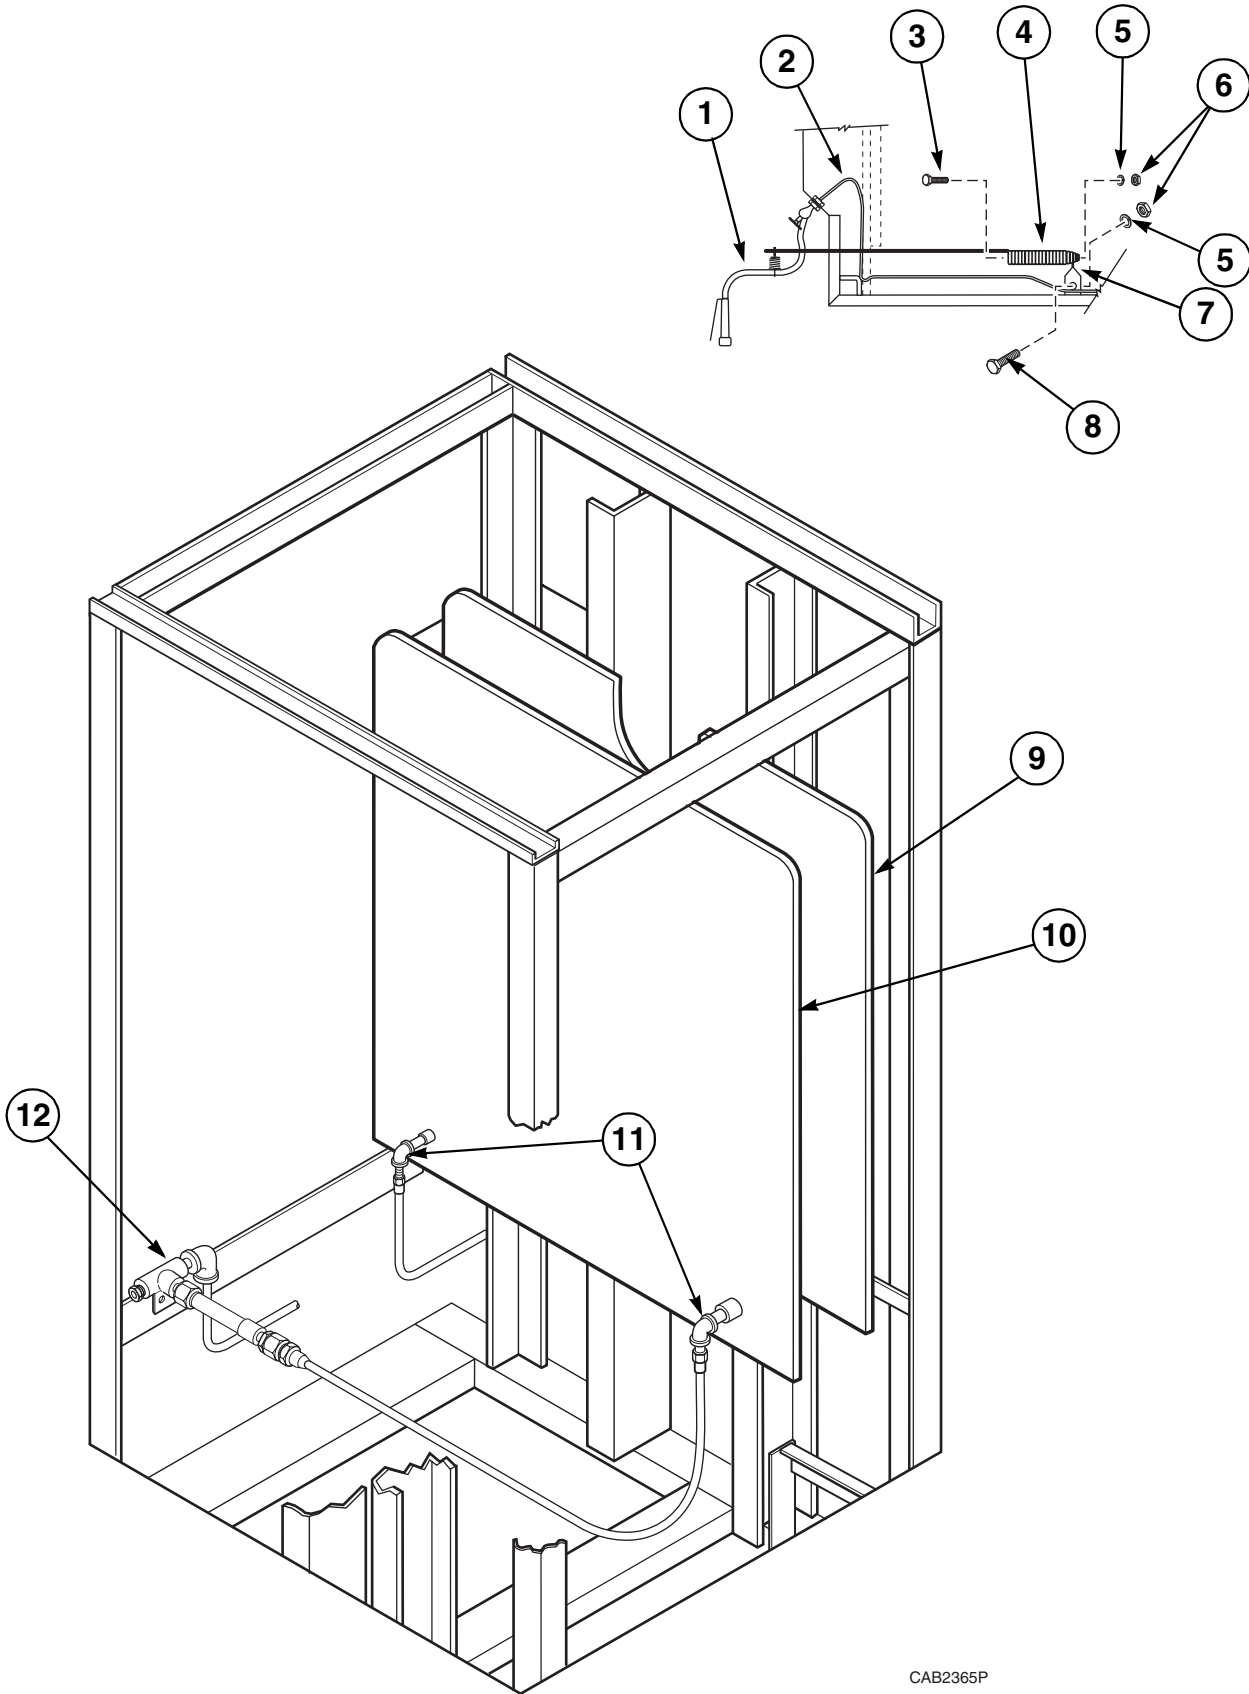

Steam System (Rear View)

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-04809	Spray Gun Assembly	Refer to <i>Spray Gun Assembly</i> section for parts breakdown
2	J1106699	Tubing	Copper; 3/16 inch OD
3	JA-50394	Screw	
4	JA-52160	Special Extension Spring	
5	J1185073	Washer	3 required
6	20275	Nut	3 required
7	JA-23002	Spray Gun Bracket	
8	JA-52426	Screw	2 required
9	J200004300	Front Head Assembly	Refer to <i>Front Head Assembly</i> section for parts breakdown
10	J200005000	Rear Head Assembly	Refer to <i>Rear Head Assembly</i> section for parts breakdown
11	JC-28236	Street Pipe Elbow	4 required
12	J1591189	Steam Return Assembly	Rear head; Refer to <i>Steam Return Assembly</i> section for parts breakdown

Middle Steam Inlet Assembly

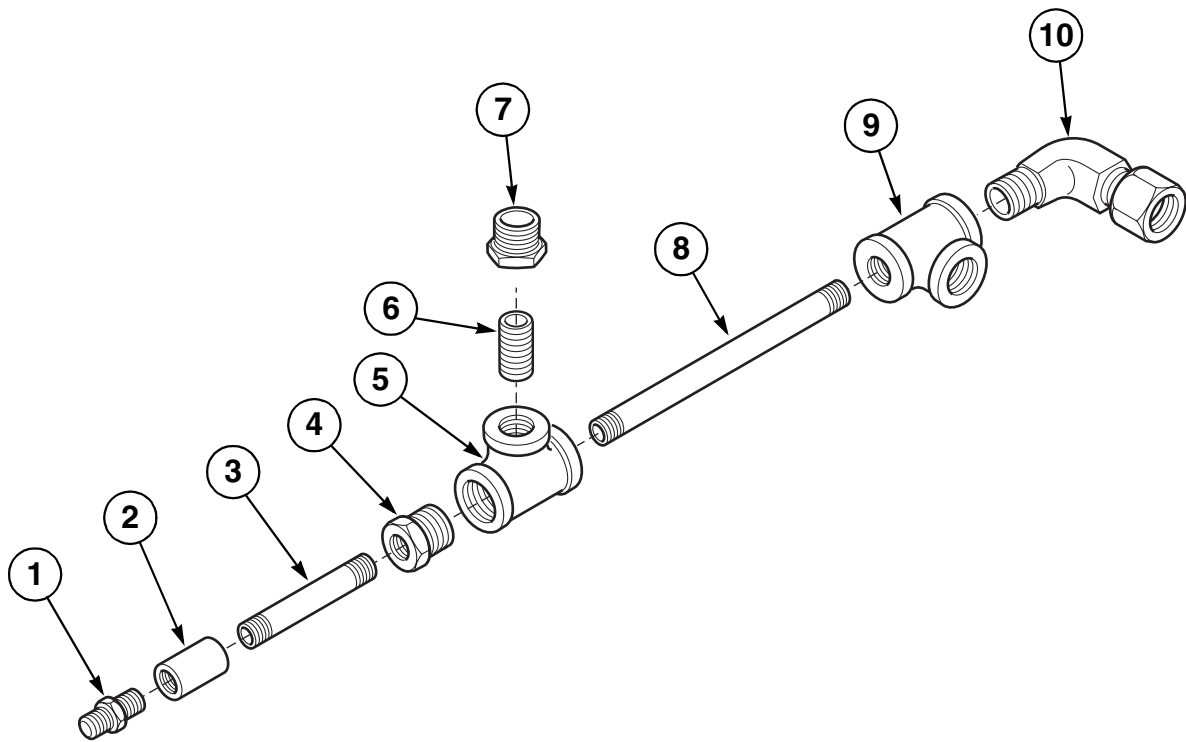


CAB2119P

Middle Steam Inlet Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1615814	Middle Steam Inlet Assembly	Includes items 1-10
1	J1319276	Flare Connector	
2	JC-23002	Pipe Coupling	
3	JC-4606101	Pipe Nipple	
4	JC-19662	Reducing Bushing	
5	J1018423	Tee	
6	431206	Pipe Nipple	
7	J1468347	Pipe Bushing	
8	JC-46159	Pipe Nipple	
9	JC-70620	Pipe Tee	
10	JA-54351	Compression Elbow	

Rear Head Steam Return Assembly

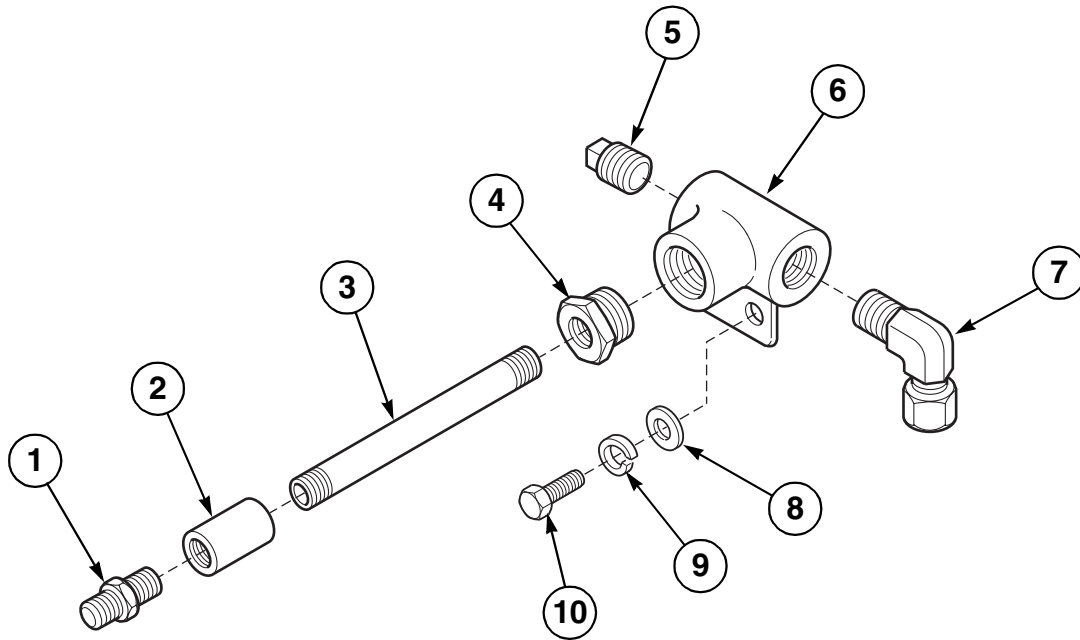


CAB2118P

Rear Head Steam Return Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1591189	Steam Return Assembly	Includes items 1-7
1	J1319276	Flare Connector	
2	JC-23002	Pipe Coupling	
3	JC-46349	Nipple	
4	JC-19682	Reducing Bushing	
5	J1161421	Pipe Plug	
6	JA-23840	Tee Bracket	
7	JC-30719	Male Compression Elbow	
8	JA-24365	Spacer	2 required
9	J1185073	Washer	2 required
10	JA-52426	Screw	2 required

Steam Return Assembly

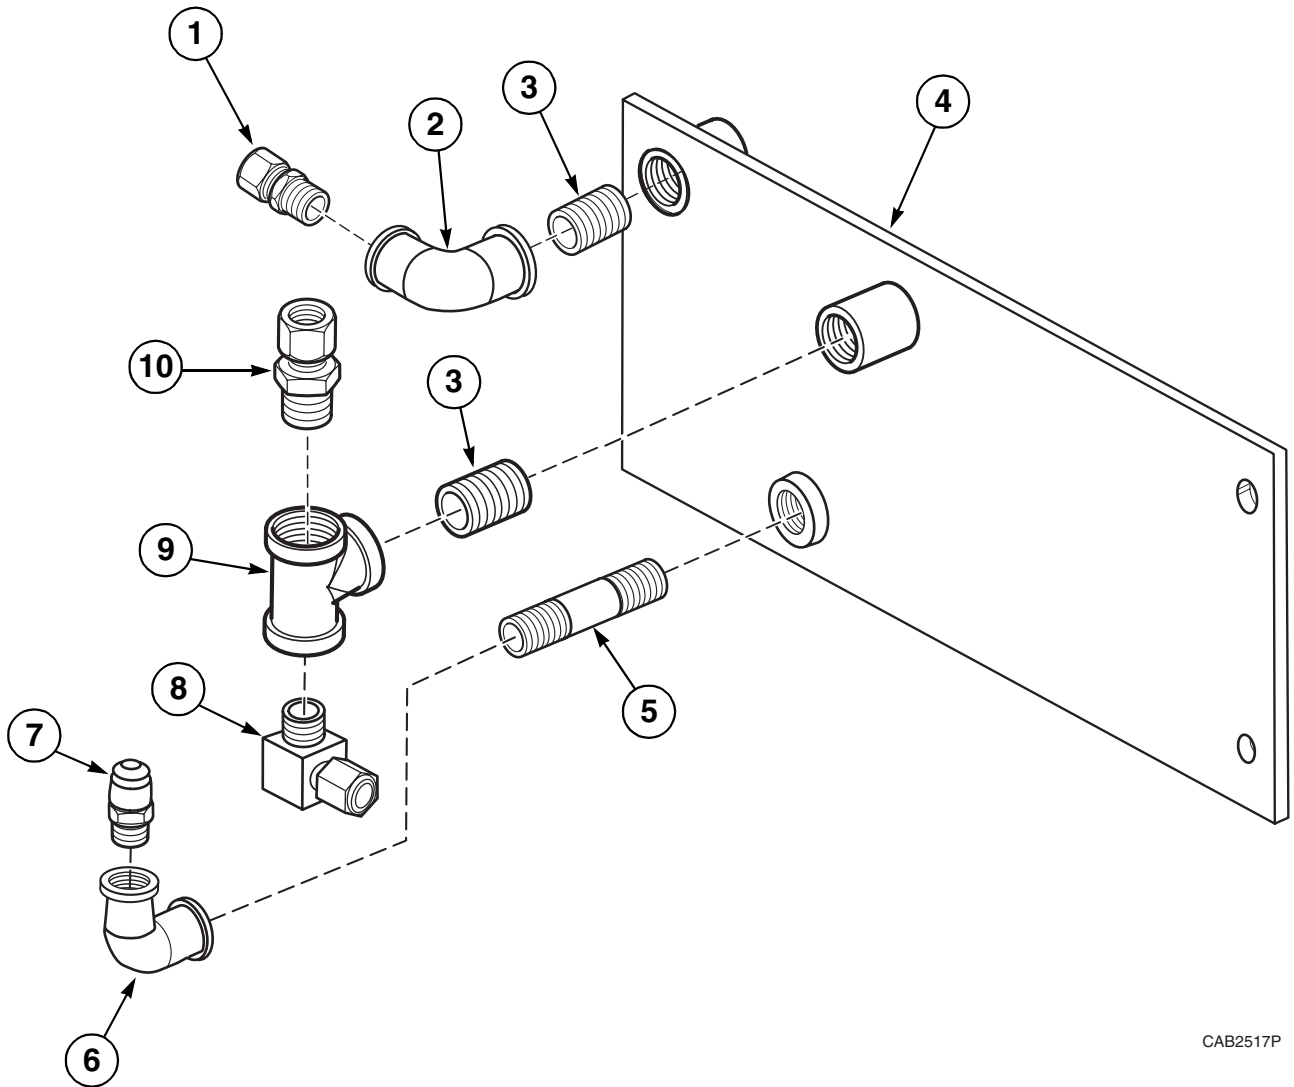


CAB2517P

Steam Return Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200055900	Steam Return Assembly	Includes items 1-10
1	J200203600	Male Connector	
2	J1084011	Pipe Elbow	
3	J1239334	Pipe Nipple	2 required
4	J200017300	Steam Return Weldment	
5	J1026665	Pipe Nipple	
6	JA-51007	Pipe Elbow	
7	J1319276	Flare Connector	
8	JC-30211	Male Compression Elbow	
9	JC-70628	Pipe Tee	
10	J1161272	Male Compression Connector	


Spray Gun Assembly

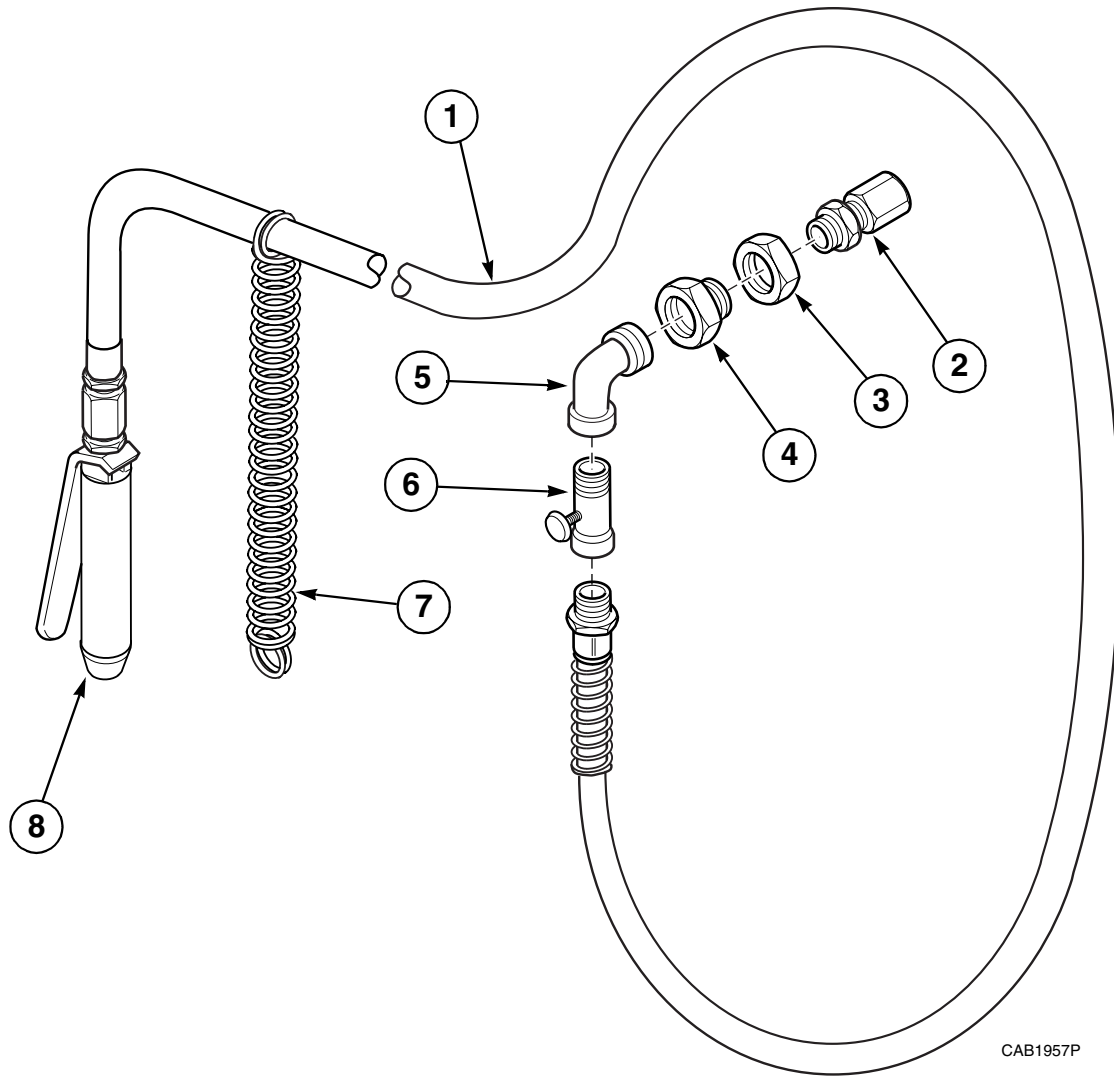

Spray Gun Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-04809	Spray Gun Assembly	
	JA-23002	Spray Gun Bracket	Use JA-52426 Screw, J1185073 Washer and 20275 Nut to attach
1	JA-51793	Hose Assembly	
2	J1151661	Compression Connector	
3	M400022	Nut	
4	JA-12007	Spray Gun Coupling	
5	JA-54494	Street Pipe Elbow	
6	J1246024	Needle Valve	
7	JA-52160	Special Extension Spring	Use JA-50394 Screw, J1185073 Washer and 20275 Nut to attach
8	JA-51110	Water Gun Assembly	


Machine Electrical Parts and Conduit

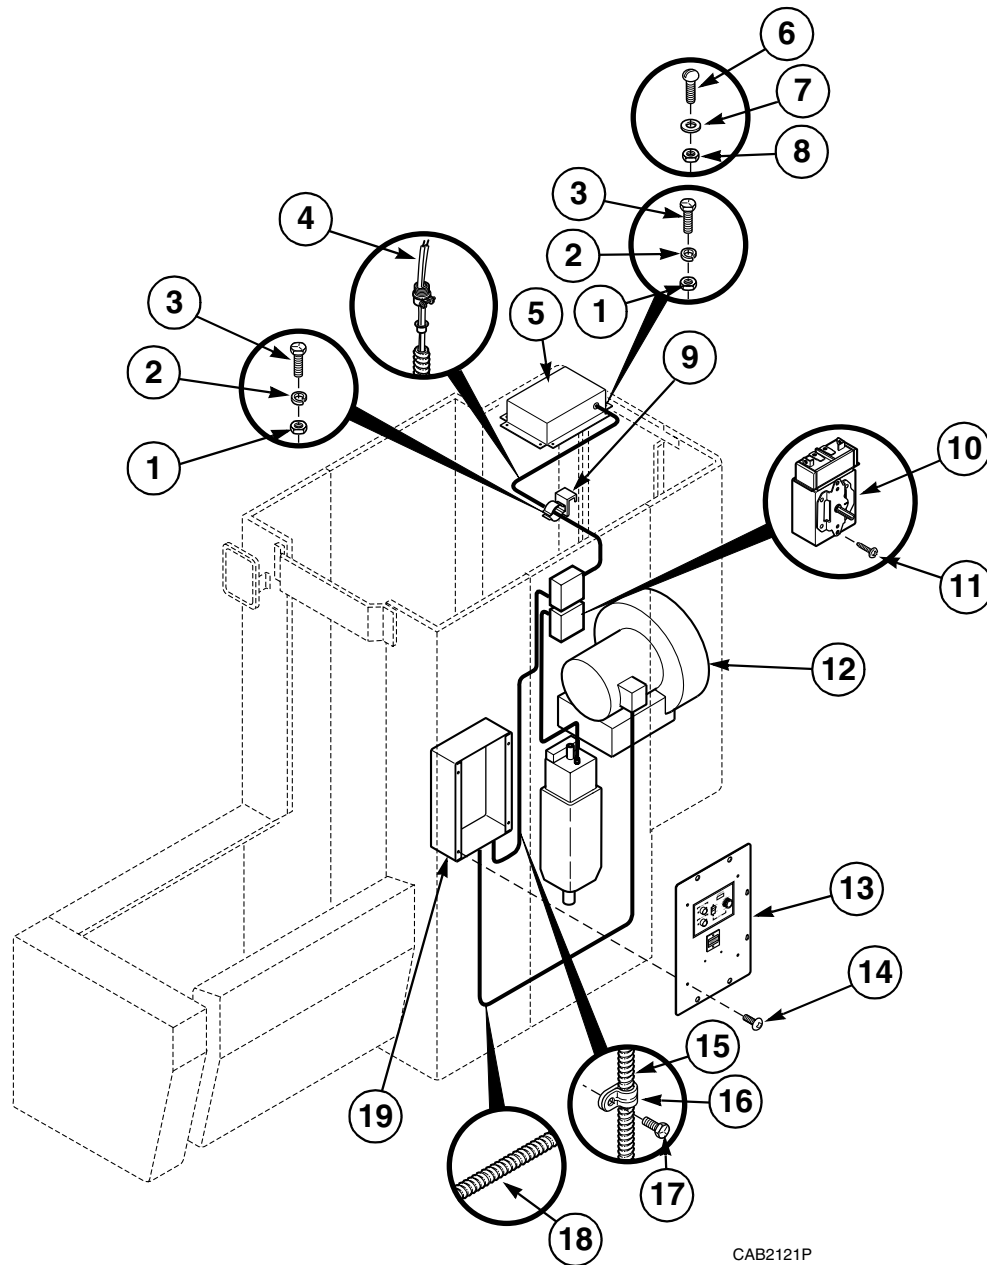

Machine Electrical Parts and Conduit

REF	PART NO.	DESCRIPTION	COMMENTS
	J1625045	Transformer Mount	Used to mount item 5
1	20275	Nut	6 required
2	J1185073	Washer	7 required
3	02422	Screw	5 required
4	J1131333	14 Gauge Wire	Black; 8 feet required
5	JC-72982	Transformer	460 Volt
	J1475953	Transformer	380-415 Volt
6	M400044	Screw	2 required
7	J1085992	Washer	2 required
8	J1000736	Nut	2 required
9	JC-69884	Beam Clamp	Not shown
10	J1531094	Thermostat Assembly	Refer to <i>Thermostat Assembly</i> section for parts breakdown
11	J1007434	Screw	2 required
12	J0220243-00	Blower	220-480 Volt/3 Phase/50-60 Hertz
13	J200057500	Control Box Cover Assembly	Refer to <i>Control Box Cover Assembly</i> section for parts breakdown
14	JC-61273	Screw	4 required
15	J1531680	Conduit Assembly	Control box to thermostat
16	J1162478	Electrical Strap	2 required
17	JA-53020	Screw	2 required
18	J1618297	Conduit Assembly	Control box to blower motor
19	J1606748	Control Box Assembly	200-240 Volt/3 Phase/50-60 Hertz


Blower Assembly

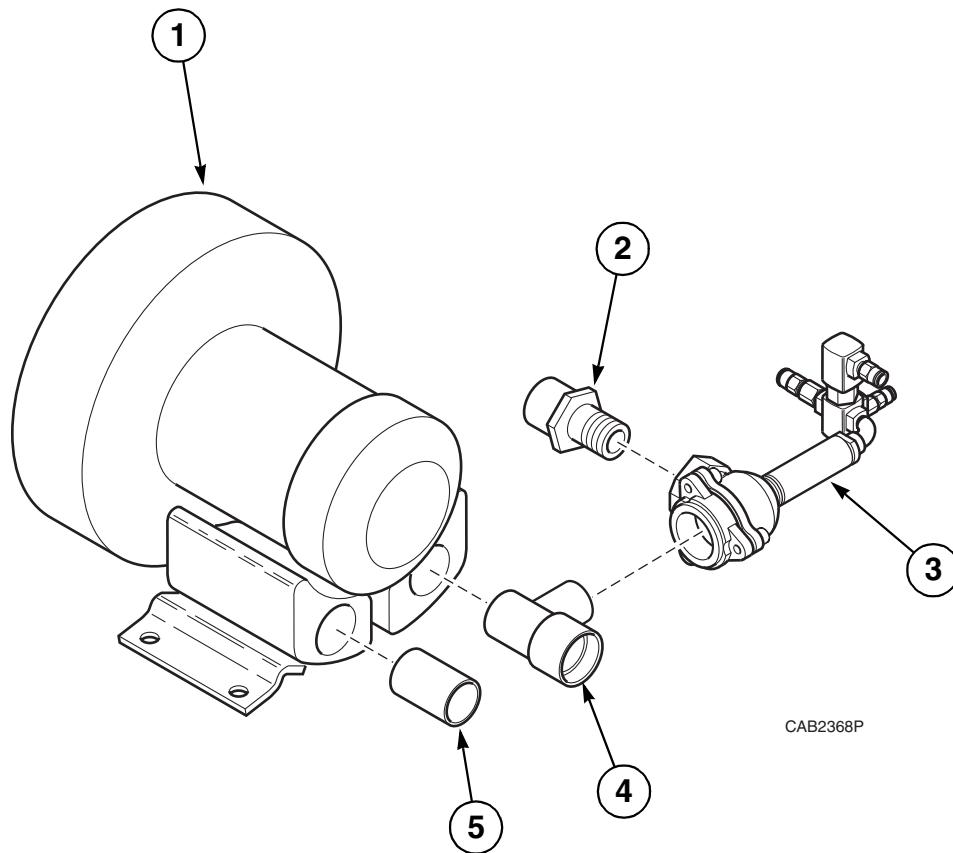

Blower Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
1	J0220243-00	Blower	220-480 Volt/3 Phase/50-60 Hertz
2	J1370634	Pipe Assembly Bushing	
3	J200053300	Low Pressure Valve Assembly	Refer to <i>Low Pressure Valve Assembly</i> section for parts breakdown
4	J1479716	Outlet Weldment	
5	J1398544	Pipe Nipple	


Thermostat Assembly

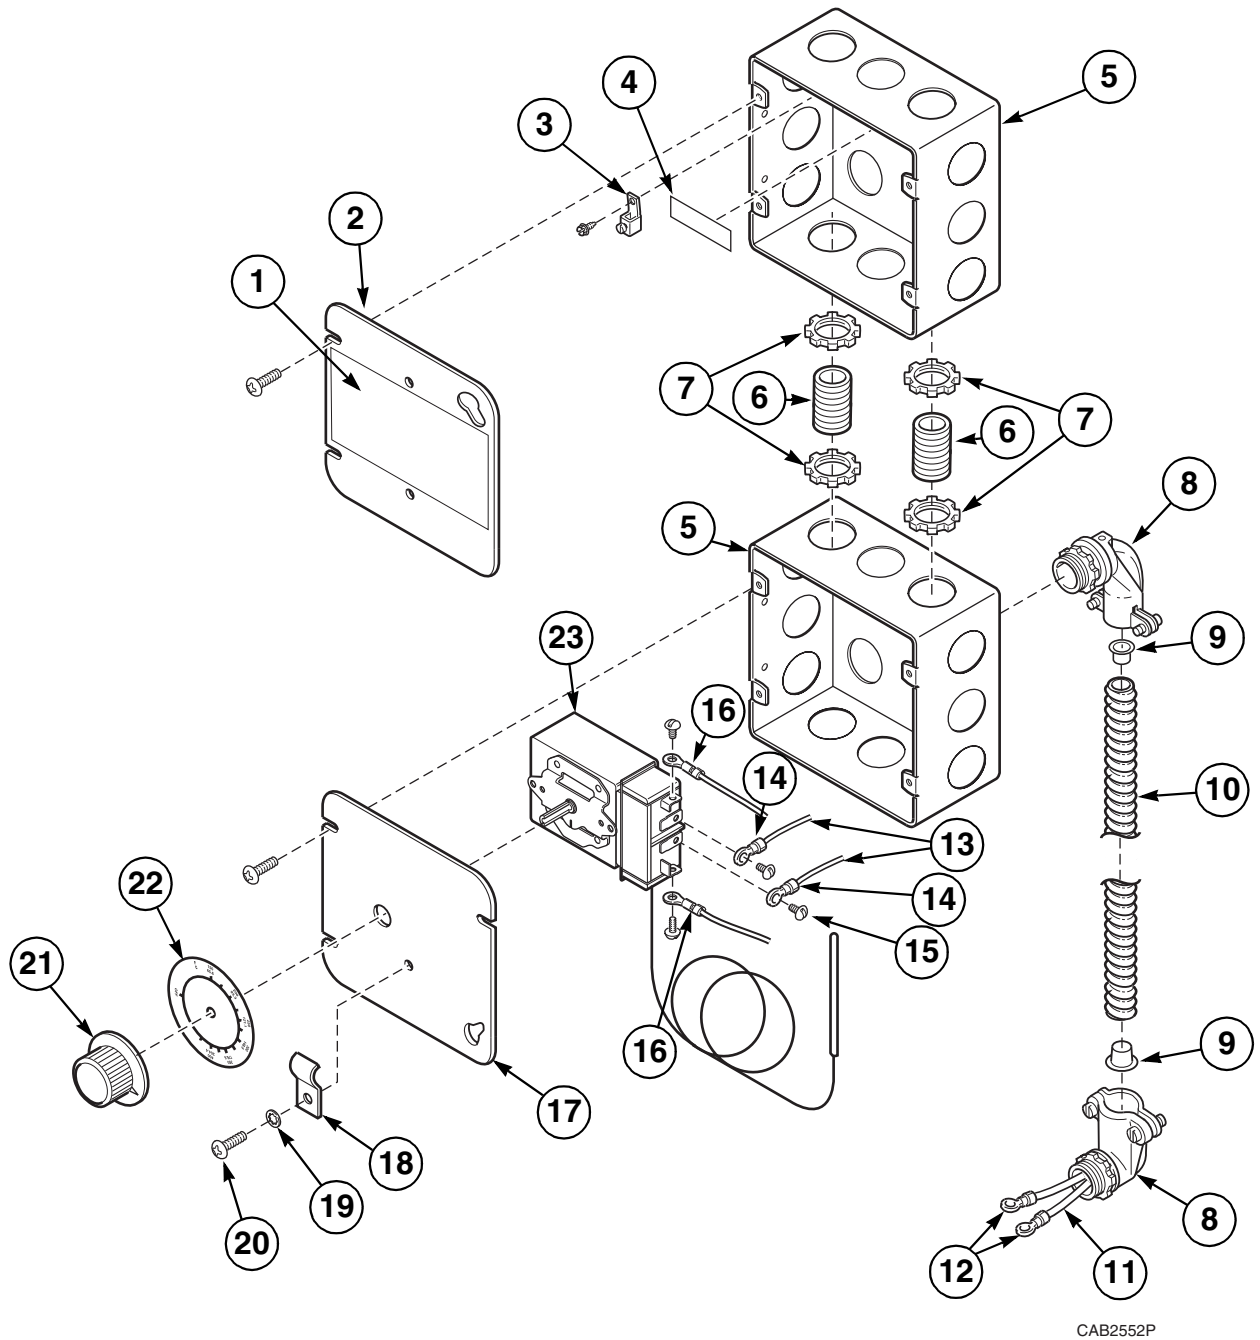

Thermostat Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1531094	Thermostat Assembly	Includes items 1-23, JM-99961 Sleeving and J1066919 Snap-In Bushing
	JM-99961	Sleeving	Fiberglass; 3 feet required; Used with item 11
	J1066919	Snap-In Bushing	
1	J200139600	Lockout/Tagout Warning Decal	
2	J1439223	Altered Electric Box Cover	
3	J1189125	Terminal Lug	
4	J10-607	Ground Wire Label	
5	JC-18268	Electrical Outlet Box	2 required
6	JC-46347	Nipple	2 required
7	J1210988	Nut	8 required
8	J1086115	Connector	2 required
9	J1232990	Bushing	2 required
10	F140302	Flexible Conduit	
11	JR-90132	Wire	12 gauge; 3 feet required
12	J1285147	Terminal Ring	2 required
13	JM-99150	Wire	14 gauge; 2 feet required
14	J1190370	Terminal Ring	2 required
15	J1233659	Screw	2 required
16	JT-168-4	Wire Terminal	2 required
17	JA-24123	Thermostat Mounting Plate	
18	J1244623	Tubing Clamp	
19	J1085984	Washer	
20	J1199389	Screw	
21	JA-56916	Knob	
22	JA-86858	Decal and Plate Assembly	
23	JA-54183	Thermostat	150 - 400° F

Control Enclosure

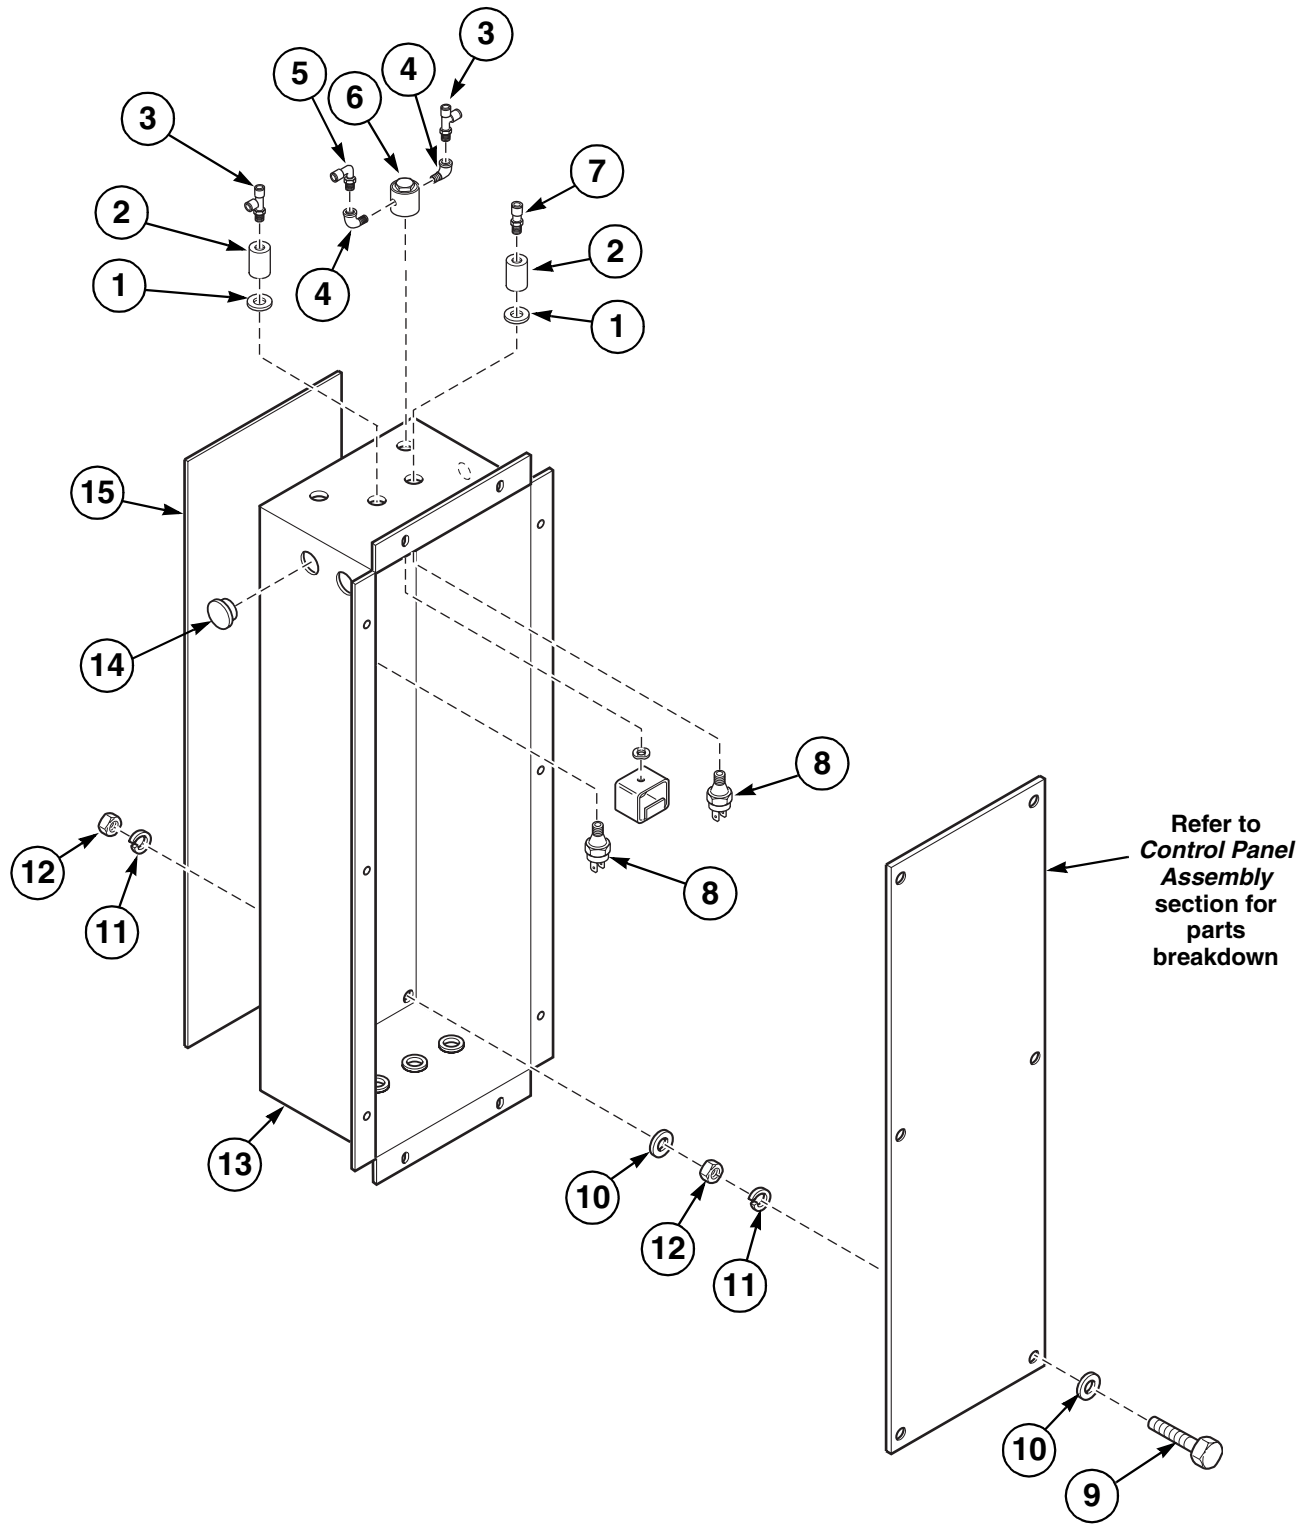


CAB2546P

Control Enclosure

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1001304	Washer	2 required
2	J1018571	Pipe Coupling	2 required
3	J1438357	Quick Tubing Tee	3 required
4	JC-28235	Street Pipe Elbow	4 required
5	J1407741	Swivel Tubing Elbow	2 required
6	J1362854	3-Way Solenoid Valve	
7	J1408004	Connector	
8	J1364181	Pressure Switch	2 required
9	JA-52426	Screw	4 required
10	JC-80513	Washer	8 required
11	J1185073	Washer	8 required
12	20275	Nut	8 required
13	J1593268	Enclosure Weldment	
14	J1427103	Vent Plug	8 required
15	J1606722	Control Box Insulation	

Control Panel Assembly

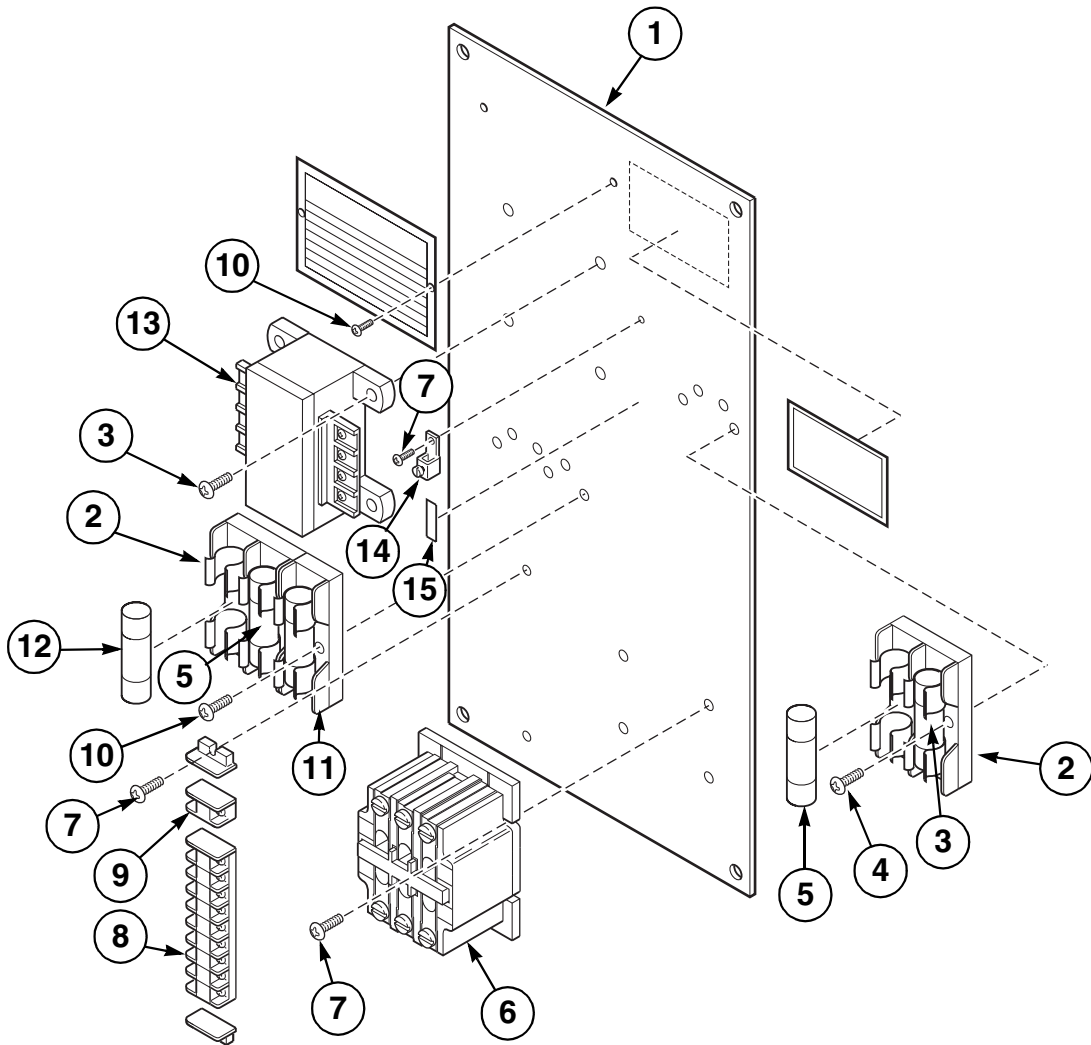


CAB2124P

Control Panel Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JC-57855	Contactactor	
	J1081710	Fuse Block	
1	J1596337	UL Control Panel	
2	J1401884	Fuse Holder	2 required
3	J1235142	Fuse Block	30 Amp; 2 required
4	J1323153	Screw	11 required
5	JC-31691	Fuse	250 Volt; 2 Amp; 2 required
	J1234665	Fuse	250 Volt; 10 Amp; 2 required
6	J1606813	Auxiliary Contact Block	
7	JC-64014	Screw	4 required
8	J1081793	Terminal Block	9 required
9	J1085943	End Terminal Block	
10	J1378603	Screw	6 required
11	J1625045	Transformer Mount	
12	J1545417	Fuse	575 Volt; .8 Amp; 2 required
	J1477496	Fuse	600 Volt; 1 Amp; 2 required
	J1408780	Fuse	460/575 Volt; 5 Amp; 2 required
	J1422930	Fuse	380/415 Volt; 6 Amp; 2 required
	J1235944	Fuse	250 Volt; 1 Amp
13	J1475953	Transformer	380/415 Volt; 100va
	J1475946	Transformer	575 Volt; 100va
	J1475938	Transformer	208-230/460 Volt; 100va
	JC-72982	Transformer	460 Volt
14	J1189125	Terminal Lug	
15	J10-607	Ground Wire Label	

Control Box Cover Assembly

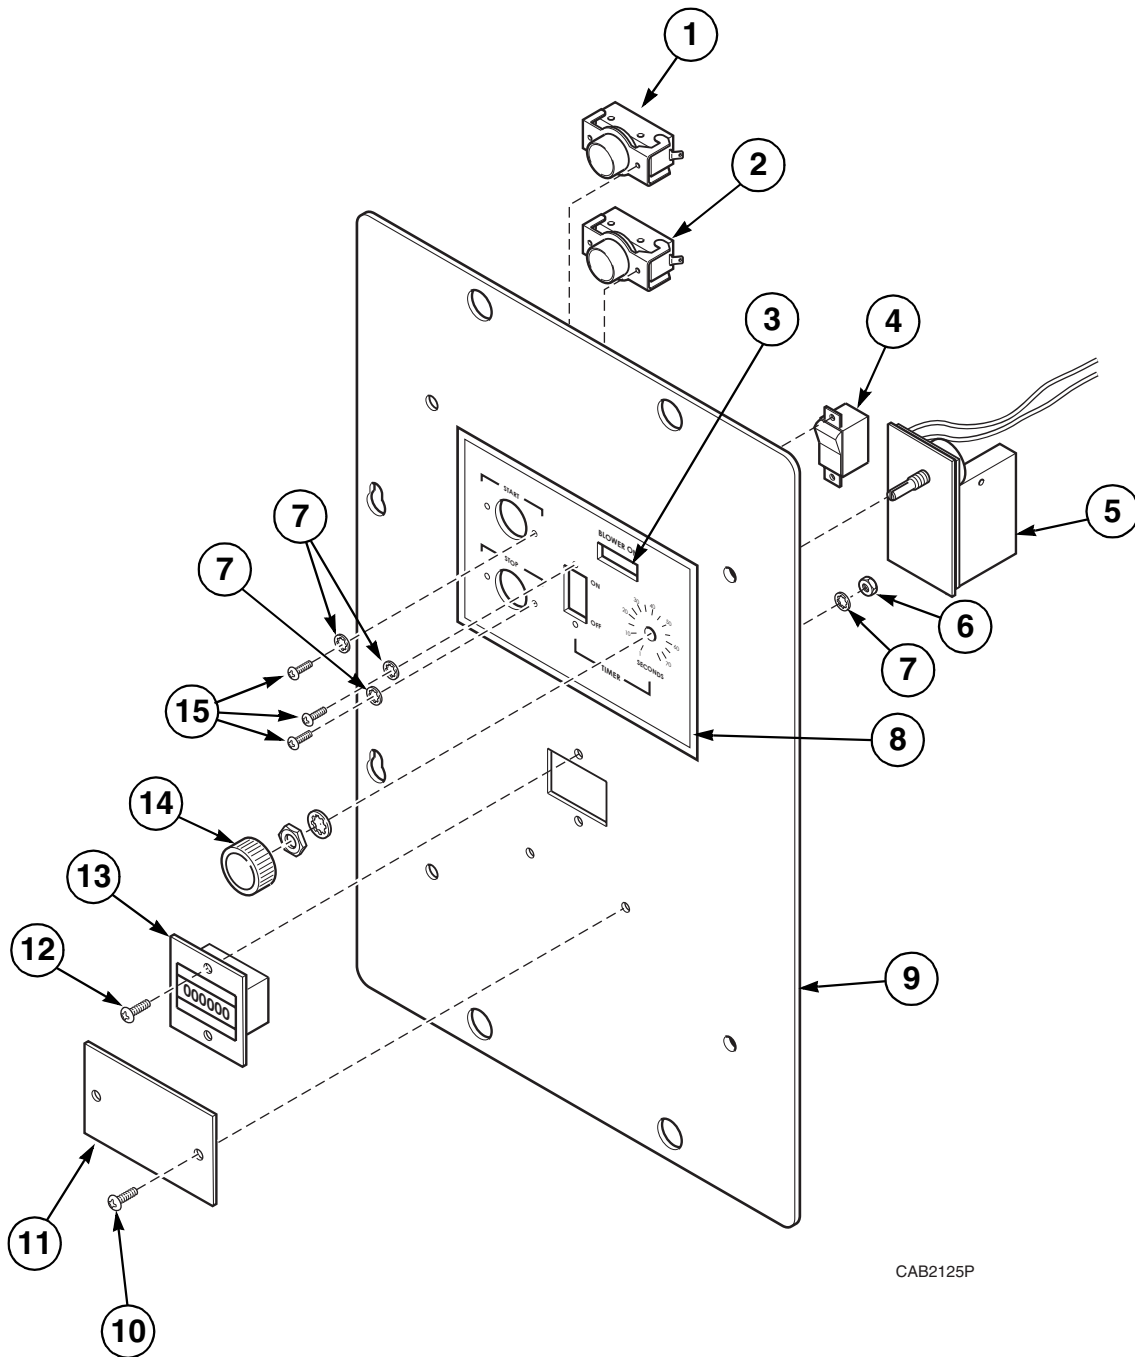


CAB2125P

Control Box Cover Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200057500	Control Box Cover Assembly	Includes items 1-15
1	M400954P	Push-to-Start Switch Kit	Black
2	J200204600P	Pushbutton Switch	Red
3	JST-163-2	Pilot Light	
4	J1236306	Rocker Switch	
5	J200043100	Common Timer PCB	
6	02788	Nut	2 required
7	J1216357	Washer	8 required
8	J1516921	Operating Control Nameplate	
9	J1596386	Control Box Cover	
10	JA-55715	Blind Rivet	2 required
11	J200156400	Lockout/Tagout Warning Decal	
12	J1112887	Screw	2 required
13	J1530765	Counter	
14	JE-66023	Knob	
15	J1233162	Screw	6 required

Operator Control Panel Assembly

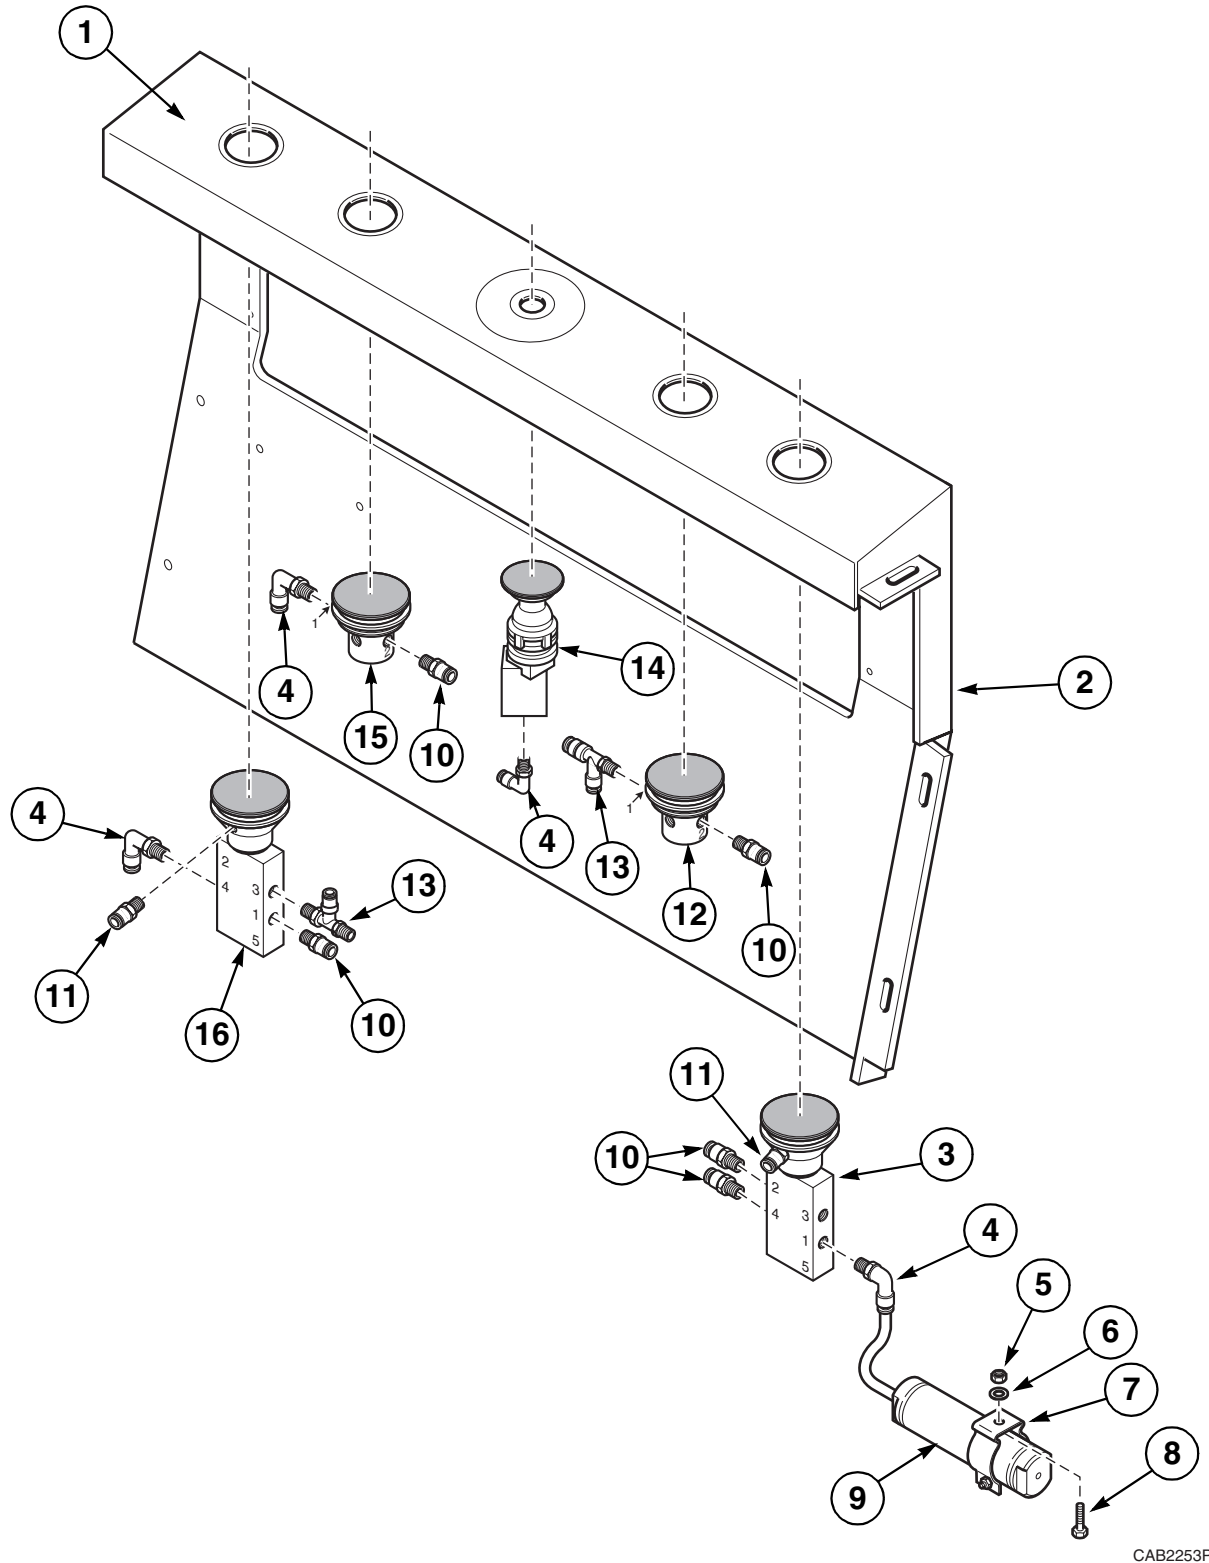


CAB2253P

Operator Control Panel Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J200096400	Operator Control Panel Assembly	Includes items 1-4 and 10-16
	J200098400	Reservoir Kit	Includes items 5-9
1	J0231633-00	Panel Overlay	
2	J200059800	Control Panel Cover Weldment	
3	J200217100	Pushbutton	Gray; 4-way valve
4	J1407741	Swivel Tubing Elbow	3 required
5	20275	Nut	
6	J1185073	Washer	
7	JC-35100	Conduit Hanger	
8	F430935	Screw	
9	J200041400	Pneumatic Reservoir	
10	J1408004	Connector	5 required
11	J0140961-00	Connector	2 required
12	J200012400	Pushbutton	Black; 3-way valve
13	J1438357	Quick Tubing Tee	2 required
14	J1635069	Emergency Stop Button Assembly	Refer to <i>Emergency Stop Button Assembly</i> section for parts breakdown
15	J200012300	Pushbutton	Red; 3-way valve
16	J200217200	Pushbutton	Gray; 4-way valve

Shipped Box Items

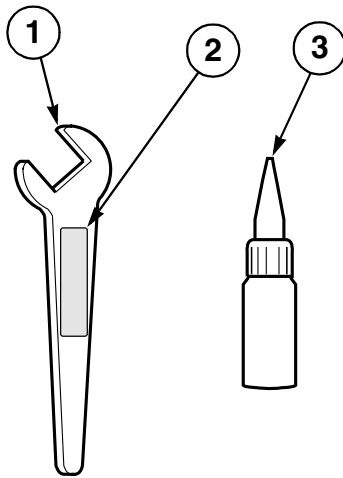


CAB2366P

Shipped Box Items

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1484732	Wrench	Eccentric
2	J1500297	Caution ECC Wrench Nameplate	
3	J1490598	High Temperature Lubricant	

Panels Assembly (Front View)

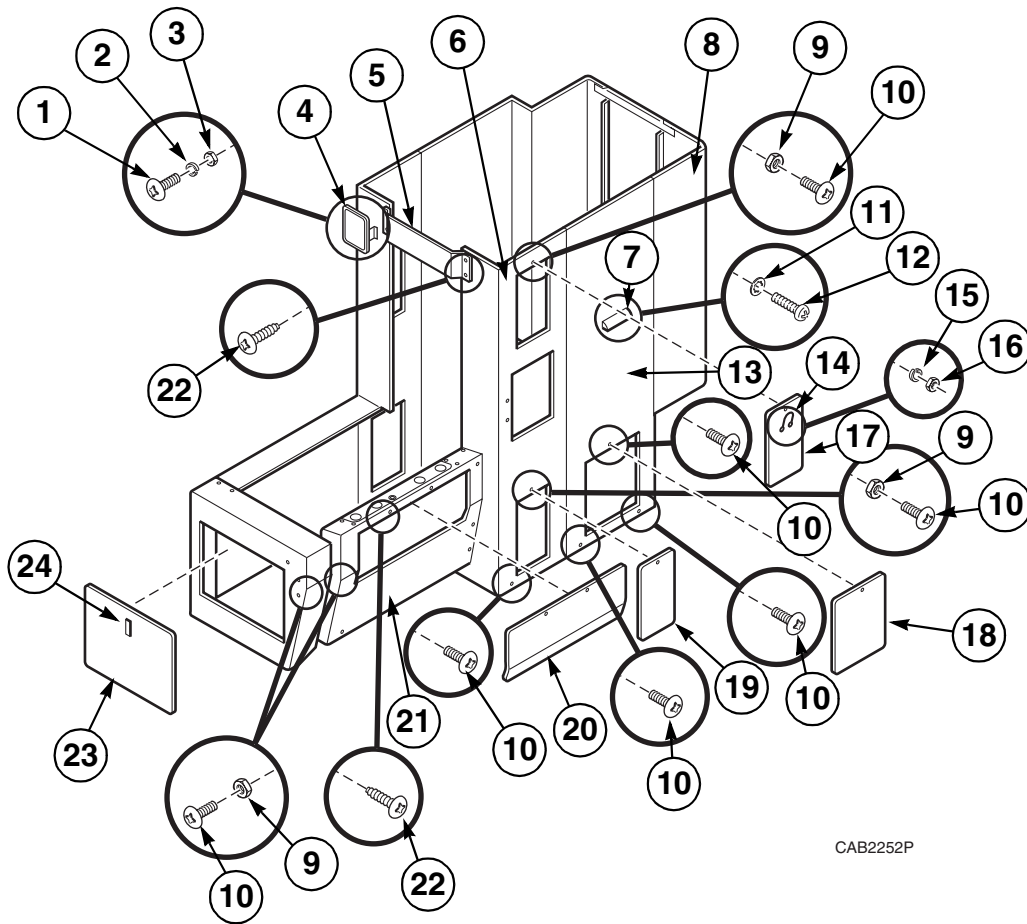


CAB2252P

Panels Assembly (Front View)

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-50394	Screw	2 required
2	J1185073	Washer	2 required
3	20275	Nut	2 required
4	J1528579	Mirror Mounting Bracket	
5	J1542091	Left Top Cover	
6	J200059300	Front Left Cover	
7	J1240985	Handle	3 required
8	J200169900	Front Right Cover	
9	J1348192	Nut	27 required
10	J1111095	Screw	45 required
11	J1085984	Washer	6 required
12	J1187228	Screw	6 required
13	J200169800	Front Middle Cover	
14	J200008300	Garment Hook	
15	M400013	Washer	7 required
16	70142	Nut	7 required
17	J1562800	Access Panel Cover Weldment	
18	J200046700	Access Panel Cover Weldment	
19	J1550813	Access Panel Cover Weldment	3 required
20	J200060300	Door Panel Weldment	
21	J200096400	Operator Control Panel Assembly	Refer to <i>Operator Control Panel Assembly</i> section for parts breakdown
22	J1063619	Screw	8 required
23	J200173100	Left Cover Weldment	
24	J1614809	Lift and Turn Latch	

Panels Assembly (Rear View)

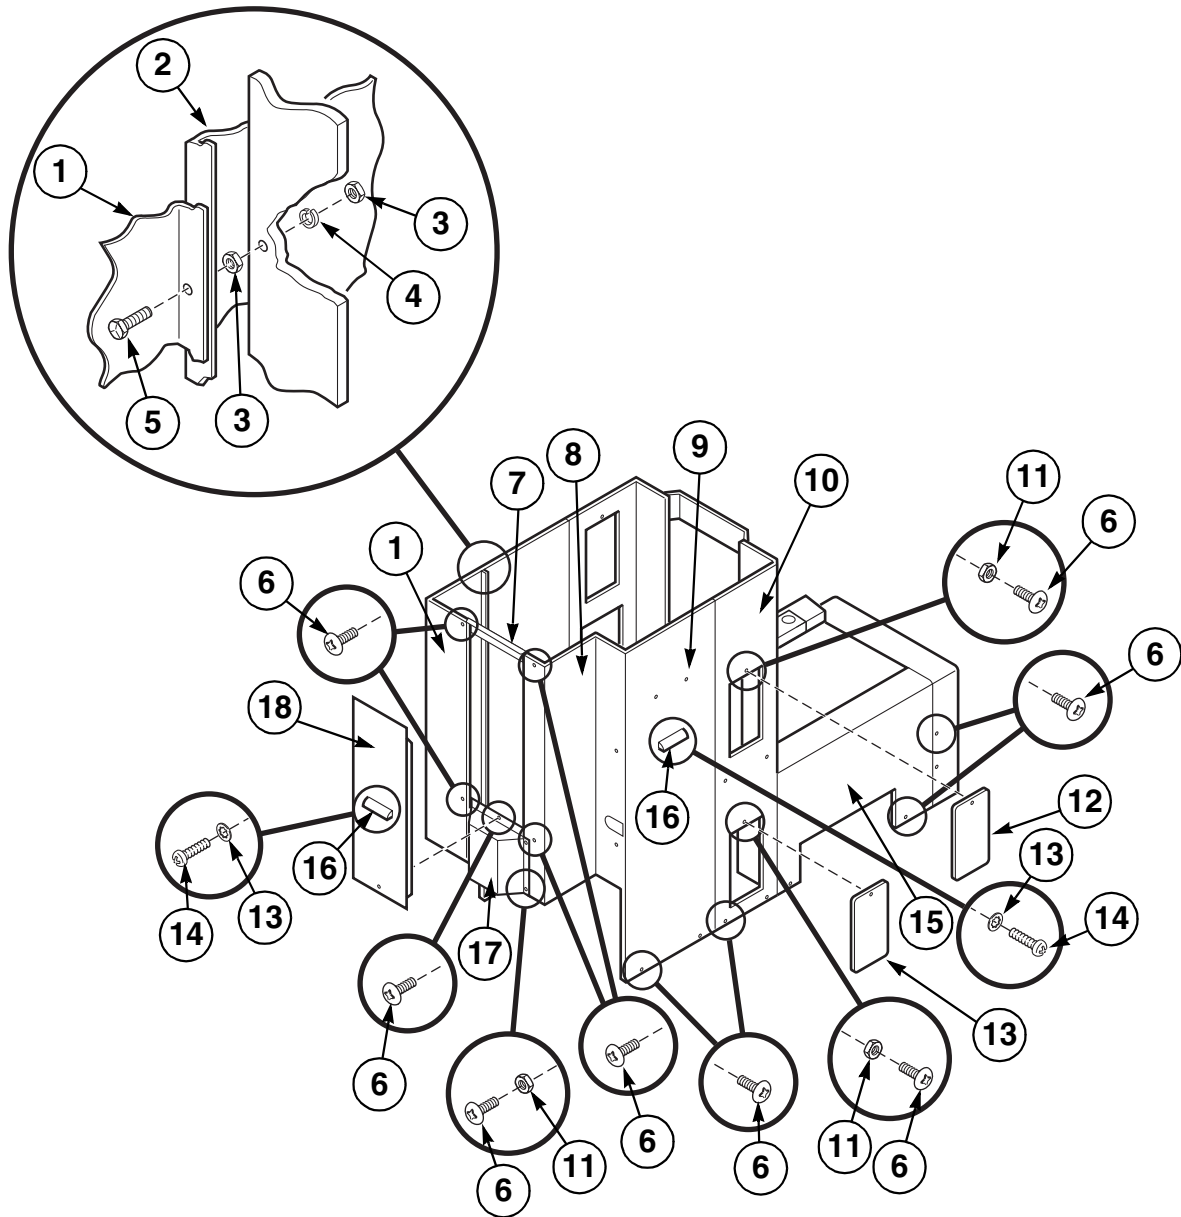


CAB2127P

Panels Assembly (Rear View)

REF	PART NO.	DESCRIPTION	COMMENTS
1	J200169900	Front Right Cover	
2	J200169800	Front Middle Cover	
3	70142	Nut	10 required
4	M400013	Washer	7 required
5	J1531789	Screw	3 required
6	J1111095	Screw	45 required
7	J1520311	Rear Cover Support	2 required
8	J200054800	Right Rear Cover	
9	J200170100	Rear Middle Cover	
10	J200170200	Rear Left Cover	
11	J1348192	Nut	27 required
12	J1550813	Access Panel Cover Weldment	3 required
13	J1085984	Washer	6 required
14	J1187228	Screw	6 required
15	J200170300	Rear Rail Cover	
16	J1240985	Handle	3 required
17	JA-22938	Drive Cylinder Cover	
18	J200170000	Right Middle Cover	

Label Application (Front View)

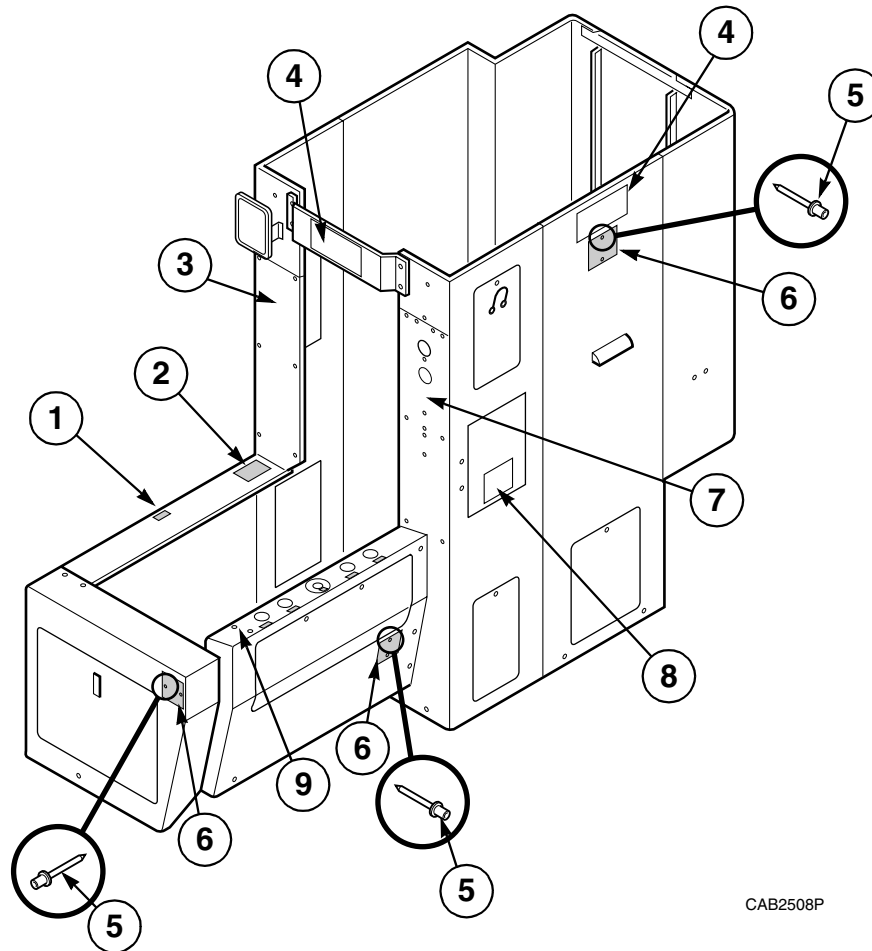


CAB2508P

Label Application (Front View)

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-24370	Scotchcal Decal	Clean filter weekly
2	J1556471	Warning Nameplate	
3	J200030201	Graphic Panel	
4	70240801	Nameplate Overlay	4 required for whole assembly
5	J1323724	Blind Rivet	20 required for whole assembly
6	J200156500	Shut-Off Warning Decal	6 required for whole assembly
7	J200030200	Graphic Panel	
8	J200156400	Lockout/Tagout Warning Decal	
9	J0231633-00	Panel Overlay	

Label Application (Rear View)

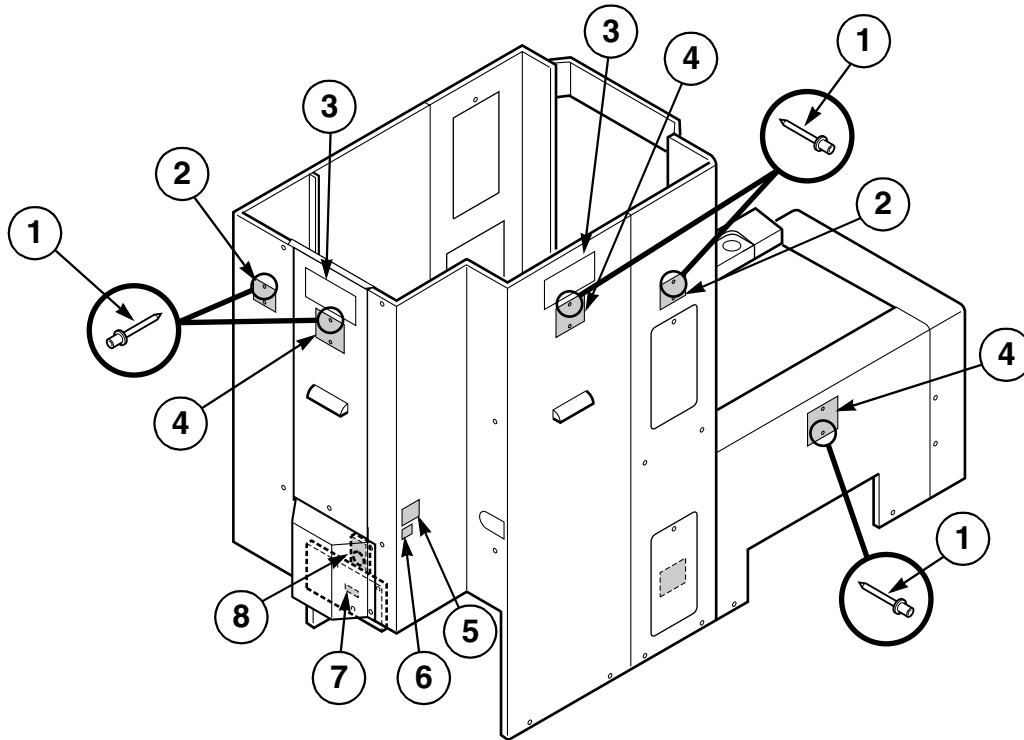


CAB2255P

Label Application (Rear View)

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1323724	Blind Rivet	20 required in whole assembly
2	J200171800	Guards Warning Decal	2 required in whole assembly
3	70240801	Nameplate Overlay	4 required in whole assembly
4	J200156500	Shut-Off Warning Decal	6 required in whole assembly
5	JA-17842	Air Inlet Label	
6	J1326156	Air Pressure Label	
7	JA-17840	Steam Return Label	
8	JA-17841	Steam Inlet Label	

Completing Parts

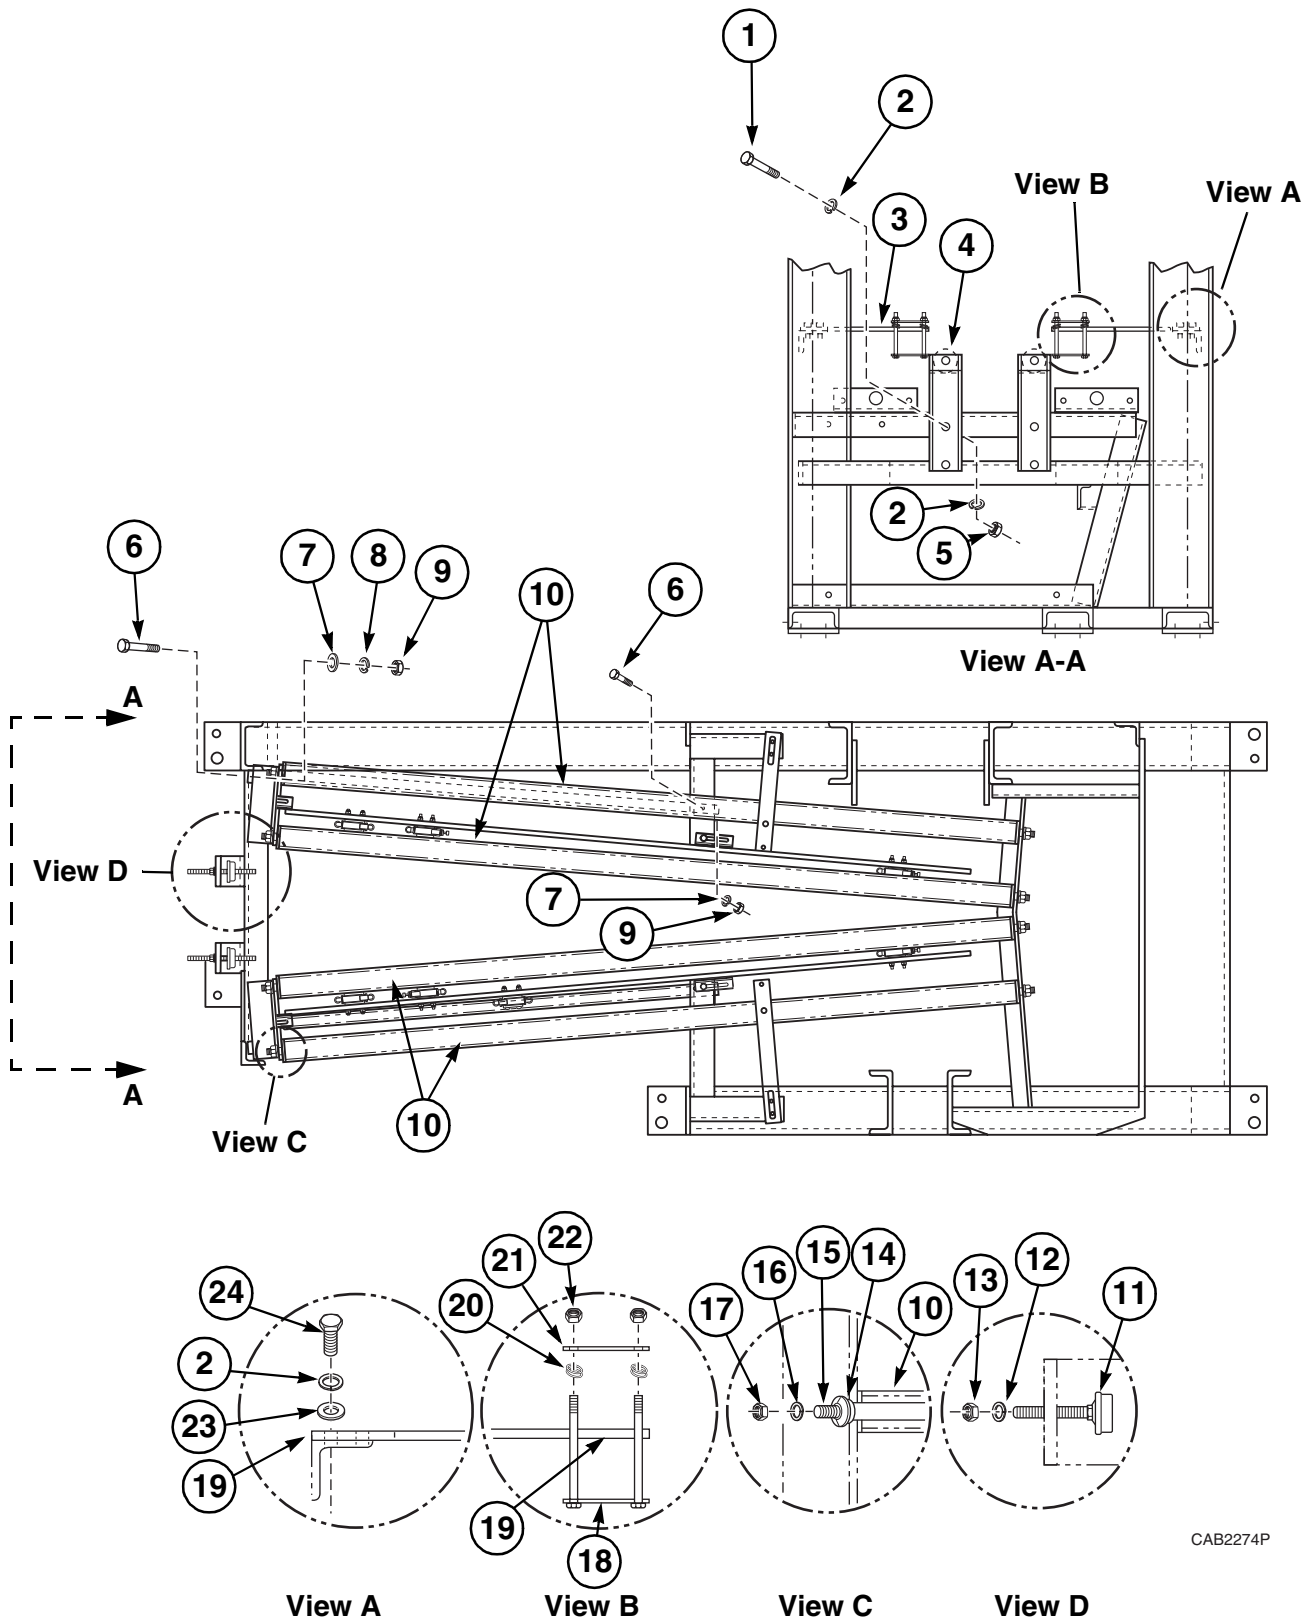

CAB2274P

Completing Parts

REF	PART NO.	DESCRIPTION	COMMENTS
1	91202	Screw	4 required
2	M400013	Washer	8 required
3	J1615178	Rear Indexing Plate	
4	JA-23959	Buck Stop Bumper	2 required
5	70142	Nut	4 required
6	JA-53020	Screw	4 required
7	J1393354	Washer	4 required
8	J1185073	Washer	4 required
9	20275	Nut	4 required
10	J200041100	Tube	4 required
11	JA-56790	Bumper Assembly	2 required
12	M400014	Washer	2 required
13	20274	Nut	2 required
14	J200133500	Rail Slug Insert	8 required
15	JA-23189	Rod Rail	4 required
16	J1001106	Washer	8 required
17	J1000850	Nut	8 required
18	J1615020	Indexing Cylinder Weldment	2 required
19	J1615186	Indexing Plate	
20	J1039676	Tapered Compression Spring	4 required
21	J1615012	Indexing Plate	2 required
22	JC-43023	Nut	4 required
23	M400080	Washer	4 required
24	M400056	Screw	4 required

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Parts Index

A

Access Panel Cover Weldment	
J1550813	161, 163
J1562800	161
J200046700	161
Actuating Arm and Shaft Assembly	
JA-08867	131
Actuating Pad	
JA-26238	85
Air Bag	
J1473404	27
Air Bag Actuator	
J1562867	17
Air Bag Heat Protection Plate	
J1555127	17
Air Bag Mounting Plate	
J1601939	17
Air Cylinder	
J1390806	119, 129
J1437060	127
J1562966	15
Air Inlet Assembly	
J200055500	63, 67, 71, 79, 81
Air Inlet Label	
JA-17842	167
Air Manifold Assembly	
J1473156	43, 45, 53
Air Muffler	
J1352327	15
Air Pressure Label	
J1326156	167
Air Valve	
J0381776-00	19, 21
J200053200	119
Altered Electric Box Cover	
J1439223	149
Auxiliary Contact Block	
J1606813	153

B

Bag Cover Assembly	
J200151000	27
Beam Clamp	
JC-69884	145
Binary Redirect Assembly	
J1633122-00	101
Bleeder Valve	
JA-53893	95, 97
Blind Rivet	
J1323724	165, 167
JA-55715	155
Block Plate Assembly	
J200010200	121
Blower	
J0220243-00	145, 147
Bolt	
J1442730	11

J1447846	11
JC-18058	13
Buck and Cover Assembly	
J1591197	27
J1610377	27
Buck Index Cylinder Assembly	
J0637994-00	55, 61, 65, 69
Buck Plate Weldment	
J1578202-00	27
Buck Stop Bumper	
JA-23959	169
Bulkhead Fitting	
J1540731	125
Bumper	
J1438472	23
Bumper Assembly	
JA-56790	13, 169
Bushing	
J0380821-00	99
J1232990	149
JA-15762	55
Butterfly	
JA-21889	131
Butterfly Assembly	
JA-04746	43, 45
Butterfly Housing	
JA-08327	131
Butterfly Valve Assembly	
J200044100	63, 67, 71, 131

C

Cable Tie	
F140606	117
Carriage Bracket Weldment	
J0637984-00	47
J0637985-00	49
Carstick Cartridge	
J0440180-00	99
Caution ECC Wrench Nameplate	
J1500297	159
Check Valve	
JA-54042	83, 89
Clear Sealant	
F410102	123
Clevis	
J1562974	15
Closing Orifice	
JA-25828	131
Closing Speed Orifice	
JA-19559	119, 127, 131
Collar Block	
JA-24340	29, 31
Collar Block Arm Assembly	
J1624774	29, 31
Collar Block Assembly	
J200104200	31
Collar Block Axle	
J1484401	29, 31

N/A items do not appear in index.

Collar Block Clevis J1484419	33
Collar Block Cylinder J1484260	33
Collar Block Cylinder Assembly J1504018	29, 31, 33
Collar Block Cylinder Assembly Repair Kit J1537398	33
Collar Block Spacer J1488873	29
J1648831	29, 31
J200108900	31
Collar Housing Weldment J200109000	31
Collar Tube Assembly JA-09174	29, 31
Common Timer PCB J200043100	155
Compression Connector J1075175	95, 97
J1151661	35, 143
Compression Elbow JA-54351	137
Compression Spring JA-51336	91
Condenser Coil J1471234	133
Condenser Flow Control JA-09231	133
Conduit Assembly J1531680	145
J1618297	145
Conduit Hanger JC-35100	157
Connector J0140961-00	99, 157
J1086115	149
J1408004	19, 21, 83, 87, 99, 101, 119, 151, 157
Connector Assembly J200179300	75, 77
Contacto JC-57855	153
Control Box Assembly J1606748	145
Control Box Cover J1596386	155
Control Box Cover Assembly J200057500	145, 155
Control Box Insulation J1606722	151
Control Panel Cover Weldment J200059800	157
Counter J1530765	155
Cover JA-50577	119
Cover and Bag Assembly J1494251	27
Cross Spacer J0432327-00	73
J200179400	75
Cross Union J200054900	61, 65, 69

Cylinder Coupling J200101500	127, 129
Cylinder Mounting JA-09212	123
Cylinder Mounting Carriage Weldment J1615038	45
Cylinder Mounting Pin J200051800	123
J200051900	123
Cylinder Mounting Weldment J1613124	43
Cylinder Pivot Pin J1451145	15
Cylinder Seal Kit J0250811-00	55
J0250811-01	131

D

Damper Assembly J147924501	63, 67, 71, 127
Damper Box Control Cylinder J0250115-00	131
Damper Box Cover J200101600	127
Damper Box Cracking Cylinder J0250114-00	131
Damper Box Gasket J1437078	127
Decal and Plate Assembly JA-86858	149
Diaphragm Gauge JA-51283	123
Discharge Flange Gasket J1471531	123
Discharge Tube JA-23305	123
Discharge Tube Assembly J200001300	63, 67, 71, 123
Door Panel Weldment J200060300	161
Dowel Pin JA-51970	123
Drive Cylinder Cover JA-22938	163
Dual Shuttle Valve J0380814-00	99, 101
J0380817-00	99, 101
Duct Tape J0440160-00	125
Dump Valve, 3-Way JA-53550	79, 81

E

Elbow F420501	17
Electrical Outlet Box JC-18268	149
Electrical Strap J1162478	145

N/A items do not appear in index.

Element Replacement Kit J200200100	77
Emergency Stop Button J1639798	93
Emergency Stop Button Assembly J1635069	93, 157
Emergency Stop Head Button J1635044	93
Enclosure Weldment J1593268	151
End Terminal Block J1085943	153
End Toggle Pin J1594662	11
Extension Spring J1055029	13
J1474774	11
J1555697	121
JA-51399	51
JA-54004	131
External Air Inlet Assembly J200273800	63, 67, 71, 73

F

Female Toggle Arm Weldment J200130400	39
Filter Box Damper Assembly J1479484	63, 67, 71, 129
Filter Box Damper Weldment J1479492	129
Filter Element Kit J200203300	77
Filter Kit J200032100	73, 75
Filter/Regulator J0270327-00	73
Filter/Regulator Assembly J200201000	75, 77
Filter/Regulator Auto Drain Kit J1637644	73, 75
Filter/Regulator/Lubricator Assembly J0270328-00P	73
J200180000	75
Filter/Regulator/Mist Separator Assembly J200200300	77
Fitting JA-24122	125
Fitting to Manifold Assembly J200115600	101, 105
Flannel Pad J1473412	27
J1494244	27
Flare Connector J1319276	137, 139, 141
Flat Roller JA-09186	47, 49
Flexible Conduit F140302	149
Flow Control J0380121-00	129
Front Buck Kit, 16 Inch J200180300	27

Front Bushing J1473792	35
Front Carriage Assembly J0637986-00	43, 47
Front Head Assembly J200004300	7, 11, 133, 135
Front Head Close Toggle Assembly J159468800	11, 39
Front Head Closing Cylinder Assembly J200055700	15, 61, 65, 69
Front Head Frame Weldment J200004200	7
Front Head Weldment J200050100	7
Front Left Cover J200059300	161
Front Left Safety Bar Bracket J200139100	97
Front Left Safety Bar Bracket Assembly J1571041	61, 65, 69
Front Left Safety Bar Valve Assembly J1571041	97
Front Middle Cover J200169800	161, 163
Front Receiving Tube and Carriage Assembly J200000600	43, 51
Front Right Cover J200169900	161, 163
Front Vacuum Buck Plate Weldment J1613637	27
Front Vacuum Buck Weldment J1586015	27
Fuse J1234665	153
J1235944	153
J1408780	153
J1422930	153
J1477496	153
J1545417	153
JC-31691	153
Fuse Block J1081710	153
J1235142	153
Fuse Holder J1401884	153

G

Garment Hook J200008300	161
Gasket JA-50578	119
JA-51527	11
Graphic Panel J200030200	165
J200030201	165
Ground Wire Label J10-607	149, 153
Guards Warning Decal J200171800	167

N/A items do not appear in index.

H

Handle	
J1240985	161, 163
Head Air Bag Assembly	
J200012800	13, 17, 63, 67, 71
Head Bumper Assembly	
J1562842	11, 23
Head Cylinder Bracket Weldment	
J1545193	15
Head Mounting Rod	
J1550755	7, 9
Head Pivot Bracket Weldment	
J200131100	39
Head Rail Spacer Plate	
J200187100	11
Head Rail Weldment	
J1550789	11
Head Stop Hook	
J1545144	13
J1594696	13
Head Stop Rod	
J1545169	13
Heat Exchanger Assembly	
J1525237	125, 133
Heat Exchanger Cover Plate	
J1562818	125
Heat Exchanger Hose	
J200118600	117
Heat Shield	
J0637754-00	29, 31
Heat Shield and Cover Assembly	
J0637755-00	29, 31
Heat Shield Cover	
J0150523-00	29, 31
Heater Element	
JA-53883	125
Heater Plate	
JA-22982	125
High Temperature Lubricant	
J1490598	159
Hold Down Clamp	
J150285500	117
Hook	
JA-51665	117
Hose	
J1394782	117
J200180501	117
J200180602	117
J200180603	117
J200180609	117
J200187403	117
J200187406	117
Hose Assembly	
JA-51793	143
Housing Bracket Weldment	
J200043900	131
Housing Weldment	
J1538750	125

I

Index Cylinder Mounting Plate	
J1612910	123
Indexing Cylinder Weldment	
J1615020	169
Indexing Plate	
J1615012	169
J1615186	169
Insert Assembly	
JA-09244	29, 31
Insulation	
J1540749	125
Internal Plug	
J0380820-00	99

J

Jiffy Clip	
J1187889	25
Joint Sealant Gasket	
J1540814	125

K

Knob	
JA-56916	149
JE-66023	155

L

Large Spacer	
J1377654	41
Left Cover Weldment	
J200173100	161
Left Top Cover	
J1542091	161
Lift and Turn Latch	
J1614809	161
Limit Switch Valve	
J200154800	57, 59, 107, 109, 111, 115
Lock-Out Valve	
J1557503	73
J200179000	75, 77
Lockout/Tagout Warning Decal	
J200139600	149
J200156400	155, 165
Low Pressure Valve Assembly	
J200053300	63, 67, 71, 119, 147
Lubricator	
J0550000-00	73
Lubricator Kit	
J200032400	73, 75

N/A items do not appear in index.

M

Male19	
Male Adapter Bushing	
J1358357	57, 59
Male Compression Connector	
J1161272	125, 141
Male Compression Elbow	
JA-50770	29, 31, 53
JC-30211	141
JC-30719	139
Male Compression Tee	
JC-30734	53
Male Connector	
J200203600	141
Male Elbow	
J0260211-00	19, 21
Male Run Tee	
J0260207-00	81, 109
J200010800	79, 81, 107
J200055800	15
Male Tubing Elbow	
J1410323	73, 109, 111
Manifold	
J1618958	53
Manifold Base	
J0380818-00	99
Manifold Bracket Weldment	
J0637728-00	103
J200291400	103, 105
Middle Steam Inlet Assembly	
J1615814	133, 137
Mirror Mounting Bracket	
J1528579	161
Mist Separator	
J200199900	77
J200200000	75
Mounting Bracket Clamp	
J200155100	25
Mounting Bracket Plate	
J200103900	29, 31

N

Nameplate Overlay	
70240801	165, 167
Needle Bearing	
JA-55745	121
Needle Valve	
J1110998	15
J1246024	143
Nipple	
F420101	17
JC-46347	149
JC-46349	133, 139
Nut	
02788	155
20274	11, 13, 41, 47, 49, 123, 169
20275	11, 43, 45, 51, 85, 117, 123, 131, 135, 145, 151, 157, 161, 169
52566	131
70142	11, 15, 85, 161, 163, 169

F430220	57, 59, 107, 109, 111, 115
F430232	57, 59
F430246	7, 9, 13
F431004	7, 9
F431005	103, 105
F431011	131
J1000736	25, 117, 121, 145
J1000850	39, 123, 169
J1209113	31
J1210988	149
J1348192	161, 163
J1391515	119
J1435783	47, 49
JA-24245	25
JA-50434	131
JA-51474	55, 87
JC-43023	169
JC-48229	55
JC-48289	127
JC-48312	125
M400022	47, 49, 143
M400026	23, 29, 31

O

Oilless Flanged Bearing	
J1262880	39
J1415553	39
Operating Control Nameplate	
J1516921	155
Operator Control Panel Assembly	
J200096400	61, 65, 69, 157, 161
Orifice	
J1392158	99, 101
O-Ring	
J025081105	113
J025081107	19, 21
J1403310	91
JC-57441	91
Outlet Weldment	
J1479716	147

P

Padding	
J1578228-00	27
J1591114	27
J1610492	27
Padding Assembly	
J1578327-00	27
Panel Overlay	
J0231633-00	157, 165
Pedal Base	
J1387794	85
Pedal Base and Valve Assembly	
J1484682	61, 65, 69, 87
Pedal Base Assembly	
J1484930	61, 65, 69, 85, 87
Pedal Bracket	
JA-25995	85
Pedal Bracket Weldment	
J1387778	85

N/A items do not appear in index.

Pilot Light	
JST-163-2	155
Pin	
J1377696	41
Pipe Assembly Bushing	
J1370634	147
Pipe Bushing	
J1468347	137
JC-19624	19, 21
Pipe Clip	
J118788901	25
Pipe Coupling	
J100744201	73
J1018571	61, 65, 69, 83, 99, 151
JC-23002	75, 133, 137, 139
Pipe Elbow	
J1084011	141
J1188192	95, 97
J1231422	133
JA-51007	141
Pipe Nipple	
431206	137
J1026335-01	19, 21, 79, 81, 113
J1026665	141
J115175201	73, 75, 79, 81
J1232313	119, 129
J1239334	141
J1398544	147
J200056100	15
JA-52273	133
JA-5706401	73
JC-4606101	75, 137
JC-46159	137
JC-46219	19, 21
Pipe Plug	
J1161421	139
JA-53076	73
JA-54394	75
Pipe Tee	
J1188242	79, 81, 95, 97
JC-70613	89
JC-70620	137
JC-70628	19, 141
JC-70628-01	21
Pipe Union	
JC-7601201	73, 75
Piston Seal	
J1473800	35
Pivot Tab	
J154491501	39
Pivot Toggle Pin	
J1544907	39
Plate Cover	
J1550961	7
Plate Mounting and Bearing Shim	
J1437821	11
Plug-In Reducer	
J0260213-00	71, 81
Pneumatic Manifold	
J0320375-00	99
J200094800	101
Pneumatic Reservoir	
J200041400	157
Pressure Gauge	
J200128200	61, 65, 69

Pressure Switch	
J1364181	151
Pulse Valve	
J200053400	99
J200115301	101
Pushbutton	
J200012300	157
J200012400	157
J200217100	157
J200217200	157
Pushbutton Assembly	
JA-00397	89
Pushbutton Switch	
J200204600P	155
Push-to-Start Switch Kit	
M400954P	155

Q

Quick Exhaust Air Valve	
JA-56925	15
Quick Exhaust Assembly	
J0180100-00	19, 21
Quick Exhaust Valve	
J025081106	19, 21, 113
J025081108	19, 21
J200102400	65, 69, 99, 113
Quick Tubing Connector	
J1463835-00	79, 81, 95, 97, 107, 113
Quick Tubing Tee	
J1437029	89, 131
J1438357	87, 127, 131, 151, 157
J1460484	115

R

Rail Slug Insert	
J200133500	169
Rear Buck Kit, 16 Inch	
J200180400	27
Rear Bushing	
J1473776	35
Rear Carriage Assembly	
J0637987-00	45, 49
Rear Cover Support	
J1520311	163
Rear Head Assembly	
J200005000	9, 13, 133, 135
Rear Head Closing Cylinder Assembly	
J200012900	19, 21, 63, 67, 71
Rear Head Frame Weldment	
J200004700	9
Rear Head Spacer	
J1507342	35
Rear Head Weldment	
J200050200	9
Rear Indexing Plate	
J1615178	169
Rear Left Cover	
J200170200	163
Rear Left Safety Bar Bracket	
J200139000	95

N/A items do not appear in index.

Rear Left Safety Bar Bracket Assembly J1571058	61, 65, 69, 95
Rear Limit Bracket J0637938-00	115
Rear Limit Switch Assembly J063793900	115, 123
Rear Middle Cover J200170100	163
Rear Rail Cover J200170300	163
Rear Receiving Tube and Carriage Assembly J200000700	45, 51
Rear Vacuum Buck Plate J1590561	27
J1610369	27
Receiving Tube Weldment J1546084	43
J1546092	45
Reducer Elbow J200011100	109
Reducing Bushing J1161140	17
J1184506	15
JC-19662	137
JC-19682	19, 21, 139
Regulator Kit J200032200	73, 75
Repair Kit J1634906	15
Reservoir Kit J200098400	157
Reset Valve Assembly J200054300	61, 65, 69, 89
Retainer Clip J1438209	11
Retaining Ring J1528595	25
JA-53987	47, 49
Right Middle Cover J200170000	163
Right Rear Cover J200054800	163
Rocker Switch J1236306	155
Rod J1562834	23
Rod End Clevis J200052600	131
Rod Rail JA-23189	169
Roll Pin J1407725	29, 31
JA-51144	121
Roller Adjusting Shaft J1435809	47, 49
Roller Assembly JA-06318	41, 47, 49
Roller Bracket Assembly J1405786	11, 41
Roller Bracket Weldment J0637851-00	41
Roller Locking Shaft J1435791	47, 49

Roller Mounting Weldment J200021300	57
J200021400	59
Roller Support Assembly J200020200	57
J200020300	59
Roller Valve Assembly J200012100	57, 59, 61, 65, 69
J200020000	57, 59, 61, 65, 69
Roller Valve Bracket J200093800	109, 111

S

Safety Collar JA-50994	131
Safety Pin JA-51758	25
Scotchcal Decal JA-24370	165
Screw 02422	145
430648	123
91202	15, 169
F430107	123
F430109	117
F430907	43, 45
F430908	117
F430909	29, 31
F430935	157
F430942	131
F430946	7, 9
F432252	57, 59, 107, 109, 111, 115
J0430281-00	31
J1001726	39, 43, 45, 85
J1007434	145
J1019561	121
J1063619	161
J1111095	161, 163
J1112887	155
J1122118	13
J1142447	25
J1179308	121
J1185107	29, 31, 127
J1187228	161, 163
J1199389	149
J1233162	155
J1233659	149
J1238518	11, 131
J1323153	153
J1333285	25
J1346105	57, 59
J1378603	153
J1414788	117, 125
J1417310	121
J1489053	29, 31
J1531789	163
J1571371	125
J200055600	57, 59
J200144100	29, 31
JA-10158	11
JA-50055	119
JA-50128	103, 105
JA-50148	47, 49
JA-50190	43, 45
JA-50197	39
JA-50358	33

N/A items do not appear in index.

JA-50394	135, 161
JA-50454	29, 31
JA-51557	51
JA-51951	123
JA-52426	85, 135, 139, 151
JA-53020	7, 11, 51, 131, 145, 169
JA-54156	123
JA-55433	47, 49
JC-61273	43, 45, 145
JC-61854	41
JC-62286	17
JC-62303	31
JC-62516	131
JC-62832	85
JC-62851	127, 129
JC-62959	13
JC-63204	11
JC-63342	39
JC-64014	153
M400043	87, 123
M400044	131, 145
M400056	169
M400057	11
Seal	
J1359884	119
J1401389	29
Set Collar	
J1544790	121
Shaft and Piston Assembly	
J1616408	35
Shim Sheet	
J200095300	51
Shut-Off Warning Decal	
J200156500	165, 167
Shuttle Valve	
JA-53602	129
Silencer	
J0140353-00	19, 21
Sleeve	
JM-93516	61, 65, 69
Sleeve Expander	
J1473107	35
J1492867	35
J200055100	25, 37
J200055200	25, 37
Sleeve Expander Knob	
J1467968	35
Sleeve Expander Tube	
J1473784	35
Sleeving	
JM-99961	149
Small Spacer	
J200157100	41
Snap-In Bushing	
J1066919	149
Snorkel Air Tube Weldment	
J200011000	121
Snorkel Tube Assembly	
J200010900	11, 121
Snorkel Tube Ring	
J1544808	121
Solenoid Valve	
J1633114	99
J1633114-00	101
J1633122-00	99

Solenoid Valve, 3-Way	
J1362854	151
Spacer	
J1518315	47, 49
J1571413	73
JA-16120	35
JA-19785	35
JA-23390	43, 45
JA-24365	139
Special Extension Spring	
JA-52160	135, 143
Speed Change Valve	
J200126800	57, 59
Spherical Bearing	
JA-55082	39
Spiral Hose Clamp	
J200270800	117
J200270900	117
Spray Gun Assembly	
JA-04809	135, 143
Spray Gun Bracket	
JA-23002	135, 143
Spray Gun Coupling	
JA-12007	143
Spring	
JA-50932	35
JA-50949	117
JA-51318	47, 49
JA-51376	85
JA-52466	85
JA-52758	25
JA-53077	35
Spring Assembly	
JA-08705	11
Spring Padding Assembly	
J1578301-00	27
J1618859	27
J1618875	27
Spring Separator	
JA-12217	35
Steam Coil Weldment	
J1536382	125
Steam Hose	
J1319268	133
Steam Inlet Label	
JA-17841	167
Steam Return Assembly	
J1521715	133
J1591189	135, 139
J200055900	141
Steam Return Label	
JA-17840	167
Steam Return Weldment	
J200017300	141
Straight Grease Fitting	
JC-30809	39
Street Elbow	
J1381623	83
Street Pipe Elbow	
J1231521	123
J200056000	15, 119
JA-54494	143
JC-28235	151
JC-28236	133, 135
JC-28317	89

N/A items do not appear in index.

Street Pipe Tee	
JC-30541	87, 89
Stud	
J1390673	85
Switch Actuator Cam	
JA-23921	43, 45
Swivel Clamp	
JA-22812	29, 31
Swivel Flow Control Valve	
J1455781	127
Swivel Tubing Elbow	
J1407741	53, 55, 57, 59, 79, 81, 83, 89, 93, 99, 127, 129, 131, 151, 157
J1419811	57, 59, 75, 113, 115

T

Tapered Compression Spring	
J1039676	169
Tee	
J1018423	137
Tee Bracket	
JA-23840	139
Tensioner Weldment	
J1435833	49
J1616044	47
Terminal Block	
J1081793	153
Terminal Lug	
J1189125	149, 153
Terminal Ring	
J1190370	149
J1285147	149
Thermostat	
JA-54183	149
Thermostat Assembly	
J1531094	145, 149
Thermostat Mounting Plate	
JA-24123	149
Toggle Arm Weldment	
J200136100	39
Transformer	
J1475938	153
J1475946	153
J1475953	145, 153
JC-72982	145, 153
Transformer Mount	
J1625045	145, 153
Tube	
J200041100	169
Tubing	
J0140951-00	63, 67, 71
J0141701-00	63, 67, 71
J0141703-00	61, 65, 69
J0141704-00	61, 65, 69
J0141705-00	63, 67, 71
J0141706-00	61, 65, 69
J0141708-00	63, 67, 71
J0141710-00	61, 65, 69
J1103970-00	63, 67, 71, 99
J1106665	133
J1106699	25, 95, 97, 133, 135
J1117191	133

Tubing Clamp	
J1244623	149
Tubing Connector	
J1408020	21

U

UL Control Panel	
J1596337	153
Union Compression Elbow	
JC-30454	133
Union Tee	
J0140950-00	71

V

Vacuum Damper Box Weldment	
J200108300	127
Valve	
JA-11599	91
Valve Adapter	
J1635051	93
Valve and Bracket Assembly	
J200002300	63, 67, 71, 107
J200024700	63, 67, 71, 109, 111
Valve Assembly	
J1485010	61, 65, 69, 83
Valve Body	
J1383116	119
JA-10514	91
Valve Body Assembly	
JA-06430	87, 89, 91
Valve Cap	
JA-10515	91
Valve Kit	
JA-54069	79, 81
Valve Mounting Bracket	
J200011600	107
Valve Stem Assembly	
J1611417	87, 89, 91
Valve, 3-Way	
J0380816-00	99, 101
J1142504	83
J1422740	93
Valve, 3-Way and Shuttle	
J0380813-00	99, 101
J0380815-00	99, 101
Vent Plug	
J1427103	151

W

Warning Nameplate	
J1556471	165
Washer	
91200	39, 43, 45, 123
F430301	117
F430304	117
F430308	7, 9
F430311	29, 31
F430312	117

N/A items do not appear in index.

F430317.....	103, 105, 117
F430322.....	103, 105, 117, 123
F430326.....	7, 9
F431102.....	117
F431105.....	7, 9
F431123.....	57, 59, 107, 109, 111, 115
F431134.....	29, 31
F431137.....	7, 9, 117
J1000975.....	29, 31, 33, 43, 45, 117, 121, 127, 131
J1001007.....	121
J1001106.....	169
J1001122.....	41
J1001213.....	29, 31, 127
J1001270.....	11
J1001304.....	11, 13, 47, 49, 151
J1001338.....	47, 49, 123
J1085984.....	29, 31, 149, 161, 163
J1085992.....	145
J1178391.....	11
J1185073.....	7, 11, 39, 43, 45, 51, 135, 139, 145, 151, 157, 161, 169
J1216357.....	155
J1338565.....	119, 127, 129
J1359876.....	119
J1359892.....	119
J1393354.....	169
J1398437.....	127, 129
J1398452.....	127, 129
J1398460.....	127, 129
J1398478.....	127, 129
J1545185.....	13
J1618990.....	47, 49
JA-22689.....	43, 45
JA-51475.....	85
JA-52154.....	131
JA-52196.....	87, 89
JA-53116.....	13
JA-53985.....	47, 49
JA-53986.....	47, 49
JA-55802.....	125
JC-43257.....	11
JC-80505.....	23
JC-80513.....	11, 39, 43, 45, 85, 151
JC-80583.....	51, 123
M400013.....	11, 15, 47, 49, 85, 127, 129, 161, 163, 169
M400014.....	13, 23, 41, 87, 117, 123, 169
M400080.....	15, 169
M400081.....	87, 123
M403958.....	47, 49
Water Gun Assembly	
JA-51110.....	143
Wire	
JM-99150.....	149
JR-90132.....	149
Wire Terminal	
JT-168-4.....	149
Wire, 14 Gauge	
J1131333.....	145
Worm Gear Clamp	
J1153865.....	51
JC-21541.....	117
Wrench	
J1484732.....	159

Y

Y Connector	
J200018700.....	99