

Drying Tumblers

125 Pound Capacity

Refer to Page 3 for Model Numbers

Parts

Table of Contents

Title	Page
Parts Ordering Information.....	2
Serial Plate Location	2
Model Identification	3
2 Timer Control Panel Assembly	4
DMP Control Panel Assembly.....	6
Pro and ProHC Control Panel Assembly	8
Front Panel Assembly	10
Front View	12
Burner Access Door	14
Lint Door Assembly	16
Gear Motor Rear View	18
Air Switch Assembly	20
Rear Motor Control Assembly	22
TM200 Gear Reducer - Rear View	24
TM200 Large Gear Reducer with Bronze Teeth	26
Fan Assembly for 60 Cycle	28
Fan Assembly for 50 Cycle	30
Thermostat Assembly - 2 Timer	32
2 Timer Sensor Assembly	34
DMP Sensor Assembly	36
Pro Sensor Assembly	38
ProHC Sensor Assembly - Upper Assembly	40
ProHC Sensor Assembly - Lower Assembly	42
Gas Bonnet Assembly	44
Electric Bonnet	46
Steam Bonnet Assembly	48
Parts Index	51

© Copyright 2012, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Parts Ordering Information

If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.

For technical assistance, call either of the numbers listed below:

(920) 748-3121 Ripon, Wisconsin

+32 56 41 20 54 Wevelgem, Belgium

Serial Plate Location


When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on serial plates.

Model Identification

Information in this manual is applicable to these tumbler models:

HD125

2 Timer Control Panel Assembly

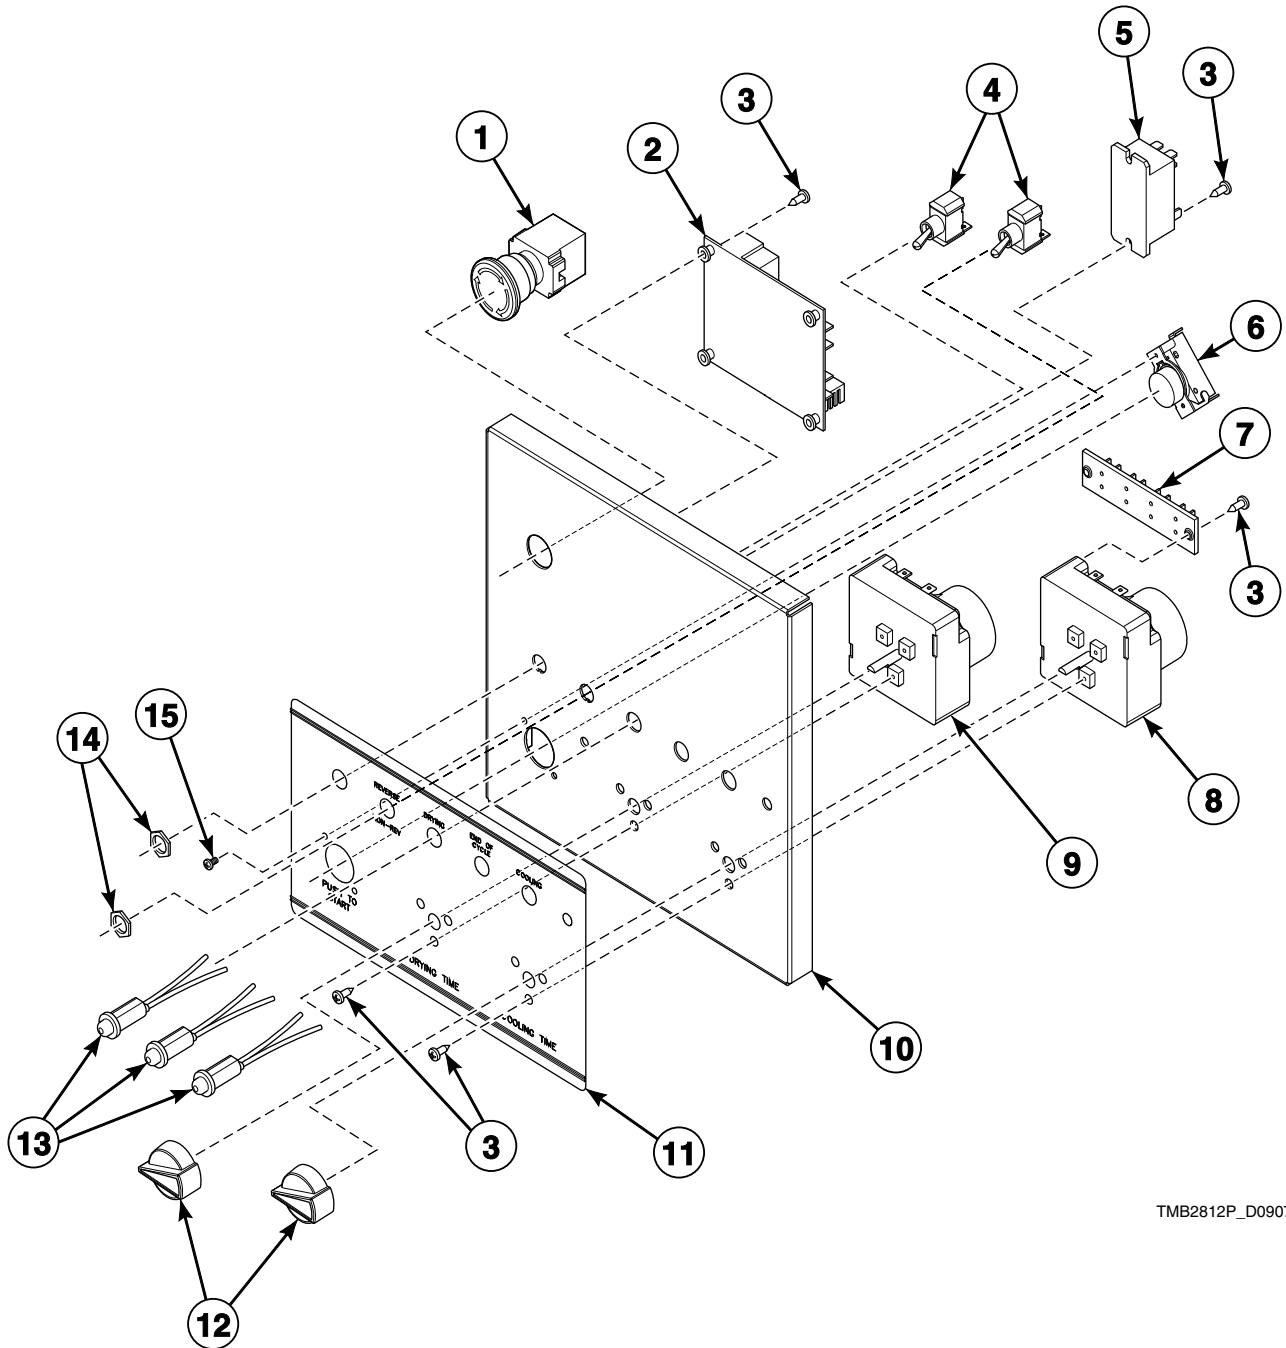


TMB2812P_D0907

2 Timer Control Panel Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	254/00067/00	Control Board	DX3R
1	TU14435	Emergency Stop Button Kit	50 Hertz
	TU15724	Button Plug	7/8 inch; 60 Hertz
2	TU12874P	Reversing Timer	
3	TU7733	Screw	No. 8-18 x 1/2 inch; Self-drilling
4	FG147P	Toggle Switch	
5	F1300P	Relay	24 Volt
6	TU9028	Pushbutton Switch	
7	TU8629	Terminal Board	
8	TU12933P	Timer	0-15 minute
9	TU12932P	Timer	0-60 minute
10	TU15406WHT	Control Panel Weldment Assembly	
11	TU15459	2 Timer Nameplate	
12	N/A	Knob	
13	TUT316	LED Light Assembly	24 Volt
14	TU3805	Nut	No. 15-32; Hex
15	ET208	Screw	No. 6-32 x 1/4 inch; Binding head

N/A = Part no longer available

DMP Control Panel Assembly

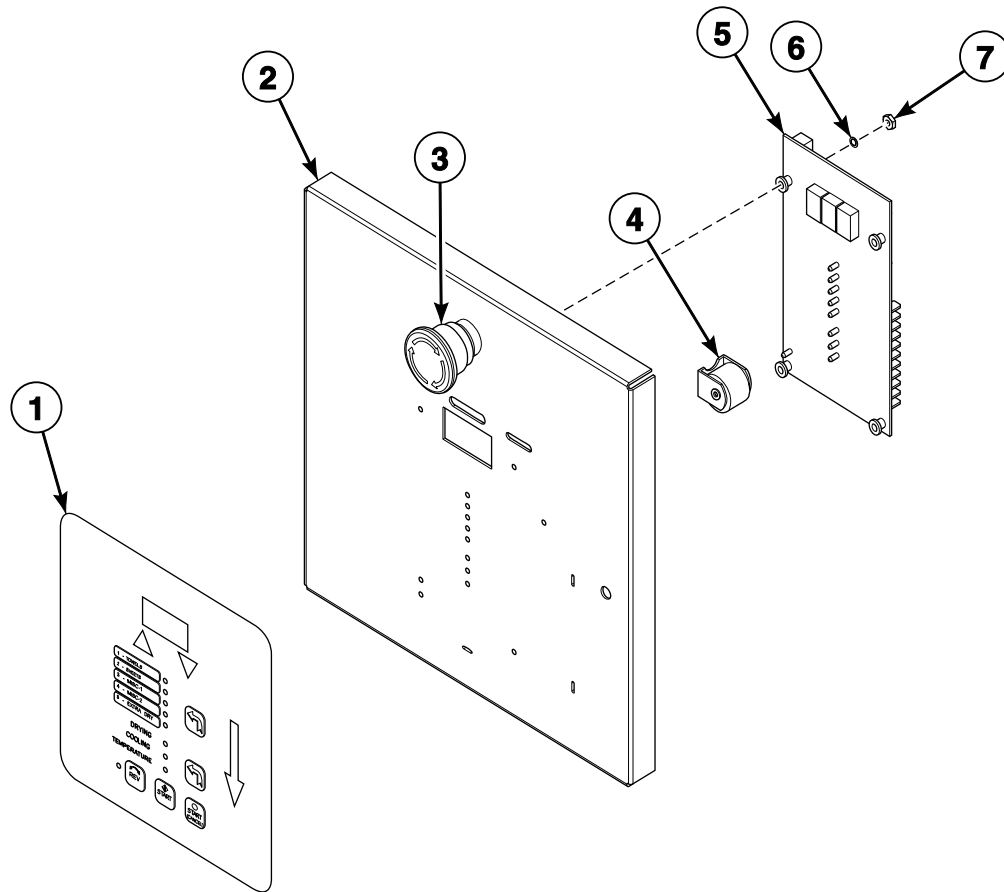


TMB2435P_D0907

DMP Control Panel Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	TU15724	Button Plug	7/8 inch; 60 Hertz
1	44037901P	Membrane Switch	OPL DMP; Right side; Down
2	TU14469WHT	DMP Control Panel Weldment Assembly	
3	TU14435	Emergency Stop Button Kit	50 Hertz
4	TU14137	Buzzer	24 Volt
5	TU14404P	Controller	OPL/Coin board; New
6	M270	Washer	No. 6; Internal tooth lock
7	TU3400	Nut	No. 6-32; Hex

Pro and ProHC Control Panel Assembly

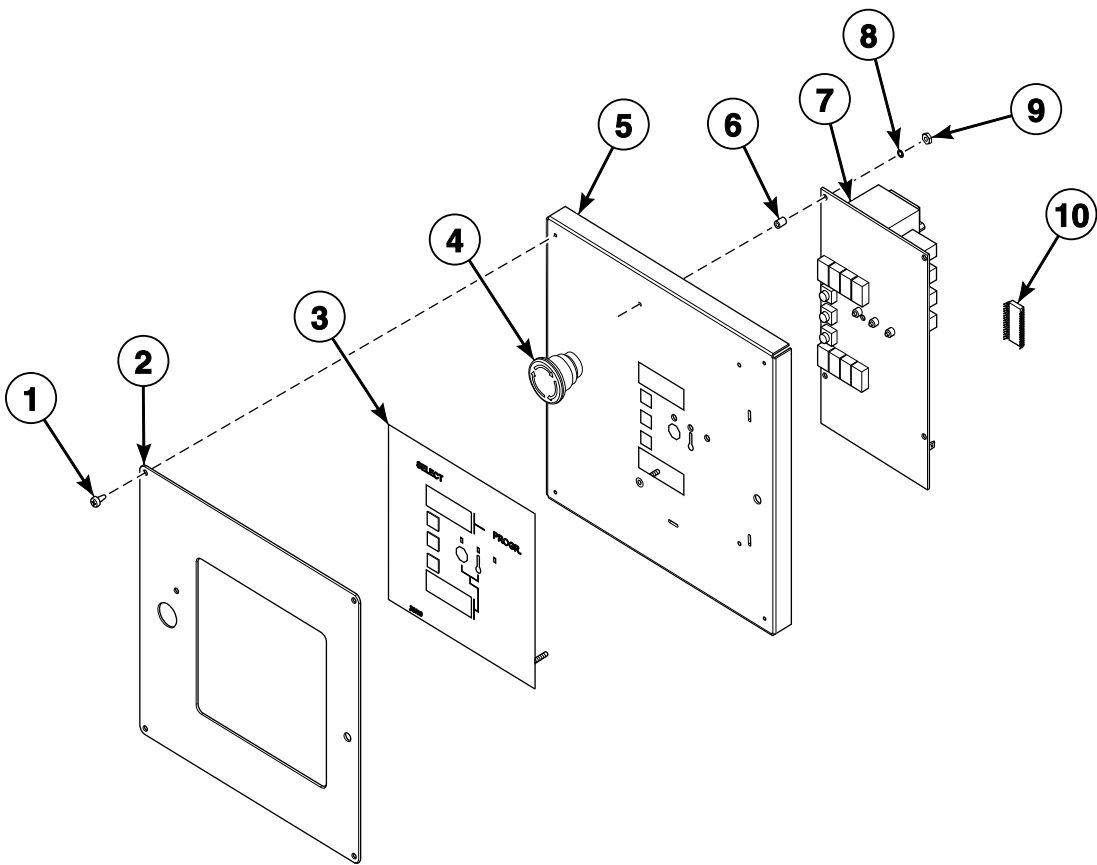


TMB2436P_D0907

Pro and ProHC Control Panel Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	TU15724	Button Plug	7/8 inch; 60 Hertz
1	M261	Screw	No. 8-32
2	TU14727WHT	Control Panel Cover Plate	
3	254/00039/00	Operating Touchpad	Pro control
	254/00018/00	Control Label	ProHC control
4	TU14435	Emergency Stop Button Kit	50 Hertz
5	TU14442WHT	Control Cover Assembly	
6	N/A	Spacer	
7	254/00070/00P	Control Board	
8	M270	Washer	Lock
9	TU3400	Nut	No. 6-32
10	N/A	Chip	Standard program

N/A = Part no longer available

Front Panel Assembly

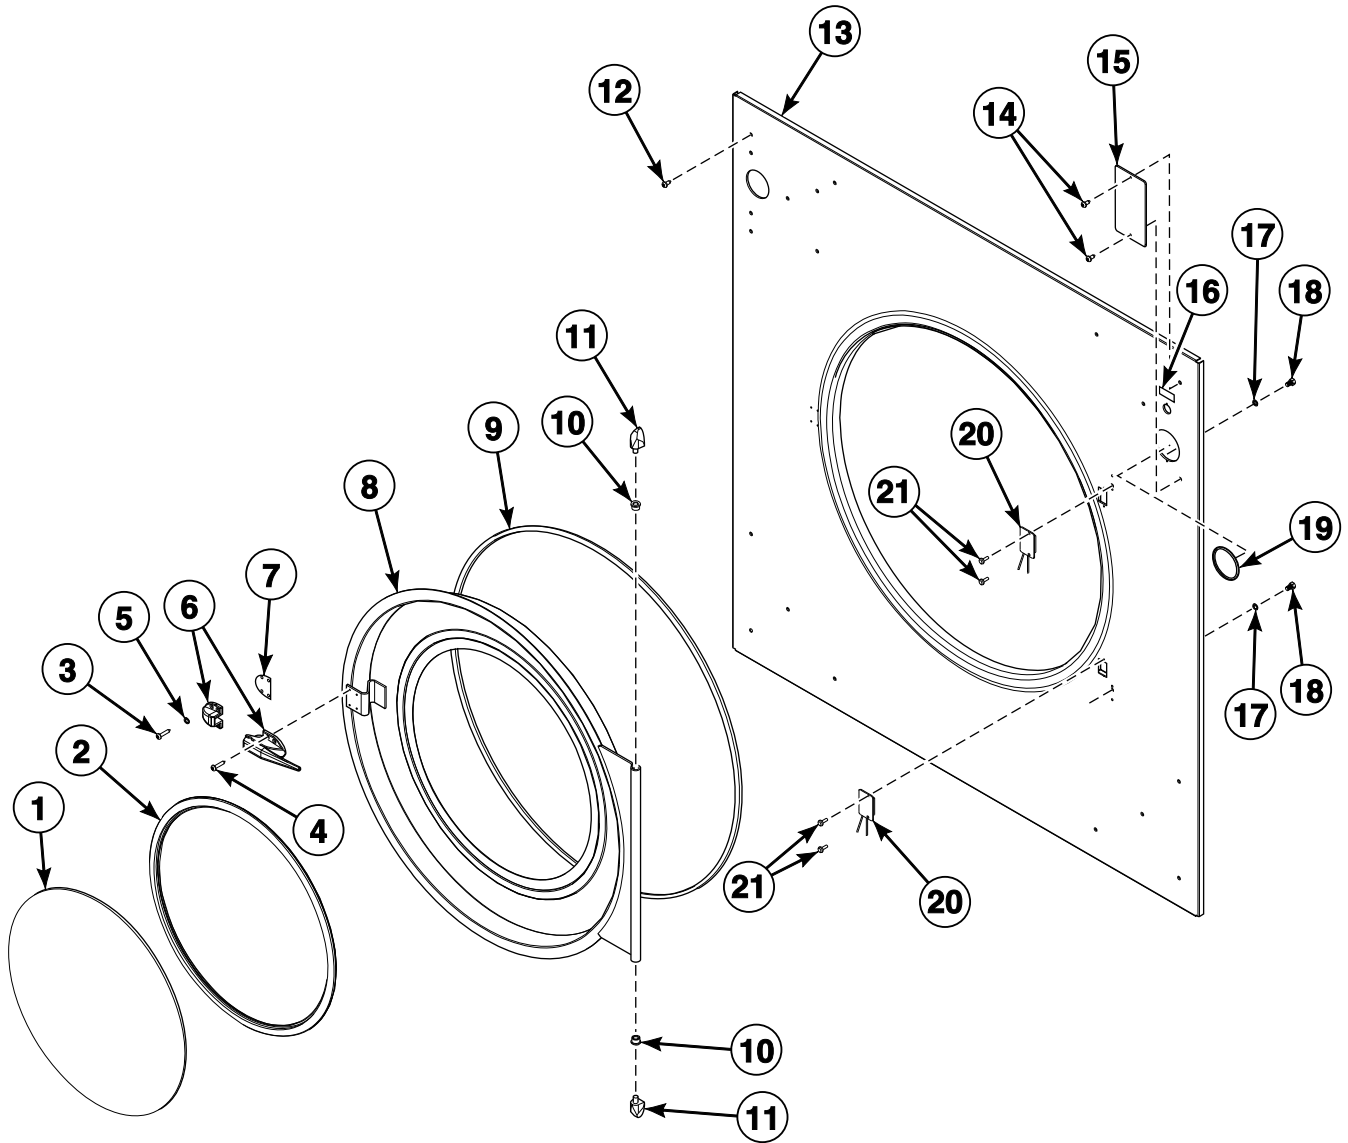


TMB2424P_D0907

Front Panel Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	TU15454WHT	Front Panel Assembly	Complete; Excludes cover plate
1	TU15107P	Door Glass	20 1/4 inch
2	TU15966	Door Gasket	
3	TU2687	Screw	No. 8; Phillips head
4	JA-51604	Screw	No. 8-32; Pan head
5	F431106	Washer	No. 8; E.T. cup
6	TUA2319H	Door Latch	With keeper
7	TU5503	Door Latch Spacer	
8	TU14467WHT	Door Basket	Specify color
9	TU5288P	Door Seal	
10	PIF172	Hinge Bushing	
11	TU2236	Hinge Post	
12	TU3209	Screw	No. 14; Pan head
13	TU15453WHT	Front Panel Weldment Assembly	Specify color
14	TU7733	Screw	No. 8 x 1/2 long
15	TU15525WHT	Front Panel Cover Plate	Specify color; For DMP, Pro, and ProHC dryers
16	TU5458	Temperature Nameplate	
17	202010	Washer	5/16 Lock
18	TU2836	Screw	5/16-18; Hex head
19	TU2641	Thermometer Gasket	
20	ESA-00862-0P	Reed Switch Assembly	
21	SB-00975-0	Screw	No. 6-32

Front View

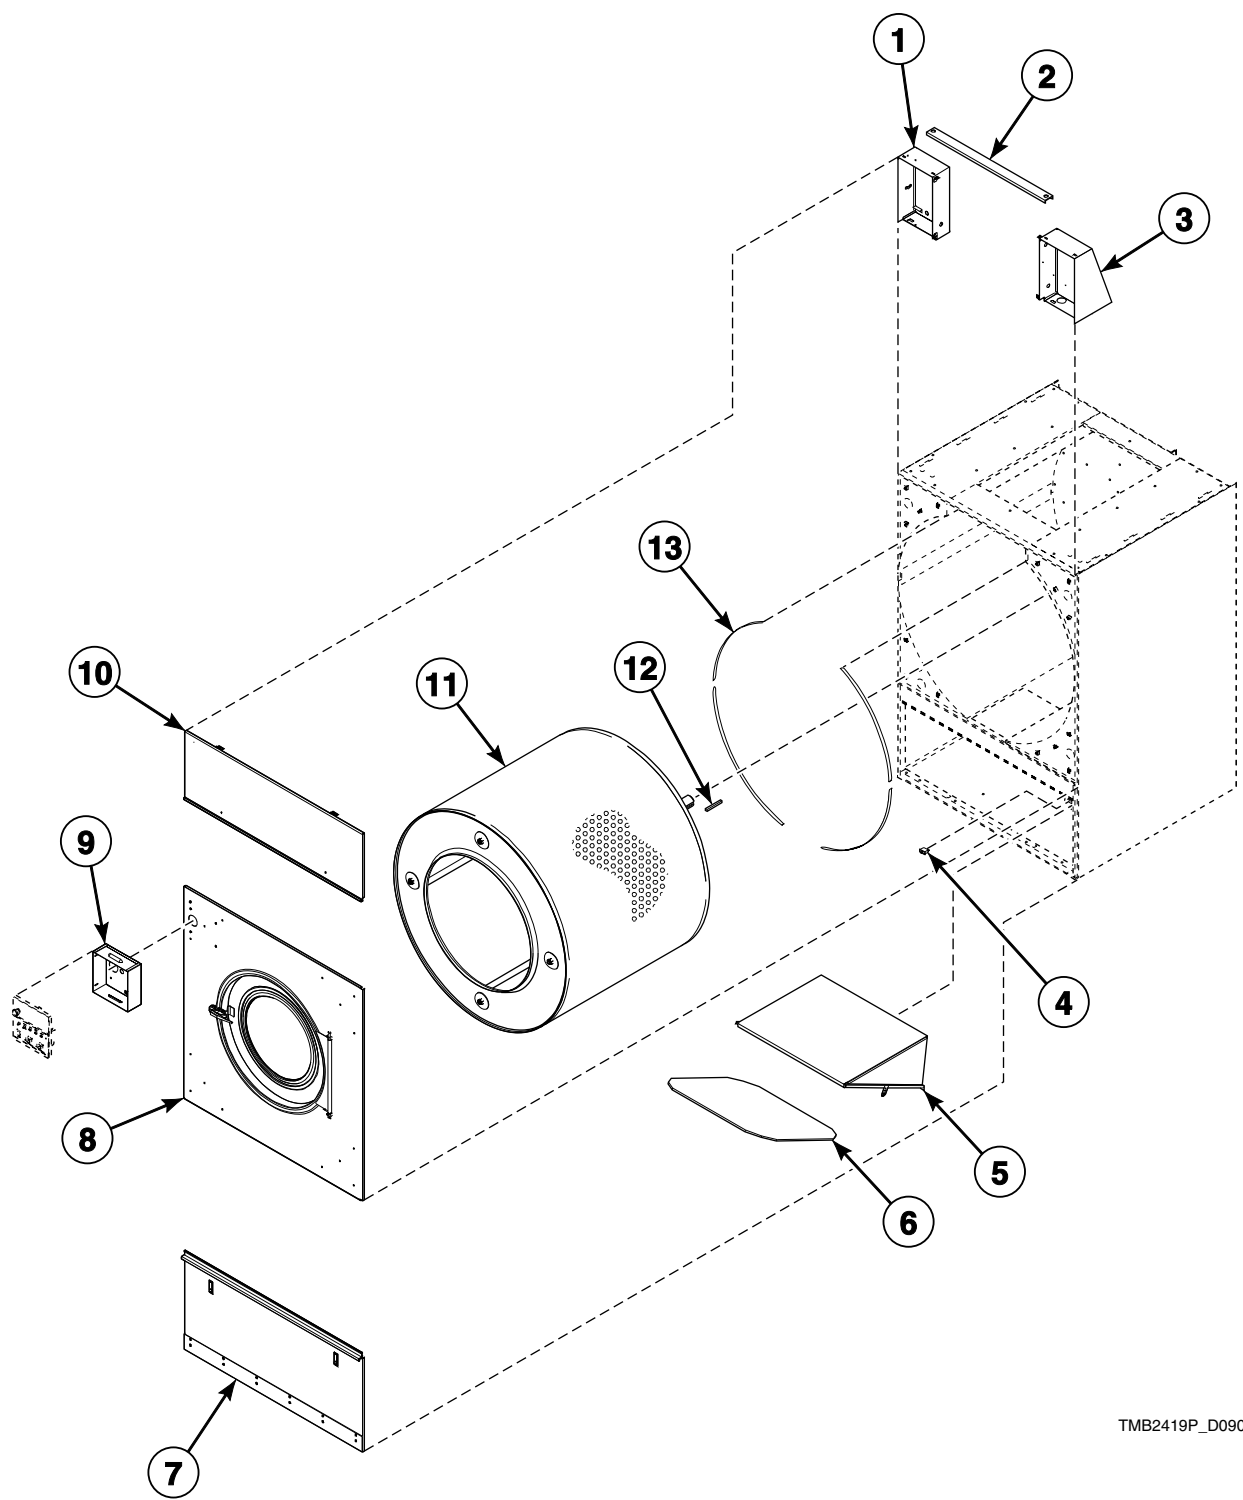


TMB2419P_D0907

Front View

REF	PART NO.	DESCRIPTION	COMMENTS
1	N/A	Left Hand Control Box Assembly	Specify color
2	N/A	Control Box Support	
3	N/A	Right Hand Control Box Assembly	Specify color
4	EA-11621-0	Lint Door Switch	
5	TU10345	Lint Screen Housing	
6	K121	Lint Trap Frame Kit	
	K368	Lint Screen Kit	Replacement parts
7	N/A	Lint Door Assembly	
8	N/A	Time/Temperature Front Panel Assembly	Specify color
9	N/A	Control Box with Hardware	Specify color
10	N/A	Burner Access Door Assembly	Specify color
11	K421	Basket Assembly Kit	Galvanized; TM200 Gear Reducer; Includes TU5290 Gasket, TU5803 Basket with Spider Assembly, TU9975 Key and 2 of TU470 Nut
	N/A	Basket and Spider Assembly	Stainless steel; TM200 Gear Reducer
	N/A	Basket and Spider Assembly	Galvanized; Gear motor
	N/A	Basket and Spider Assembly	Stainless steel; Gear motor
	TU6469	Basket	Galvanized; Without spider
	TUS6469	Basket	Stainless steel; Without spider
	K109	Spider Kit	Without basket; TM200 Gear Reducer; Includes TU13339 Spider, TU5290 Gasket, TU9975 Key and 2 of TU470 Nut
	TU16026	Spider	Without basket; Gear motor
12	TU9975	Key	TM200 Gear Reducer
	N/A	Key	Gear motor
13	K118	Gasket Kit	

N/A = Part no longer available

Burner Access Door

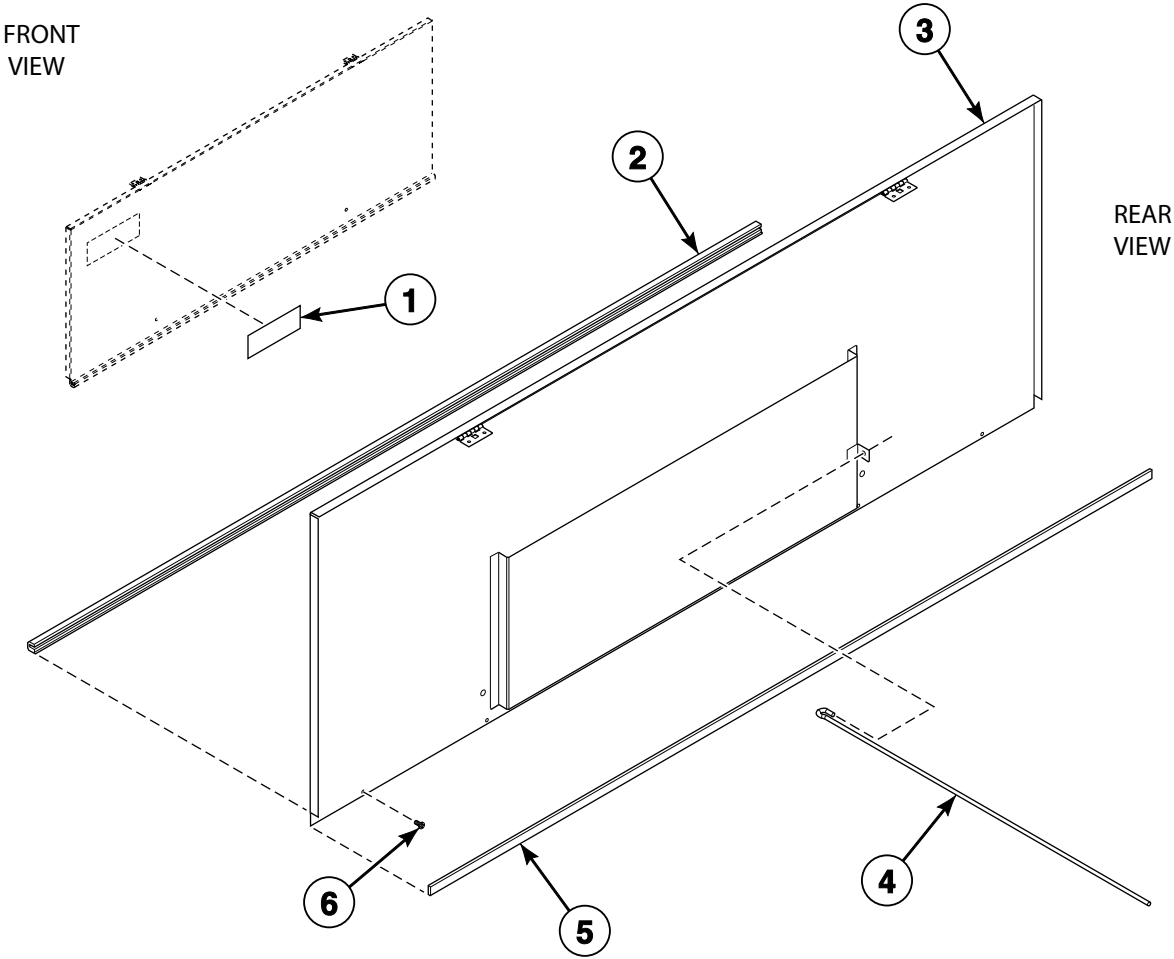


TMB2816P_D0907

Burner Access Door

REF	PART NO.	DESCRIPTION	COMMENTS
1	TU14662	Decal	
2	N/A	Burner Access Trim	
3	TU14629WHTP	Access Door Weldment Assembly	Burner; Specify color
4	TU5739	Support Arm Rod	
5	CA-13098-0	Control Door Gasket	
6	SB-00951-0	Screw	No. 8 x 7/16 inch; Phillips flat head

N/A = Part no longer available

Lint Door Assembly

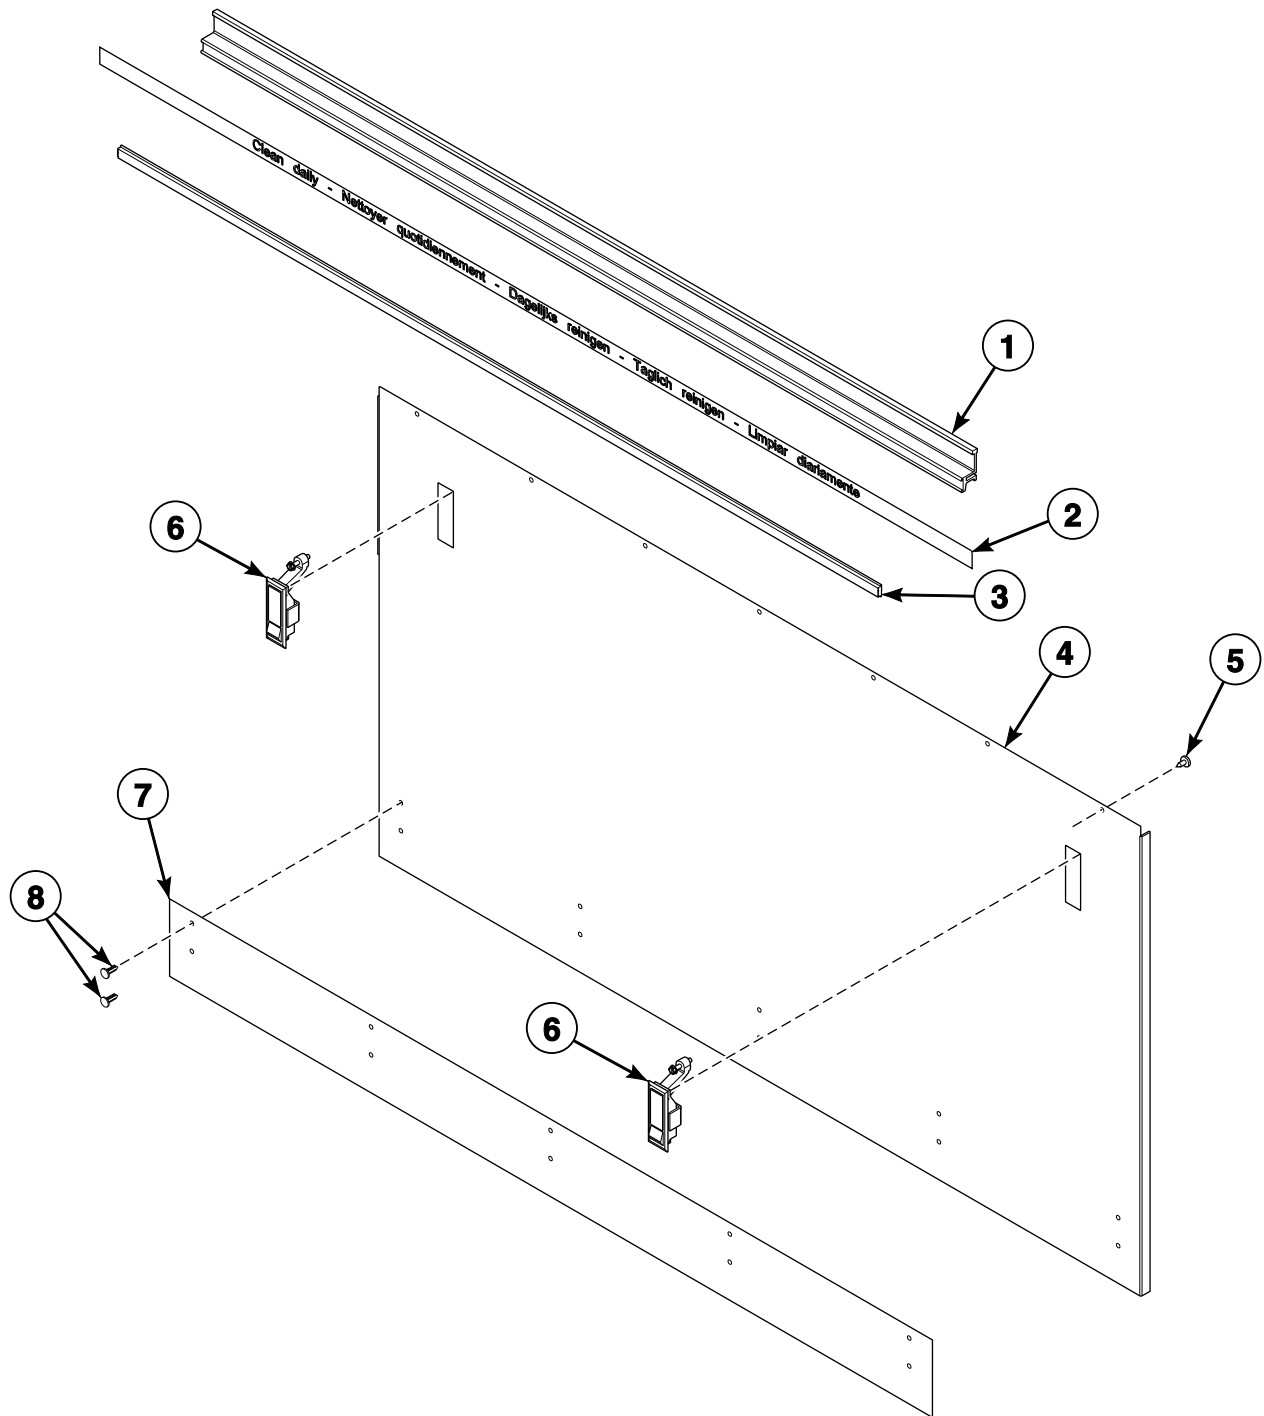


TMB2813P_D0907

Lint Door Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
1	TU14636	Lint Door Handle	
2	TU15410	Clean Lint Screen Label	5 language
3	TU14637	Rub Rail Trim	
4	TU14635WHTP	Lint Door Weldment Assembly	Specify color
5	M405188	Screw	Pancake
6	LA-00123-0P	Trigger Lock Latch	
7	TU14639	Kickplate	
8	SB-00949-0	Kickplate Fastener	

Gear Motor Rear View

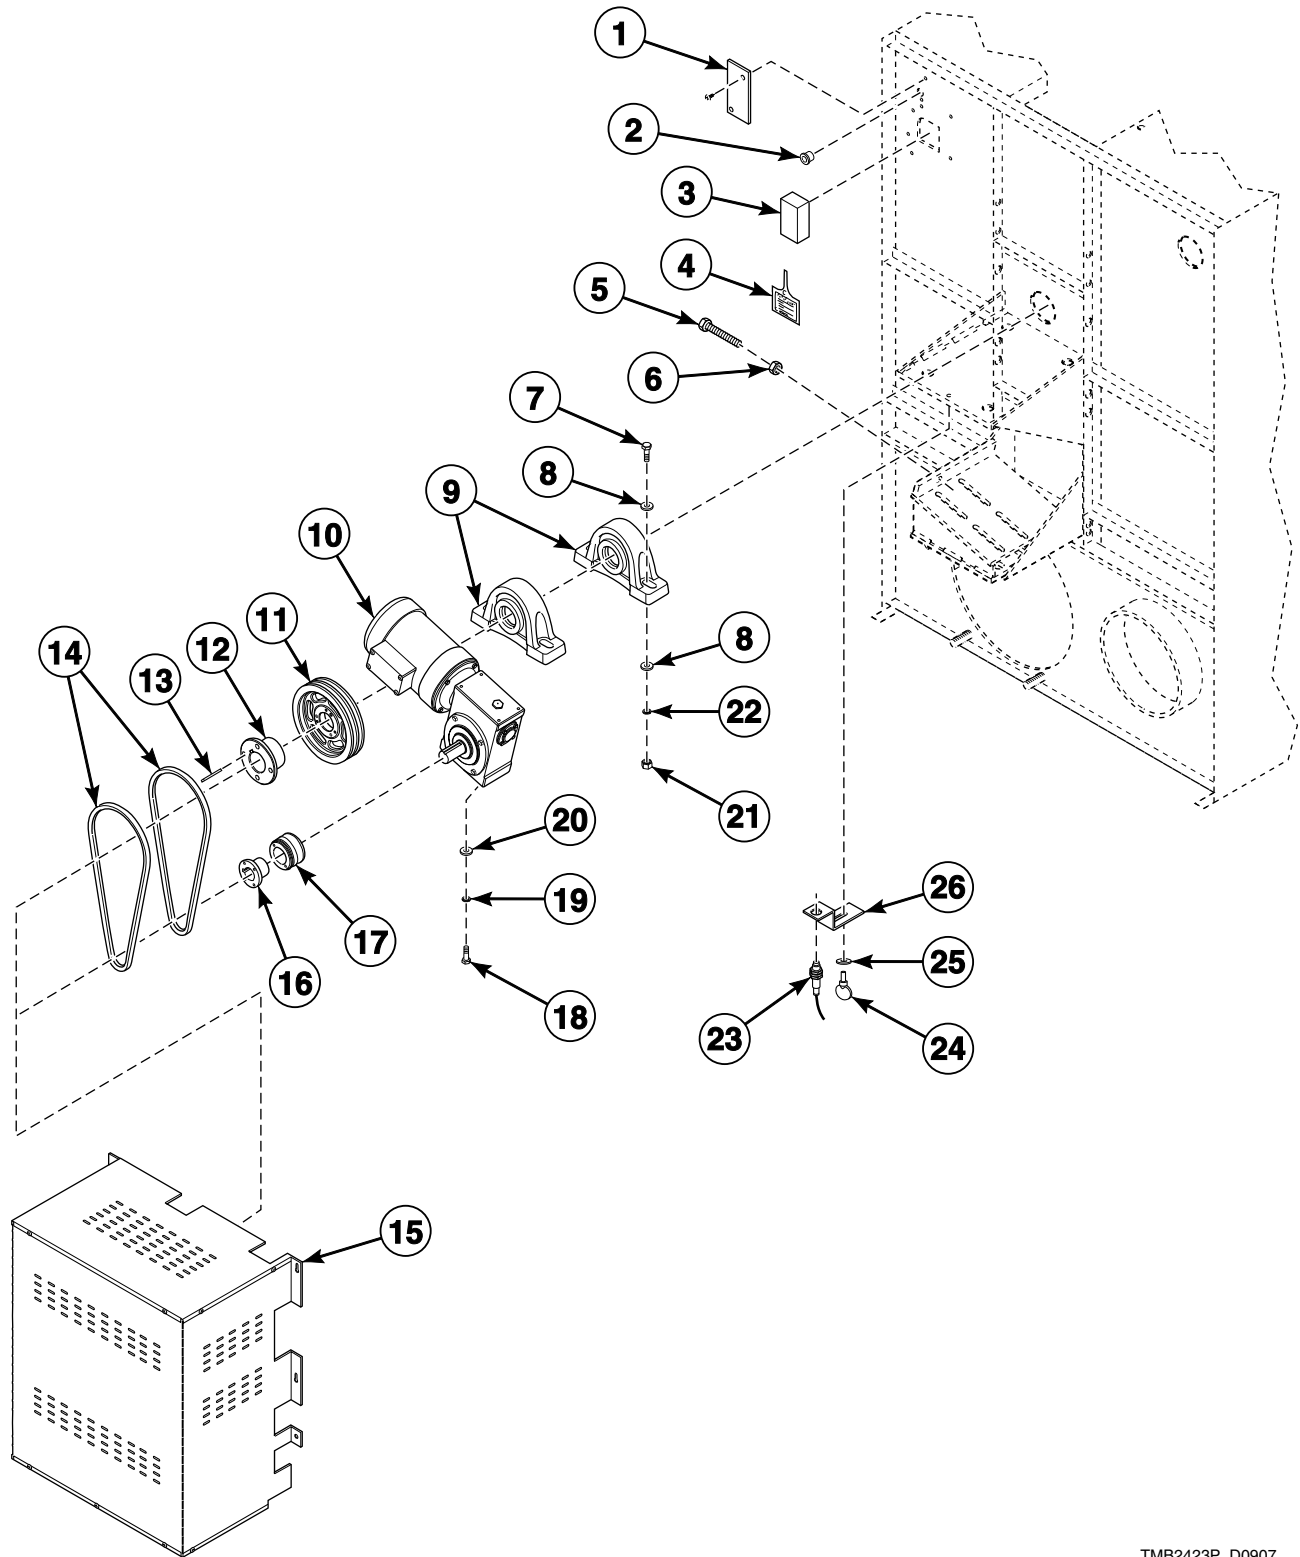


TMB2423P_D0907

Gear Motor Rear View

REF	PART NO.	DESCRIPTION	COMMENTS
	503661	Screw	No. 10; For item 15
1	N/A	Air Switch Hole Cover	C model; Steam only
2	TU2372	Snap Bushing	
3	TUX415	Air Switch Cover	
4	TU8206	Air Switch Kit	
5	TUX575	Adjustment Rod Weldment	
6	TU2881	Nut	5/8-18; Hex
7	N/A	Screw	5/8-11 x 2 3/4 long
8	TUX329	Washer	5/8 inch; Flat
9	TU16016	Pillow Block Bearing	2 inch
10	TU16078P	Gear Motor Assembly	1 1/2 hp
11	TUX602	Basket Sheave	2B80
12	N/A	Bushing	SK2
13	N/A	Key	1/2 inch square
14	TU16091	Belt	BX47; 60 cycle
	TU16086	Belt	BX48; 50 cycle
15	N/A	Belt Guard	
16	TU6723	Lock Bushing	L1-1/8
17	TUX222	Sheave	2MBL47; 60 cycle
	TU16087	Pulley	2MBL59; 50 cycle
18	TU15926	Screw	3/8-16 x 1 1/4 inch long
19	VSB134	Washer	3/8; Lock
20	M400081	Washer	3/8; Flat
21	N/A	Nut	5/8-11; Hex
22	TU3418	Washer	5/8 inch; Lock
23	70274001P	Rotation Sensor	Includes plug
24	FR244	Screw	No. 10-32; Thumb
25	TU4820	Washer	3/16 inch; Flat
26	N/A	Rotation Sensor Bracket	

N/A = Part no longer available

Air Switch Assembly

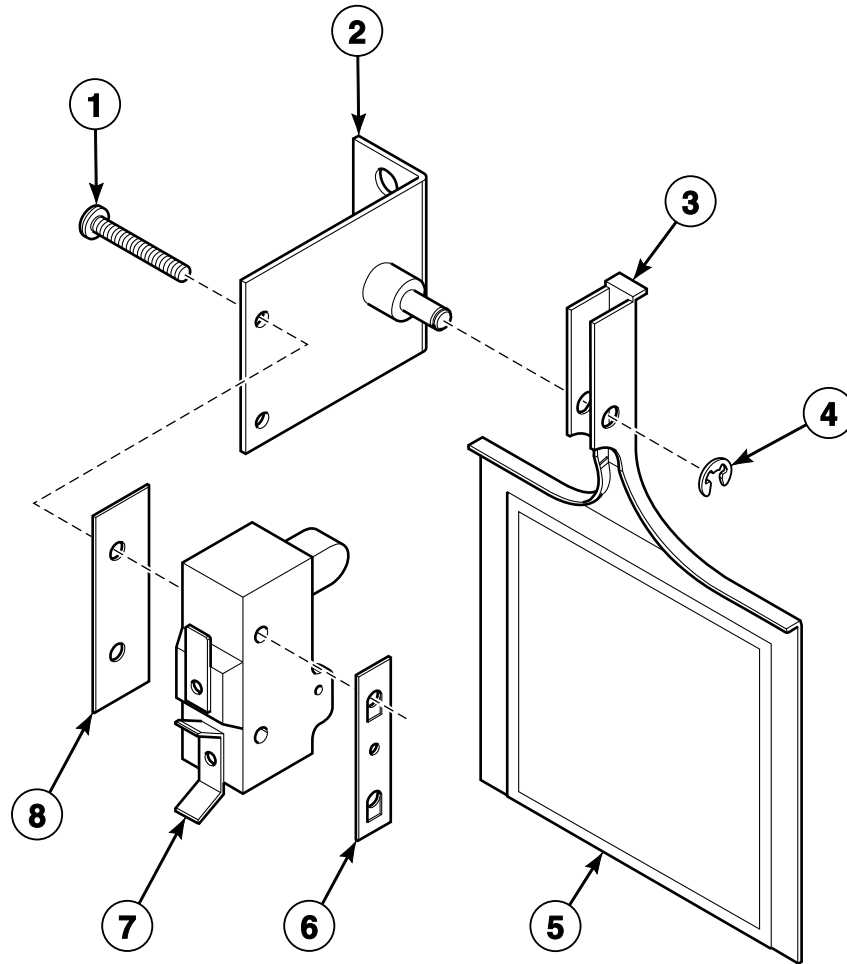


TMB2433P_D0907

Air Switch Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	TU8206	Air Switch Kit	
	TU7733	Screw	No. 8
1	TU3219	Screw	No. 6
2	TU8171	Air Switch Mounting Bracket	
3	TU2463	Actuator Arm	
4	F888	E-Ring	
5	TU3476	Label	Important
6	TU1771	Nut	No. 6; Tinnerman
7	TU14482	Microswitch	
8	TU1770	Air Switch Insulator	

Rear Motor Control Assembly

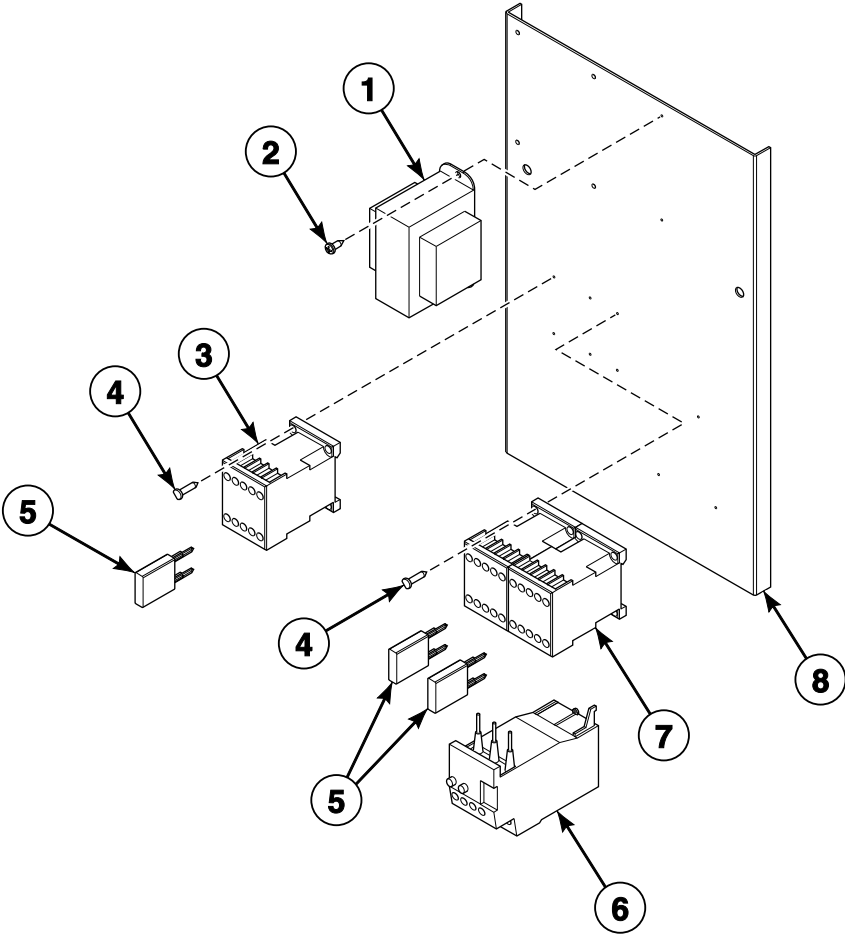


TMB2438P_D0907

Rear Motor Control Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
1	TU13802P	Transformer	115/208/230/460 Volt; 75VA
	N/A	Transformer	575 Volt/24 Volt; 60VA
2	TU7733	Screw	No. 8; Self-drilling
3	TU13516P	Contactor	24VAC; IEC; 12 Amp; With auxiliary
4	N/A	Screw	No. 8
5	TU14825	Surge Suppressor	
6	TU16101	Overload	4.5-6.3
	TU15962	Overload	2.2-3.2
7	EA-00685-0P	Reversing Contactor	3 pole; 24 Volt coil; 12 Amp
8	TU13700	Motor Control Panel Plate	

N/A = Part no longer available

TM200 Gear Reducer - Rear View

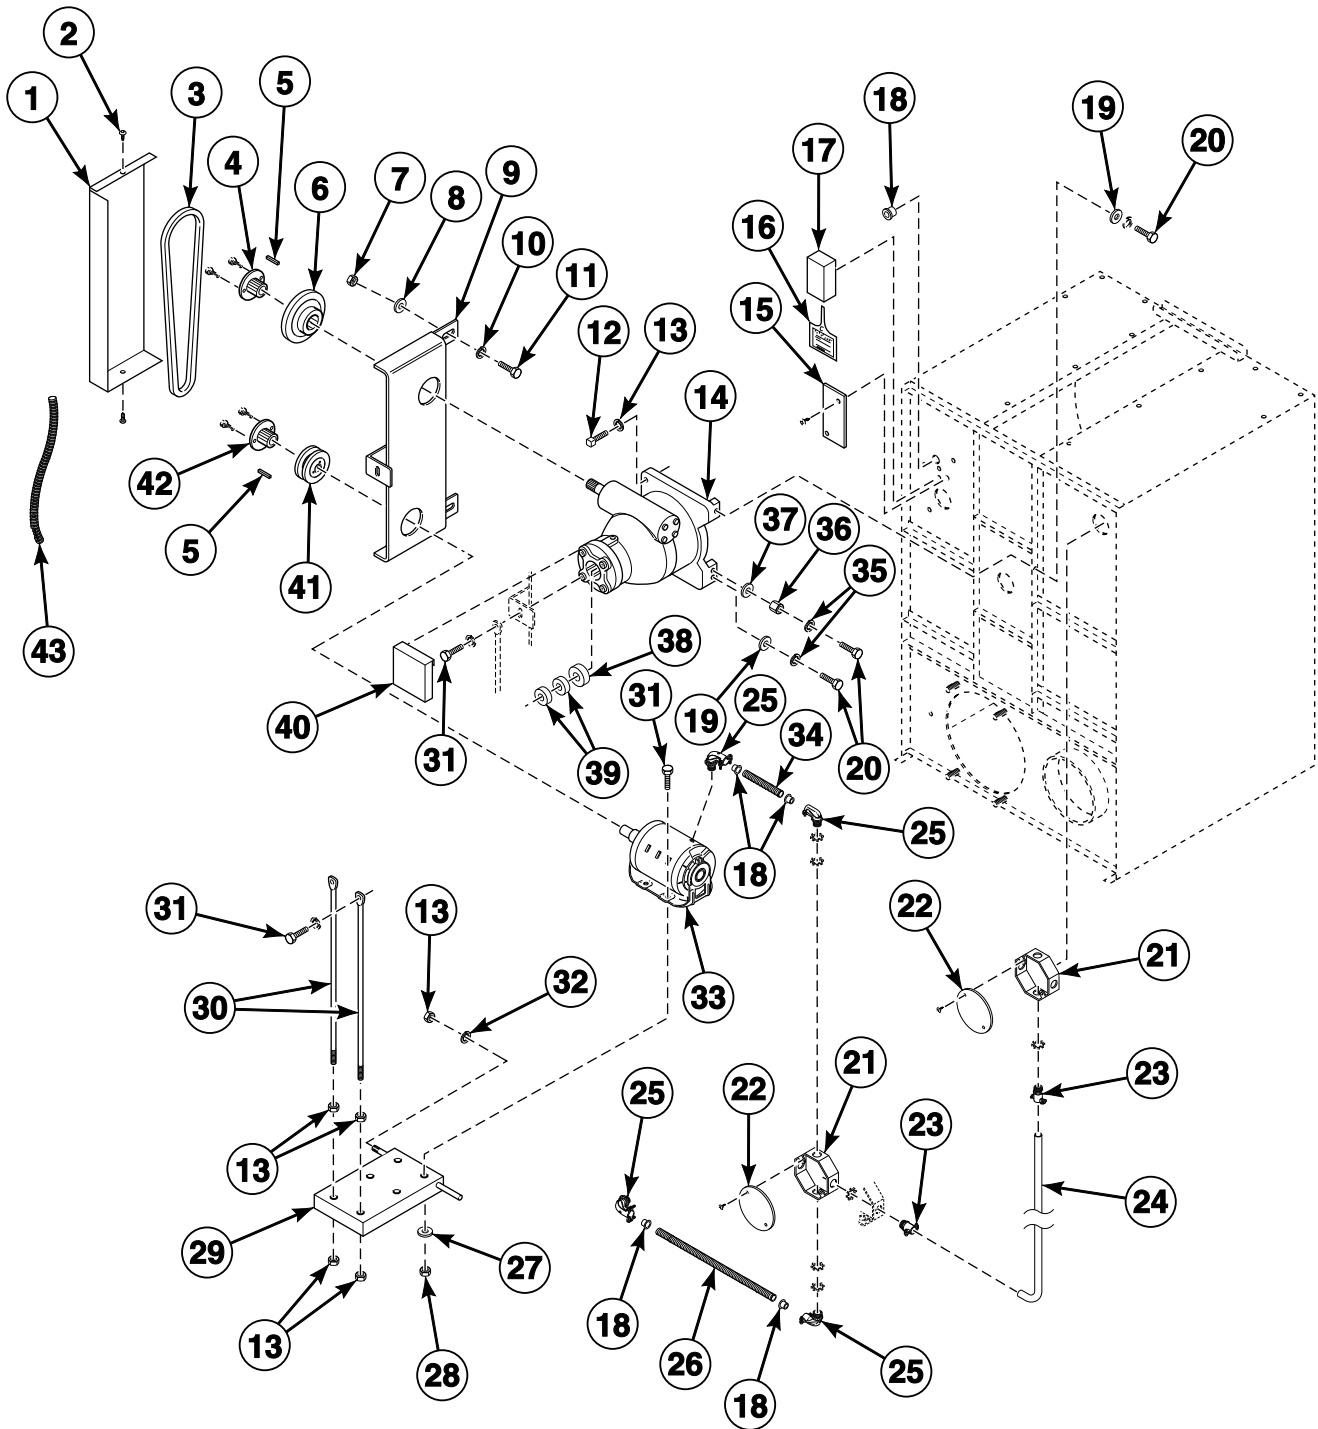


TMB2817P_D0907

TM200 Gear Reducer - Rear View

REF	PART NO.	DESCRIPTION	COMMENTS
	H88012034	Screw	1/2 inch - 13 x 1 1/4 inch; Hex head cap
1	TU14092	Rear Guard Cover Plate	
2	TU7733	Screw	No. 8 x 1/2 inch; Self-drilling; Package of 6
3	TU2363	Belt	V; 5L500
4	TU3807	Sheave Bushing	
5	TU14057	Key	
6	TU3806	Sheave	
7	20275	Nut	1/4 inch - 20 x 7/16 inch; Hex; Package of 6
8	03189	Washer	1/4 inch; Split lock; Package of 6
9	TU9615	Belt Guard Weldment Assembly	
10	TU2847	Washer	1/4 inch; Flat; Package of 6
11	FB189	Screw	1/4 inch - 20 x 1 inch; Hex head
12	TU5312	Screw	3/8 inch - 16 x 3 inch; Square head set
13	TU4787	Nut	3/8 inch - 16; Hex; Package of 6
14	TM200P	Gear Reducer	
15	N/A	Air Switch Hole Cover	C model; Steam only
16	TU8206	Air Switch Kit	
17	TUX415	Air Switch Cover	
18	TU2372	Snap Bushing	
19	TU1851	Washer	1/2 inch; Flat
20	TU2195	Screw	1/2 inch - 13 x 1 3/4 inch; Hex head; Package of 6
21	500300644	Junction Box	
22	SB170	Junction Box Cover	
23	N/A	Straight Connector	3/4 inch
24	N/A	Back Motor Conduit	
25	TU4791	Angle Connector	90 degree
26	CFB2500	Cable	1/2 inch; Specify 25 inches
27	M400013	Washer	5/16 inch; Split lock; Package of 6
28	70142	Nut	5/16 inch - 18; Hex; Package of 6
29	TU4626	Basket Motor Mount	
30	TU5328	Belt Adjusting Rod	
31	M400057	Screw	5/16 inch - 18 x 3/4 inch; Hex head cap; Package of 6
32	TU2831	Washer	3/8 inch; Split lock; Package of 6
33	MTR101	Motor	1 hp; 600 Volt/60 Hertz/3 Phase
	MTR303P	Motor	1 hp; 240/480 Volt/50-60 Hertz/3 Phase
34	CFB1300	Cable	1/2 inch; Specify 13 inches
35	TU2831	Washer	1/2 inch; Split lock; Package of 6
36	TU455	Nut	Cam adjustment
37	TU3575	Washer	7/8 inch; Internal tooth lock
38	TU6633	Washer	2 3/4 inch OD x 1 13/32 inch ID x 3/4 inch; Thick
39	TU470	Nut	Large hex; 2 required
40	TU7517	Basket Shaft Cover	
	N/A	Prompter Housing Assembly	
41	TU2832	Sheave	BK34H; 60 cycle
	TU6081	Sheave	BK45H; 50 cycle
42	TU2833	Bushing	
43	CFB3000	Cable	1/2 inch; Specify 30 inch

N/A = Part no longer available

TM200 Large Gear Reducer with Bronze Teeth

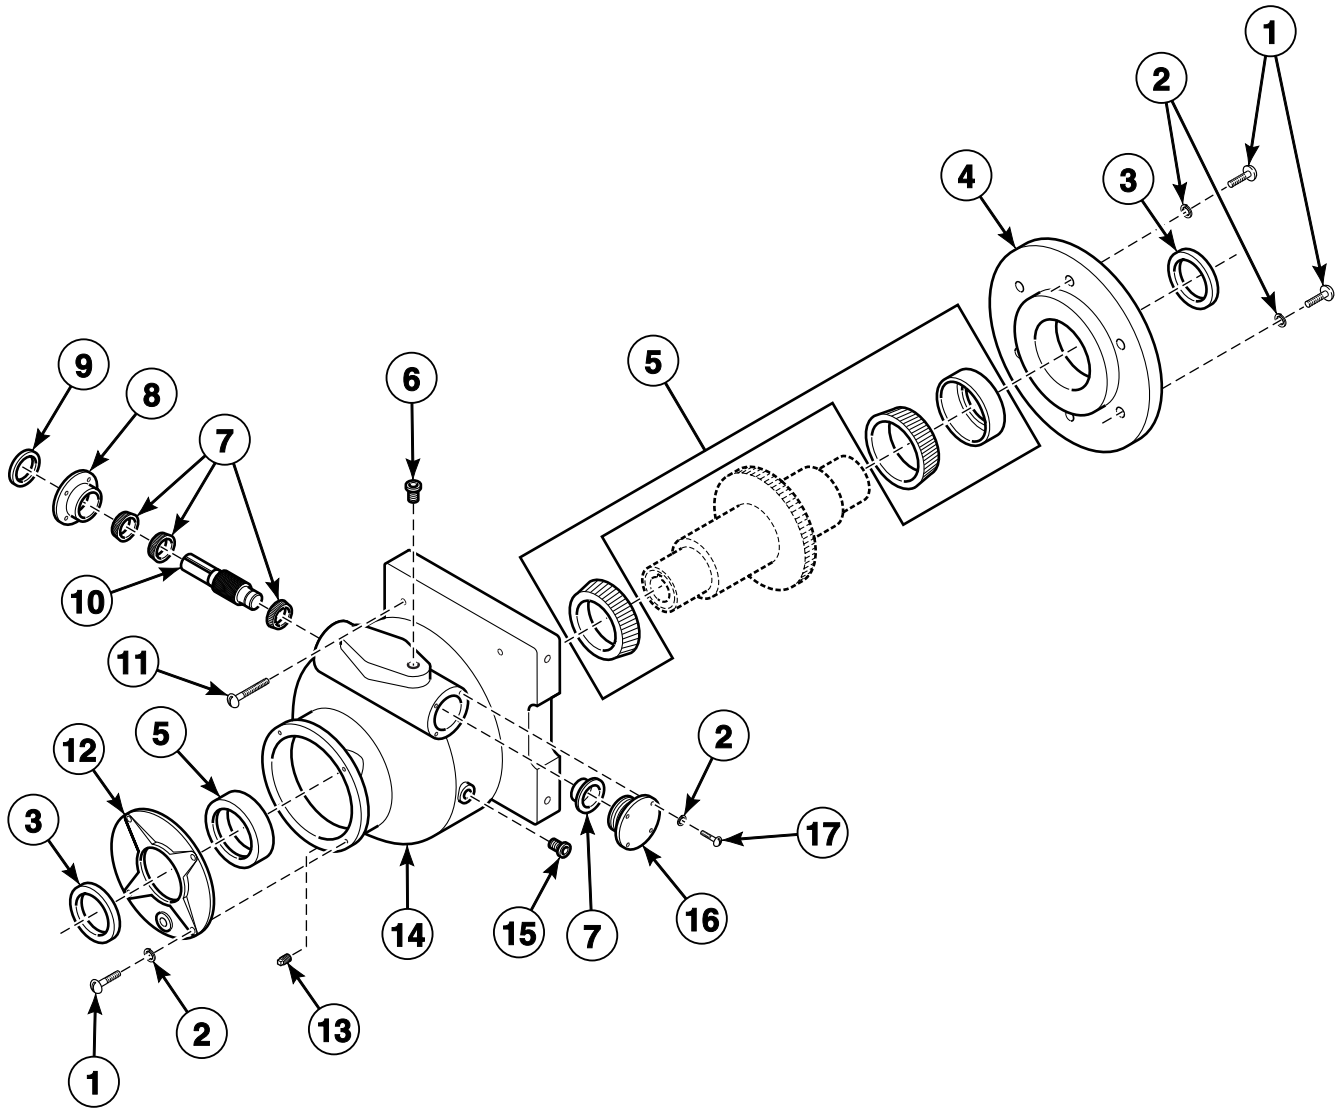


TMB2439P_D0907

TM200 Large Gear Reducer with Bronze Teeth

REF	PART NO.	DESCRIPTION	COMMENTS
	27243P	Transmission Oil	Cissell; 1 pint
1	IB139	Screw	3/8 inch - 16 x 1 1/4 inch; Cap
2	VSB134	Washer	3/8 inch; Split lock; Package of 6
3	TM220	Large Klozure	
4	TM211	Large End Cap	10 1/2 inch diameter
5	TM217	Large Bearing Cone and Cup	
6	N/A	Vent Plug	1/4 inch
7	TM208	Small Bearing Cone and Cup	
8	TM205	Small Open End Cap	
9	TM204P	Small Klozure	
10	TM225P	Worm and Gear Kit	For TM200 only; Sold as set
11	TU5312	Screw	3/8 inch x 3 inch; Set
12	TM212	Small End Cap	6 3/4 inch diameter
13	TM221	Pipe Plug	1/4 inch
14	N/A	Housing	
15	K474	Oil Level Kit	
16	N/A	Small Closed End Cap	
17	TU3246	Screw	3/8 inch - 16 x 1 inch; Cap; Package of 6

N/A = Part no longer available

Fan Assembly for 60 Cycle

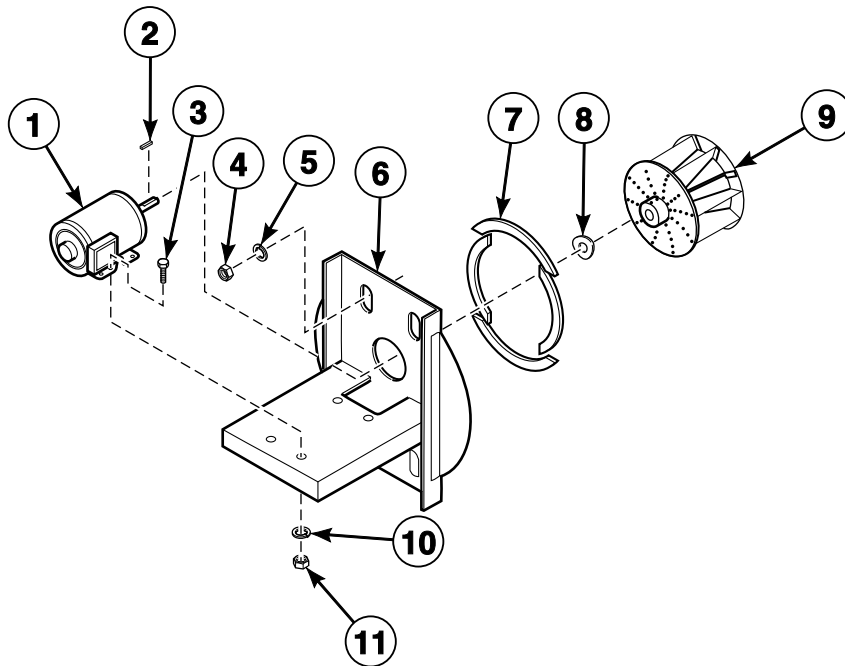


TMB2421P_D0907

Fan Assembly for 60 Cycle

REF	PART NO.	DESCRIPTION	COMMENTS
1	MTR100	Motor	1 1/2 hp; 600 Volt/60 Hertz/3 Phase
	MTR302P	Motor	1/2 hp; 240/480 Volt/60 Hertz/3 Phase
	MTR304P	Motor	1 1/2 hp; 220/380/415 Volt/50 Hertz/3 Phase
2	TU14057	Key	
3	M400057	Screw	5/16 inch - 18 x 3/4 inch; Hex head; Cap; Package of 6
4	TU4787	Nut	3/8 inch - 16; Hex; Package of 6
5	TU2831	Washer	3/8 inch; Split lock; Package of 6
6	TU5658	Motor and Fan Support	60 cycle
7	TU2473P	Motor Mount Gasket	Self-sticking; 2 sets required
8	TU108	Gasket	Felt
9	TU403	Fan	Steam and electric
	TUX220	Induction Fan	Gas
10	M400013	Washer	5/16 inch; Split lock; Package of 6
11	70142	Nut	5/16 inch - 18; Hex; Package of 6

NOTE: Grease can be applied to all bearing shafts, 42-032-6015 grease Lubriplate 310, 1 pound cans OR 14 1/2 ounce tubes - Lubriplate no. 930-2, multi-purpose grease 10098.

Fan Assembly for 50 Cycle

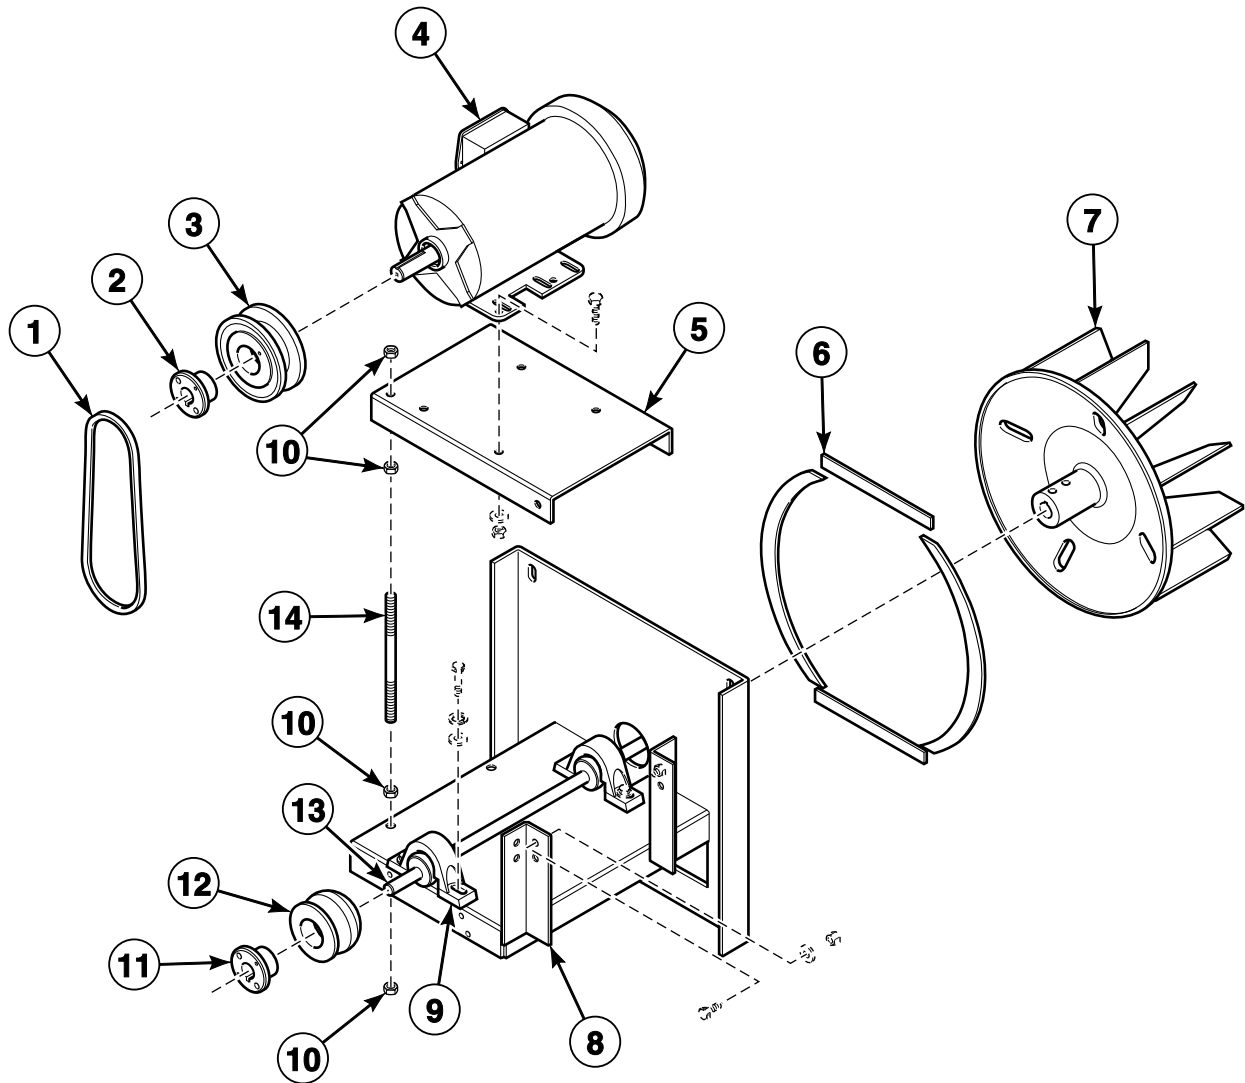


TMB2422P_D0907

Fan Assembly for 50 Cycle

REF	PART NO.	DESCRIPTION	COMMENTS
1	TU3393	Belt	V
2	TU3807	Sheave Bushing	3/4 inch
3	TU2008	Sheave	46H
4	MTR100	Motor	1 1/2 hp; 600 Volt/60 Hertz/3 Phase
	MTR302P	Motor	1/2 hp; 240/480 Volt/60 Hertz/3 Phase
	MTR304P	Motor	1 1/2 hp; 220/380/415 Volt/50 Hertz/3 Phase
5	TU4706	Motor Mount Plate	
6	TU2473P	Motor Mount Gasket	Self-sticking; 2 sets required
7	TU6086	Fan	Steam and electric
	TU403	Fan	Gas
8	TU5659	Motor Mount	
9	TU16035P	Collar Lock Bearing	3/4 inch
10	TU4787	Nut	3/8 - 16; Hex head
11	F280214	Motor Bushing	7/8 inch
12	TU2009	Sheave	39H
13	TU1693	Jack Shaft	3/4 inch
14	TU1950	Motor Support Rod	

NOTE: Grease can be applied to all bearing shafts, 42-032-6015 grease Lubriplate 310, 1 pound cans OR 14 1/2 ounce tubes - Lubriplate no. 930-2, multi-purpose grease 10098.

Thermostat Assembly - 2 Timer

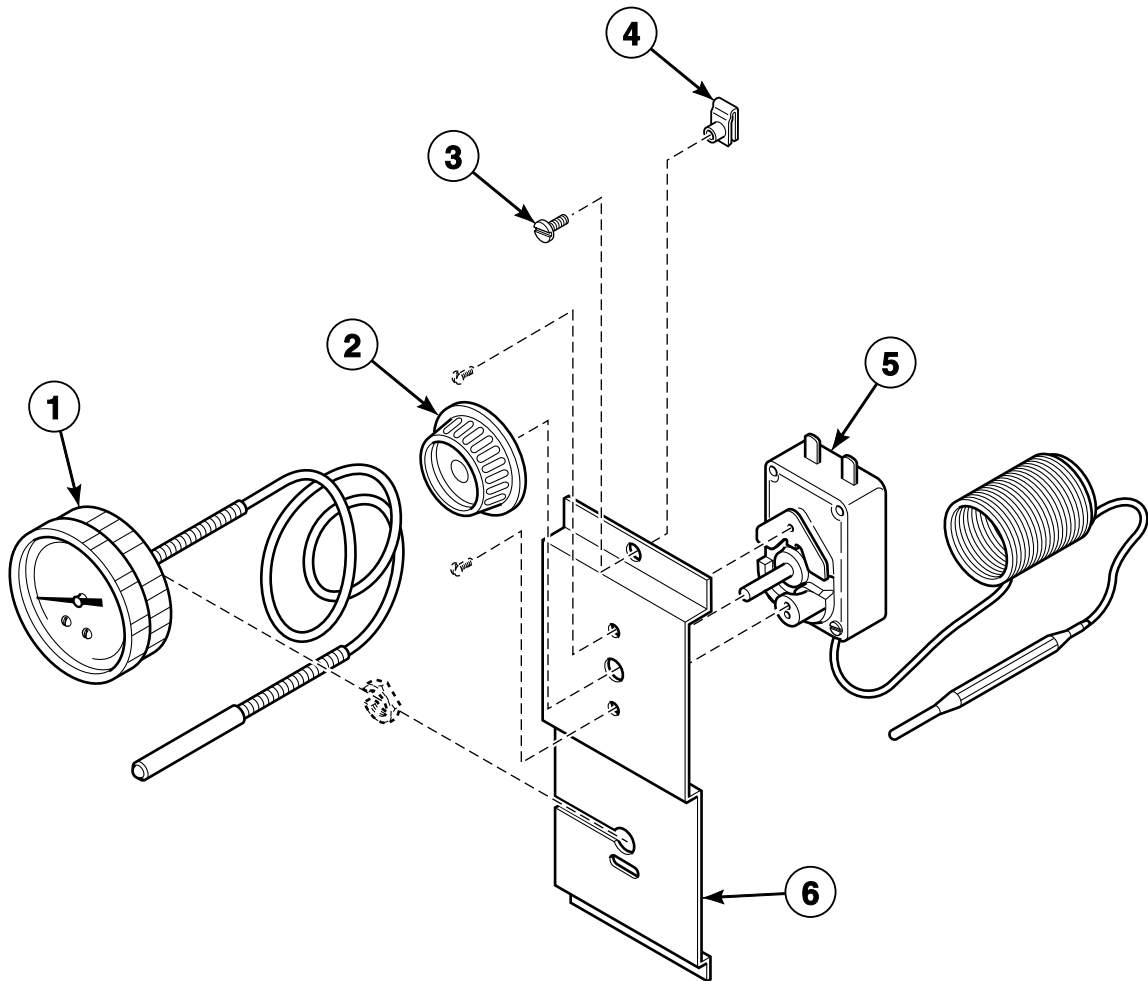


TMB2425P_D0907

Thermostat Assembly - 2 Timer

REF	PART NO.	DESCRIPTION	COMMENTS
	TU6030	Temperature Control Assembly	
1	TU3593	Thermometer	
	TU3816	Lens	Texas Gage
	N/A	Thermometer Lens	Marshalltown Inst.
	N/A	Thermometer Lens	Weiss - consult factory
	TU13213	Lens	Weiss - consult factory
2	TU490	Thermostat Knob	Fahrenheit
	TU491	Thermostat Knob	Centigrade
3	TU3209	Screw	No. 14 x 5/8 inch; Sheet metal
4	TU7848	Nut	No. 14; Tinnerman clip
5	TU1980P	Thermostat	
6	TU5530	Mounting Bracket	

N/A = Part no longer available

2 Timer Sensor Assembly

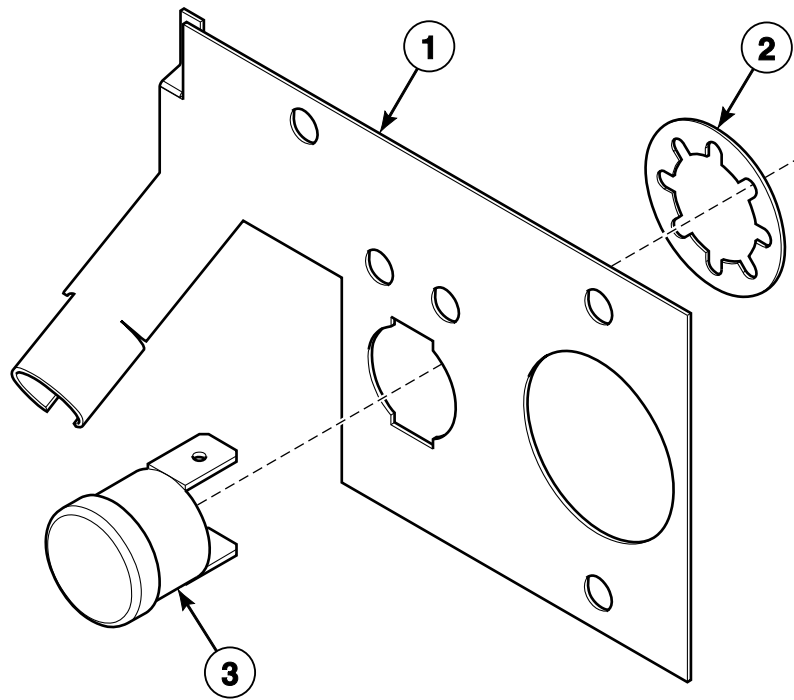


TMB2429P_D0907

2 Timer Sensor Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	TU6029	Thermostat Assembly	Includes bracket assembly
1	TU2486	Thermostat Mounting Bracket	
2	TU3801	Nut	C18784-010-4; Speed
3	TU2477	Thermostat	AR594

DMP Sensor Assembly

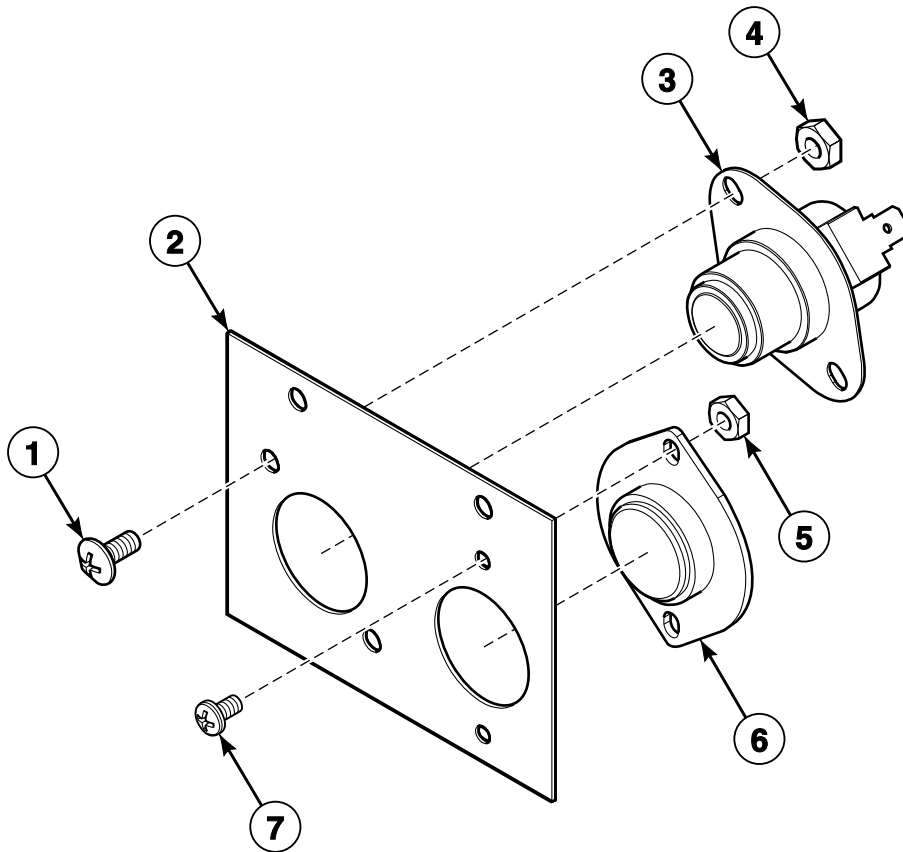


TMB2428P_D0907

DMP Sensor Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	TU15538	Thermostat and Bracket Assembly	DMP
1	M262	Screw	No. 8-32
2	TU15537	Thermostat Bracket	
3	EA-00411-0	Temperature Switch	220 degrees
4	TU3266	Nut	No. 8-32; Hex; Brass
5	TU3400	Nut	No. 6-32; Hex; Brass
6	TU11991K	Thermistor Kit	
7	M400072	Screw	No. 6-32

Pro Sensor Assembly

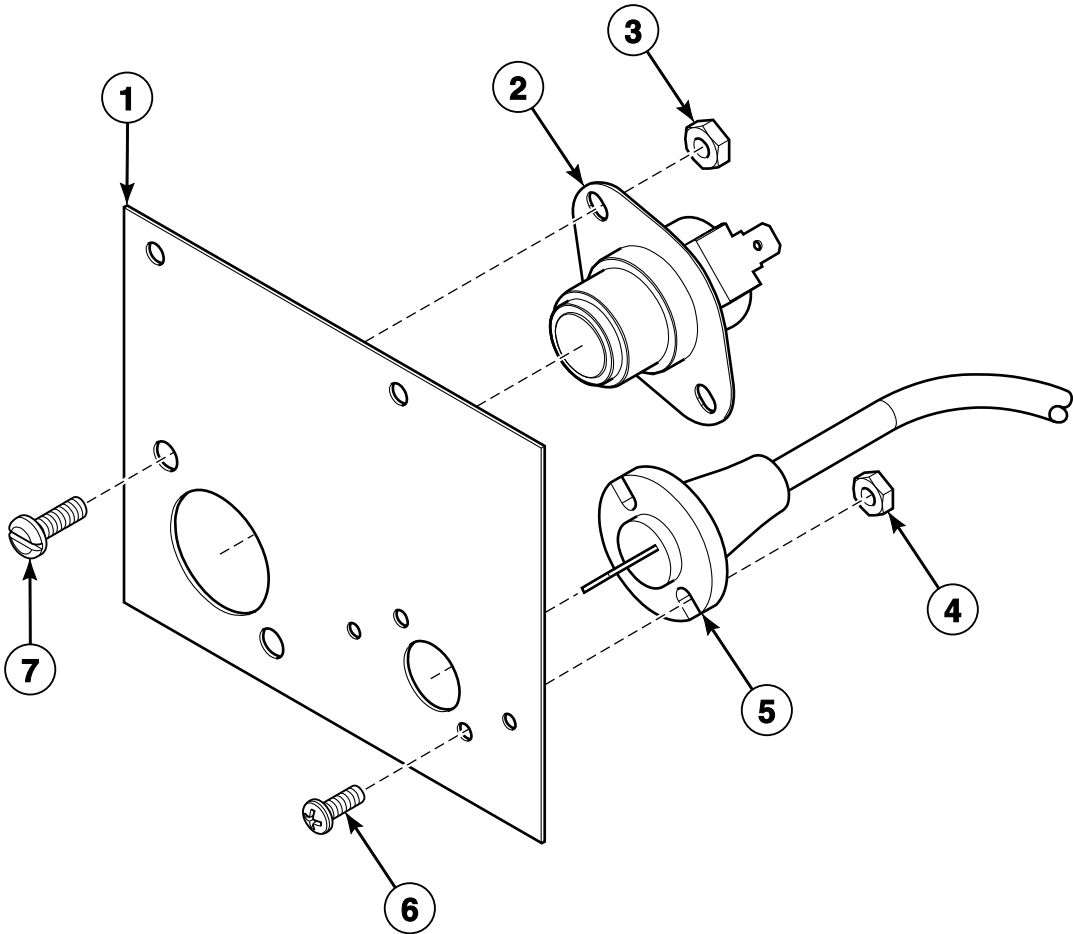


TMB2430P_D0907

Pro Sensor Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
1	N/A	Thermostat	
2	EA-00411-0	Temperature Switch	220 degrees
3	TU3266	Nut	No. 8-32; Hex
4	TU3400	Nut	No. 6-32; Hex
5	254/00072/10	Temperature Sensor	
6	SB-00952-0	Screw	No. 6-32 x 3/8; Pan head
7	SB-00828-0	Screw	No. 8-32 x 1/2; Machine pan head

N/A = Part no longer available

ProHC Sensor Assembly - Upper Assembly

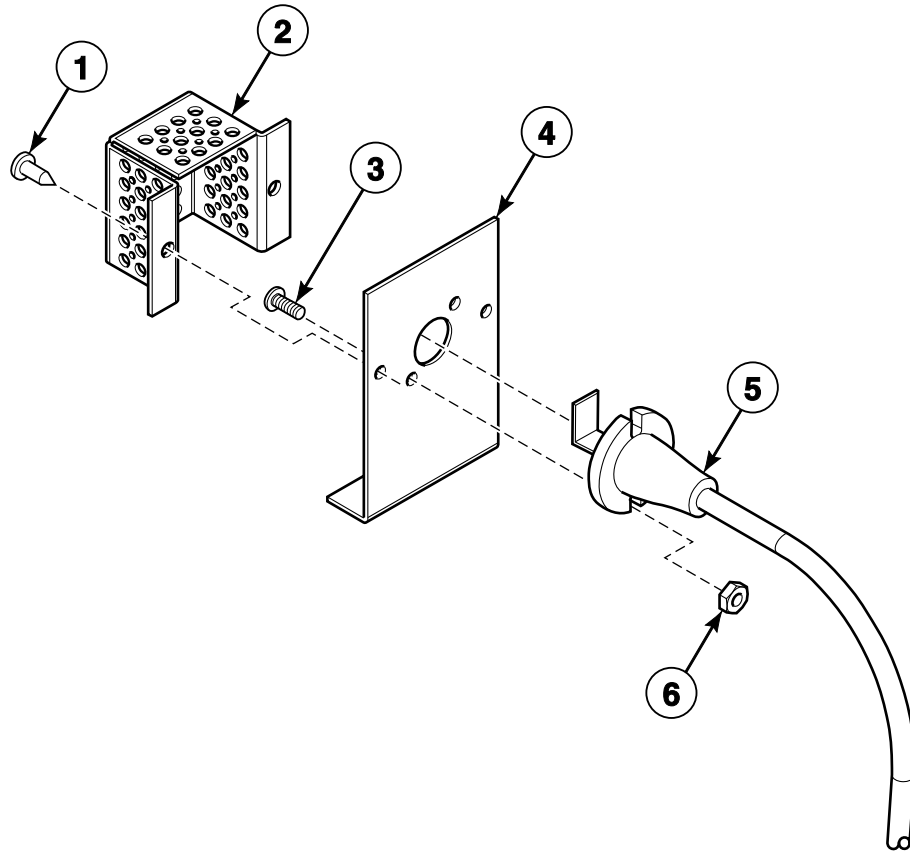


TMB2431P_D0907

ProHC Sensor Assembly - Upper Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	TU14724	ProHC Upper Sensor Assembly	
1	TU7733	Screw	No. 8-18 x 1/2 inch; Self-drilling
2	TU14694	Probe Cover Plate	
3	SB-00952-0	Screw	No. 6-32 x 3/8 inch
4	TU14693	Upper Probe Mounting Plate	
5	254/00071/10	Temperature and Humidity Sensor	
6	TU3400	Nut	No. 6-32

ProHC Sensor Assembly - Lower Assembly

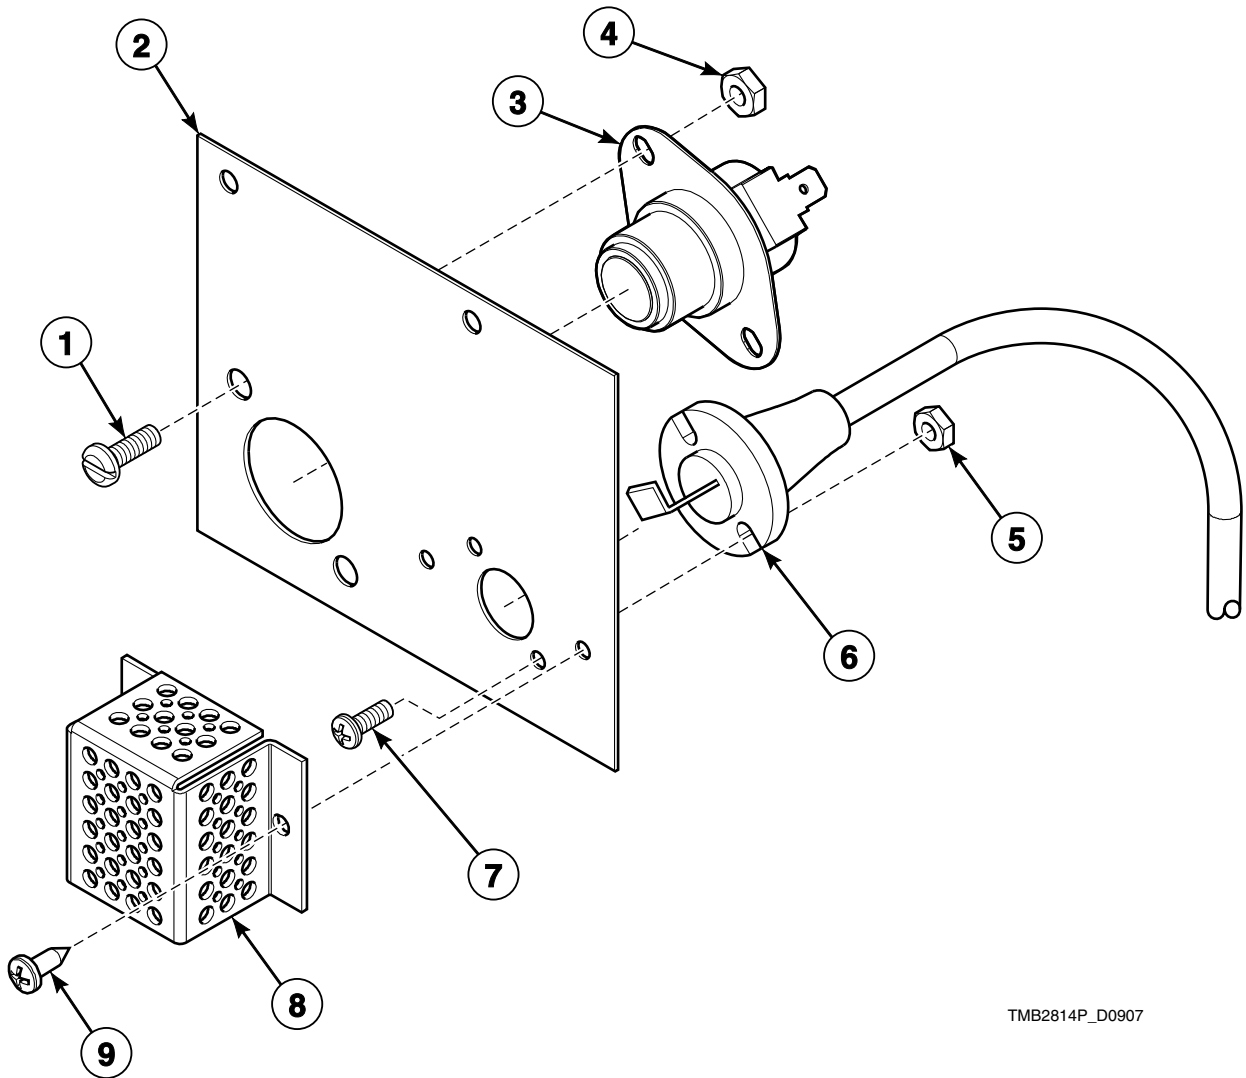


TMB2814P_D0907

ProHC Sensor Assembly - Lower Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	TU14723	Lower Sensor Assembly	ProHC
1	SB-00828-0	Screw	No. 8-32 x 1/2 inch; Machine
2	CA-13067-0	Sensor Bracket	Sensor
3	EA-00411-0	Temperature Switch	220 degrees
4	TU3266	Nut	No. 8-32; Hex; Brass
5	TU3400	Nut	No. 6-32; Hex; Brass
6	254/00071/10	Temperature and Humidity Sensor	
7	SB-00952-0	Screw	No. 6-32 x 3/8 inch
8	TU14694	Probe Cover Plate	
9	TU7733	Screw	No. 8-18 x 1/2 inch; Self-drilling

Gas Bonnet Assembly

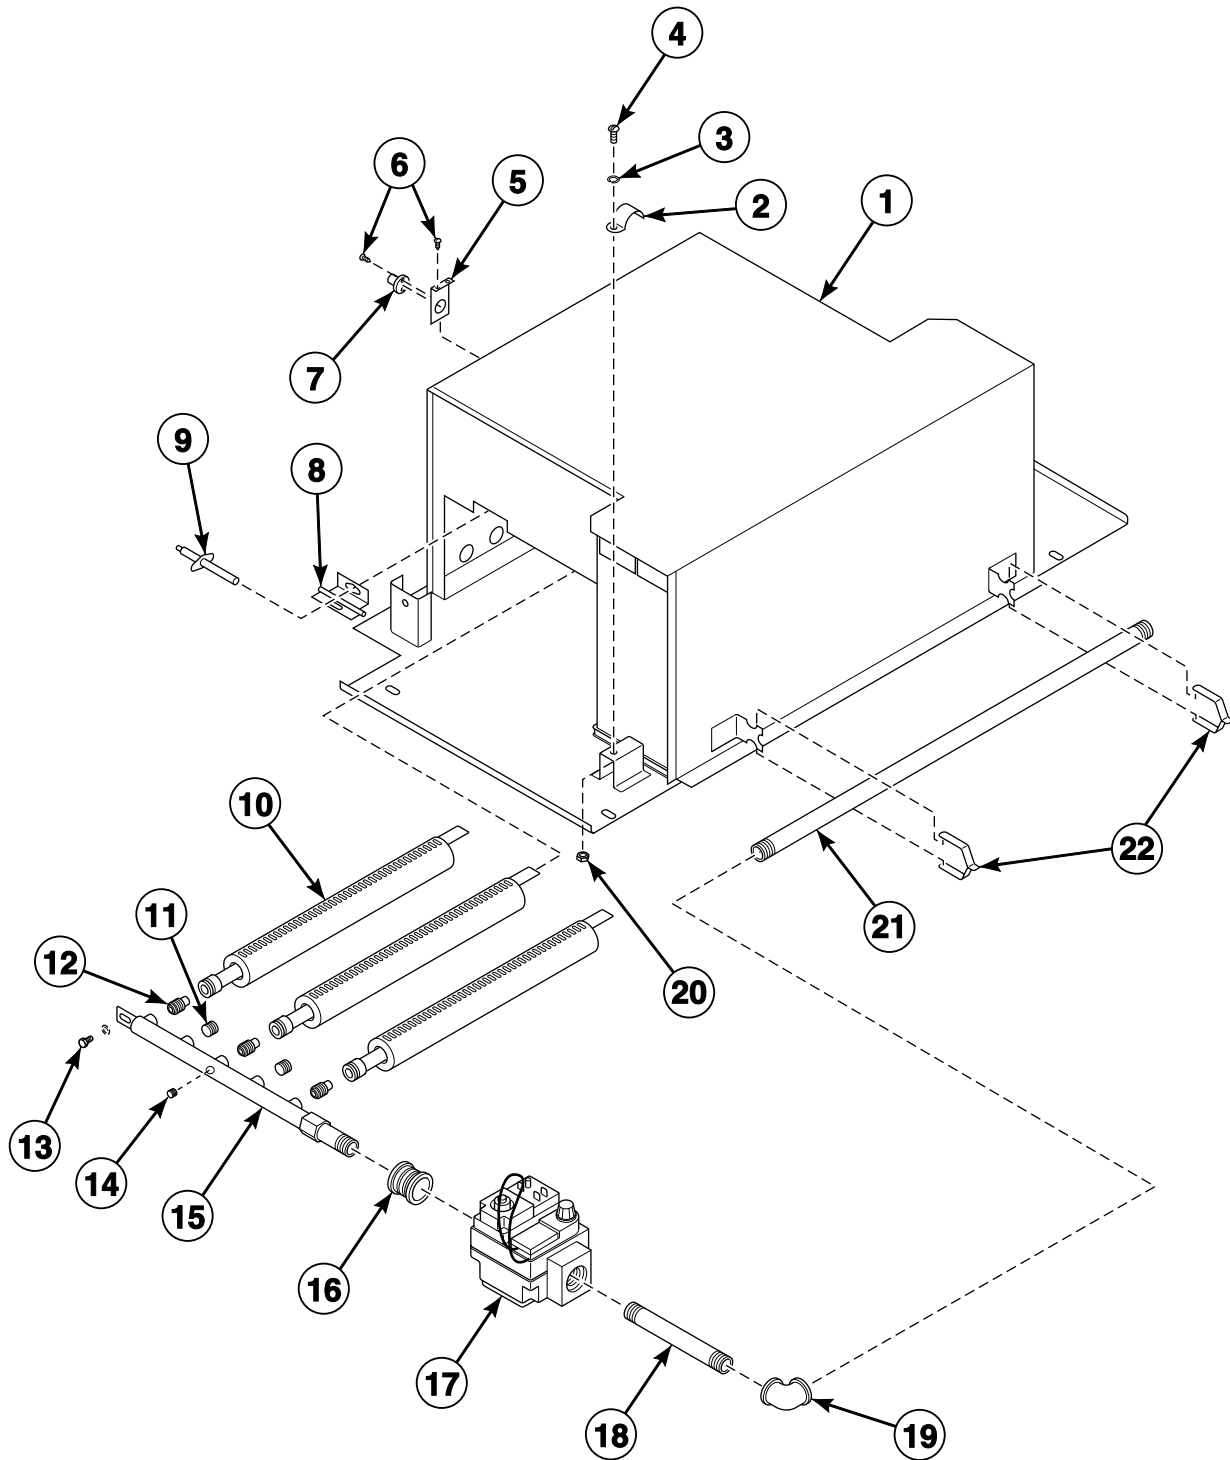


TMB2821P_D0907

Gas Bonnet Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	GA-00765-0P	Ignition Module	RAM III; 60 Hertz
	GA-11007-0P	Ignition Module	50 Hertz
	GA-00803-0	Suppression Lead	
1	TU13613	Bonnet	Natural Gas (N.G.)
2	PT196	Strap	3/4 inch
3	03189	Washer	1/4 inch; Lock; Package of 6
4	RC344	Screw	1/4 inch - 20 x 3/4 inch; Hex head
5	TU13695	Bonnet Thermostat Mounting Bracket	
6	TU7733	Screw	No. 8-18 x 1/2 inch; Self-drilling; Package of 6
7	TU13678	Thermostat	Manual reset; 300 degrees
8	TU13647	Mounting Bracket	
9	GA-00764-0P	Electrode	Direct spark ignition
10	TUX387	Burner Weldment Assembly	
11	TU10946	Pipe Plug	
12	TU3539	Burner Orifice	
13	02422	Screw	1/4 inch - 20 x 1/2 inch; Hex head
14	TU2224	Pipe Plug	1/8 inch
15	TU9614	Gas Manifold	
16	OP267	Bushing	3/4 inch x 1/2 inch; Steel
17	TUX352P	Gas Valve	N.G.; 3/4 inch
	TUX435	Gas Valve	Liquid petroleum gas (L.P.); 3/4 inch
18	TU4606	Nipple	3/4 inch x 4 inch
19	TU4605	Elbow	3/4 inch
20	20275	Nut	1/4 inch - 20; Hex; Package of 6
21	TU13823	Nipple	3/4 inch x 36 inch
22	TU2226	Manifold Mounting Bracket Assembly	

Electric Bonnet

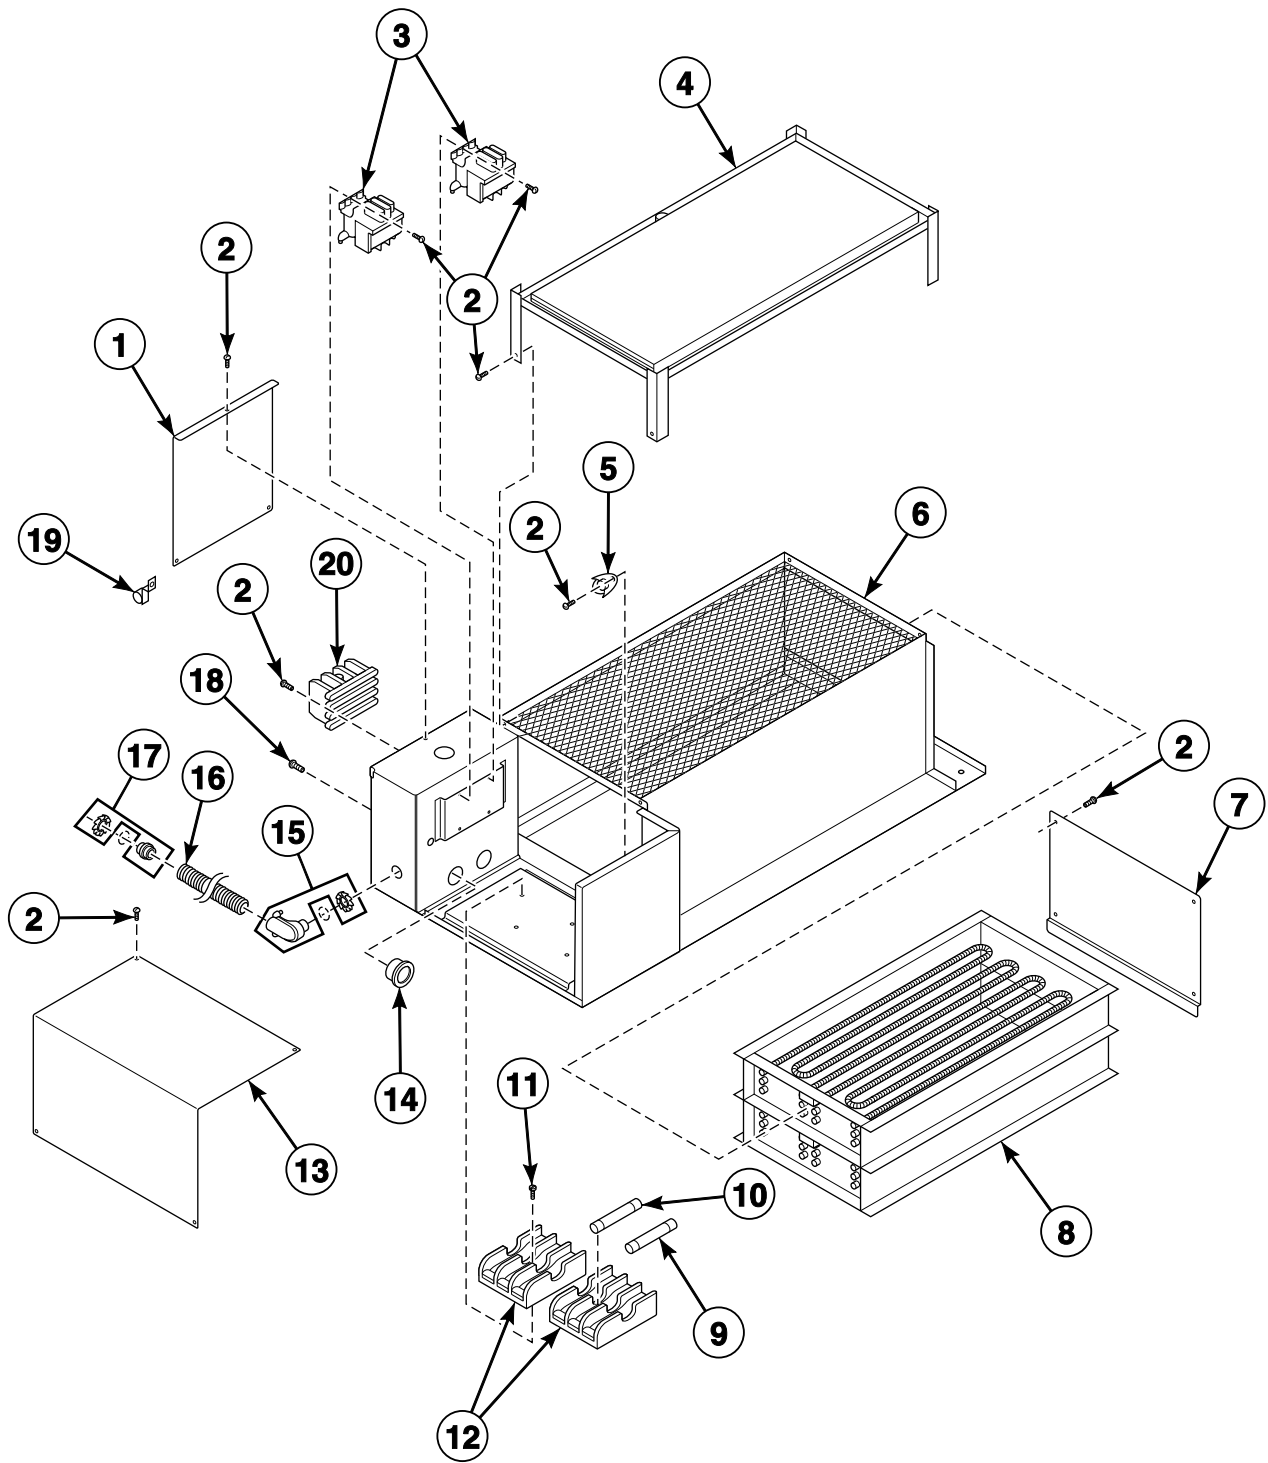

TMB2443P_D0907


Electric Bonnet

REF	PART NO.	DESCRIPTION	COMMENTS
1	N/A	Terminal Cover	
2	TU7733	Screw	No. 8 x 1/2 inch; Package of 6
3	TU14684P	Contactor	4 required for 208 Volt/60 Hertz/3 Phase, 240 Volt/50 or 60 Hertz/3 Phase and 380-415 Volt/50 Hertz/3Phase models
	TU13521P	Contactor	1 required for 480 Volt/60 Hertz/3 Phase and 575 Volt/60 Hertz/3 Phase models
4	TU7113	Bonnet Top Weldment Assembly	
5	TU13678	Thermostat	300 degrees Fahrenheit
6	N/A	Bonnet Weldment	
7	N/A	Front Cover	
8	HE11160	Electric Heater Element	40 kW, 287 Volt element; 2 required for 575 Volt/60 Hertz/3 Phase models
	HE10810P	Electric Heater Element	40 kW, 240 Volt element; 2 required for 240 Volt/50 or 60 Hertz/3 Phase, 380-415 Volt/50 Hertz/3 Phase and 480 Volt/60 Hertz/3 Phase models
	HE10610P	Electric Heater Element	40 kW, 208 Volt element; 2 required for 208 Volt/60 Hertz/3 Phase models
9	N/A	Fuse	Motor and controls; 3 required
10	TU7224	Fuse	12 required for 208 Volt/60 Hertz/3 Phase models
	TU7223	Fuse	12 required for 240 Volt/50 or 60 Hertz/3 Phase and 6 required for 380-415 Volt/50 Hertz/3 Phase models
	TU7071	Fuse	6 required for 480 Volt/60 Hertz/3 Phase and 575 Volt/60 Hertz/3 Phase models
11	TU2793	Screw	No. 8 x 5/8 inch; Package of 6
12	TU11096	Fuse Holder	4 required for 208 Volt/60 Hertz/3 Phase, 240 Volt/50 or 60 Hertz/3 Phase and 380-415 Volt/50 Hertz/3 Phase models
	TU9141	Fuse Holder	2 required for 480 Volt/60 Hertz/3 Phase and 575 Volt/60 Hertz/3 Phase models
	TU8200	Fuse Holder	1 required for all models
13	TU9909	Rear Cover	
14	TU5958	Snap Bushing	
15	TU4791	Angle Connector	90 degree
16	N/A	Cable	1/2 inch; 15 inch long
17	TU4790	Connector	
18	02422	Screw	1/4 inch - 20 x 1/2 inch; Package of 6
19	N/A	Grounding Lug	
20	TU8734	Terminal Block	1 required for all models
	N/A	Terminal Block	380-415 Volt/50 Hertz/3 Phase models

N/A = Part no longer available

NOTE: For heater element ratings, amperage and fuse size refer to installation manual.

Steam Bonnet Assembly

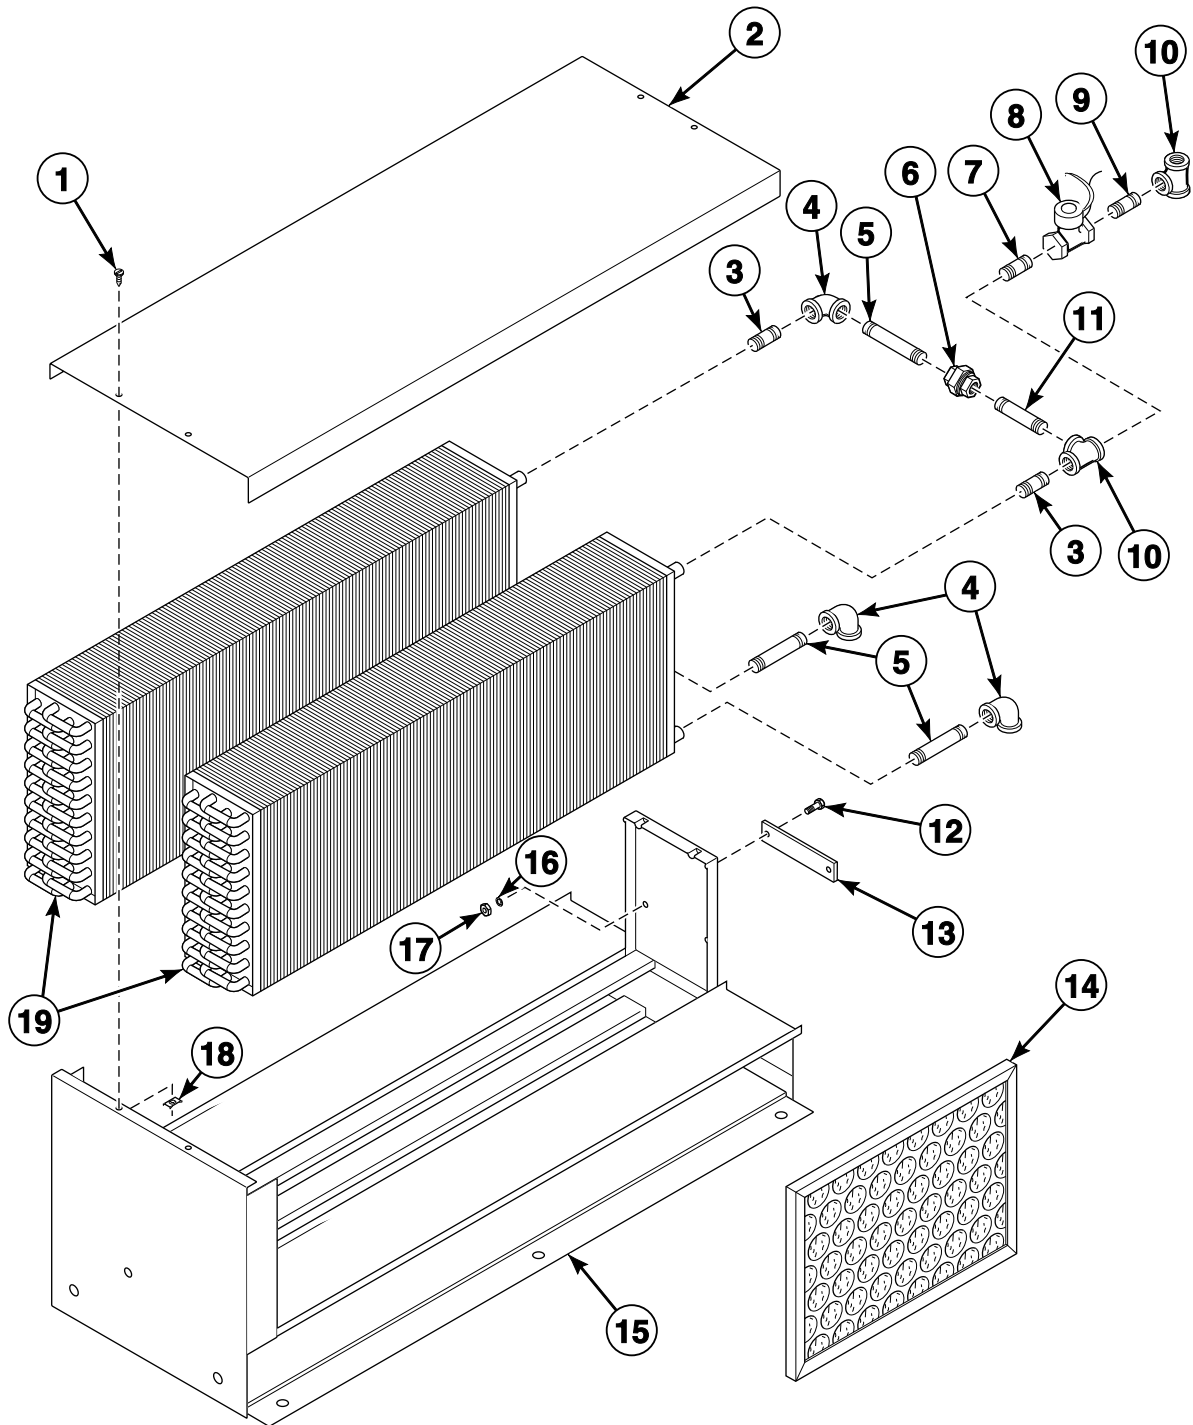

TMB2815P_D0907

Steam Bonnet Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	N/A	Steam Bonnet	9 coil
1	TU3209	Screw	No. 14 x 5/8 inch; Sheet metal; Package of 6
2	TU7393	Top Plate	
3	M411417	Pipe Nipple	3/4 inch x 2 inch
4	TU4605	Elbow	3/4 inch
5	H85101673	Pipe Nipple	3/4 inch x 5 inch
6	M411419	Pipe Union	3/4 inch
7	TU5914	Nipple	3/4 inch x 3 1/2 inch
8	TU13517P	Steam Solenoid Valve	24 Volt
9	H85101608	Nipple	3/4 inch x close
10	TU4597	Tee	3/4 inch
11	TU4620	Nipple	3/4 inch x 4 1/2 inch
12	FB189	Screw	1/4 inch - 20 x 1 inch; Hex head
13	TU5726	Rear Coil Holder Bar	
14	TU6080	Air Filter	4 required
15	TU8083	Bonnet Weldment Assembly	
16	03189	Washer	1/4 inch; Lock; Package of 6
17	20275	Nut	1/4 inch - 20 x 7/16 inch; Hex; Package of 6
18	LB74	Nut	No. 14; Speed
19	TU13936P	Coil	14 FPI

N/A = Part no longer available

This image shows a full page of blank white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page, providing a template for writing or drawing. There are no margins, text, or other markings present.

Parts Index

A

Actuator Arm	
TU2463	21
Adjustment Rod Weldment	
TUX575	19
Air Filter	
TU6080	49
Air Switch Cover	
TUX415	19, 25
Air Switch Insulator	
TU1770	21
Air Switch Kit	
TU8206	19, 21, 25
Air Switch Mounting Bracket	
TU8171	21
Angle Connector	
TU4791	25, 47

B

Basket	
TUS6469	13
TU6469	13
Basket and Spider Assembly	
TUS5803	13
Basket Assembly Kit	
K421	13
Basket Motor Mount	
TU4626	25
Basket Shaft Cover	
TU7517	25
Basket Sheave	
TUX602	19
Belt	
TU16086	19
TU16091	19
TU2363	25
TU3393	31
Belt Adjusting Rod	
TU5328	25
Belt Guard Weldment Assembly	
TU9615	25
Bonnet	
TU13613	45
Bonnet Thermostat Mounting Bracket	
TU13695	45
Bonnet Top Weldment Assembly	
TU7113	47
Bonnet Weldment Assembly	
TU8083	49
Burner Access Door Weld Assembly	
TU14629WHTP	15
Burner Orifice	
TU3539	45
Burner Weldment Assembly	
TUX387	45

Bushing	
OP267	45
TU2833	25
Button Plug	
TU15724	5, 7, 9
Buzzer	
TU14137	7

C

Cable	
CFB1300	25
CFB2500	25
CFB3000	25
Clean Lint Screen Label	
TU15410	17
Coil	
TU13936P	49
Collar Lock Bearing	
TU16035P	31
Connector	
TU4790	47
Contactora	
TU13516P	23
TU13521P	47
TU14684P	47
Control Board	
254/00067/00	5
254/00070/00P	9
Control Cover Assembly	
TU14442WHT	9
Control Door Gasket	
CA-13098-0	15
Control Label	
254/00018/00	9
Control Panel Cover Plate	
TU14727WHT	9
Control Panel Weldment Assembly	
TU15406WHT	5
Controller	
TU14404P	7

D

Decal	
TU14662	15
DMP Control Panel Weldment Assembly	
TU14469WHT	7
Door Basket	
TU14467WHT	11
Door Gasket	
TU15966	11
Door Glass	
TU15107P	11
Door Latch	
TUA2319H	11
Door Latch Spacer	
TU5503	11

N/A items do not appear in index.

Door Seal	
TU5288P	11

E

Elbow	
TU4605	45, 49
Electric Heater Element	
HE10610P	47
HE10810P	47
HE11160	47
Electrode	
GA-00764-0P	45
Emergency Stop Button Kit	
TU14435	5, 7, 9
E-Ring	
F888	21

F

Fan	
TU403	29, 31
TU6086	31
Front Panel Assembly	
TU15454WHT	11
Front Panel Cover Plate	
TU15525WHT	11
Front Panel Weldment Assembly	
TU15453WHT	11
Fuse	
TU7071	47
TU7223	47
TU7224	47
Fuse Holder	
TU11096	47
TU8200	47
TU9141	47

G

Gas Manifold	
TU9614	45
Gas Valve	
TUX352P	45
TUX435	45
Gasket	
TU108	29
Gasket Kit	
K118	13
Gear Motor Assembly	
TU16078P	19
Gear Reducer	
TM200P	25

H

Hinge Bushing	
PIF172	11
Hinge Post	
TU2236	11

N/A items do not appear in index.

I

Ignition Module	
GA-00765-0P	45
GA-11007-0P	45
Induction Fan	
TUX220	29

J

Jack Shaft	
TU1693	31
Junction Box	
500300644	25
Junction Box Cover	
SB170	25

K

Key	
TUX454	13
TU14057	25, 29
TU9975	13
Kickplate	
TU14639	17
Kickplate Fastener	
SB-00949-0	17

L

Label	
TU3476	21
Large Bearing Cone and Cup	
TM217	27
Large End Cap	
TM211	27
Large Klosure	
TM220	27
LED Light Assembly	
TUT316	5
Lens	
TU13213	33
TU3816	33
Lint Door Handle	
TU14636	17
Lint Door Switch	
EA-11621-0	13
Lint Door Weldment Assembly	
TU14635WHTP	17
Lint Screen Housing	
TU10345	13
Lint Screen Replacement Parts Kit	
K368	13
Lint Trap Frame Kit	
K121	13
Lock Bushing	
TU6723	19
Lower Sensor Assembly	
TU14723	43

M

Manifold Mounting Bracket Assembly TU2226	45
Membrane Switch 44037901P	7
Microswitch TU14482	21
Motor MTR100	29, 31
MTR101	25
MTR302P	29, 31
MTR303P	25
MTR304P	29, 31
Motor and Fan Support TU5658	29
Motor Bushing F280214	31
Motor Control Panel Plate TU13700	23
Motor Mount TU5659	31
Motor Mount Gasket TU2473P	29, 31
Motor Mount Plate TU4706	31
Motor Support Rod TU1950	31
Mounting Bracket TU13647	45
TU5530	33

N

Nameplate, 2 Timer TU15459	5
Nipple H85101608	49
TU13823	45
TU4606	45
TU4620	49
TU5914	49
Nut LB74	49
TU1771	21
TU2881	19
TU3266	37, 39, 43
TU3400	7, 9, 37, 39, 41, 43
TU3801	35
TU3805	5
TU455	25
TU470	25
TU4787	25, 29, 31
TU7848	33
20275	25, 45, 49
70142	25, 29

O

Oil Level Kit K474	27
-----------------------------	----

Operating Touchpad 254/00039/00	9
Overload TU15962	23
TU16101	23

P

Pillow Block Bearing TU16016	19
Pipe Nipple H85101673	49
M411417	49
Pipe Plug TM221	27
TU10946	45
TU2224	45
Pipe Union M411419	49
Probe Cover Plate TU14694	41, 43
Pulley TU16087	19
Pushbutton Switch TU9028	5

R

Rear Coil Holder Bar TU5726	49
Rear Cover TU9909	47
Rear Guard Cover Plate TU14092	25
Reed Switch Assembly ESA-00862-0P	11
Relay F1300P	5
Reversing Contactor EA-00685-0P	23
Reversing Timer TU12874P	5
Rotation Sensor 70274001P	19
Rub Rail Trim TU14637	17

S

Screw ET208	5
FB189	25, 49
FR244	19
H88012034	25
IB139	27
JA-51604	11
M261	9
M262	37
M400057	25, 29
M400072	37
M405188	17

N/A items do not appear in index.

RC344	45
SB-00828-0	39, 43
SB-00951-0	15
SB-00952-0	39, 41, 43
SB-00975-0	11
TU15926	19
TU2195	25
TU2687	11
TU2793	47
TU2836	11
TU3209	11, 33, 49
TU3219	21
TU3246	27
TU5312	25, 27
TU7733	5, 11, 21, 23, 25, 41, 43, 45, 47
02422	45, 47
503661	19
Sensor Assembly	
TU14724	41
Sensor Bracket	
CA-13067-0	43
Sheave	
TUX222	19
TU2008	31
TU2009	31
TU2832	25
TU3806	25
TU6081	25
Sheave Bushing	
TU3807	25, 31
Small Bearing Cone and Cup	
TM208	27
Small End Cap	
TM212	27
Small Klosure	
TM204P	27
Small Open End Cap	
TM205	27
Snap Bushing	
TU2372	19, 25
TU5958	47
Spider	
TU16026	13
Spider Kit	
K109	13
Steam Solenoid Valve	
TU13517P	49
Strap	
PT196	45
Support Arm Rod	
TU5739	15
Suppression Lead	
GA-00803-0	45
Surge Suppressor	
TU14825	23

T

Tee	
TU4597	49
Temperature and Humidity Sensor	
254/00071/10	41, 43
Temperature Control Assembly	
TU6030	33

N/A items do not appear in index.

Temperature Nameplate	
TU5458	11
Temperature Sensor	
254/00072/10	39
Temperature Switch	
EA-00411-0	37, 39, 43
Terminal Block	
TU8734	47
Terminal Board	
TU8629	5
Thermistor Kit	
TU11991K	37
Thermometer	
TU3593	33
Thermometer Gasket	
TU2641	11
Thermostat	
TU13678	45, 47
TU1980P	33
TU2477	35
Thermostat and Bracket Assembly	
TU15538	37
Thermostat Assembly	
TU6029	35
Thermostat Bracket	
TU15537	37
Thermostat Knob	
TU490	33
TU491	33
Thermostat Mounting Bracket	
TU2486	35
Timer	
TU12932P	5
TU12933P	5
Toggle Switch	
FG147P	5
Top Plate	
TU7393	49
Transformer	
TU13802P	23
Transmission Oil	
27243P	27
Trigger Lock Latch	
LA-00123-0P	17

U

Upper Probe Mounting Plate	
TU14693	41

W

Washer	
F431106	11
M270	7, 9
M400013	25, 29
M400081	19
TUX329	19
TU1851	25
TU2831	25, 29
TU2847	25
TU3418	19

TU3575	25
TU4820	19
TU6633	25
VSB134	19, 27
03189	25, 45, 49
202010	11
Worm and Gear Kit	
TM225P	27

[illegible]