 


Flatwork Finisher

Refer to Page 3 for Model Numbers

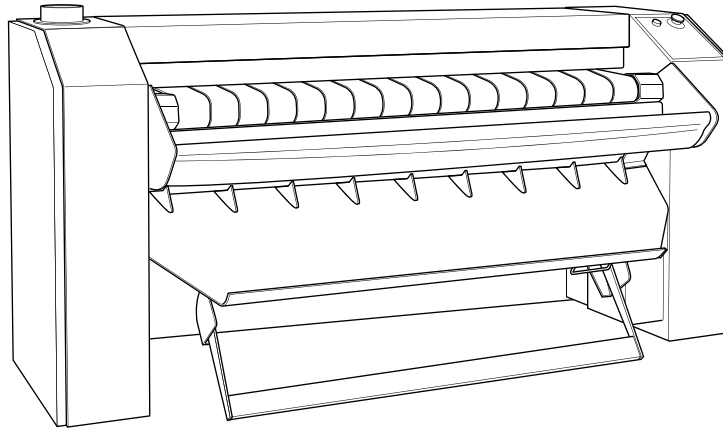

FWF7C_D0157

Table of Contents

Title	Page
Parts Ordering Information.....	2
Nameplate Location	2
Model Identification	3
Cabinet - Right Side	4
Cabinet - Left Side	6
Main Cylinder	8
Chain Tension Adjuster.....	10
Driving Rolls.....	12
Bottom Panel	14
Pressure Roll	16
Driving Chains.....	18
Exhaust Channel - Without Guiding Ribbon System	20
Exhaust Channel - With Ribbon Guidance System	22
Finger Protection Panel	24
Pedal.....	26
Temperature Detection	28
Operating Panel	30
Coin Meter - Coin Models	32
Coupling for Insert System - Coin Models	34
Motor - DI1800/6 Models	36
Motor - DI2200/6 and DI2600/6 Models.....	38
Fan.....	40
Draught Valve	42
Gas Heating System	44
Gas Valve	46
Ignition Box - Gas Models	48
Electric Heating System	50
Steam Heating System	52
Parts Index.....	55

© Copyright 2011, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Parts Ordering Information

If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.

For technical assistance, call either of the numbers listed below:

(920) 748-3121 Ripon, Wisconsin

+32 56 41 20 54 Wevelgem, Belgium

Nameplate Location

When calling or writing about your product, be sure to mention model and serial numbers.

Model Identification

 
Information in this manual is applicable to these flatwork finisher models:

DI1800/6

DI2200/6

DI2600/6

Cabinet - Right Side

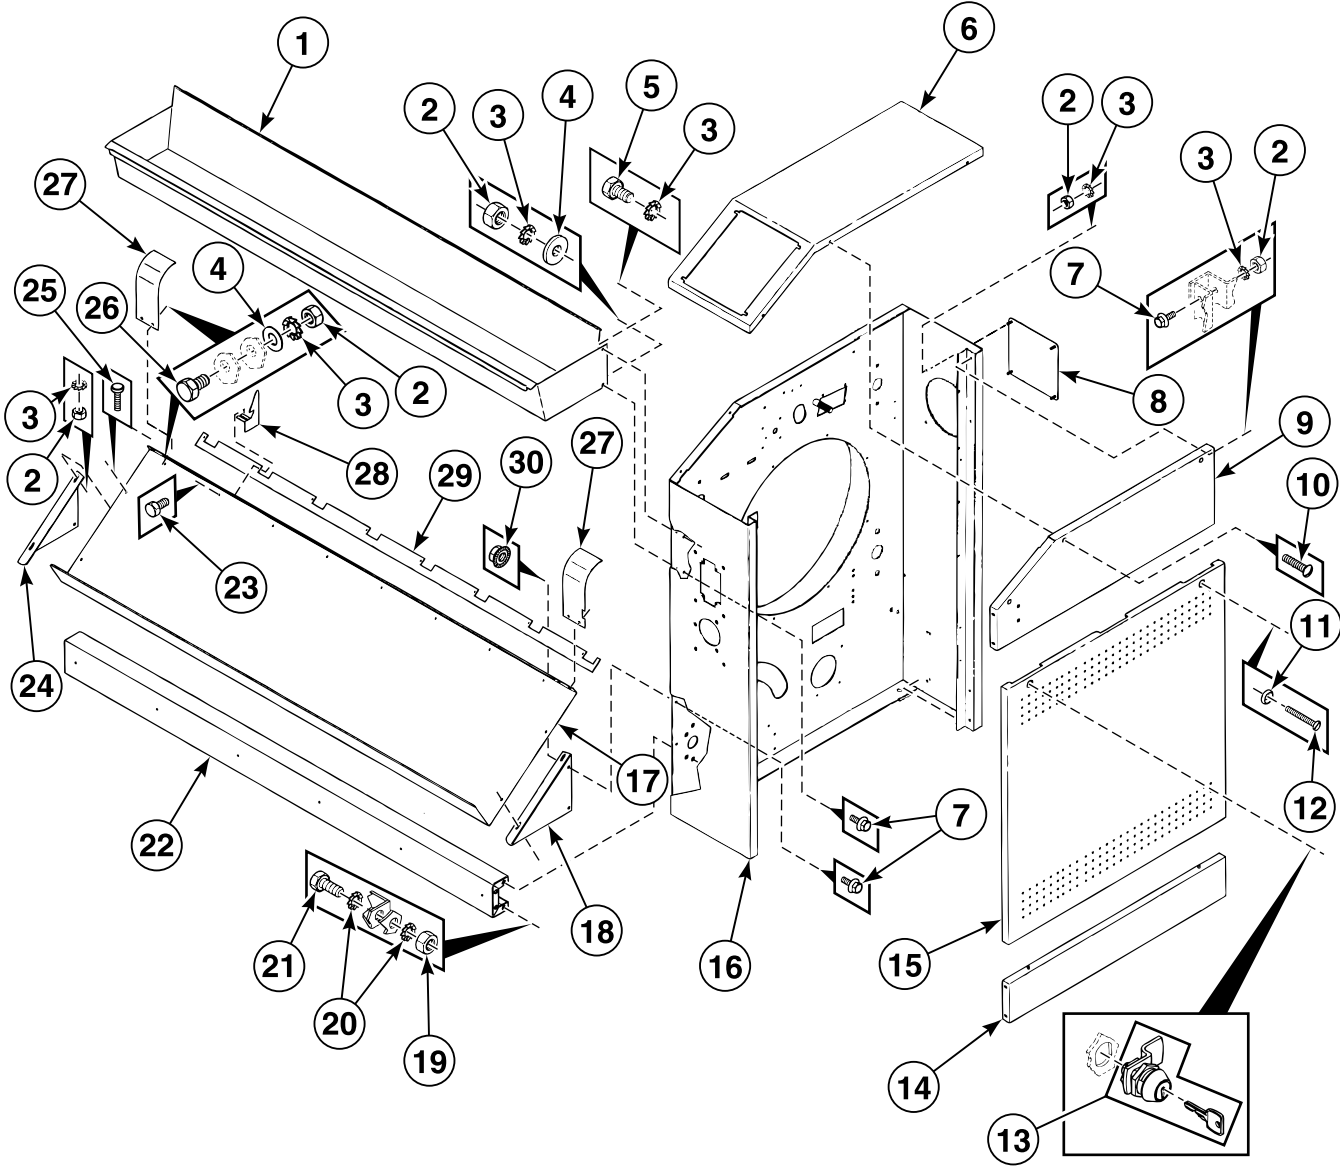


BE000073AP_D0157

Cabinet - Right Side

REF	PART NO.	DESCRIPTION	COMMENTS
1	083/10213/00	Feeding Tray	Model DI1800/6
	083/11213/00	Feeding Tray	Model DI2200/6
	083/12213/00	Feeding Tray	Model DI2600/6
2	204/00005/00	Nut	
3	203/00004/00	Washer	
4	202/00101/00	Washer	
5	206/00015/00	Bolt	
6	081/12016/00	Right Top Panel	
	081/12017/00	Right Top Panel	
7	206/00099/00	Bolt	
8	081/00002/01	Exhaust Plate	
9	081/12006/00	Connecting Piece	
10	207/00120/00	Screw	
11	208/00009/00	Washer	
12	207/00119/00	Screw	
13	720/00006/05	Lock	
14	081/12007/00	Connecting Piece	
15	081/12012/01	Side Door	
	081/12013/00	Side Door	
	081/12013/01	Side Door	
16	081/12002/00	Right Side Panel	OPL
	081/12003/00	Right Side Panel	Coin
	081/12003/01	Right Side Panel	Central Operating
17	083/10214/00	Return Feed Tray	Model DI1800/6
	083/11214/00	Return Feed Tray	Model DI2200/6
	083/12214/00	Return Feed Tray	Model DI2600/6
18	083/00216/10	Feed Tray Support	
19	204/00003/00	Nut	
20	203/00002/00	Washer	
21	206/00006/00	Bolt	
22	081/10004/00	Crossbar	Model DI1800/6
	081/11004/00	Crossbar	Model DI2200/6
	081/12004/00	Crossbar	Model DI2600/6
23	205/00113/00	Bolt	
24	083/00215/10	Feed Tray Support	
25	207/00116/00	Screw	
26	205/00107/00	Bolt	
27	083/00232/00	Roll Guide	
28	083/00218/00	Separating Plate	
29	083/00218/02	Lathe	Model DI1800/6
	083/01218/02	Lathe	Model DI2200/6
	083/12218/02	Lathe	Model DI2600/6
30	206/00101/00	Nut	

 Cabinet - Left Side

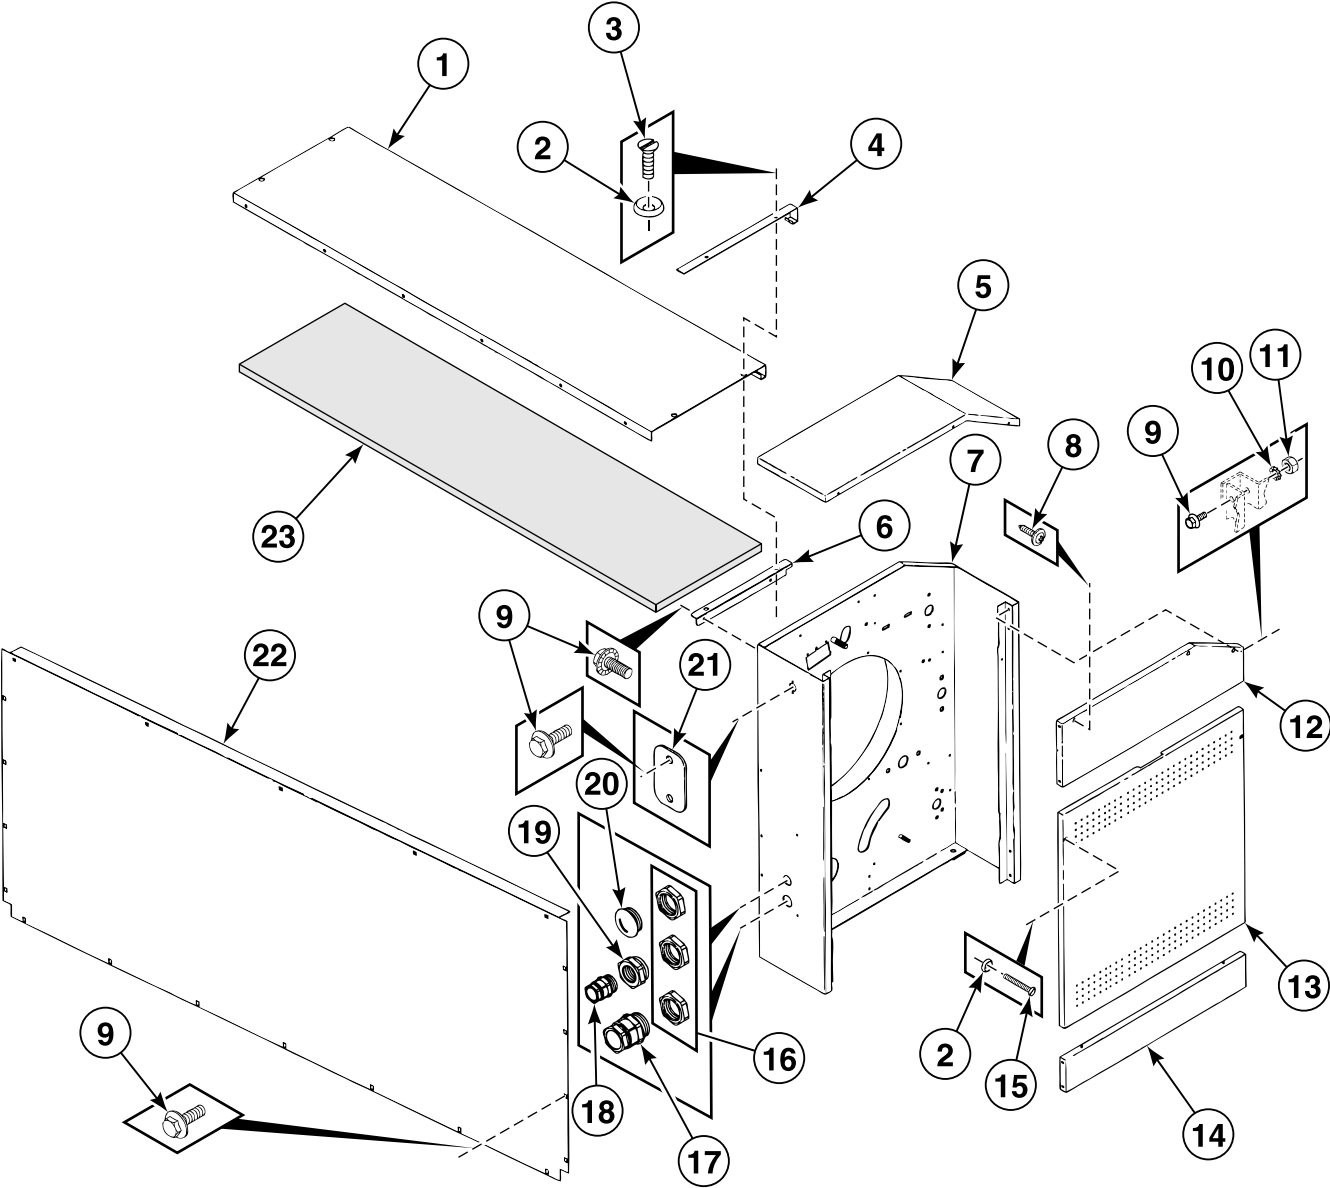


BE000074BP_D0157

Cabinet - Left Side

REF	PART NO.	DESCRIPTION	COMMENTS
1	083/10211/00	Top Panel	Model DI1800/6
	083/11211/00	Top Panel	Model DI2200/6
	083/12211/00	Top Panel	Model DI2600/6
2	208/00009/00	Washer	
3	207/00103/00	Screw	
4	083/12211/01	Lathe	
5	081/12015/00	Top Panel	
6	083/00007/00	Top Panel Support	
	083/00006/00	Top Panel Support	
7	081/12001/00	Left Side Piece	
8	207/00120/00	Screw	
9	206/00099/00	Bolt	
10	203/00004/00	Washer	
11	204/00005/00	Nut	
12	081/12005/00	Connecting Piece	
13	081/12012/00	Side Panel	
14	081/12007/00	Connecting Piece	
15	207/00119/00	Screw	
16	211/00023/01	Nut	
17	211/00138/00	Cordlock	
18	211/00123/00	Cordlock	
19	720/00096/02	Reducing Ring	
20	211/00124/00	Plug	
21	084/00021/02	Gas Plate	
22	083/10001/00	Back Panel	Model DI1800/6
	083/11001/00	Back Panel	Model DI2200/6
	083/12001/00	Back Panel	Model DI2600/6
23	083/10211/02	Gasket	Model DI1800/6
	083/11211/02	Gasket	Model DI2200/6
	083/12211/02	Gasket	Model DI2600/6

 Main Cylinder

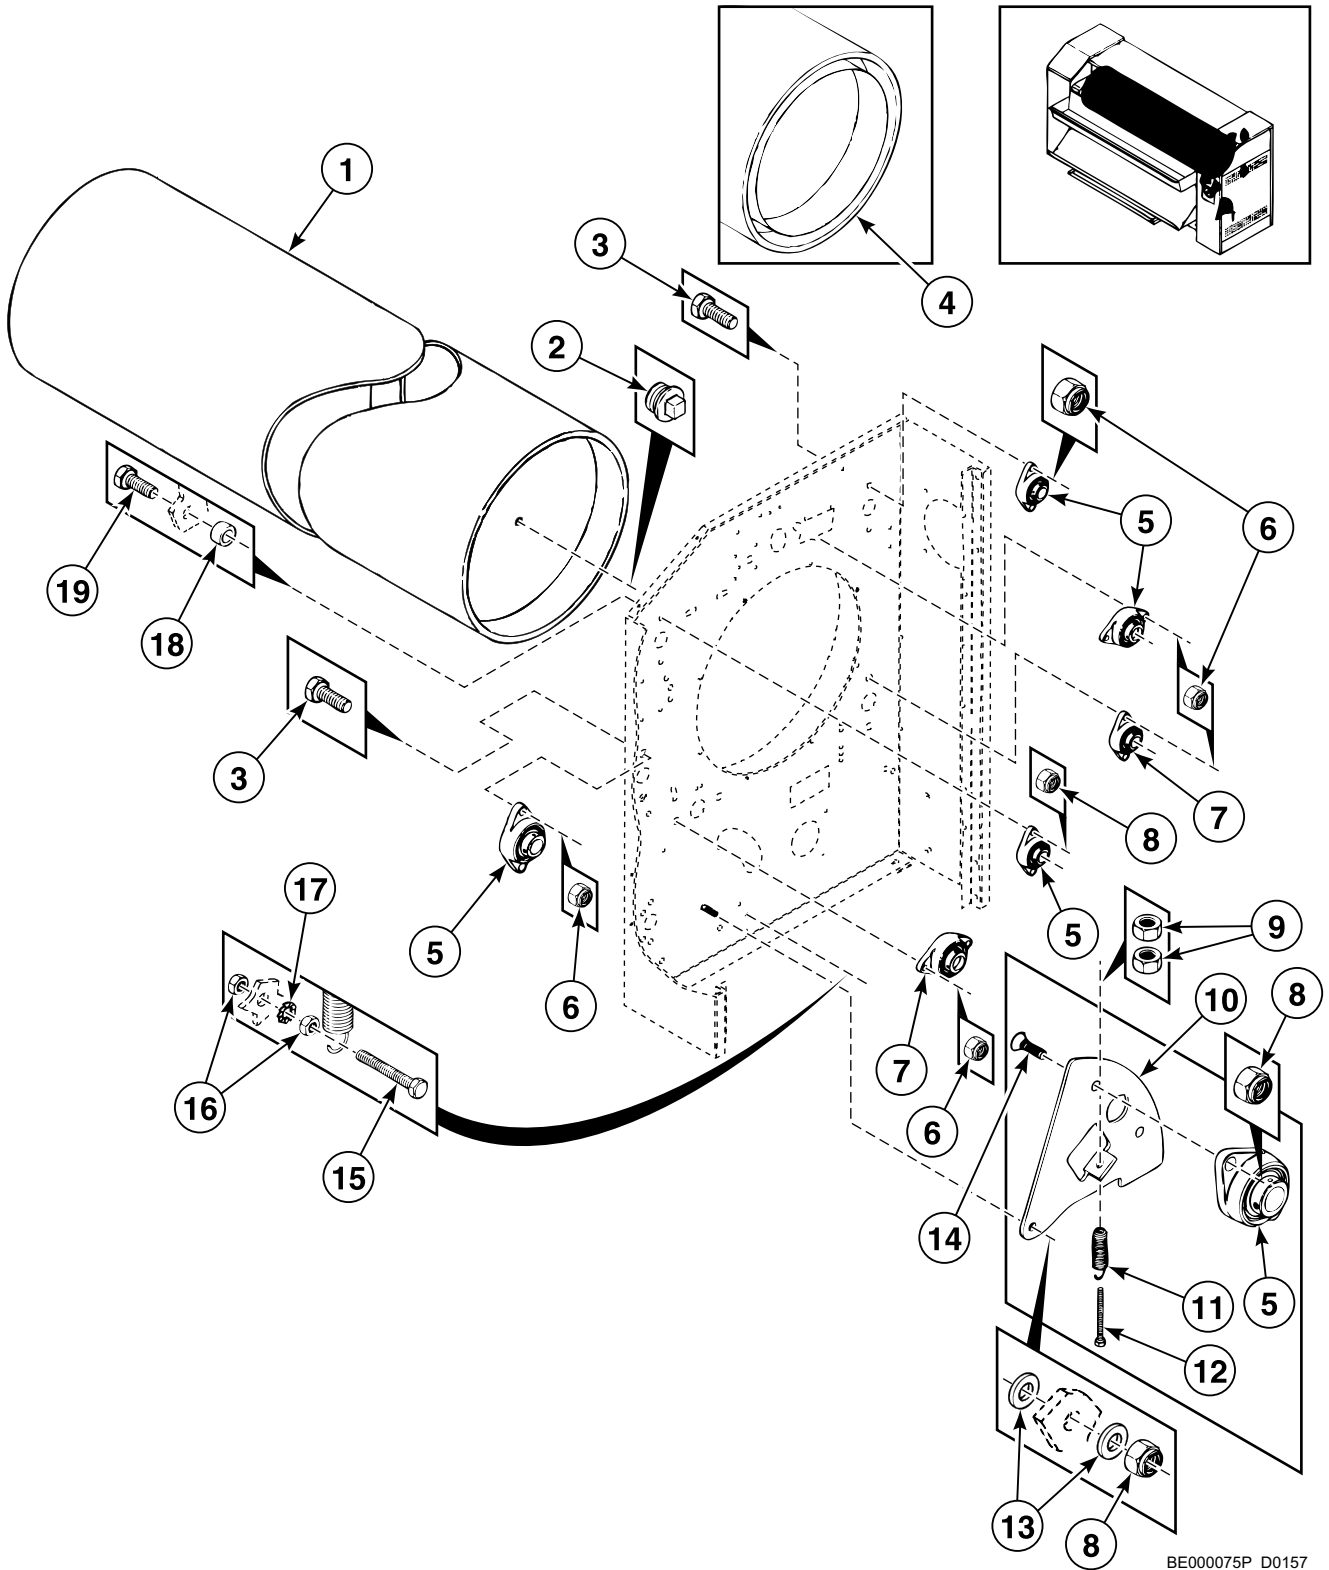


BE000075P_D0157

Main Cylinder

REF	PART NO.	DESCRIPTION	COMMENTS
1	082/10003/00	Heating Cylinder	Model DI1800/6
	082/11003/00	Heating Cylinder	Model DI2200/6
	082/12003/00	Heating Cylinder	Model DI2600/6
2	710/00026/06	Socket	
3	206/00112/00	Bolt	
4	082/10002/10	Main Roller	Model DI1800/6
	082/11002/10	Main Roller	Model DI2200/6
	082/12002/10	Main Roller	Model DI2600/6
5	084/00026/00	Ball Bearing	
6	204/00113/00	Nut	
7	084/00030/00	Ball Bearing	
8	204/00110/00	Nut	
9	204/00004/00	Nut	
10	081/12009/00	Belt Adjuster	Right
	081/12008/00	Belt Adjuster	Left
11	226/00010/00	Motor Spring	
12	206/00073/00	Bolt	
13	201/00010/00	Washer	
14	206/00118/00	Screw	
15	206/00011/00	Bolt	
16	204/00005/00	Nut	
17	203/00004/00	Washer	
18	080/00005/00	Washer	
19	206/00119/00	Bolt	

 Chain Tension Adjuster

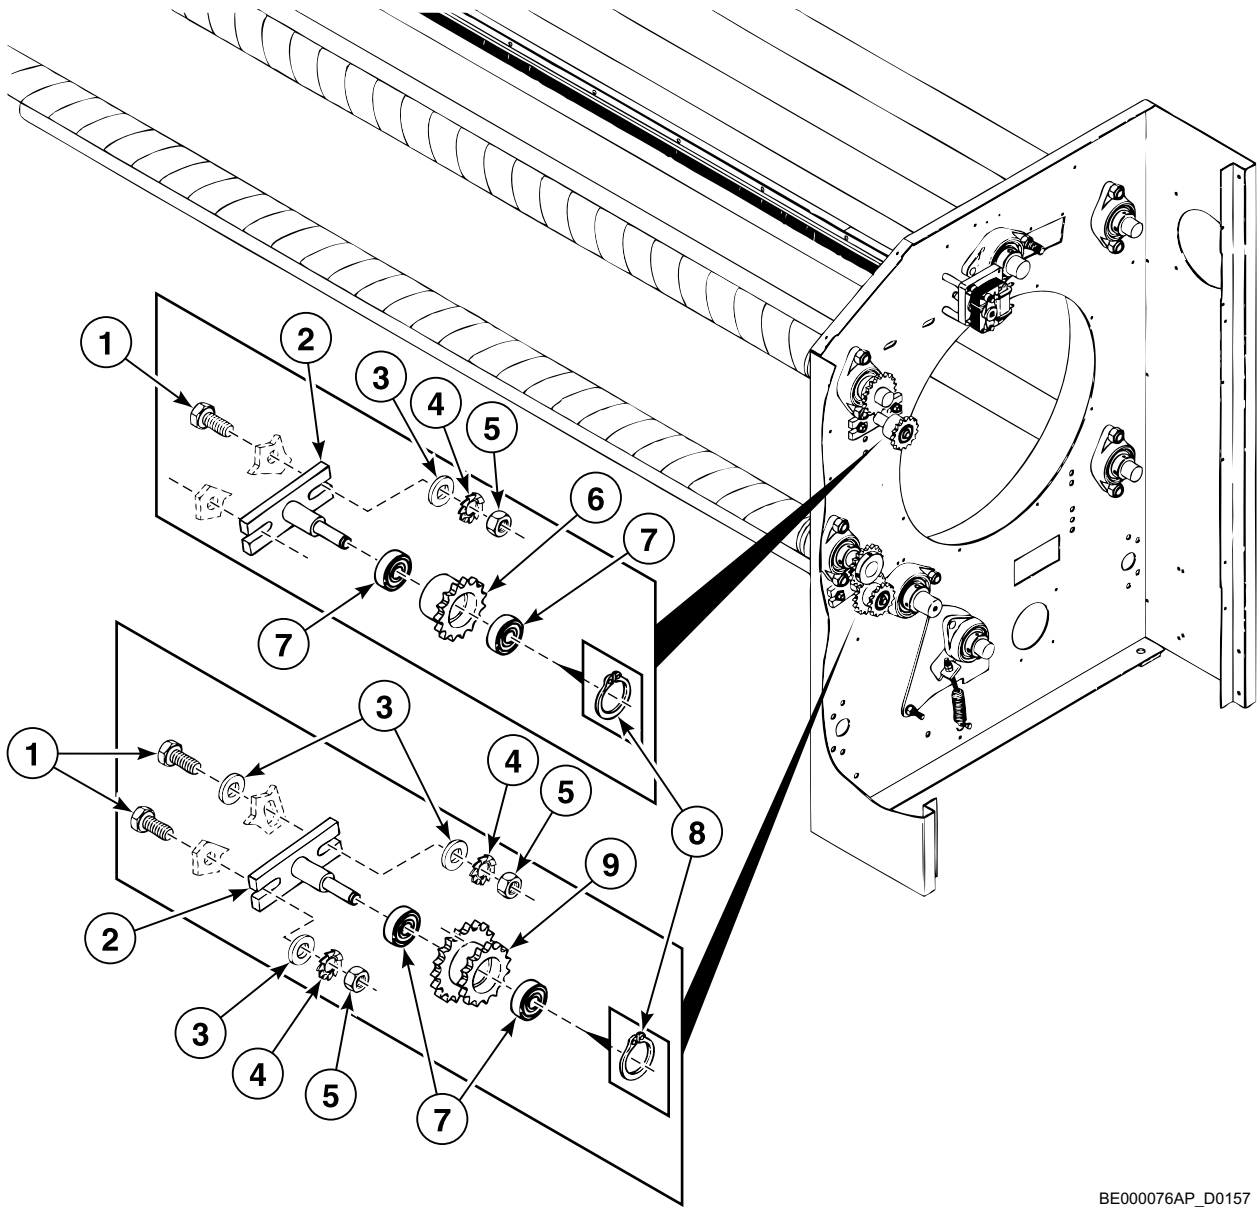


BE000076AP_D0157

Chain Tension Adjuster

REF	PART NO.	DESCRIPTION	COMMENTS
1	206/00119/00	Bolt	
2	080/00002/00	Wheel Support	
3	201/00010/00	Washer	
4	203/00002/00	Washer	
5	204/00003/00	Nut	
6	084/12022/00	Sprocket	
7	215/00018/00	Ball Bearing	
8	212/00033/00	Circlips	
9	084/00012/00	Sprocket	

 Driving Rolls

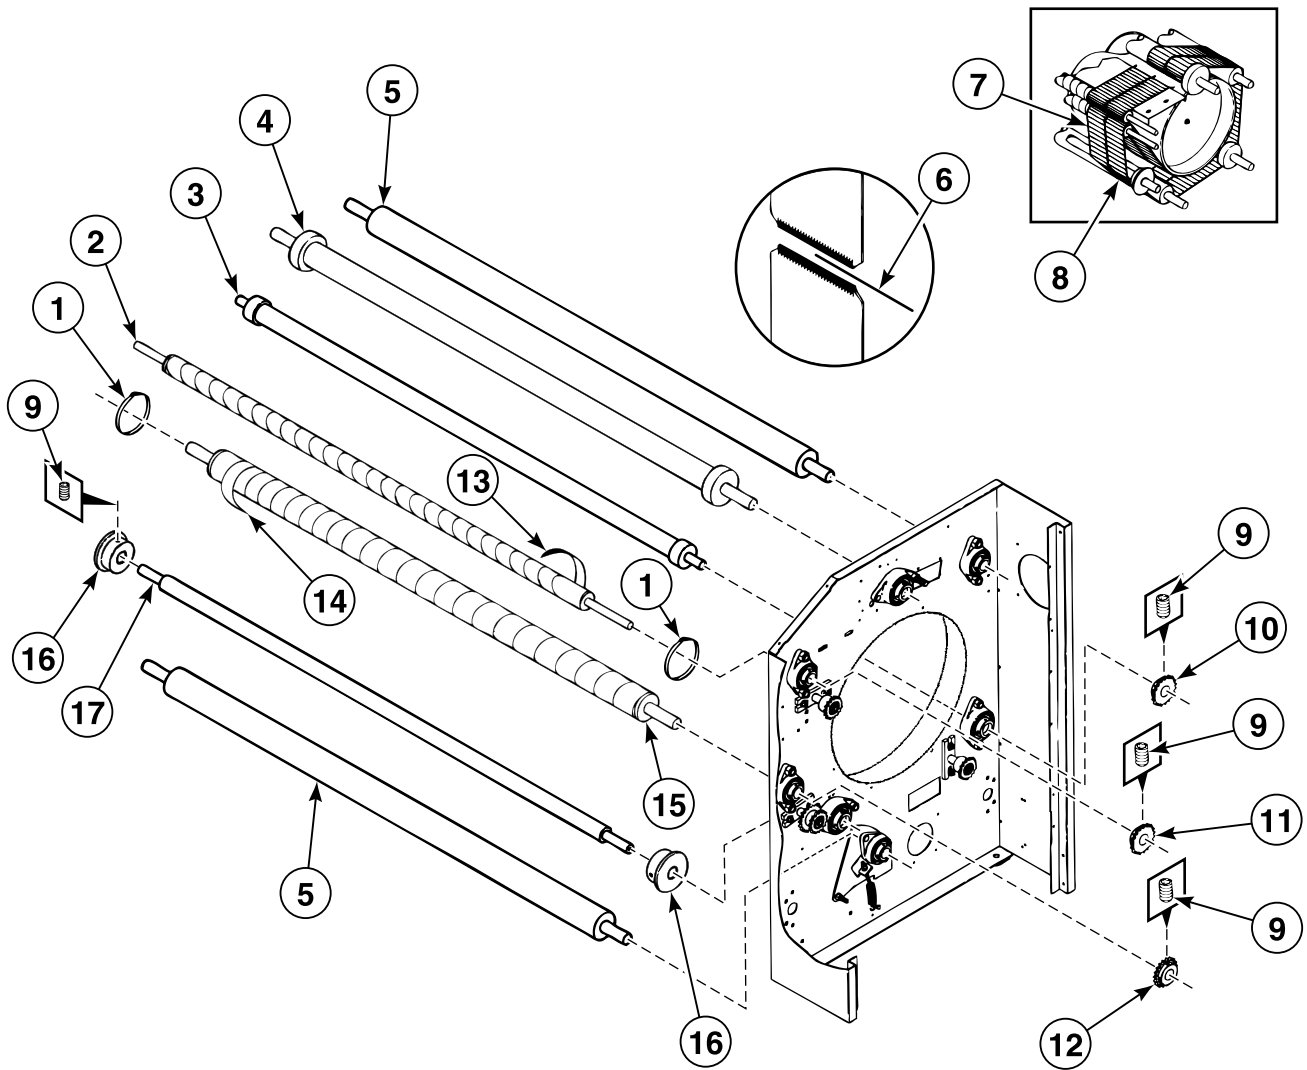


BE000077P_D0157

Driving Rolls

REF	PART NO.	DESCRIPTION	COMMENTS
1	082/00009/00	Hose Clamp	
2	082/10006/05	Feeding Roll	Model DI1800/6
	082/11006/05	Feeding Roll	Model DI2200/6
	082/12006/05	Feeding Roll	Model DI2600/6
3	082/10004/10	Roll	Model DI1800/6
	082/11004/10	Roll	Model DI2200/6
	082/12004/10	Roll	Model DI2600/6
4	082/00004/20	Roll	Model DI1800/6
	082/11004/20	Roll	Model DI2200/6
	082/12004/20	Roll	Model DI2600/6
5	082/00004/00	Roll	Model DI1800/6
	082/11004/00	Roll	Model DI2200/6
	082/12004/00	Roll	Model DI2600/6
6	082/00008/02	Connecting Pin	
7	082/12008/10	Feeding Belt	
8	082/12007/00	Belt	
9	206/00031/00	Screw	
10	084/00011/00	Sprocket	
11	084/12028/00	Sprocket	
12	084/12011/00	Sprocket	
13	085/00021/11	Tape	Model DI1800/6
	085/00021/12	Tape	Model DI2200/6
	085/00021/08	Tape	Model DI2600/6
14	085/00021/09	Tape	Model DI1800/6
	085/00021/10	Tape	Model DI2200/6
	085/00021/04	Tape	Model DI2600/6
15	082/00005/02	Driving Roll	Model DI1800/6
	082/11005/02	Driving Roll	Model DI2200/6
	082/12005/02	Driving Roll	Model DI2600/6
16	080/12004/00	Cylinder Support	
17	082/10001/00	Roll	Model DI1800/6
	082/11001/00	Roll	Model DI2200/6
	082/12001/00	Roll	Model DI2600/6

 Bottom Panel

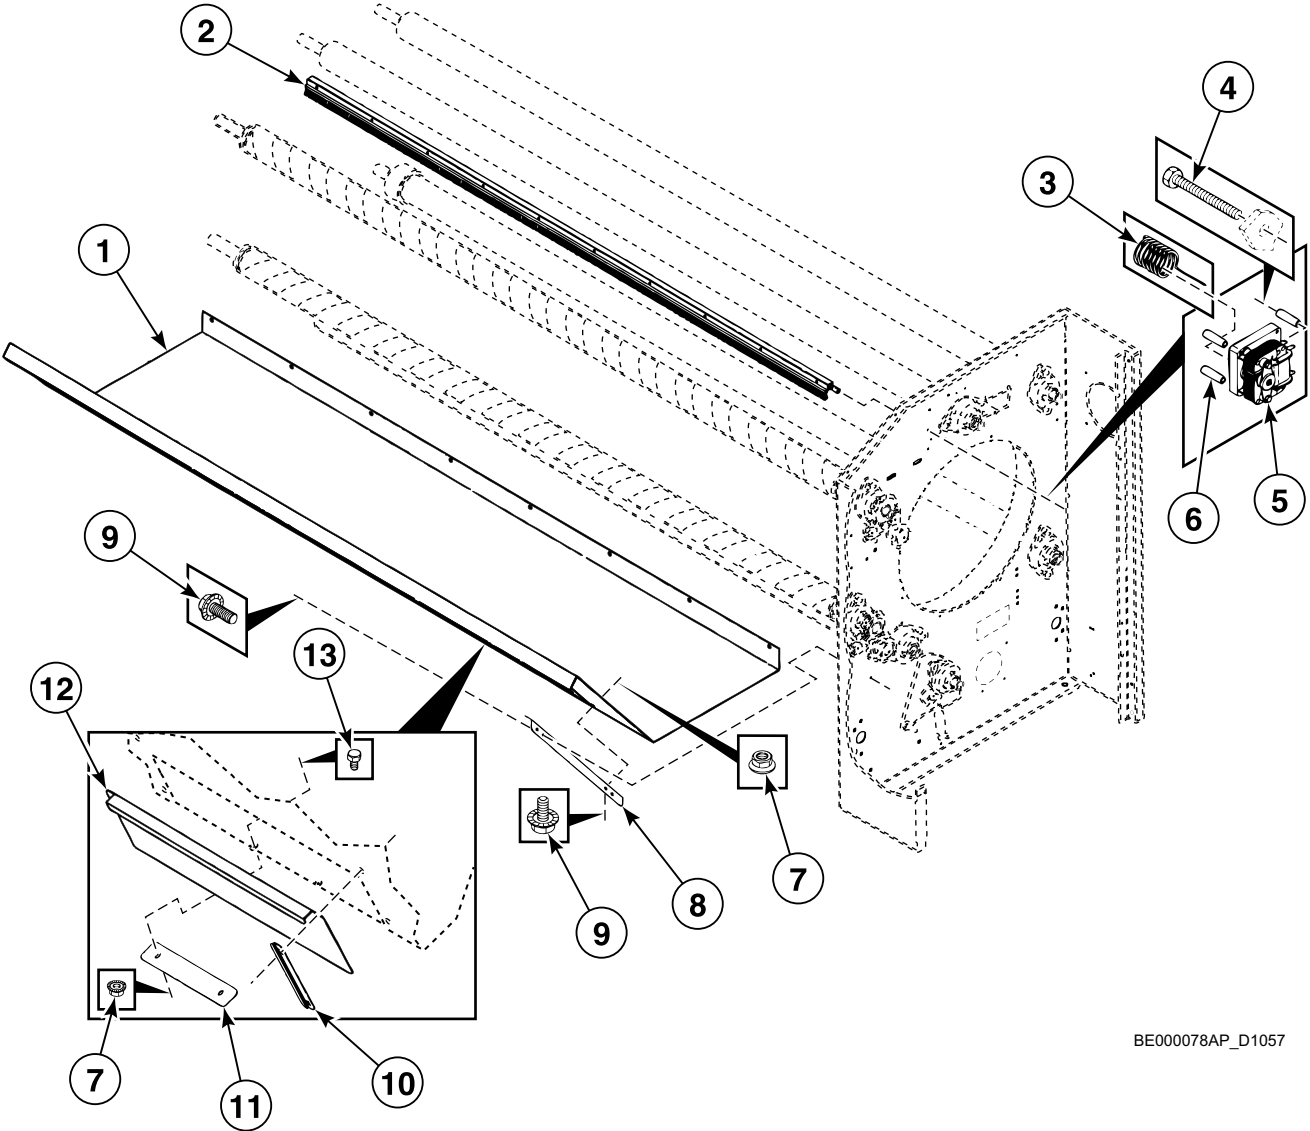


BE000078AP_D1057

Bottom Panel

REF	PART NO.	DESCRIPTION	COMMENTS
1	083/10002/00	Bottom Plate	Model DI1800/6
	083/11002/00	Bottom Plate	Model DI2200/6
	083/12002/00	Bottom Plate	Model DI2600/6
2	084/00025/00	Brush Holder	Model DI1800/6
	084/01025/00	Brush Holder	Model DI2200/6
	084/12025/00	Brush Holder	Model DI2600/6
3	209/00170/02	Drain Valve Spring	
4	206/00103/00	Bolt	
5	209/00170/06	Drain Valve Motor Assembly	
6	081/00030/00	Pipe	
7	206/00101/00	Nut	
8	083/00003/00	Support Plate	
9	206/00099/00	Bolt	
10	083/00004/00	Guide Plate	
11	083/00004/01	Stop Plate	
12	083/00005/00	Slide	
13	205/00104/00	Bolt	

 Pressure Roll

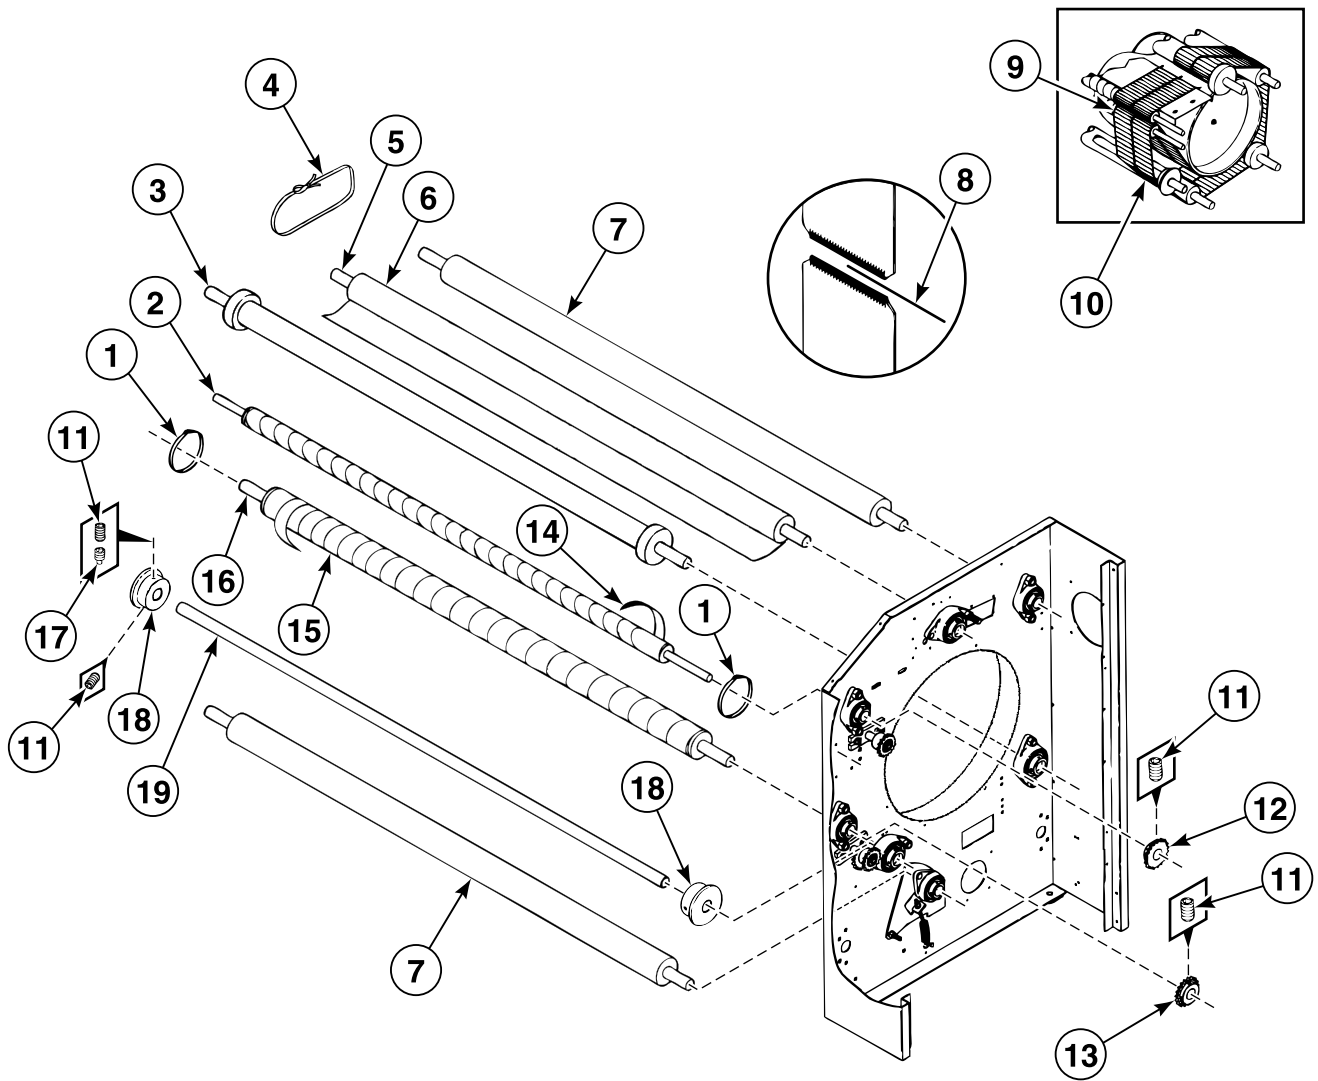


BE000275BP_D0157

Pressure Roll

REF	PART NO.	DESCRIPTION	COMMENTS
1	082/00009/00	Hose Clamp	
2	082/10006/05	Feeding Roll	Model DI1800/6
	082/11006/05	Feeding Roll	Model DI2200/6
	082/12006/05	Feeding Roll	Model DI2600/6
3	082/10004/10	Roll	Model DI1800/6
	082/11004/10	Roll	Model DI2200/6
	082/12004/10	Roll	Model DI2600/6
4	082/00016/00	Ribbon	
5	082/00011/00	Pressure Roll	Model DI1800/6
	082/01011/00	Pressure Roll	Model DI2200/6
	082/12017/00	Pressure Roll	Model DI2600/6
6	082/90001/00	Belt	Model DI1800/6
	082/91001/00	Belt	Model DI2200/6
	082/92001/00	Belt	Model DI2600/6
7	082/00004/00	Roll	Model DI1800/6
	082/11004/00	Roll	Model DI2200/6
	082/12004/00	Roll	Model DI2600/6
8	082/00007/01	Connecting Pin	95 mm
	082/00008/02	Connecting Pin	200 mm
9	082/12008/10	Feeding Belt	
10	082/12007/20	Ironing Belt	
11	206/00056/00	Screw	
12	084/00011/00	Sprocket	
13	084/12011/00	Sprocket	
14	085/00021/11	Tape	Model DI1800/6
	085/00021/12	Tape	Model DI2200/6
	085/00021/08	Tape	Model DI2600/6
15	085/00021/09	Tape	Model DI1800/6
	085/00021/10	Tape	Model DI2200/6
	085/00021/04	Tape	Model DI2600/6
16	082/00005/02	Driving Roll	Model DI1800/6
	082/11005/02	Driving Roll	Model DI2200/6
	082/12005/02	Driving Roll	Model DI2600/6
17	206/00031/00	Screw	
18	080/12004/00	Cylinder Support	
19	082/10001/00	Roll	Model DI1800/6
	082/11001/00	Roll	Model DI2200/6
	082/12001/00	Roll	Model DI2600/6

 Driving Chains

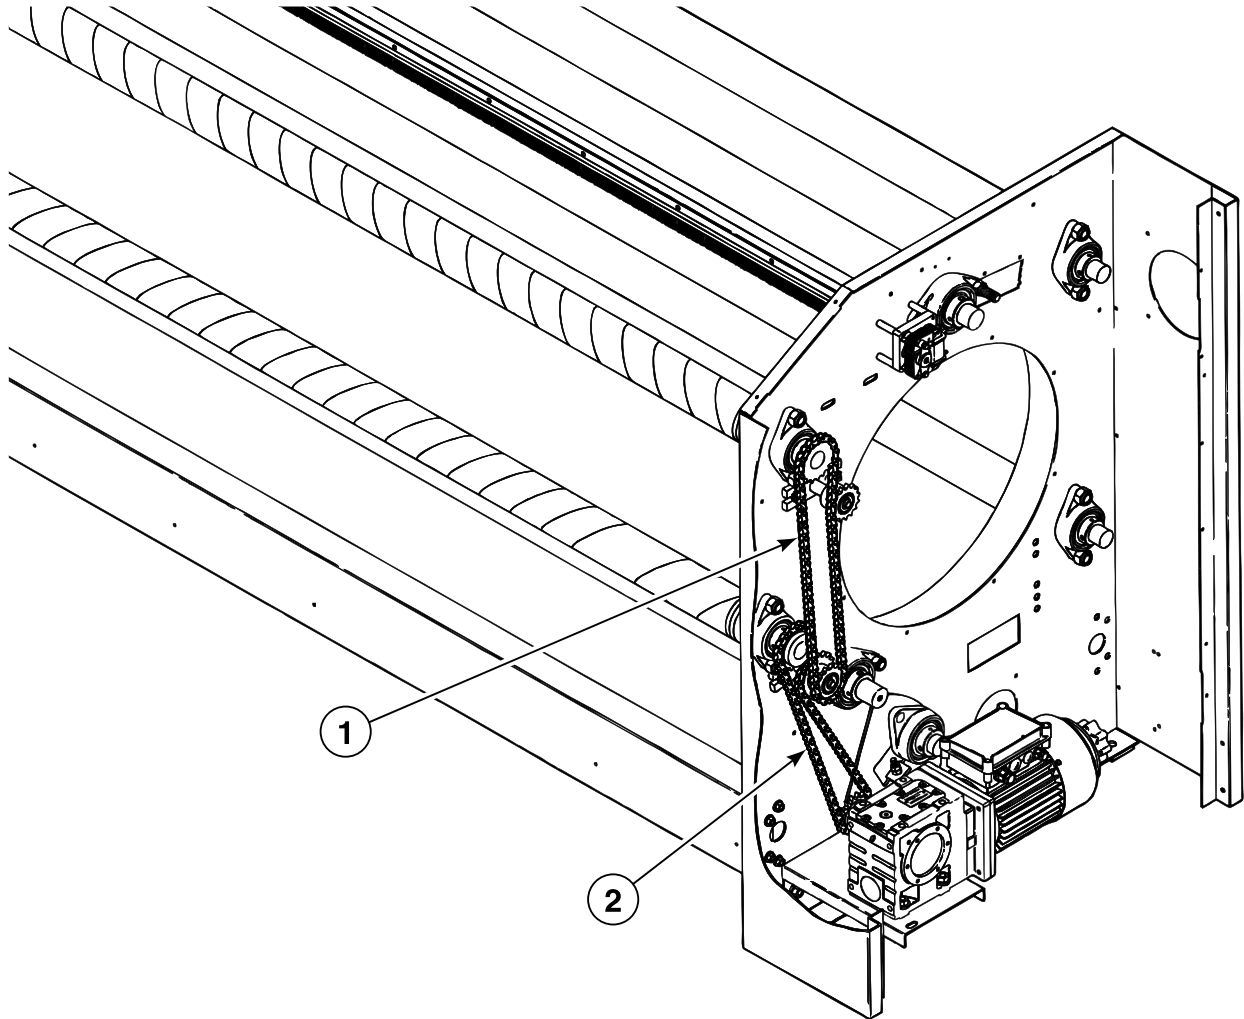


BE000079AP_D0157

Driving Chains

REF	PART NO.	DESCRIPTION	COMMENTS
1	084/12008/00	Chain	
2	084/12007/00	Chain	

 Exhaust Channel - Without Guiding Ribbon System

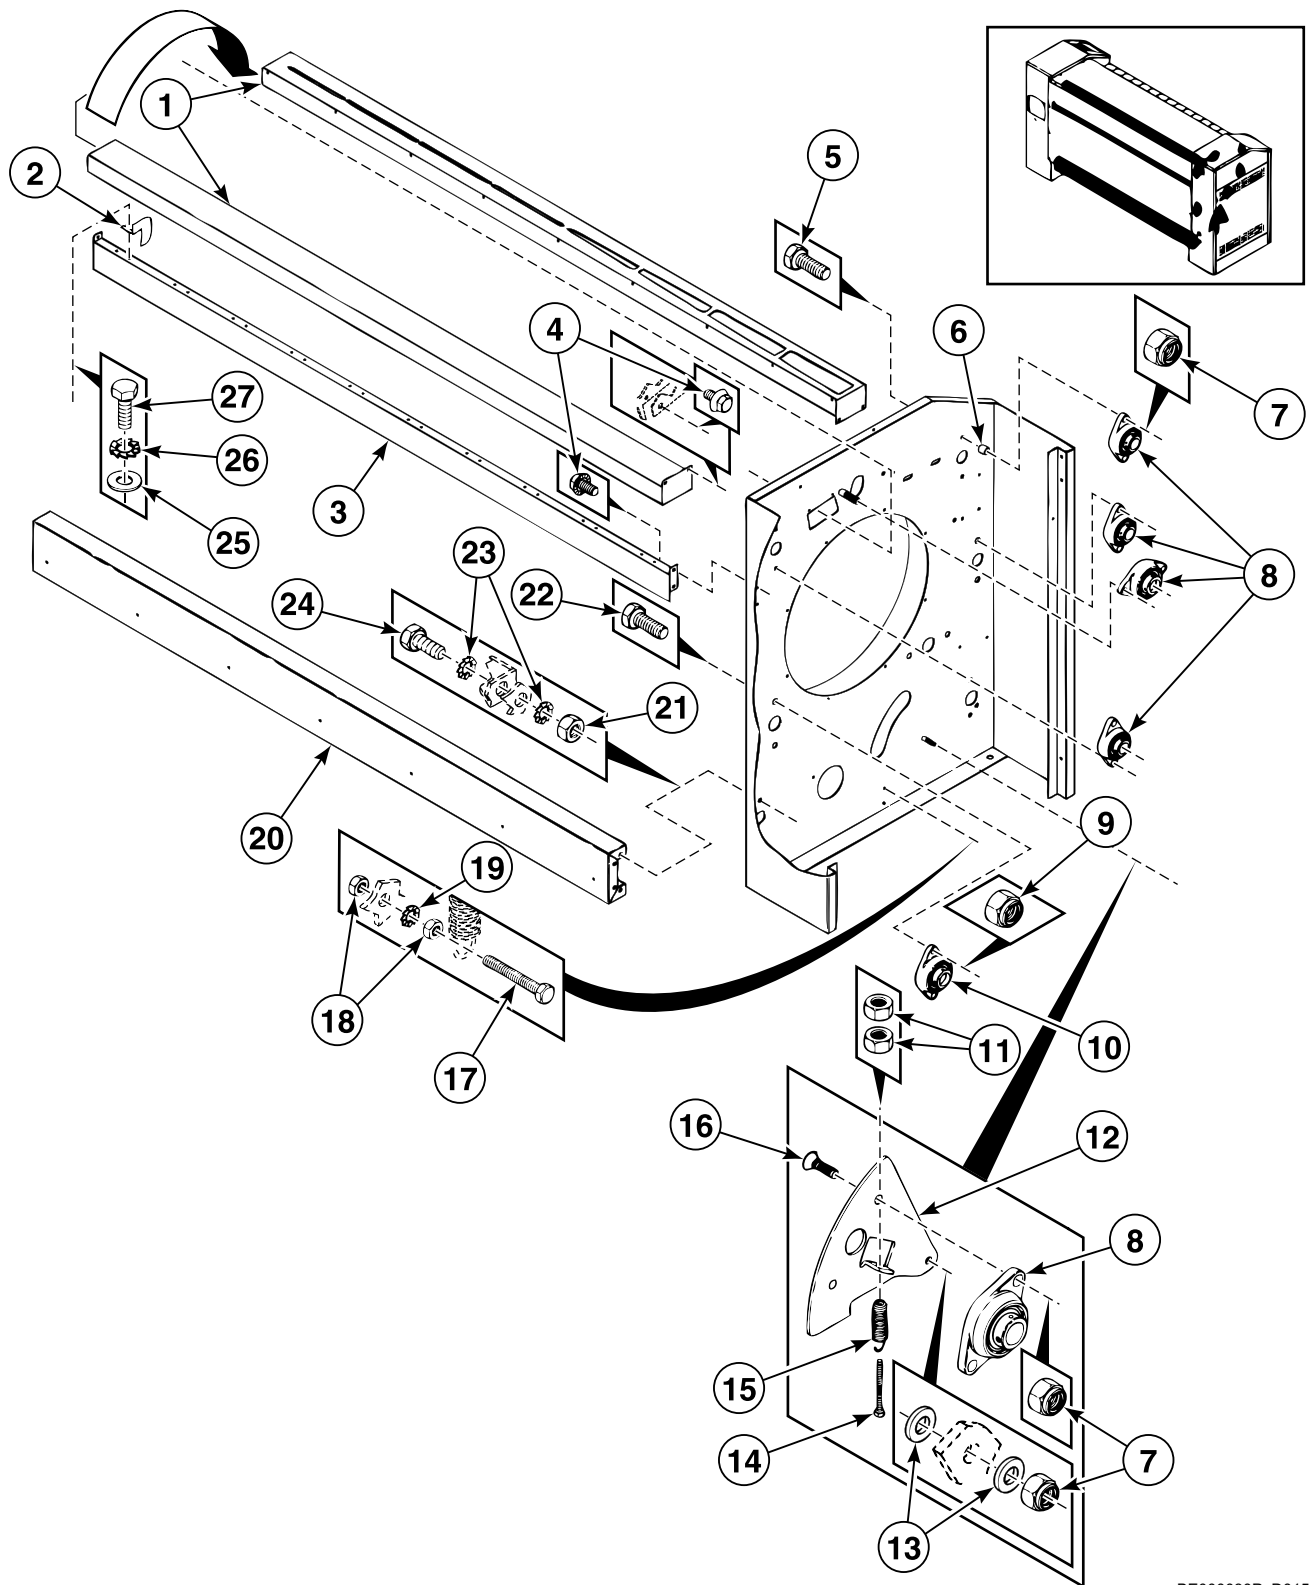


BE000080P_D0157

Exhaust Channel - Without Guiding Ribbon System

REF	PART NO.	DESCRIPTION	COMMENTS
1	083/10202/00	Exhaust	Model DI1800/6
	083/11202/00	Exhaust	Model DI2200/6
	083/12202/00	Exhaust	Model DI2600/6
2	083/00217/02	Separating Plate	
3	083/00217/03	Lathe	Model DI1800/6
	083/01217/03	Lathe	Model DI2200/6
	083/12217/03	Lathe	Model DI2600/6
4	206/00099/00	Bolt	
5	205/00109/00	Screw	
6	080/00005/00	Washer	
7	204/00110/00	Nut	
8	084/00026/00	Ball Bearing	
9	204/00113/00	Nut	
10	084/00030/00	Ball Bearing	
11	204/00004/00	Nut	
12	081/12008/00	Belt Adjuster	Left
13	201/00010/00	Washer	
14	206/00073/00	Bolt	
15	226/00010/00	Motor Spring	
16	206/00118/00	Screw	
17	206/00011/00	Bolt	
18	204/00005/00	Nut	
19	203/00004/00	Washer	
20	081/10004/00	Crossbar	Model DI1800/6
	081/11004/00	Crossbar	Model DI2200/6
	081/12004/00	Crossbar	Model DI2600/6
21	204/00003/00	Nut	
22	206/00112/00	Bolt	
23	203/00002/00	Washer	
24	206/00006/00	Bolt	
25	201/00007/00	Washer	
26	203/00005/00	Washer	
27	205/00106/00	Bolt	

 Exhaust Channel - With Ribbon Guidance System

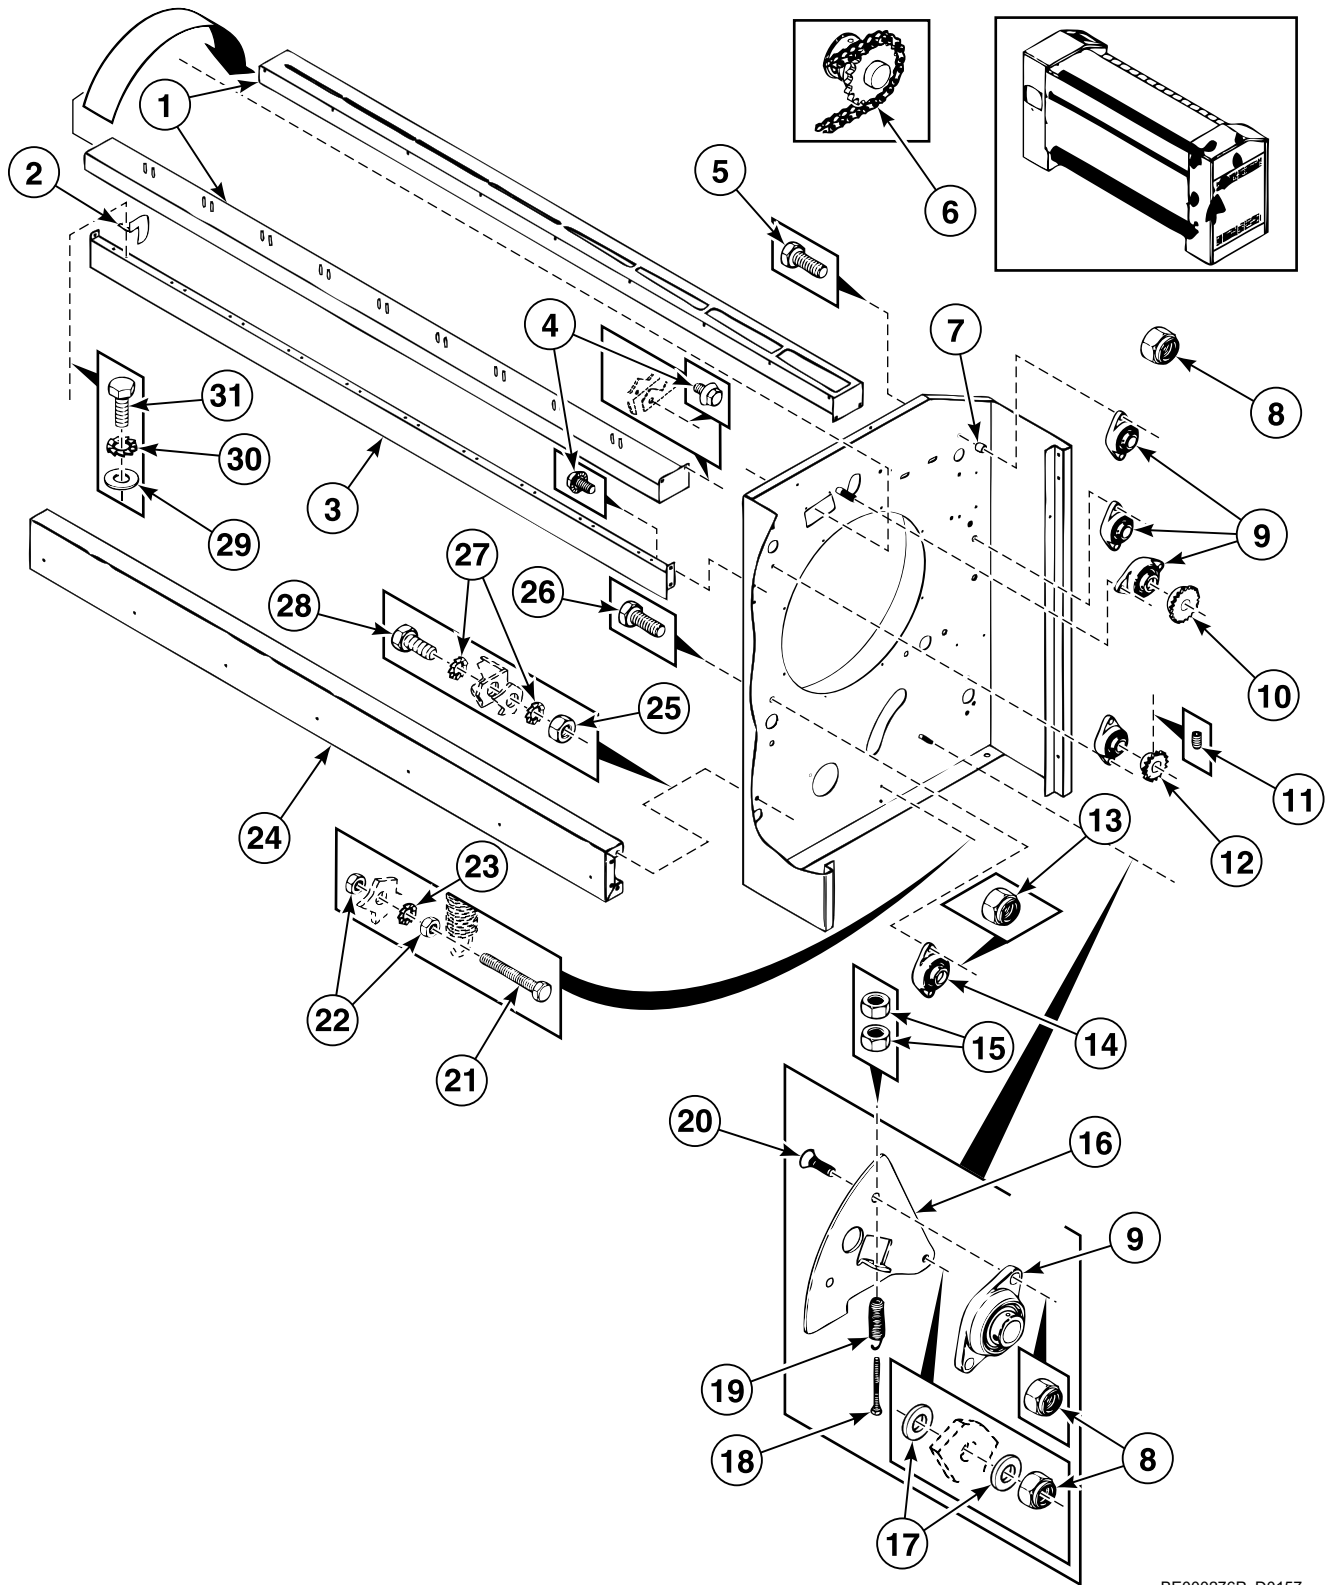


BE000276P_D0157

Exhaust Channel - With Ribbon Guidance System

REF	PART NO.	DESCRIPTION	COMMENTS
1	083/10202/00	Exhaust	Model DI1800/6
	083/11202/00	Exhaust	Model DI2200/6
	083/12202/00	Exhaust	Model DI2600/6
2	083/00217/02	Separating Plate	
3	083/00217/03	Lathe	Model DI1800/6
	083/01217/03	Lathe	Model DI2200/6
	083/12217/03	Lathe	Model DI2600/6
4	206/00099/00	Bolt	
5	205/00109/00	Screw	
6	084/00067/00	Chain	
7	080/00005/00	Washer	
8	204/00110/00	Nut	
9	084/00026/00	Ball Bearing	
10	084/02011/00	Sprocket	
11	206/00056/00	Screw	
12	084/02012/00	Sprocket	
13	204/00113/00	Nut	
14	084/00030/00	Ball Bearing	
15	204/00004/00	Nut	
16	081/12008/00	Belt Adjuster	Left
	081/12009/00	Belt Adjuster	Right
17	201/00010/00	Washer	
18	206/00073/00	Bolt	
19	226/00010/00	Motor Spring	
20	206/00118/00	Screw	
21	206/00011/00	Bolt	
22	204/00005/00	Nut	
23	203/00004/00	Washer	
24	081/10004/00	Crossbar	Model DI1800/6
	081/11004/00	Crossbar	Model DI2200/6
	081/12004/00	Crossbar	Model DI2600/6
25	204/00003/00	Nut	
26	206/00112/00	Bolt	
27	203/00002/00	Washer	
28	206/00006/00	Bolt	
29	201/00007/00	Washer	
30	203/00005/00	Washer	
31	205/00106/00	Bolt	

 Finger Protection Panel

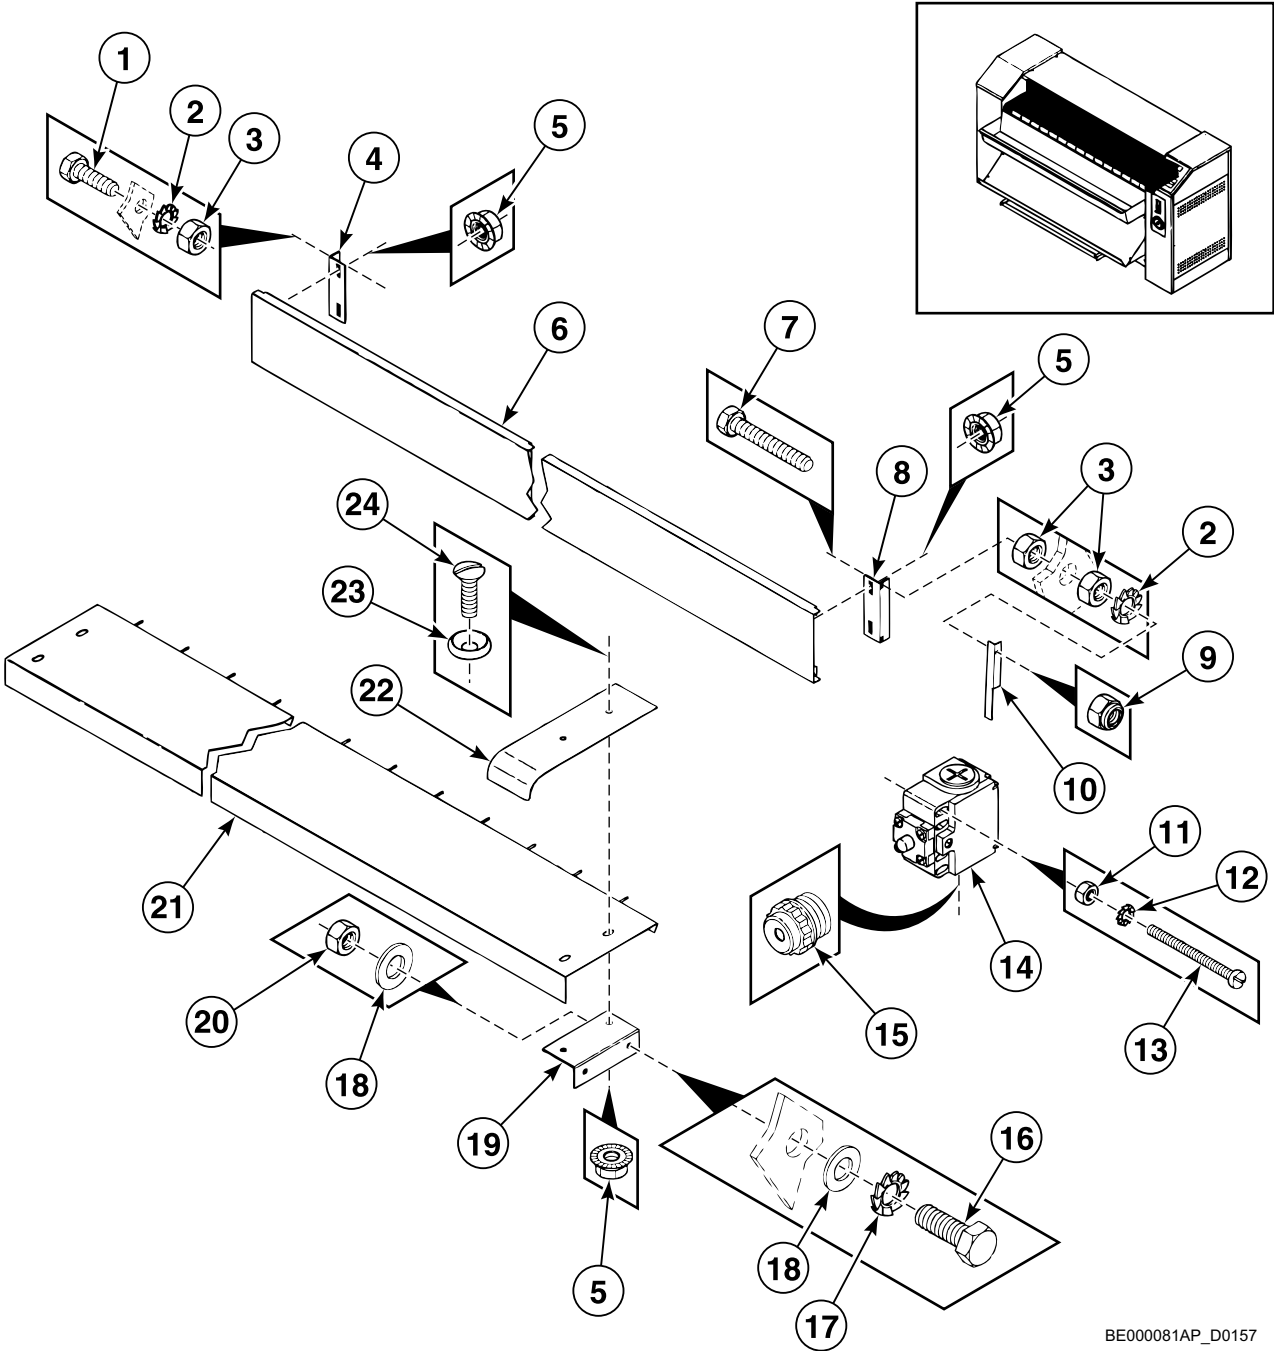


BE000081AP_D0157

Finger Protection Panel

REF	PART NO.	DESCRIPTION	COMMENTS
1	206/00014/00	Bolt	
2	203/00004/00	Washer	
3	204/00005/00	Nut	
4	083/00210/05	Side Piece	
5	206/00101/00	Nut	
6	083/00210/00	Finger Protection Panel	Model DI1800/6
	083/01210/00	Finger Protection Panel	Model DI2200/6
	083/12210/00	Finger Protection Panel	Model DI2600/6
7	206/00011/00	Bolt	
8	083/00210/06	Side Piece	
9	204/00009/00	Nut	
10	083/00219/00	Microswitch	
11	204/00007/00	Nut	
12	203/00006/00	Washer	
13	207/00121/00	Screw	
14	209/00327/00	Limit Switch	
15	211/00132/00	Nut	
16	206/00006/00	Bolt	
17	203/00002/00	Washer	
18	201/00010/00	Washer	
19	083/00212/01	Feeding Table Support	
20	204/00003/00	Nut	
21	083/00212/00	Feeding Table	Model DI1800/6
	083/01212/00	Feeding Table	Model DI2200/6
	083/12212/00	Feeding Table	Model DI2600/6
22	083/00220/00	Screen Plate	
23	208/00009/00	Washer	
24	207/00112/00	Screw	

 Pedal

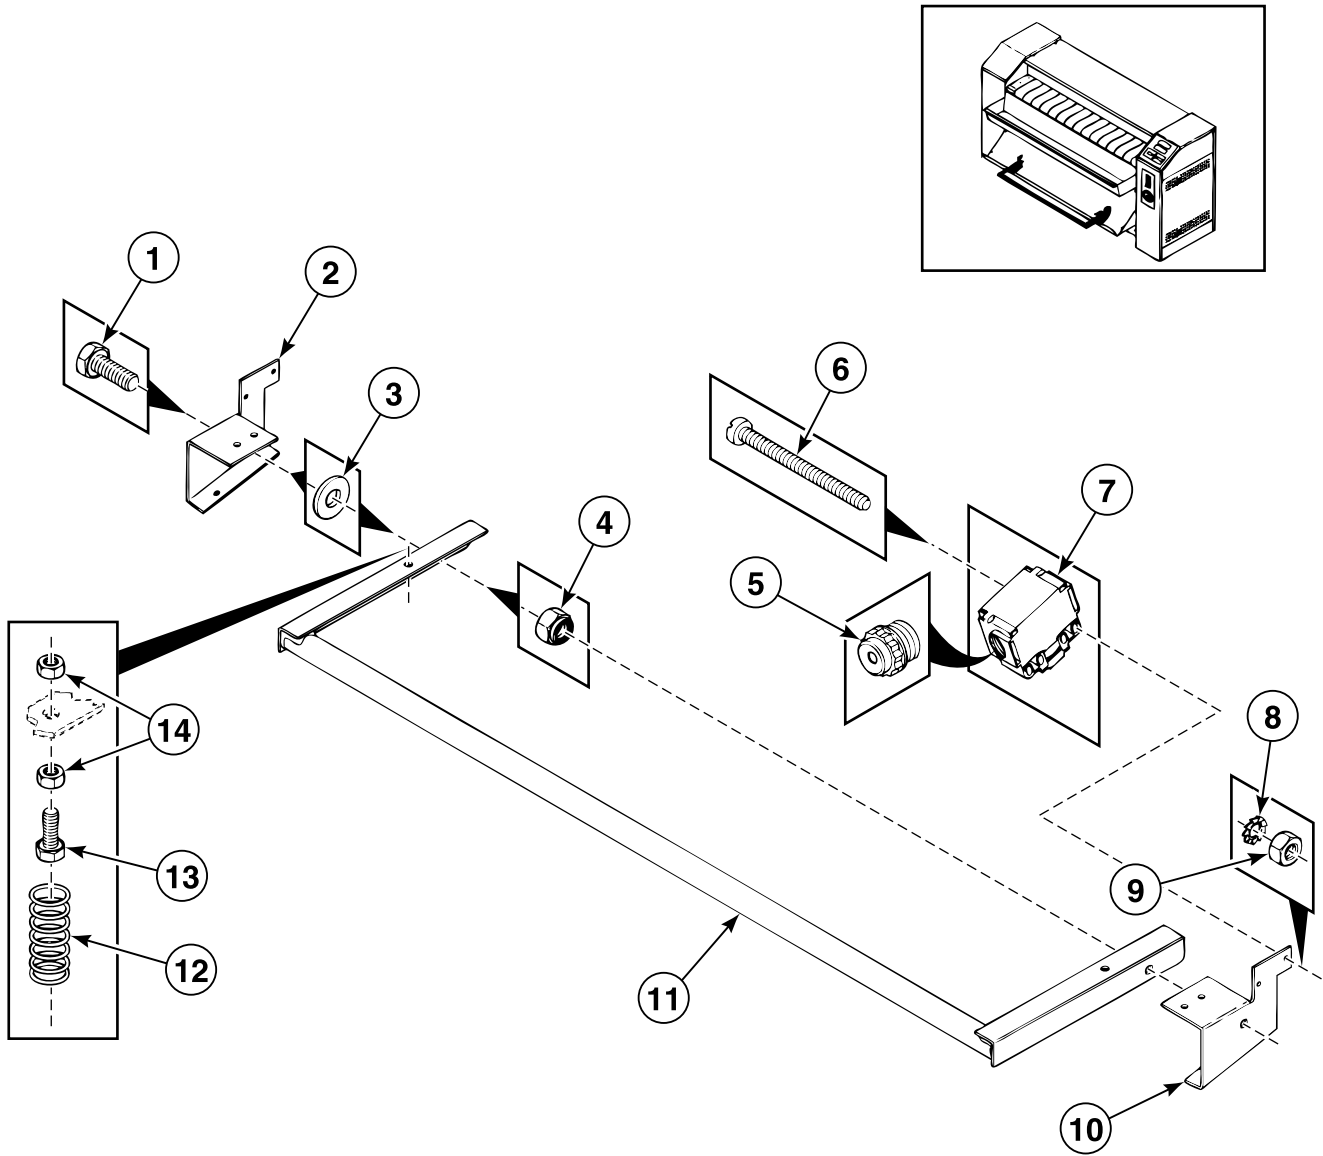


BE000082P_D0157

Pedal

REF	PART NO.	DESCRIPTION	COMMENTS
1	206/00006/00	Bolt	
2	081/00010/00	Pedal Support	
3	201/00010/00	Washer	
4	204/00110/00	Nut	
5	211/00132/00	Nut	
6	207/00021/00	Screw	
7	209/00327/00	Limit Switch	
8	203/00006/00	Washer	
9	204/00007/00	Nut	
10	081/00011/00	Pedal Support	
11	081/00020/00	Pedal	Model DI1800/6
	081/01020/00	Pedal	Model DI2200/6
	081/12020/00	Pedal	Model DI2600/6
12	084/00015/00	Compression Spring	
13	206/00009/00	Bolt	
14	204/00004/00	Nut	

 Temperature Detection

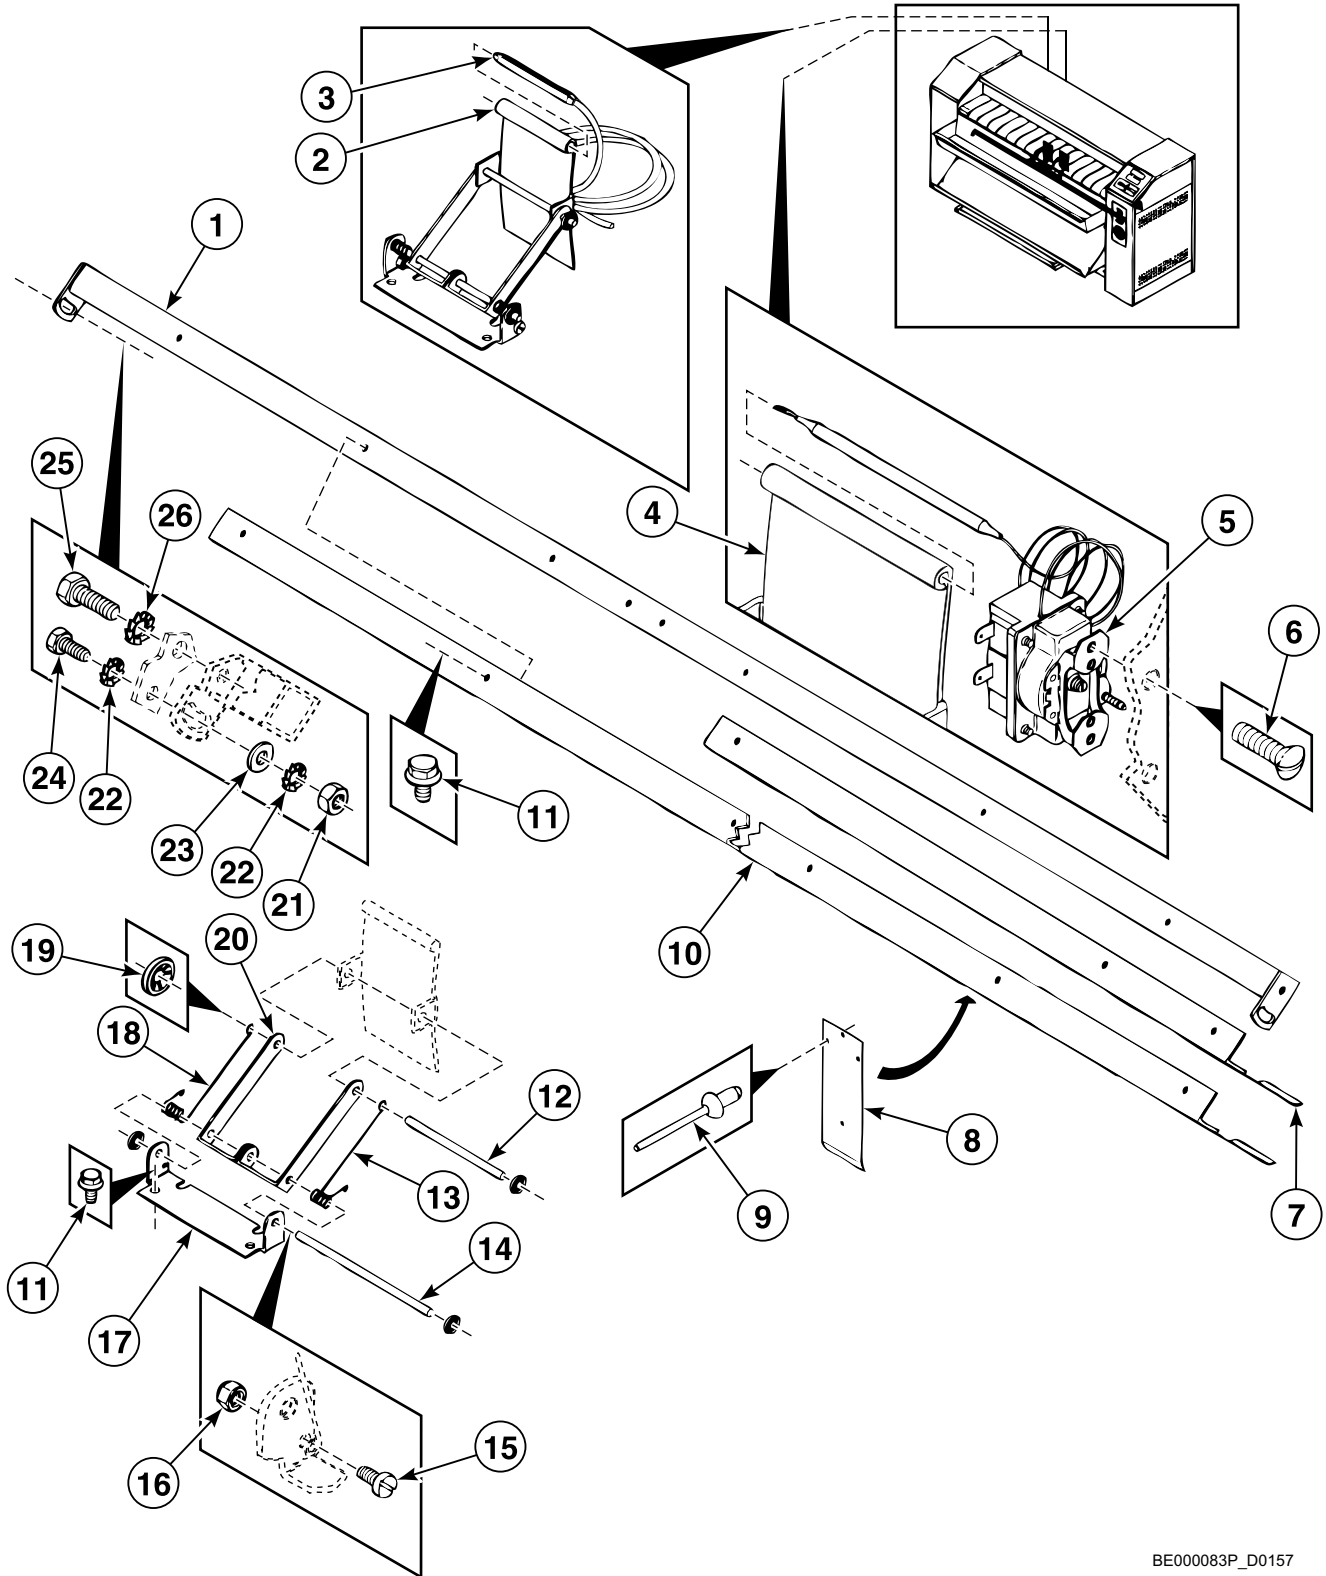


BE000083P_D0157

Temperature Detection

REF	PART NO.	DESCRIPTION	COMMENTS
1	081/00025/20	Scraper Support	Model DI1800/6
	081/01025/20	Scraper Support	Model DI2200/6
	081/12025/04	Scraper Support	Model DI2600/6
2	081/12022/00	Thermostat Plate	
3	085/00015/00	Thermostat	
4	081/00022/01	Guide Plate	
5	085/00007/00	Safety Thermostat	
6	207/00120/00	Screw	
7	081/12025/06	L-Profile	
8	081/00025/02	Scraper	
9	208/00017/00	Rivet	
10	081/00025/05	Support Bracket	Model DI1800/6
	081/01025/05	Support Bracket	Model DI2200/6
	081/12025/05	Support Bracket	Model DI2600/6
11	206/00099/00	Bolt	
12	081/00024/00	Axle	
13	083/00242/00	Compression Spring	
14	081/00023/01	Hinge Pin	
15	207/00020/00	Screw	
16	204/00114/00	Nut	
17	083/00240/00	Mounting Piece	
18	083/00241/00	Compression Spring	
19	208/00022/00	Nut	
20	083/00239/00	Thermostat Bracket	
21	204/00004/00	Nut	
22	203/00003/00	Washer	
23	202/00002/00	Washer	
24	206/00042/00	Bolt	
25	206/00006/00	Bolt	
26	203/00002/00	Washer	

 Operating Panel



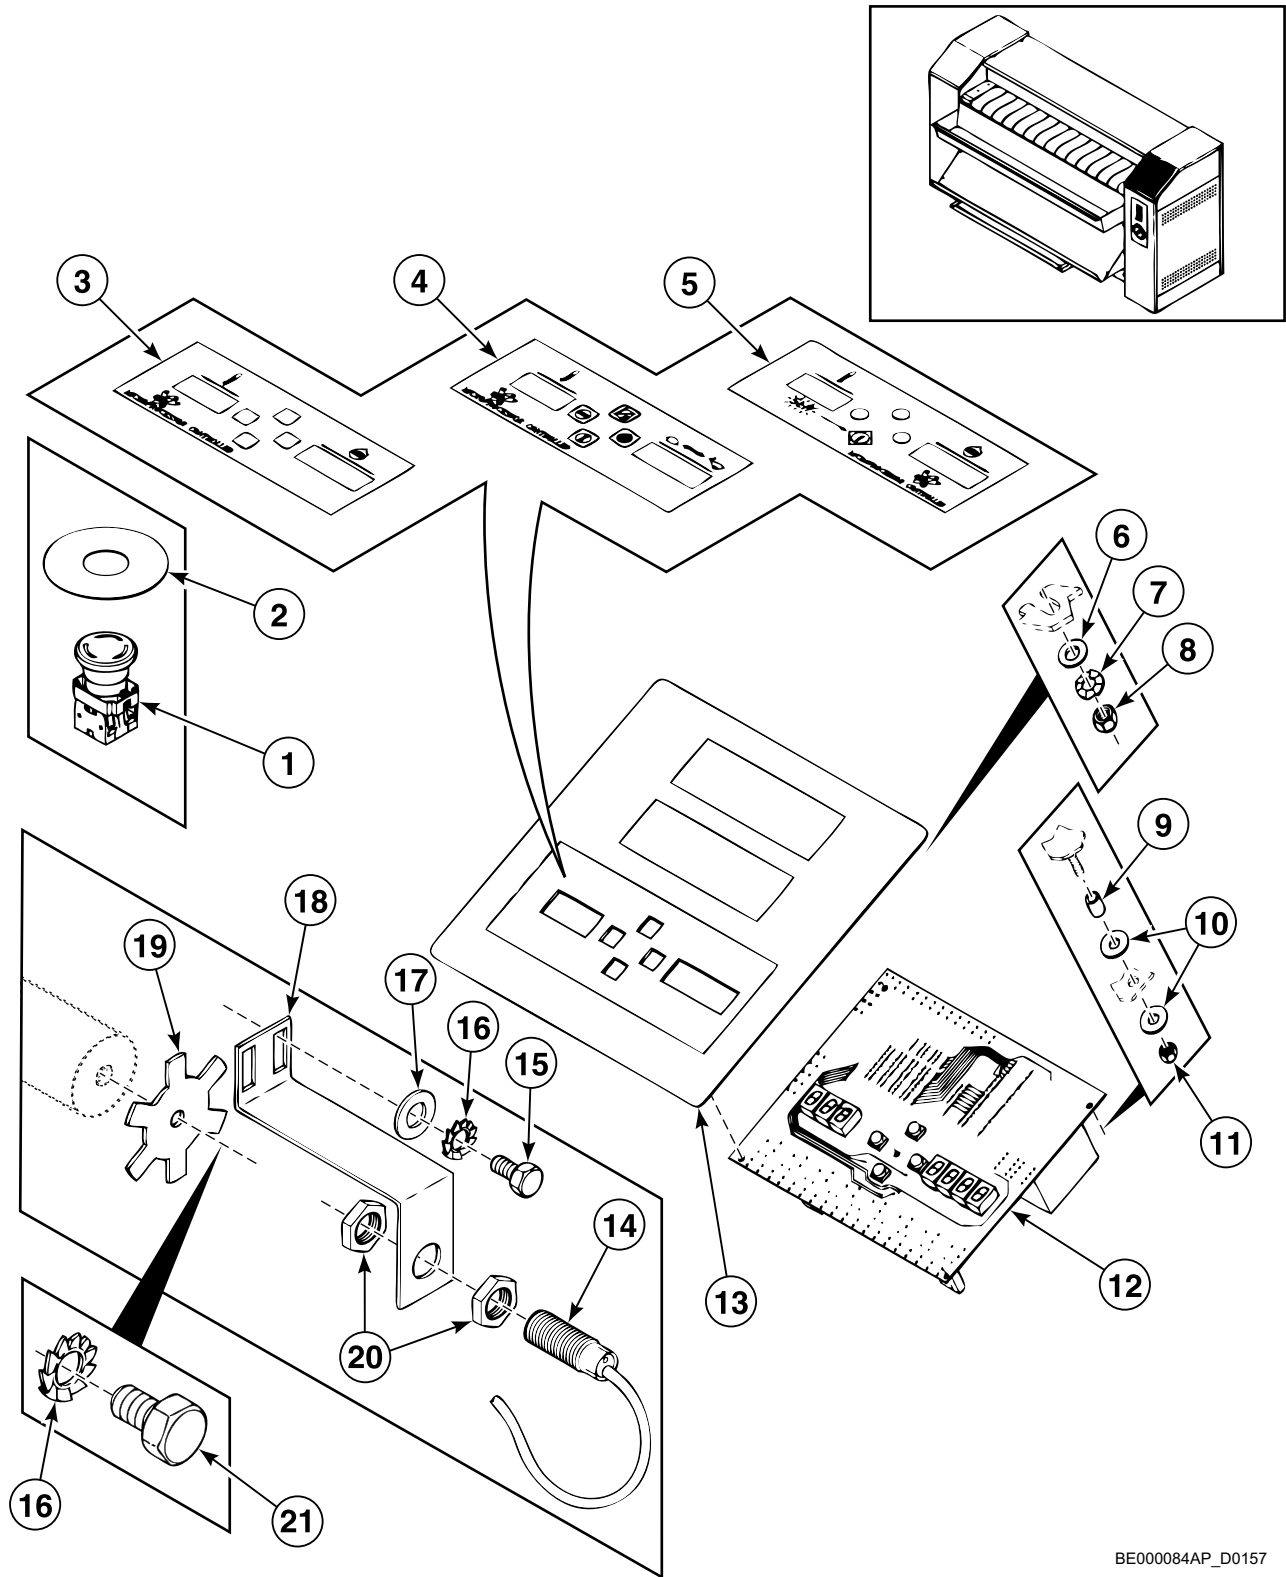


BE000084AP_D0157

Operating Panel

REF	PART NO.	DESCRIPTION	COMMENTS
1	209/00248/00	Mushroom Pushbutton	
2	209/00329/00	Circular Disk	No Stop
	209/00330/00	Circular Disk	Emergency Stop
	209/00331/00	Circular Disk	No Stop
	209/00332/00	Circular Disk	Emergency Stop
3	229/00256/00	Control Pad	
4	229/00247/00	Control Pad	
5	229/00275/00	Payment System Label	
6	202/00004/00	Washer	
7	203/00006/00	Washer	
8	204/00007/00	Nut	
9	221/00116/00	Tube	
10	223/00123/00	Washer	
11	204/00008/00	Nut	
12	209/00397/10-1	Main Board Kit	
13	081/00014/00	Operating Panel	
14	209/00400/00	Speed Detector	
15	206/00015/00	Bolt	
16	203/00004/00	Washer	
17	202/00101/00	Washer	
18	083/00243/00	Support Bracket	
19	083/00244/00	Disk	
20	204/00002/00	Nut	
21	205/00107/00	Bolt	

   Coin Meter - Coin Models

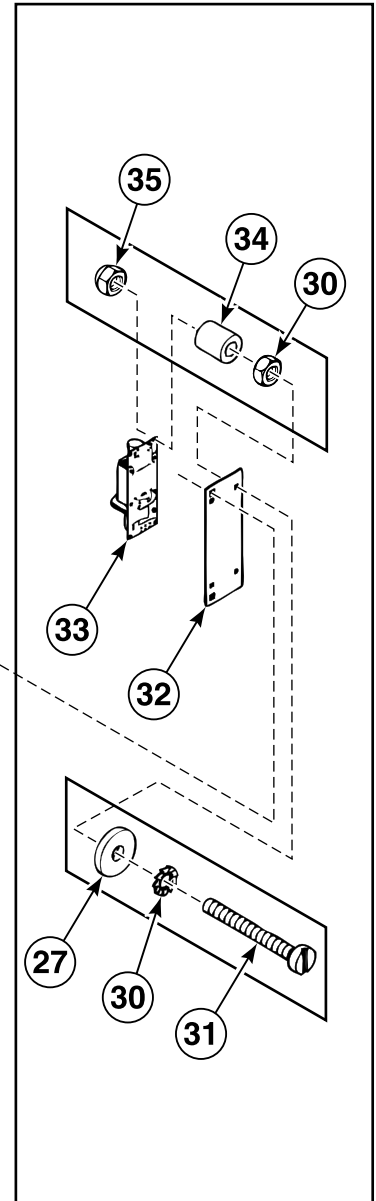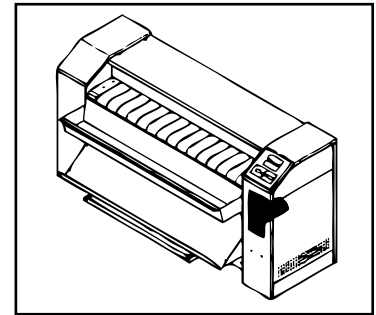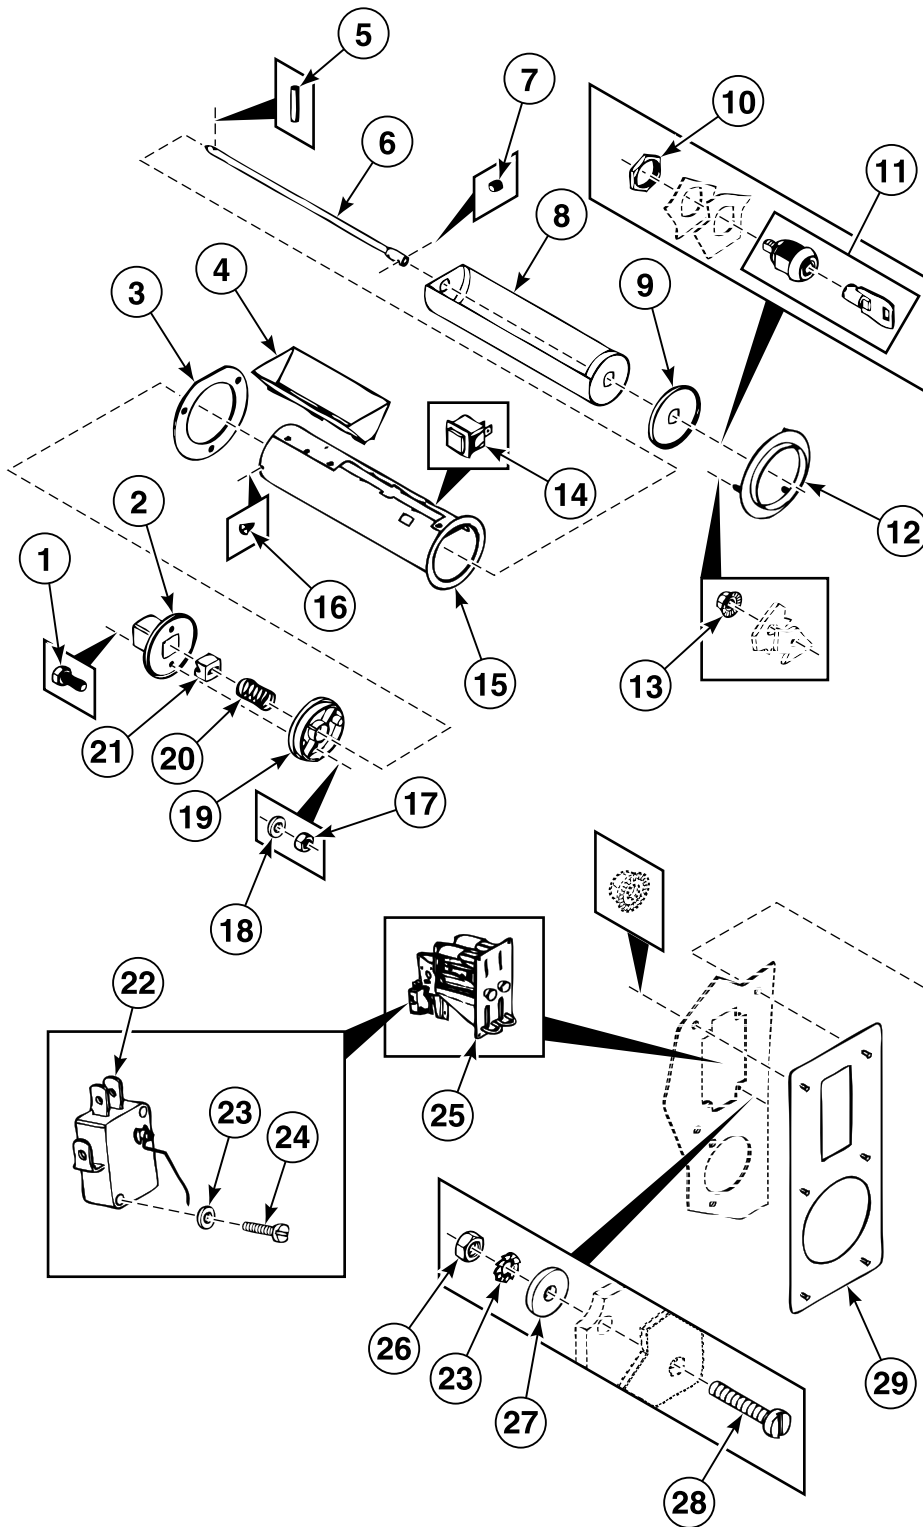


BE000085P_D0157

Coin Meter - Coin Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	206/00033/00	Bolt	
2	211/00070/01	Outer Cabinet Lock	
3	111/00100/00	Coin Box Ring Assembly	
4	211/00071/00	Coin Box	
5	208/00013/00	Roll Pin	
6	111/00069/00	Spindle	
7	206/00038/00	Screw	
8	211/00101/00	Coin Box	
9	111/00068/00	Front Plate	
10	211/00065/01	Nut	
11	211/00065/00	Coin Box Lock	
12	111/00066/00	Coin Box Ring	
13	206/00101/00	Nut	
14	209/00396/00	Pushbutton	
15	211/00100/00	Outer Coin Box	
16	208/00007/00	Screw	
17	204/00005/00	Nut	
18	203/00004/00	Washer	
19	211/00070/03	Inner Coin Box	
20	211/00070/04	Spring	
21	211/00070/02	Washer	
22	209/00060/12	Coin Drop Microswitch	
23	203/00007/00	Washer	
24	207/00009/00	Screw	
25	209/00305/00	Coin Meter	
26	204/00008/00	Nut	
27	202/00004/00	Washer	
28	207/00108/00	Screw	
29	083/00233/00	Support Plate	
30	203/00006/00	Washer	
31	207/00031/00	Screw	
32	111/00953/00	Assembly Plate	
33	209/00451/00	Printboard	
34	211/00122/00	Standoff	
35	204/00114/00	Nut	

 Coupling for Insert System - Coin Models

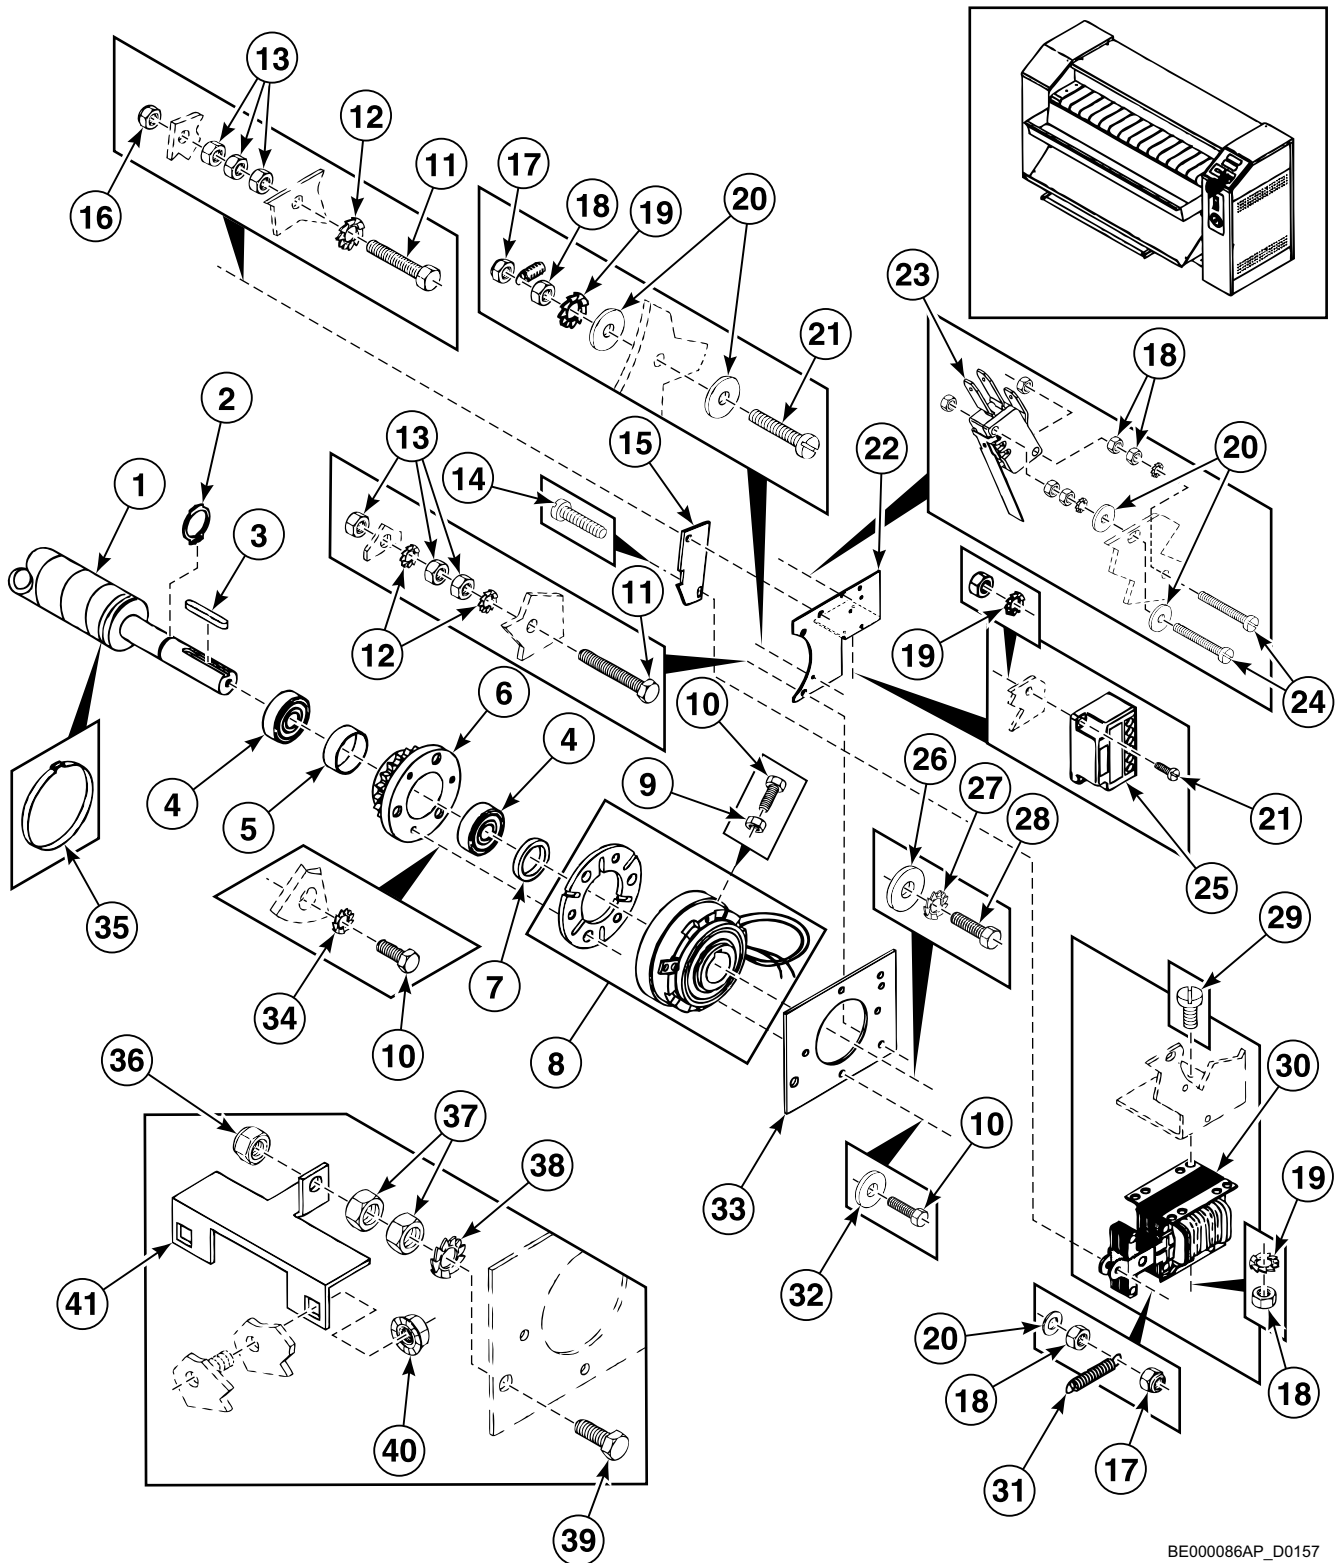


BE000086AP_D0157

Coupling for Insert System - Coin Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	082/10006/00	Feeding Roll	Model DI1800/6
	082/11006/00	Feeding Roll	Model DI2200/6
	082/12006/00	Feeding Roll	Model DI2600/6
2	212/00035/00	Circlips	
3	216/00007/00	Cylinder Shaft Key	
4	215/00019/00	Ball Bearing	
5	084/12032/00	Ring	
6	084/12013/00	Magnet	
7	080/12003/01	Magnet	
8	085/00022/00	Magnet	
9	204/00006/00	Nut	
10	205/00106/00	Bolt	
11	206/00114/00	Bolt	
12	203/00004/00	Washer	
13	204/00005/00	Nut	
14	207/00009/00	Screw	
15	083/00234/02	Hook Lock Plate	
16	204/00009/00	Nut	
17	204/00116/00	Nut	
18	204/00008/00	Nut	
19	203/00007/00	Washer	
20	202/00004/00	Washer	
21	207/00022/00	Screw	
22	083/00234/01	Support Bracket	
23	209/00334/00	Microswitch	
24	207/00014/00	Screw	
25	085/00001/02	Rectifier	
26	201/00003/00	Washer	
27	203/00001/00	Washer	
28	206/00004/00	Bolt	
29	207/00010/00	Screw	
30	209/00017/00	Door Interlock Coil	
31	083/00234/03	Spring	
32	202/00003/00	Washer	
33	083/12255/00	Assembly Plate	
34	203/00005/00	Washer	
35	082/00009/00	Hose Clamp	
36	204/00109/00	Nut	
37	204/00004/00	Nut	
38	203/00003/00	Washer	
39	206/00009/00	Bolt	
40	206/00101/00	Nut	
41	083/12256/00	Blocking Piece	

 
Motor - DI1800/6 Models

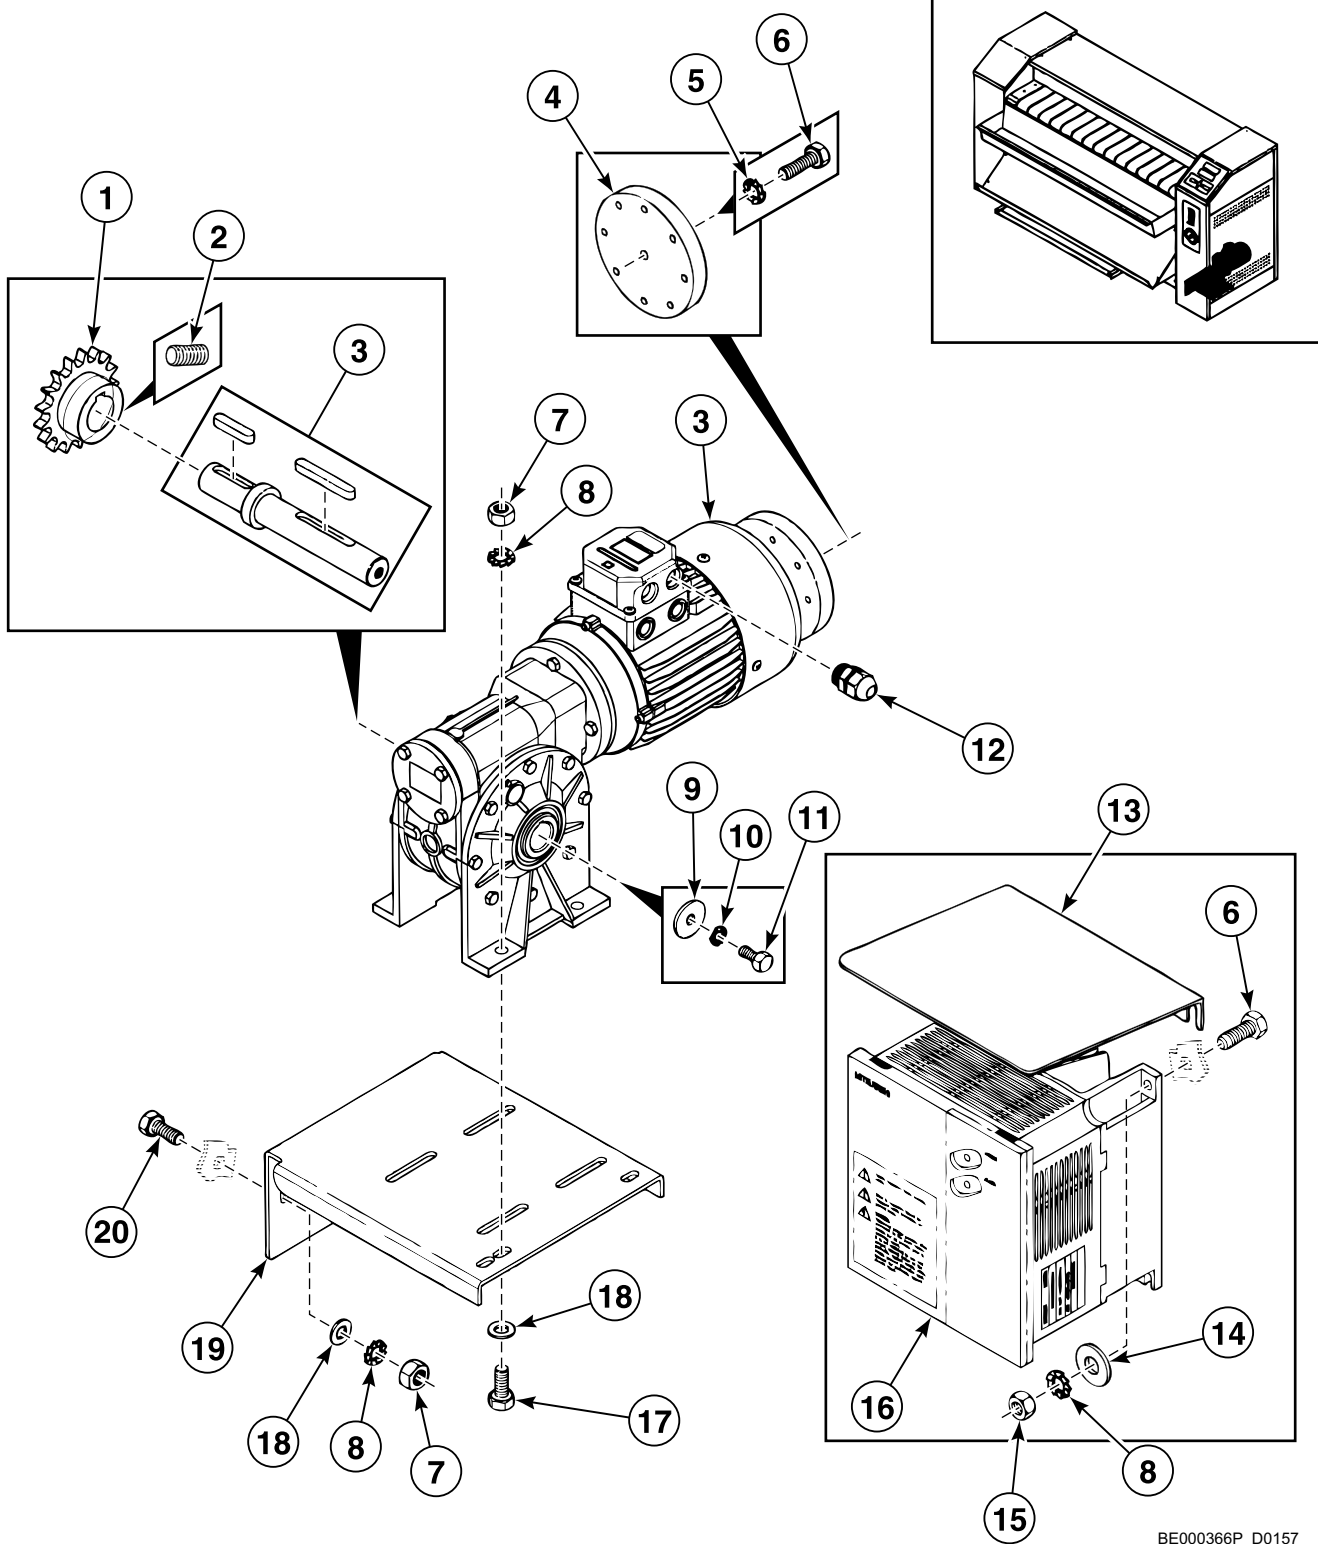

Motor - DI1800/6 Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	084/12010/00	Sprocket	
2	206/00056/00	Screw	
3	085/01003/00	Drive Motor	
4	084/00005/01	Disk	
5	203/00005/00	Washer	
6	205/00106/00	Bolt	
7	204/00003/00	Nut	
8	203/00002/00	Washer	
9	084/00006/03	Washer	
10	203/00003/00	Washer	
11	206/00010/00	Bolt	
12	211/00117/00	Cordlock	
13	083/00247/10	Cap	
14	202/00101/00	Washer	
15	204/00107/00	Nut	
16	227/00228/00	Inverter Drive	
17	206/00005/00	Bolt	
18	201/00010/00	Washer	
19	081/01027/00	Support Bracket	
20	206/00006/00	Bolt	

 Motor - DI2200/6 and DI2600/6 Models

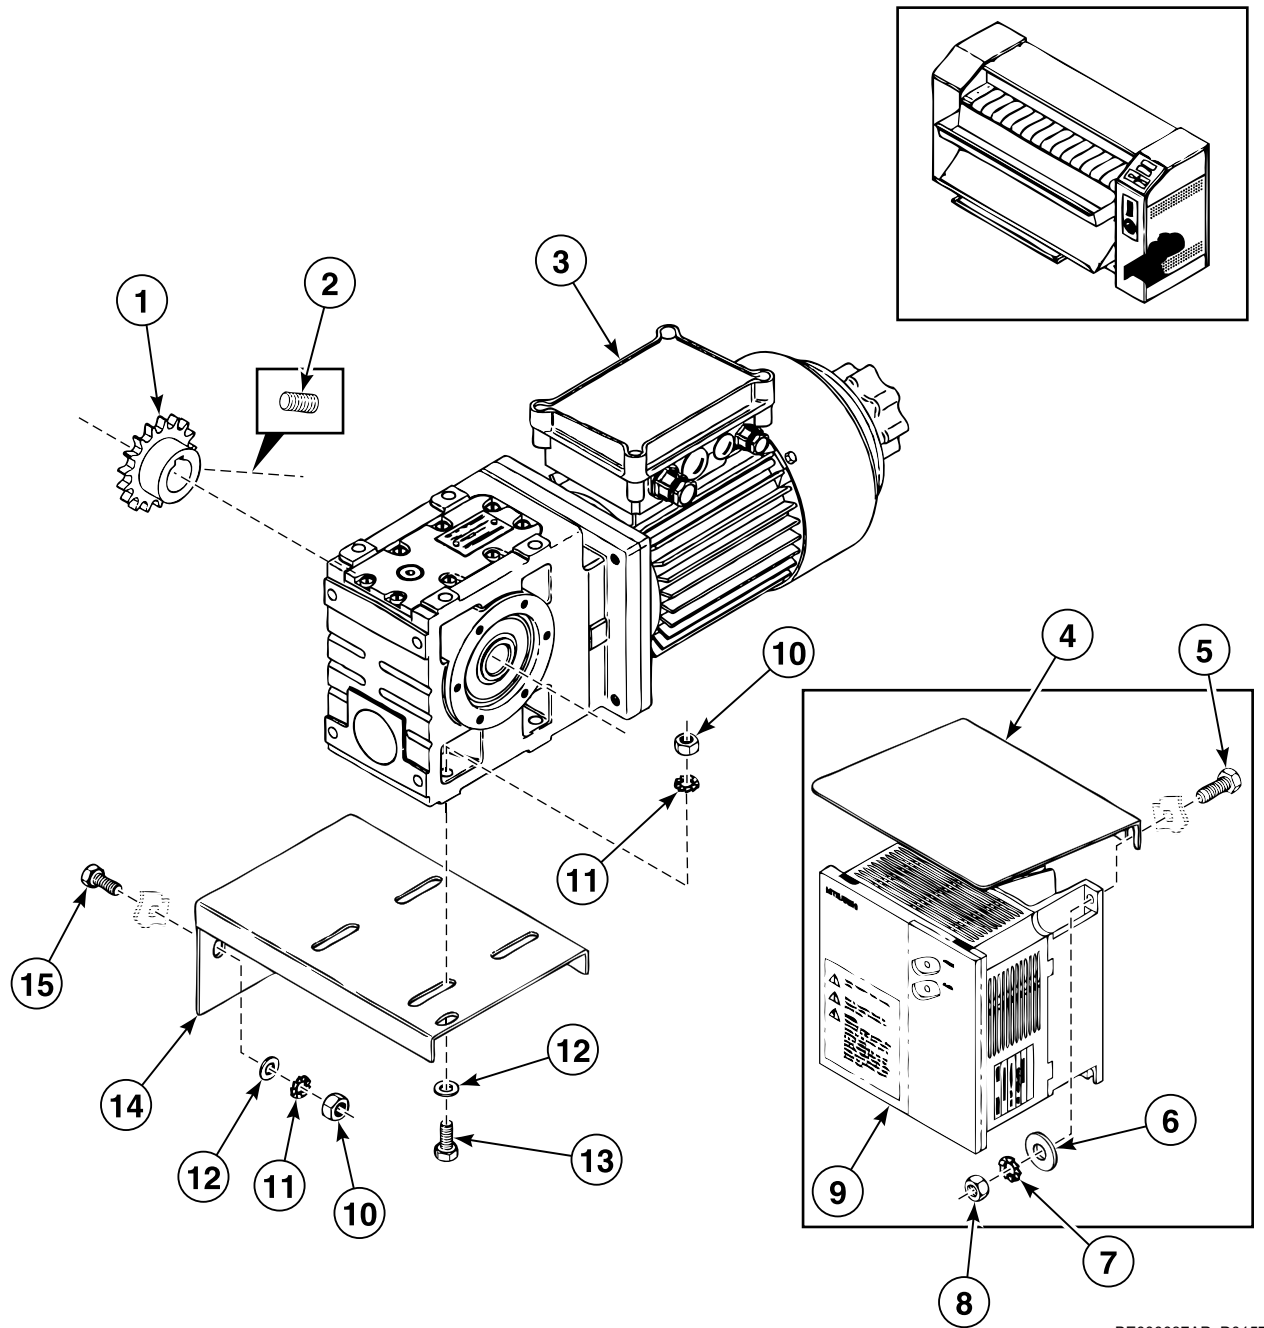


BE000087AP_D0157

Motor - DI2200/6 and DI2600/6 Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	084/12009/00	Sprocket	
2	206/00056/00	Screw	
3	084/12005/10	Drive Motor	
4	083/00247/10	Cap	
5	205/00106/00	Bolt	
6	202/00101/00	Washer	
7	203/00005/00	Washer	
8	204/00107/00	Nut	
9	227/00228/00	Inverter Drive	
10	204/00003/00	Nut	
11	203/00002/00	Washer	
12	201/00010/00	Washer	
13	206/00005/00	Bolt	
14	081/12027/00	Support Bracket	
15	206/00006/00	Bolt	

 Fan

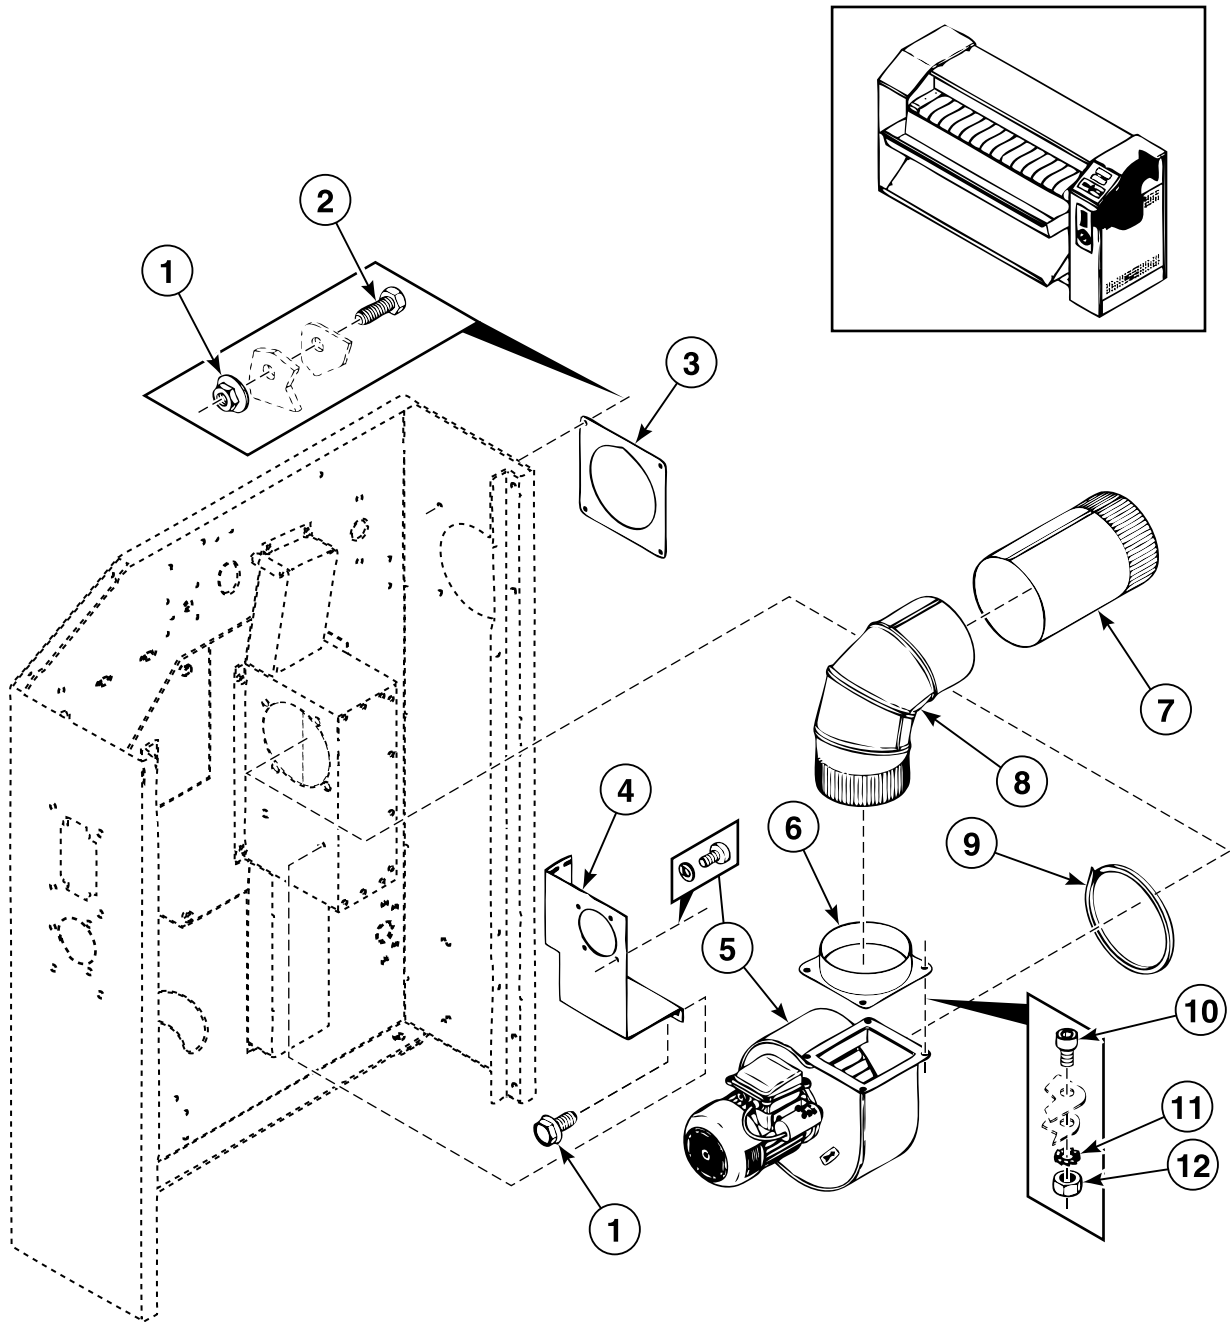


BE000089P_D0157

Fan

REF	PART NO.	DESCRIPTION	COMMENTS
1	206/00099/00	Bolt	
2	205/00104/00	Bolt	
3	083/12237/00	Exhaust Plate	
4	083/12235/00	Support Bracket	
5	085/12002/00	Fan	230 Volt/60 Hertz
	085/12003/00	Fan	230 Volt/50 Hertz
6	083/12235/10	Fan Plate	
7	710/00058/15	Exhaust Pipe	
8	710/00059/05	Bend	
9	246/00092/00	Gasket	
10	206/00081/00	Screw	
11	203/00003/00	Washer	
12	204/00004/00	Nut	

 Draught Valve

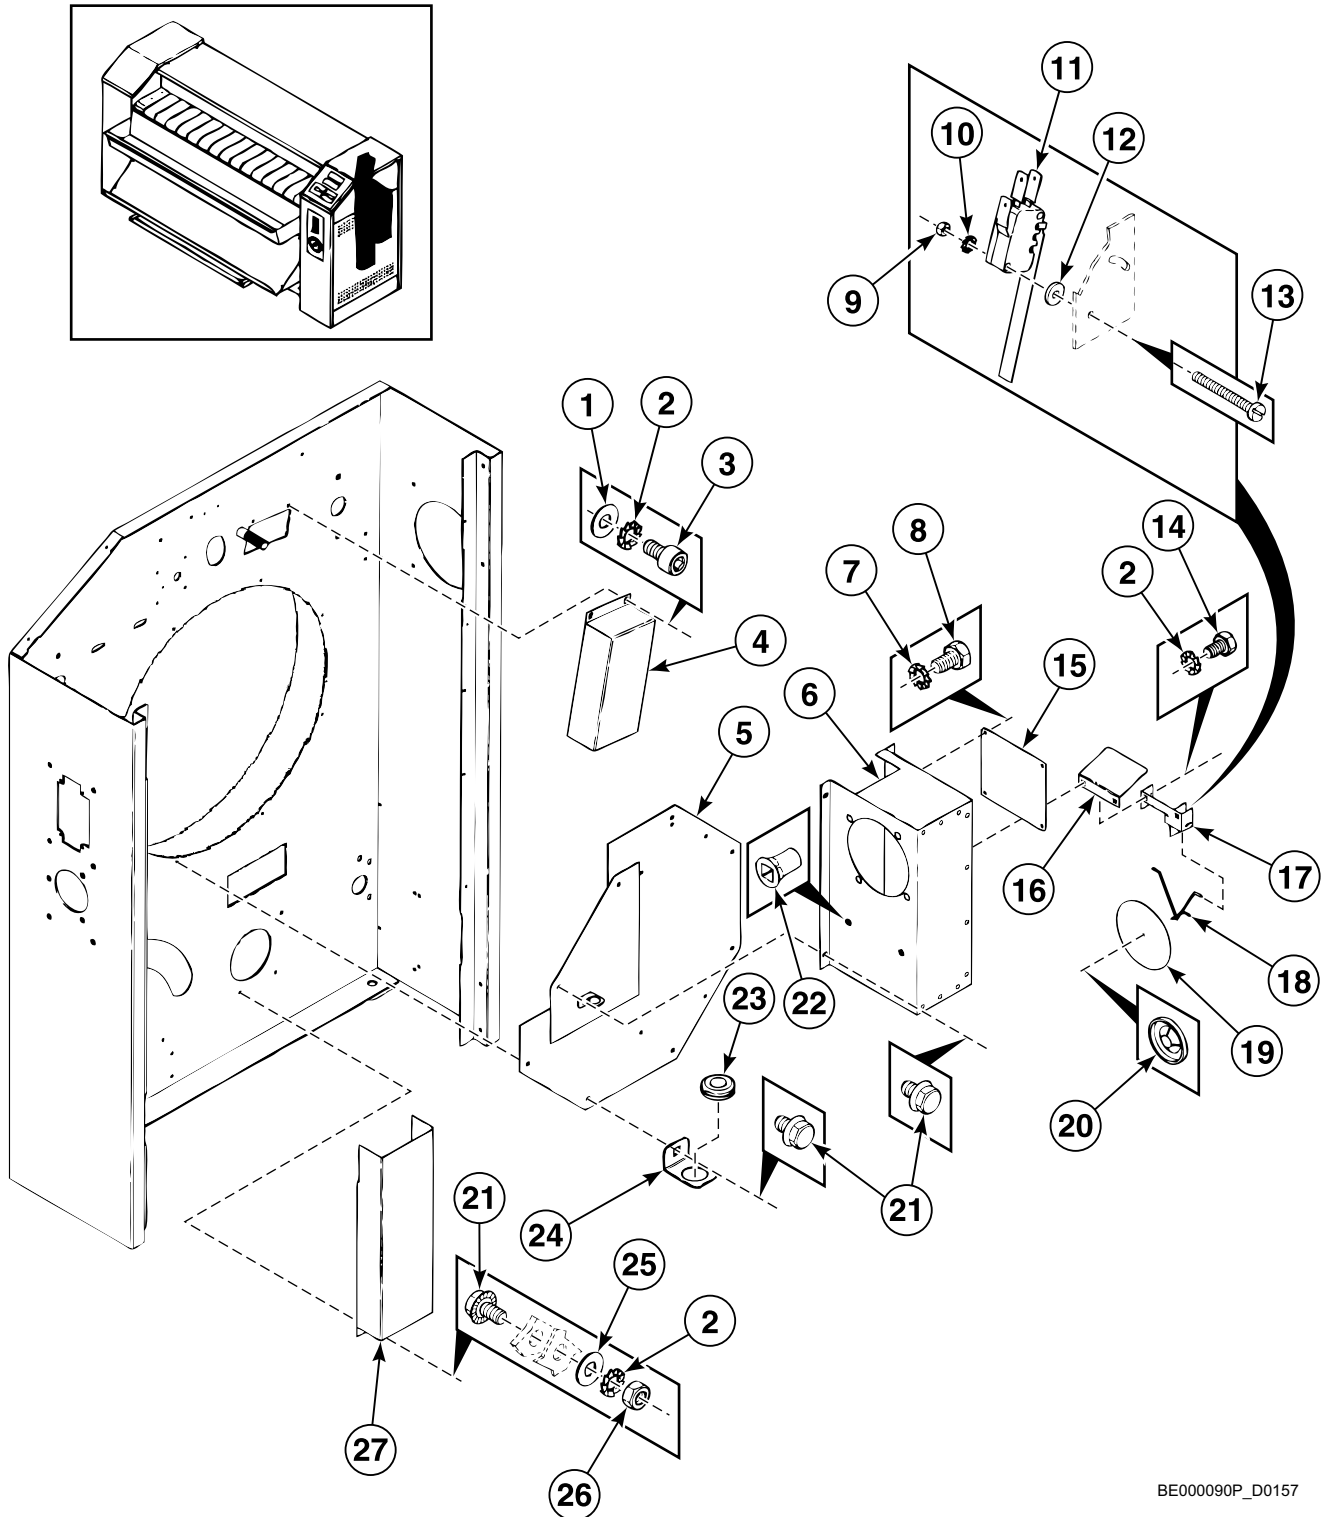


BE000090P_D0157

Draught Valve

REF	PART NO.	DESCRIPTION	COMMENTS
1	202/00101/00	Washer	
2	203/00004/00	Washer	
3	206/00074/00	Screw	
4	083/12206/00	Connecting Piece	
5	083/12208/00	Side Plate	
6	083/12203/00	Vacuum Chamber	
7	203/00006/00	Washer	
8	205/00113/00	Bolt	
9	204/00008/00	Nut	
10	203/00007/00	Washer	
11	271/36954/00	Microswitch	
12	223/00123/00	Washer	
13	207/00108/00	Screw	
14	206/00015/00	Bolt	
15	083/12203/03	Support Plate	
16	083/00245/00	Cap	
17	083/00008/00	Support Bracket	
18	083/00205/00	Hook	
19	083/00204/00	Valve	
20	208/00018/00	Fastener	
21	206/00099/00	Bolt	
22	204/00302/00	Nut	
23	225/00019/00	Holder	
24	083/00229/00	Hook	
25	202/00106/00	Washer	
26	204/00005/00	Nut	
27	083/12206/10	Connecting Piece	

 Gas Heating System


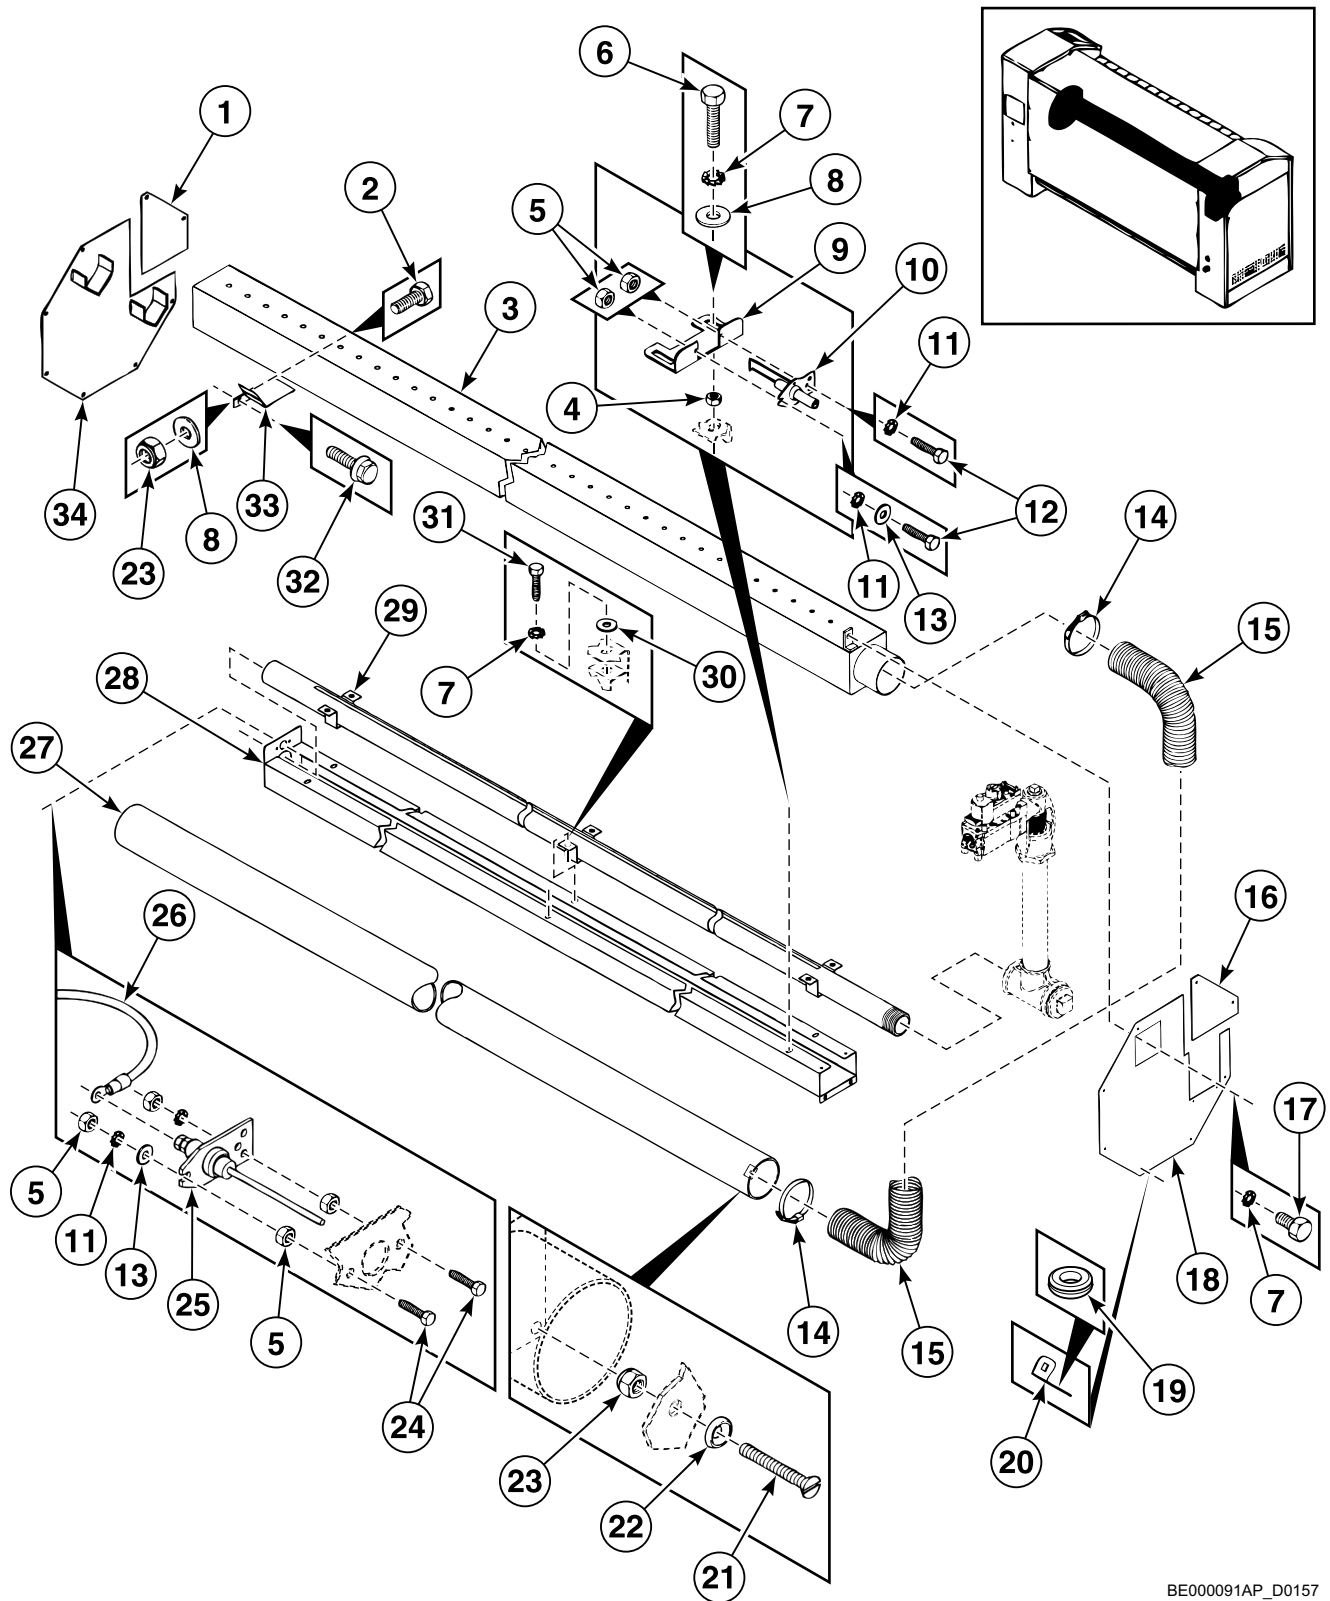


BE000091AP_D0157

Gas Heating System

REF	PART NO.	DESCRIPTION	COMMENTS
1	083/12223/00	Side Panel	
2	206/00014/00	Bolt	
3	083/10009/00	Exhaust Channel	Model DI1800/6
	083/11009/00	Exhaust Channel	Model DI2200/6
	083/12009/10	Exhaust Channel	Model DI2600/6
4	204/00005/00	Nut	
5	204/00007/00	Nut	
6	206/00086/00	Screw	
7	203/00004/00	Washer	
8	201/00007/00	Washer	
9	083/00226/00	Support Bracket	
10	085/00014/00	Ignition Electrode	
11	203/00006/00	Washer	
12	205/00113/00	Bolt	
13	202/00004/00	Washer	
14	223/00023/00	Hose Clamp	
15	084/12018/00	Exhaust Pipe	
16	083/12221/10	Side Plate	
17	205/00107/00	Bolt	
18	083/12221/00	Side Plate	
19	225/00019/00	Holder	
20	083/00229/00	Hook	
21	207/00119/00	Screw	
22	208/00009/00	Washer	
23	204/00009/00	Nut	
24	206/00088/00	Bolt	
25	085/00013/00	Electrode	
26	085/00012/04A	Cable	
27	083/10010/00	Exhaust Channel	Model DI1800/6
	083/11010/10	Exhaust Channel	Model DI2200/6
	083/12010/10	Exhaust Channel	Model DI2600/6
28	083/10224/00	Air Intake Channel	Model DI1800/6
	083/11224/00	Air Intake Channel	Model DI2200/6
	083/12224/00	Air Intake Channel	Model DI2600/6
29	084/10016/00	Gas Burner	1750 mm; Model DI1800/6
	084/11016/00	Gas Burner	2150 mm; Model DI2200/6
	084/12016/00	Gas Burner	2550 mm; Model DI2600/6
30	202/00106/00	Washer	
31	205/00105/00	Bolt	
32	206/00099/00	Bolt	
33	083/00202/04	Support Bracket	
34	083/10222/00	Side Plate	
	083/12222/00	Side Plate	

  Gas Valve

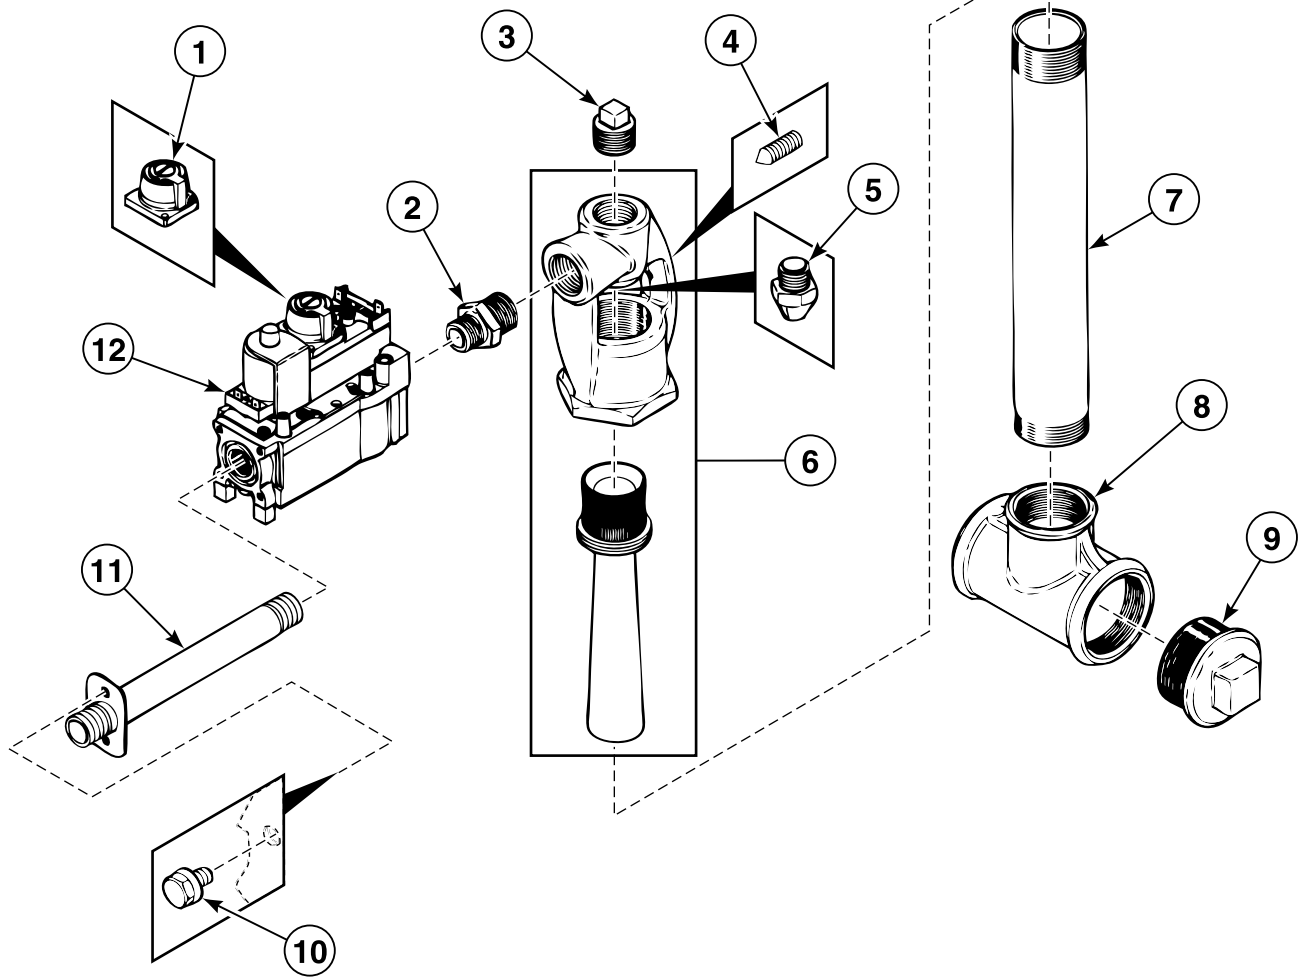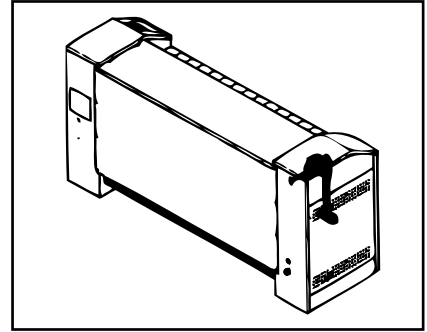


BE000092P_D0157

Gas Valve

REF	PART NO.	DESCRIPTION	COMMENTS
1	085/00010/01	Gas Conversion Kit	Liquid Petroleum Gas (L.P.)
	085/00010/02	Gas Conversion Kit	L.P. Gas
2	710/00032/08	Reducing Nipple	
3	710/00026/04	Socket	
4	084/00020/02	Screw	
5	084/00020/04	Burner Orifice	
	084/00020/05	Burner Orifice	
	084/00020/09	Burner Orifice	
6	084/12020/00	Burner Manifold	
7	084/10017/01	Tube	315 mm; Model DI1800/6
	084/11017/01	Tube	260 mm; Model DI2200/6
	084/12017/01	Tube	245 mm; Model DI2600/6
8	710/00031/05	T-Piece	
	710/00011/07	T-Piece	
	710/00037/10	T-Piece	
9	710/00026/01	Socket	2 inches
	710/00026/09	Socket	2.5 inches
10	206/00099/00	Bolt	
11	084/10021/00	Tube	380 mm; Model DI1800/6
	084/11021/00	Tube	350 mm; Model DI2200/6
	084/12021/00	Tube	355 mm; Model DI2600/6
12	085/00010/00	Gas Valve	

 Ignition Box - Gas Models

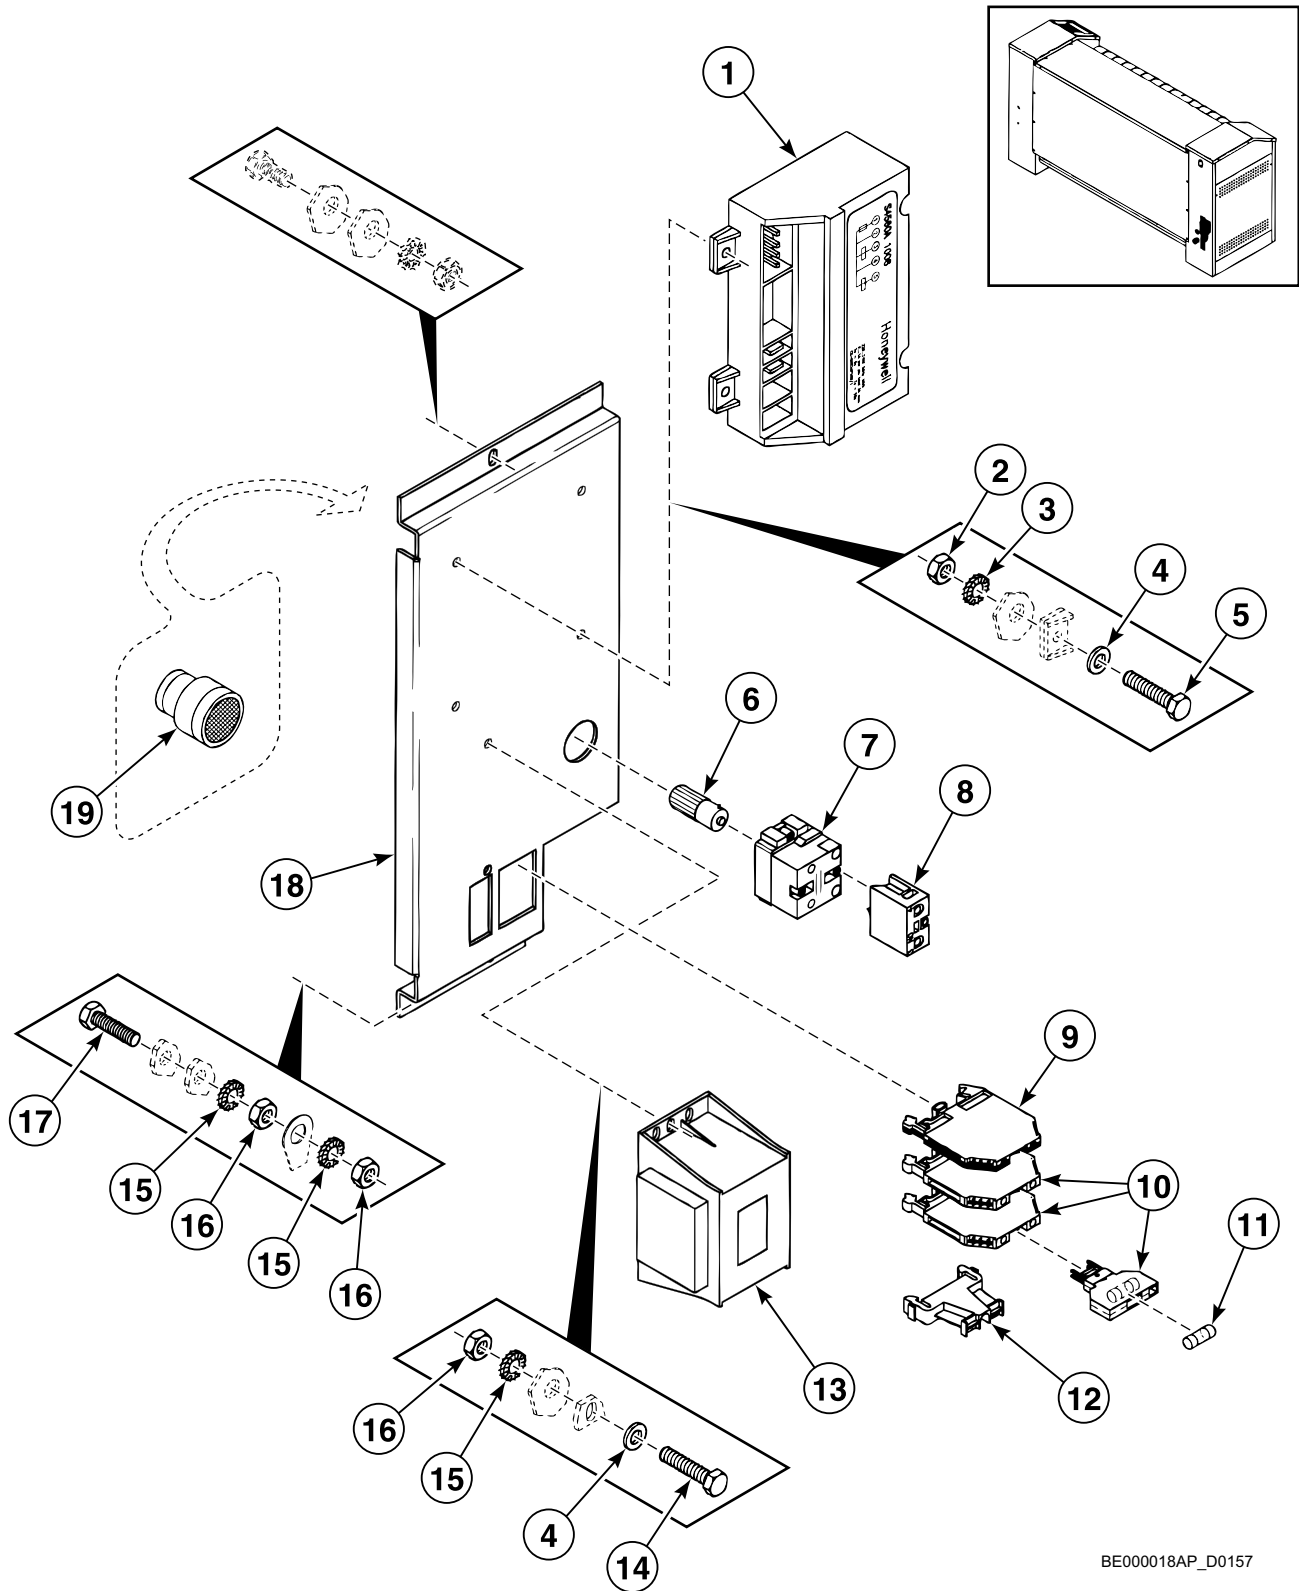


BE000018AP_D0157

Ignition Box - Gas Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	085/00009/00	Ignition Box	
2	204/00008/00	Nut	
3	203/00007/00	Washer	
4	202/00004/00	Washer	
5	207/00009/00	Screw	
6	209/00249/00	Pilot Light	
7	209/00254/00	Pushbutton	
8	209/00099/06	Contact Switch	
	209/00099/07	Contact Switch	
9	209/00318/06	Clamp	
10	209/00318/02	Clamp	
11	209/00412/00	Fuse	
12	209/00319/00	Clamp	
13	085/00011/00	Transformer	
14	206/00027/00	Bolt	
15	203/00006/00	Washer	
16	204/00007/00	Nut	
17	205/00113/00	Bolt	
18	083/00230/00	Plate Assembly	
19	209/00254/21	Pushbutton	

 Electric Heating System

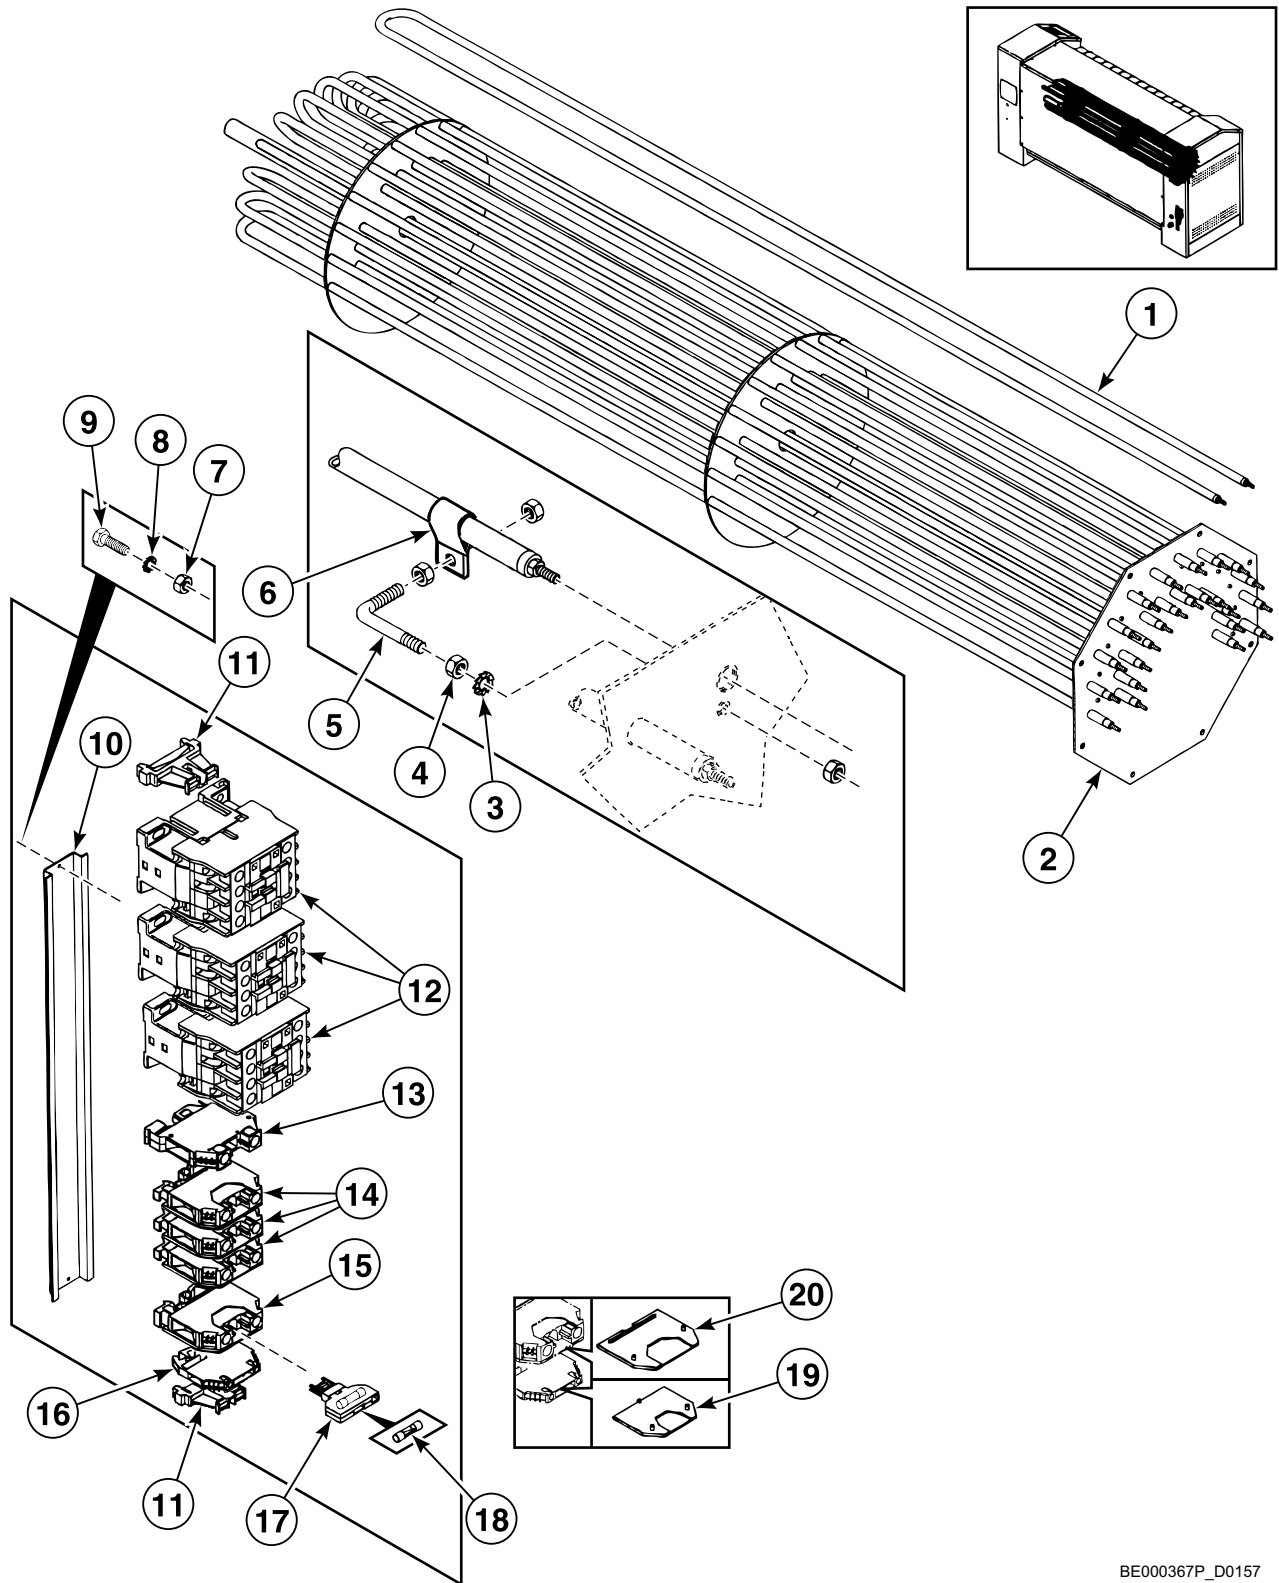


BE000367P_D0157

Electric Heating System

REF	PART NO.	DESCRIPTION	COMMENTS
1	085/00008/00	Heating Element	1900 mm; Model DI1800/6
	085/01008/00	Heating Element	2300 mm; Model DI2200/6
	085/12008/00	Heating Element	2700 mm; Model DI2600/6
2	081/10026/00	Support Piece	Model DI1800/6
	081/11026/00	Support Piece	Model DI2200/6
	081/12026/00	Support Piece	Model DI2600/6
3	203/00005/00	Washer	
4	204/00006/00	Nut	
5	083/00208/02	Hook	
6	083/00208/01	Clamping Bracket	
7	204/00007/00	Nut	
8	203/00006/00	Washer	
9	205/00113/00	Bolt	
10	720/00110/01	Rail	
11	209/00319/00	Clamp	
12	209/00148/02	Contactor	
13	209/00317/04	Clamp	No. 10
	209/00318/06	Clamp	No. 4
14	209/00317/01	Clamp	No. 10
	209/00318/01	Clamp	No. 4
15	209/00317/02	Clamp	
16	209/00318/01	Clamp	
17	209/00318/02	Clamp	
18	209/00412/00	Fuse	
19	209/00318/03	Connecting Piece	
20	209/00461/00	Connecting Piece	

 Steam Heating System

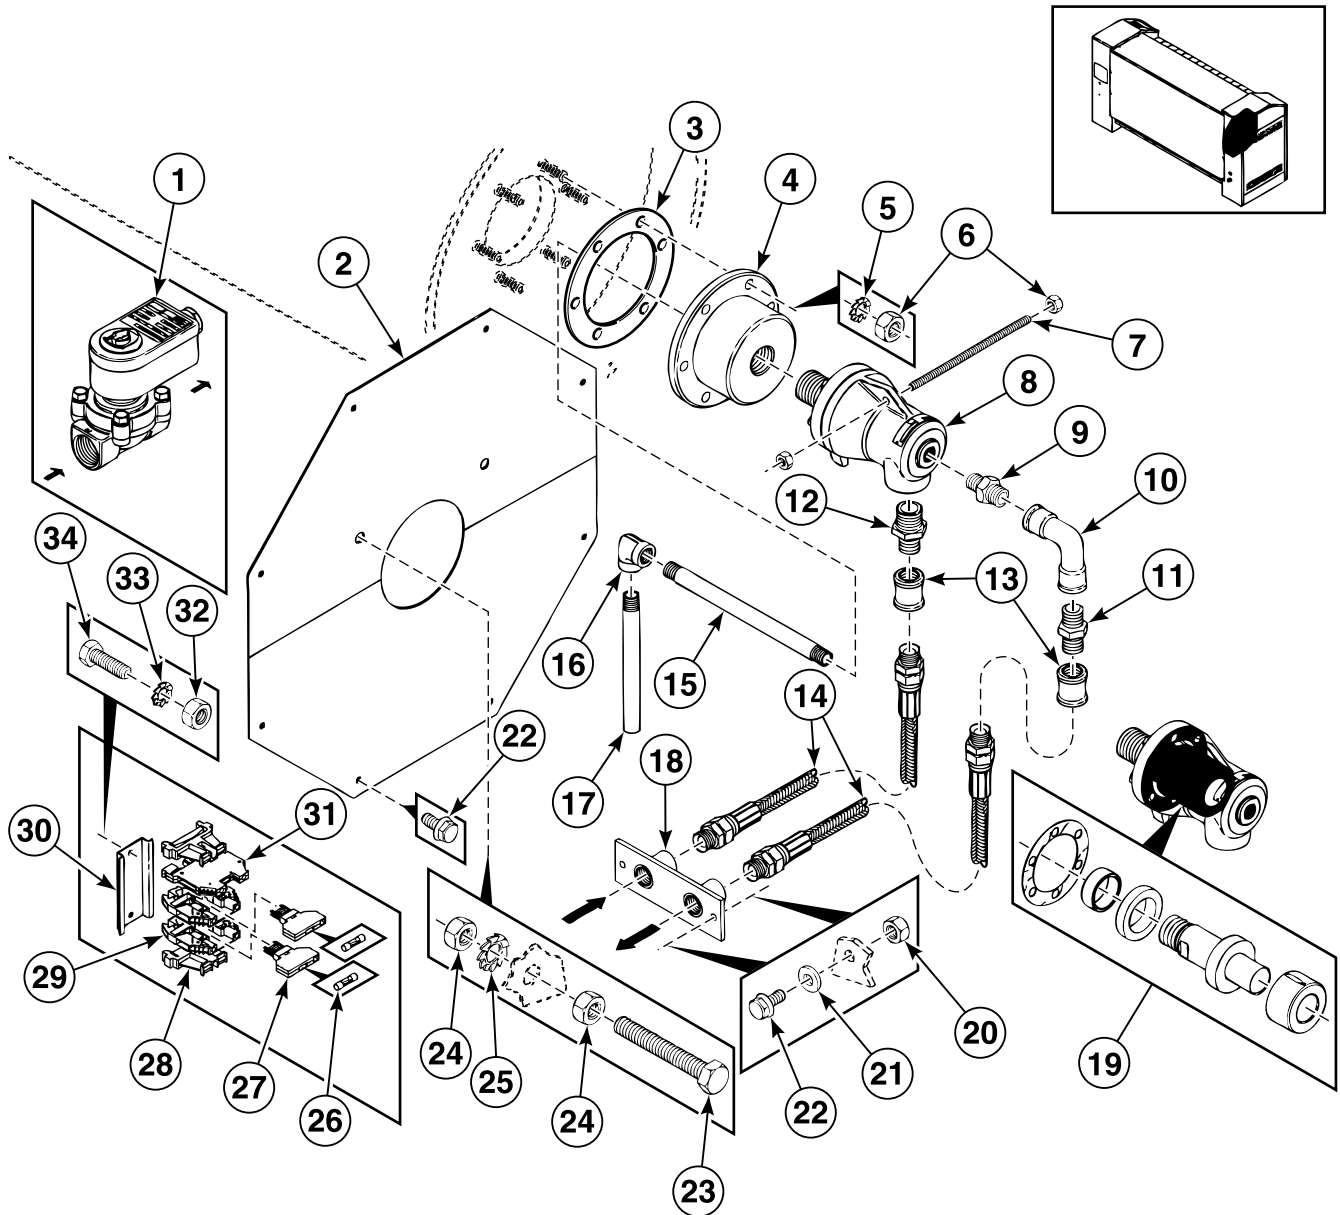

BE000020BP_D0157

Steam Heating System

REF	PART NO.	DESCRIPTION	COMMENTS
1	209/00189/00	Steam Valve	
2	083/12236/00	Side Plate	
3	084/00033/00	Pulley	
4	080/00001/00	Clutch	
5	203/00002/00	Washer	
6	204/00003/00	Nut	
7	084/00014/01	Rod	
8	084/00014/00	Clutch	
9	710/00032/11	Reducing Nipple	
10	710/00056/02	Elbow	
11	710/00009/02	Reducing Nipple	
12	710/00032/02	Reducing Nipple	
13	710/00010/02	Connecting Piece	
14	217/00028/00	Hose	
15	084/00019/02	Tube	
16	084/00019/01	Elbow	
17	084/12019/03	Tube	
18	081/00028/00	Connecting Piece	
19	080/00001/01	Conversion Kit	
20	204/00106/00	Nut	
21	201/00007/00	Washer	
22	206/00099/00	Bolt	
23	206/00073/00	Bolt	
24	204/00004/00	Nut	
25	203/00003/00	Washer	
26	209/00412/00	Fuse	
27	209/00318/02	Clamp	
28	209/00319/00	Clamp	
29	209/00318/01	Clamp	
30	720/00110/02	Rail	
31	209/00318/06	Clamp	
32	204/00007/00	Nut	
33	203/00006/00	Washer	
34	205/00113/00	Bolt	

[illegible]

Parts Index

A

Air Intake Channel	
083/10224/00	45
083/11224/00	45
083/12224/00	45
Assembly Plate	
083/12255/00	35
111/00953/00	33
Axle	
081/00024/00	29

B

Back Panel	
083/10001/00	7
083/11001/00	7
083/12001/00	7
Ball Bearing	
084/00026/00	9, 21, 23
084/00030/00	9, 21, 23
215/00018/00	11
215/00019/00	35
Belt	
082/12007/00	13
082/90001/00	17
082/91001/00	17
082/92001/00	17
Belt Adjuster	
081/12008/00	9, 21, 23
081/12009/00	9, 23
Bend	
710/00059/05	41
Blocking Piece	
083/12256/00	35
Bolt	
205/00104/00	15, 41
205/00105/00	45
205/00106/00	21, 23, 35, 37, 39
205/00107/00	5, 31, 45
205/00113/00	5, 43, 45, 49, 51, 53
206/00004/00	35
206/00005/00	37, 39
206/00006/00	5, 21, 23, 25, 27, 29, 37, 39
206/00009/00	27, 35
206/00010/00	37
206/00011/00	9, 21, 23, 25
206/00014/00	25, 45
206/00015/00	5, 31, 43
206/00027/00	49
206/00033/00	33
206/00042/00	29
206/00073/00	9, 21, 23, 53
206/00088/00	45
206/00099/00	5, 7, 15, 21, 23, 29, 41, 43, 45, 47, 53
206/00103/00	15
206/00112/00	9, 21, 23
206/00114/00	35
206/00119/00	9, 11
Bottom Plate	
083/10002/00	15

083/11002/00	15
083/12002/00	15
Brush Holder	
084/00025/00	15
084/01025/00	15
084/12025/00	15
Burner Manifold	
084/12020/00	47
Burner Orifice	
084/00020/04	47
084/00020/05	47
084/00020/09	47

C

Cable	
085/00012/04A	45
Cap	
083/00245/00	43
083/00247/10	37, 39
Chain	
084/00067/00	23
084/12007/00	19
084/12008/00	19
Circlips	
212/00033/00	11
212/00035/00	35
Circular Disk	
209/00329/00	31
209/00330/00	31
209/00331/00	31
209/00332/00	31
Clamp	
209/00317/01	51
209/00317/02	51
209/00317/04	51
209/00318/01	51, 53
209/00318/02	49, 51, 53
209/00318/06	49, 51, 53
209/00319/00	49, 51, 53
Clamping Bracket	
083/00208/01	51
Clutch	
080/00001/00	53
084/00014/00	53
Coin Box	
211/00071/00	33
211/00101/00	33
Coin Box Lock	
211/00065/00	33
Coin Box Ring	
111/00066/00	33
Coin Box Ring Assembly	
111/00100/00	33
Coin Drop Microswitch	
209/00060/12	33
Coin Meter	
209/00305/00	33
Compression Spring	
083/00241/00	29
083/00242/00	29

N/A items do not appear in index.

084/00015/00	27
Connecting Piece	
081/00028/00	53
081/12005/00	7
081/12006/00	5
081/12007/00	5, 7
083/12206/00	43
083/12206/10	43
209/00318/03	51
209/00461/00	51
710/00010/02	53
Connecting Pin	
082/00007/01	17
082/00008/02	13, 17
Contact Switch	
209/00099/06	49
209/00099/07	49
Contactactor	
209/00148/02	51
Control Pad	
229/00247/00	31
229/00256/00	31
Conversion Kit	
080/00001/01	53
Cordlock	
211/00117/00	37
211/00123/00	7
211/00138/00	7
Crossbar	
081/10004/00	5, 21, 23
081/11004/00	5, 21, 23
081/12004/00	5, 21, 23
Cylinder Shaft Key	
216/00007/00	35
Cylinder Support	
080/12004/00	13, 17

D

Disk	
083/00244/00	31
084/00005/01	37
Door Interlock Coil	
209/00017/00	35
Drain Valve Motor Assembly	
209/00170/06	15
Drain Valve Spring	
209/00170/02	15
Drive Motor	
084/12005/10	39
085/01003/00	37
Driving Roll	
082/00005/02	13, 17
082/11005/02	13, 17
082/12005/02	13, 17

E

Elbow	
084/00019/01	53
710/00056/02	53
Electrode	
085/00013/00	45

N/A items do not appear in index.

Exhaust	
083/10202/00	21, 23
083/11202/00	21, 23
083/12202/00	21, 23
Exhaust Channel	
083/10009/00	45
083/10010/00	45
083/11009/00	45
083/11010/10	45
083/12009/10	45
083/12010/10	45
Exhaust Pipe	
084/12018/00	45
710/00058/15	41
Exhaust Plate	
081/00002/01	5
083/12237/00	41

F

Fan	
085/12002/00	41
085/12003/00	41
Fan Plate	
083/12235/10	41
Fastener	
208/00018/00	43
Feed Tray Support	
083/00215/10	5
083/00216/10	5
Feeding Belt	
082/12008/10	13, 17
Feeding Roll	
082/10006/00	35
082/10006/05	13, 17
082/11006/00	35
082/11006/05	13, 17
082/12006/00	35
082/12006/05	13, 17
Feeding Table	
083/00212/00	25
083/01212/00	25
083/12212/00	25
Feeding Table Support	
083/00212/01	25
Feeding Tray	
083/10213/00	5
083/11213/00	5
083/12213/00	5
Finger Protection Panel	
083/00210/00	25
083/01210/00	25
083/12210/00	25
Front Plate	
111/00068/00	33
Fuse	
209/00412/00	49, 51, 53

G

Gas Burner	
084/10016/00	45
084/11016/00	45

084/12016/00	45
Gas Conversion Kit	
085/00010/01	47
085/00010/02	47
Gas Plate	
084/00021/02	7
Gas Valve	
085/00010/00	47
Gasket	
083/10211/02	7
083/11211/02	7
083/12211/02	7
246/00092/00	41
Guide Plate	
081/00022/01	29
083/00004/00	15

H

Heating Cylinder	
082/10003/00	9
082/11003/00	9
082/12003/00	9
Heating Element	
085/00008/00	51
085/01008/00	51
085/12008/00	51
Hinge Pin	
081/00023/01	29
Holder	
225/00019/00	43, 45
Hook	
083/00205/00	43
083/00208/02	51
083/00229/00	43, 45
Hook Lock Plate	
083/00234/02	35
Hose	
217/00028/00	53
Hose Clamp	
082/00009/00	13, 17, 35
223/00023/00	45

I

Ignition Box	
085/00009/00	49
Ignition Electrode	
085/00014/00	45
Inner Coin Box	
211/00070/03	33
Inverter Drive	
227/00228/00	37, 39
Ironing Belt	
082/12007/20	17

L

Lathe	
083/00217/03	21, 23
083/00218/02	5

083/01217/03	21, 23
083/01218/02	5
083/12211/01	7
083/12217/03	21, 23
083/12218/02	5
Left Side Piece	
081/12001/00	7
Limit Switch	
209/00327/00	25, 27
Lock	
720/00006/05	5
L-Profile	
081/12025/06	29

M

Magnet	
080/12003/01	35
084/12013/00	35
085/00022/00	35
Main Board Kit	
209/00397/10-1	31
Main Roller	
082/10002/10	9
082/11002/10	9
082/12002/10	9
Microswitch	
083/00219/00	25
209/00334/00	35
271/36954/00	43
Motor Spring	
226/00010/00	9, 21, 23
Mounting Piece	
083/00240/00	29
Mushroom Pushbutton	
209/00248/00	31

N

Nut	
204/00002/00	31
204/00003/00	5, 11, 21, 23, 25, 37, 39, 53
204/00004/00	9, 21, 23, 27, 29, 35, 41, 53
204/00005/00	5, 7, 9, 21, 23, 25, 33, 35, 43, 45
204/00006/00	35, 51
204/00007/00	25, 27, 31, 45, 49, 51, 53
204/00008/00	31, 33, 35, 43, 49
204/00009/00	25, 35, 45
204/00106/00	53
204/00107/00	37, 39
204/00109/00	35
204/00110/00	9, 21, 23, 27
204/00113/00	9, 21, 23
204/00114/00	29, 33
204/00116/00	35
204/00302/00	43
206/00101/00	5, 15, 25, 33, 35
208/00022/00	29
211/00023/01	7
211/00065/01	33
211/00132/00	25, 27

N/A items do not appear in index.

O

Operating Panel	
081/00014/00	31
Outer Cabinet Lock	
211/00070/01	33
Outer Coin Box	
211/00100/00	33

P

Payment System Label	
229/00275/00	31
Pedal	
081/00020/00	27
081/01020/00	27
081/12020/00	27
Pedal Support	
081/00010/00	27
081/00011/00	27
Pilot Light	
209/00249/00	49
Pipe	
081/00030/00	15
Plate Assembly	
083/00230/00	49
Plug	
211/00124/00	7
Pressure Roll	
082/00011/00	17
082/01011/00	17
082/12017/00	17
Printboard	
209/00451/00	33
Pulley	
084/00033/00	53
Pushbutton	
209/00254/00	49
209/00254/21	49
209/00396/00	33

R

Rail	
720/00110/01	51
720/00110/02	53
Rectifier	
085/00001/02	35
Reducing Nipple	
710/00009/02	53
710/00032/02	53
710/00032/08	47
710/00032/11	53
Reducing Ring	
720/00096/02	7
Return Feed Tray	
083/10214/00	5
083/11214/00	5
083/12214/00	5
Ribbon	
082/00016/00	17

Right Side Panel	
081/12002/00	5
081/12003/00	5
081/12003/01	5
Right Top Panel	
081/12016/00	5
081/12017/00	5
Ring	
084/12032/00	35
Rivet	
208/00017/00	29
Rod	
084/00014/01	53
Roll	
082/00004/00	13, 17
082/00004/20	13
082/10001/00	13, 17
082/10004/10	13, 17
082/11001/00	13, 17
082/11004/00	13, 17
082/11004/10	13, 17
082/11004/20	13
082/12001/00	13, 17
082/12004/00	13, 17
082/12004/10	13, 17
082/12004/20	13
Roll Guide	
083/00232/00	5
Roll Pin	
208/00013/00	33

S

Safety Thermostat	
085/00007/00	29
Scraper	
081/00025/02	29
Scraper Support	
081/00025/20	29
081/01025/20	29
081/12025/04	29
Screen Plate	
083/00220/00	25
Screw	
084/00020/02	47
205/00109/00	21, 23
206/00031/00	13, 17
206/00038/00	33
206/00056/00	17, 23, 37, 39
206/00074/00	43
206/00081/00	41
206/00086/00	45
206/00118/00	9, 21, 23
207/00009/00	33, 35, 49
207/00010/00	35
207/00014/00	35
207/00020/00	29
207/00021/00	27
207/00022/00	35
207/00031/00	33
207/00103/00	7
207/00108/00	33, 43
207/00112/00	25
207/00116/00	5
207/00119/00	5, 7, 45

N/A items do not appear in index.

207/00120/00	5, 7, 29
207/00121/00	25
208/00007/00	33
Separating Plate	
083/00217/02	21, 23
083/00218/00	5
Side Door	
081/12012/01	5
081/12013/00	5
081/12013/01	5
Side Panel	
081/12012/00	7
083/12223/00	45
Side Piece	
083/00210/05	25
083/00210/06	25
Side Plate	
083/10222/00	45
083/12208/00	43
083/12221/00	45
083/12221/10	45
083/12222/00	45
083/12236/00	53
Slide	
083/00005/00	15
Socket	
710/00026/01	47
710/00026/04	47
710/00026/06	9
710/00026/09	47
Speed Detector	
209/00400/00	31
Spindle	
111/00069/00	33
Spring	
083/00234/03	35
211/00070/04	33
Sprocket	
084/00011/00	13, 17
084/00012/00	11
084/02011/00	23
084/02012/00	23
084/12009/00	39
084/12010/00	37
084/12011/00	13, 17
084/12022/00	11
084/12028/00	13
Standoff	
211/00122/00	33
Steam Valve	
209/00189/00	53
Stop Plate	
083/00004/01	15
Support Bracket	
081/00025/05	29
081/01025/05	29
081/01027/00	37
081/12025/05	29
081/12027/00	39
083/00008/00	43
083/00202/04	45
083/00226/00	45
083/00234/01	35
083/00243/00	31
083/12235/00	41

Support Piece	
081/10026/00	51
081/11026/00	51
081/12026/00	51
Support Plate	
083/00003/00	15
083/00233/00	33
083/12203/03	43

T

Tape	
085/00021/04	13, 17
085/00021/08	13, 17
085/00021/09	13, 17
085/00021/10	13, 17
085/00021/11	13, 17
085/00021/12	13, 17
Thermostat	
085/00015/00	29
Thermostat Bracket	
083/00239/00	29
Thermostat Plate	
081/12022/00	29
Top Panel	
081/12015/00	7
083/10211/00	7
083/11211/00	7
083/12211/00	7
Top Panel Support	
083/00006/00	7
083/00007/00	7
T-Piece	
710/00011/07	47
710/00031/05	47
710/00037/10	47
Transformer	
085/00011/00	49
Tube	
084/00019/02	53
084/10017/01	47
084/10021/00	47
084/11017/01	47
084/11021/00	47
084/12017/01	47
084/12019/03	53
084/12021/00	47
221/00116/00	31

V

Vacuum Chamber	
083/12203/00	43
Valve	
083/00204/00	43

W

Washer	
080/00005/00	9, 21, 23
084/00006/03	37
201/00003/00	35

N/A items do not appear in index.

201/00007/00	21, 23, 45, 53
201/00010/00	9, 11, 21, 23, 25, 27, 37, 39
202/00002/00	29
202/00003/00	35
202/00004/00	31, 33, 35, 45, 49
202/00101/00	5, 31, 37, 39, 43
202/00106/00	43, 45
203/00001/00	35
203/00002/00	5, 11, 21, 23, 25, 29, 37, 39, 53
203/00003/00	29, 35, 37, 41, 53
203/00004/00	5, 7, 9, 21, 23, 25, 31, 33, 35, 43, 45
203/00005/00	21, 23, 35, 37, 39, 51
203/00006/00	25, 27, 31, 33, 43, 45, 49, 51, 53
203/00007/00	33, 35, 43, 49
208/00009/00	5, 7, 25, 45
211/00070/02	33
223/00123/00	31, 43
Wheel Support	
080/00002/00	11
