



 
COMMERCIAL INDUSTRIAL GAS DRYER SERVICE PARTS LIST

MODELS:

MLG35PDBWW. (White)

MLG35PDBWS. (Stainless)




OVERVIEW BREAKDOWN

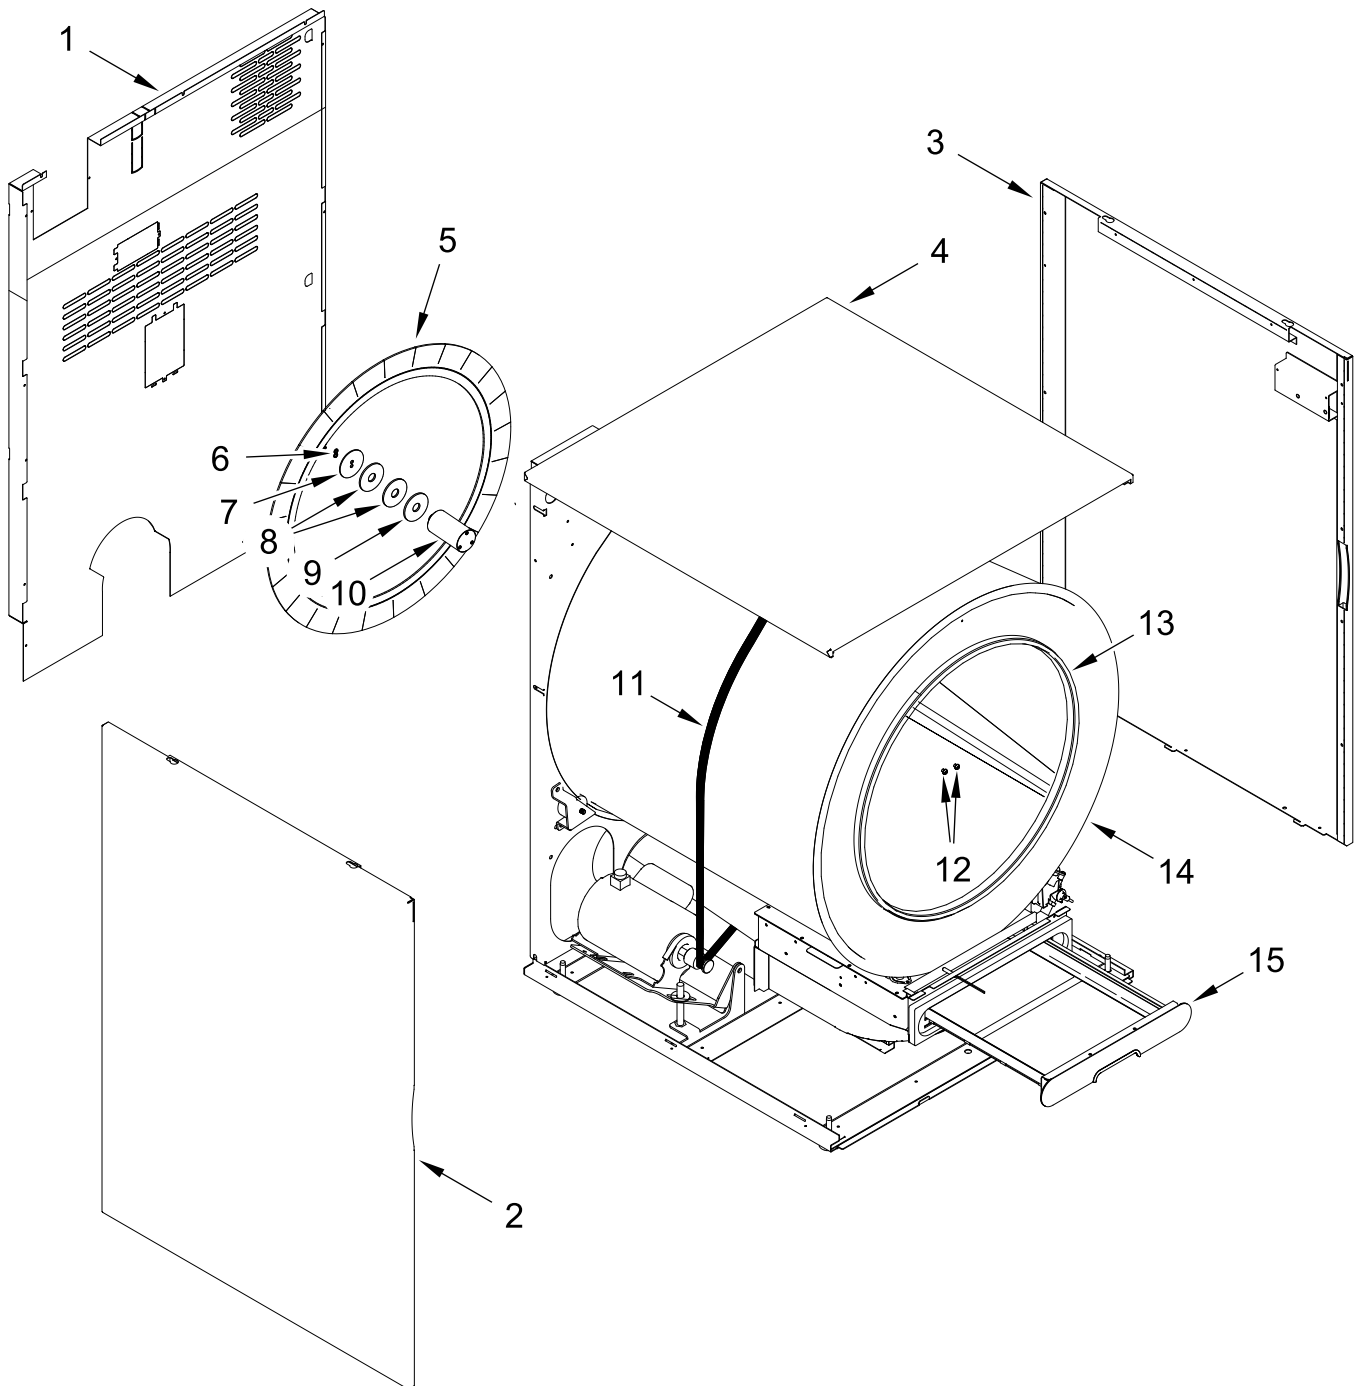

OVERVIEW BREAKDOWN

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR320724	Upper Back Guard	8	WFR153048	Friction Pad	14	WFR815175	Tumbler Assembly (Galvanized)
	WFR320716	Lower Back Guard	9	WFR354217	Spacer Plate			
	WFR816238	Exhaust Transition	10	WFR185240	Tumbler Shaft	15	WFR828401	Lint Screen Assembly (Black)
2	WFR801348	Left Side Assembly	11	WFR102407	Belt			
3	WFR801346	Right Side Assembly	12	WFR150126	Allen Bolt 1/4-20 x 1/2 in			
4	WFR801349	Outer Top		WFR350334	Tumbler Backup Washer			
5	WFR115910	Rear Tumbler Felt						
6	WFR153064	Screw 1/4-20 x 1/2 in	13	WFR115906	Front Tumbler Felt			
7	WFR185426	Backup Washer (2 Hole Screws)						

   
TRIM / CONTROL PANELS

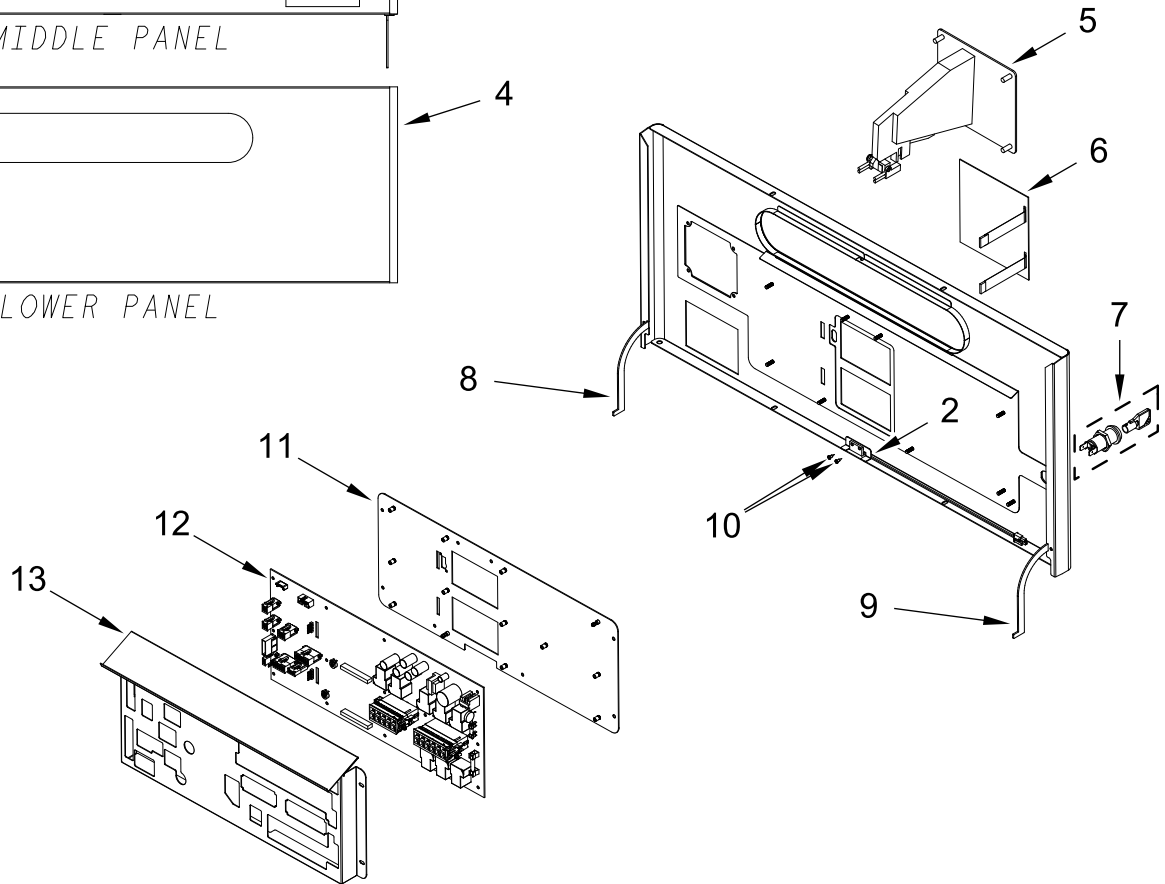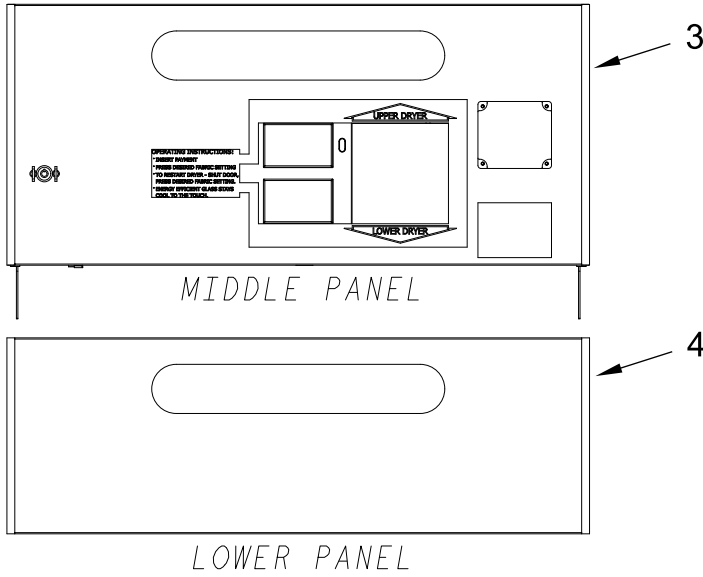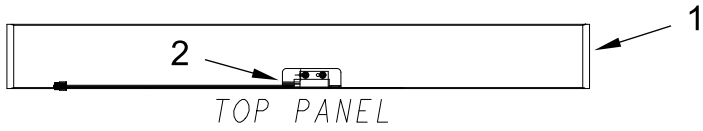

TRIM / CONTROL PANELS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR828384	Top Trim Panel Assembly (Specify color when ordering)	5	WFR818213	Coin Acceptor Assembly	12	WFR884478	Phase 8 Computer Board
				WFR887041	Optic Switch ONLY (25¢ Coin Acceptor)		WFR136116	Fuse 3 Amp (Fast Acting)
2	WFR819196	Door Switch Assembly	6	WFR112606	Keypad		WFR136056	Fuse 15 Amp (SLO-BLO)
3	WFR828383	Phase 8 Control Door	7	WFR160070	Control Door Lock Assembly	13	WFR319009	Phase 8 Control Cover
	WFR828396	Phase 8 Control Door Assembly (includes No(s) 3 and 5 through 14) (Specify color when ordering)	8	WFR185470	Control Panel Left Hinge			
			9	WFR185471	Control Panel Right Hinge			
			10	WFR150329	Screw 4 x 3/8 in			
4	WFR828400	Toe Panel (White)	11	WFR828395	Control Board Mount Assembly			

 
FRONT PANEL / DOOR ASSEMBLY

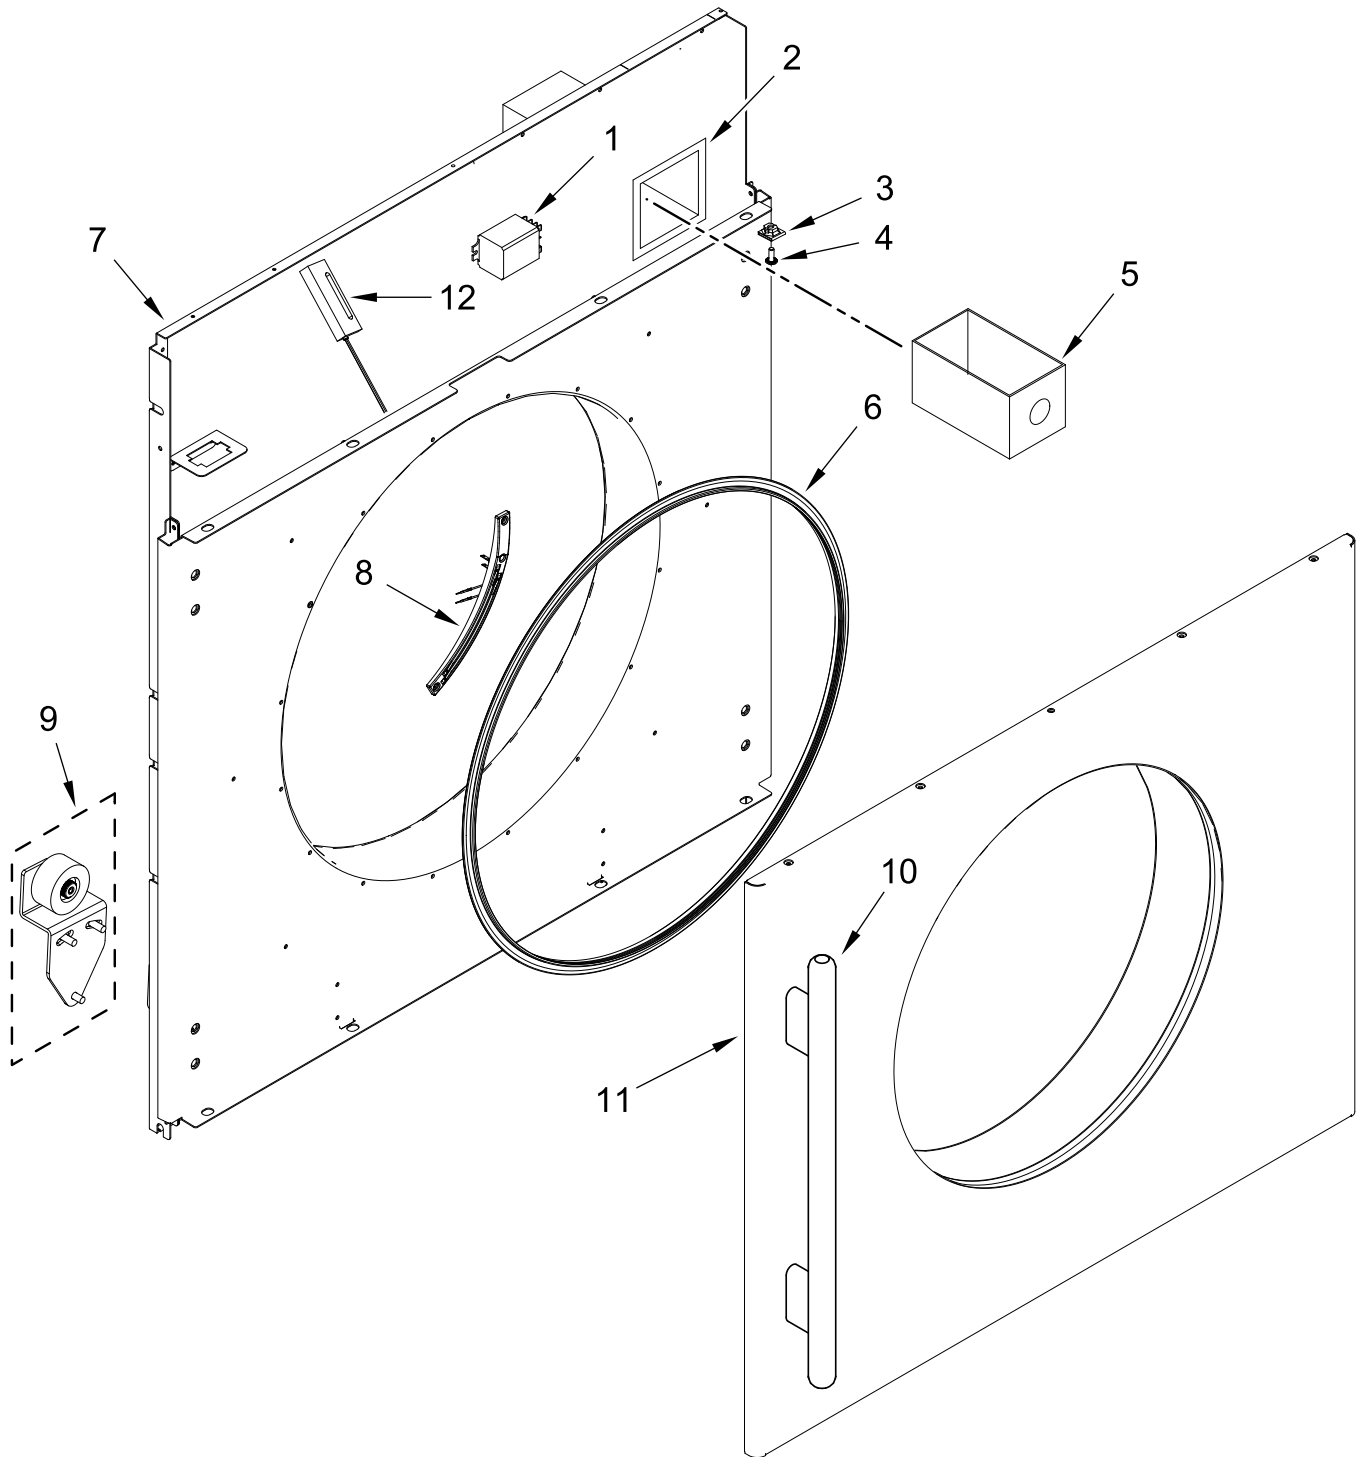

FRONT PANEL / DOOR ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR131819	Relay, Reversing 120V 25A	9	WFR818183	Front Right Wheel Assembly	11	WFR816197	Door Assembly Hinge Right Cold Rolled Steel (painted)
2	WFR819226	Coin Vault Assembly			(refer to Wheel Assembly page)		WFR816220	Door Assembly Hinge Right (Stainless Steel)
3	WFR154065	U Nut		WFR818184	Front Left Wheel Assembly	12	WFR819841	Rotation Sensor Assembly
4	WFR154364	Screw 10-16 x 1/2 in (Stainless Steel)			(refer to Wheel Assembly page)		WFR819573	Rotation Sensor Only
5	WFR125916	Coin Box	10	WFR185183	Door Handle			
6	WFR102396	Door Gasket		WFR185182	Standoff (Door Handle)			
7	WFR829080	Front Panel Assembly without Auto Cycle						
	WFR828165	Front Panel Assembly with Auto Cycle						
8	WFR819805	Moisture Control Sensor						

 
BLOWER ASSEMBLY

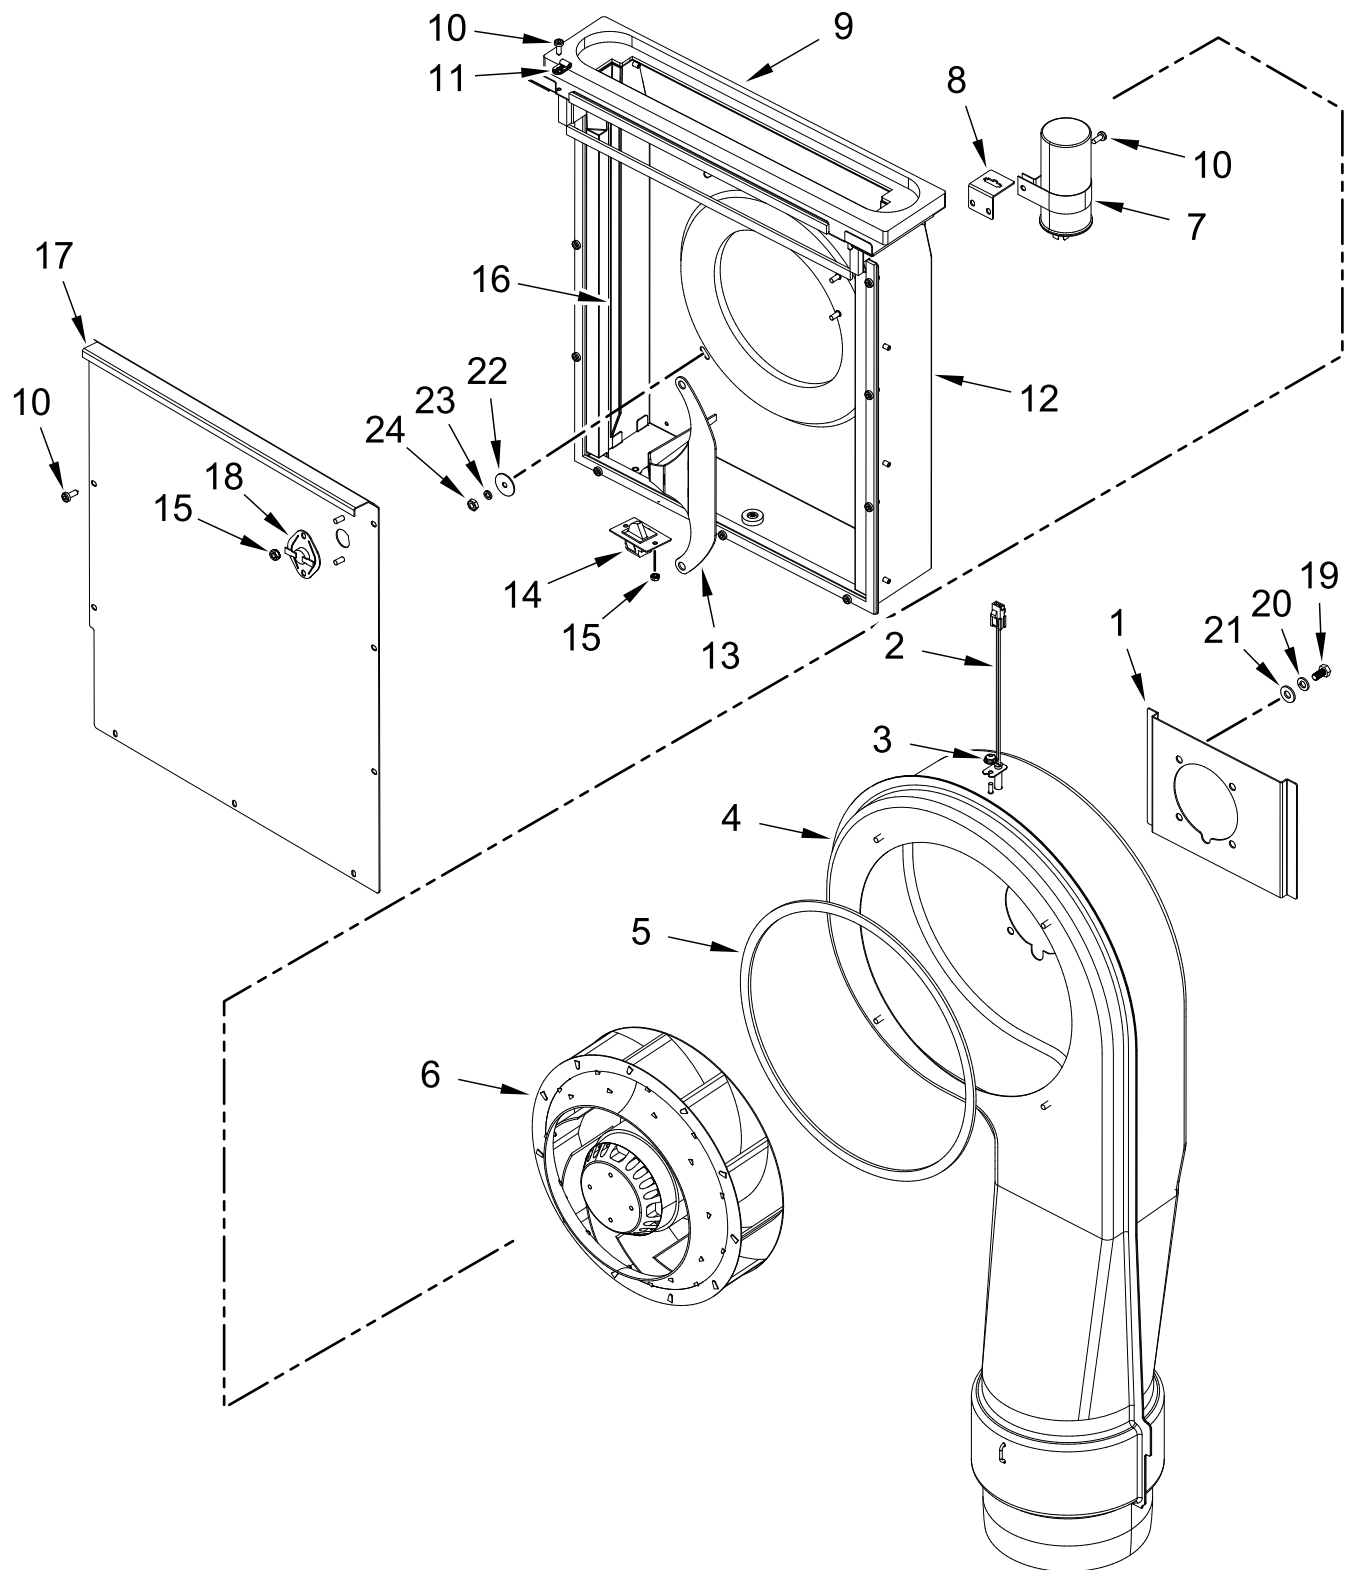

BLOWER ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR319460	Blower Housing Mount	9	WFR102368	Lint Gasket	18	WFR130119	190° Automatic High Limit
2	WFR830333	Phase 8 Exhaust Sensor	10	WFR150331	Screw 8-18 x 1/2 in	19	WFR150691	Bolt 6 x 12 mm
3	WFR151000	Nut 6-32	11	WFR121519	Cable Clamp 3/8 x 0.05 x 0.125 ID	20	WFR153007	Split Lock Washer 1/4 in
4	WFR828460	Blower Housing Assembly	12	WFR801375	Lint Box Housing	21	WFR153018	Flat Washer 1/4 in
5	WFR117604	Foam Tape (When Ordering Specify Length, sold by the inch)	13	WFR333717	Lint Blades Straight	22	WFR153049	Washer 0.203 ID x 0.875 OD x 0.040
6	WFR100674	Motorized Impellor 115V	14	WFR122002	Lint Drawer Switch Only	23	WFR153024	Split Lock Washer #10
7	WFR100683	Capacitor 20uF 440V	15	WFR153073	Nut 8-32	24	WFR152008	Nut 10-32
8	WFR185431	Lint Box Wire Support	16	WFR185215	Right Lint Rail			
				WFR185216	Left Lint Rail			
			17	WFR819419	Lint Box Top Assembly			

 
REAR PANEL ASSEMBLY

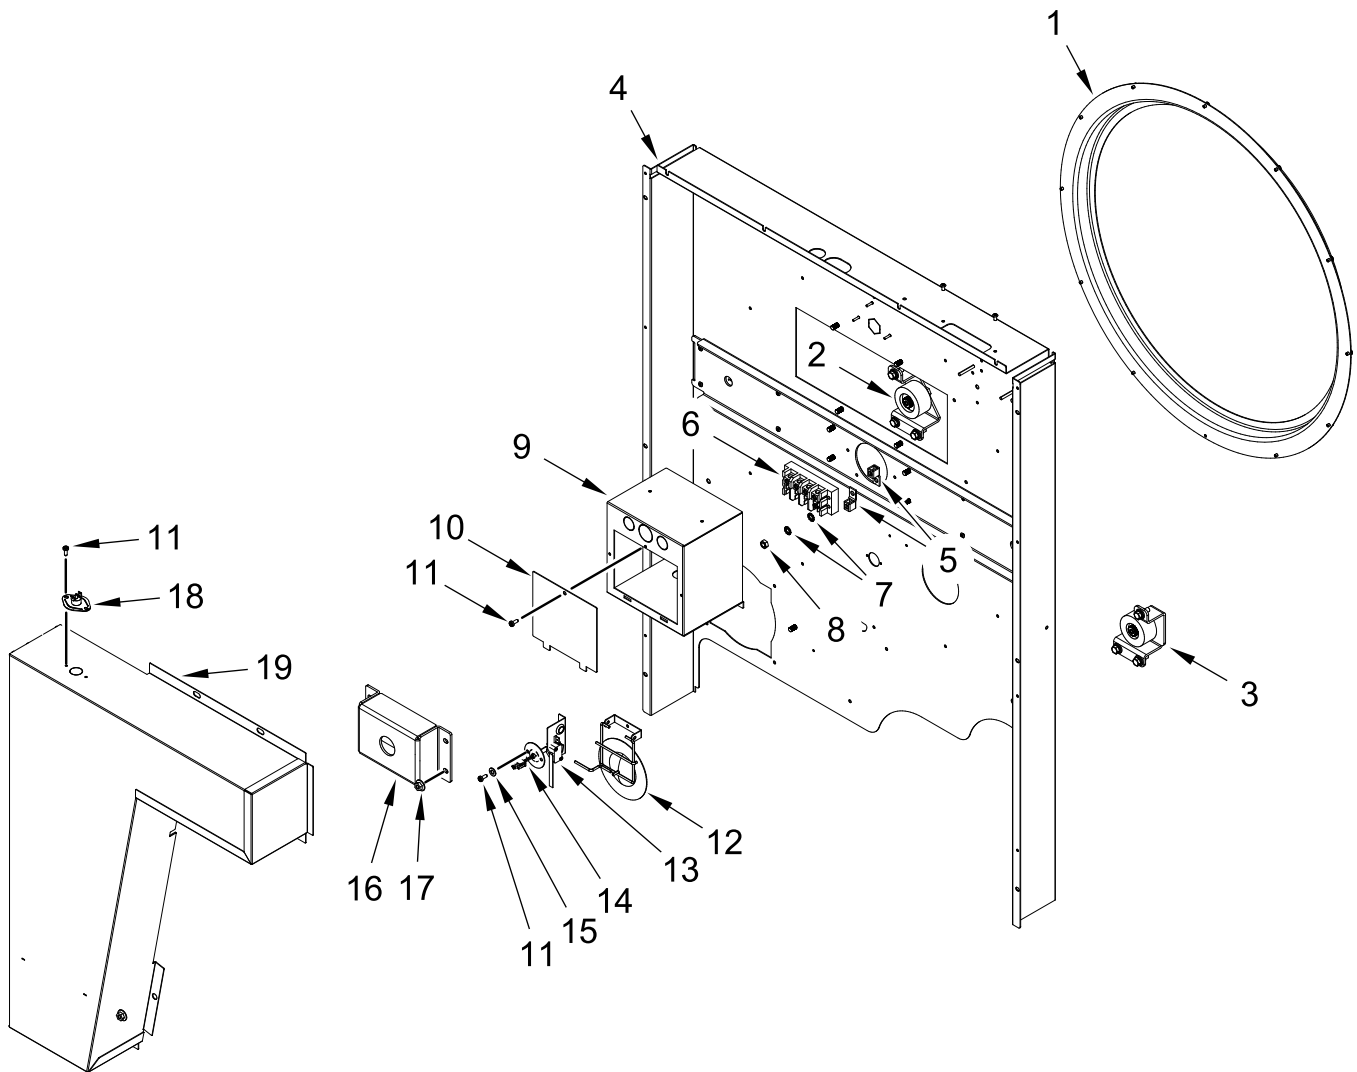

REAR PANEL ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR185650	Rear Bulkhead	7	WFR153021	Washer Serrated 1/4 in	14	WFR819188	Axial Temperature Sensor
2	WFR818110	Rear Left Roller Wheel	8	WFR152002	Nut 1/4-20	15	WFR153022	Washer #10
3	WFR818109	Rear Right Roller Wheel Assembly	9	WFR307088	Rear Electrical Box	16	WFR315434	Thrust Bearing Box
4	WFR828254	Rear Support Panel Stud Assembly	10	WFR185467	Electrical Cover	17	WFR152014	Serrated Hex Flange Nut 1/4-20
5	WFR121010	Lug Terminal 14-4 (Ground)	11	WFR150331	Screw 8-18 x 1/2 in	18	WFR183112	Thermostat High Limit
6	WFR120728	Terminal Block	12	WFR828238	Sail Switch Assembly	19	WFR815128	Heat Duct
			13	WFR150303	Screw #4 x 3/4 in			

 
GAS TRAIN ASSEMBLY

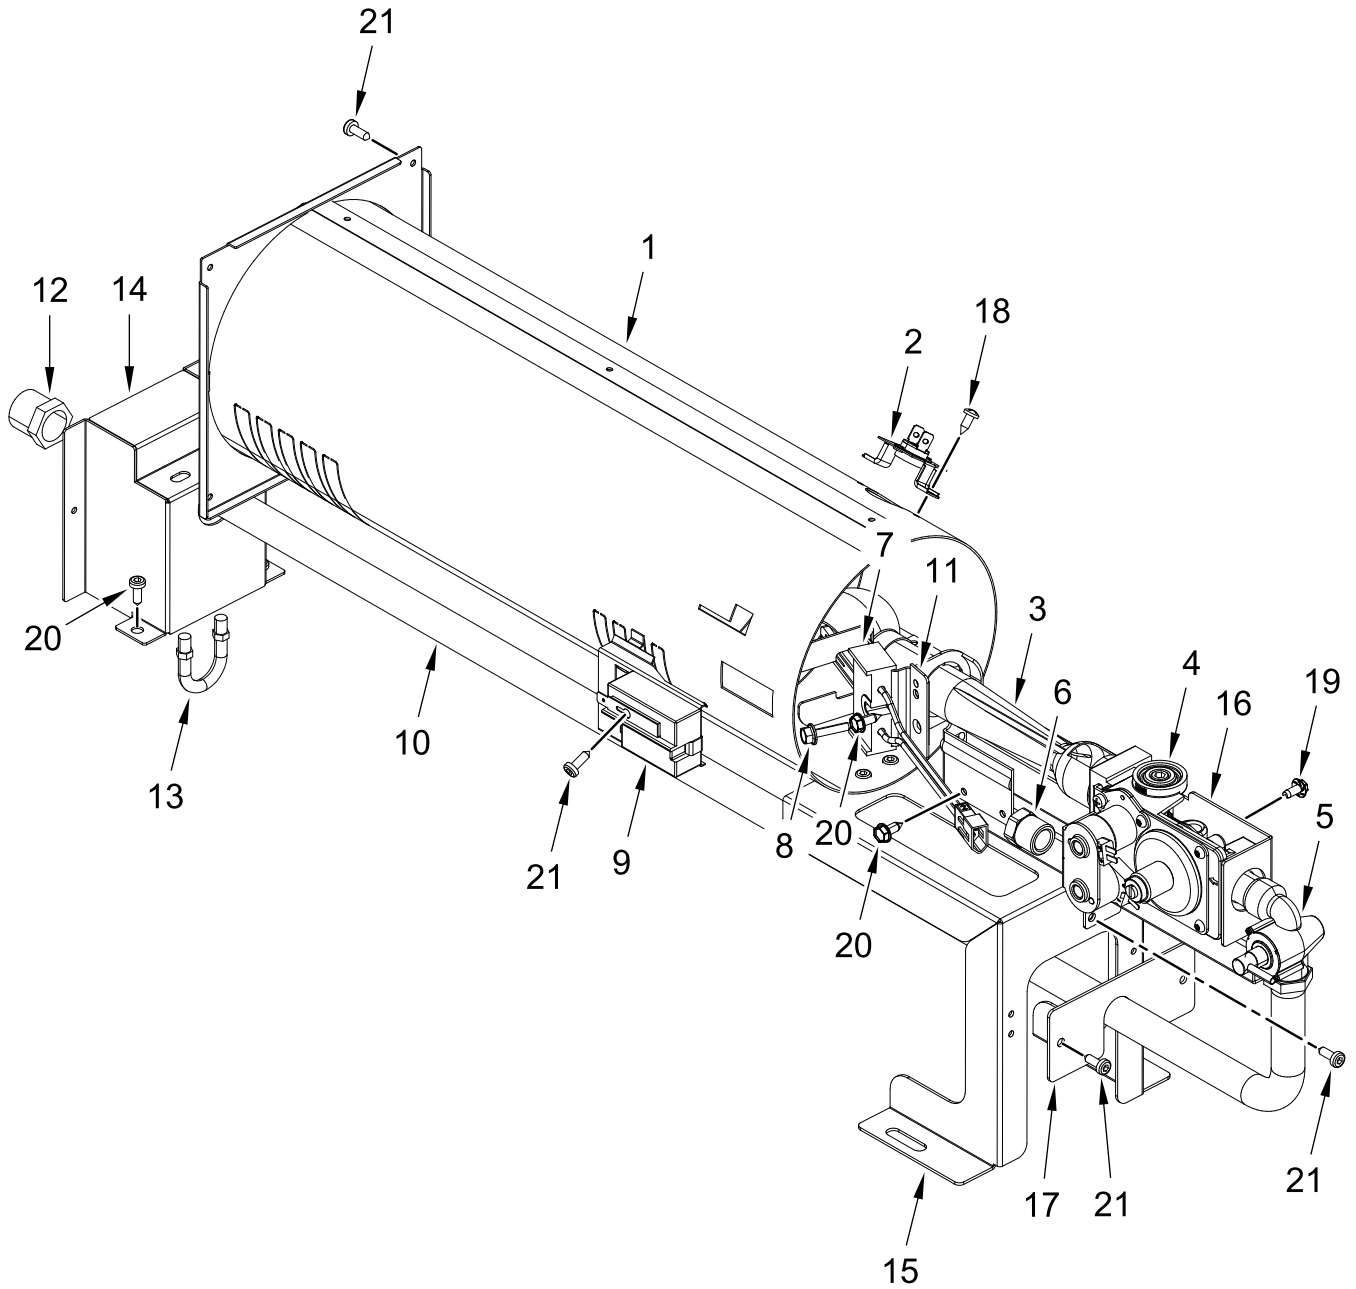

GAS TRAIN ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR819164	Burner Tube	7	WFR128910	Ignitor	15	WFR319332	Bracket, Gas Train Support
2	WFR183112	Thermostat High Limit	8	WFR183145	Screw 8-32 x 7/8 in	16	WFR307090	Bracket, Gas Valve
3	WFR183144	Tube, Burner	9	WFR130500	Radiant Control	17	WFR307093	Bracket, Gas Pipe Stabilizer
4	WFR128981	Valve Gas 60 Hz. (Complete)	10	WFR141262	Gas Pipe 3/8 x 26.75 in	18	WFR150301	Screw 8-18 x 7/16 in
5	WFR141318	Union Shutoff 90° 3/8 in	11	WFR185063	Bracket, Ignitor	19	WFR152209	Screw 8-18 x 3/8 in
6	WFR140888	Orifice, Burner (Natural #23)	12	WFR142953	Reducer 1/2 x 3/8 in	20	WFR152208	Screw 10-16 x 1/2 in
	WFR140876	Orifice, Burner (Propane #42)	13	WFR154356	U-Bolt (with Wing Nuts)	21	WFR150331	Screw 8-18 x 1/2 in
	WFR884448	LP Conversion Kit	14	WFR185434	Bracket, Gas Pipe			

 
WHEEL ASSEMBLY

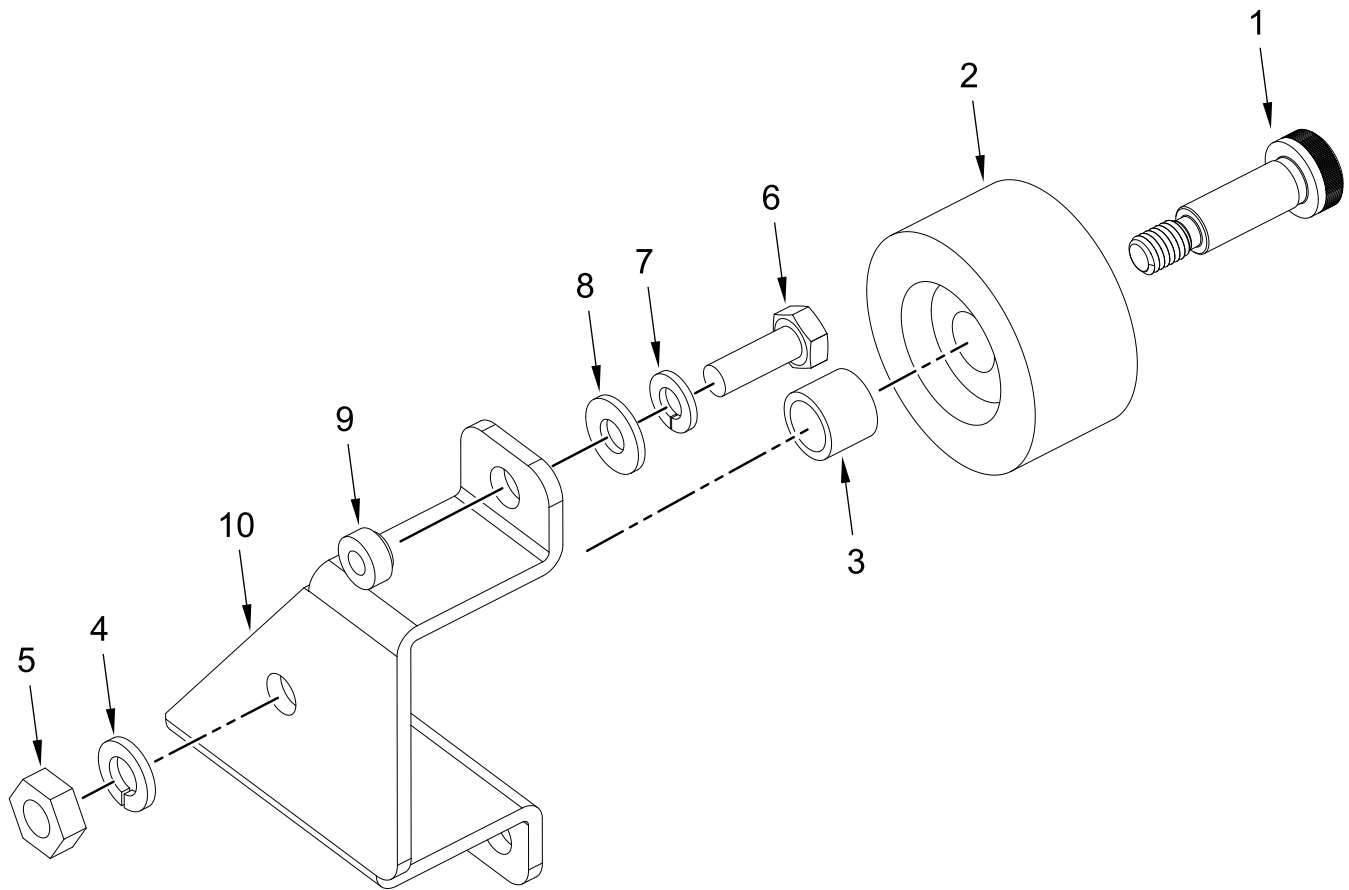

WHEEL ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR154264	Screw M8 x 25mm	7	WFR153007	Split Lock Washer 1/4 in	10	WFR185233	Bracket, Rear Right Roller Wheel
2	WFR180050	Roller Wheel						
3	WFR154284	Tumbler Wheel Spacer	8	WFR153018	Flat Washer 1/4 in		WFR185234	Bracket, Rear Left Roller Wheel
4	WFR153002	Split Lock Washer 5/16 in	9	WFR153564	Nut 1/4-20		WFR185235	Bracket, Front Right Wheel
5	WFR154013	Nut M8						
6	WFR150510	Bolt 1/4 x 3/4 in					WFR185236	Bracket, Front Left Wheel


 
MOTOR ASSEMBLY

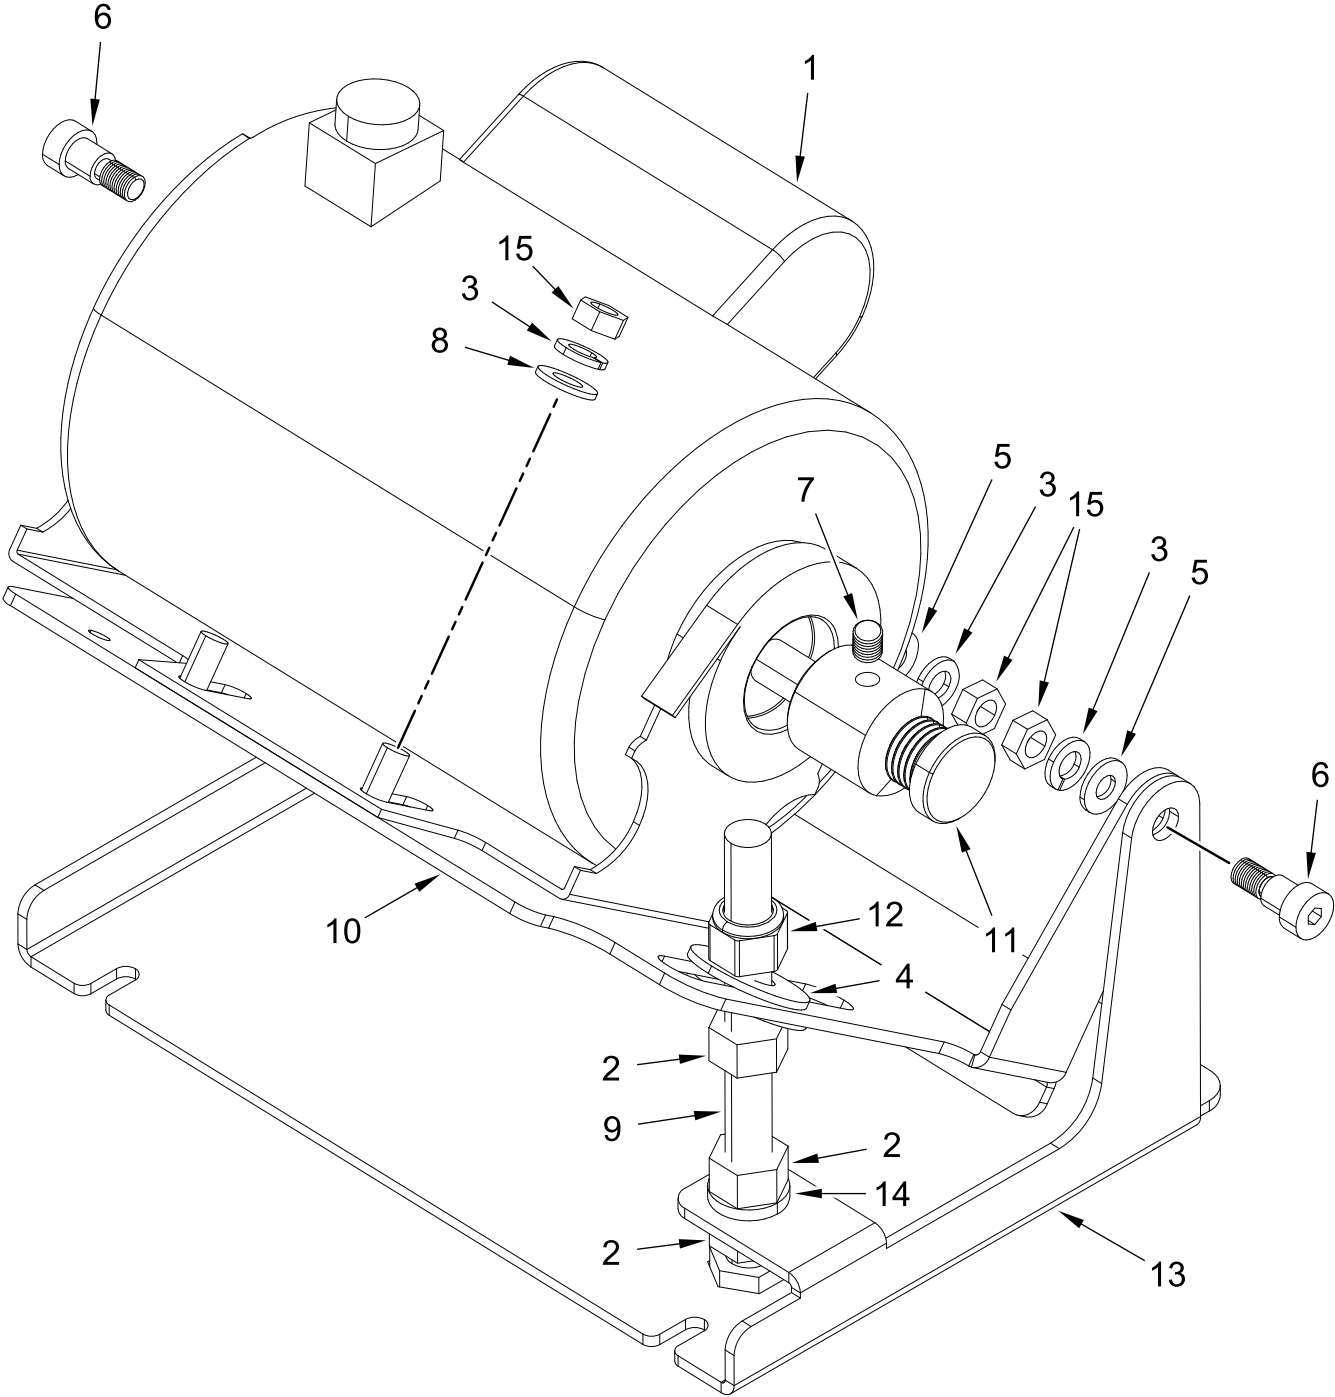

MOTOR ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR887196	Motor 60 Hz	7	WFR154321	Set Screw 5/16-24 x 3/8 in (Black)	12	WFR152028	Lock Nut 1/2-13
2	WFR152011	Nut 1/2-13	8	WFR153001	Washer 5/16 in	13	WFR319266	Motor Mount Base Plate
3	WFR153002	Split Lock Washer 5/16 in	9	WFR150616	Bolt 1/2-13 x 5-1/2 in	14	WFR153026	Lock Washer 1/2 in
4	WFR153011	Flat Washer 9/16 in	10	WFR819710	Bracket, Motor Mount (with Studs)	15	WFR152004	Nut 5/16-18
5	WFR153018	Flat Washer 1/4 in	11	WFR319933	Restrainer, Belt Pulley			
6	WFR154266	Shoulder Bolt 5/16-18 x 3/8 in						

  S.A.F.E. SYSTEM ASSEMBLY

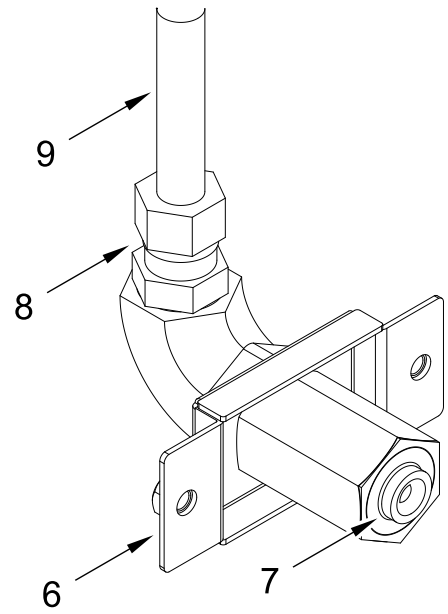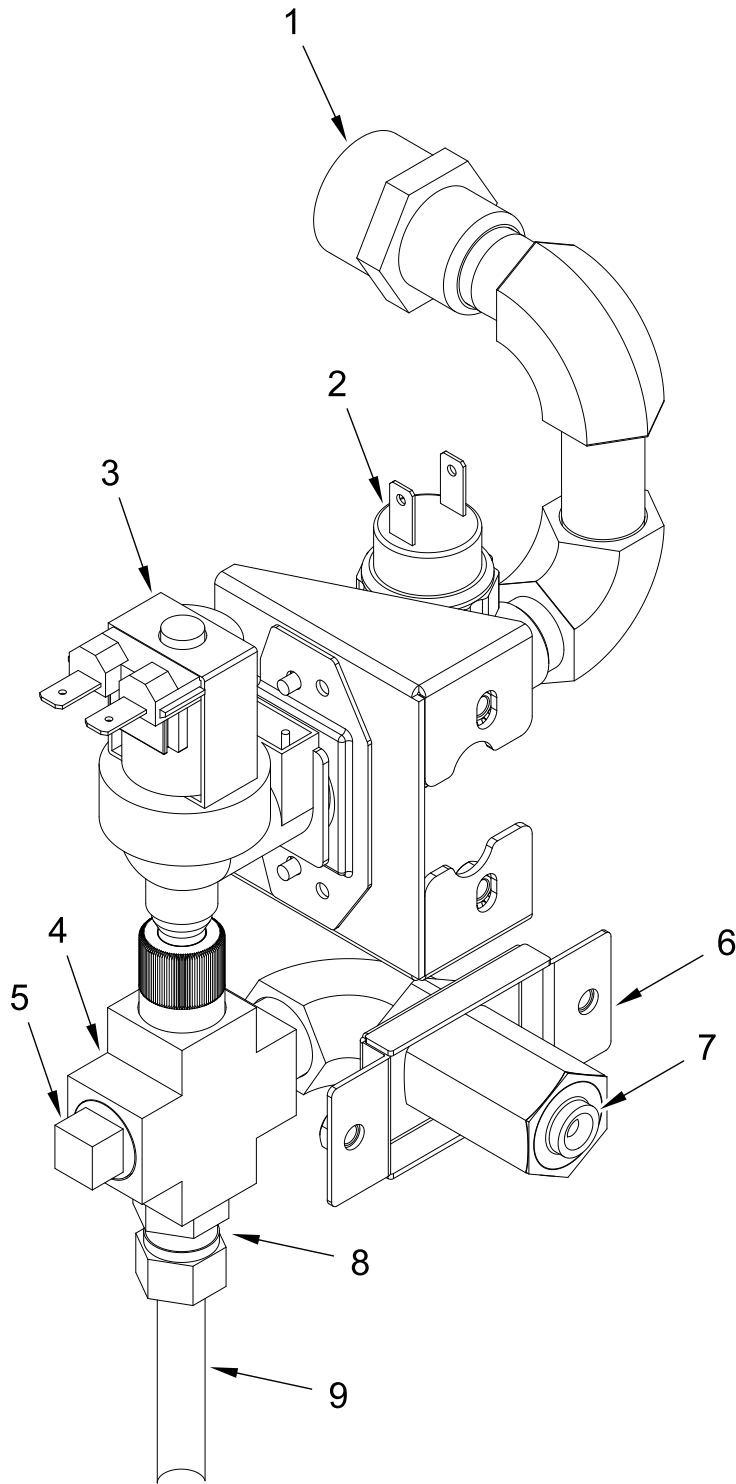

S.A.F.E. SYSTEM ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR143356	Nylon Adaptor 3/8 x 3/4 in	5	WFR143251	Plug 3/8 in	8	WFR143208	Brass Connect 3/8 x 3/8 in
2	WFR136987	Water Pressure Switch	6	WFR318422	S. A. F. E. System Bracket	9	WFR143099	Tube 3/8 in
3	WFR165120	Water Valve	7	WFR143581	S. A. F. E. System Spray Nozzle 3 GPM 3/8 in			
4	WFR143236	Brass Cross Connector 3/8 in						