

# **Operating manual**

**T3300S / TD30•30**

**Gas heating**

487 19 45 21.06  
GB

### Additional safety instructions and warnings

#### Using the dryer

- **Do not** operate this appliance before reading the instruction booklet.
- **Do not** put articles containing foam rubber, plastic or similarly textured rubberlike materials in the dryer.
- **Do not** dry mopheads or articles exposed to gasoline, kerosene, paint wax, grease, combustible detergent or all purpose cleaners.
- **Do not** use heat for drying foam rubber items or similarly textured rubberlike materials.
- **Do not** put articles soiled with flammable liquids, vegetable- or cooking oils in dryer.
- **Do not** load materials containing flammable solvents into this appliance
- **Do not** reach into dryer until all moving parts have stopped.
- **Do not** let children play in or near dryer.
- **Do not** operate with panels, covers or guards removed from this appliance.
- Remove articles being dried immediately after tumbler stops.
- Lint screen must be cleaned in accordance with the manufacturer`s recommended frequency guidelines.
- Avoid overdrying items such as silk and wool, as shrinkage or fabric damage may result.

#### The area surrounding the dryer

- **Do not** store or use flammable liquids near the dryer.
- **Do not** store chemicals, or spray aerosols near this appliance.
- **Do not** store or use aerosols or cleaning solvents in the vicinity of the dryer. Some chemicals used in laundries contain Chlorine (some dry-cleaning fluids, aerosols and bleach) When exposed to a flame, these chemicals may produce toxic fumes that are harmful to humans and highly corrosive.
- **Do not** place articles on or against this appliance
- This dryer is not to be used in the presence of dry cleaning solvents.
- A clothes dryer produces combustible lint and the area around the clothes dryer should be kept free of lint.

## WARNING

**WARNING:** For your safety the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or death.

### – WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
  - Do not touch any electrical switch; do not use any phone in your building.
  - Clear the room, building or area of all occupants.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

## For your safety

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

## Tumble dryer

---



### **Safety instructions**

**This machine is only intended for drying water-washed garments.**

**Clothes that have been cleaned with chemicals/flammable liquids, must NOT be dried in the machine.**

**Remove clothes from the dryer as soon as they are dry. This prevents them from becoming creased, and reduces the risk of spontaneous ignition.**

**The machine must not be used for drying foam rubber or foam-like materials.**

**The machine must not be used for drying floor mops\*.**

**The machine must not be used by minors.**

**The machine must not be hosed down with water.**

**The machine must not be installed or stored in an area where it will be exposed to water and/or weather.**

**Mechanical, electrical and gas installation and service must only be carried out by qualified personnel.**

**Report machine malfunctions to qualified service personnel as soon as possible. This is important for your own safety and for the safety of others.**

**Gas dryers only:**

**The machine is not to be installed in rooms containing cleaning machines with perchloroethylene, TRICHLOROETHYLENE or CHLOROFLUOROCONTAINING HYDROCARBONS as cleaning agents.**

**\*Applies only to floor mops containing polypropylene.**

## Contents:

Glossary .....	6
Diagram of tumble dryer .....	7
Operating panel - Coin-operated dryer .....	8
Operating panel - Dryer with manual operation OPL .....	9
Programmes - Coin-operated laundries .....	10
Instruction for use - Coin-operated dryer .....	11
Programmes - OPL .....	12
Instruction for use - OPL .....	13
Error codes .....	14
Maintenance .....	15

The manufacturer reserves the right to modify design, material and specifications without notice.

## Glossary

### **Auto Stop**

The tumble dryer stops automatically when the clothes are dry.


### **OPL (On Premises Laundry)**

Example: Institutional laundries.



### **RMC (Residual Moisture Control)**

The tumble dryer has residual moisture control.

## Diagram of tumble dryer

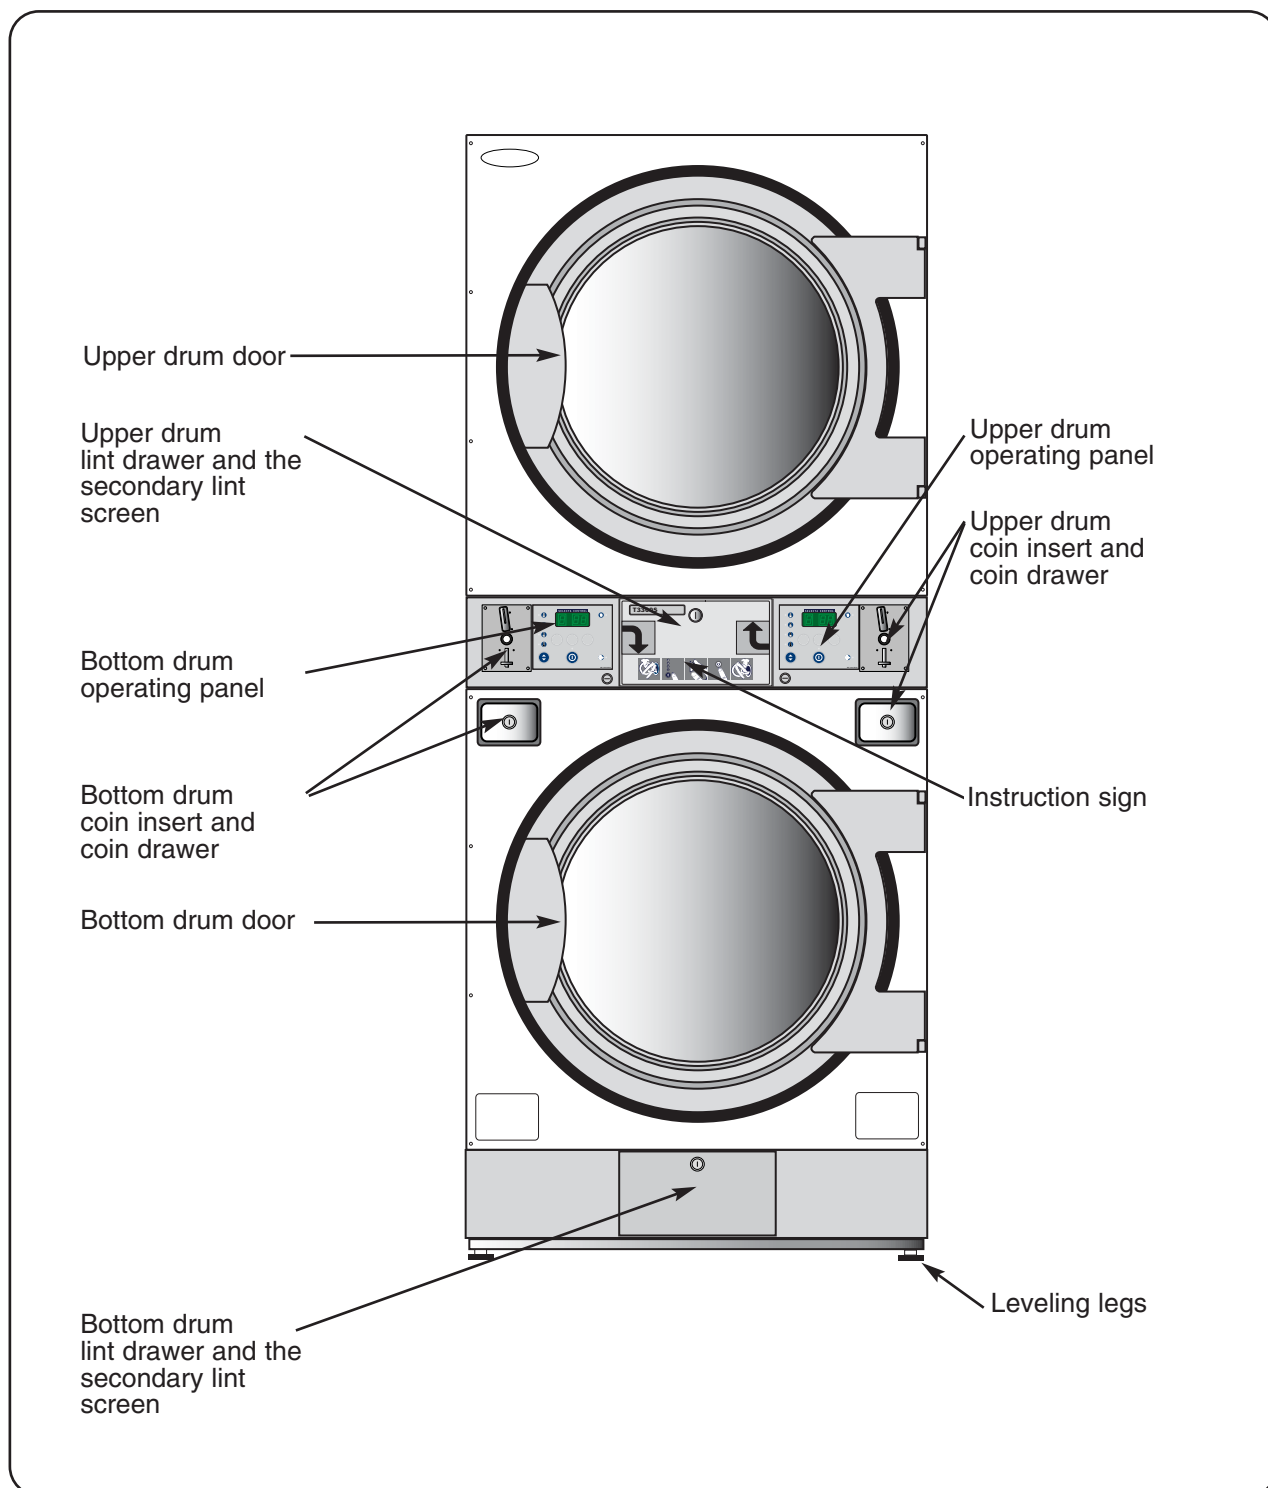



## Operating Panel - Coin operated dryer

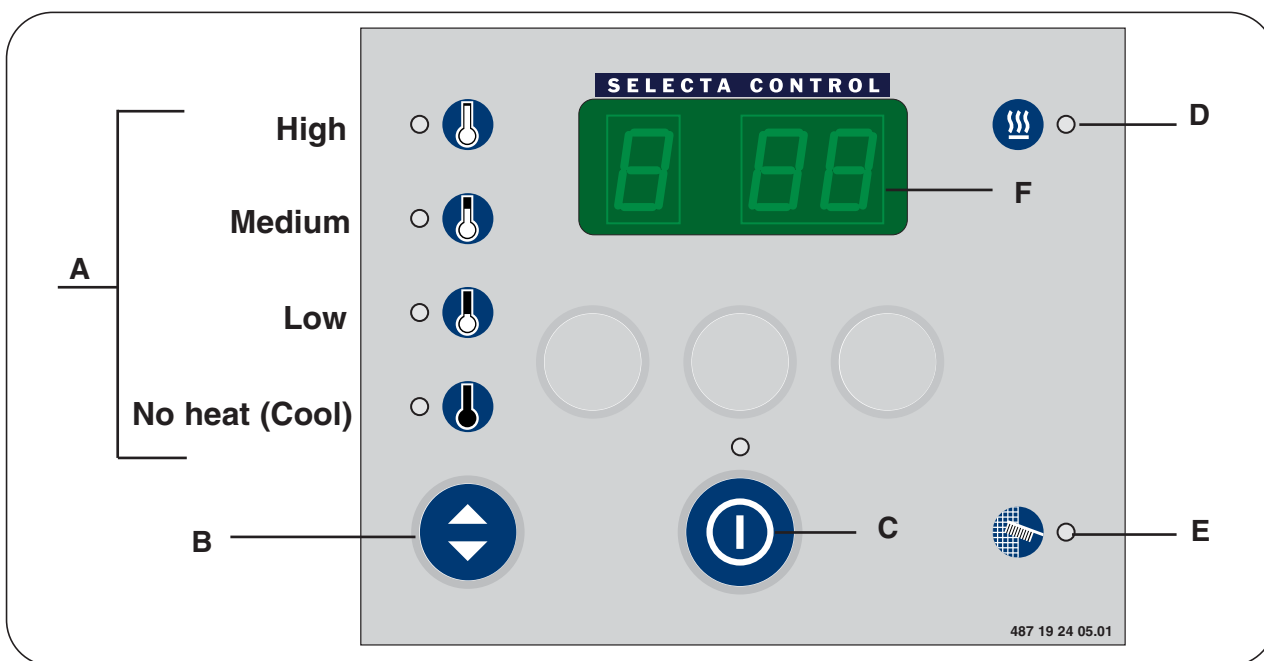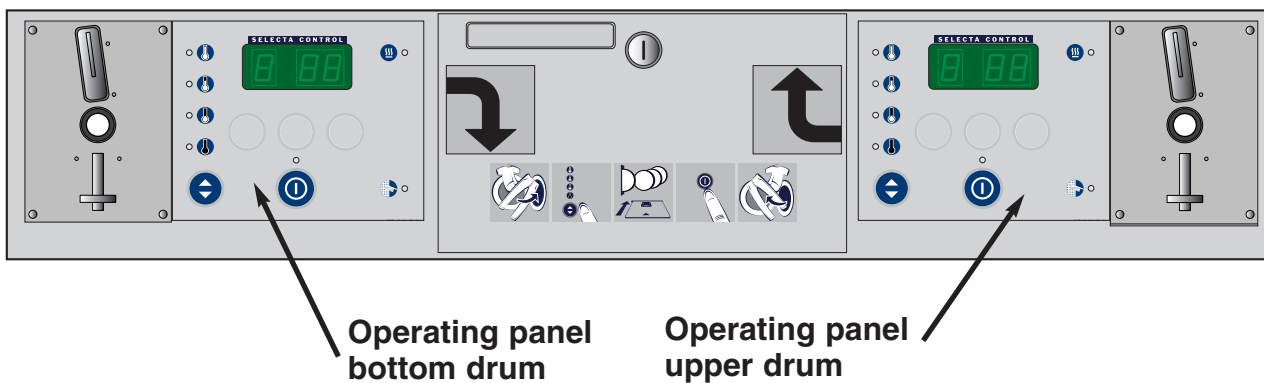

- A. Temperature, indicators.
- B. Temperature selection button.
- C. Start / stop button.
- D. Heat (an indicator).
- E. Not in function.
- F. Numeric display.



## Operating Panel - Tumble dryer with manual operation - OPL

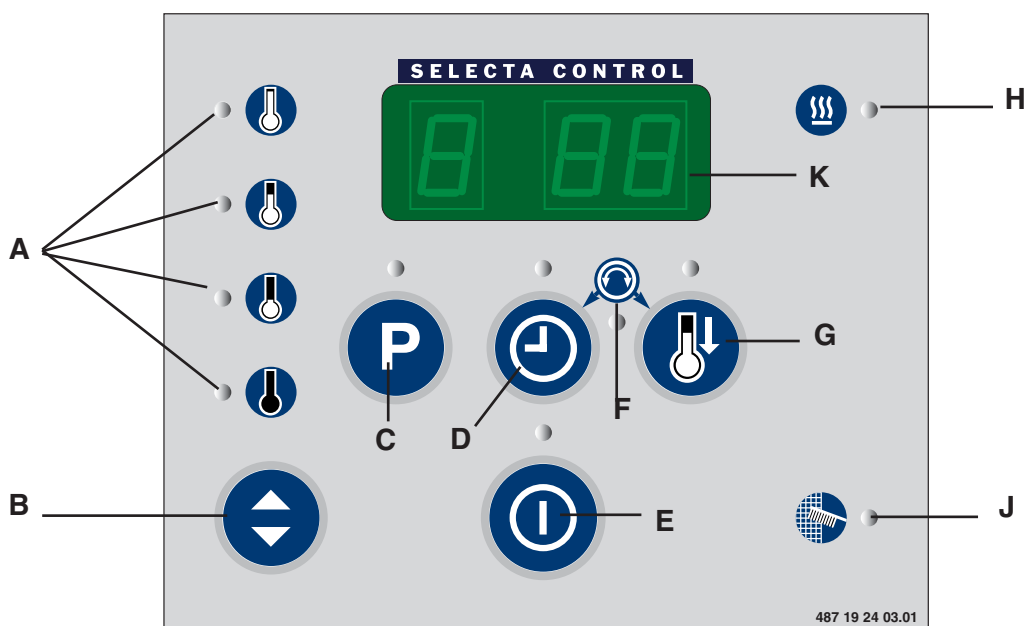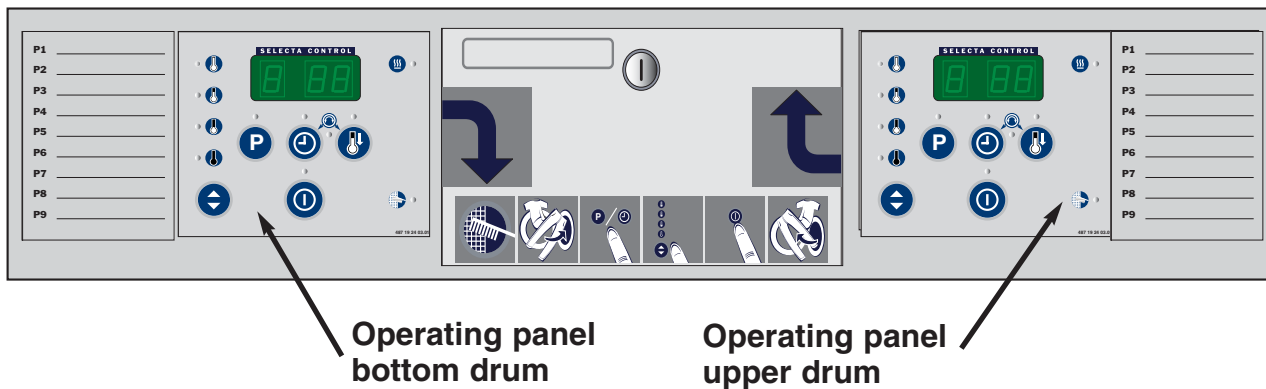

- A. Symbols for selected temperature.
- B. Temperature selection button.
- C. Program selection button.(P-button).
- D. Time button: Setting of drying time.
- E. Start/-stop button.
- F. Reversing on/off.
- G. Setting of cool-down time.
- H. Heat (an indicator)
- J. Not in function
- K. Displays programme status: **d** = drying, **c** = cool-down, - - = anti-crease.

### Programmes - Coin-operated laundries

#### Temperature

<b>High</b>	Non-iron/normal wash	Cotton and mixed fabrics
<b>Medium</b>	Non-iron/normal wash	Cotton and mixed fabrics
<b>Low</b>	Fine wash/mild wash	Delicate fabrics,
<b>No heat</b>		Airing bedspreads, duvets and bedclothes

#### Load


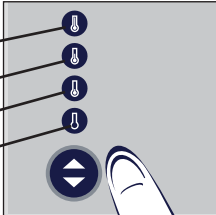
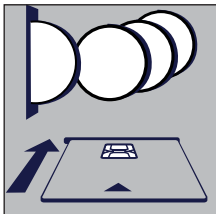
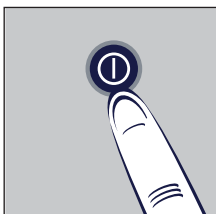
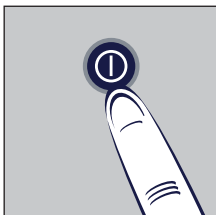


Full loads are recommended in order to achieve the best result.

Full load is indicated in kilos of dry textile.

Dryer type 3300S = 2 x 13.6 kg

Dryer type 3030 = 2 x 30 lb

## Instructions for use - Coin-operated

1	<p>Load the dryer and close the door</p> 	
2	<p>Select temperature.</p> <p>High</p> <p>Medium</p> <p>Low</p> <p>No heat (Cool)</p> 	<p><b>High / medium:</b> Non-iron / normal wash</p> <p><b>Low:</b> Fine wash/mild wash</p> <p><b>No heat:</b> Airing bedspreads, duvets ect.</p>
3	<p>Insert: coin or debit card.</p> 	
4	<p><b>Start:</b> Press the start/stop button.</p> 	<p><b>The tumble-dryer stops automatically</b> when the selected drying time has ended.</p>
5	<p><b>Stop:</b> Press the start/stop button or open the door.</p> 	<p><b>Restart:</b> Close the door and press the start/stop button.</p> <p>The last few minutes of the drying time are the cool-down period.</p> 
6	<p><b>To prevent wrinkling:</b> Empty the dryer as soon as the program has ended.</p> 	<p>If the dryer is not emptied immediately after the drying time has ended, an anti-wrinkle program is automatically engaged. This means that the drum rotates at short intervals.</p>

## Programmes - OPL

### Programmes P 01 - P 09 on dryers with RMC

Program	Process	Textiles
P 01	Extra dry	Denim
P 02	Ready to put away	100% cotton / poly cotton mixture / terry
P 03	Ironing dry (5% moisture)	Polyester / nylon
P 04	Ironing dry (10% moisture)	Wool / silk
P 05	Ironing dry (15% moisture)	Viscose / acetate
P 06	Ironing dry (20% moisture)	Mixed textiles
P 07	10 min. drying	All textiles
P 08	20 min. drying	All textiles
P 09	30 min drying	All textiles

### Programmes P 01 - P 05 on dryers with Auto Stop

Program	Process	Textiles
P 01	Extra dry	All textiles
P 02	Dry	All textiles
P 03	10 min. drying	All textiles
P 04	20 min. drying	All textiles
P 05	30 min drying	All textiles

### Temperature

<b>High</b>	Non-iron/normal wash	Cotton and mixed fabrics
<b>Medium</b>	Non-iron/normal wash	Cotton and mixed fabrics
<b>Low</b>	Fine wash/mild wash	Delicate fabrics,
<b>No heat</b>		Airing bedspreads, duvets and bedclothes

### Load









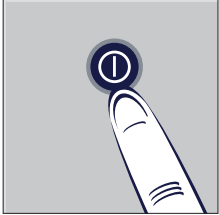


Full loads are recommended in order to achieve the best result.

Full load is indicated in kilos of dry textile.

Dryer type 3300S = 2 x 13.6 kg

Dryer type 3030 = 2 x 30 lb
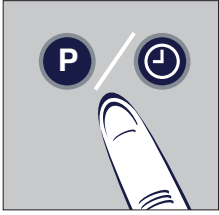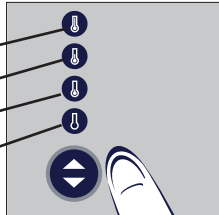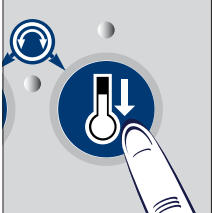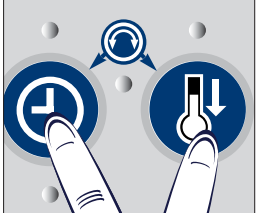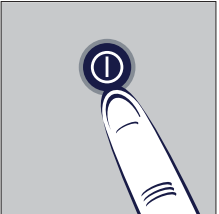
## Instruction for use - OPL

<h1>1</h1>	<p>Check that the lint drawer is not clogged up.</p> 	<p>Fill garments into the drum.</p> <p>Close the door.</p> 	
<h1>2</h1>	<p><b>Select programme</b> using the P-button</p> <p><i>or</i></p> <p>use the time button to set the drying time.</p> 	<p><b>Select temperature.</b></p> <p>High</p> <p>Medium</p> <p>Low</p> <p>No heat</p> 	
<h1>3</h1>	<p><b>Cool-down period:</b></p> <p>Can be changed.</p> 	<p><b>Reversing on / off:</b></p> <p>Press down at the same time the clock button and the button for cooling down time.</p> 	
<h1>4</h1>	<p><b>Start:</b></p> <p>Press the start/stop button.</p> 	<p><b>The tumble dryer stops:</b></p> <p>Automatic on P programmes when the clothes are dry.</p> <p>On time programmes when the selected time has expired.</p> 	
<h1>5</h1>	<p><b>Stop:</b></p> <p>Press the start/stop button or open the door.</p> 	<p><b>Restart:</b></p> <p>Close the door and press the start/stop button.</p>	<p>The last few minutes of the drying time are the cool-down period.</p> 
<h1>6</h1>	<p><b>To prevent creasing:</b></p> <p>Empty the tumble dryer as soon as the program has ended.</p> 	<p>If the tumble dryer is not emptied immediately after the drying time has ended, an anti-crease programme is automatically engaged. This means that the drum rotates at short intervals.</p>	

## Error codes

The tumble dryer has automatic error indication.

Error indication is displayed as a flashing code.

Please refer to the manual Selecta Control for an explanation of error codes.

The inspector of the laundry must be contacted should an error be displayed.

The user can, however, try to correct some error codes himself.

### Error code E05 or E06

When the error code E05 or E06 is displayed, this can be due to the motor being too hot.

Stop the dryer and wait for 5 minutes. Start again and choose a program. If this does not help and the error code reappears the inspector of the laundry must be contacted.

### Error code E12

When the error code is displayed this can be due to the user having overfilled the dryer with clothes that are too wet.

Remove some of the clothes, close the door, and press the start button. If this does not help and the error code reappears the inspector of the laundry must be contacted.

### Error code E15

When the error code is displayed this can be due to the user having overfilled the dryer.


Remove some of the clothes, close the door, and press the start button. If this does not help and the error code reappears the inspector of the laundry must be contacted.

## Maintenance

The following should be carried out at regular intervals, depending on machine usage.

### Daily

- Check that the drum stops when either the loading door or the lint drawer is opened.  
If the dryer operates with the loading door or lint drawer open, the machine **must** be placed out of order until repairs are made.  
**NOTE** Contact a qualified service personnel to disconnect power from the affected dryer.
- Check that the machine does not start until the start button is pressed.
- Check that the loading door and lint drawer gasket are clean, and in good condition. (clean with a damp cloth).
- Fig. 1 Remove lint drawer **A** to clean.  
Clean with a small brush or vacuum cleaner.  
Check that the lint screen in the drawer is in good condition.
- Keep the dryer area clear and free from combustible materials, gasoline and other flammable vapours and liquids.

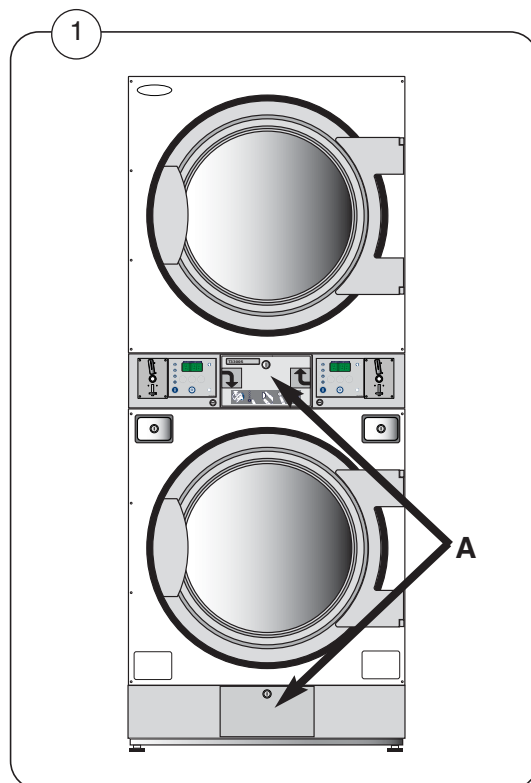

## Maintenance

### Weekly

- Check that the secondary lint screen behind the lint drawer has not become blocked with lint or other debris. Use a vacuum cleaner and clean the secondary lint screen.

### Quarterly

Check that the following are not clogged by lint and dust or otherwise blocked:


- Fig. 2 Perforations **B**
- The area surrounding the dryer
- Exhaust duct
- Fresh-air intake to the room

Check that the exhaust system connections are tight.

- **Dryer with RMC**

Wipe off/clean drum and lifters with citric acid (Acidum citricum). If soap/softener residue remains, it is recommended also to use a coarse sponge.

Lack of cleaning the lifters can reduce the automatic residual moisture control in the clothes resulting in the clothes being moister than requested when the program has ended.

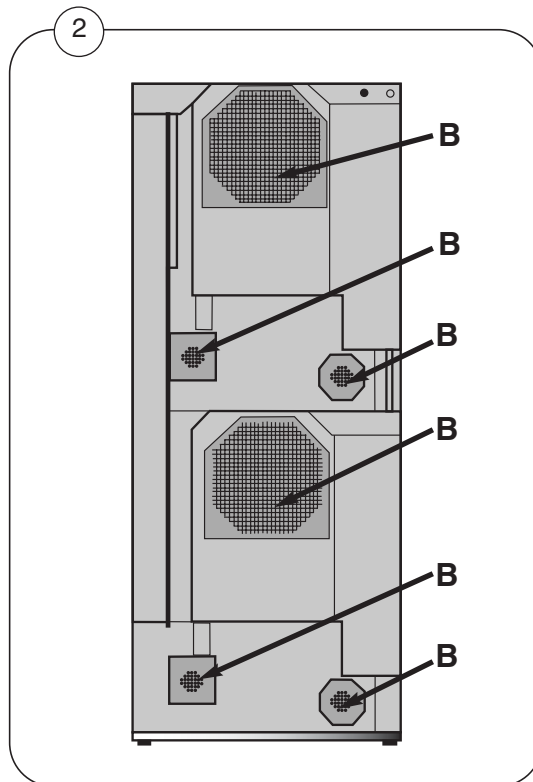

## Internal wearing parts

At least once a year, the internal wearing parts of the machine should be checked by a competent, skilled person, cleaned of lint, and repaired or replaced as necessary.





