


Technical Instructions TI1111

INSTALLATION INSTRUCTIONS FOR TD30x30 FREE DRY SWITCH

CAUTION: THESE INSTRUCTIONS ARE INTENDED TO ASSIST QUALIFIED, EXPERIENCED SERVICE PERSONNEL ONLY! IMPROPER SERVICING OF MACHINERY MAY RESULT IN HAZARDOUS CONDITIONS, PERSONAL INJURY, OR DAMAGE TO PROPERTY. PERSONS NOT TRAINED, OR PERSONS UNFAMILIAR WITH WASCOMAT LAUNDRY MACHINES, SHOULD REFER SERVICING TO QUALIFIED PERSONNEL.

ALWAYS DISCONNECT ELECTRICAL POWER BEFORE SERVICING EQUIPMENT

1. Shut off power to the dryer.
2. Open both coin meter access doors.
3. Cut the tie-wrap holding the switch wire harness to the new Free Switch bracket.
4. Remove the nuts and washers from the two (2) top coin meter mounting screws. Mount the switch bracket onto the coin meter mounting screws so that the harness wires are beneath the bracket and to the left of the coin meter as shown in the illustration. Replace the nuts and washers.

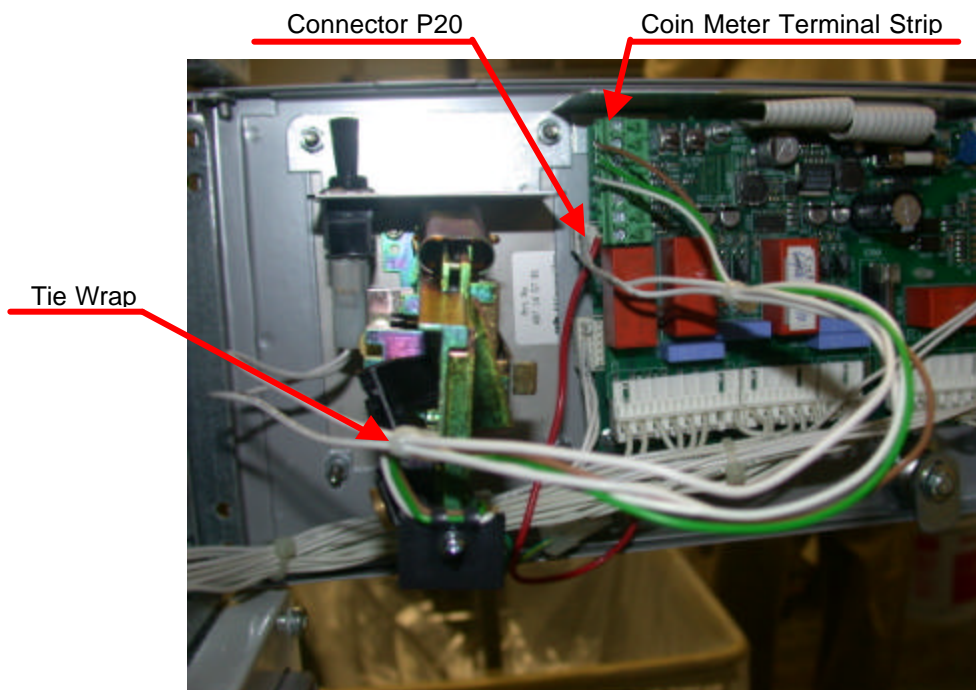

5. Use a tie wrap to dress the switch harness wires so that they will not interfere with operation of the coin meter.
6. Locate the green coin meter terminal strip on the printed circuit board. Locate connector P20. P20 is a 3-pin connector which is on the left side of the circuit board closest to the door panel. It is even with the bottom edge of the green coin meter terminal strip
7. Connect the switch connector to P20 on the circuit board.
8. Repeat steps 3 – 7 for the other pocket.
9. Restore power to the machine. Put both pockets into the Service Mode. When you see the 0 _ _ display, press the START Button. The display will change to 0 01.
10. Press the UP (center blank button) button repeatedly until the display shows 0 05. Press START. The display will show _ 05. Press START again. The 05 will blink. Press the DOWN (left hand blank button) button repeatedly until the display shows 00. Press START. The display will stop blinking. Press the Temperature Select Button. The display will show 0 05.
11. Press the UP Button repeatedly until the display shows 0 07. Press START. The display will show _ 20. Press START and the display will flash. Press UP or DOWN until the display shows the number of free drying minutes you wish to provide. Press START and take the pocket out of the Service Mode.
12. Repeat steps 9 – 12 for the other pocket.

To activate the Free Dry Mode, place the Free Dry Switch in the FREE position. The display will then show “d XX” where XX is the number of minutes you programmed in Step 11.

To use the dryer in Free Dry, simply select drying temperature and press START. You cannot get multiples of the drying time. If more time is needed, the user must wait until the time has been used up before an additional increment of time can be started.