

Operating manual

TD45x45

T4420S

Contents

Contents

Safety instructions	5
Instructions for use	8
Glossary	8
Diagram of tumble dryer	9
Instruction signs/operating panels.....	10
Coin-operated laundries	10
OPL - Dryer with manual operation	10
Operating panel - buttons and symbols.....	11
Programmes - Coin-operated laundries	12
Coin-operation	13
Programmes - OPL.....	14
Tumble dryer with manual operation - OPL	15
Error codes	17
Maintenance.....	19

The manufacturer reserves the right to make changes to design and component specifications.

Additional safety instructions and warnings

Using the dryer

- **Do not** operate this appliance before reading the instruction booklet.
- **Do not** put articles containing foam rubber, plastic or similarly textured rubberlike materials in the dryer.
- **Do not** dry mopheads or articles exposed to gasoline, kerosene, paint wax, grease, combustible detergent or all purpose cleaners.
- **Do not** use heat for drying foam rubber items or similarly textured rubberlike materials.
- **Do not** put articles soiled with flammable liquids, vegetable- or cooking oils in dryer.
- **Do not** load materials containing flammable solvents into this appliance
- **Do not** reach into dryer until all moving parts have stopped.
- **Do not** let children play in or near dryer.
- **Do not** operate with panels, covers or guards removed from this appliance.
- Remove articles being dried immediately after tumbler stops.
- Lint screen must be cleaned in accordance with the manufacturer's recommended frequency guidelines.
- Avoid overdrying items such as silk and wool, as shrinkage or fabric damage may result.

The area surrounding the dryer

- **Do not** store or use flammable liquids near the dryer.
- **Do not** store chemicals, or spray aerosols near this appliance.
- **Do not** store or use aerosols or cleaning solvents in the vicinity of the dryer. Some chemicals used in laundries contain Chlorine (some dry-cleaning fluids, aerosols and bleach) When exposed to a flame, these chemicals may produce toxic fumes that are harmful to humans and highly corrosive.
- **Do not** place articles on or against this appliance
- This dryer is not to be used in the presence of dry cleaning solvents.
- A clothes dryer produces combustible lint and the area around the clothes dryer should be kept free of lint.

WARNING

WARNING: For your safety the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or death.

WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Clear the room, building or area of all occupants.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

For your safety

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Textiles as silk and wool must not be overdried to avoid the risk of creasing.



Safety instructions



This machine is only intended for drying water-washed garments.

Clothes that have been cleaned with chemicals/flammable liquids, must NOT be dried in the machine.

Remove clothes from the tumble dryer as soon as they are dry. This prevents them from becoming creased, and reduces the risk of spontaneous ignition.

The machine must not be used for drying foam rubber or foam-like materials.

The machine must not be used for drying floor mops*.

The machine must not be used by minors.

The machine must not be hosed down with water.

Mechanical, electrical and gas installations must only be carried out by authorized personnel.

The key for the operating panel is only to be accessible to authorized personnel.

Report machine malfunctions to qualified service personnel as soon as possible. This is important for your own safety and for the safety of others.

Gas dryers only:

The machine is not to be installed in rooms containing cleaning machines with perchloroethylene, TRICHLOROETHYLENE or CHLOROFLUOROCONTAINING HYDROCARBONS as cleaning agents.

What to do if you smell gas:

Do not try to light any appliance.

Do not touch any electrical switch; do not use any phone in your building.

Evacuate the room, building or area.

Contact appropriate authorities.

**Applies only to floor mops containing polypropylene.*

Instructions for use

Glossary

Auto Stop

The tumble dryer stops automatically when the clothes are dry.

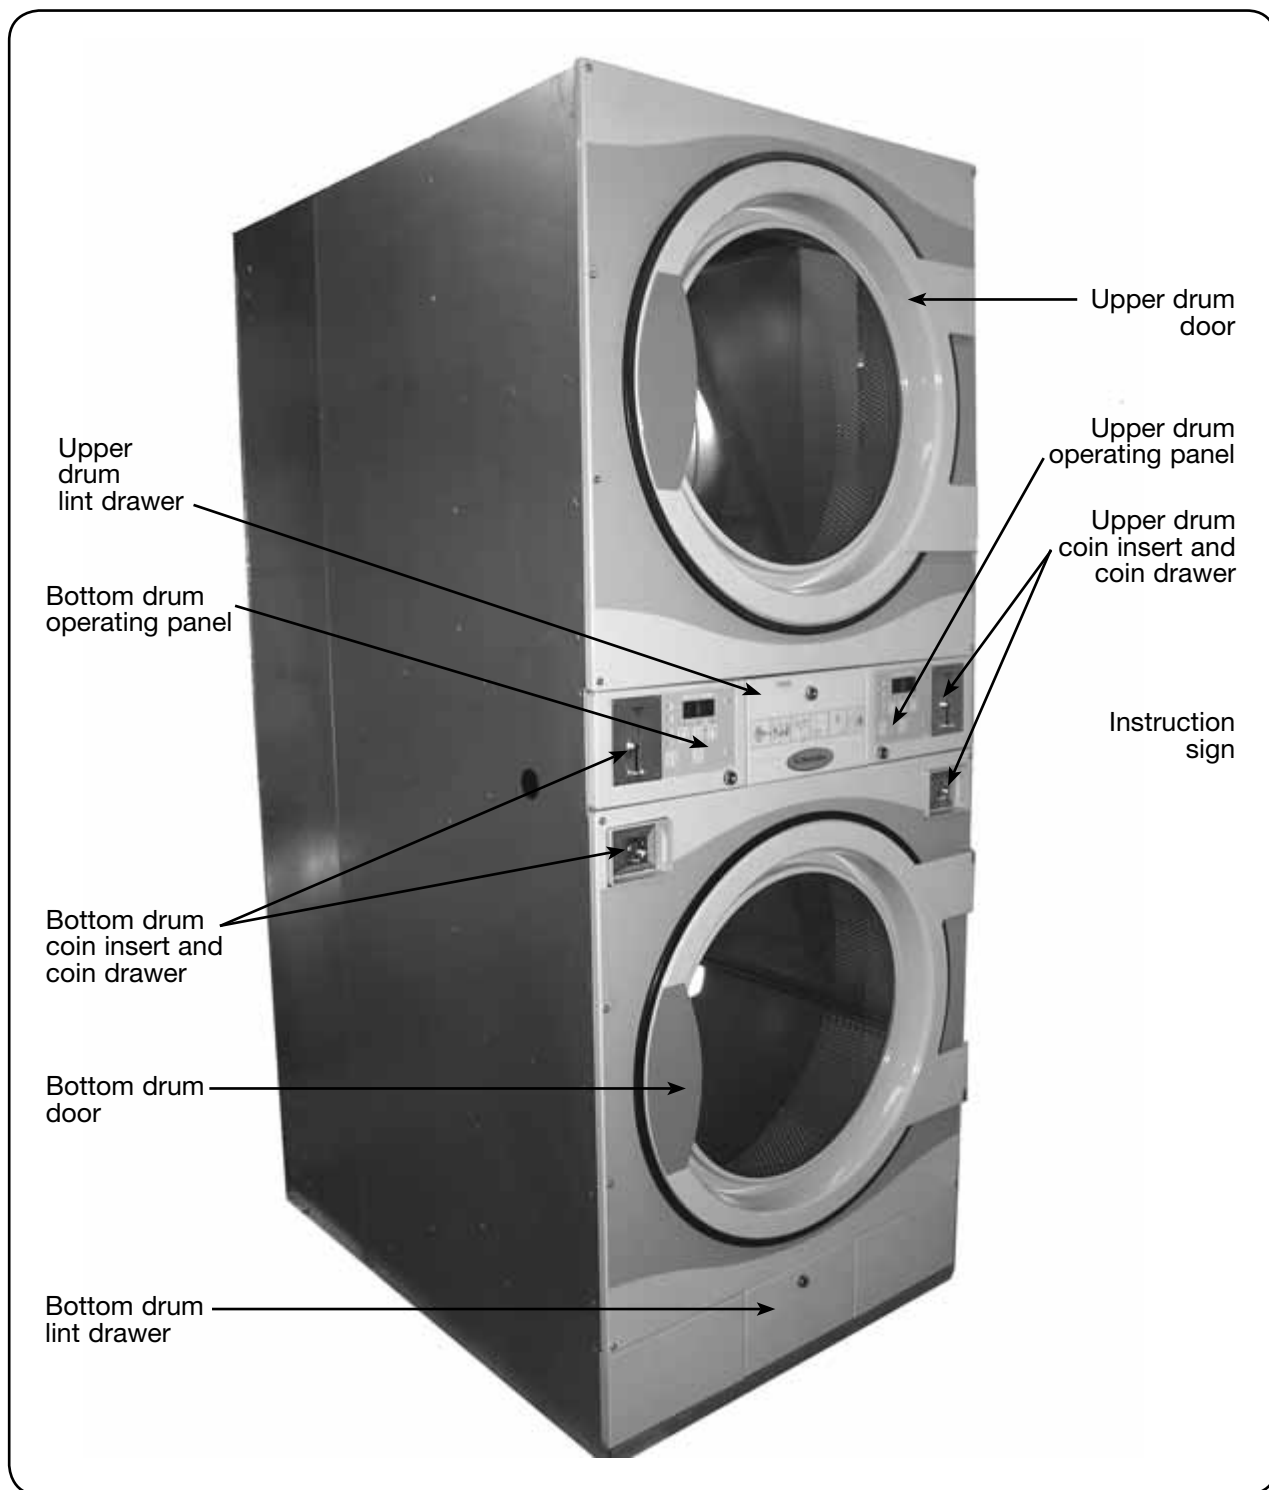 
AHL (Apartment House Laudry)

Example: Communal laundries / Housing block laundries.

OPL (On Premises Laudry)

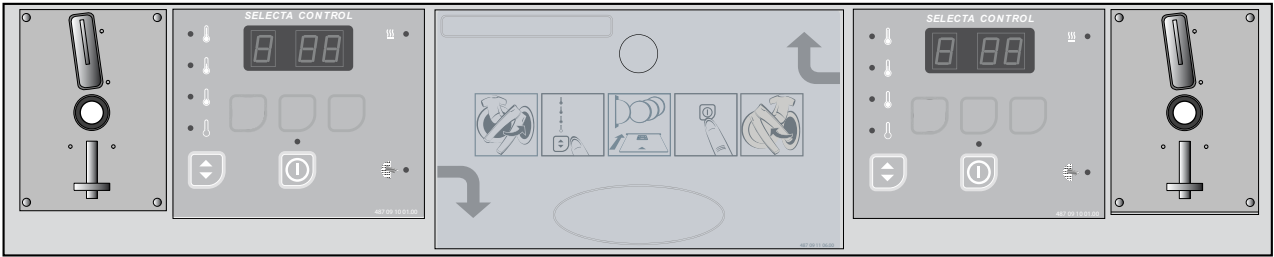 
Example: Institutional laundries.

Diagram of tumble dryer

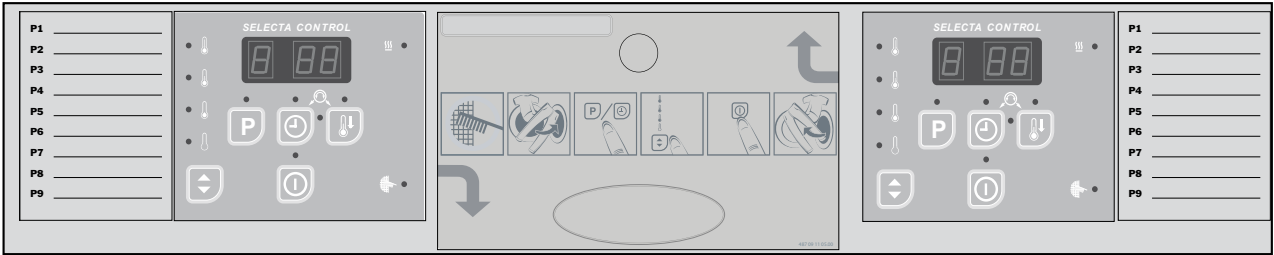 


Instruction signs/operating panels






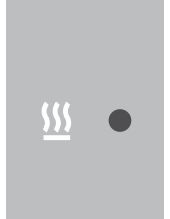 
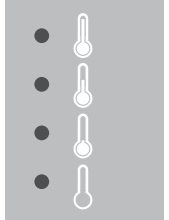 
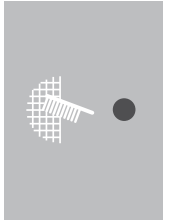 


Coin-operated laundries



OPL - Dryer with manual operation



Operating panel - buttons and symbols

	<p>P button</p> <p>Program selection button. Not active on pay machines.</p>		<p>Reversing</p> <p>Reversing on/off. OPL laundries only.</p>
	<p>Time button</p> <p>Setting of drying time. Not active on pay machines.</p>		<p>Cool-down time</p> <p>Setting of cool-down time. OPL laundries only.</p>
	<p>Temperature button</p> <p>Temperature selection.</p> <p>Push button during operation, display shows: the outlet temperature.</p>		<p>Heat</p> <p>When light-emitting diode is lit the heat is on.</p>
	<p>Selected temperature</p> <p>Light-emitting diode is lit at selected temperature.</p>		<p>Filter</p> <p>When light-emitting diode is lit filter door/ filter drawer is open.</p>
	<p>Start/stop button</p> <p>Start: Push button.</p> <p>Stop: Push button or open door.</p>		
	<p>Program status</p> <p>“d xx” = Time controlled drying - xx indicates the time. “c xx” = Time controlled cool-down - xx indicates the time. “c - -” = Temperature controlled cool-down. “00” = Standby. An anti-crease program runs for 120 minutes or until the door is opened.</p>		

Programmes - Coin-operated laundries

Temperature

High	Non-iron/normal wash	Cotton and mixed fabrics
Medium	Non-iron/normal wash	Cotton and mixed fabrics
Low	Fine wash/mild wash	Delicate fabrics,
No heat		Airing bedspreads, duvets and bedclothes

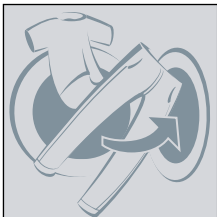 
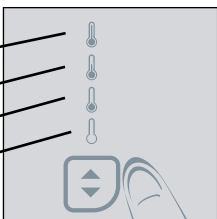 
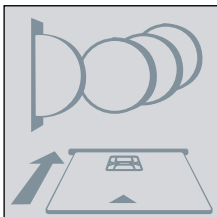 
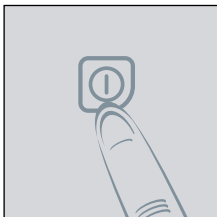 
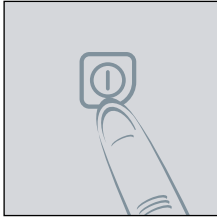 
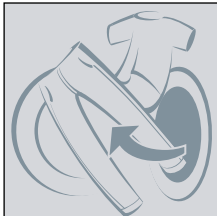 
Load

Full loads are recommended in order to achieve the best result.

Full load is indicated in kilos of dry textile.

Dryer type TD45x45, T4420S = 2 x 45 lb

Coin-operation

1	<p>Fill garments into the drum.</p> <p>Close the door</p> 	
2	<p>Select temperature</p> <p>High</p> <p>Medium</p> <p>Low</p> <p>No heat</p> 	
3	<p>Pay with coins / card</p> 	
4	<p>Press start</p> 	
5	<p>Wait for the dryer to stop or press stop.</p> 	
6	<p>To prevent wrinkling:</p> <p>Empty the dryer as soon as the program has ended.</p> 	<p>If the dryer is not emptied immediately after the drying time has ended, an anti-wrinkle program is automatically engaged. This means that the drum rotates at short intervals.</p>

Programmes - OPL

Programmes P 01 - P 05 on dryers with Auto Stop

Program	Process	Textiles
P 01	Extra dry	All textiles
P 02	Dry	All textiles
P 03	10 min. drying	All textiles
P 04	20 min. drying	All textiles
P 05	30 min drying	All textiles

Temperature

High	Non-iron/normal wash	Cotton and mixed fabrics
Medium	Non-iron/normal wash	Cotton and mixed fabrics
Low	Fine wash/mild wash	Delicate fabrics,
No heat		Airing bedspreads, duvets and bedclothes

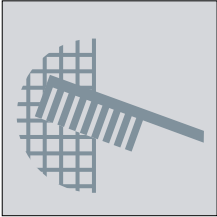 

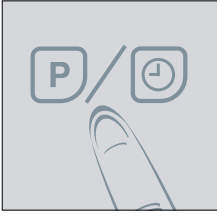 
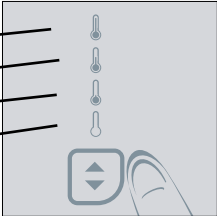 
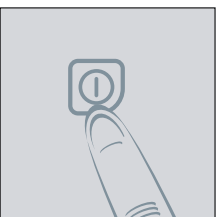 
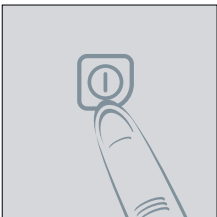 
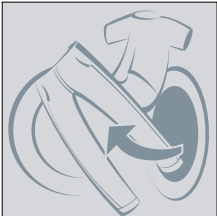 
Load

Full loads are recommended in order to achieve the best result.

Full load is indicated in kilos of dry textile.

Dryer type TD45x45 = 2 x 45 lb

Tumble dryer with manual operation - OPL

1	<p>Clean filter</p> 	<p>Fill garments into the drum</p> <p>Close the door</p> 
2	<p>Select programme</p> <p>or</p> <p>set the drying time</p> 	<p>P 01 Extra dry</p> <p>P 02 Ready to put away</p> <p>P 03 10 min. drying</p> <p>P 04 20 min. drying</p> <p>P 05 30 min. drying</p>
3	<p>Select temperature</p> <p>High</p> <p>Medium</p> <p>Low</p> <p>No heat</p> 	
4	<p>Press start</p> 	<p>The tumble dryer stops</p> <p>Automatically when the clothes are dry.</p> <p>or</p> <p>when the selected time has expired.</p>
5	<p>Wait for the dryer to stop or press stop.</p> 	<p>Restart</p> <p>Close the door and press start.</p>
6	<p>To prevent creasing:</p> <p>Empty the tumble dryer as soon as the program has ended.</p> 	<p>If the tumble dryer is not emptied immediately after the drying time has ended, an anti-crease programme is automatically engaged. This means that the drum rotates at short intervals, thereby almost completely avoiding creasing.</p>

Error codes

The tumble dryer has automatic error indication.

Error indication is displayed as a flashing code.

Please refer to the manual Selecta Control from ver. 4.xx for an explanation of error codes.

A service technician must be contacted should an error be displayed.

The user can, however, try to correct some error codes himself.

Error code E12

When the error code is displayed this can be due to the user having overfilled the dryer with clothes that are too wet.

Remove some of the clothes, close the door, and press the start button. If this does not help and the error code reappears a service technician must be contacted.

Error code E14

When resetting gas error the dryer must be in operation on a program with heat, and the heat indicator must be on.

The dryer must only be reset three times.

If the dryer, however, has to be reset more than three times it has to be put out of order and a service technician must be called.

Error code E15

When the error code is displayed this can be due to the user having overfilled the dryer.

Remove some of the clothes, close the door, and press the start button. If this does not help and the error code reappears a service technician must be contacted.

Error code E16

The error code is displayed if the user presses the start button while the air pressure switch is already activated.

Resetting by opening / closing the door and pressing start button.

Maintenance

The following should be carried out at regular intervals, depending on machine usage.

Daily

- Check that the drum stops when either the loading door or the lint drawer is opened.

If the dryer operates with the loading door or lint drawer open, the machine must be placed out of order until repairs are made.

NOTE!

Contact a qualified service personnel to disconnect power from the affected dryer.

- Check that the machine does not start until the start button is pressed.
- Check that the loading door, lint drawer and lint drawer gasket are clean, and in good condition. (clean with a damp cloth).
- Keep the dryer area clear and free from combustible materials, gasoline and other flammable vapours and liquids.

Quarterly

Check that the following are not clogged by lint and dust or otherwise blocked:

- Fresh-air intake on the back of the dryer
- The area surrounding the dryer
- Exhaust duct
- Fresh-air intake to the room

Check that the exhaust system connections are tight.

Internal wearing parts

At least once a year, the internal wearing parts of the machine should be checked by a competent, skilled person, cleaned of lint, and repaired or replaced as necessary.

