



Your **in**house Laundry Partner

D20 Gen II Parts Manual Phase 7

Fire Suppression System

JLA Limited
Meadowcroft Lane, Halifax Road
Ripponden
West Yorkshire, England
HX6 4AJ

Telephone: 01422 822282 / Fax: 01422 824390

Retain This Manual In A Safe Place For Future Reference

This product embodies advanced concepts in engineering, design, and safety. If this product is properly maintained, it will provide many years of safe, efficient, and trouble free operation.

ONLY qualified technicians should service this equipment.

OBSERVE ALL SAFETY PRECAUTIONS displayed on the equipment or specified in the installation manual included with the dryer.

The following “**FOR YOUR SAFETY**” caution **must be** posted near the dryer in a prominent location.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

POUR VOTRE SÉCURITÉ

Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.

We have tried to make this manual as complete as possible and hope you will find it useful. The manufacturer reserves the right to make changes from time to time, without notice or obligation, in prices, specifications, colors, and material, and to change or discontinue models.

Important

For your convenience, log the following information:

DATE OF PURCHASE _____ MODEL NO. _____ **D20**

DISTRIBUTOR'S NAME _____

Serial Number(s) _____

Replacement parts can be obtained from your distributor or **JLA**. When ordering replacement parts from **JLA**, you can FAX your order to **JLA** at 01422 824390 or telephone your order directly to the **JLA** Parts Department at 01422 822282. Please specify the dryer model number and serial number in addition to the **description** and **part number**, so that your order is processed accurately and promptly.

The illustrations on the following pages may not depict your particular dryer exactly. The illustrations are a composite of the various dryer models. Be sure to check the descriptions of the parts thoroughly before ordering.

“IMPORTANT NOTE TO PURCHASER”


Information **must be** obtained from your local gas supplier on the instructions to be followed if the user smells gas. These instructions **must be** posted in a prominent location near the dryer.

Table of Contents

Phase 7.5 Non-Coin Top Panel Assembly	
For Top Control Models	4
Phase 7.3 Non-Coin Top Panel Assembly	
For Top Control Models	5
Front Panel Assemblies	6
Phase 7.5 Non-Coin Bottom Panel Assembly	
For Bottom Control Models	7
Phase 7.3 Non-Coin Bottom Panel Assembly	
For Bottom Control Models	8
Phase 7.3 Coin Top Panel Assembly	
For Top Control Models	9
Phase 7.3 Coin Bottom Panel Assembly	
For Bottom Control Models	10, 11
Main Door Assemblies	12, 13
Middle Front Panel Assembly	14
Lint Drawer Assembly	15
Basket (Tumbler) Assembly	16
Front Basket (Tumbler)/Support Panel Assembly	17
Rear Support Panel Assembly	18, 19
Basket (Tumbler) Front Roller Wheel Assemblies	20
Basket (Tumbler) Rear Roller Wheel Assemblies	21
Fire Suppression System Piping Assembly	22
Temperature Sensor Assemblies	23
Motor Drive Assembly	24, 25
Direct Spark Ignition (DSI) Burner Assembly	26, 27
Electric Oven Assembly	28
Lint Box/Blower Motor Assembly	29
Blower Assembly	30
Blower Motor Assembly	31
Front Electrical Panel Assembly	32
Sail Switch Assembly	33
Base/Top/Sides/Back Guard Assemblies	34, 35
Pedestal Box Option	36
Additional Parts Available	37

Phase 7.5 Non-Coin Top Panel Assembly

For Top Control Models

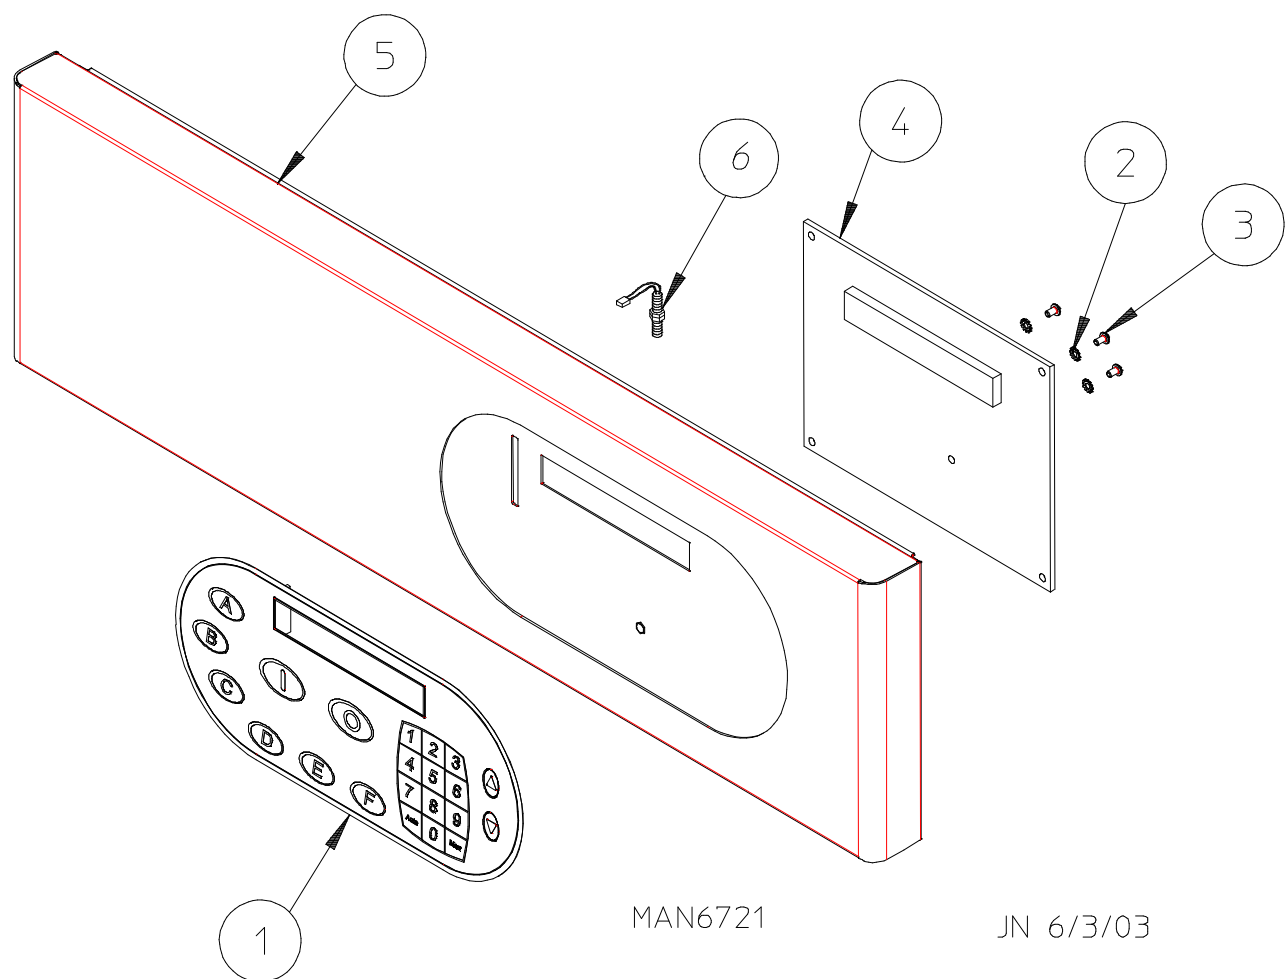


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	112581	1	Phase 7.5 Non-Coin Keyboard
2	153010	3	#6 Star Washer
3	150005	3	#6-32 x 1/4" Phillips Round Head Machine Screw
4	887020	1	Phase 7.5 Non-Coin Board
5	818463	1	Non-Coin Top Control Panel
6	818206	1	Magnetic Switch
- *	-----	1	JLA S.A.F.E. Logo - <i>Not Illustrated</i>

* Contact distributor for logo.

Phase 7.3 Non-Coin Top Panel Assembly


For Top Control Models

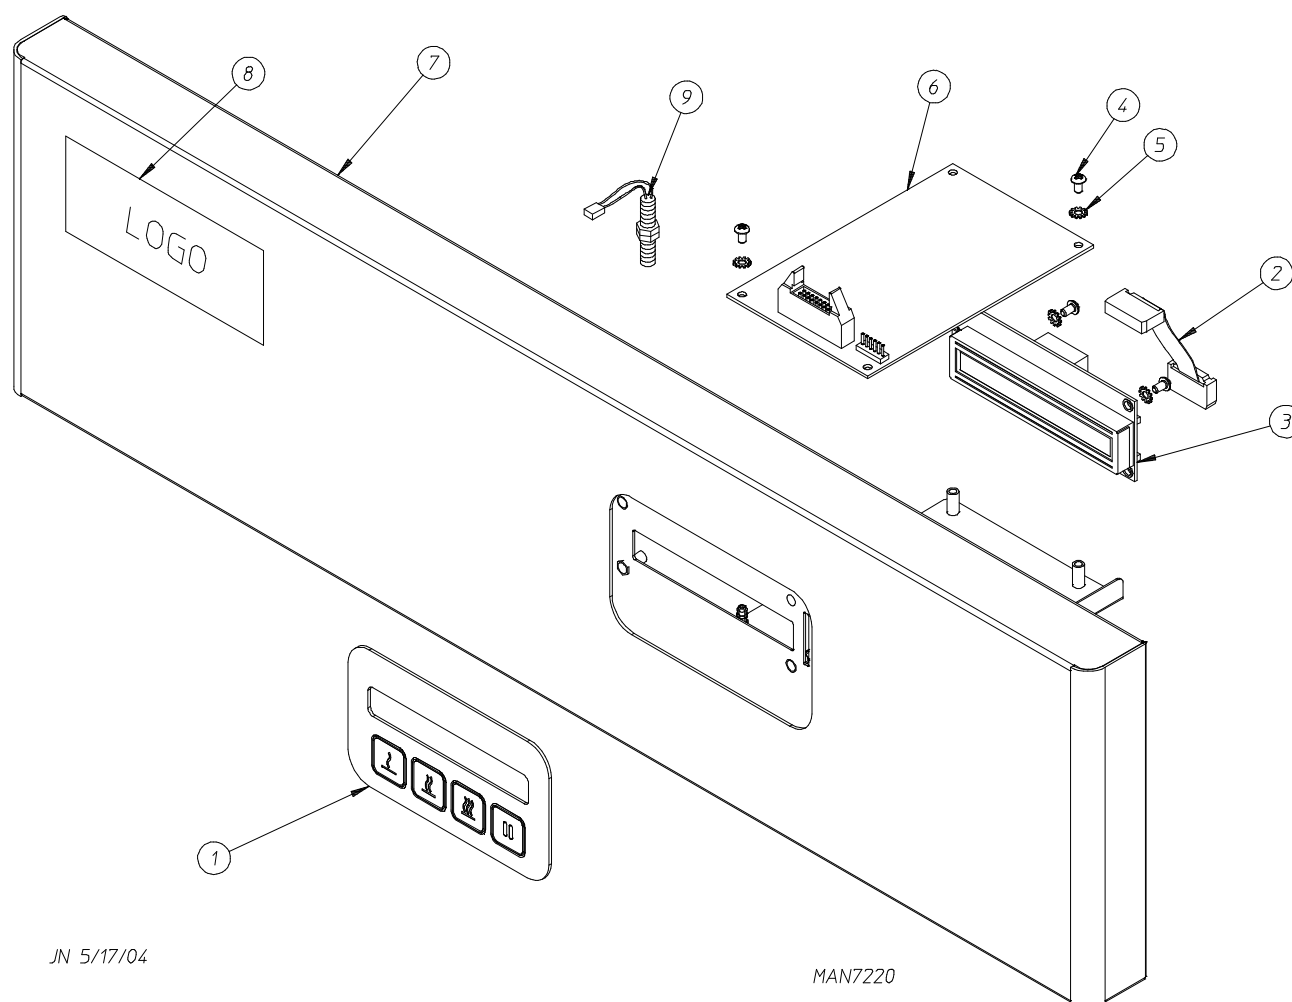

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	112579	1	Phase 7 Keyboard
2	137250	1	Phase 7 Ribbon Cable
3	137270	1	Large Character Display
4	150005	4	#6-32 x 1/4" Phillips Round Head Machine Screw
5	153010	4	#6 Star Washer
6	887012	1	Phase 7.3.2 Board with a Fire Suppression System (for models mfd. as of January 22, 2004)
	887009	1	Phase 7.3.2 Board with a Fire Suppression System (for models mfd. prior to January 22, 2004)
7	818482	1	Black Control Panel
8 *	-----	1	Logo ONLY
9	818206	1	Magnetic Switch

* Contact distributor for logo.

Front Panel Assemblies

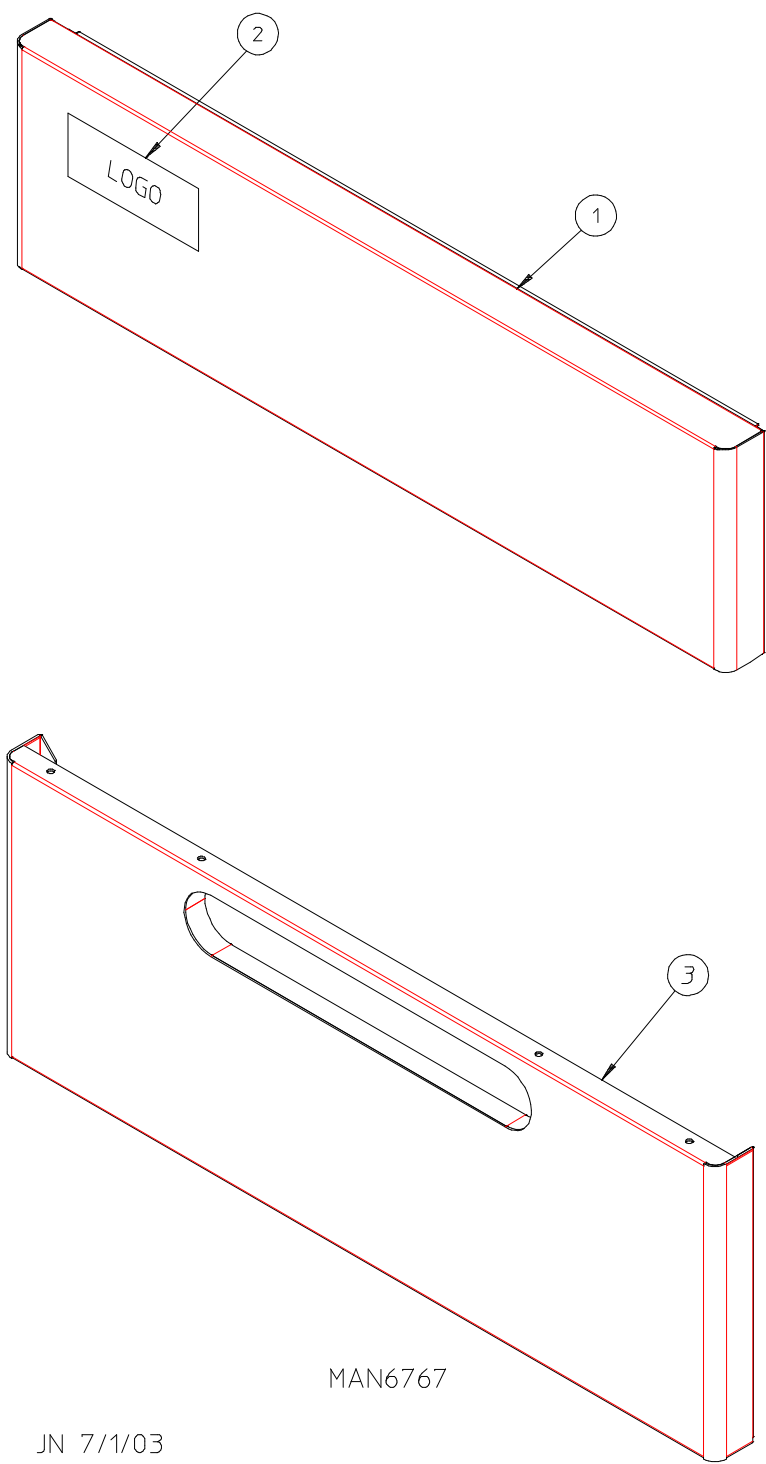

MAN6767


JN 7/1/03

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	818478	1	Top Panel for Bottom Control Models
2 *	-----	1	Logo ONLY
3	818466	1	Front Bottom Panel Assembly

*Contact distributor for logo.

Phase 7.5 Non-Coin Bottom Panel Assembly


For Bottom Control Models

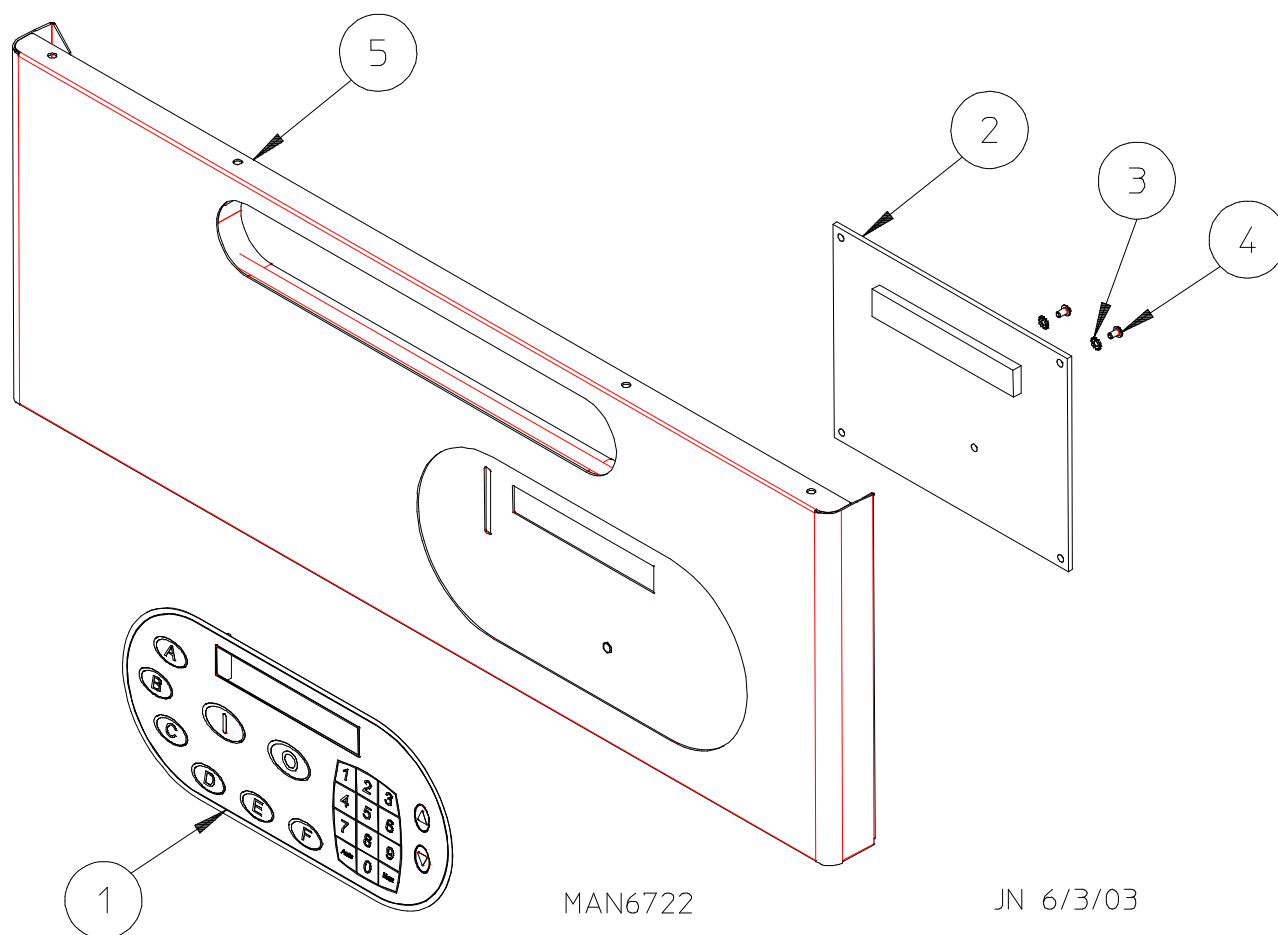

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	112581	1	Phase 7.5 Non-Coin Keyboard
2	137258	1	Phase 7.5 Non-Coin Board
3	153010	3	#6 Star Washer
4	150005	3	#6-32 x 1/4" Phillips Round Head Machine Screw
5	818465	1	Phase 7.5 Non-Coin Bottom Control Panel

Phase 7.3 Non-Coin Bottom Panel Assembly


For Bottom Control Models

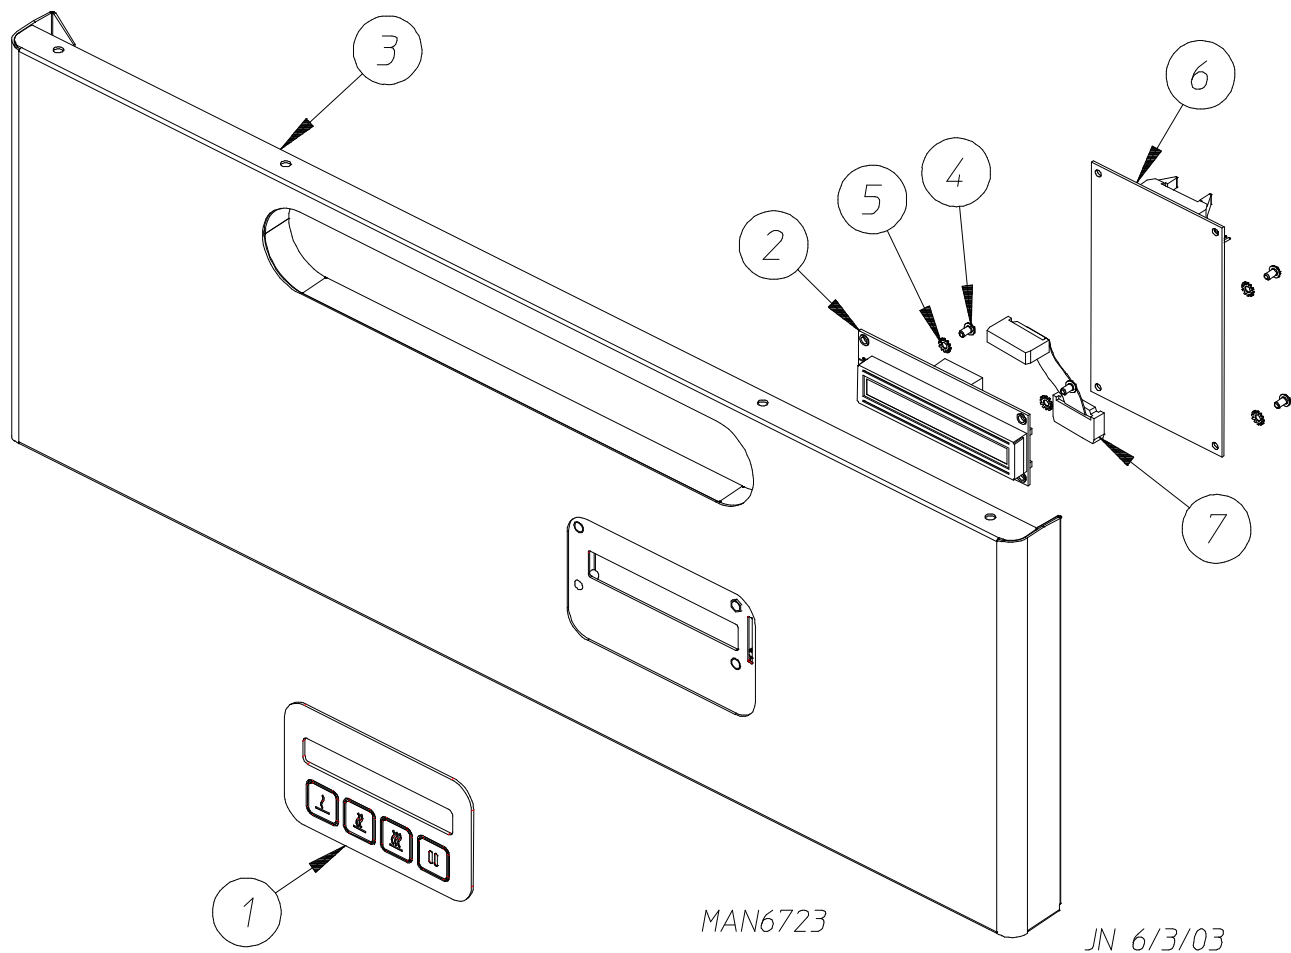

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	112579	1	Phase 7.3 Keyboard
2	137270	1	Large Character Display
3	818436	1	Non-Coin Bottom Control Panel
4	150005	4	#6-32 x 1/4" Phillips Round Head Machine Screw
5	153010	4	#6 Star Washer
6	887012	1	Phase 7.3.2 Board with a Fire Suppression System (for models mfd. as of January 22, 2004)
	887009	1	Phase 7.3.2 Board with a Fire Suppression System (for models mfd. prior to January 22, 2004)
7	137250	1	Ribbon Cable

Phase 7.3 Coin Top Panel Assembly


For Top Control Models

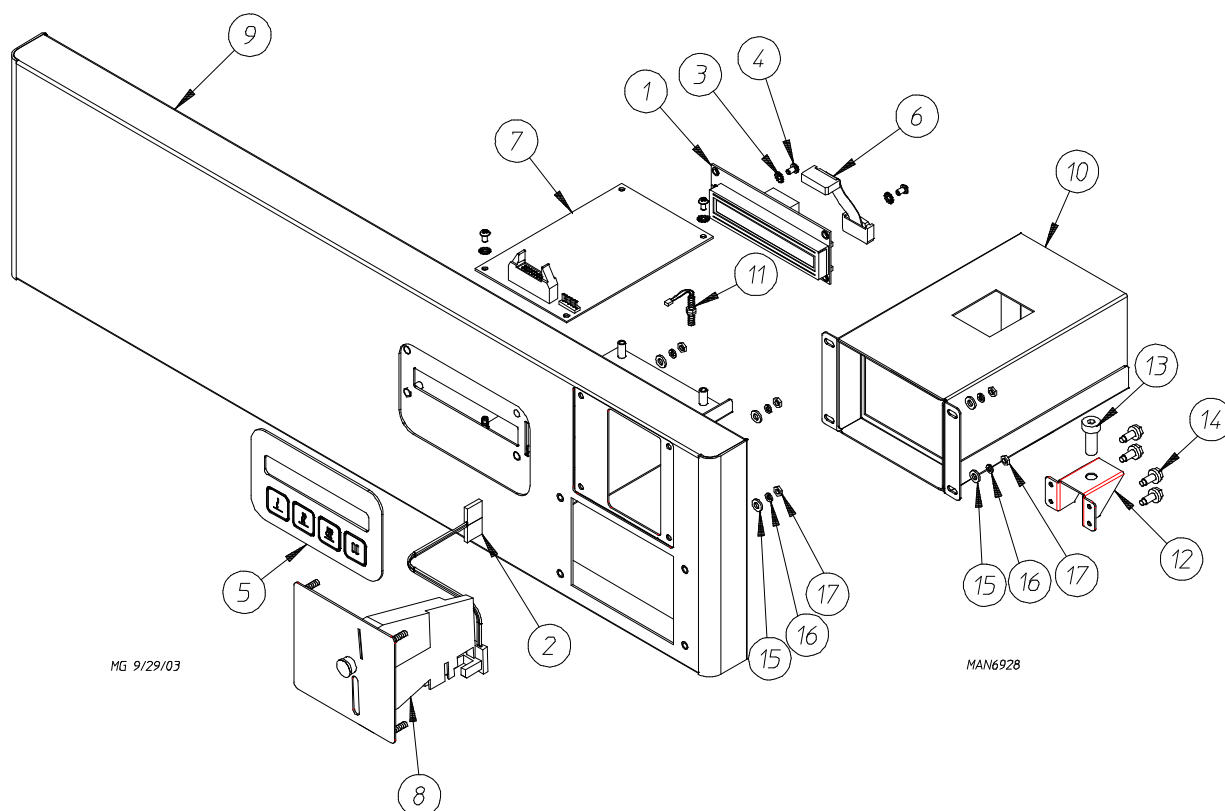

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	137270	1	Large Character Display
2	883774	1	Optic Switch
3	153010	4	#6 Star Washer
4	150005	4	#6-32 x 1/4" Phillips Round Head Machine Screw
5	112579	1	Phase 7.3 Coin Keyboard
6	137250	1	Phase 7.3 Ribbon Cable
7	887011	1	Phase 7.3.2 Board without a Fire Suppression System (for models mfd. as of January 22, 2004)
	887012	1	Phase 7.3.2 Board with a Fire Suppression System (for models mfd. as of January 22, 2004)
	887009	1	Phase 7.3.2 Board with a Fire Suppression System (for models mfd. prior to January 22, 2004)
8	884029	1	25¢ US Optic Coin Acceptor
9	818467	1	Black Control Panel
10	818132	1	Coin Vault for Top Control
11	818206	1	Magnetic Switch
12	818500	1	Coin Vault Bracket
13	150511	1	1/4-20 x 1" Tap Bolt
14	150300	4	#10-16 x 1/2" Hex Washer TEK Screw
15	153000	8	#8 Flat Washer
16	153012	8	#8 Star Washer
17	152015	8	#8-32 Hex Nut

Phase 7.3 Coin Bottom Panel Assembly


For Bottom Control Models

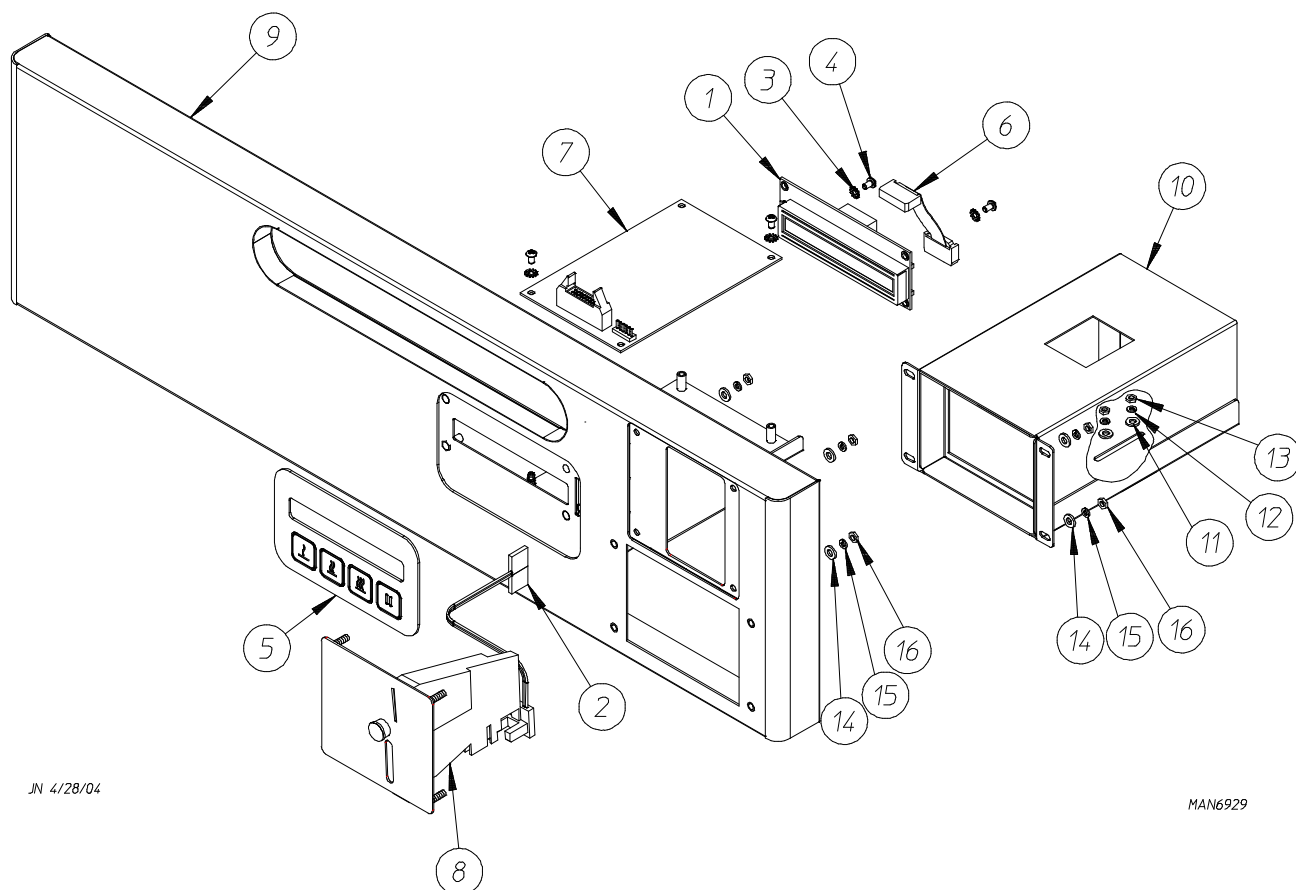

Phase 7.3 Coin Bottom Panel Assembly

For Bottom Control Models


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	137270	1	Large Character Display
2	883774	1	Optic Switch
3	153010	4	#6 Star Washer
4	150005	4	#6-32 x 1/4" Phillips Round Head Machine Screw
5	112579	1	Phase 7.3 Coin Keyboard
6	137250	1	Phase 7.3 Ribbon Cable
7	887011	1	Phase 7.3.2 Board without a Fire Suppression System (for models mfd. as of January 22, 2004)
	887012	1	Phase 7.3.2 Board with a Fire Suppression System (for models mfd. as of January 22, 2004)
	887009	1	Phase 7.3.2 Board with a Fire Suppression System (for models mfd. prior to January 22, 2004)
8	884029	1	25¢ US Optic Coin Acceptor
9	818424	1	Black Control Panel
10	818422	1	Coin Vault for Bottom Control
11	153049	2	13/64" x 7/8" Flat Washer
12	153024	2	#10 Lock Washer
13	152015	2	#8 Hex Nut
14	153049	2	13/64" x 7/8" Flat Washer
15	153012	8	#8 Star Washer
16	152015	8	#8-32 Hex Nut

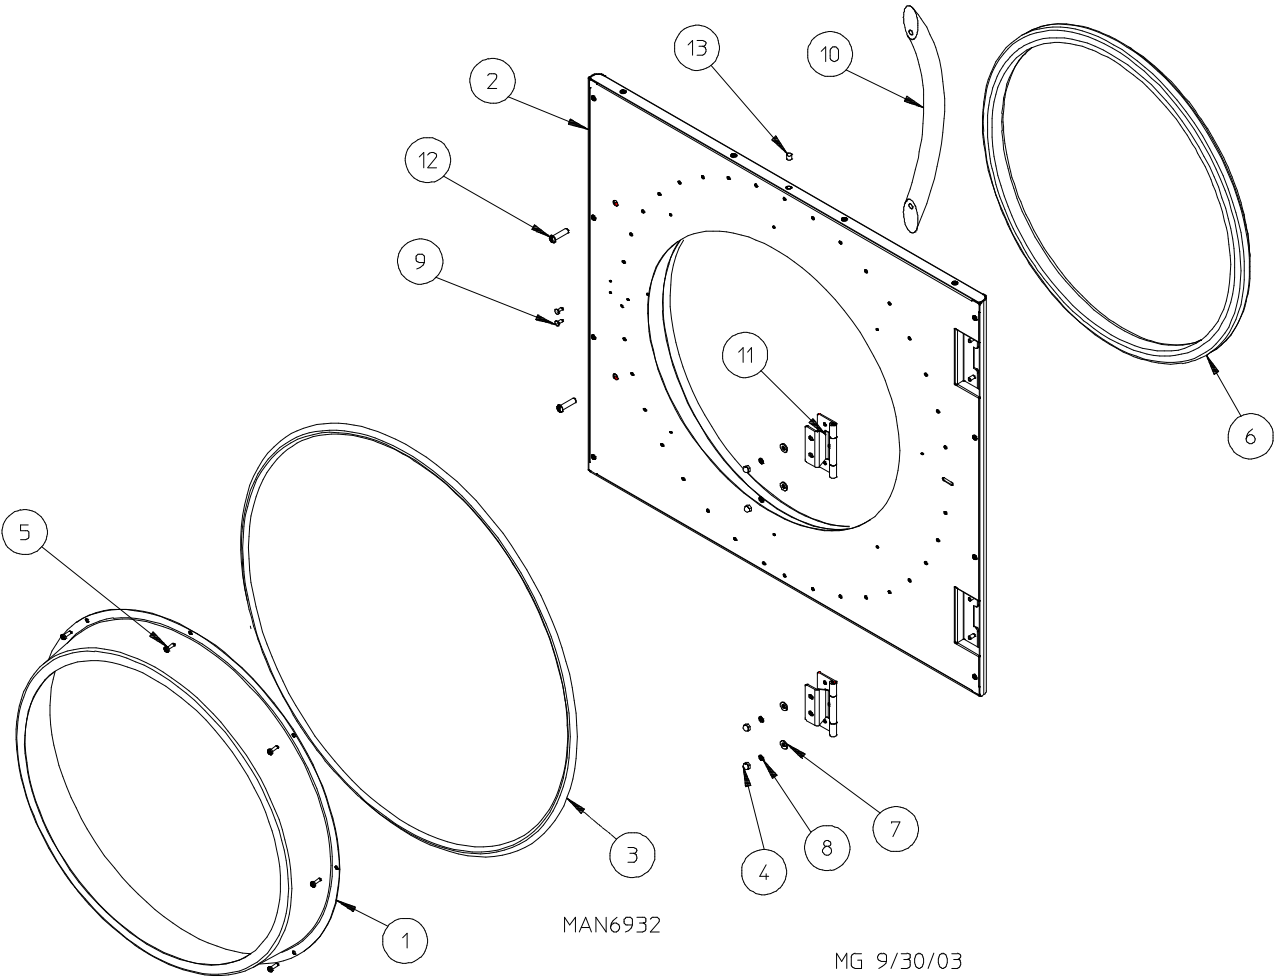

Main Door Assemblies


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883824	1	Door Pan with Glass
2	884143	1	Door (left hinge) (includes illus. nos. 2 and 13) (for models mfd. as of November 20, 2003)
	883858	1	Door (left hinge) (includes illus. nos. 2 and 13) (for models mfd. prior to November 20, 2003)
	884142	1	Door (right hinge) (includes illus. nos. 2 and 13) (for models mfd. as of November 20, 2003)
	883895	1	Door (right hinge) (includes illus. nos. 2 and 13) (for models mfd. prior to November 20, 2003)
3	102348	1	Door Gasket (rubber) (for models mfd. as of November 20, 2003)
4	151016	4	#8-32 Acorn Nut
5	150322	8	#6 x 1/2" Self-Drilling Screw
6	102314	1	Door Gasket (rubber) (for models mfd. prior to November 20, 2003)
	401010	1	Adhesive for Door Gasket (5 oz. tube) - <i>Not Illustrated</i>
7	153000	4	#8 Flat Washer
8	153012	4	#8 Star Washer
9	150327	2	#6 x 1/2" Phillips Flat Head Screw
10	170230	1	Door Handle
11	103067	2	Door Hinge (for models mfd. as of November 20, 2003)
	884134	2	Door Hinge (for models mfd. prior to November 20, 2003)
12	150328	2	1/4-20 x 1" Stainless Steel Phillips Head Screw
13	170608	1	Magnet
—	818561	1	Door Assembly Complete (left hinge) (includes illus. nos. 1 through 13) (for models mfd. as of November 20, 2003)
—	818562	1	Door Assembly Complete (right hinge) (includes illus. nos. 1 through 13) (for models mfd. as of November 20, 2003)

Middle Front Panel Assembly

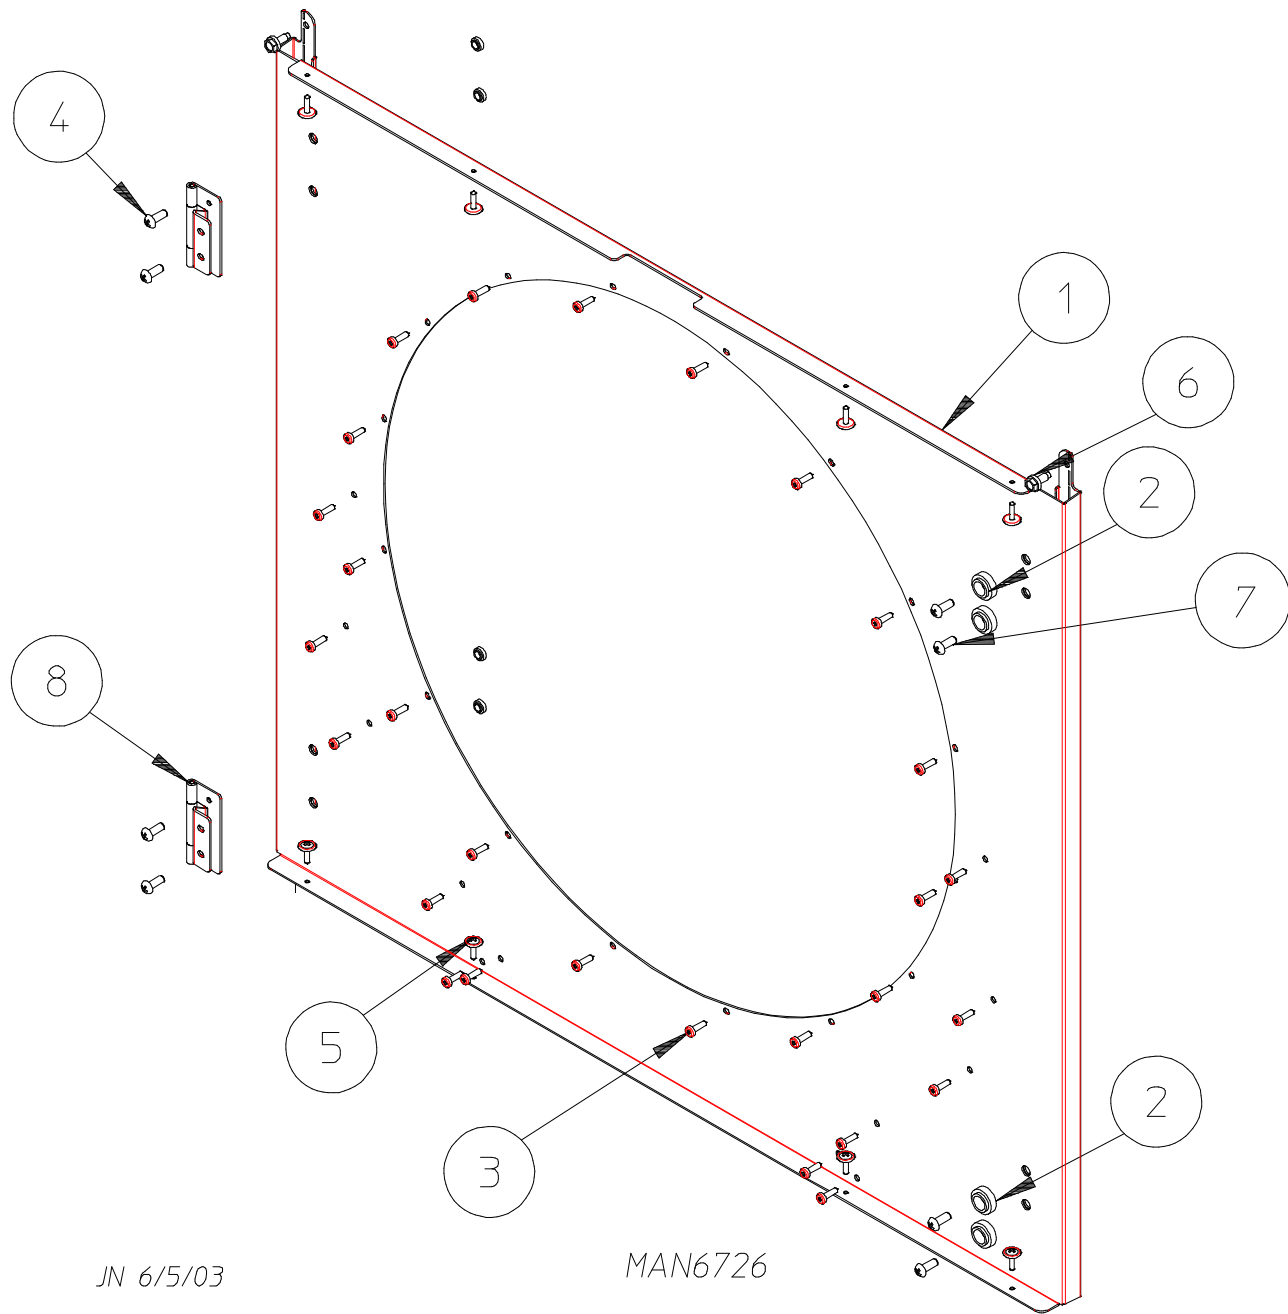


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	818493	1	Middle Panel
2	102004	4	Door Magnet
3	150322	28	#6-20 x 1/2" Phillips Pan Self-Drilling Screw
4	150321	4	#10-32 x 1/2" Phillips Head Machine Screw
5	150399	8	#8 x 1/2" Phillips Self-Drilling Screw
6	150300	2	#10-16 x 1/2" Hex Washer TEK Screw
7	152224	4	#10-32 x 1/2" Flat Head Spanner Machine Screw
8	884134	2	Door Hinge

Lint Drawer Assembly

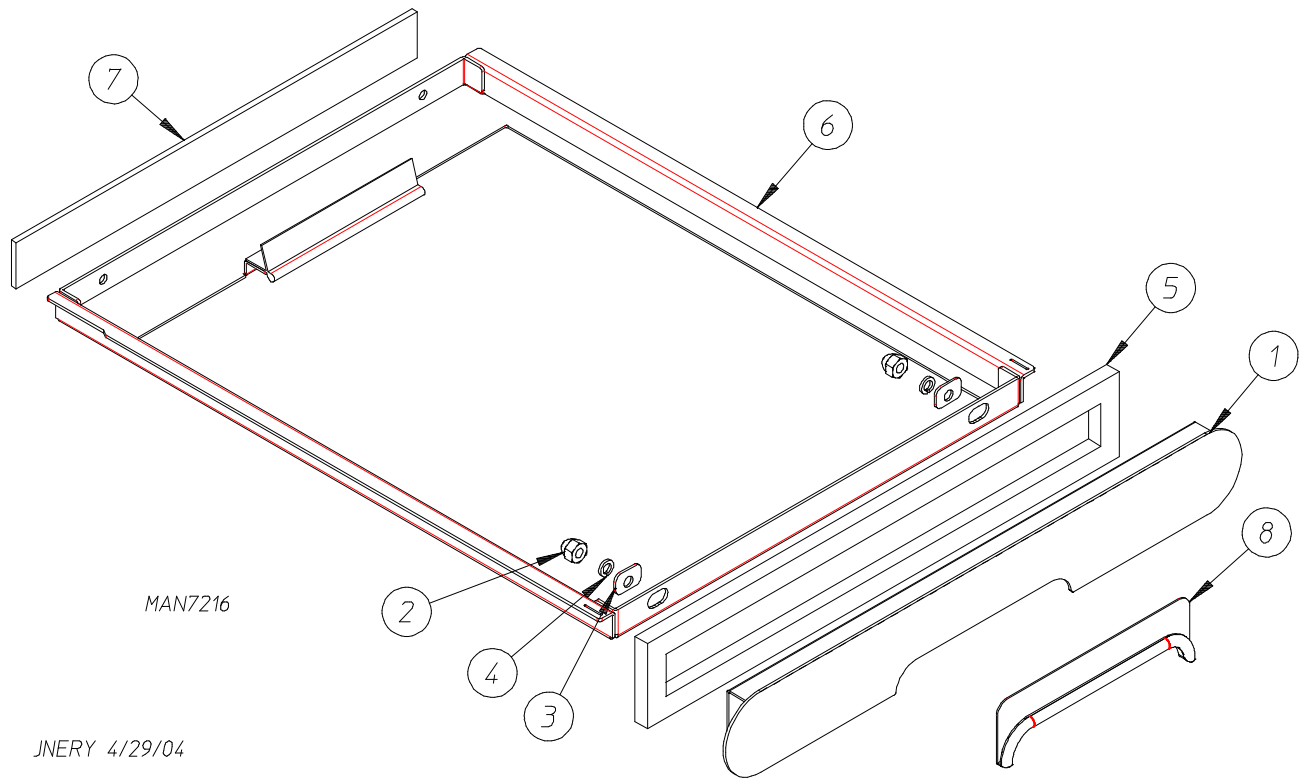


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	818166	1	Lint Drawer Complete with Stainless Steel Handle (includes illus. nos. 1 through 7)
	818471	1	Lint Drawer Complete with Cold Rolled Steel (CRS) Handle (includes illus. nos. 1 through 7)
	883751	1	Stainless Steel Lint Drawer Handle (includes illus. nos. 1 through 5)
	883859	1	Black Lint Drawer Cold Rolled Steel (CRS) Handle (includes illus. nos. 1 through 5)
2	151010	2	#10-32 Hex Acorn Lock Nut
3	153024	2	#10 Lock Washer
4	318541	2	Offset Washer
5	117605	2	Gasket (sold by the foot)
6	883752	1	Lint Drawer Assembly (includes illus. nos. 6 and 7)
7	116054	1	Lint Drawer Felt

Basket (Tumbler) Assembly

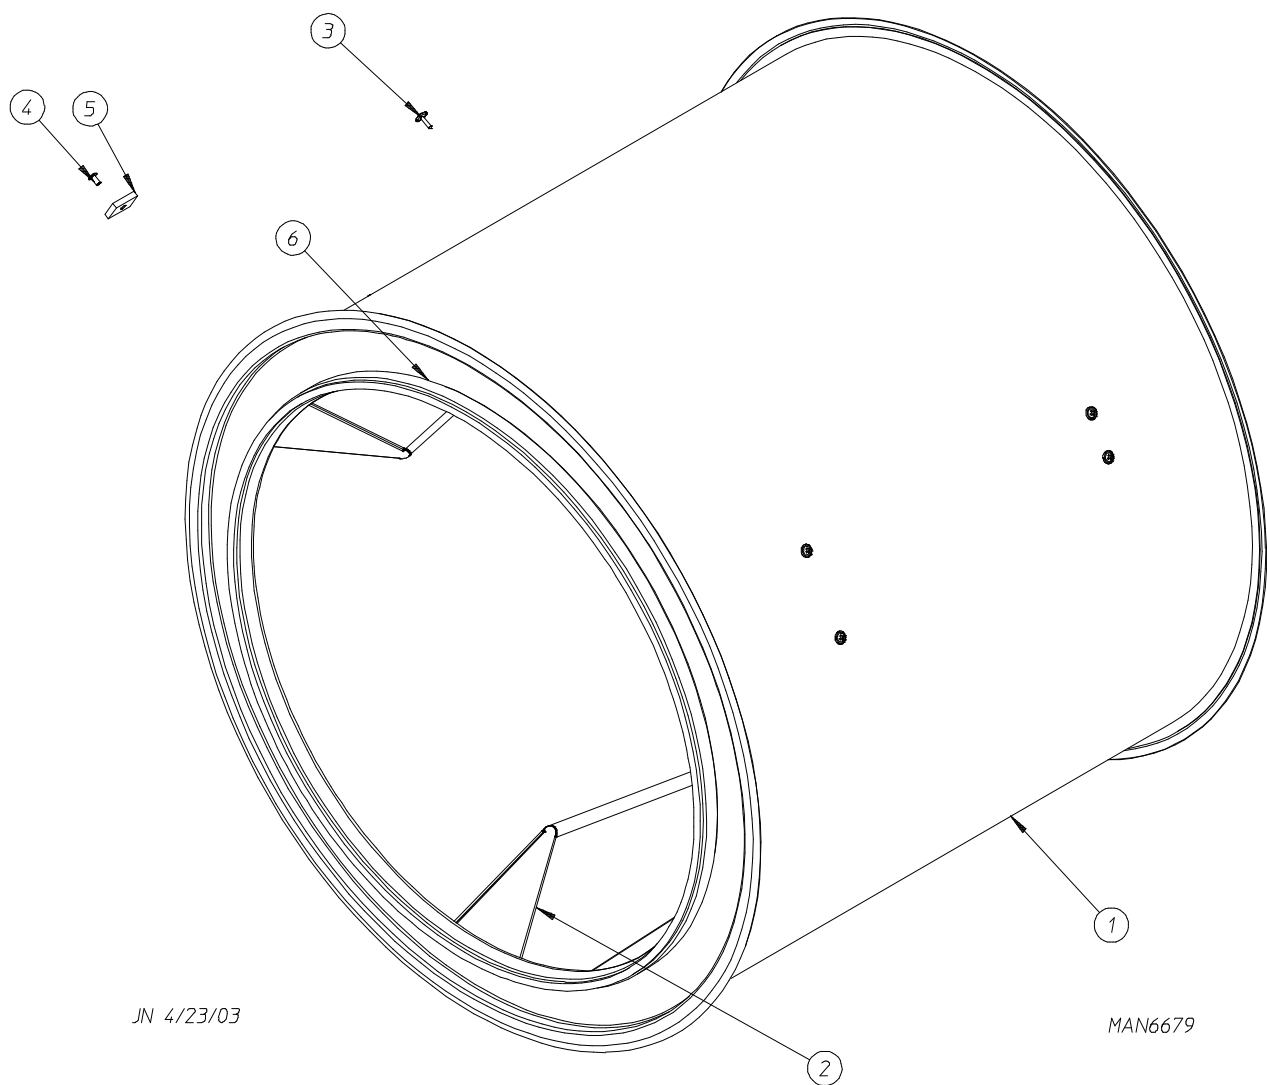

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	818089	1	Basket (tumbler) Assembly (includes illus. nos. 1 through 6)
2	318242	3	5" Tapered Rib
3	150313	12	#10-16 x 1/2" TORX + BTN, Type 1
4	154217	1	1/8" x 1/2" Pop Rivet
5	102102	1	Rotational Sensor Magnet
6	115906	2	Basket (tumbler) Felt
	401010	1	Adhesive for Felt Collar (5 oz. tube) - <i>Not Illustrated</i>


Front Basket (Tumbler)/Support Panel Assembly

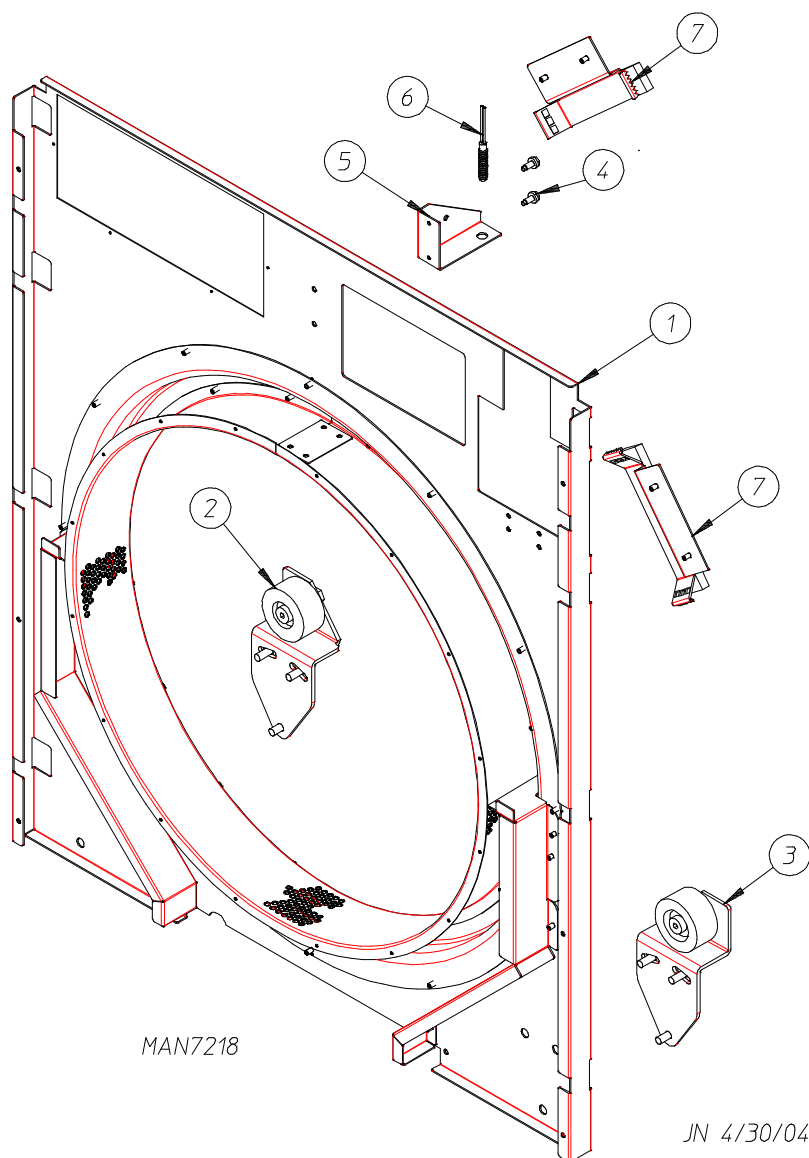

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	884139	1	Front Basket (tumbler) Support Panel Assembly
2	818184	1	Front Left Wheel Assembly (refer to Basket [Tumbler] Front Roller Wheel Assemblies on page 20)
3	818183	1	Front Right Wheel Assembly (refer to Basket [Tumbler] Front Roller Wheel Assemblies on page 20)
4	150300	2	#10-16 x 1/2" Hex Washer TEK Screw
5	318234	1	Rotational Sensor Bracket
6	818206	1	Rotational Sensor
7*	818609	2	Front Felt Pad with Mounting Rivets

*Note: Complete kit of front and rear pads with instructions - P/N 884172.

Rear Support Panel Assembly

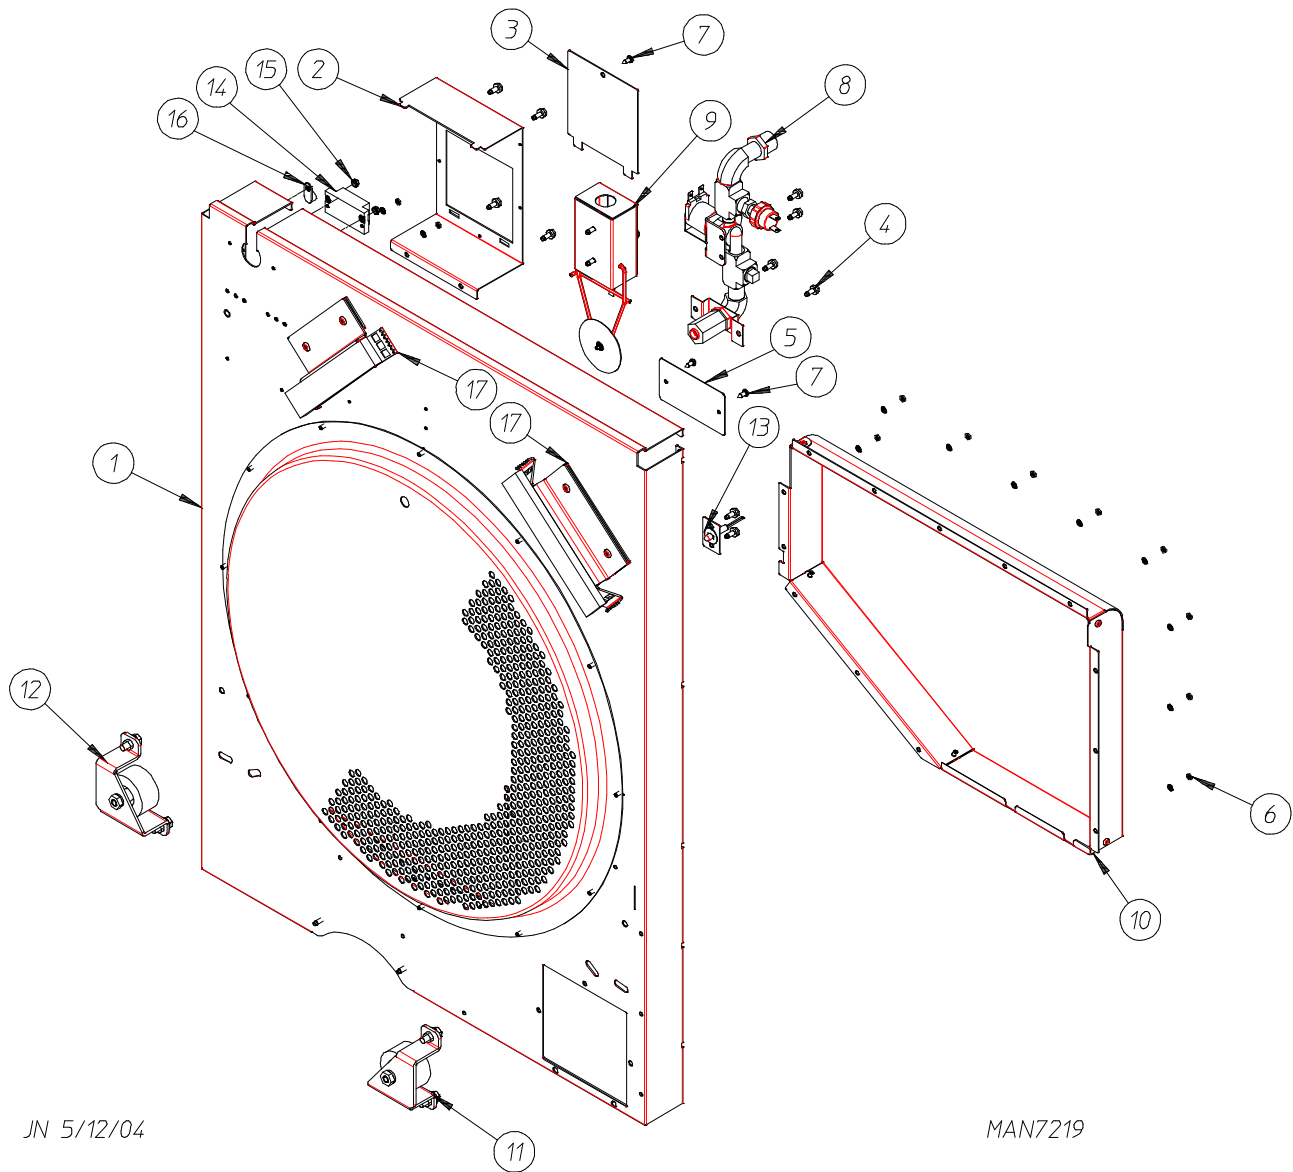


Rear Support Panel Assembly

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	884023	1	Rear Bulkhead with a Fire Suppression System (for models mfd. as of August 21, 2003)
	883853	1	Rear Bulkhead with a Fire Suppression System (for models mfd. prior to August 21, 2003)
	884022	1	Rear Bulkhead without a Fire Suppression System (for models mfd. as of August 21, 2003)
	883854	1	Rear Bulkhead without a Fire Suppression System (for models mfd. prior to August 21, 2003)
2	318695	1	Junction Box (for models mfd. as of August 21, 2003)
	318628	1	Junction Box (for models mfd. prior to August 21, 2003)
3	318629	1	Electric Cover
4	150300	16	#10-16 x 1/2" Hex Washer TEK Screw
5	318691	1	Cover Plate (for dryers without a Fire Suppression System)
6	153073	15	#8-32 KEPS Nut
7	150301	2	#8-18 x 7/16" Phillips Pan Head TEK Screw
8	818487	1	Fire Suppression System Assembly (refer to Fire Suppression System Piping Assembly on page 22)
9	818570	1	Sail Switch Assembly (for models mfd. as of January 23, 2004) (refer to Sail Switch Assembly on page 33)
	818114	1	Sail Switch Assembly (for models mfd. prior to January 23, 2004) (refer to Sail Switch Assembly on page 33)
10	818489	1	Heat Duct Assembly
11	818109	1	Rear Right Roller Wheel Assembly (refer to Basket [Tumbler] Rear Roller Wheel Assemblies on page 21)
12	818110	1	Rear Left Roller Wheel Assembly (refer to Basket [Tumbler] Rear Roller Wheel Assemblies on page 21)
13	818228	1	Fire Suppression System Temperature Sensor (refer to Temperature Sensor Assemblies on page 23)
14	120716	1	2-Position Terminal Block (gas models Only)
	120728	1	4-Position Terminal Block (electric models Only)
15	151001	2	#8-32 Pal Nut
16	121010	2	Ground Lug
17*	818608	2	Rear Felt Pad with Shims and Pop Rivets


*Note: Complete kit of front and rear pads with instructions - P/N 884172.

Basket (Tumbler) Front Roller Wheel Assemblies

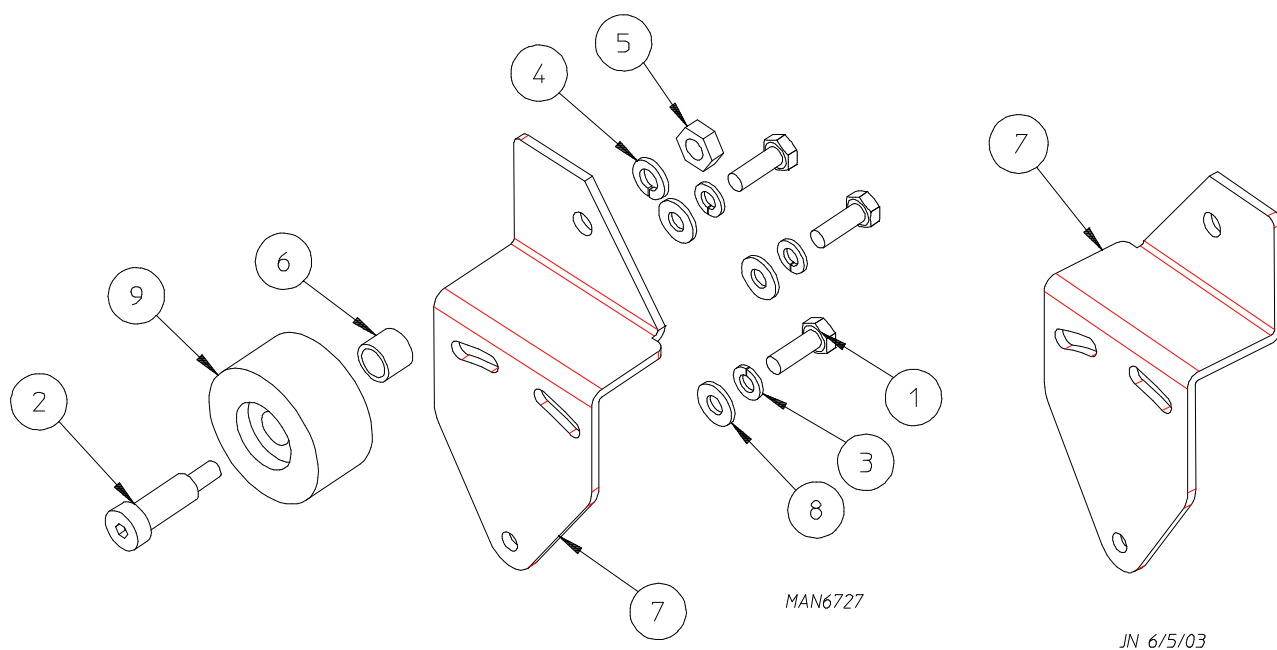


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	150510	3	1/4-20 x 3/4" Hex Head Machine Bolt
2	154267	1	M10 x 25 mm Shoulder Screw
3	153007	3	1/4" Lock Washer
4	153002	1	5/16" Lock Washer
5	154013	1	M8 Hex Nut
6	154284	1	Basket (tumbler) Wheel Spacer
7	318532	1	Front Right Roller Wheel Bracket
	818183	1	Front Right Wheel Assembly Complete (includes illus. nos. 1 through 9)
	318531	1	Front Left Roller Wheel Bracket
	818184	1	Front Left Wheel Assembly Complete (includes illus. nos. 1 through 9)
8	153018	3	1/4" Flat Washer
9	180032	1	Idler Wheel

Basket (Tumbler) Rear Roller Wheel Assemblies

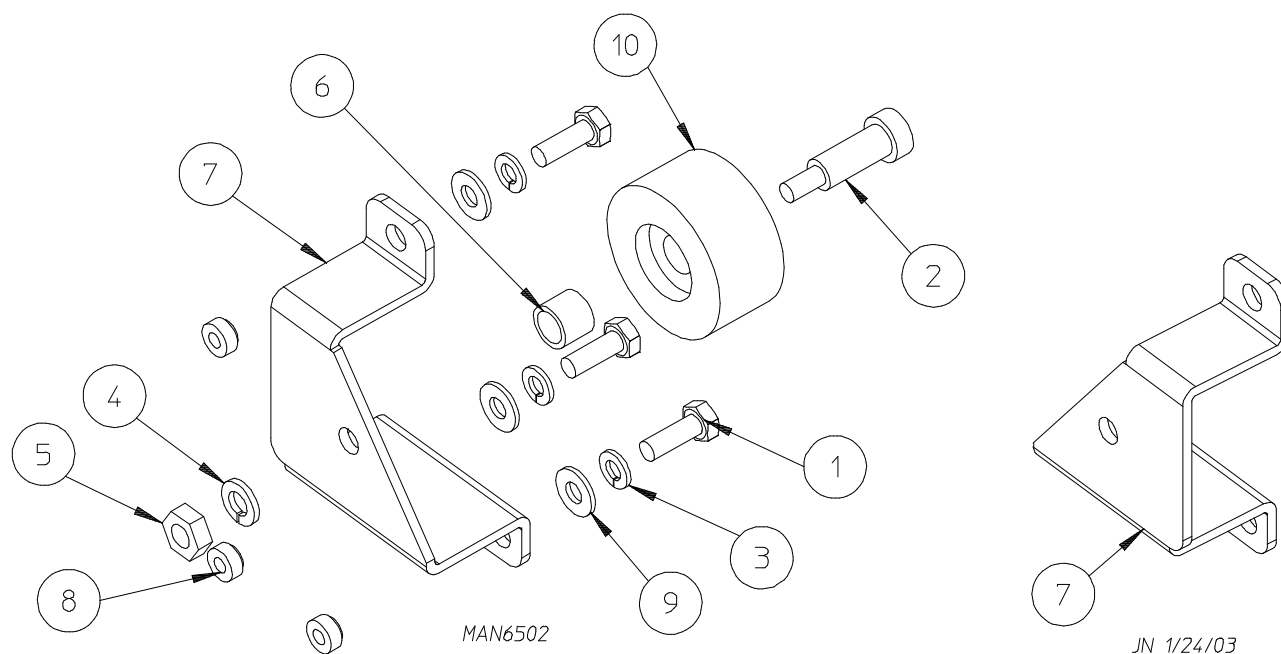

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	150510	3	1/4-20 x 3/4" Hex Head Machine Bolt
2	154267	1	M10 x 25 mm Shoulder Screw
3	153007	3	1/4" Lock Washer
4	153002	1	5/16" Lock Washer
5	154013	1	M8 Hex Nut
6	154284	1	Basket (tumbler) Wheel Spacer
7	818110	1	Rear Left Wheel Assembly Complete (includes illus. nos. 1 through 10)
	818109	1	Rear Right Wheel Assembly Complete (includes illus. nos. 1 through 10)
8	153596	3	1/4-20 Clinch Nut
9	153018	3	1/4" Flat Washer
10	180032	1	Idler Wheel



Fire Suppression System Piping Assembly

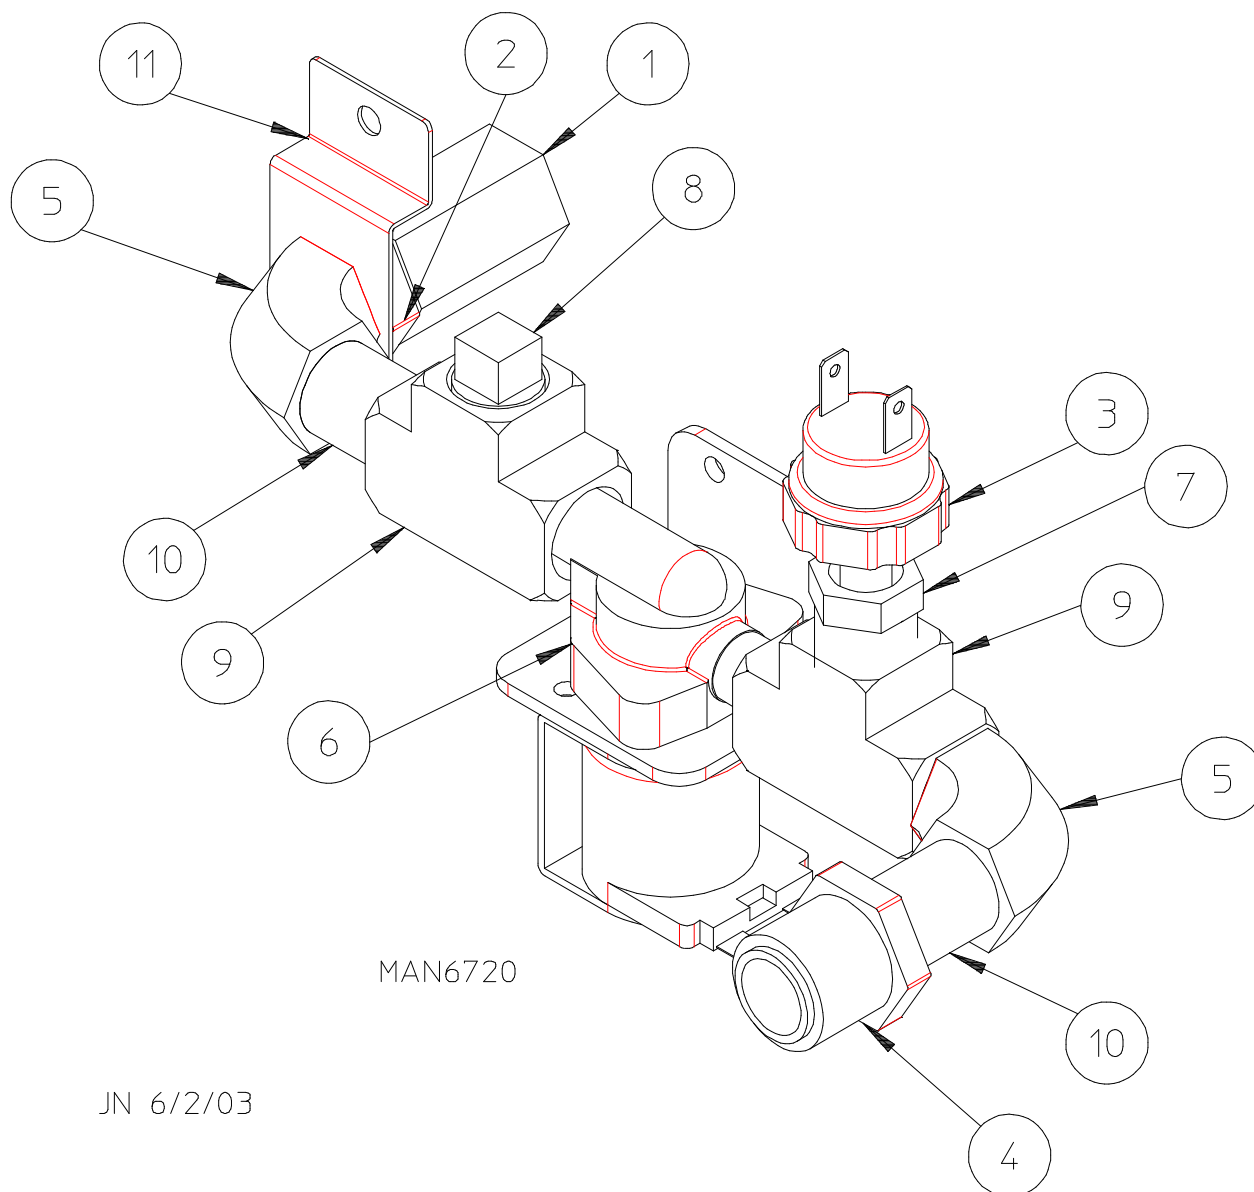


JN 6/2/03

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
—	818487	1	Fire Suppression System Assembly (includes illus. nos. 1 through 11)
1	143581	1	3/8" N.P.T. Spray Nozzle
2	143303	1	3/8" N.P.T. Brass Lock Nut
3	136987	1	Pressure Switch
4	142887	1	3/4" M.P.T. x 3/8" F.P.T. Hex Bushing
5	143155	2	3/8" Brass Street Elbow
6	165114	1	Solenoid Valve 24V 60/50 Hz
7	143315	1	3/8" M.P.T. x 1/8" Brass Bushing
8	143251	1	3/8" M.P.T. Brass Plug
9	143220	2	3/8" F.P.T. Brass Tee
10	143241	2	3/8" Close Brass Nipple
11	318631	1	Bracket

Temperature Sensor Assemblies

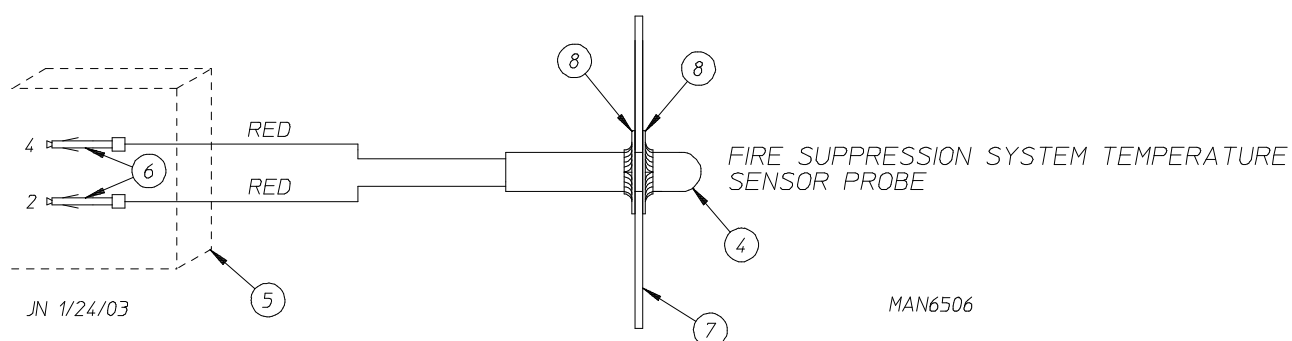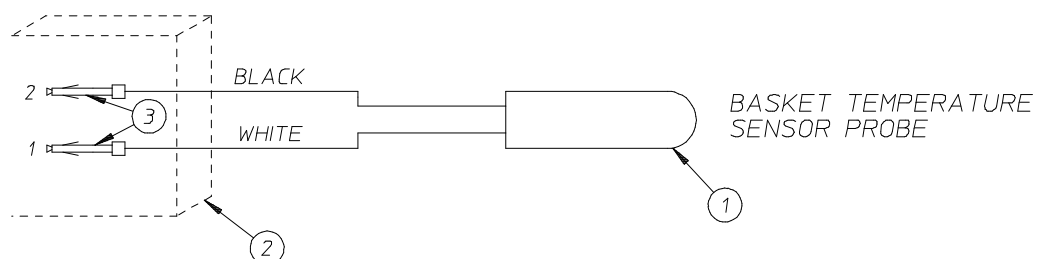

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	818207	1	Basket (tumbler) Temperature Sensor Probe (includes illus. nos. 1 through 3)
2	122646	1	2-Pin Plug
3	122706	2	Socket Terminal ONLY
4	883821	1	Fire Suppression System Temperature Sensor Probe Assembly Complete (includes illus. nos. 4 through 8)
5	122646	1	2-Pin Plug
6	122706	2	Socket Terminal ONLY
7	318525	1	Fire Suppression System Probe Bracket
8	154007	2	Push On Fasteners

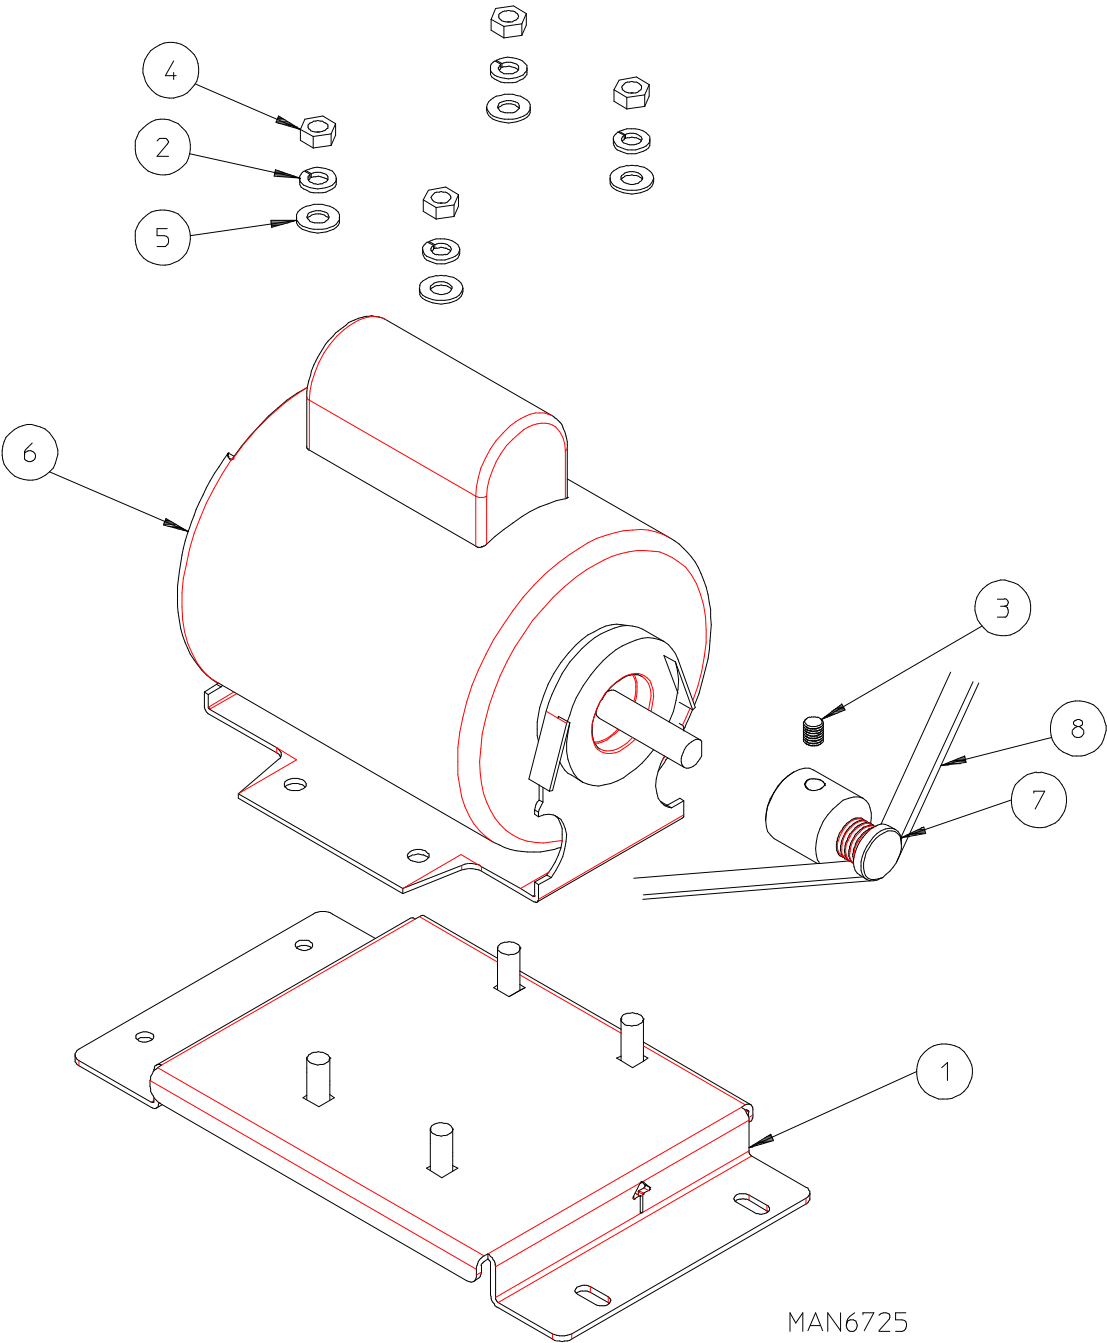


MAN6725

JN 6/5/03

Motor Drive Assembly


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	818200	1	Motor Base Plate (with studs)
2	153002	4	5/16" Lock Washer
3	154321	1	5/16" x 3/8" Allen Setscrew
4	152004	4	5/16-18 Hex Nut
5	153001	4	5/16" Flat Washer
6	181120	1	4-Pole Motor
7	185000	1	4-Pole Motor Sheave (50 Hz models)
8	100197	1	Drive Belt



Direct Spark Ignition (DSI) Burner Assembly (continued)


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
5	141129	1	Inshot Burner
6	882451	1	Ignitor Probe Assembly with High Voltage (HV) Wire (includes illus. nos. 6 and 21)
7	142634	1	3/8" x 19" Pipe Nipple
8	130400	1	290° Thermostat (for models mfd. as of August 5, 2003)
	130403	1	330° Thermostat (for models mfd. prior to August 5, 2003)
9	142953	1	3/8" x 1/2" Steel Bushing
10	318519	1	Gas Valve Support Bracket
	318685	1	(CE) Gas Valve Support Bracket
11	318561	1	Oven Mounting Bracket
	318686	1	(CE) Oven Mounting Bracket
12	318547	1	Burner Retainer Bracket
13	154356	1	U-Bolt 3/8" Pipe
14	143181	1	Tear Tab Pipe Cap
15	318743	1	Commercial Gas Housing (for models mfd. as of March 8, 2004)
	318625	1	Commercial Gas Housing (for models mfd. prior to March 8, 2004)
16	150300	17	#10-16 x 1/2" Hex Washer TEK Screw
17	318343	1	Gas Burner Mounting Bracket
18	318421	1	Gas Pipe Bracket
19	154217	2	1/8" Pop Rivet
20	318634	2	Pipe Bracket
21	128919	1	High Voltage (HV) ignition Cable with Cap (for models mfd. prior to February 2004)
22	152013	2	#6-32 Hex Nut
23	128935	1	Direct Spark Ignition (DSI) Module with 3 Tries (for models mfd. prior to February 2004)
	128941	1	(CE) Direct Spark Ignition (DSI) Module with 2 Tries

Electric Oven Assembly

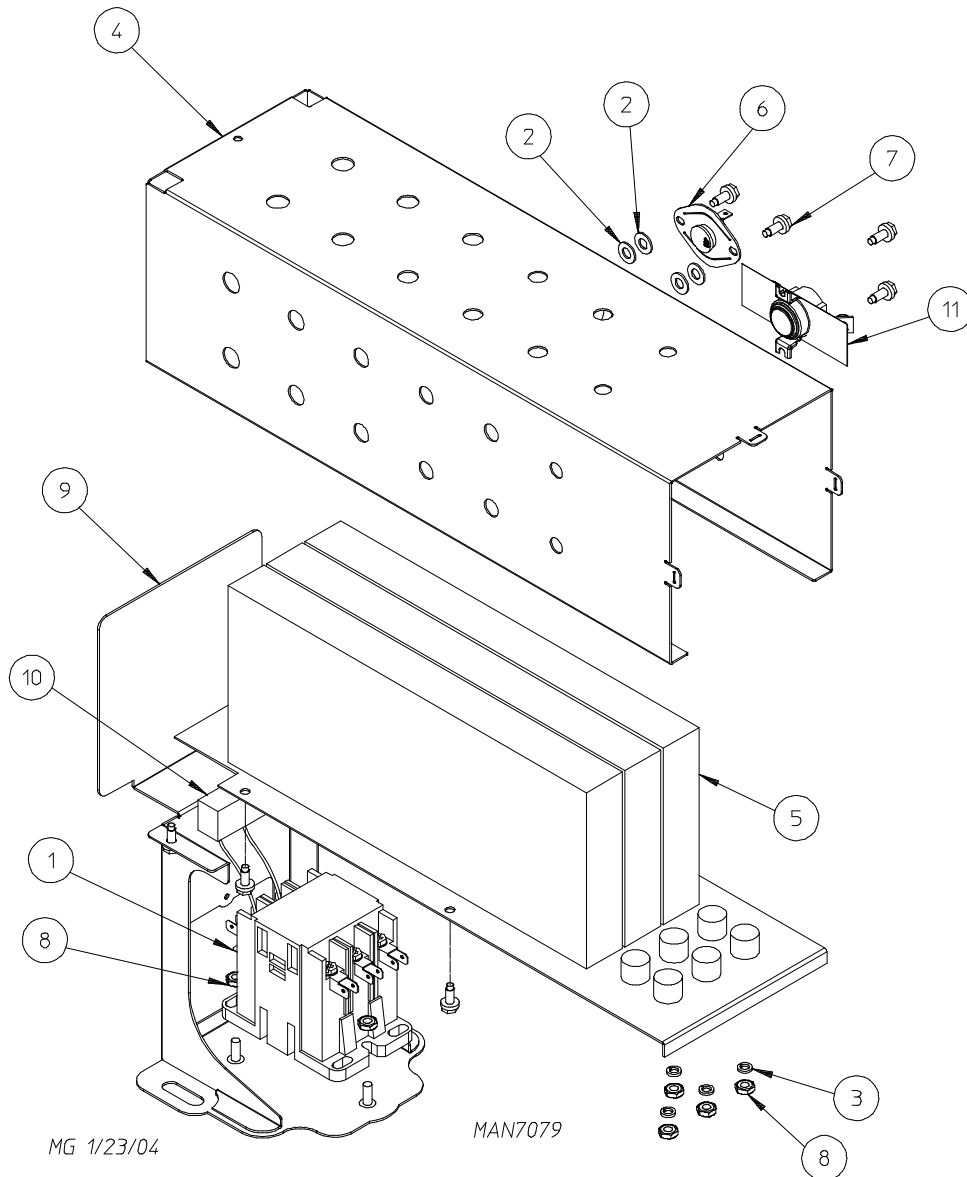


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	131368	1	25A 25V Contactor with Lugs
2	153022	4	#10 Flat Washer
3	153024	4	#10 Split Lock Washer
4	318543	1	Electric Oven Housing
5	120086	1	3-Phase Oven
6	130400	1	Temperature Sensor
7	150300	10	#10-16 x 1/2" Hex Washer Screw
8	152008	7	#10-32 Hex Nut
9	818525	1	Electric Bracket
10	824081	1	R.C. Network
11	130123	1	Thermadisc Fuse
			(for models mfd. as of January 5, 2004)
-	884128	1	Harness Jumper for Thermadisc Fuse - <i>Not Illustrated</i>

Lint Box/Blower Motor Assembly

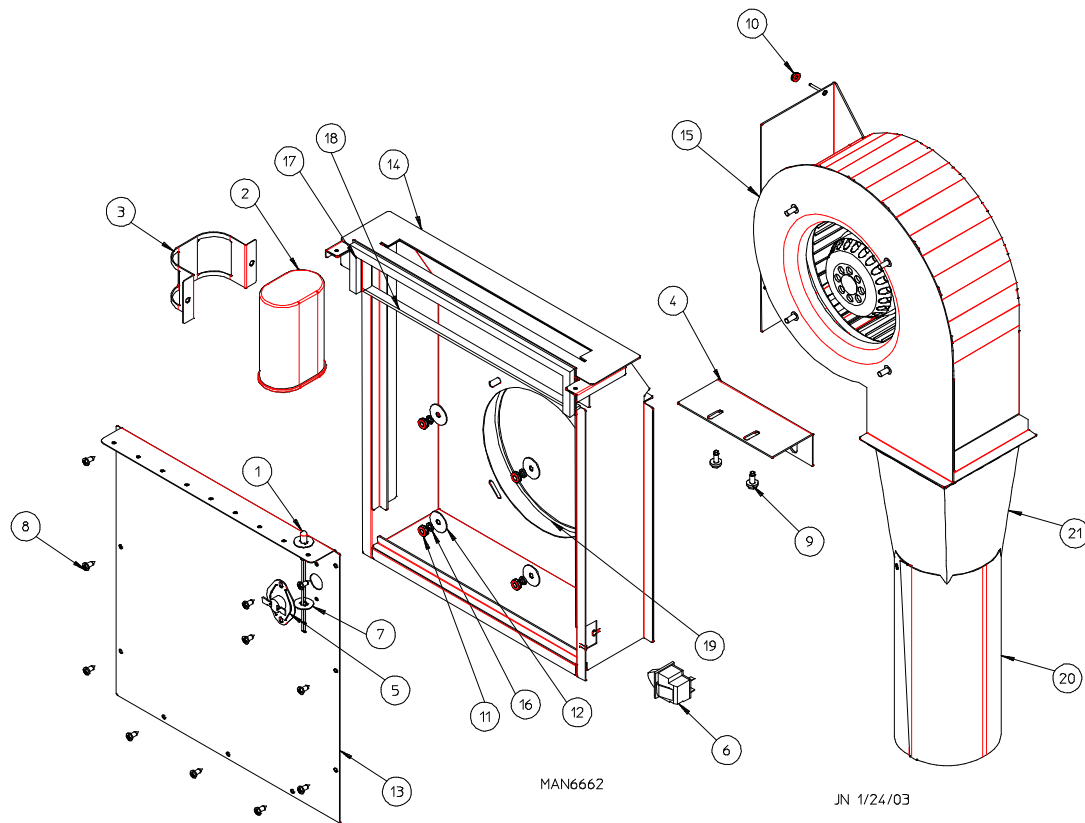


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	818207	1	Temperature Sensor Probe Assembly (refer to Temperature Sensor Assemblies on page 23)
2	100623	1	25 M.F.D. 440 VAC Capacitor (for use with 120 volt blower)
	100633	1	6 M.F.D. 440 VAC Capacitor (for use with 220 volt blower)
3	318230	1	Capacitor Bracket (for use with 25 M.F.D. 440 VAC capacitor)
	100632	1	Capacitor Bracket (for use with 6 M.F.D. 440 VAC capacitor)
4	318224	1	Blower Housing Rear Support Bracket
5	130119	1	190° Thermostat
6	122003	1	Door Switch
7	154007	2	1/4" Push On Fastener
8	150301	11	#8-18 x 7/16" Phillips Pan Head TEK Screw
9	150309	2	#10-16 x 1/2" Hex Head TEK Crimpite Screw
10	152013	2	#6-32 Hex Nut
11	152008	4	#10-32 Hex Nut
12	153049	4	13/64" x 7/8" Flat Washer
13	318192	1	Lint Box Top
14	818484	1	Lint Box
15	818100	1	120 Volt Blower Assembly (refer to Blower Assembly on page 30)
	818147	1	220 Volt Blower Assembly (refer to Blower Assembly on page 30)
16	153024	4	#10 Lock Washer
17	117605	1	1/4" x 3/8" Sponge Tape (sold by the foot)
18	117604	1	Noise Suppression Tape (sold by the foot)
19	117604	1	Noise Suppression Tape (sold by the foot)
20	318179	1	Exhaust Tube
21	143335	1	Exhaust Transition Piece

Blower Assembly

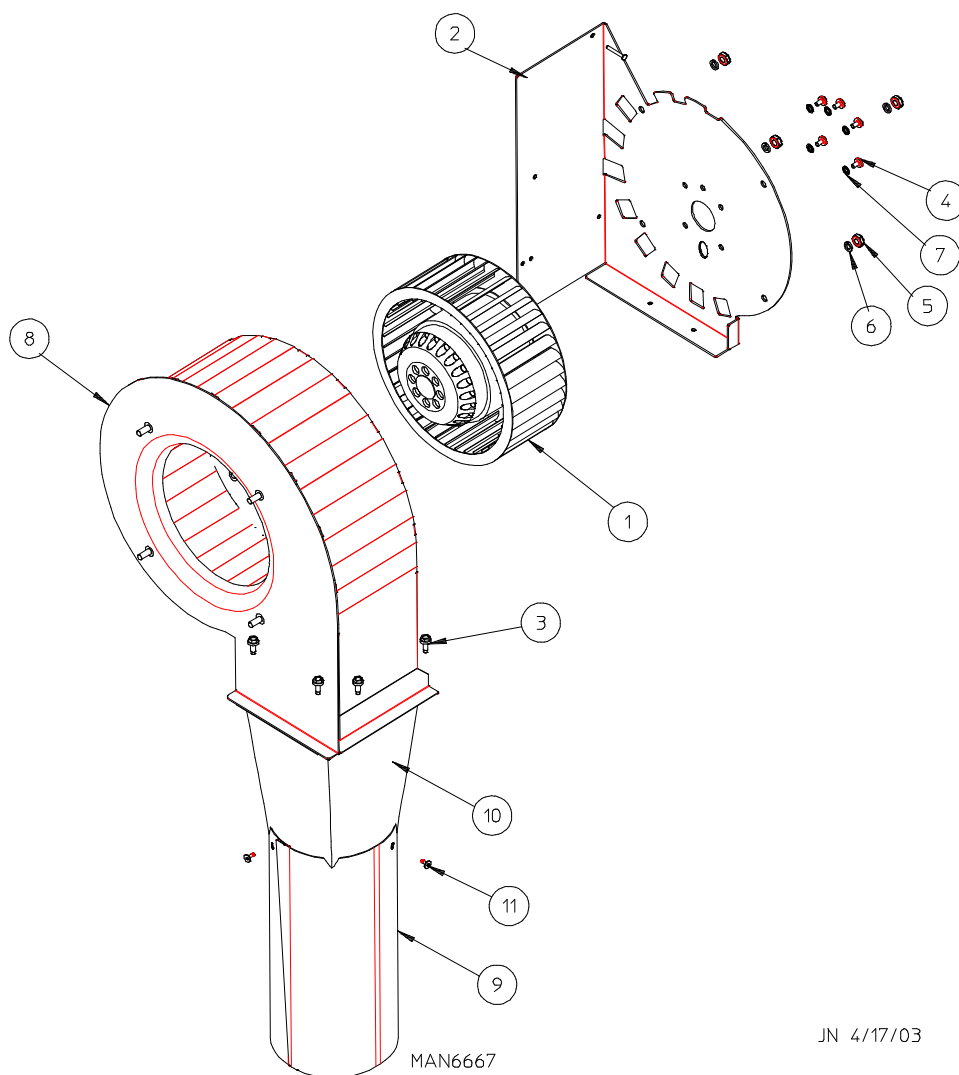


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883826	1	Motorized Impellor 120V ONLY (refer to Blower Motor Assembly on <u>page 31</u>)
	883827	1	Motorized Impellor 240V ONLY (refer to Blower Motor Assembly on <u>page 31</u>)
2	318204	1	Blower Housing Mount
3	150300	8	#10-16 x 1/2" Hex Washer Screw
4	154338	5	M4 x 6 mm Phillips Head Slotted Machine Screw
5	152008	4	#10-32 Hex Nut
6	153024	4	#10 Lock Washer
7	153012	5	#8 Star Washer
8	818099	1	Blower Housing
9	318179	1	Exhaust Tube
10	143335	1	Exhaust Transition Piece
	818100	1	Blower Assembly Complete 120V (includes illus. nos. 1 through 10)
	818147	1	Blower Assembly Complete 240V (includes illus. nos. 1 through 10)
11	154215	2	5/32" Pop Rivet

Blower Motor Assembly

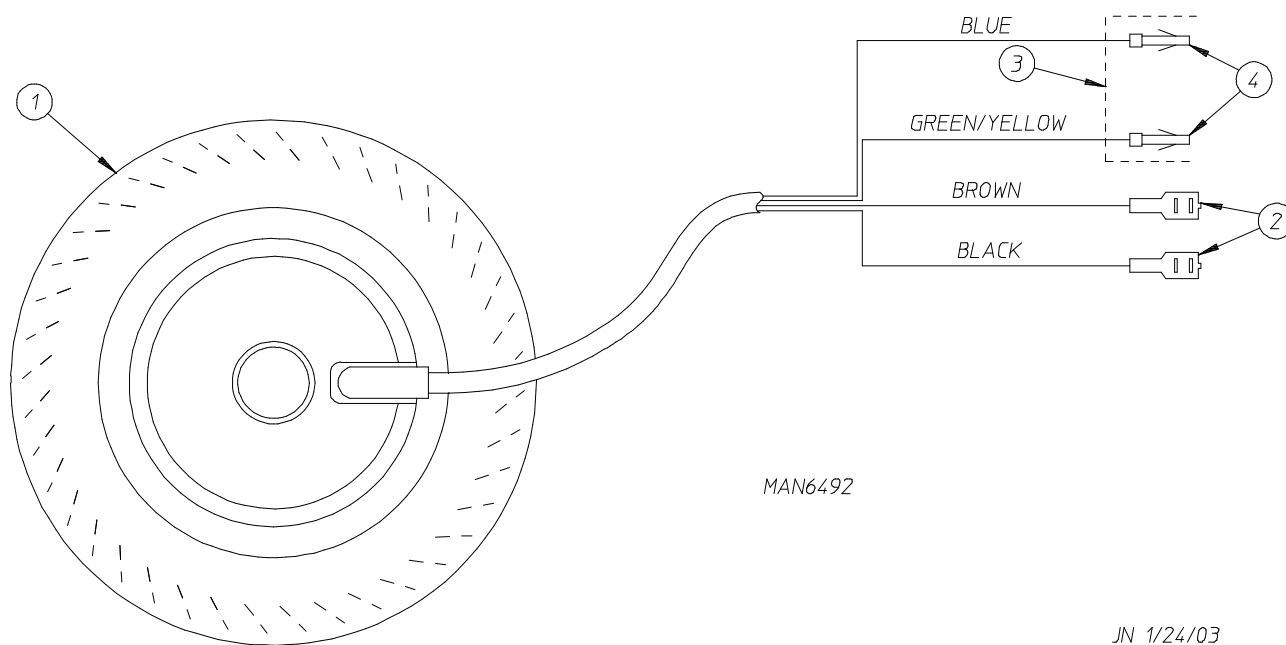


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883826	1	120V Motorized Impellor with Plug (includes illus. nos. 1 through 4)
	883827	1	240V Motorized Impellor with Plug (includes illus. nos. 1 through 4)
	100621	1	Motorized Impellor 120V (60 Hz)
	100624	1	Motorized Impellor 240V (50 Hz)
2	121000	2	1/4" x 0.032 Uninsulated Terminal
3	122622	1	4-Pin Plug
4	122705	2	Socket Terminal ONLY

Front Electrical Panel Assembly

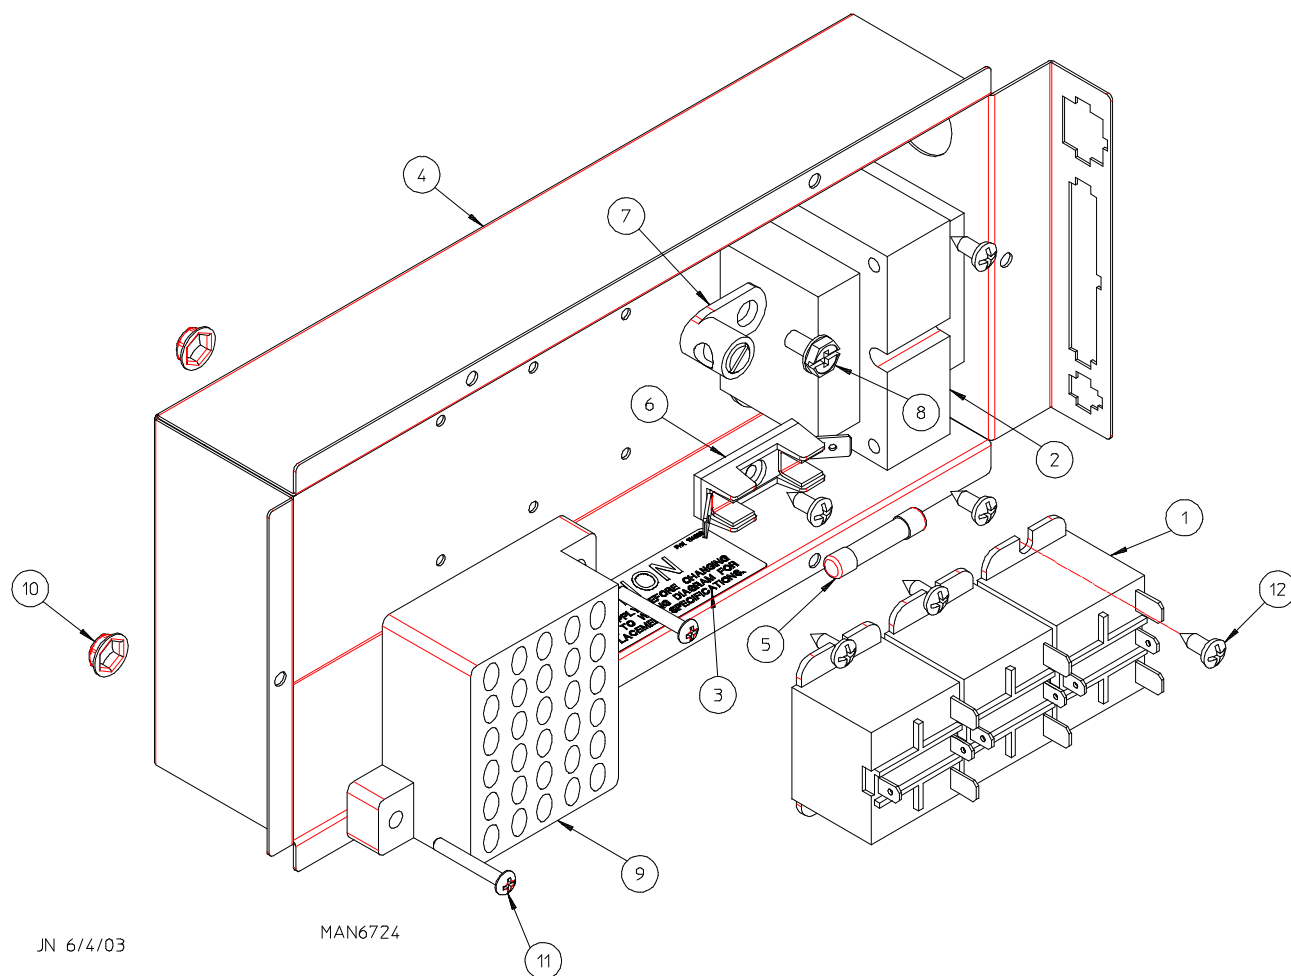


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	131932	3	24V SPST Relay
	818347	1	Front Electrical Panel Complete (120V) (includes illus. nos. 1 through 12)
	818348	1	Front Electrical Panel Complete (240V) (includes illus. nos. 1 through 12)
2	818284	1	Universal Transformer Assembly (120V or 240V) (for models mfd. as of January 23, 2004)
	818212	1	Transformer Assembly (120V) (for models mfd. prior to January 23, 2004)
	818224	1	Transformer Assembly (240V) (for models mfd. prior to January 23, 2004)
3	114506	1	Fuse Rating Label
4	318620	1	Electric Box
5	136057	1	1/2-Amp (Slo-Blo) Fuse
6	136008	1	Fuse Holder
7	121010	1	Ground Lug
8	120910	1	#10-32 Green Ground Screw
9	120730	1	30-Position Terminal Block
10	151000	2	#6-32 Pal Nut
11	150006	2	#6-32 x 1" Phillips Round Head Machine Screw
12	150301	9	#8-18 x 7/16" Phillips Pan Head TEK Screw

Sail Switch Assembly

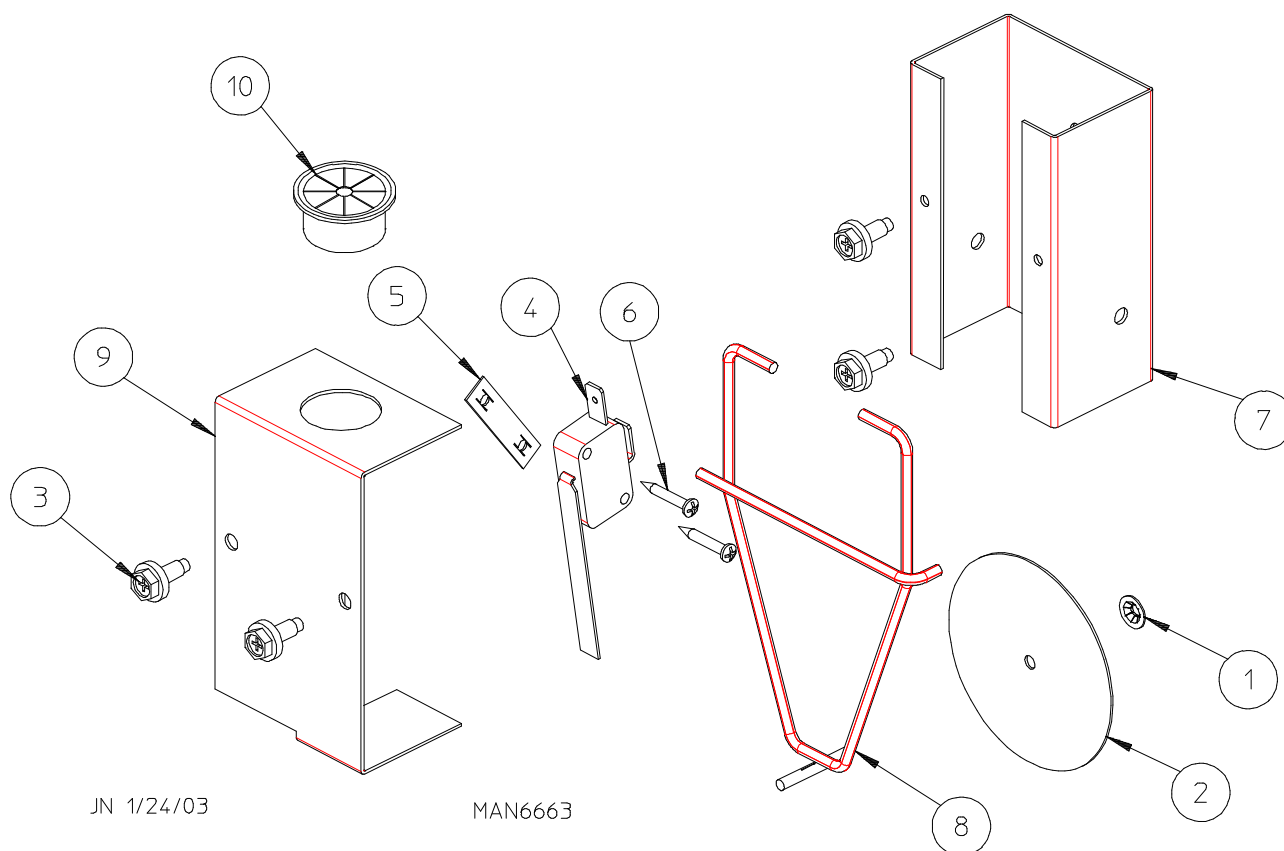

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	154002	1	1/8" Push On Fastener
2	318490	1	Sail Switch Damper (flat) 3-1/4" Diameter (for models mfd. as of January 21, 2004)
	332689	1	Sail Switch Damper (flat) 2-1/2" Diameter (for models mfd. prior to January 21, 2004)
3	150309	4	#10-16 x 1/2" Hex Head TEK Crimpite Screw
4	122200	1	Sail Switch ONLY
5	154004	1	Twin Speed Nut
6	150303	2	#4 x 3/4" Pan Head Machine Screw
7	318237	1	Sail Switch Box
8	105500	1	Sail Switch Rod Assembly
9	818113	1	Sail Switch Box Cover and Bracket ONLY
	818570	1	Sail Switch Assembly Complete (includes illus. nos. 1 through 9) (for models mfd. as of January 21, 2004)
	818114	1	Sail Switch Assembly Complete (includes illus. nos. 1 through 9) (for models mfd. prior to January 21, 2004)
10	121400	1	Universal Bushing


Base/Top/Sides/Back Guard Assemblies

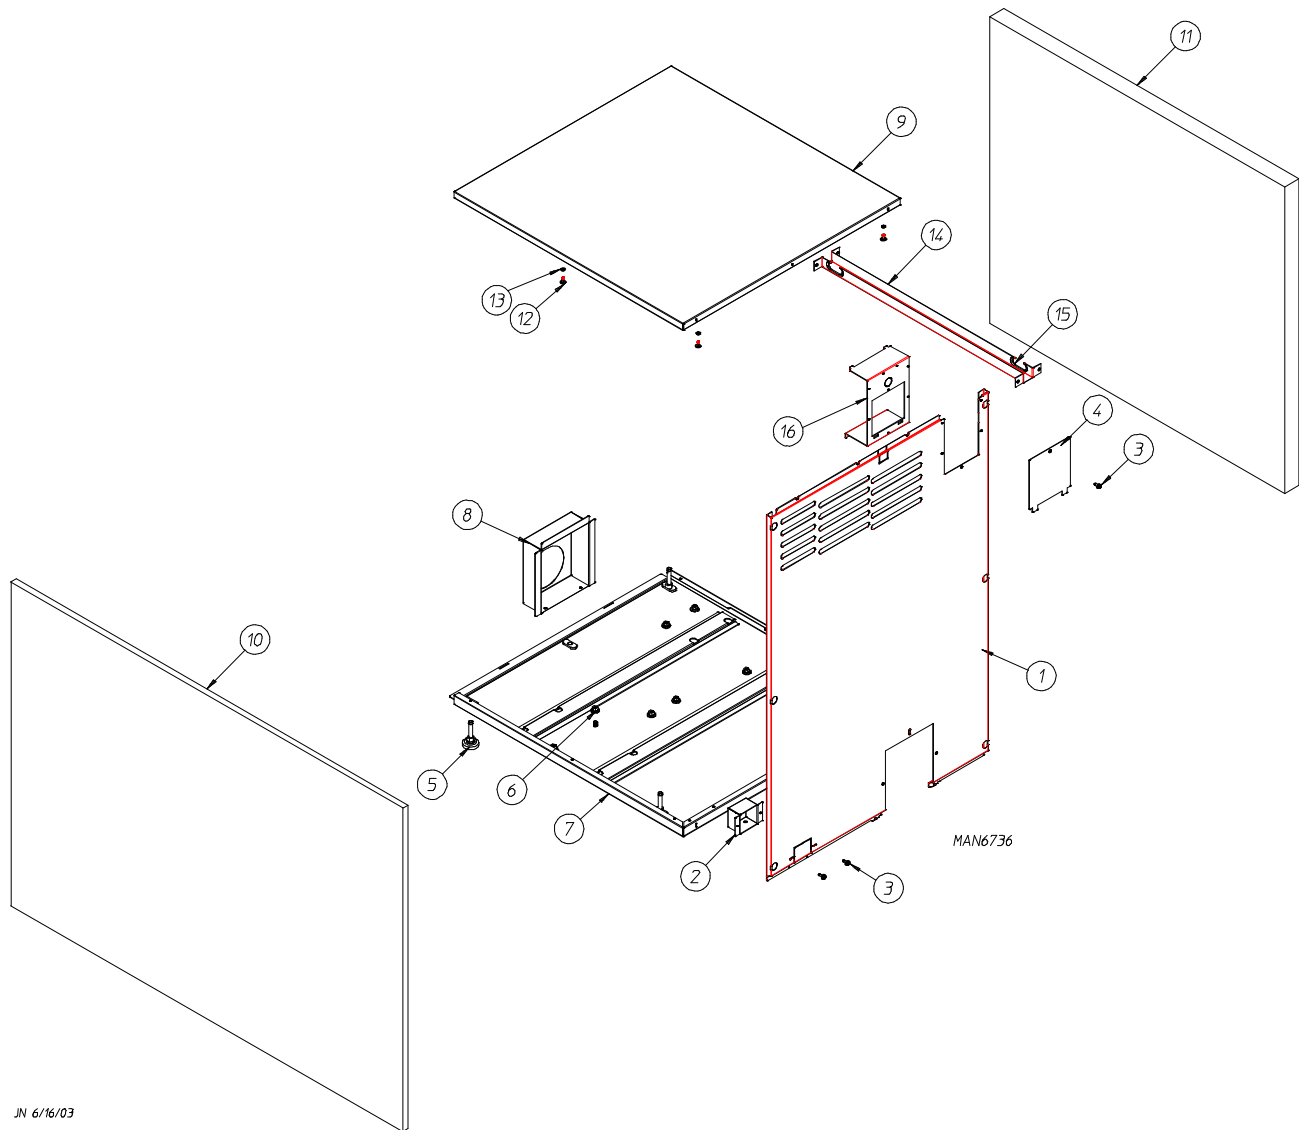

JN 6/16/03

Base/Top/Sides/Back Guard Assemblies

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	318643	1	Back Guard
2	318634	1	Gas Pipe Pocket (Gas Only)
3	150300	32	#10-16 x 1/2" Hex Washer TEK Screw
4	318629	1	Junction Box Cover
5	103501	4	Leveling Leg
6	152014	8	1/4-20 Free Spin Wash Nut
7	818564	1	Hooked Base (for models mfd. as of January 31, 2004)
	818479	1	Slide Base (for models mfd. prior to January 31, 2004)
8	318632	1	Exhaust Support Bracket
9	818491	1	Top (includes illus. nos. 12 and 13)
10	818565	1	Right Side Panel Assembly (for models mfd. as of January 31, 2004)
	818496	1	Right Side Panel Assembly (for models mfd. prior to January 31, 2004)
11	818566	1	Left Side Panel Assembly (for models mfd. as of January 31, 2004)
	818495	1	Left Side Panel Assembly (for models mfd. prior to January 31, 2004)
12	154210	4	5/32" x 3/16" Pop Rivet
13	318143	4	Top Catch Spacer
14	318640	1	Wire Track
15	156001	2	Caterpillar Grommet
16	318695	1	Junction Box (for models mfd. as of August 21, 2003)
	318628	1	Junction Box (for models mfd. prior to August 21, 2003)
17	180180	2	Corner Trim Place

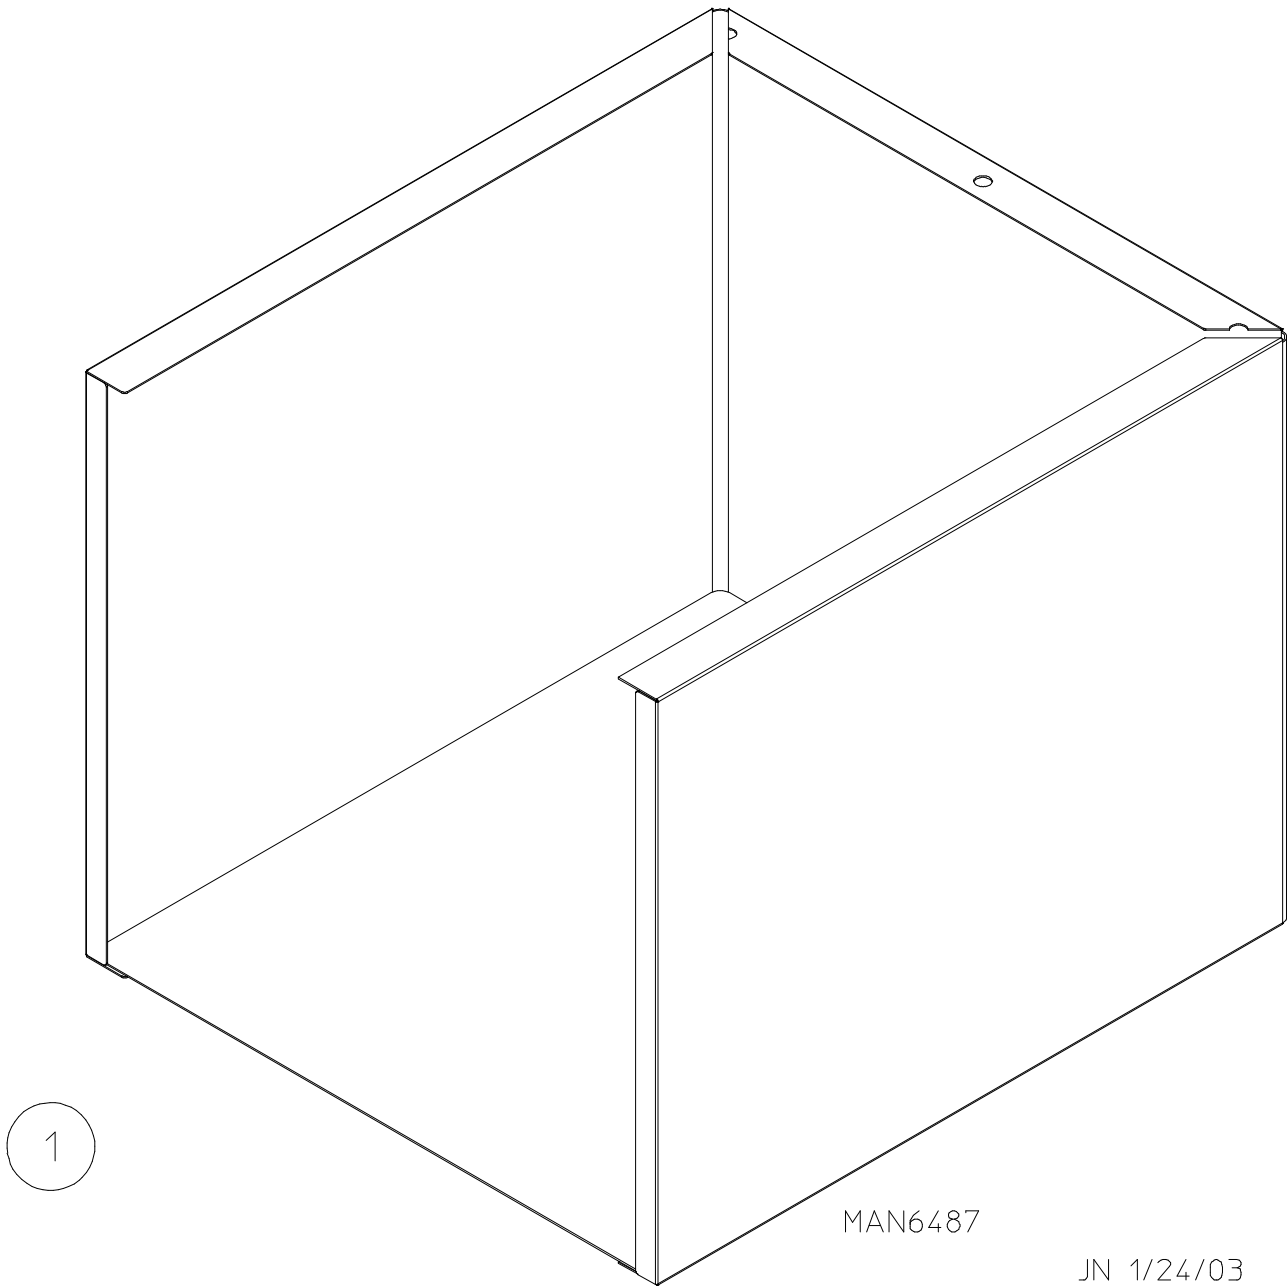

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	818313	1	Dryer Pedestal

Additional Parts Available

<u>Part No.</u>	<u>Description</u>
112014	"WARNING - High Voltage" Label
112046	Computer Ground
112057	24V Controls
112075	1/2" Diameter Ground Symbol
112093	Motor Rotation (red)
112280	"Clean Lint Screen" Label
112704	Phase 7.3.2 Coin Program Location Summary Label
114001	"CAUTION - Combustible Lint" Label
114004	Rotating Parts
114005	"DANGER - Hot" Label
114006	"WARNING - Fire Hazards" Label
114007	"DANGER - High Voltage" Label
114008	"WARNING - Fumes" Label
114094	Mop Head Rag Crescent
114506	"CAUTION - Fuse" Label
114562	Phase 7.5 Non-Coin Program Location Summary Label
120903	Crimp-On Wire Nut
121499	5-1/2" Harness Tie
122804	Manometer (hydro gauge) for Measuring Gas Pressure
404519	Black Touch-Up Paint

