



CG145-55
Parts Manual
24 VAC Phase 5
2000

Continental Girbau, Inc.®
2500 State Road 44
Oshkosh WI 54904
Telephone: (920) 231-8222 / Fax: (920) 231-4666
www.cont-girbau.com

Retain This Manual In A Safe Place For Future Reference

This product embodies advanced concepts in engineering, design, and safety. If this product is properly maintained, it will provide many years of safe, efficient, and trouble-free operation.

ONLY qualified technicians should service this equipment.

OBSERVE ALL SAFETY PRECAUTIONS displayed on the equipment or specified in the installation manual included with the dryer.

The following “**FOR YOUR SAFETY**” caution **must be** posted near the dryer in a prominent location.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

POUR VOTRE SÉCURITÉ

Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables dans le voisinage de cet appareil ou de tout autre appareil.

We have tried to make this manual as complete as possible and hope you will find it useful. The manufacturer reserves the right to make changes from time to time, without notice or obligation, in prices, specifications, colors, and material, and to change or discontinue models.

Important

For your convenience, log the following information:

DATE OF PURCHASE _____ **MODEL NO.** **CG145-55**

DISTRIBUTOR'S NAME _____

Serial Number(s) _____

Replacement parts can be obtained from your distributor or **Continental Girbau, Inc.**® When ordering replacement parts from the factory, you can FAX your order to **Continental Girbau, Inc.**® at (920) 231-4666 or telephone your order directly to the **Continental Girbau, Inc.**® Parts Department at (920) 231-8222. Please specify the dryer **model number** and **serial number** in addition to the **description** and **part number**, so that your order is processed accurately and promptly.


The illustrations on the following pages may not depict your particular dryer exactly. The illustrations are a composite of the various dryer models. Be sure to check the descriptions of the parts thoroughly before ordering.

“IMPORTANT NOTE TO PURCHASER”

Information **must be** obtained from your local gas supplier on the instructions to be followed if the user smells gas. These instructions **must be** posted in a prominent location near the dryer.


Table of Contents

Control Door Assembly	3
Microprocessor Control Panel Assembly	4
Dual Timer “Tap Touch” Controls	5
Control Box Assembly	6
Cold Rolled Steel (CRS) Door Front Panel	7
Main Door “Steel” Assembly	8
Main Door Switch Assembly	9
Lint Drawer/Lint Drawer Switch Box Assemblies	10
Drop Lint Door Assembly	11
Microprocessor Temperature Sensor Bracket Assembly	12
Timer Temperature Sensor Bracket Assembly	13
Basket (Tumbler)/Support Assemblies	14, 15
Basket (Tumbler) Bearing Mount Assembly	16, 17
Idler Bearing Mount Assembly	18, 19
T.E.F.C. Basket (Tumbler) Motor Mount Assembly	20, 21
Blower Motor Mount Assembly	22, 23
Fan Shaft Mount Assembly	24
Direct Spark Ignition (DSI) Burner Assembly	25, 26
Steam Damper Assembly	27
Pneumatic Valve Assembly For Gas Models ONLY	28
Pneumatic Valve Assembly For Steam Models ONLY	29
Reversing Relay Panel Assembly 208-240V 3Ø 3.4 Wire	30
Air Jet Assembly	31
Back Guard Assemblies	32
Step Down Transformer Usage Listing	33
Additional Parts Available	34

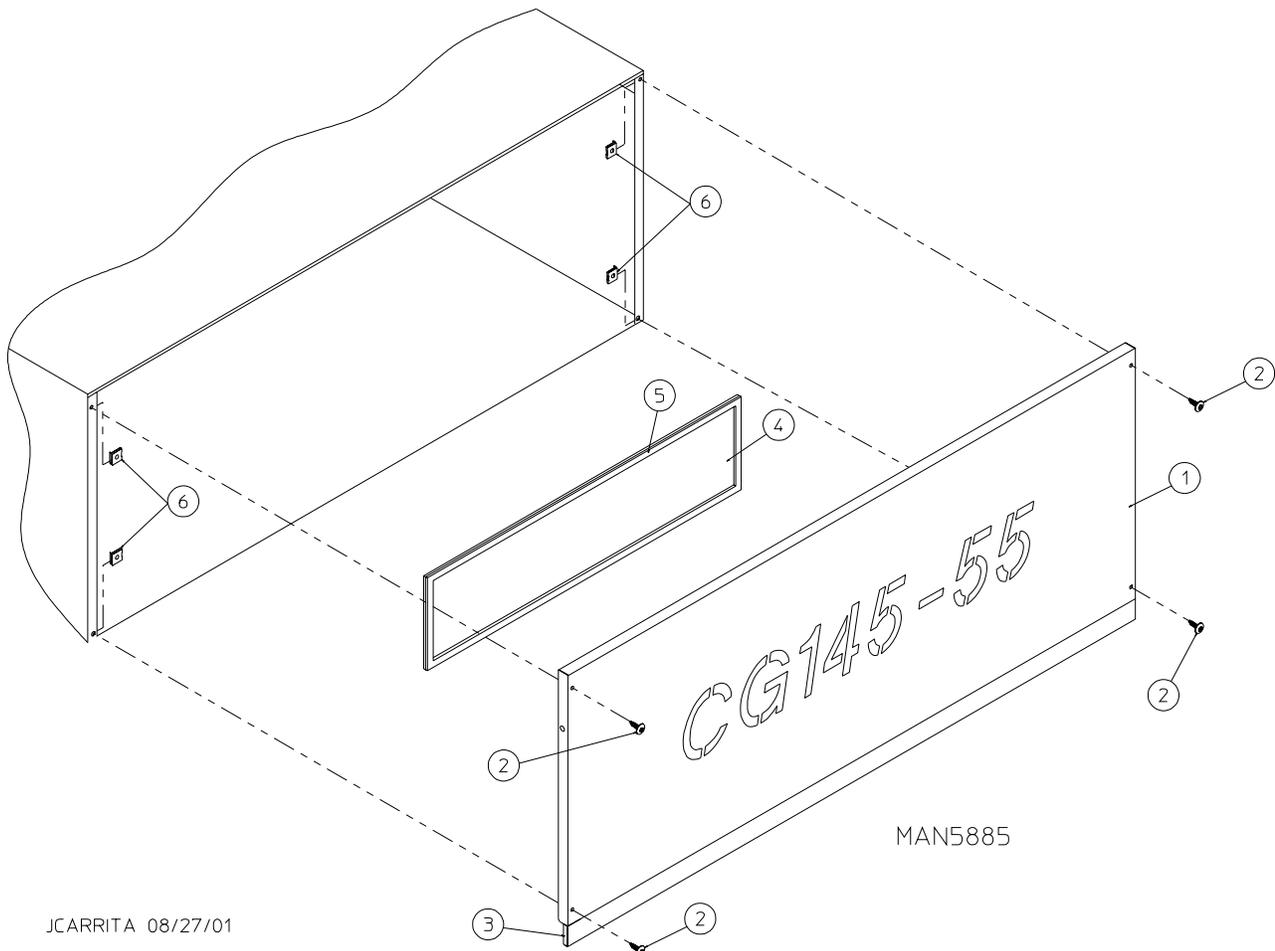

JCARRITA 08/27/01


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883124	1	Control Door Assembly (white) (includes illus. nos. 1, 4, and 5)
2	150314	4	#10-32 x 1/2" TORX Plus Screw
3	117604	6	Noise Suppressor Tape
4	883122	1	Control Door Text Back Plate
5	117516	94	Logo Tape
6	154011	4	Multi-Thread U-Nut

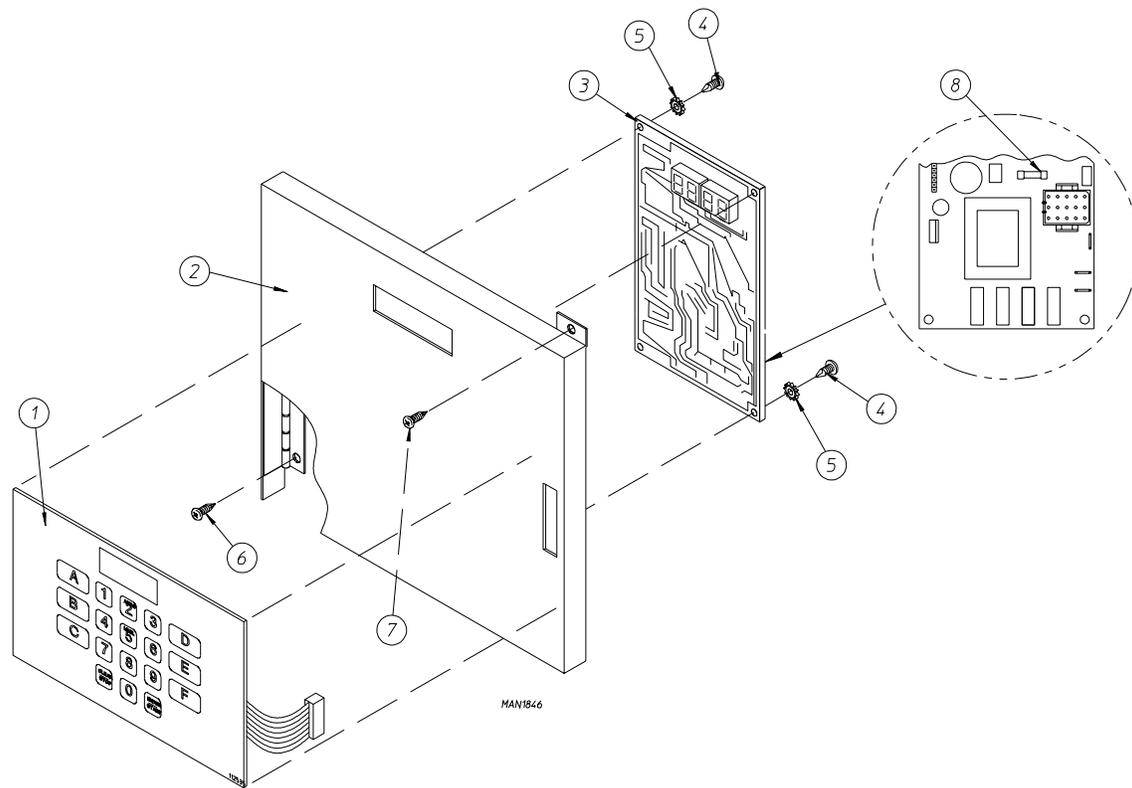

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	112535	1	OPL English Keyboard Label Assembly
	112276	1	OPL Stick-On Labels (English Only)...Not Illustrated
	112275	1	3-Language OPL Stick-On Labels (Spanish, Italian, and Hebrew)...Not Illustrated
	112277	1	3-Language OPL Stick-On Labels (English, Spanish, and Hebrew)...Not Illustrated
	112278	1	5-Language OPL Stick-On Labels (Italian, Dutch, French, German, and Chinese)...Not Illustrated
2*	821024	1	Computer Door Complete (includes illus. nos. 1 through 8)
	821101	1	Computer Door ONLY
	881055	1	Computer Door Complete with Battery Option (includes illus. nos. 1 through 8)
	821102	1	Computer Door with Battery Bracket ONLY
3	137225	1	Phase 5 OPL Reversing Microprocessor Controller with Air Jet
4	150005	2	#6-32 x 1/4" Phillips Round Head Screw
5	153010	2	#6 Star Washer
6	150000	3	#6-32 x 1/4" Slotted Round Head Machine Screw
7	150313	1	#10-16 x 1/2" Screw
8	136048	1	1/8-Amp (slo blo) Fuse ONLY


* Specify color when ordering.

IMPORTANT: Check label on computer chip to verify correct part number.

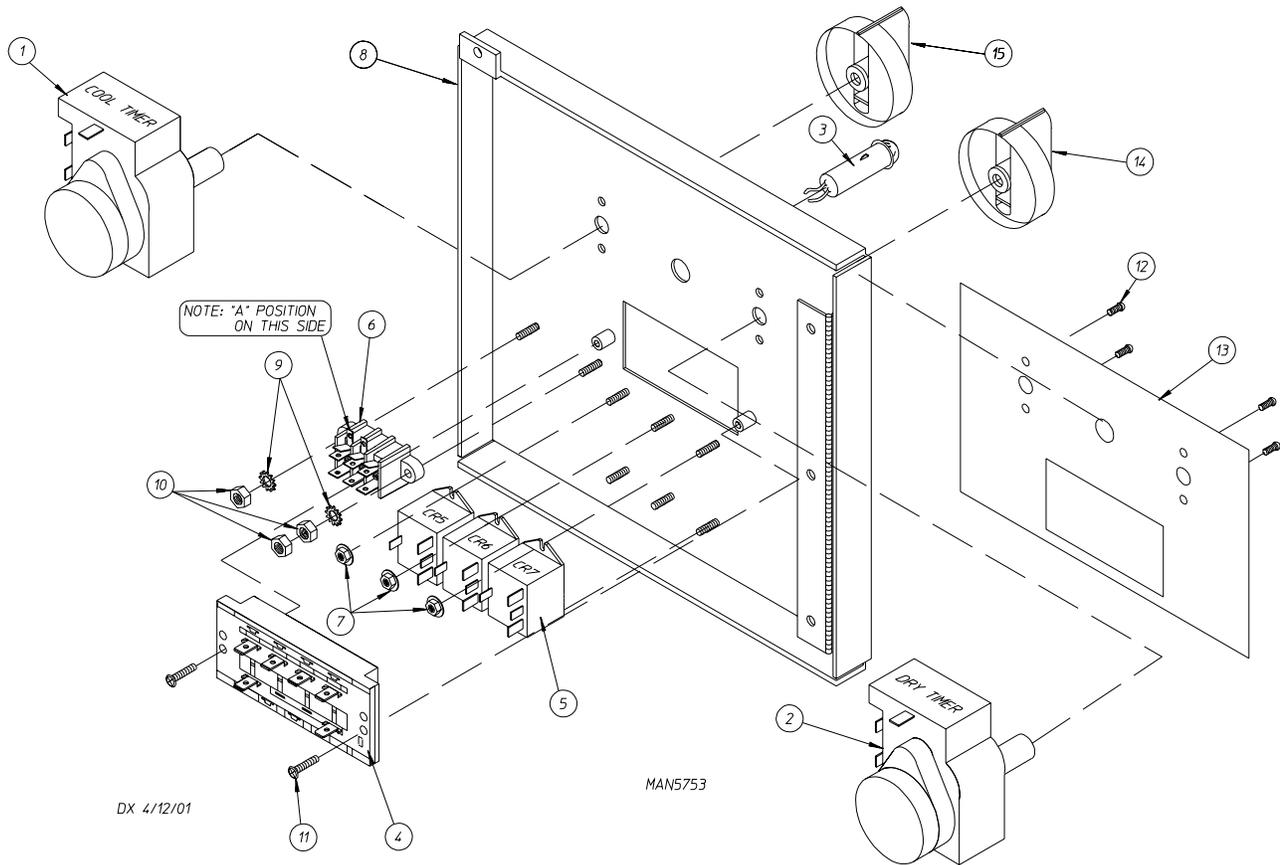


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	824298	1	15 Minute Timer - 24 VAC
2	824299	1	60 Minute Timer - 24 VAC
3	824175	1	Red Pilot Light - 24 VAC
4	122301	1	"Tap Touch" Switch
5	131932	3	24 VAC Relay
6	120708	1	3, Terminal Closed Block
7	151000	6	#6-32 Pal Nut
8	824297	1	Dual Timer Panel Complete (includes illus. nos. 1 through 15)
	824099	-	Dual Timer Panel ONLY
9	153010	2	#6 Star Washer
10	152000	3	#6-32 Hex Nut
11	150207	2	#10-24 x 1/2" Phillips Pan Head Machine Screw
12	150110	4	#8-32 x 1/4" Phillips Round Head Machine Screw
13	112563	1	Dual Timer Panel Overlay
14	124104	1	Pure Touch Knob with Red Pointer
15	124105	1	Pure Touch Knob with Blue Pointer

For Microprocessor and Timer Models

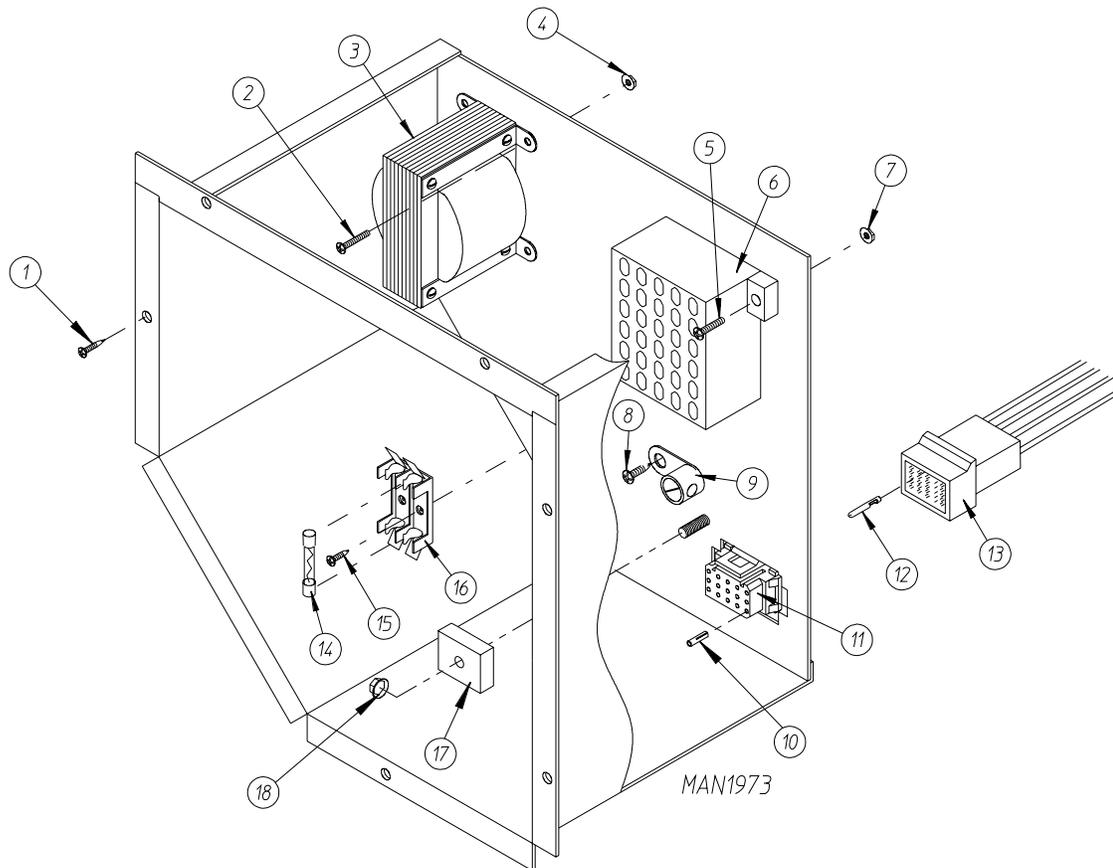


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	150301	6	#8-18 x 7/16" Phillips Pan Head TEK Screw
2	150108	2	#8-32 x 1/2" Phillips Round Head Machine Screw
3	132070	1	Transformer - 24 VAC (for microprocessor models Only)
4	151001	2	#8-32 Pal Nut
5	150002	2	#6-32 x 1" Phillips Round Head Machine Screw
6	120715	1	30-Position Terminal Block
7	151000	2	#6-32 Pal Nut
8	150309	1	#10-16 x 1/2" Hex Head TEK Crimptite Screw
9	121010	1	L-70 Ground Lug
10	122705	*	Socket Terminal ONLY
	122801	1	Pin/Socket Extraction Tool
11	122626	1	15-Pin Connector ONLY
12	122704	*	Pin Terminal ONLY
13	122625	1	15-Pin Connector ONLY
	122800	1	Microprocessor (female) Pin Extraction Tool
14	136057	2	1/2-Amp (slo blo) Fuse ONLY
15	150301	2	#8-18 x 7/16" Phillips Pan Head TEK Screw
16	136008	2	Fuse Block/Strip ONLY
17	124812	1	30-Second Air Jet Timer (for timer models Only)
18	151000	1	#6-32 Pal Nut


* As required.

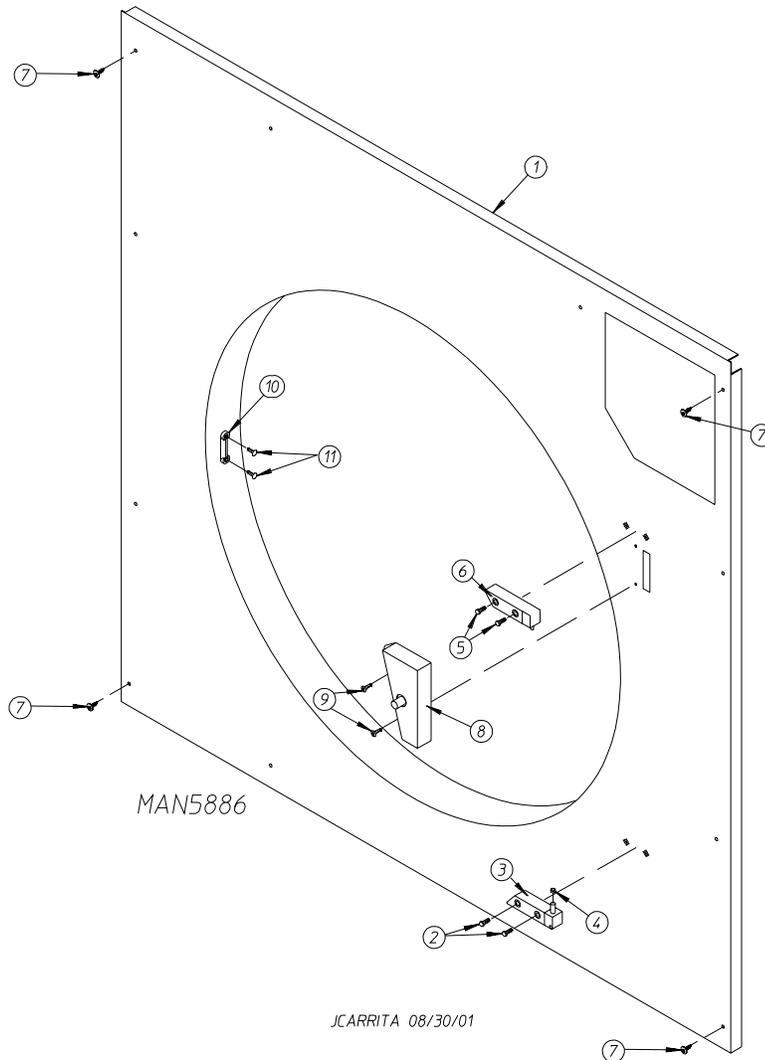


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883130	1	White Front Panel Assembly (includes illus. nos. 1 through 6 and 8 through 11)
2	150445	2	1/4-20 x 3/4" Black Cap Head Screw
3	881441	1	White Bottom Hinge Block Assembly (includes illus. nos. 2, 3, and 4)
4	153031	1	1/4" Nylon Washer
5	150445	2	1/4-20 x 3/4" Black Cap Head Screw
6	881440	1	White Top Hinge Block Assembly (includes illus. nos. 5 and 6)
7	150313	12	#10-16 x 1/2" TORX Plus Screw
	150318	1	#25 TORX Plus Bit (for removing P/N 150313)
8	881702	1	White Main Door Switch Housing Assembly Complete (refer to Main Door "Steel" Assembly on page 9)
9	150301	2	#8-18 x 7/16" Phillips Head Screw
10	881987	1	Friction Door Latch Assembly (includes illus. nos. 10 and 11)
11	154215	2	5/32 x 1/4" Rivet

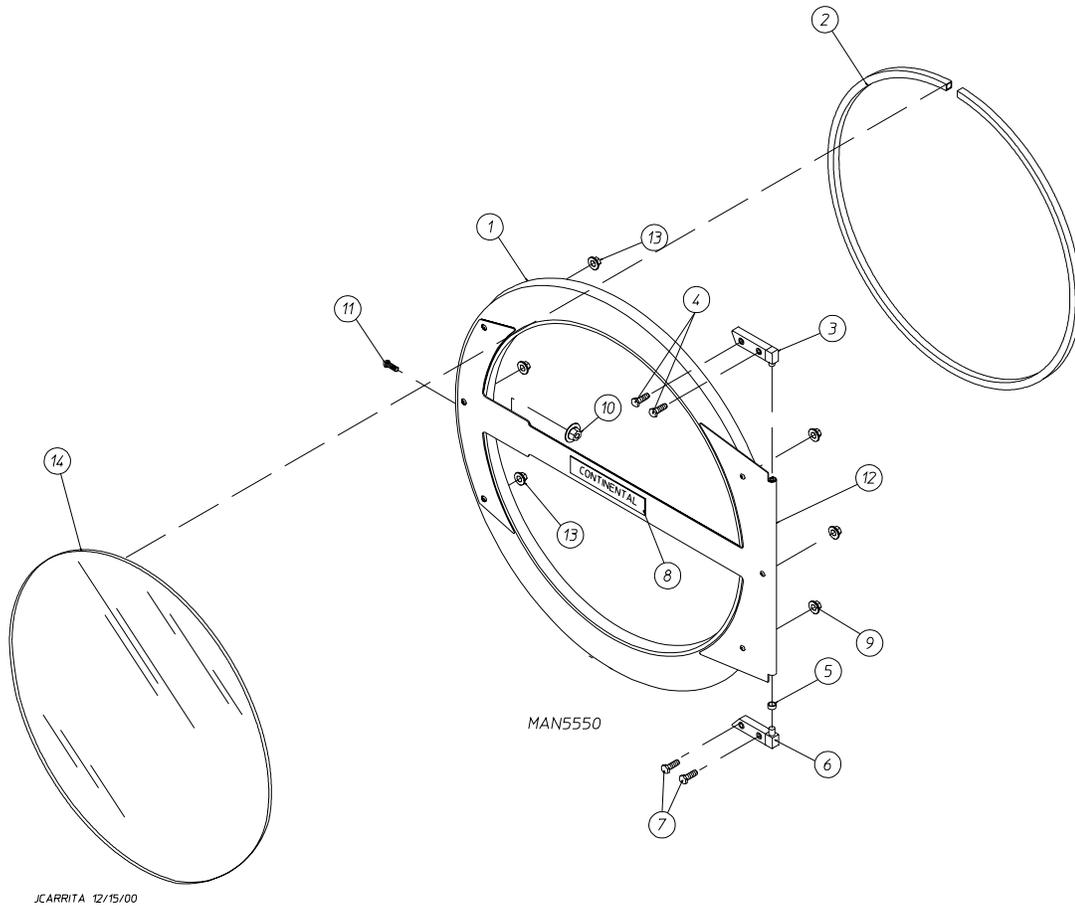

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	882979	1	White Large Main Door Assembly Complete (includes illus. nos. 1, 2, and 8 through 14)
2	882411	1	Door Gasket
	170730	1	Clear Gasket Adhesive (10.3 oz. cartridge)
	170731	1	Black Gasket Adhesive (10.3 oz. cartridge)
3	881440	1	White Top Hinge Block Assembly (includes illus. nos. 3 and 4)
4	150445	2	1/4-20 x 3/4" Black Cap Head Setscrew
5	153031	1	1/4" Nylon Washer
6	881441	1	White Top Hinge Block Assembly (includes illus. nos. 5, 6, and 7)
7	150445	2	1/4-20 x 3/4" Black Cap Head Setscrew
8	112370	1	Continental Girbau, Inc. ® Logo Plate
9	881806	3	1/4-20 Free Spin Wash Nut
10	152008	1	#10-32 Hex Nut
11	150125	1	Door Latch Screw
12	882978	1	White Large Cold Rolled Steel (CRS) Door Handle
13	881806	3	1/4-20 Free Spin Wash Nut
14	102214	1	30" Door Glass
	170730	1	Clear Glass Adhesive (10.3 oz. cartridge)
	170731	1	Black Glass Adhesive (10.3 oz. cartridge)

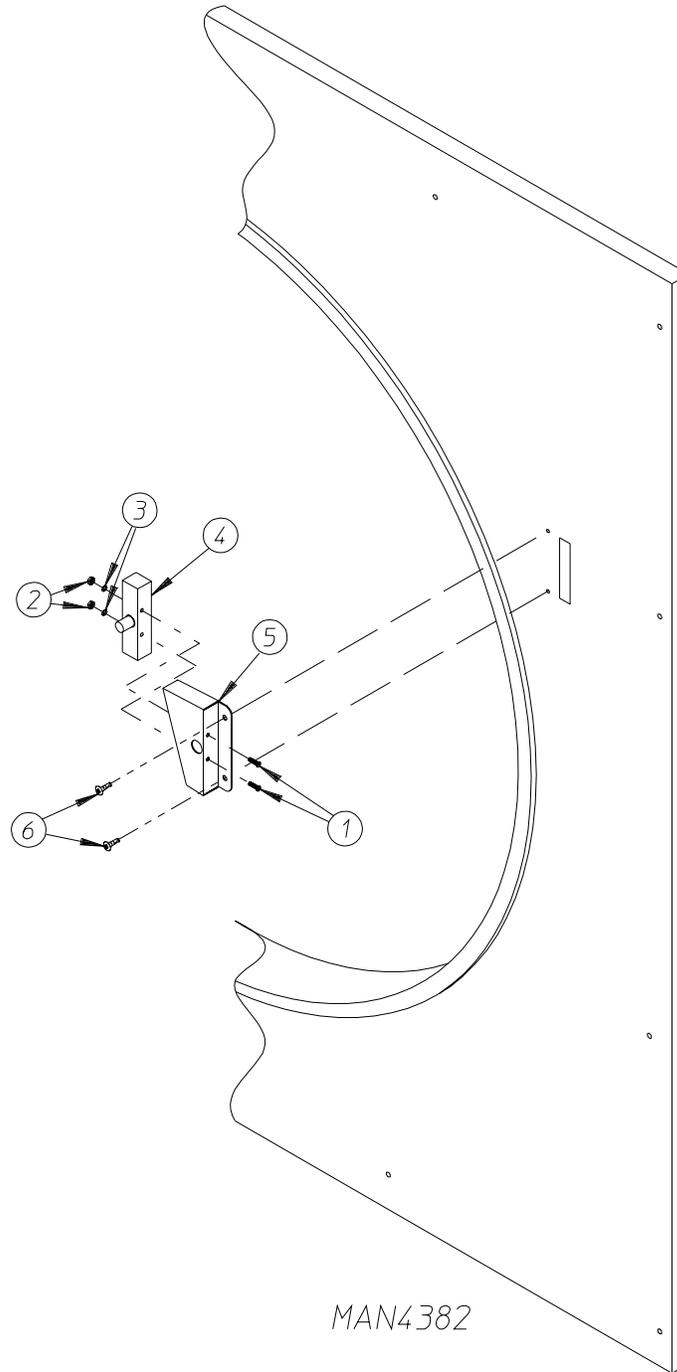


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	150006	2	#6-32 x 7/8" Phillips Pan Head Machine Screw
2	152013	2	#6-32 Hex Nut
3	153010	2	#6 Star Washer
4	137005	1	Main Door Switch ONLY
5	881702	1	White Main Door Switch Housing Assembly Complete (includes illus. nos. 1 through 5)
6	150301	2	#8-18 x 7/16" Phillips Head Screw

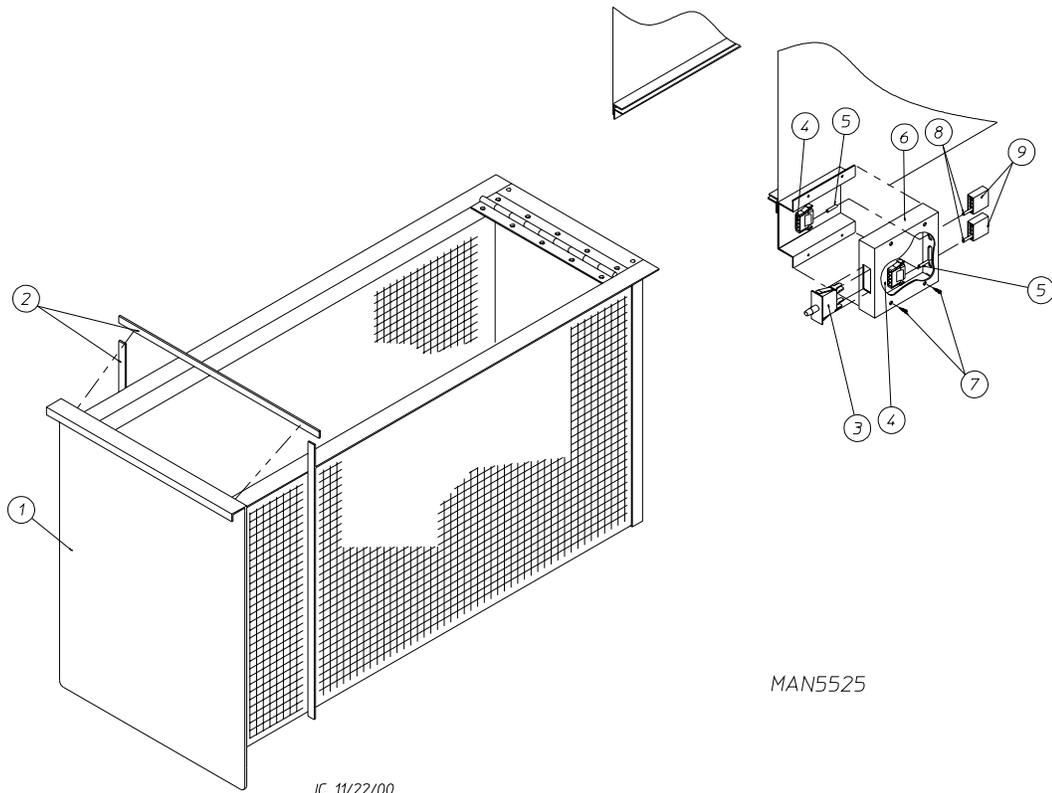


MAN5525


Illus. No.	Part No.	Qty.	Description
1	883129	1	Stainless Steel Lint Drawer Assembly Complete (white) (includes illus. nos. 1 and 2)
2	117607	6	Gasket (sold by the foot)
3	122116	1	Lint Drawer Switch ONLY
4	122605	2	4-Pin Socket (female) Connector ONLY
5	122701	4	Socket Terminal ONLY
	122801	1	Pin/Socket Extraction Tool
6	835338	1	Guarded Lint Drawer Switch Assembly (includes illus. nos. 3 through 6)
	304136	1	Lint Drawer Switch Box ONLY
7	150301	2	#8-18 x 7/16" Phillips Head Screw
8	122700	4	Pin Terminal ONLY
9	122604	2	4-Pin Connector ONLY

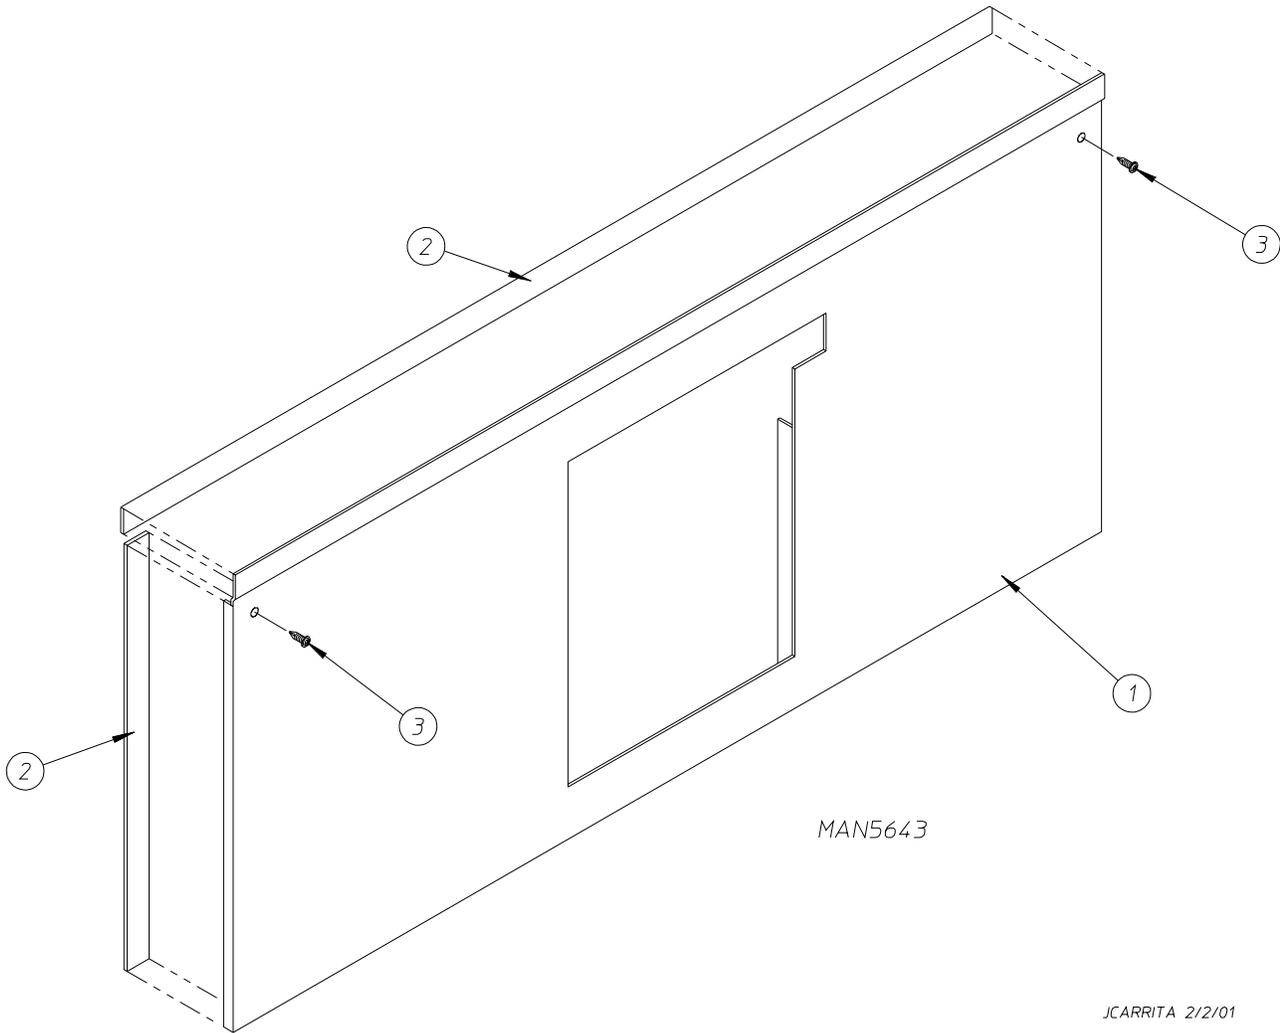


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883133	1	Lint Door Assembly (white) (includes illus. nos. 1, 2, and 4)
2	117604	9	Noise Suppressor Tape
3	150317	5	#10-16 x 3/4" TORX Plus
	150318	1	#25 TORX Plus Bit (for removing P/N 150317)

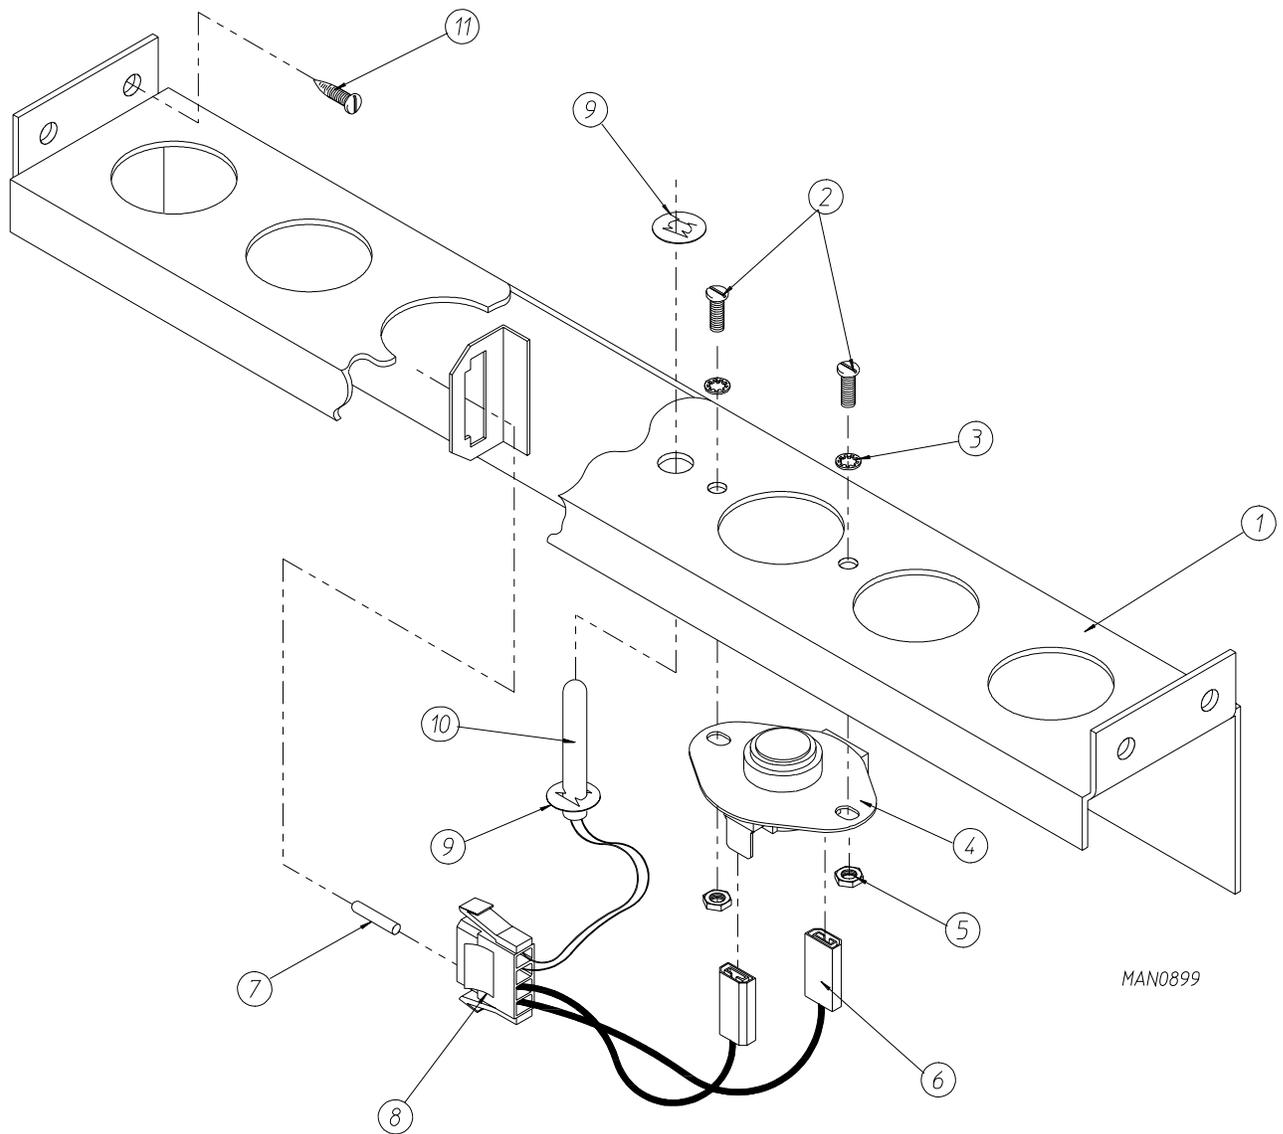

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	820968	1	Microprocessor Temperature Sensor Bracket Complete (includes illus. nos. 1 through 10)
	820967	1	Microprocessor Temperature Sensor Bracket ONLY
2	150005	2	#6-32 x 1/4" Phillips Round Head Machine Screw
3	153010	2	#6 Star Washer
4	130112	1	225° Large Automatic Reset Thermostat ONLY
5	152000	2	#6-32 Hex Nut
6	121028	2	1/4" x .032 Insulated Terminal
7	122701	4	Socket Terminal ONLY
	122801	1	Pin/Socket Extraction Tool
8	122605	1	4-Pin Socket Connector
9	154007	2	1/4" Push On Fastener
10	815961	1	1/4" Temperature Sensor Probe Assembly (includes illus. nos. 6 through 10)
11	150301	4	#8-18 x 7/16" Phillips Pan Head TEK Screw

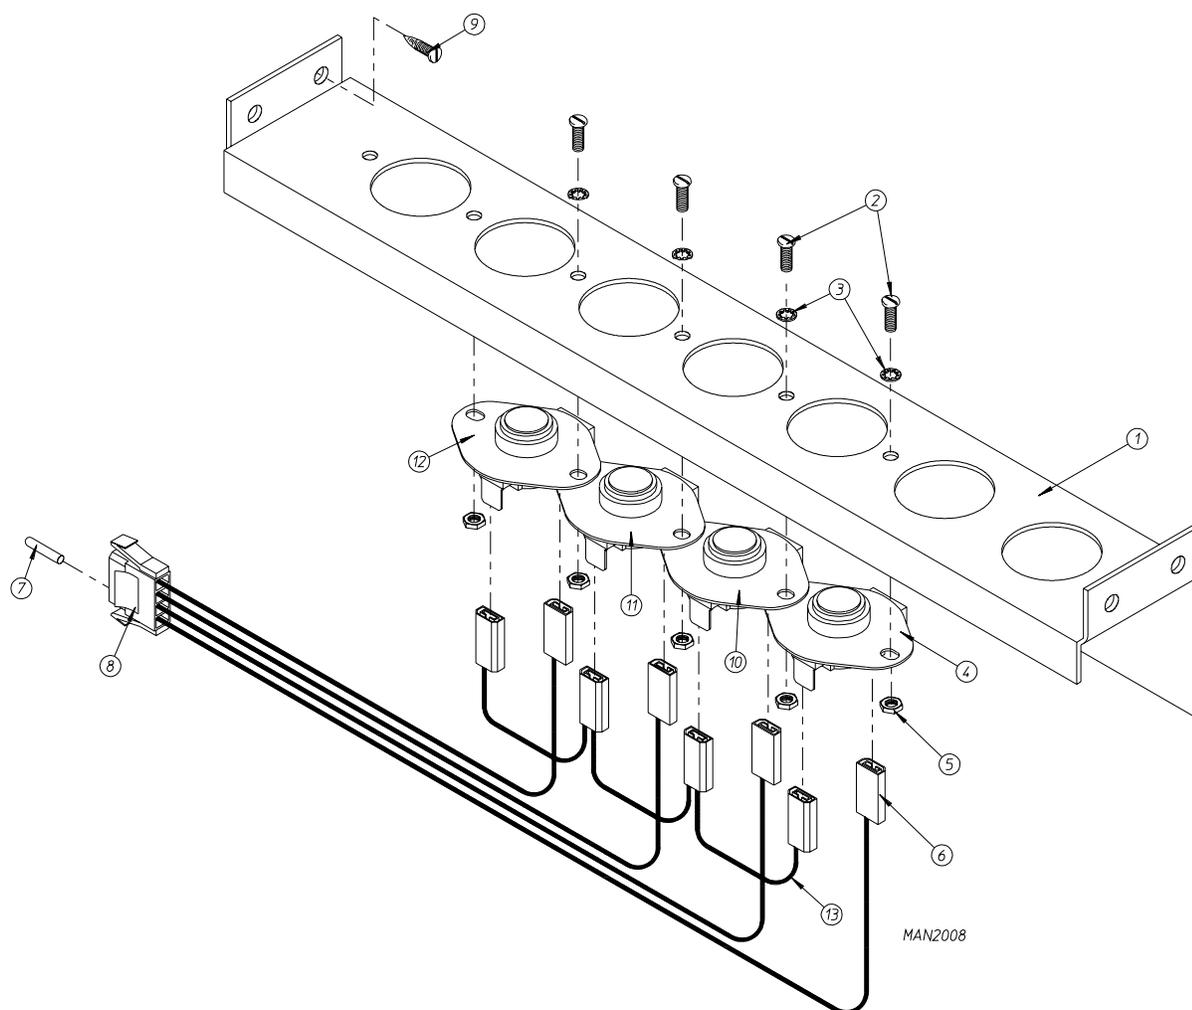

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	821016	1	Timer Temperature Sensor Bracket Complete (includes illus. nos. 1 through 13)
	820999	1	Timer Temperature Sensor Bracket ONLY
2	150005	5	#6-32 x 1/4" Round Head Machine Screw
3	153010	5	#6 Star Washer
4	130101	1	180° Large Thermostat ONLY
5	152000	5	#6-32 Hex Nut
6	121028	4	1/4" x .032 Insulated Terminal
7	122701	4	Socket Terminal ONLY
	122801	1	Pin/Socket Extraction Tool
8	122605	1	4-Pin Socket Connector
9	150301	4	#8-18 x 7/16" Phillips Pan Head TEK Screw
10	130109	1	140° Large Thermostat ONLY
11	130107	1	160° Large Thermostat ONLY
12	130103	1	225° Large Automatic Reset Thermostat ONLY
13	831701	1	Sensor Jumper (4) ONLY

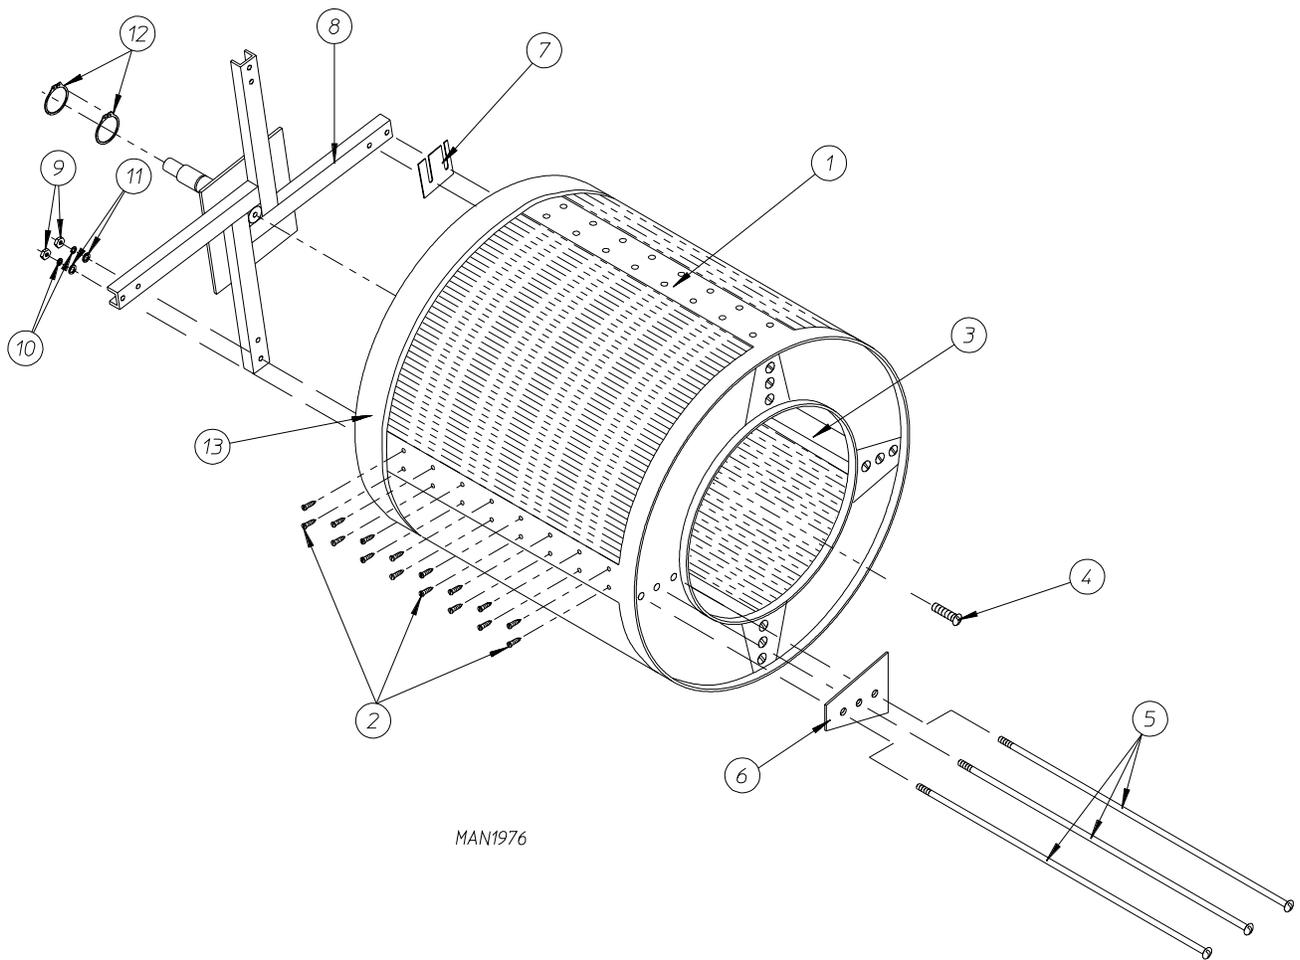


MAN1976

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	822418*	1	Basket (tumbler) ONLY without Felt Collar
	822419	1	Basket (tumbler) and Support Assembly Complete (includes illus. nos. 1 through 13)
2	150309	64	#10-16 x 1/2" Hex Head TEK Crimptite Screw
3	335028	4	Basket (tumbler) Rib ONLY
4	150500	1	5/16-18 x 3/4" Socket Button Head Screw
5	100911	12	1/2-13 x 37" Tie Rod
6	332139	4	Basket (tumbler) Reinforcing Plate ONLY
7	332177	**	Basket (tumbler) Shim ONLY
8	820909	1	Basket (tumbler) Support ONLY
9	152011	12	1/2-13 Hex Nut
10	153026	12	1/2" Lock Washer
11	153011	12	9/16" Flat Washer
12	100810	2	3-1/8" Retaining Ring
13	116007	1	Felt Collar ONLY


* Felt collar *is not included* and **must be** ordered separately.

** As required.

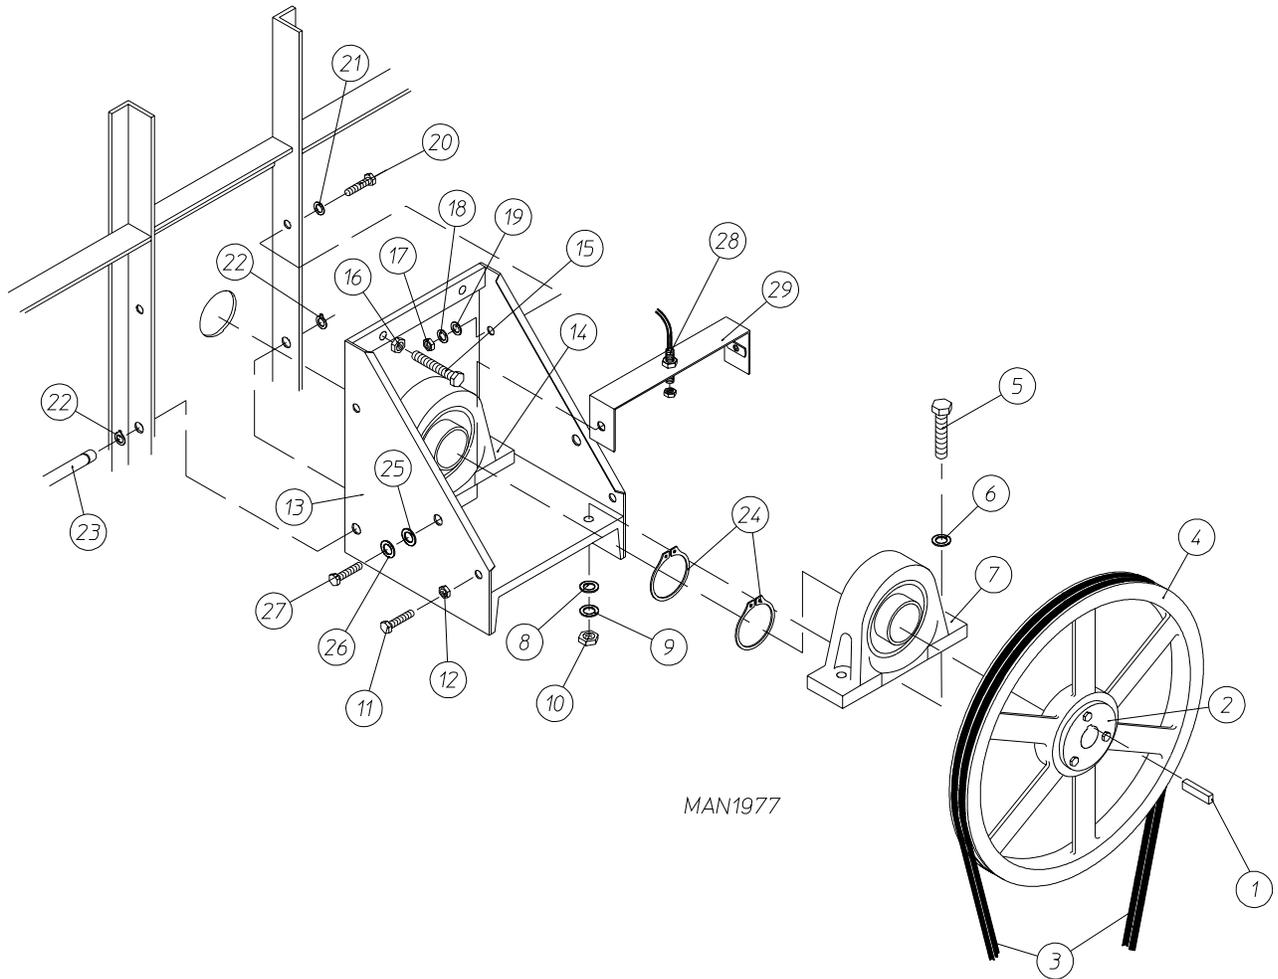

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	100703	1	1/2" x 1/2" x 2" Key
2	101217	1	2-1/2" SFX Bushing with Key
3*	100137	2	AB-91 V-Belt (basket [tumbler] to idler)
4	101182	1	25" Basket (tumbler) Pulley ONLY
5	150602	4	5/8-11 x 3" Hex Head Machine Bolt
6	153016	4	5/8" Flat Washer
7	100242	1	2-1/2" Pillow Block Bearing ONLY
8	153016	4	5/8" Flat Washer
9	153015	4	5/8" Lock Washer
10	152010	4	5/8-11 Hex Nut
11	150600	2	3/8-16 x 1-1/2" Hex Head Machine Bolt
12	152005	2	3/8-16 Hex Nut
13	821175	1	Basket (tumbler) Bearing Mount ONLY
14	880883	1	3-1/8" Pillow Block Bearing ONLY
15	150603	2	1/2-13 x 3" Square Head Machine Bolt
16	152011	2	1/2-13 Hex Nut
17	152005	2	3/8-16 Hex Nut
18	153005	2	3/8" Lock Washer
19	153004	4	3/8" Flat Washer
20	150600	2	3/8-16 x 1-1/2" Hex Head Machine Bolt
21	153004	2	3/8" Flat Washer
22	100801	2	5/8" Retaining Ring
23	332153	1	5/8" Hinge Pin
24	100810	2	3-1/8" Retaining Ring
25	153018	2	1/4" Flat Washer
26	153007	2	1/4" Lock Washer
27	150512	2	1/4-20 x 1/2" Hex Head Machine Bolt
28	824807	1	Rotational Sensor Assembly
29	880841	1	Rotational Sensor Mounting Bracket

* Replace in matched sets (both belts).

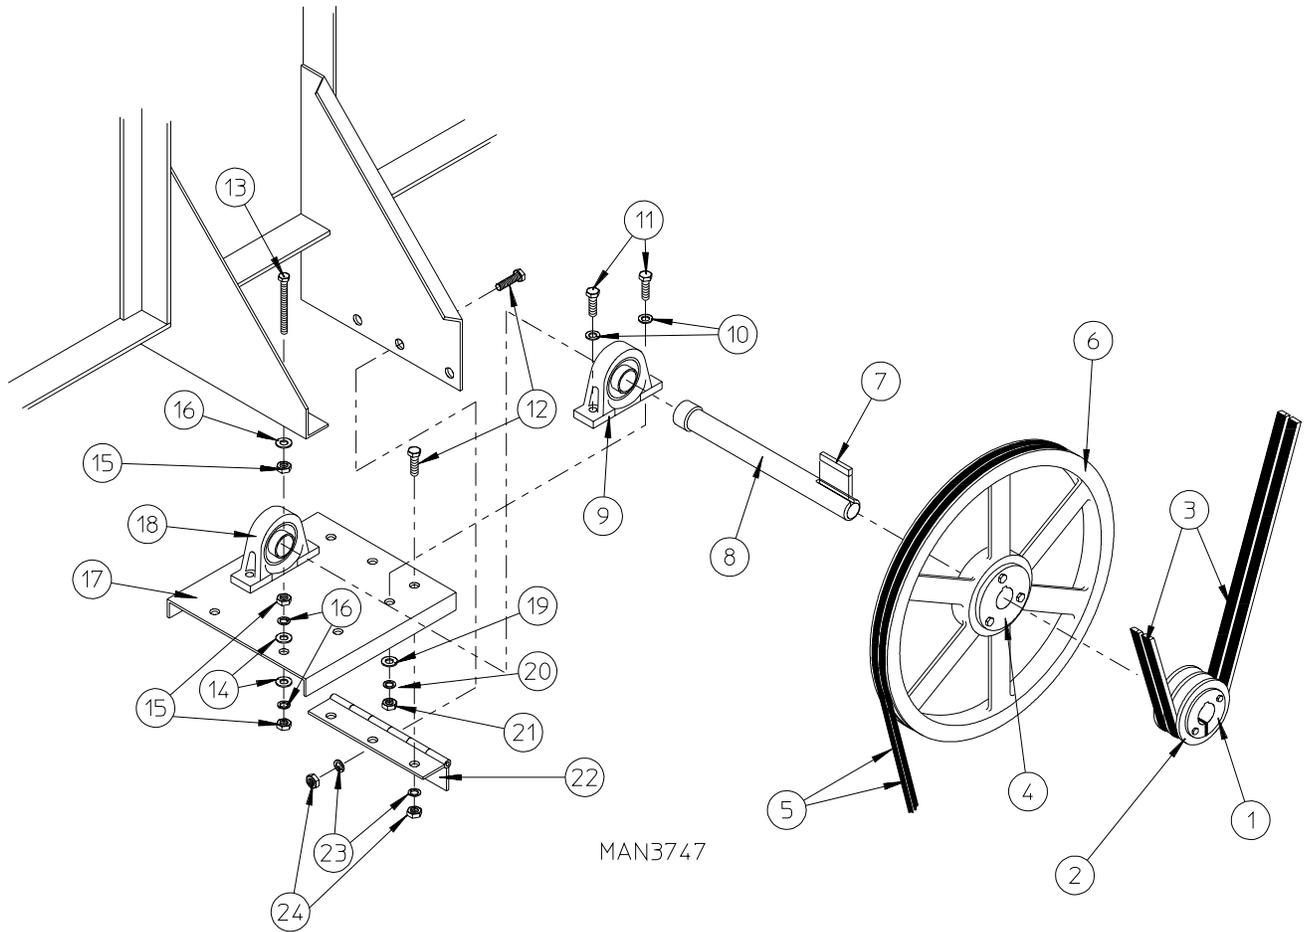

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	101152	1	1-3/8" SH Bushing
2	101143	1	2A3.8 Pulley
3*	100137	2	A91 V-Belt
4	101184	1	1-3/8" SK Bushing
5*	100102	2	3V 740 V-Belt
6	101112	1	19" Idler Pulley
7	100730	1	5/16" x 5/16" x 4 Key
8	332152	1	1-3/8" Idler Shaft ONLY
9	880202	1	1-3/8" Pillow Block Bearing with Setscrew
10	153011	4	9/16" Flat Washer
11	150606	4	1/2-13 x 2" Hex Head Machine Bolt
12	150501	6	5/16-18 x 3/4" Hex Head Machine Bolt
13	150509	2	5/16-18 x 3" Hex Head Machine Bolt
14	153001	6	5/16" Flat Washer
15	152004	6	5/16-18 Hex Nut
16	153002	4	5/16" Lock Washer
17	820932	1	Idler Bearing Mount Assembly Complete (includes illus. nos. 7 through 11 and 17 through 24)
	332151	1	Idler Bearing Mount ONLY
18	880202	1	1-3/8" Pillow Block Bearing with Setscrew
19	153011	4	9/16" Flat Washer
20	153026	4	1/2" Lock Washer
21	152011	4	1/2"-13 Hex Nut
22	103005	1	Idler Adjustment Hinge ONLY
23	153002	6	5/16" Split Lock Washer
24	152004	6	5/16"-18 Hex Nut


* Replace in matched sets (both belts).

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	101121	1	5/8" SK Bushing
2	101114	1	2.65" Pulley
3*	100102	2	3V 740 V-Belt
4	120201	1	1/2" x 90° Connector
5	150501	4	5/16-18 x 3/4" Hex Head Machine Bolt
6	153001	4	5/16" Flat Washer
7	100050	1	1 HP 208/230/280/460v 3ø 50/60 Hz
8	800952	1	Basket (tumbler) Motor Mount ONLY (56Z frame)
	820962**	1	Basket (tumbler) Motor Mount Assembly Complete (includes illus. nos. 1, 2, 5 through 11, 15, and 16)
9	152004	4	5/16-18 Hex Nut
10	153002	4	5/16" Lock Washer
11	153001	4	5/16" Flat Washer
12	152004	4	5/16-18 Hex Nut
13	153002	4	5/16" Lock Washer
14	153001	4	5/16" Flat Washer
15	150619	1	3/8-16 x 3" Hex Head Machine Bolt
16	152005	2	3/8-16 Hex Nut

* Replace in matched sets (both belts).

** Specify voltage when ordering.


IMPORTANT: For voltages higher than 460 VAC, contact the factory for correct part number of motor or motor mount assembly.

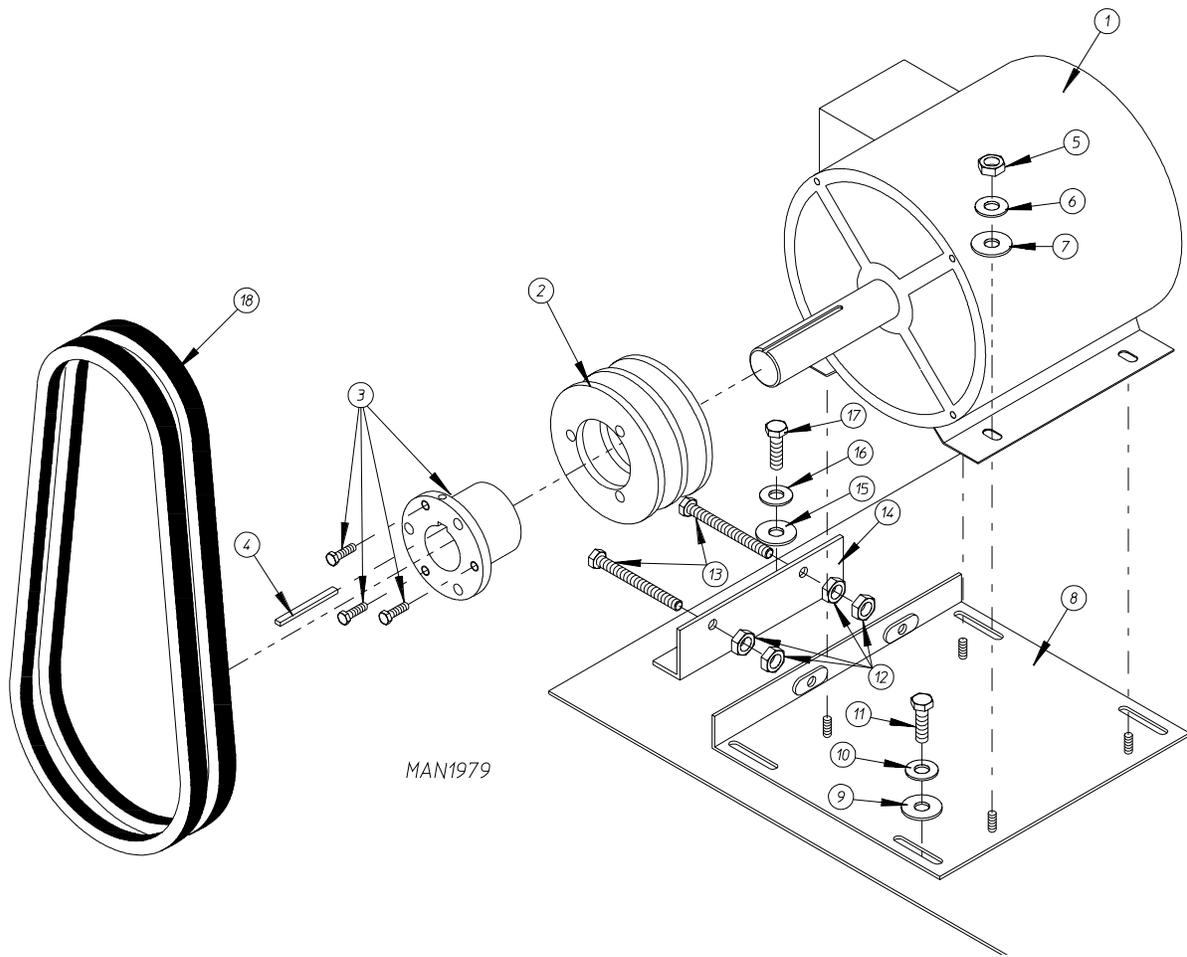


MAN1979

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	100045	1	5 HP 208-230/460v / 3ø Motor
2	101148	1	SB x 4.0 Motor Pulley
3	101144	1	SH x 1-1/8" Bushing
4	100706	1	5/16" x 5/16" x 1-3/8" Key
5	152004	4	5/16-18 Hex Nut
6	153002	4	5/16" Lock Washer
7	153001	4	5/16" Flat Washer
8	835114	1	Motor Mount Adjustment Plate ONLY
9	153001	4	5/16" Flat Washer
10	153002	4	5/16" Lock Washer
11	150501	4	5/16-18 x 3/4" Hex Head Machine Bolt
12	152004	4	5/16-18 Hex Nut
13	150503	2	5/16-18 x 2" Hex Head Machine Bolt
14	332322	1	Motor Mount Adjustment Angle ONLY
15	153001	2	5/16" Flat Washer
16	153002	2	5/16" Lock Washer
17	150501	2	5/16-18 x 3/4" Hex Head Machine Bolt
18*	100164	2	BX-51 Cogged Belt (motor to fan shaft)


* Replace in matched sets (both belts).

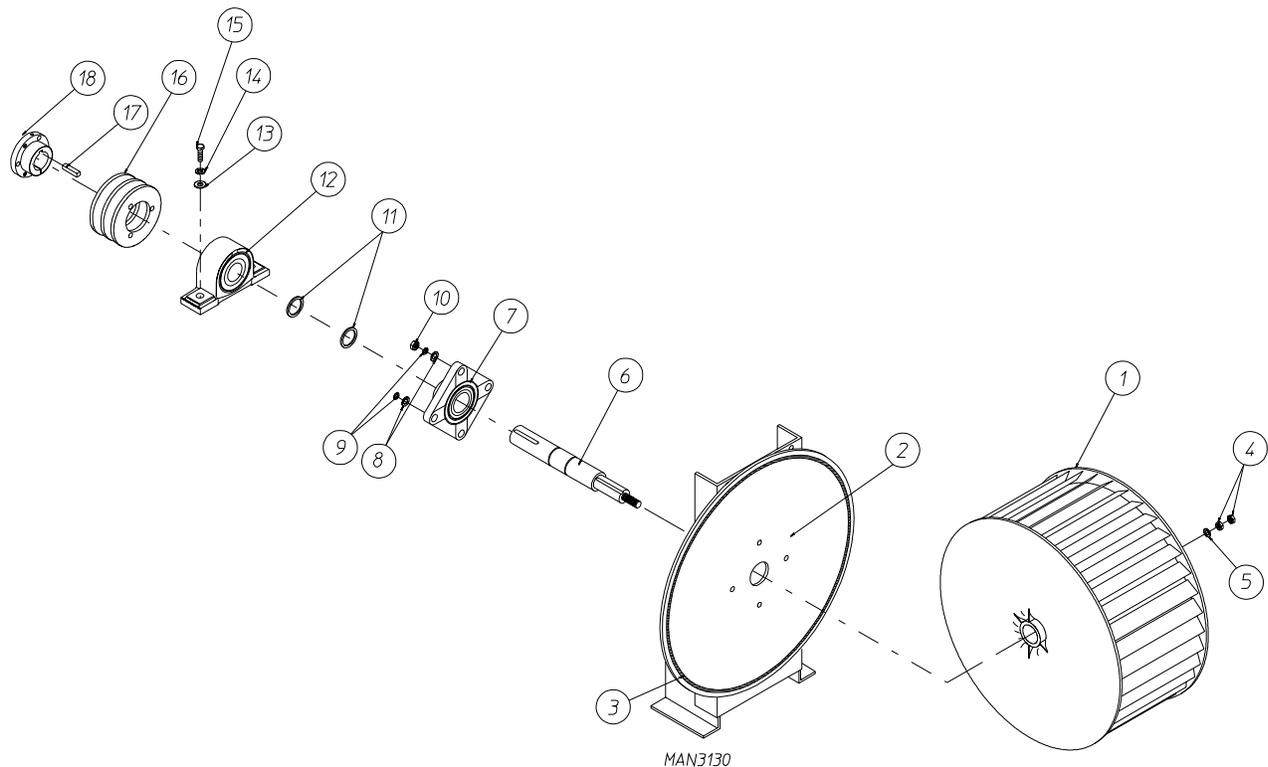


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	100612	1	1-1/4" Bore x 15" Diameter Blower (Impellor/Fan) Wheel (Squirrel Cage)
2	821073	1	Fan Shaft Mount ONLY
	835131	1	60 Hz Fan (Impellor/Blower) Shaft Mount Assembly Complete (includes illus. nos. 1 through 18)
3	117604	4	Noise Suppressor Tape (sold by the foot)
4	152006	2	1/2-20 Left Hand Jam Nut
5	153050	1	1/2" Flat Washer
6	332280	1	Fan Shaft
7	881061	2	1-3/8" Flange Bearing with Set Screws and Grease Fitting
8	153004	4	3/8" Flat Washer
9	153005	4	3/8" Lock Washer
10	152005	4	3/18-16 Hex Nut
11	100812	2	1-3/8" Retaining Ring
12	880879	2	1-3/8" Pillow Block Bearing with Set Screws and Grease Fitting
13	153004	2	3/8" Flat Washer
14	153005	2	3/8" Lock Washer
15	150617	2	3/8-16 x 1" Hex Head Bolt
16	101185	1	2B x 6.2 Pulley (for 60 Hz Only)
17	100706	1	5/16" x 5/16" x 1-3/8" Key
18	101194	1	SDS x 1-3/8" Bushing

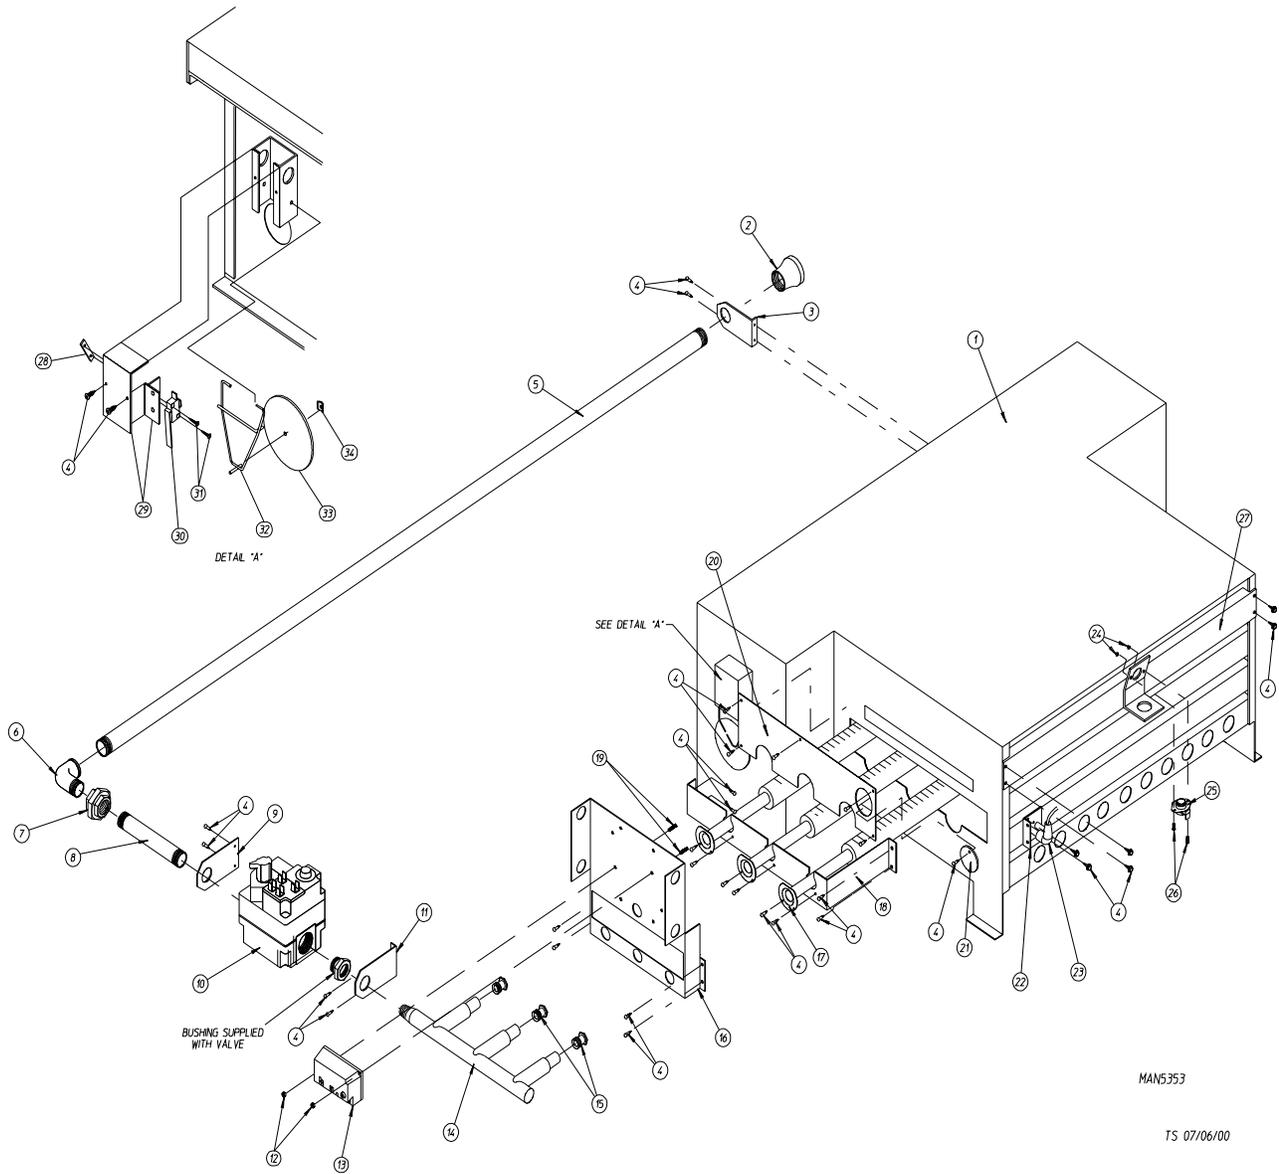

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	835119	1	Burner Box ONLY
2	142753	1	1-1/4" to 3/4" Reducing Coupling
3	331291	1	Pipe Bracket
4	150309	34	#10-16 x 1/2" Hex Head TEK Crimptite Screw
5	142821	1	3/4" x 36" Nipple
6	142854	1	3/4" Street Elbow
7	142601	1	3/4" Union
8	142710	1	3/4" x 4" Nipple
9	331089	1	Extended Pipe Bracket Flat
10	140026	1	Direct Spark Ignition (DSI) 3/4" 24 VAC Redundant (natural gas) Gas Valve
	883016	1	CG145-55 Liquid Propane (L.P.) Conversion Kit
11	331088	1	Extended Pipe Bracket (bent)
12	152013	2	#6-32 Hex Nut
13	128935	1	Direct Spark Ignition (DSI) Module with 3 Tries
14	141208	1	3-Port Manifold
15	140839	3	Burner Orifice #2 (natural gas Only)
	140818	3	Burner Orifice #31 (liquid propane [L.P.] gas Only)
16	335031	1	Direct Spark Ignition (DSI) Mount Manifold Rest
17	881492	3	Burner Tube ONLY
18	331287	1	Burner Tube Support ONLY
19	153562	2	#6-32 x 3/4" Clinch Stud
20	331289	1	Burner Box Cover Plate
21	331290	1	Ignitor/Flame-Probe Sight Hole Disc ONLY
22	882451	1	Ignitor/Flame-Probe Assembly (includes illus. nos. 22 and 23)
23	880330	1	Ignitor Cable 36"
24	151000	2	#6-32 Pal Nut
25	130201	1	330° Manual Reset Hi-Limit ONLY
26	150001	2	#6-32 x 1/2" Right Hand Machine Screw
27	821457	1	Hi-Limit Bracket
28	154004	1	Twin Speed Nut
29	802799	1	Sail Switch Box Cover and Bracket ONLY
30	122200	1	Sail Switch ONLY
31	150303	2	#4 x 3/4" Pan Head "A" Machine Screw
32	105500	1	Sail Switch Actuator Rod
33	319202	1	Sail Switch Damper (flat)
34	154002	1	1/8" Push On Fastener

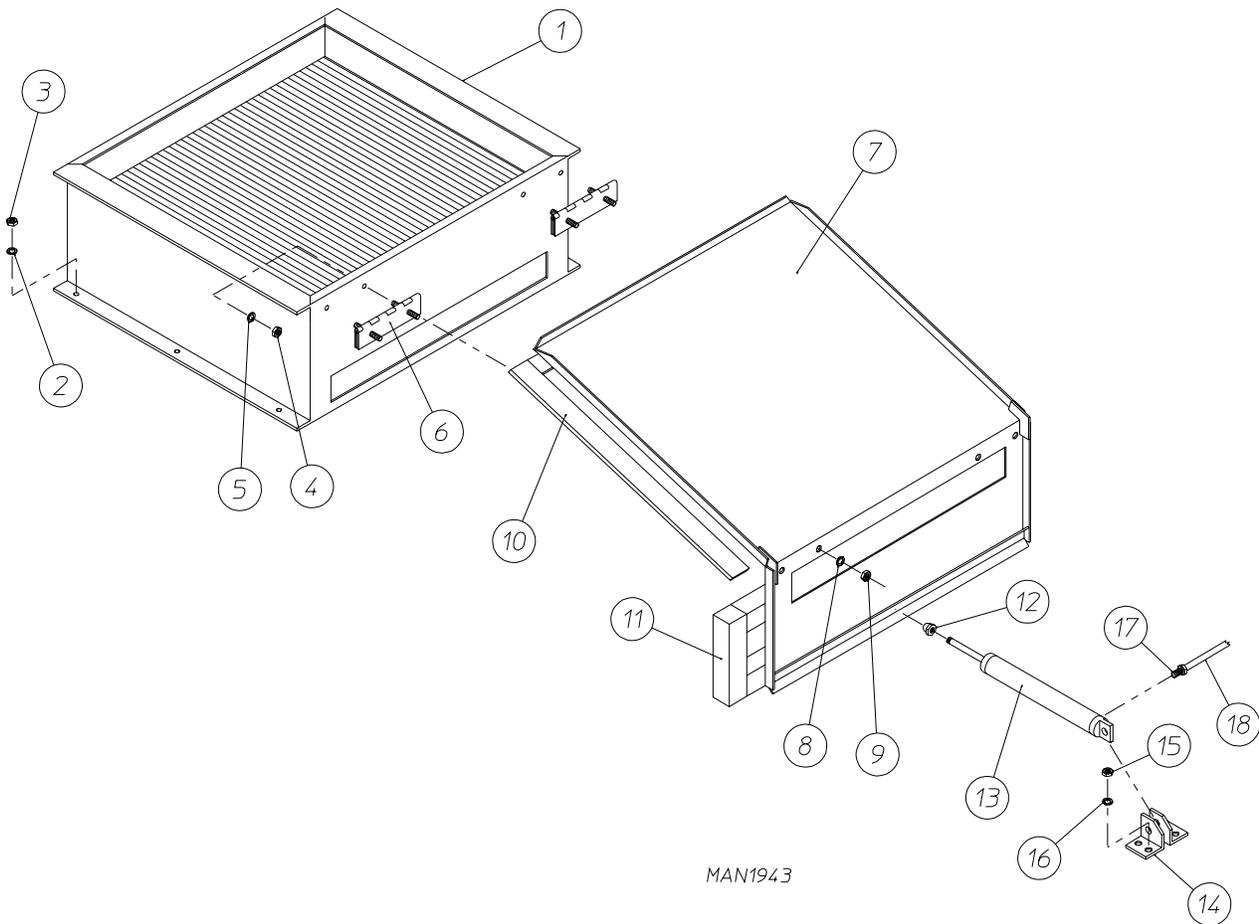


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	165017	1	Steam Coil ONLY
2	153002	6	5/16" Lock Washer
3	152004	6	5/16-18 Hex Nut
4	152002	4	1/4-20 Hex Nut
5	153007	4	1/4" Lock Washer
6	820321	2	Steam Damper Hinge Assembly
7	820994	1	Steam Damper Assembly (includes illus. nos. 7, 10, and 11)
8	153007	4	1/4" Lock Washer
9	152002	4	1/4-20 Hex Nut
10	115995	96	Steam Damper Gasket (sold by the inch)
11	102350	2	Steam Damper Foam (68-1/2" length)
12	151007	1	7/16-20 Stainless Steel Acorn Nut
13	100499	1	1-1/2" Bore x 3" Stroke Piston
14	100500	1	Piston Support Bracket
15	152002	4	1/4-20 Hex Nut
16	153007	4	1/4" Lock Washer
17	100472	1	1/4" x 1/8" Connector
18	143110	1	1/4" Tubing (sold by the foot)

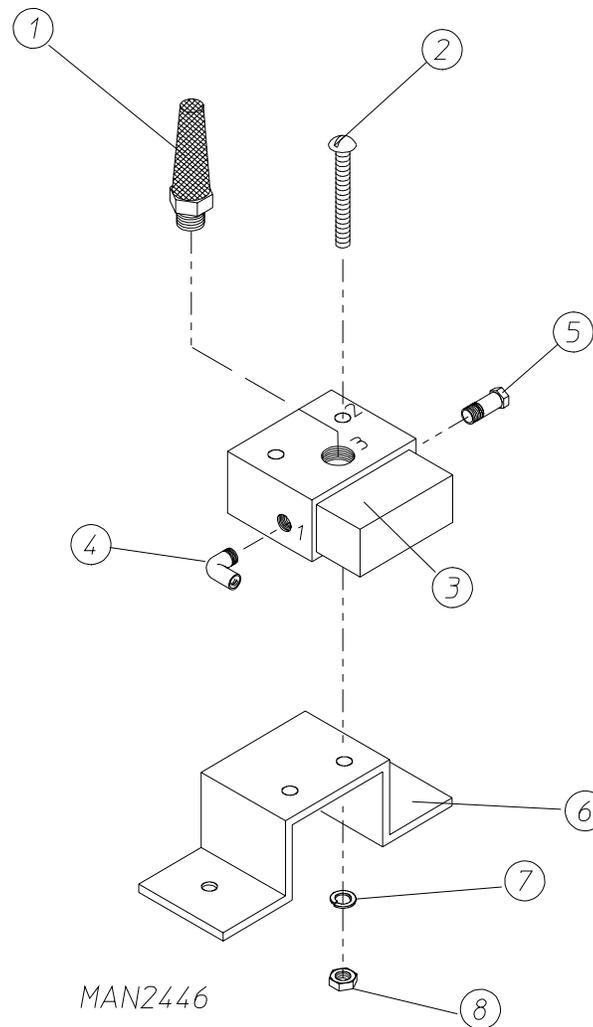

Illus. No.	Part No.	Qty.	Description
1	100520	1	1/8" N.P.T. Silencer (muffler)
2	150002	1	#6-32 x 1" Phillips Round Head Machine Screw
3	100498	1	3-Way Micro Valve ONLY - 24 VAC
	821105	1	Pneumatic Valve Assembly Complete (includes illus. nos. 1 through 8) For Gas Models ONLY
4	143268	1	1/8" Street Elbow
5	100472	1	1/4" x 1/8" Connector
6	330987	1	Micro Valve Support Bracket ONLY
7	153010	1	#6 Star Washer
8	152000	1	#6-32 Hex Nut


For Steam Models ONLY

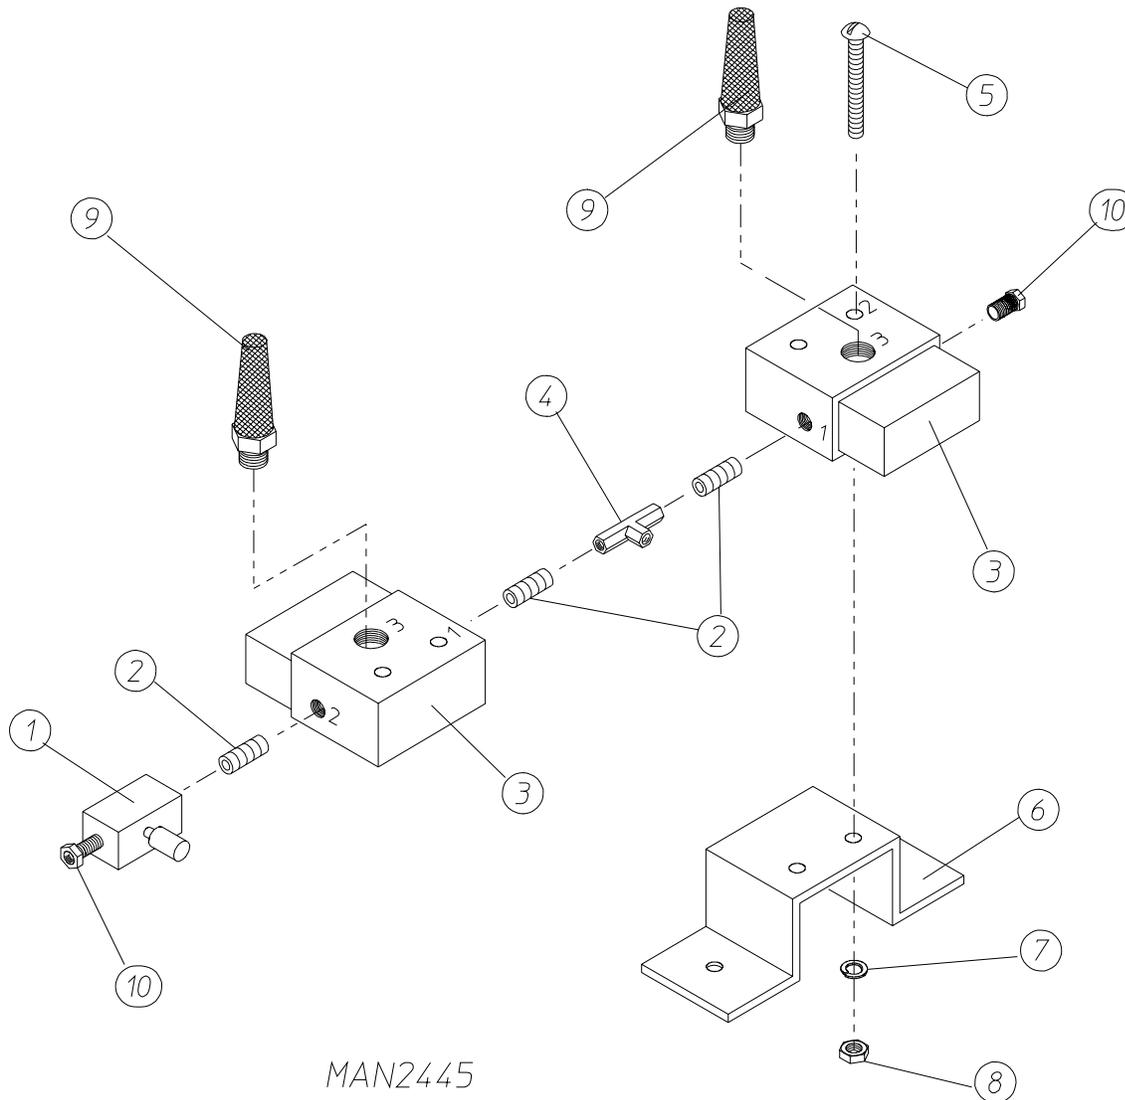

MAN2445

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	100496	1	1/8" Needle Valve
2	143238	3	1/8" Close Nipple
3	100498	2	3-Way Micro Valve ONLY - 24 VAC
	821104	1	Pneumatic Valve Assembly Complete (includes illus. nos. 1 through 8) for Steam Models ONLY
4	143223	1	1/8" F.P.T. Brass Tee
5	150002	1	#6-32 x 1" Phillips Round Head Machine Screw
6	330987	1	Micro Valve Support Bracket ONLY
7	153010	2	#6 Star Washer
8	152000	2	#6-32 Hex Nut
9	100520	2	1/8" N.P.T. Silencer (muffler)
10	100472	2	1/4" x 1/8" Connector


208-240V 3Ø 3.4 Wire

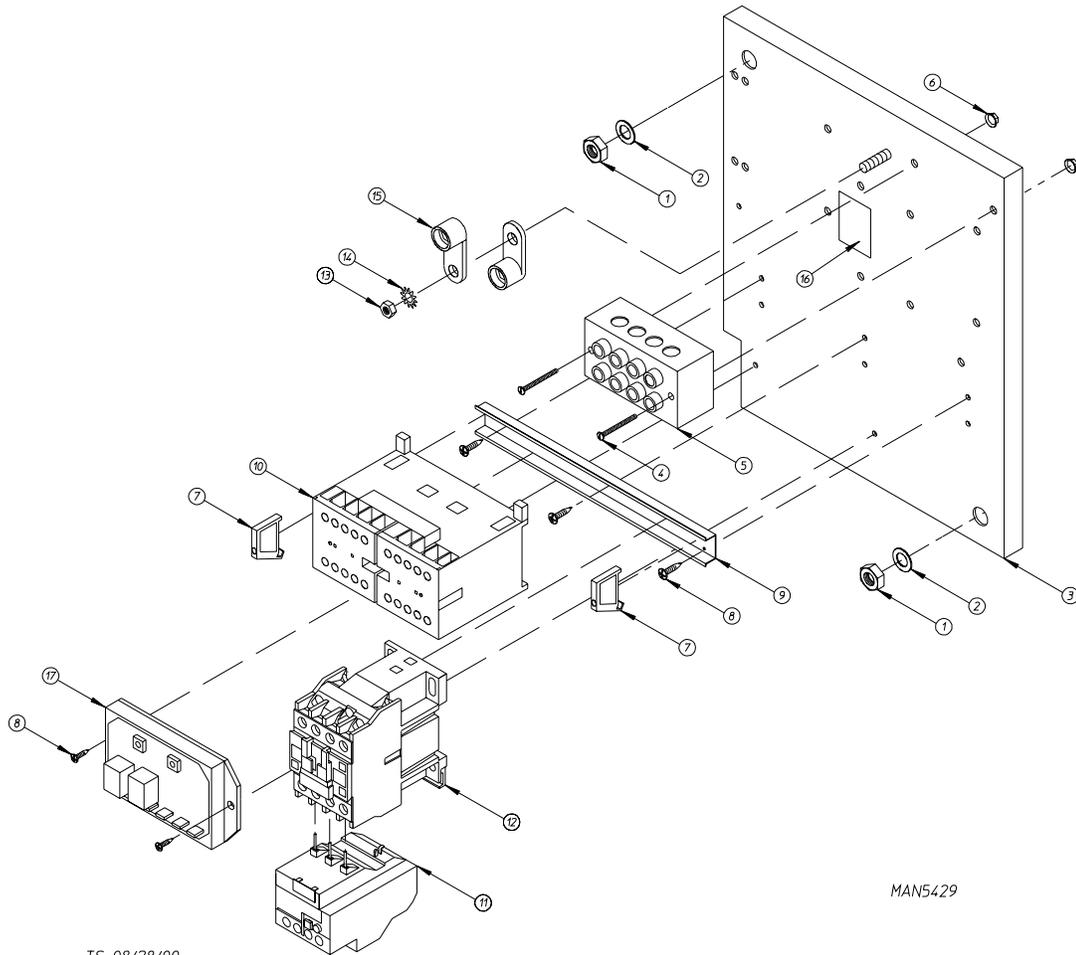


TS 08/28/00

MAN5429

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	152004	2	5/16-18 Hex Nut
2	153002	2	5/16" Lock Washer
3	803632	1	Relay Panel
4	150008	2	#6-32 x 1-1/4" Round Head Machine Screw
5	120701	1	4-Position Terminal Block
6	151000	2	#6-32 Pal Nut
7	120765	2	End Stop
8	150301	5	#8-18 x 7/16" Phillips Head Screw
9	120768	8	35 x 15 mm Din Mounting Rail
10	132458	1	Reversing Contactor with Coil Suppression
11	132435	1	Blower Motor Overload
12	132433	1	Drive Contactor
13	152002	1	1/4-20 Hex Nut
14	153021	1	1/4" Shake Proof Washer
15	121010	2	L70-14-4 Ground Lug
16	112075	1	Ground Here Label
17	132198	1	Reversing Timer (for timer models Only)

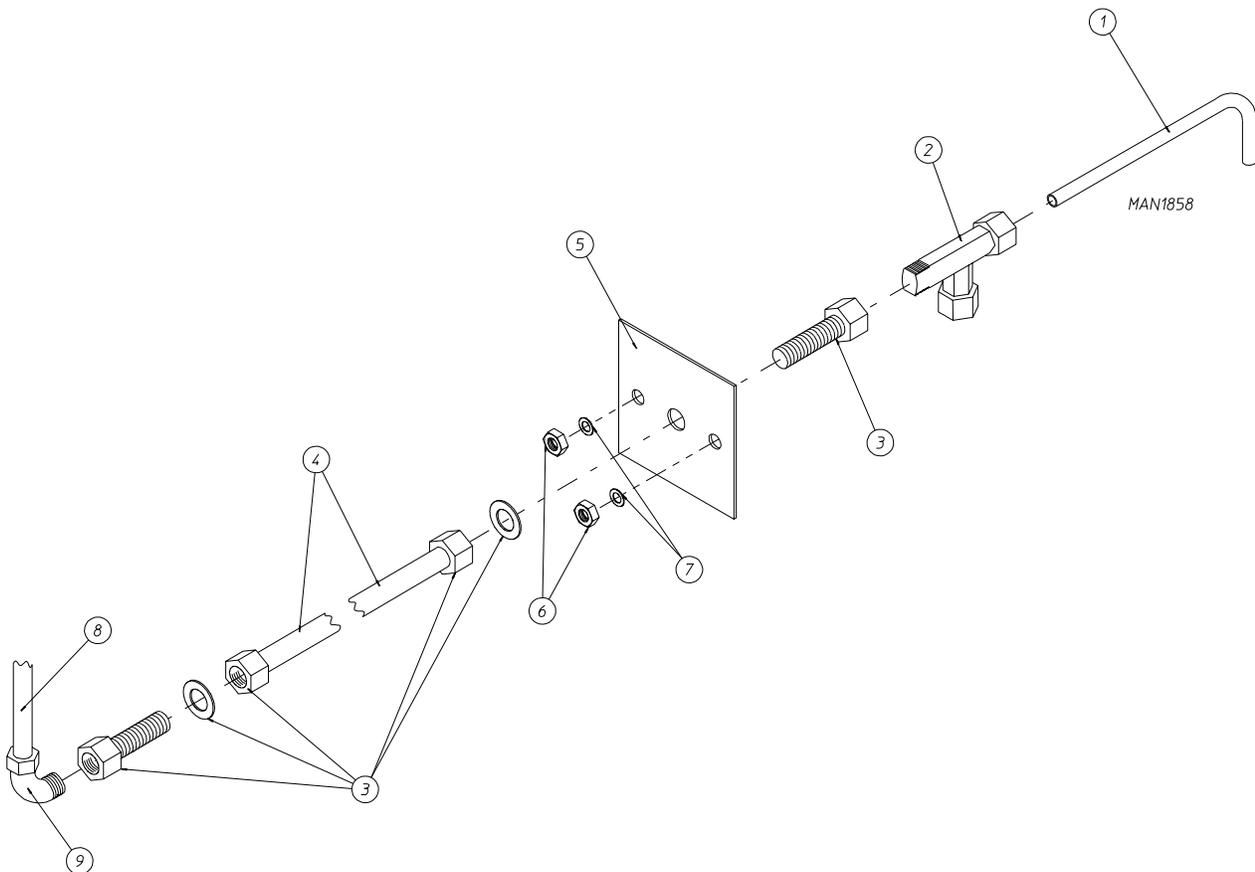

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	332700	1	Air Jet Tube ONLY
2	143287	1	1/4" Compression x 1/8" M.P.T. Male Run Tee
3	143259	2	1/4" Compression x 1/8" F.P.T. Bulkhead Fitting
4	882157	3	1/4" Aluminum Tube (sold by the foot)
5	821081	1	Air Jet Mounting Plate ONLY (includes illus. nos. 1 through 9)
	332531	1	Air Jet Mounting Plate ONLY
6	152002	2	1/4-20 Hex Nut
7	153007	2	1/4" Lock Washer
8	143110	5	1/4" Poly Flo Tubing (sold by the foot)
9	143149	1	1/4" x 1/8" M.P.T. 90° Elbow

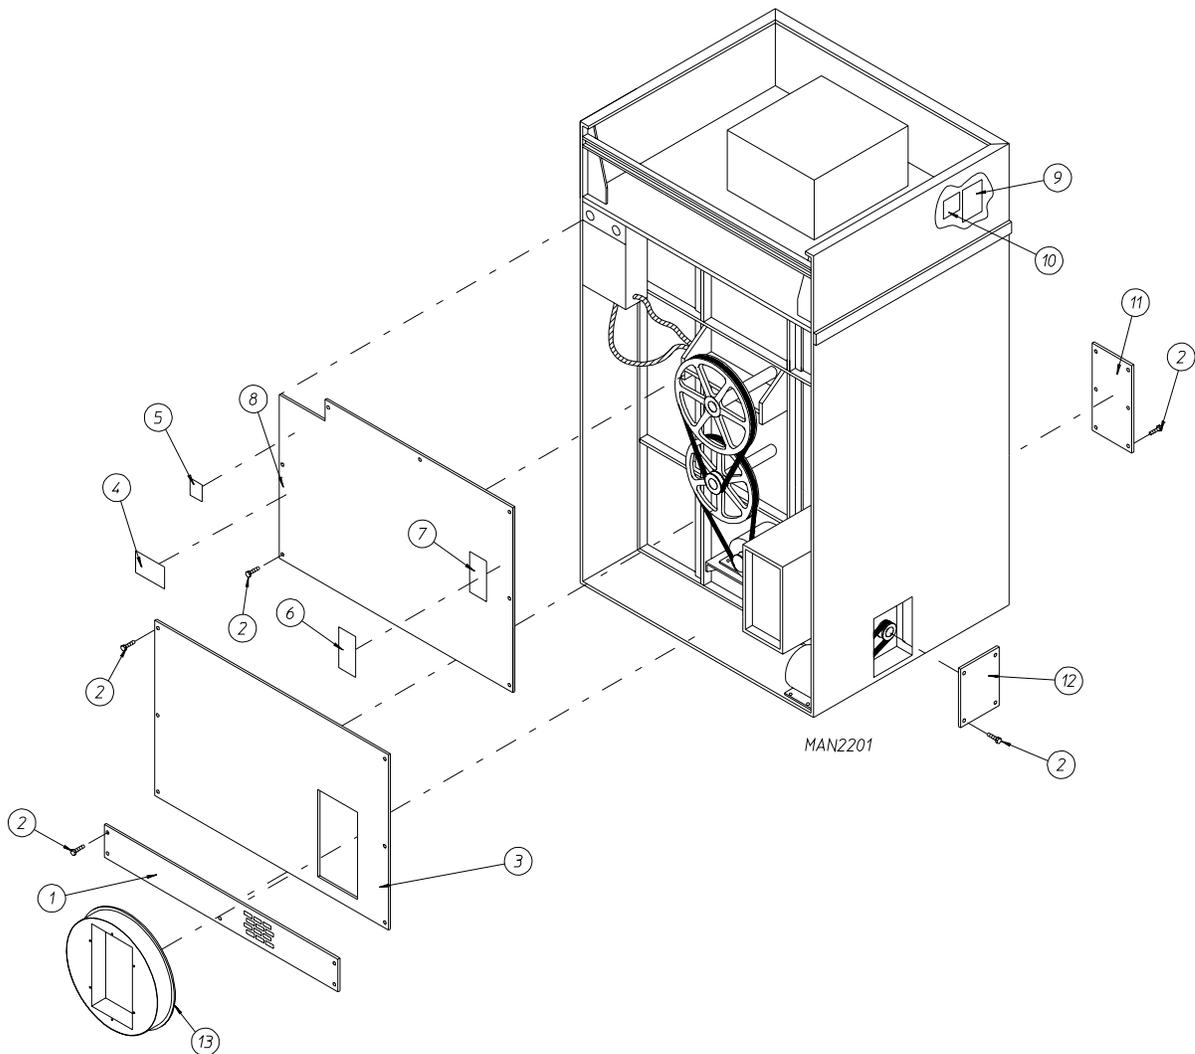

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	332328	1	Bottom Back Guard ONLY
2	150301	28	#8-18 x 7/16" Phillips Pan Head TEK Screw
3	821096	1	Middle Back Guard ONLY
4	112014	1	High Voltage Label ONLY
5	112017	1	"Name, Address, Telephone Number" Label
6	112230	1	"Installation Instructions" Label
7	112519	1	"Routine Maintenance Schedule" Label
8	821095	1	Top Back Guard ONLY
9	112534	1	"Phase 5 OPL Program Location Summary" Label (for microprocessor models only)
10	-----	1	Dryer Data Label (<i>not for resale by ADC</i>)
11*	332295	1	Blower Housing Front Access Panel
12*	332309	1	Side Access Panel
13	835123	1	Square Duct to Round Duct Transition Piece Assembly
---	117505	**	Aluminum Duct Tape

* Specify color when ordering.

** As required.

STEP DOWN TRANSFORMER USAGE LISTING (REVERSING RELAY BOX)

Heat	Voltage	Wire Service	Transformer Part Number	
			Microprocessor Models	Timer Models
Gas / Steam	380	3 or 4	132059	132059
	416	3 or 4	132062	132062
	460/480	3 or 4	132053	132053
	575	3	132050	132050

<u>Part No.</u>	<u>Description</u>
112280	“Clean Lint Screen” Label
112534	“Phase 5 OPL Program Location Summary” Label
114006	“WARNING - Fire Hazards” Label
114001	“CAUTION - Exhaust/Lint Screen” Label
120100	3/8” Straight (BX) Connector
120300	3/8” x 45° (BX) Connector
120400	3/8” Red Jacket (BX) Insulator
120500	3/8” Jiffy Clip (BX) Retainer Clip
120600	3/8” Greenfield (BX)
120800	1/4” In-Line Connector
120802	Red Butt Connector
120902	#74B Wire Nut
120903	Closed End Connector
121014	1/4” Insulated (female) Terminal
121499	5-1/2” Wire Tie
121500	8” Harness Tie
122804	Manometer (water column test gauge)
404502	White Brush-In-Cap Bottle Touch-Up Paint (0.6 oz. bottle)
401010	#847 Adhesive For Felt Collar

