


Tumble Dryer

120 Pound Capacity

Starting Serial No. 0907003062

Refer to Page 5 for Model Numbers

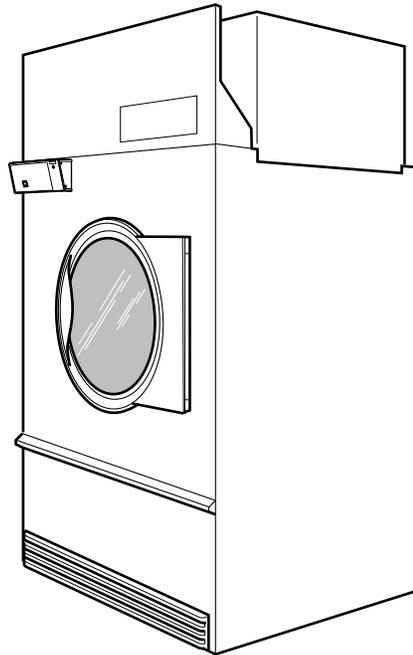

TMB1268C_70422001

Parts

Table of Contents

Title	Page
Parts Ordering Information.....	3
Serial Plate Location	3
Model Identification	5
Product Overview - Heat Source and Voltage	6
Product Overview - Control Suffixes (Drawing 1 of 2).....	8
Product Overview - Control Suffixes (Drawing 2 of 2).....	10
Interior Control Box	12
Exterior Control Box - RM Control Suffix.....	14
Exterior Control Box - RQ Control Suffix.....	16
DMP Control Box - C and I Models with RD Control Suffix.....	18
DX4 Control Box - D Models with R3 Control Suffix	20
Exterior Control Box - RE Control Suffix	22
Exterior Control Box - RU Control Suffix	24
Fire Suppression System Control Box	26
Cabinet Front Components	28
Cabinet Front Panels and Nameplates	30
Door and Hinge Components	32
Lint Panel Components.....	34
Lint Panel Switch Assembly	36
Lint Screen and Drive Guard	38
Cylinder and Trunnion Assembly	40
Trunnion Bearings.....	42
Drive Sheave, Step Pulley and Belts	44
Cylinder Drive Motor	46
Moisture Sensing Components	48
Fan Assembly - 50 Hertz Models	50
Fan Motor Assembly - 50 Hertz Models.....	52
Fan and Fan Motor Assembly - 60 Hertz Models.....	54
Airflow Switch.....	56
Gas Heater Components - Non-CE Models Through 3/10/13	58
Gas Heater Components - CE Models Through 3/10/13	60
Gas Heater Components - Models Starting 3/11/13	62
Burner Orifices for Non-CE and Non-Australian Gas Models	64
Steam Heater Components - Except C, D, and I Models.....	66
Steam Heater Components - C, D and I Models	68
Steam Solenoid Valve.....	70
Electric Heater Components	72
Rotation Sensor	74
Control Tray Wrap Components for Gas and Steam Models.....	76
Control Tray Wrap Components for Electric Models.....	78
Control Tray Fuses	80

© Copyright 2013, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Control Tray Harnesses for Gas and Steam Models	82
Control Tray Components for Gas Models	84
Control Tray Components for Steam Models.....	86
Control Tray Harnesses for Electric Models.....	88
Control Tray Components for Electric Models	90
Parts Index.....	93

Parts Ordering Information


If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.

For technical assistance, call either of the numbers listed below:

(920) 748-3121 Ripon, Wisconsin
+32 56 41 20 54 Wevelgem, Belgium

Serial Plate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on serial plate(s) as shown.

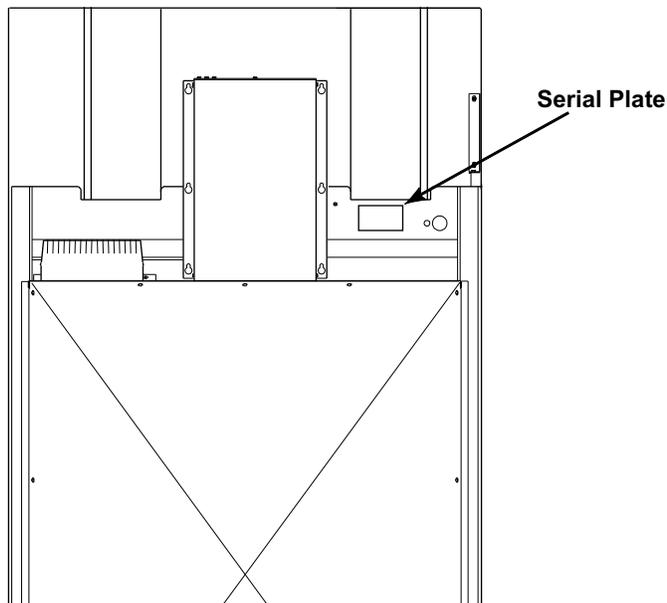


TMB3207P_70422001

Model Identification

Information in this manual is applicable to these tumble dryer models:

DR120E2-BT120E	GA120L	IPD120E2	LA120L	SA120L	XT120L
DR120E2-BU120E	GA120N	IPD120G2	LA120N	SA120N	XT120N
DR120G2-BA120L	GK120N	IPD120S2	LK120N	SK120N	XT120S
DR120G2-BA120N	GT120E	IT120E	LT120E	ST120E	XT120T
DR120G2-BK120N	GT120L	IT120L	LT120L	ST120L	XU120L
DR120G2-BT120L	GT120N	IT120N	LT120N	ST120N	XU120N
DR120G2-BT120N	GT120S	IT120S	LT120S	ST120S	XU120S
DR120G2-BU120L	GT120T	IT120T	LT120T	ST120T	XU120T
DR120G2-BU120N	GU120E	KA120L	LU120E	SU120E	YT120L
DR120S2-BT120S	GU120L	KA120N	LU120L	SU120L	YT120N
DR120S2-BT120T	GU120N	KK120N	LU120N	SU120N	YT120S
DR120S2-BU120S	GU120S	KT120E	LU120S	SU120S	YT120T
DR120S2-BU120T	GU120T	KT120L	LU120T	SU120T	YU120E
CA120L	HA120L	KT120N	PA120L	UA120L	YU120L
CA120N	HA120N	KT120S	PA120N	UA120N	YU120N
CK120N	HK120N	KT120T	PK120N	UK120N	YU120S
CT120E	HT120E	KU120E	PT120E	UT120E	YU120T
CT120L	HT120L	KU120L	PT120L	UT120L	
CT120N	HT120N	KU120N	PT120N	UT120N	
CT120S	HT120S	KU120S	PT120S	UT120S	
CT120T	HT120T	KU120T	PT120T	UT120T	
CU120E	HU120E		PU120E	UU120E	
CU120L	HU120L		PU120L	UU120L	
CU120N	HU120N		PU120N	UU120N	
CU120S	HU120S		PU120S	UU120S	
CU120T	HU120T		PU120T	UU120T	

Product Overview - Heat Source and Voltage

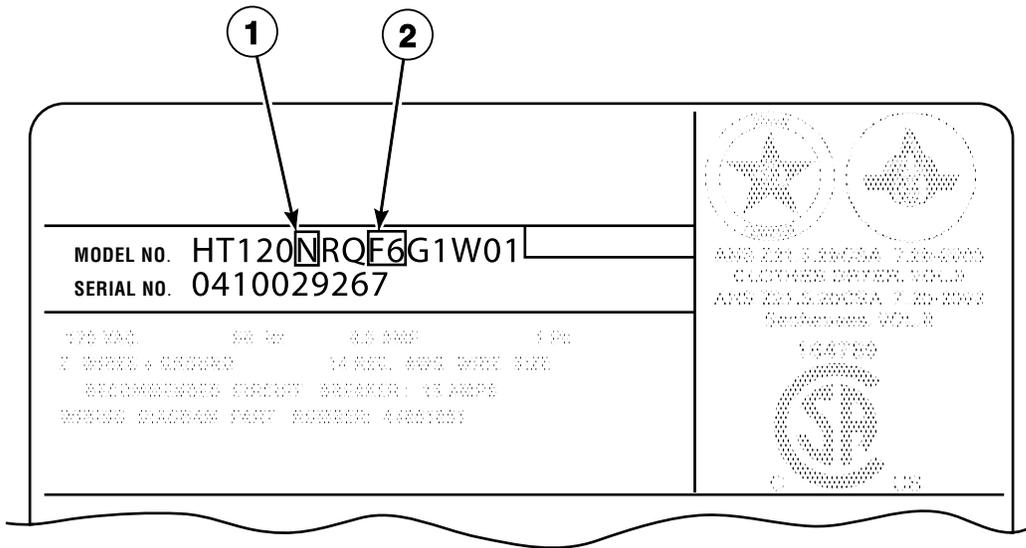


TMB2907P_70422001

Product Overview - Heat Source and Voltage

REF	PART NO.	DESCRIPTION	COMMENTS
1	-	Heat Source	E: Electric L: Liquid Petroleum Gas (L.P.) N: Natural Gas (N.G.) S: Steam T: Thermal Oil
2	-	Voltage	F6: 200-208 or 240 Volt/60 Hertz/3 Phase J5: 230 Volt/50 Hertz/3 Phase J8: 240 Volt/60 Hertz/3 Phase M1: 380 Volt/50 Hertz/3 Phase M2: 380 or 400-415 Volt/50 Hertz/3 Phase M3: 380 Volt/60 Hertz/3 Phase N1: 400-415 Volt/50 Hertz/3 Phase P1: 440 Volt/60 Hertz/3 Phase Q1: 460-480 Volt/60 Hertz/3 Phase Q2: 480 Volt/60 Hertz/3 Phase

Product Overview - Control Suffixes (Drawing 1 of 2)

All Models Except G and K Models

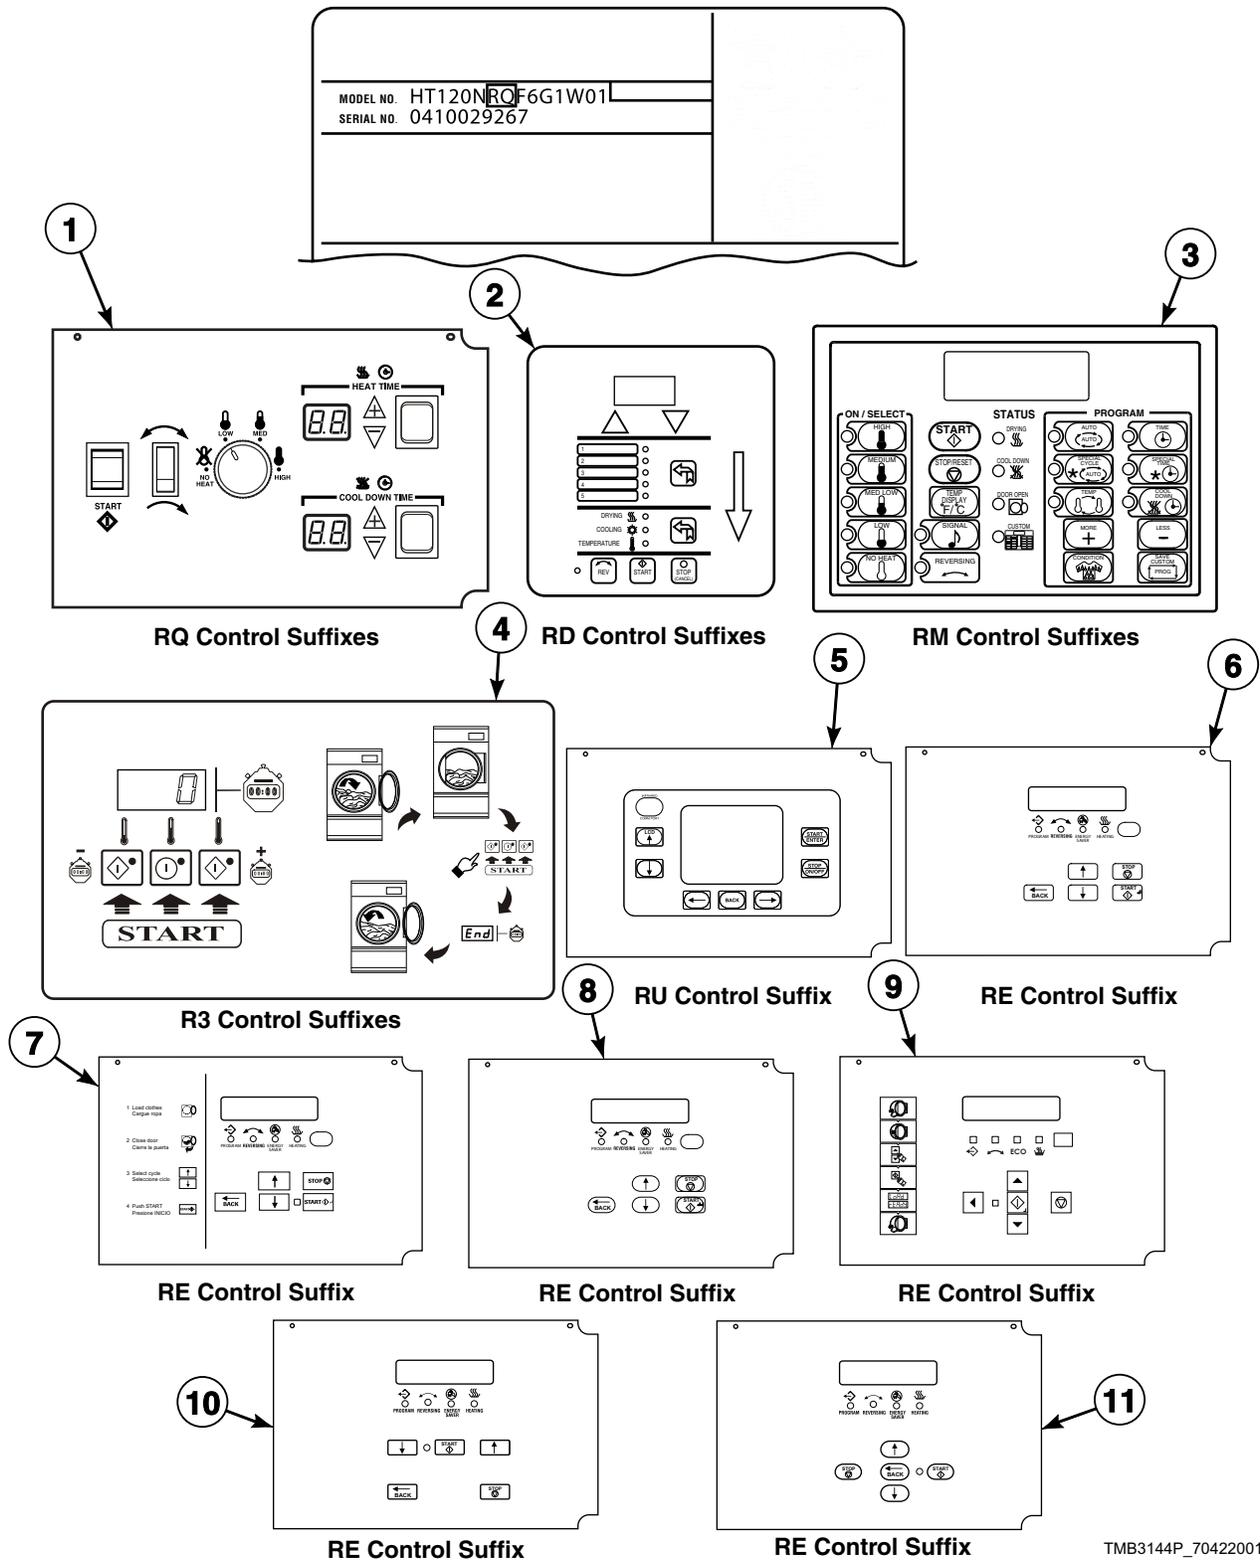

TMB3144P_70422001


Product Overview - Control Suffixes (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	-	Control - Reversing	RQ: reversing dual digital timer
2	-	Control - Reversing	RD: reversing DMP OPL
3	-	Control - Reversing	RM: reversing OPL micro
4	-	Control - Reversing	R3: reversing DX4 OPL
5	-	Control - Reversing	U models; RU: reversing UniLinc OPL
6	-	Control - Reversing	S models; RE: reversing LED OPL
7	-	Control - Reversing	H models; RE: reversing LED OPL
8	-	Control - Reversing	U models; RE: reversing LED OPL
9	-	Control - Reversing	C, D and I models; RE: reversing LED OPL
10	-	Control - Reversing	P models; RE: reversing LED OPL
11	-	Control - Reversing	L and Y models; RE: reversing LED OPL


NOTE: OPL models have the following control suffixes: R3, RD, RE, RM, RQ and RU.

Product Overview - Control Suffixes (Drawing 2 of 2)

G and K Models

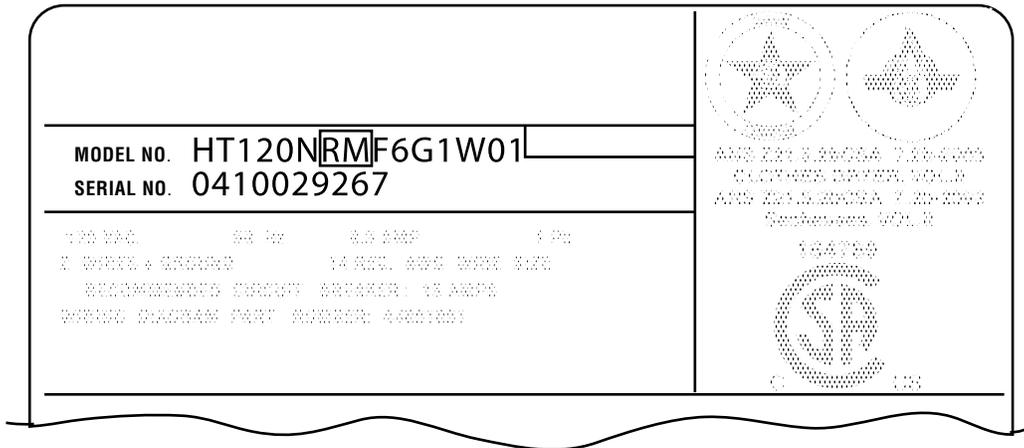


1

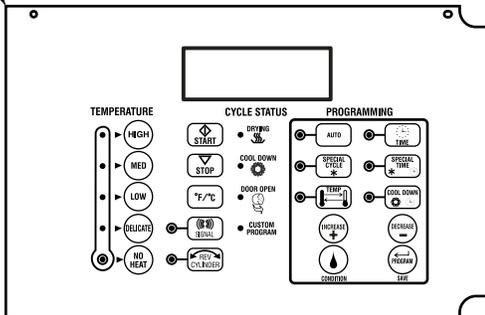

RM Control Suffixes

2

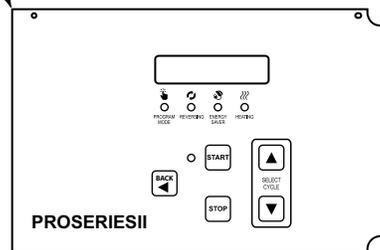

RE Control Suffix


TMB3145P_70422001

Product Overview - Control Suffixes (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	-	Control - Reversing	RM: reversing OPL micro
2	-	Control - Reversing	RE: reversing LED OPL

NOTE: OPL models have the following control suffixes: RE and RM.

Interior Control Box

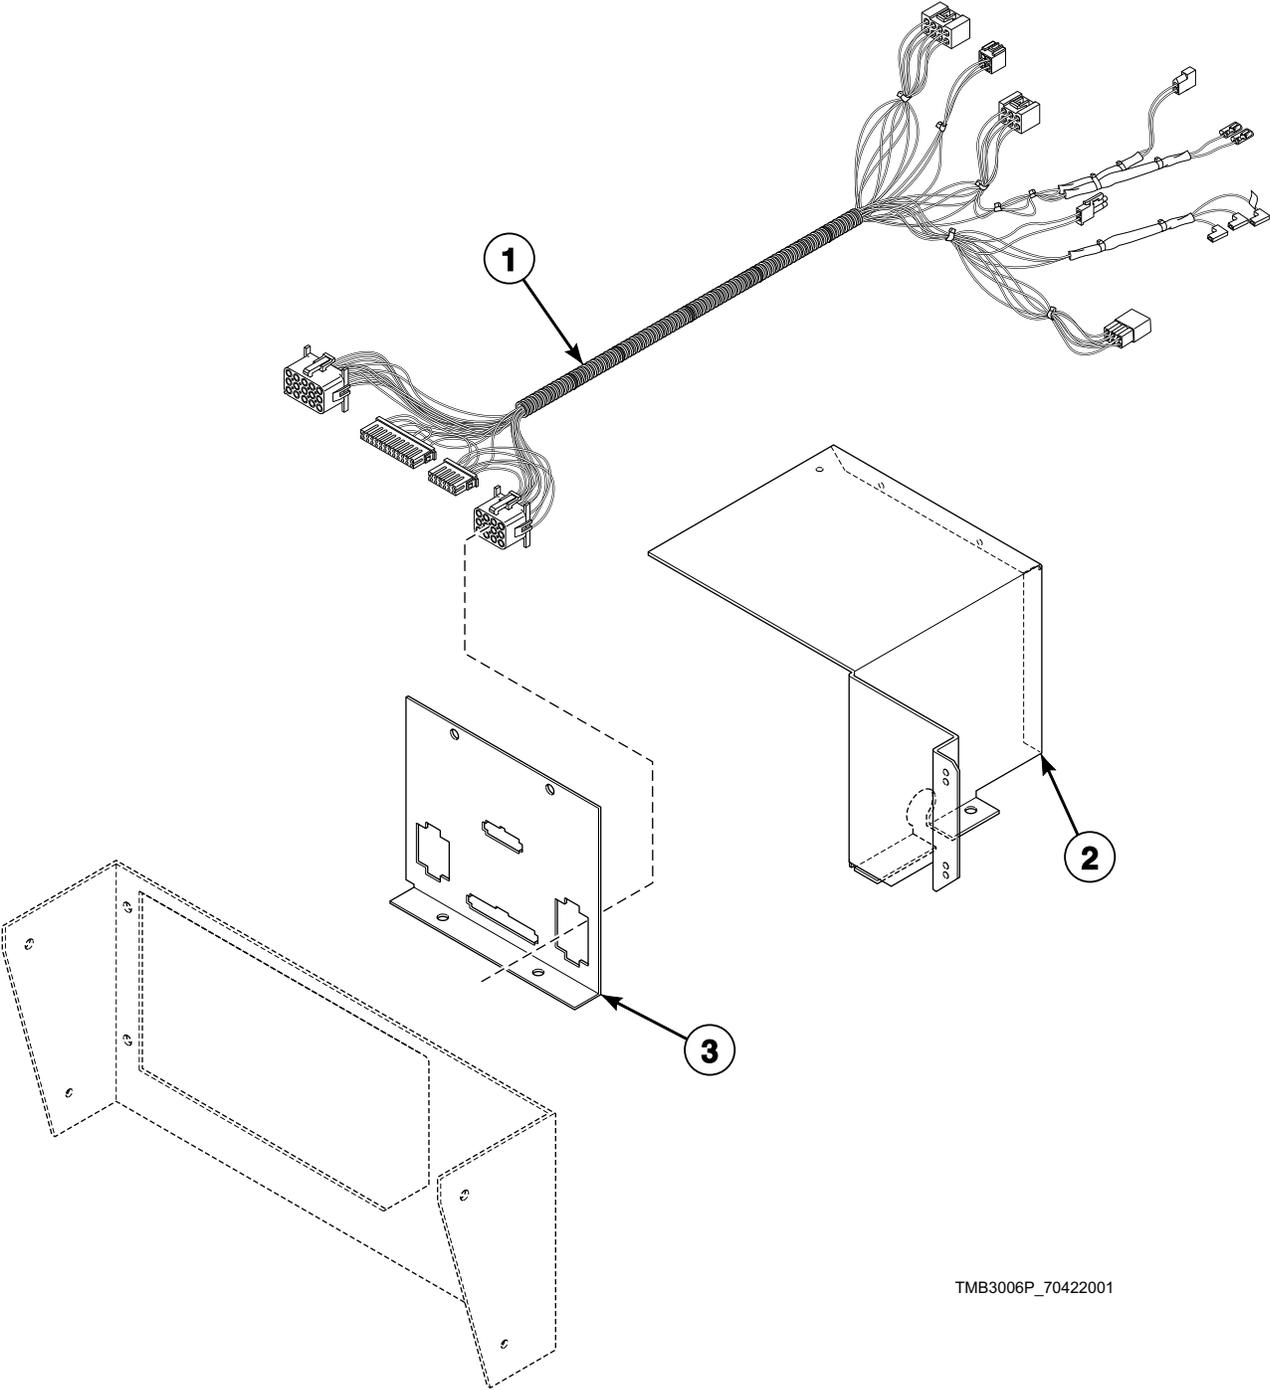


TMB3006P_70422001

Interior Control Box

REF	PART NO.	DESCRIPTION	COMMENTS
1	44162401	Main Harness	Models through 7/31/11
	44243701	Main Harness	Steam models starting 8/1/11; Gas models starting 8/1/11 through 3/10/13
	44251301	Main Harness	Gas models starting 3/11/13
	44227501	Main Harness	Electric models
2	44161001	Control Box	
3	44161101	Control Housing Cover	

Exterior Control Box - RM Control Suffix

H, S and U Models Through 7/31/11
G, K, L, P, X and YU Models Through 1/1/12

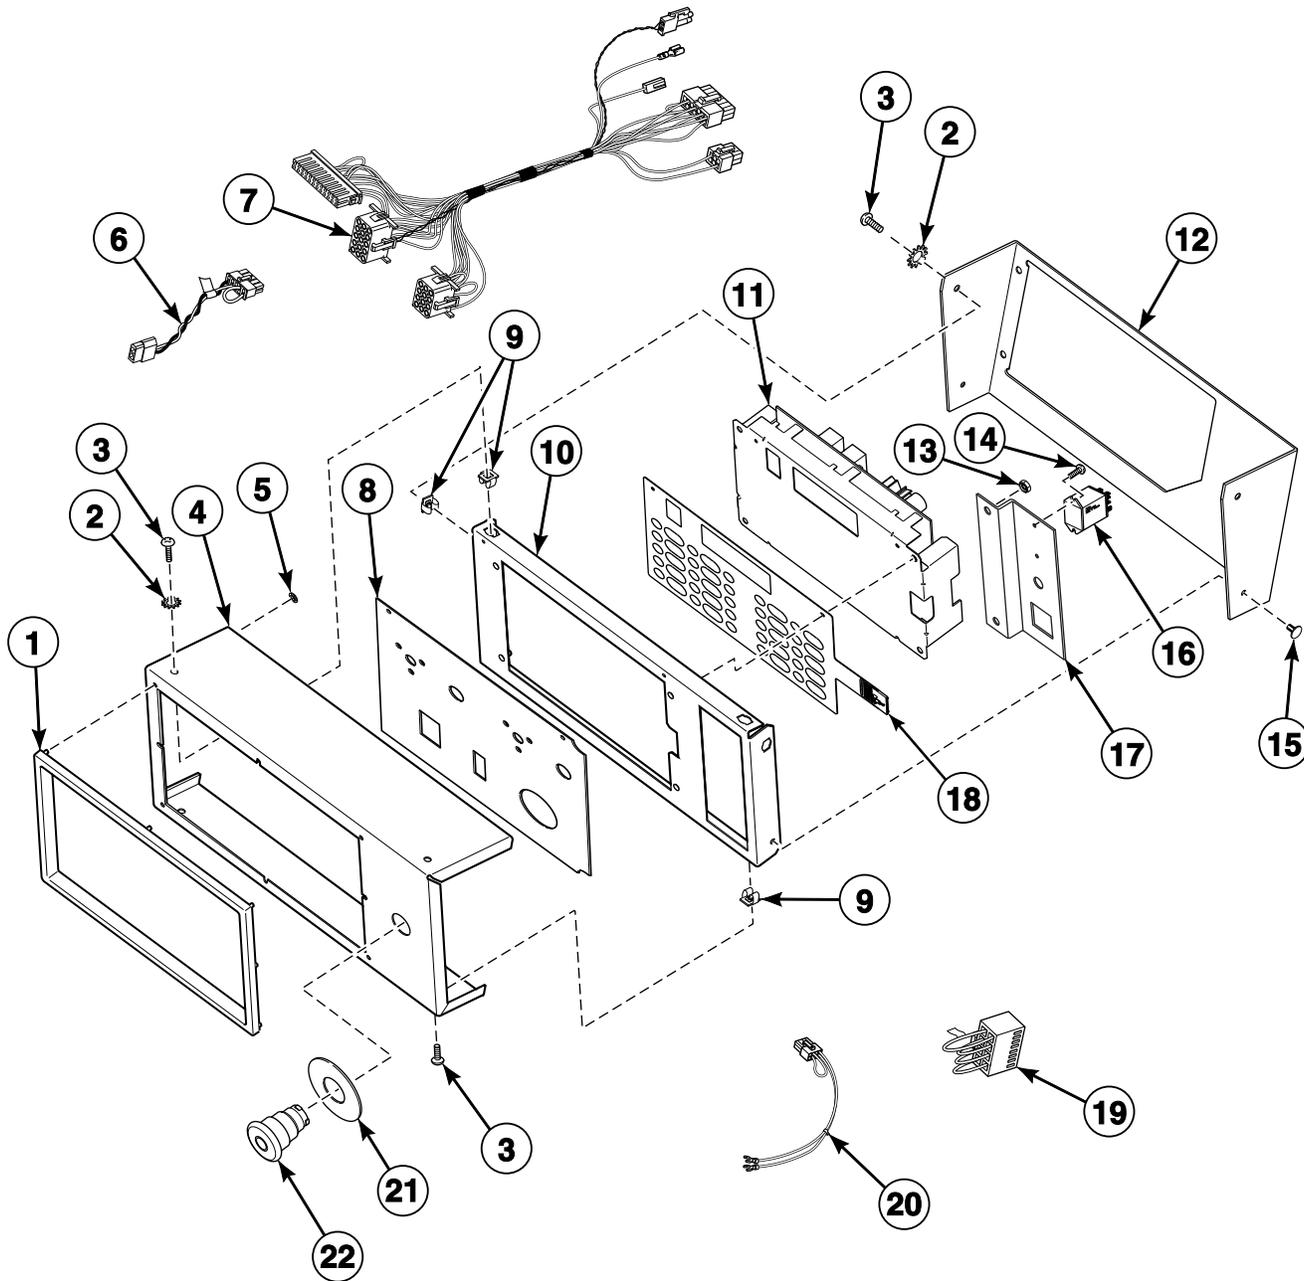

TMB3264P_70422001

Exterior Control Box - RM Control Suffix


REF	PART NO.	DESCRIPTION	COMMENTS
	M413930P	Ferrite Core Assembly	2 required
	M4795P3W	Security Cover Kit	
	M4457P3	RC Filter Kit	Includes (2) F330217P RC Filter and instructions
1	44016401	Control Trim	Black; G, K, L, P, S, U, X and YU models
	44016402	Control Trim	Gray; H models
2	03815	Washer	2 required
3	800930	Screw	6 required
4	44111701*	Control Cover	G and K non-CE models
	44111702	Control Cover	G and K non-CE models; Stainless steel
	44013307*	Control Cover	All other non-CE models
	N/A	Control Cover	All other non-CE models; Stainless steel
	44111705W	Control Cover	GU and KU models
	N/A	Control Cover	All other CE models
	44111706	Control Cover	GU and KU models; Stainless steel
	44013306	Control Cover	XU and YU models; Stainless steel
	44013312	Control Cover	All other CE models; Stainless steel
5	M400977	Nut	8 required per control trim
6	70084305	Jumper Calibration Wire	
7	70335301P	Control Panel Harness	Non-CE models
	70382701P	Control Panel Harness	CE models
8	70128401	Overlay	S, U, X and YU models; Text
	70130501	Overlay	L, S and U models; Icon
	70128601	Overlay	H models; Text
	70130701	Overlay	H models; Icon
	70135301	Overlay	P models
	44130001	Overlay	G and K models; Text and icon
9	70030501	Expansion Clip	6 required per control plate
10	44029601	Control Plate Assembly	Includes studs
11	70228401P	Control Kit	Includes tape
12	44099501W	Control Mounting Bracket	G and K models
	44012801W	Control Mounting Bracket	All other models
13	70054	Nut	4 required per control plate
14	430497	Screw	4 required
15	M400713	Drive Rivet	2 required
16	M412534	Relay	CE models
17	44041701	Relay/Buzzer Bracket	
18	M414368P	Membrane Switch	
19	70364103	Bypass Harness	Non-CE models
20	70364105P	Emergency Stop Contact Harness	1 contact; CE models
	70364106P	Emergency Stop Harness	2 contacts; CE models
21	44012901	Emergency Stop Label	CE models
22	F200233500	Emergency Stop Pushbutton	CE models

* Add Letter To Designate Color. Q - Bisque W - White

N/A = Part no longer available

Exterior Control Box - RQ Control Suffix

C, H, I, L, P, S, U, X and YT Models
G and K Models Starting 1/16/12

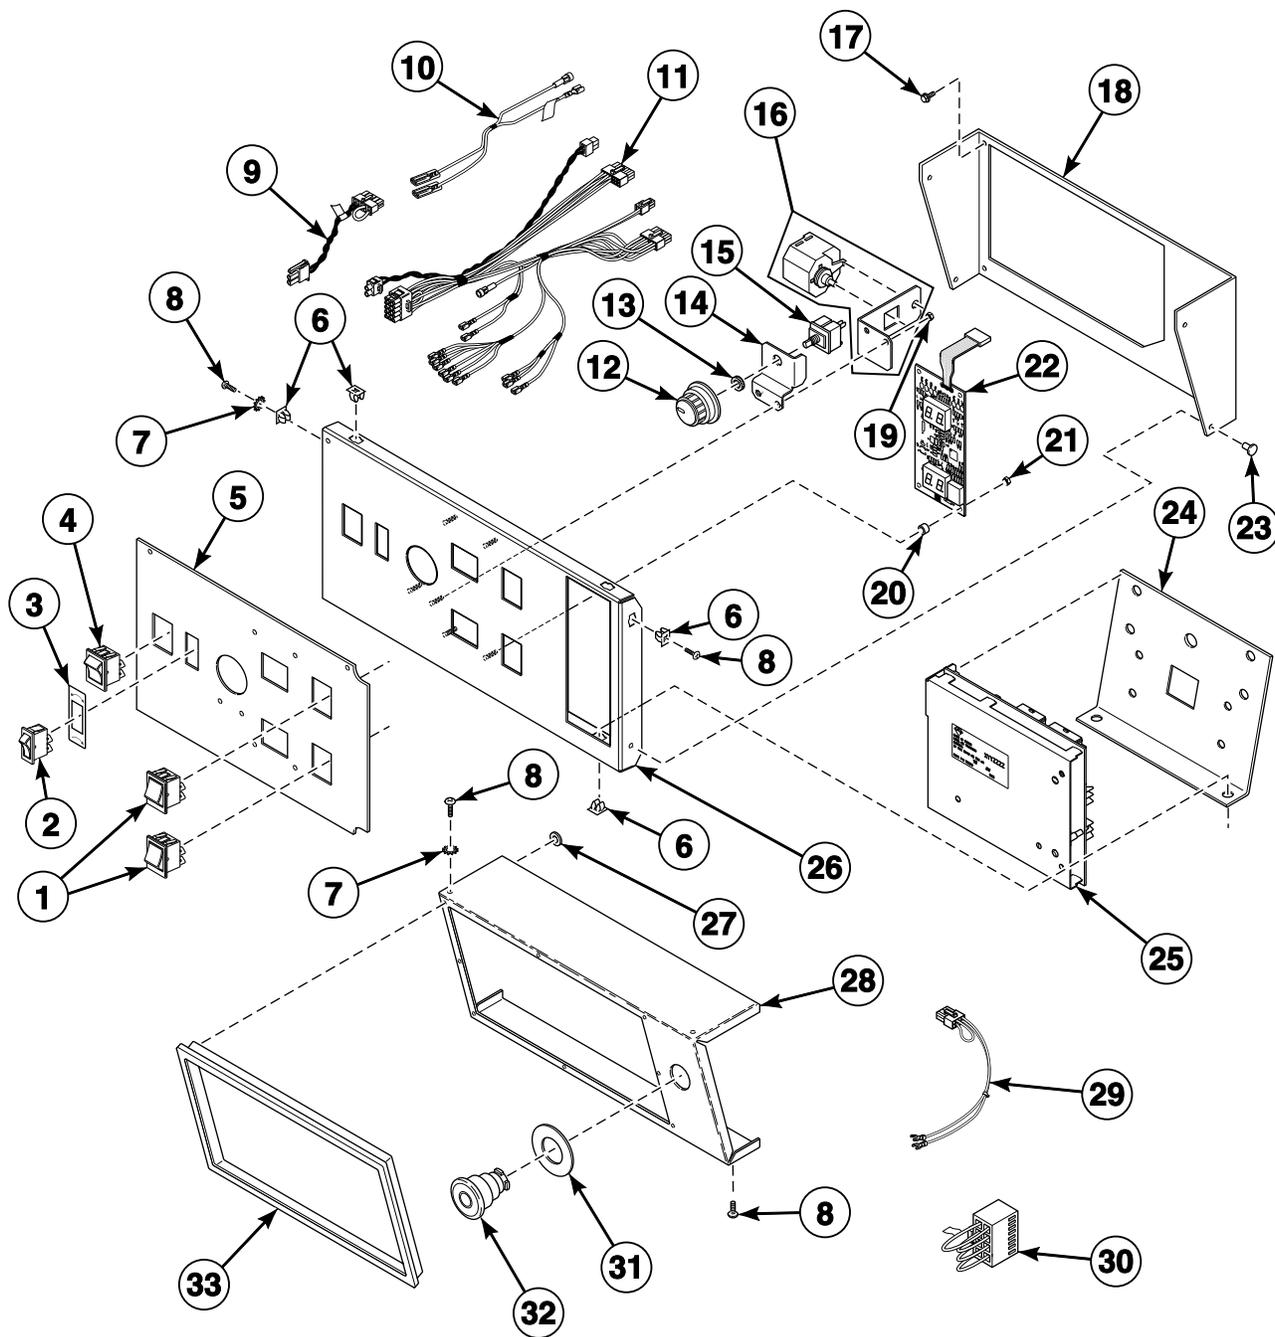

TMB3239P_70422001

Exterior Control Box - RQ Control Suffix


REF	PART NO.	DESCRIPTION	COMMENTS
	M4795P3W	Security Cover Kit	
1	70461301	Rocker Switch	2 required
2	44099601	Rocker Switch	Reversing
3	M413236	Switch Plate	Reversing
4	70455101	Rocker Switch	Start
5	70362202	Overlay	C, G, I, K, L, S, U, X and YT models
	70362502	Overlay	H models
	70362402	Overlay	P models
6	70030501	Expansion Clip	6 required
7	03815	Washer	
8	800930	Screw	
9	70324604	Jumper Calibration Wire	
10	44100101P	Control Harness	Jumper
11	70367001P	Control Panel Harness	
12	44104601	Temperature Knob	
13	24205	Nut	
14	70391701	Temperature Selector Switch Bracket	
15	511711	Temperature Selector Switch	
16	M4860P3	Buzzer Kit	Includes bracket, buzzer and wire harness
17	430497	Screw	
18	44099501*	Control Mounting Bracket	
	44099502	Control Mounting Bracket	Stainless steel
19	70054	Nut	2 required
20	56079	Panel Locator	4 required
21	29787	Nut	4 required
22	512218P	Display Assembly	
23	M400713	Drive Rivet	2 required
24	70357901	Control Chassis Mounting Bracket	
25	512202P	Control Assembly	
26	44099201	Control Plate and Studs Assembly	Includes studs
27	M400977	Nut	
28	44013307*	Control Cover	Non-CE models
	N/A	Control Cover	Non-CE models; Stainless steel
	N/A	Control Cover	CE models
	44013312	Control Cover	CE models; Stainless steel
29	70364105P	Emergency Stop Contact Harness	1 contact; CE models
	70364106P	Emergency Stop Harness	2 contacts; CE models
30	70364103	Bypass Harness	Non-CE models
31	44012901	Emergency Stop Label	CE models
32	F200233500	Emergency Stop Pushbutton	CE models
33	44016401	Control Trim	Black; S, U, X and YT models
	44016402	Control Trim	Gray; H models

* Add Letter To Designate Color. Q - Bisque W - White

N/A = Part no longer available

DMP Control Box - C and I Models with RD Control Suffix

Models Through 7/31/11

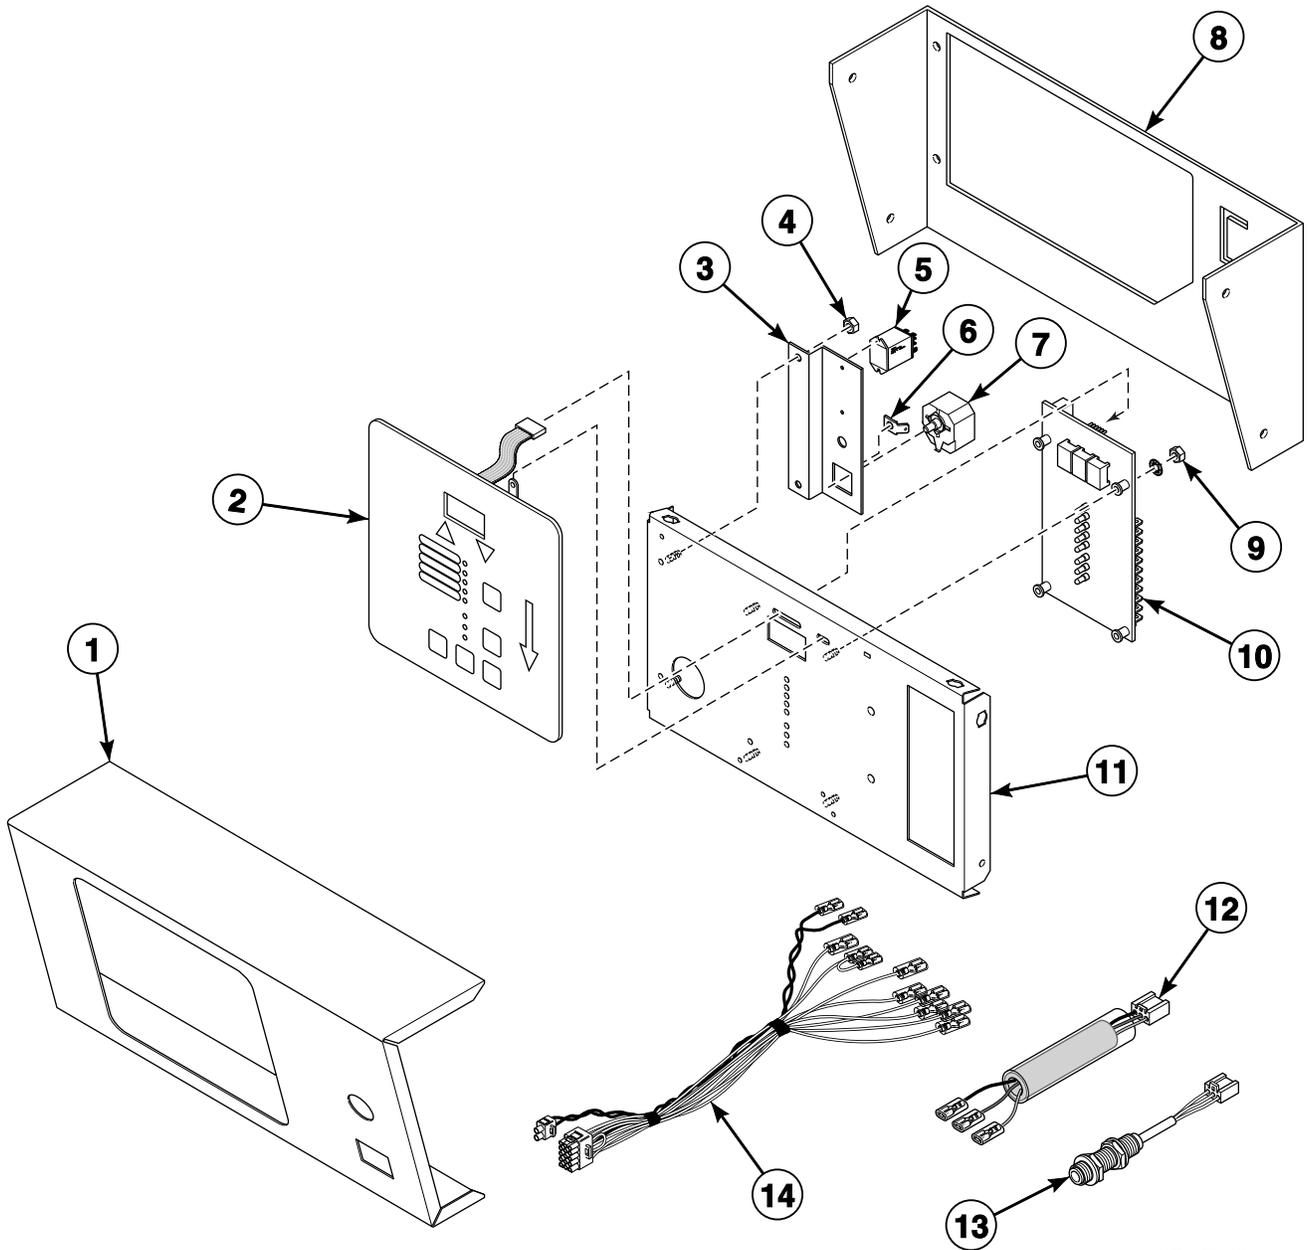


TMB3007P_70422001

DMP Control Box - C and I Models with RD Control Suffix

REF	PART NO.	DESCRIPTION	COMMENTS
	M413930P	Ferrite Core Assembly	Use with item 14
1	44040107*	Control Cover	Non-CE models
	44040108	Control Cover	Non-CE models; Stainless steel
	44040111*	Control Cover	CE models
	44040112	Control Cover	CE models; Stainless steel
2	44037901P	Membrane Switch	
3	44041701	Relay/Buzzer Bracket	
4	70054	Nut	2 required
5	M412534	Relay	CE models
6	00177	Male Tab Terminal	
7	505447	Adjustable Buzzer	
8	44040201*	Control Mounting Bracket	Non-CE models
	44040202	Control Mounting Bracket	Non-CE models; Stainless steel
9	29787	Nut	4 required
10	44037801P	Electronic Control	
11	44041101	Control Plate Assembly	
12	70274102P	Rotation Sensor Cable Assembly	
13	7010P	Rotation Sensor Kit	
14	70341801P	Control Panel Harness Assembly	Non-CE and non-Australian models
	70342001P	Control Panel Harness	CE and Australian models

* Add Letter To Designate Color. **Q** - Bisque **W** - White

DX4 Control Box - D Models with R3 Control Suffix

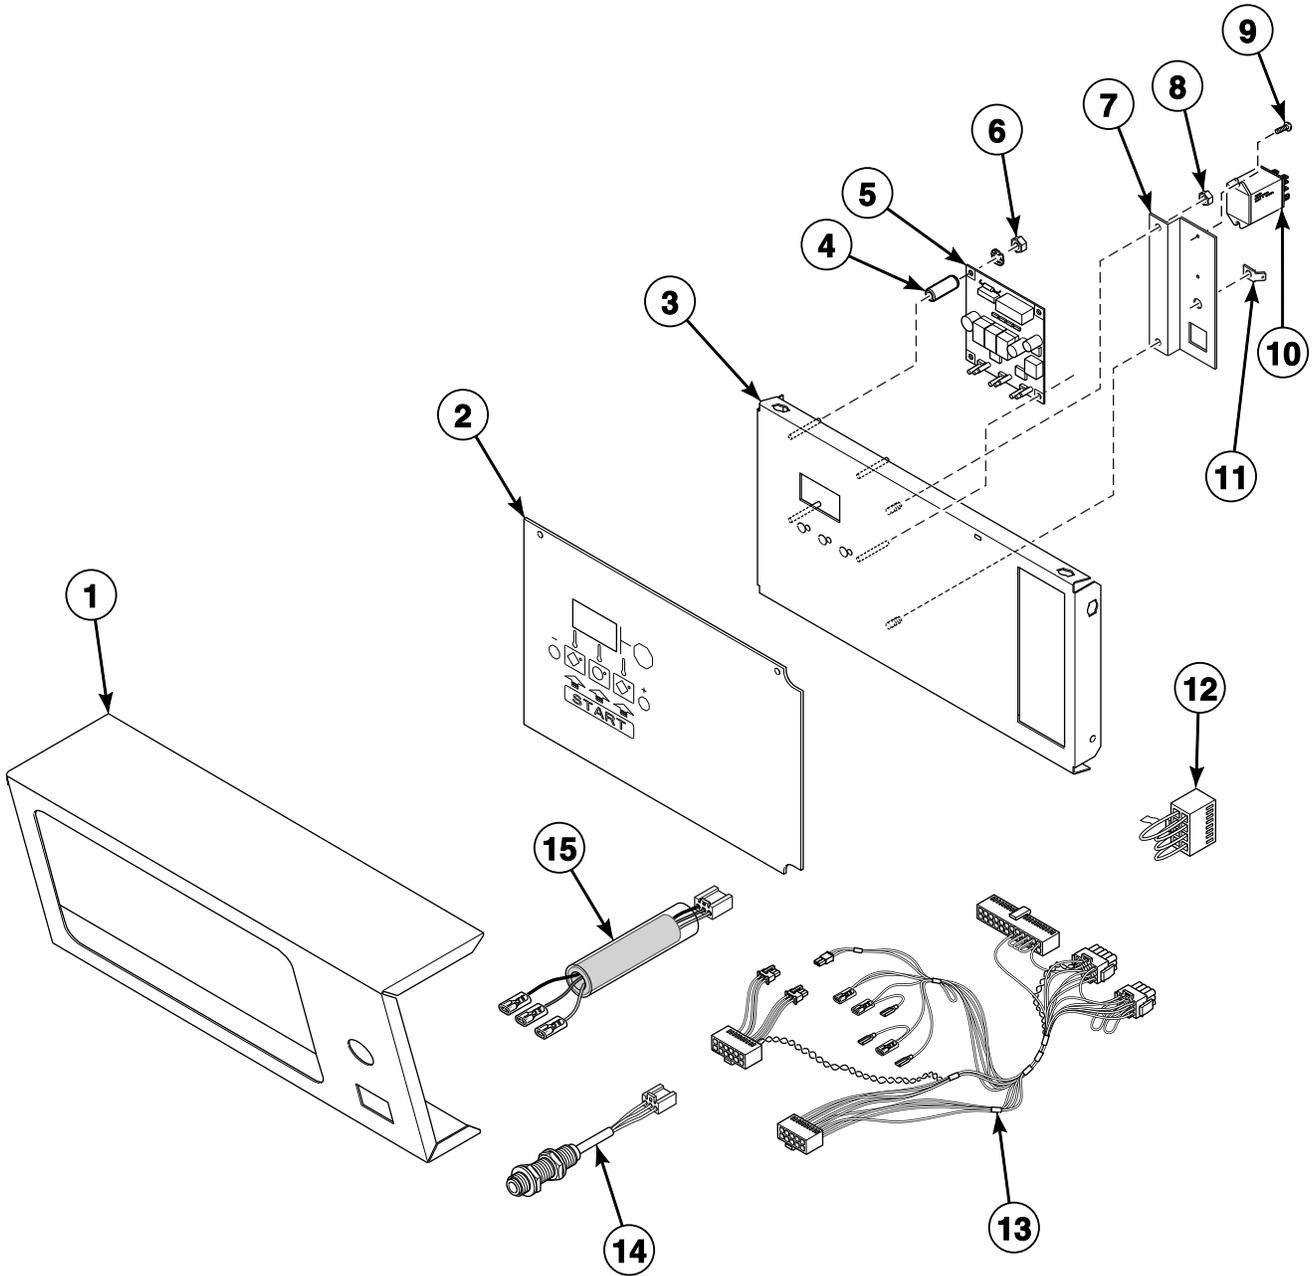

TMB3240P_70422001


DX4 Control Box - D Models with R3 Control Suffix

REF	PART NO.	DESCRIPTION	COMMENTS
	M413930P	Ferrite Core Assembly	Use with item 11
1	44111701*	Control Cover	Non-CE models
	44111702	Control Cover	Non-CE models; Stainless steel
	44111705*	Control Cover	CE models
	44111706	Control Cover	CE models; Stainless steel
2	44240501	Graphic Overlay	
3	44038601	Control Plate Assembly	CE models
4	44050601	Sleeve	4 required
5	70462307P	Control Assembly	
6	29787	Nut	4 required
7	44041701	Relay/Buzzer Bracket	
8	70054	Nut	
9	501086	Screw	
10	M412534	Relay	CE models
11	00177	Male Tab Terminal	
12	70364103	Bypass Harness	Non-CE models
13	70315601P	Control Panel Harness	Non-CE and non-Australian models
	70315701	Control Panel Harness Assembly	CE and Australian models
14	7010P	Rotation Sensor Kit	
15	70274102P	Rotation Sensor Cable Assembly	

* Add Letter To Designate Color. Q - Bisque W - White

Exterior Control Box - RE Control Suffix

C, D, H, I, S and U Models
G, K, L, P and Y Models Starting 1/16/12

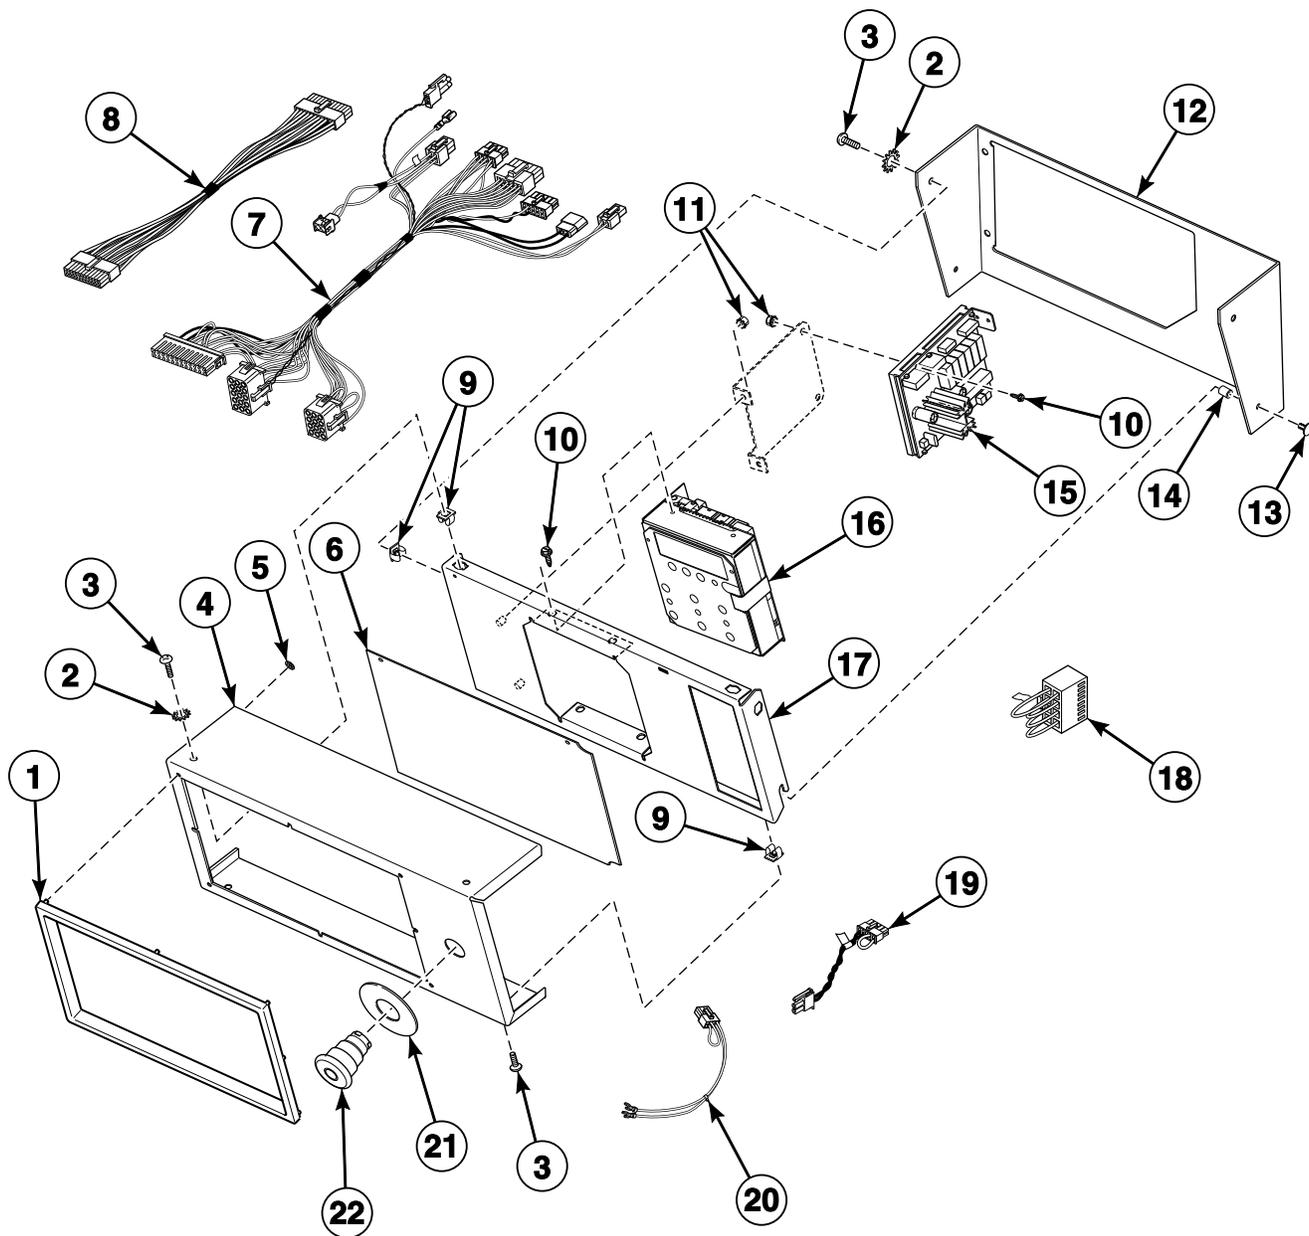

TMB3241P_70422001


Exterior Control Box - RE Control Suffix

REF	PART NO.	DESCRIPTION	COMMENTS
1	44016401	Control Trim	Black; S and U models
	44016402	Control Trim	Gray; H models
2	03815	Washer	2 required
3	800930	Screw	6 required
4	44013307*	Control Cover	Non-CE models
	44013308	Control Cover	Non-CE models; Stainless steel
	44013311*	Control Cover	CE models
	44013312	Control Cover	CE models; Stainless steel
5	M400977	Nut	
6	70445002	Overlay	S models
	70445004	Overlay	H models
	70462401	Overlay	C, D and I models
	70462701	Overlay	U models
	70462901	Overlay	G and K models
	70472401	Overlay	P models
	70472201	Overlay	L and Y models
7	44240301	Control Panel Harness	Goes from item 16 to main harness
8	44186101	Output Harness	Use between item 15 and item 16
9	70030501	Expansion Clip	6 required per control plate
10	501524	Screw	
11	70054	Nut	
12	44099501W	Control Mounting Bracket	
13	430725	Pop Rivet	2 required
14	431264	Spacer	2 required
15	70434101P	Control Assembly	
16	70454101P	Control Assembly	H, S and U models
	70437102P	Control Assembly	C, D and I models
	70437103P	Control Assembly	P models
	70437104P	Control Assembly	G and K models
	70437105P	Control Assembly	L and Y models
17	44185701	Control Plate and Studs Assembly	
18	70364103	Bypass Harness	Non-CE models
19	70324604	Jumper Calibration Wire	
20	70364106P	Emergency Stop Harness	2 contacts; CE models
21	44012901	Emergency Stop Label	CE models
22	F200233500	Emergency Stop Pushbutton	CE models

* Add Letter To Designate Color. Q - Bisque W - White

Exterior Control Box - RU Control Suffix

U Models

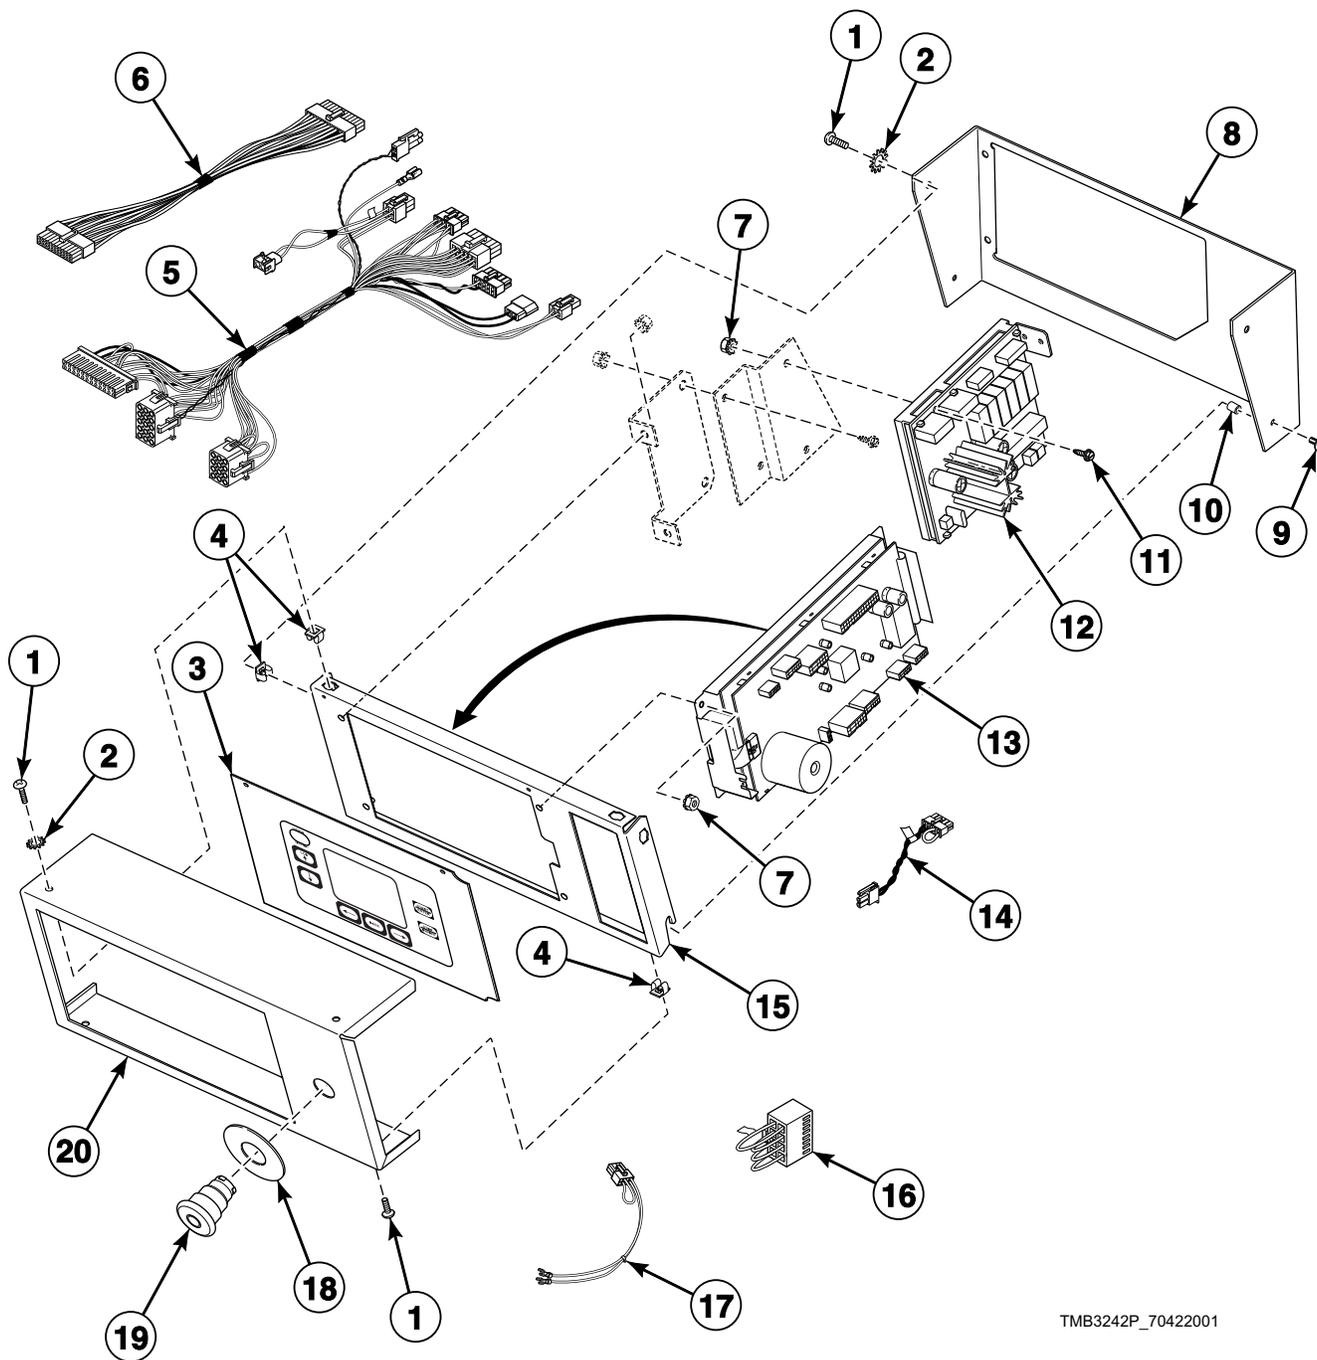

TMB3242P_70422001


Exterior Control Box - RU Control Suffix

REF	PART NO.	DESCRIPTION	COMMENTS
	NK209	Network Retrofit Kit	Wired
	NK220	Network Controller Kit	Wired
	NK309	Wireless Network Kit	Wireless
	NK320	Ethernet Gateway Kit	Wireless
	NK330	USB Gateway Kit	Wireless
1	800930	Screw	6 required
2	03815	Washer	2 required
3	70432201	Overlay	
4	70030501	Expansion Clip	6 required per control plate
5	44240301	Control Panel Harness	Goes from item 13 to main harness
6	44186101	Output Harness	Use between item 12 and item 13
7	70054	Nut	
8	44099501W	Control Mounting Bracket	
	44099502	Control Mounting Bracket	Stainless steel
9	430725	Pop Rivet	2 required
10	431264	Spacer	2 required
11	501524	Screw	
12	70434101P	Control Assembly	
13	70454001P	Control Assembly	
14	70324604	Jumper Calibration Wire	
15	44224601	Control Plate Assembly	
16	70364103	Bypass Harness	Non-CE models
17	70364106P	Emergency Stop Harness	2 contacts; CE models
18	44012901	Emergency Stop Label	CE models
19	F200233500	Emergency Stop Pushbutton	CE models
20	44013307*	Control Cover	Non-CE models
	44013308	Control Cover	Non-CE models; Stainless steel
	44013311*	Control Cover	CE models
	44013312	Control Cover	CE models; Stainless steel

* Add Letter To Designate Color. Q - Bisque W - White

Fire Suppression System Control Box

C, D, G, H, I, K, L, P, S and U Gas and Steam Models
Models Through 7/31/11 with a K, L, N, T, U or W in the 11th Character (ST120NRTF6K1W01)
Models Starting 8/1/11 with a C, D or Y in the 11th Character

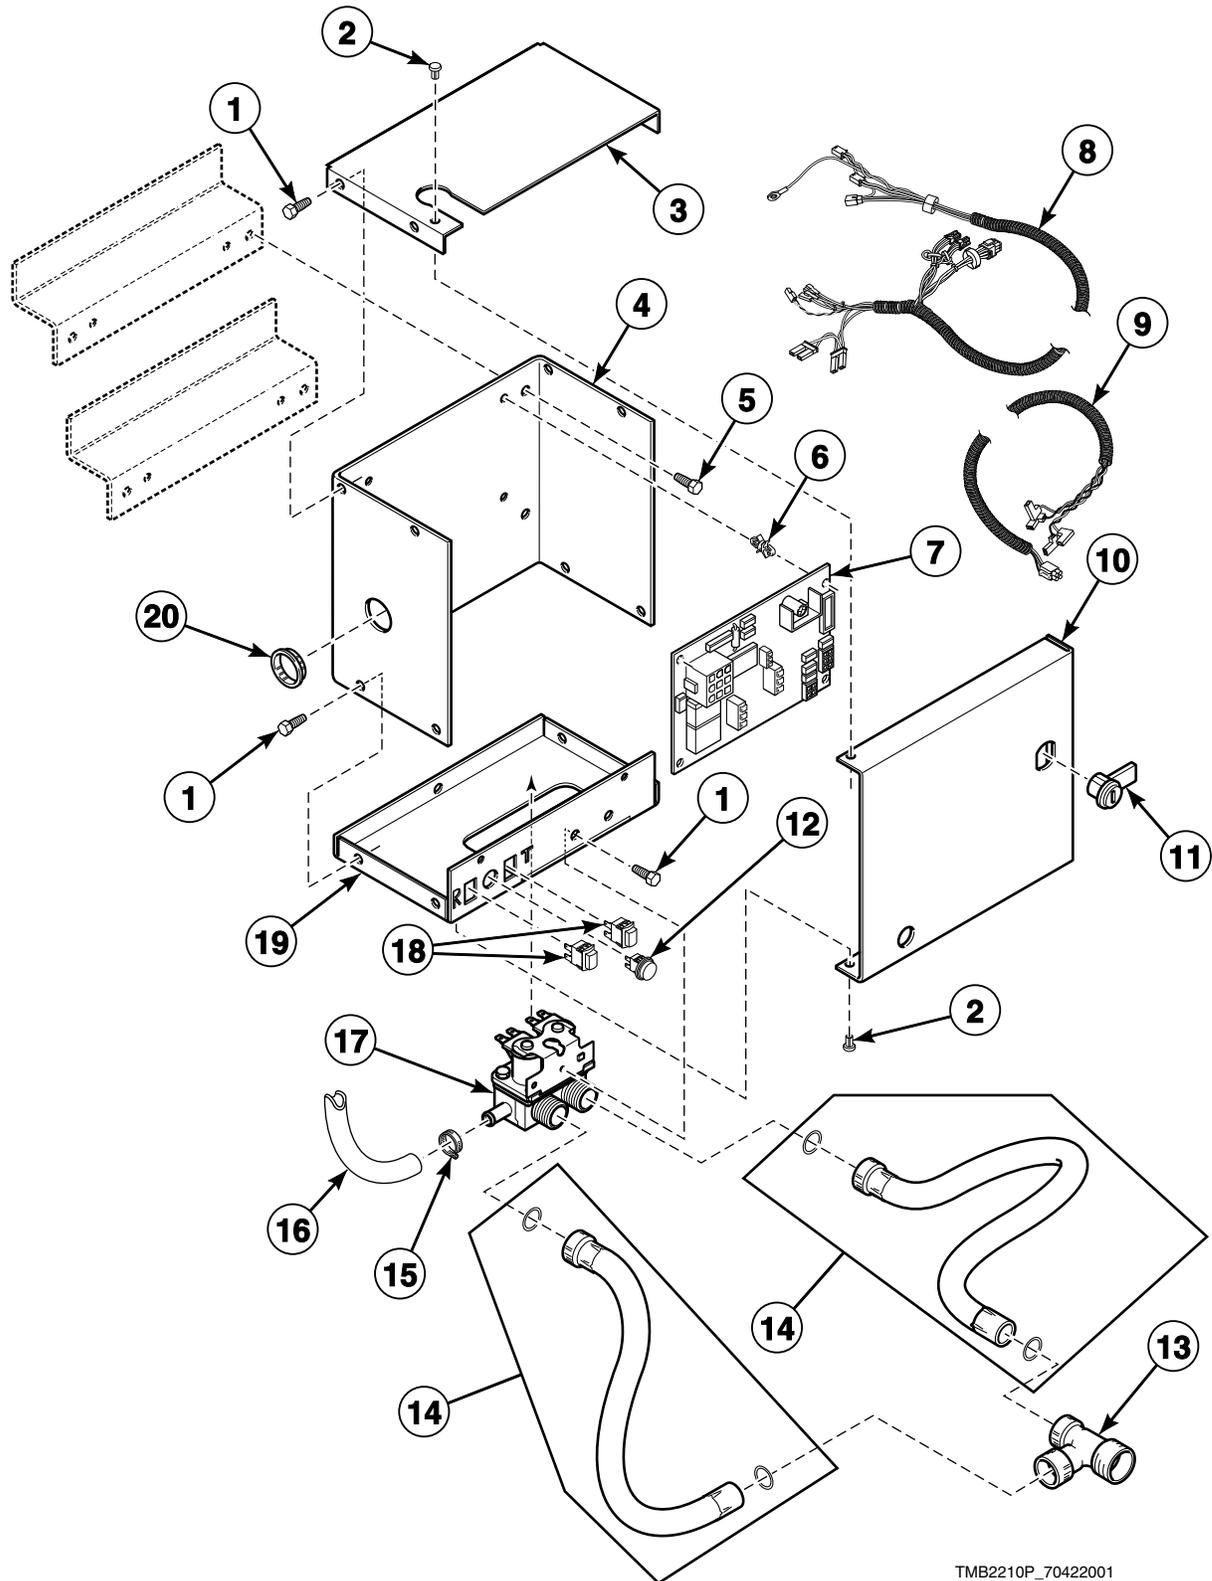


TMB2210P_70422001

Fire Suppression System Control Box

REF	PART NO.	DESCRIPTION	COMMENTS
	44079601	Manifold	Gas models
	44079602	Manifold	Steam models
1	430497	Screw	
2	M400713	Drive Rivet	
3	44065401	Control Box Top	Top
4	44065101	Control Box Housing	
5	51780	Screw	
6	501523	Circuit Board Support	4 required
7	44063801P	Control	
8	44162601	Control Harness	
9	44166801	Sensor Harness Assembly	
10	44065201	Control Box Cover	
11	44089301P	Lock, Key and Nut Kit	RL001 key code
	70155601	Key	RL001
12	801432	Light	Red
13	44069101	Hose Fitting	Non-CE and non-Australian models
14	F200116	Water Hose	2 required; Non-CE and non-Australian models
	38349P	Fill Hose Kit	CE and Australian models
15	36801	Hose Clamp	
16	44073302	Hose	21 inches; Outlet hose
17	36958P	Mixing Valve	
18	801434W	Push-to-Start Switch	2 required
19	44065301	Control Box Base	
20	70178701	Snap Bushing	

Cabinet Front Components

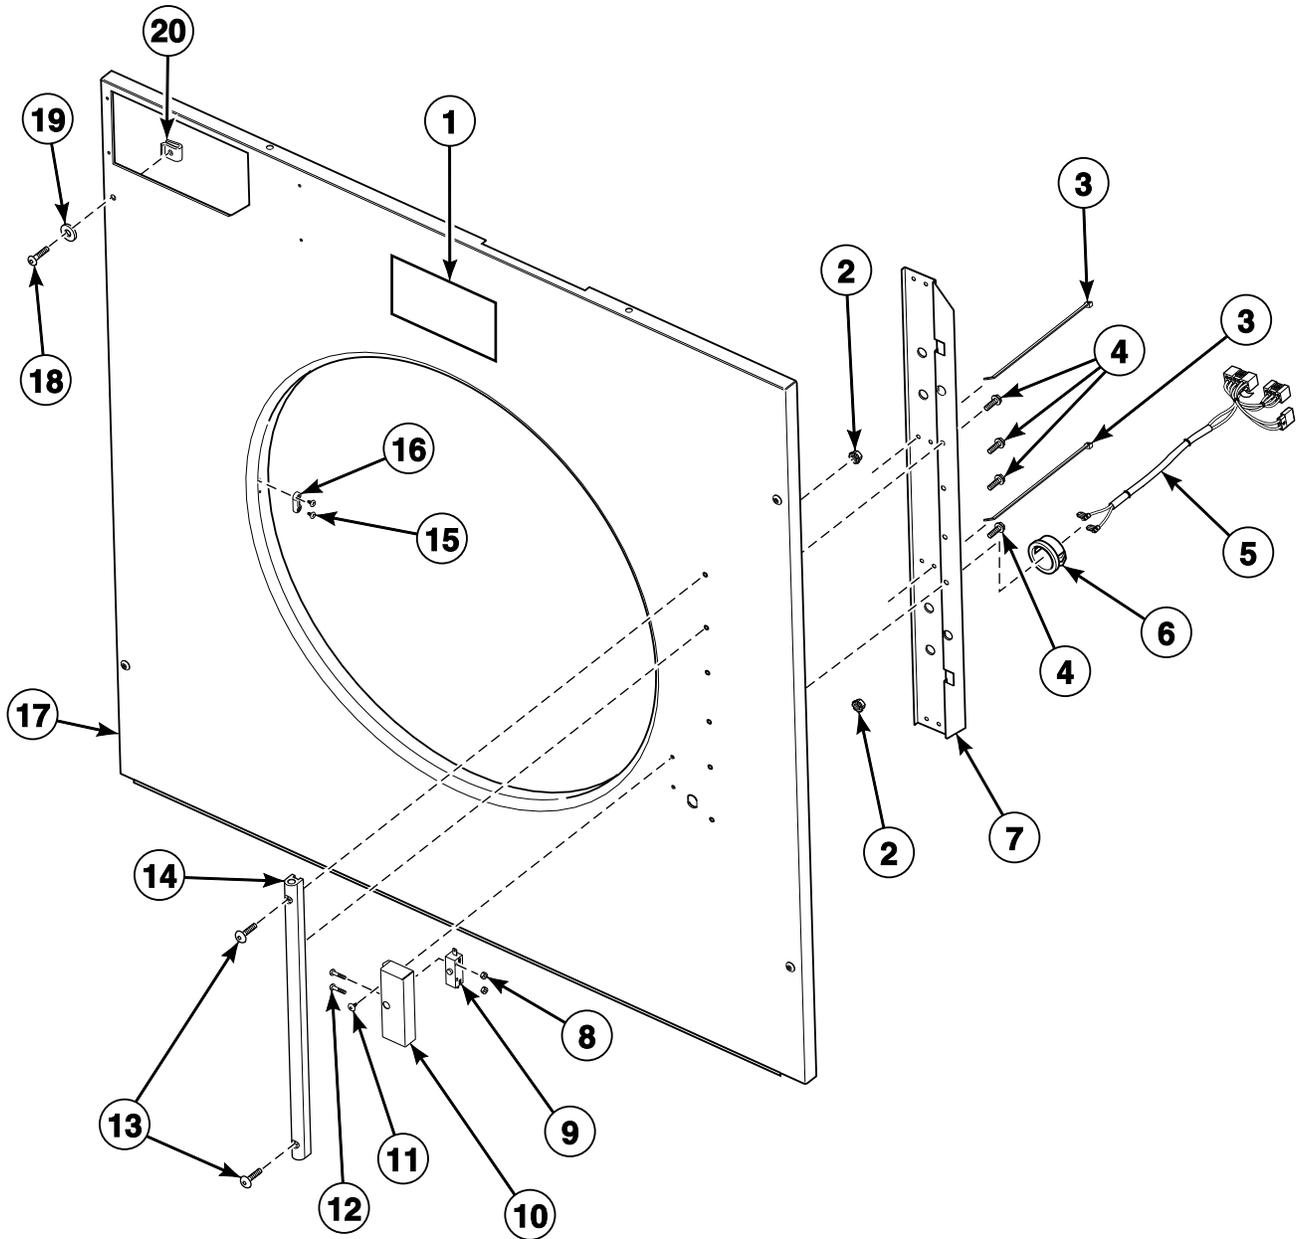


TMB3198P_70422001

Cabinet Front Components

REF	PART NO.	DESCRIPTION	COMMENTS
	298P4P	Spray Paint	White
	122P4P	Porcelain Touch-Up Paint	White
	370P4P	Porcelain Touch-Up Paint	Bisque
1	44108201	Label	C, D, H, I, S and U models
	44128901	Fire Suppression System Label	G and K models
	44190901	Label	L and P models
2	29786	Nut	2 required
3	55881	Harness Strap	2 required; Front panel harness to door switch wire channel
4	44023301	Screw	4 required
5	44162501	Door Switch Harness	
6	M400770	Snap Bushing	Required for door switch harness going through frame
7	44001801	Door Switch Wire Channel	
8	02788	Nut	2 required
9	44018201	Door Switch	
10	44001301	Door Switch Cover	
11	431287	Screw	2 required
12	M402574	Screw	2 required
13	70033504	Screw	2 required
14	44035001	Door Hinge Lug Assembly	Includes bushings
15	44166601	Pop Rivet	2 required
16	M401223	Door Latch	
17	44012401W	Front Panel	
	44012402	Front Panel	Stainless steel
18	70182601	Screw	4 required per panel
19	800465	Washer	4 required per panel
20	70030401	Nut	Access and front panel attachment

Cabinet Front Panels and Nameplates

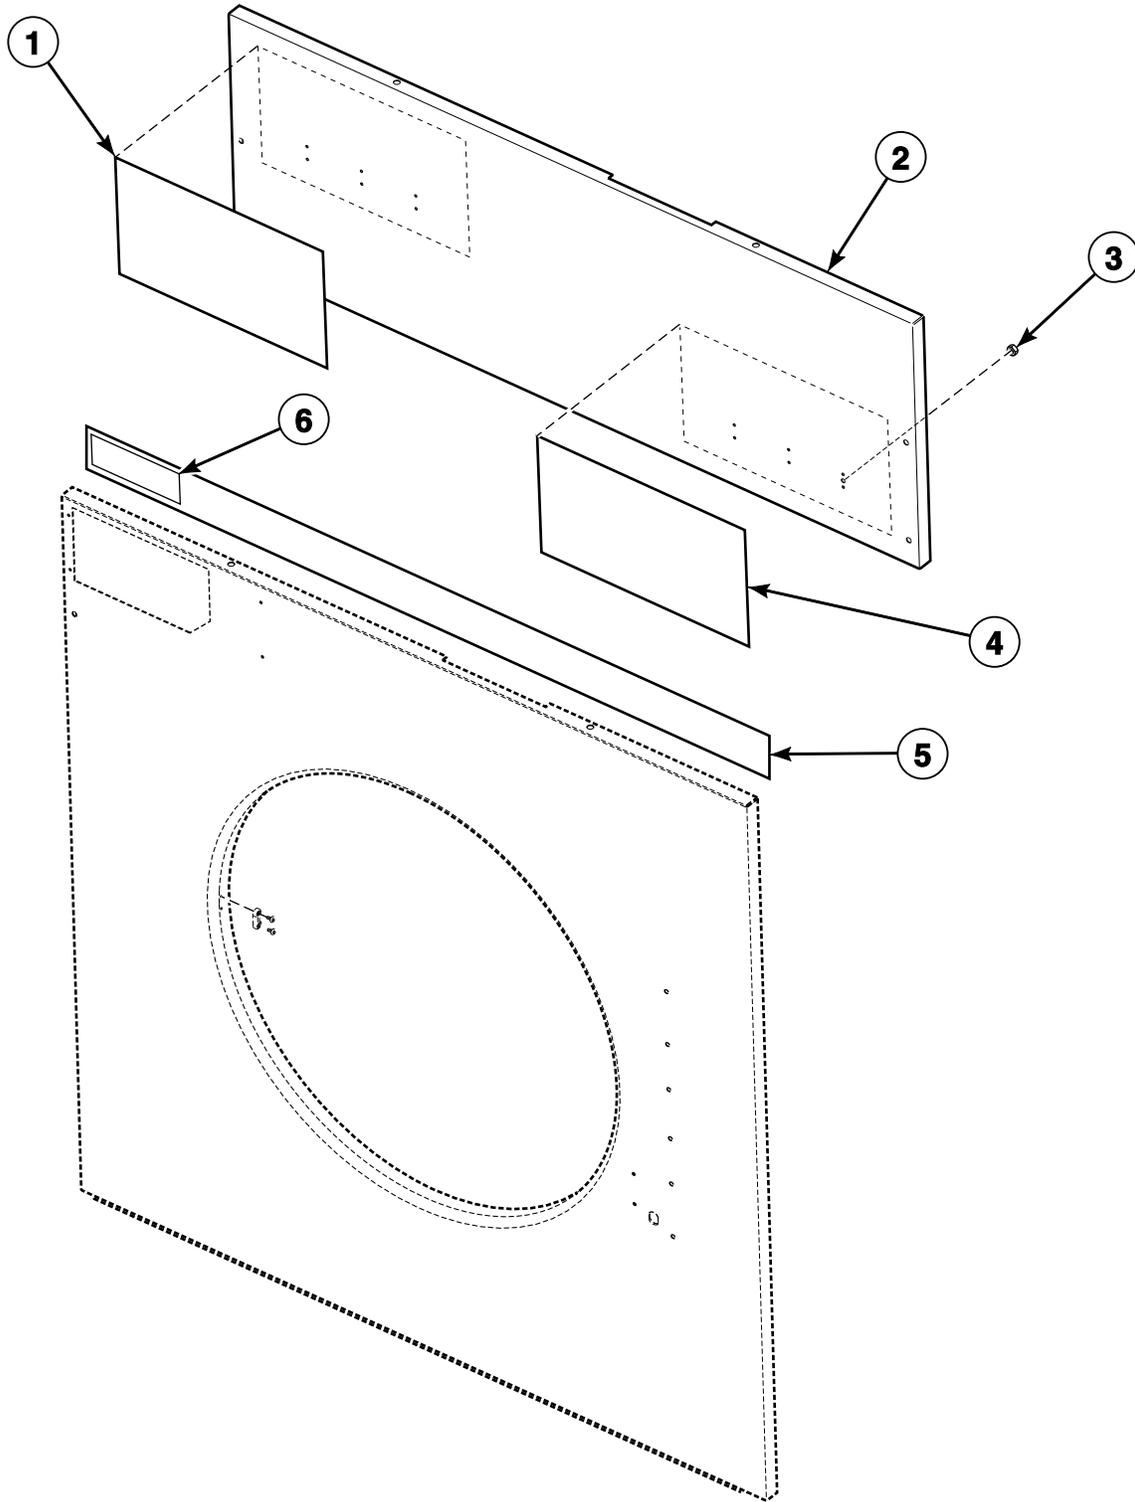


TMB3199P_70422001

Cabinet Front Panels and Nameplates

REF	PART NO.	DESCRIPTION	COMMENTS
	M4786P3	Front Access Panel and Door Hinge Kit	D and I models; To change from old look to new look
1	70348501	Nameplate	C models
	B12389801	Nameplate	D and I models
2	44012601*	Access Panel	L and P models
	44012602	Access Panel	L, PK, PT, PU and XT models; Stainless steel
	44012607*P	Front Access Panel	C, G, H, K, L, P, S, U and Y models; D CE models through 7/31/11; I models through 7/31/11
	44012609B	Front Access Panel	D and I models starting 8/1/11
	44012608	Front Access Panel	CK, CT, HK, HT, SK, ST and UK, UT models; I models through 7/31/11; Stainless steel
3	M400977	Nut	L and P models; For access panel trim; 2 required
4	44010401	Nameplate	H models
	44010601	Nameplate	S models
	44235401	Nameplate Overlay	U models
	70128901	Nameplate Overlay	P models
	70243901	Nameplate	L models
	70410201	Nameplate Overlay	G models
	44130401	Nameplate Overlay	K models
	44035801	Nameplate	X models
	44104501	Nameplate Overlay	Y models
5	70399403	Access Panel Trim	G and K models; Mounts over front panel assembly and control panel
6	70414001	Label	G and K models; Coin

* Add Letter To Designate Color. Q - Bisque W - White

Door and Hinge Components

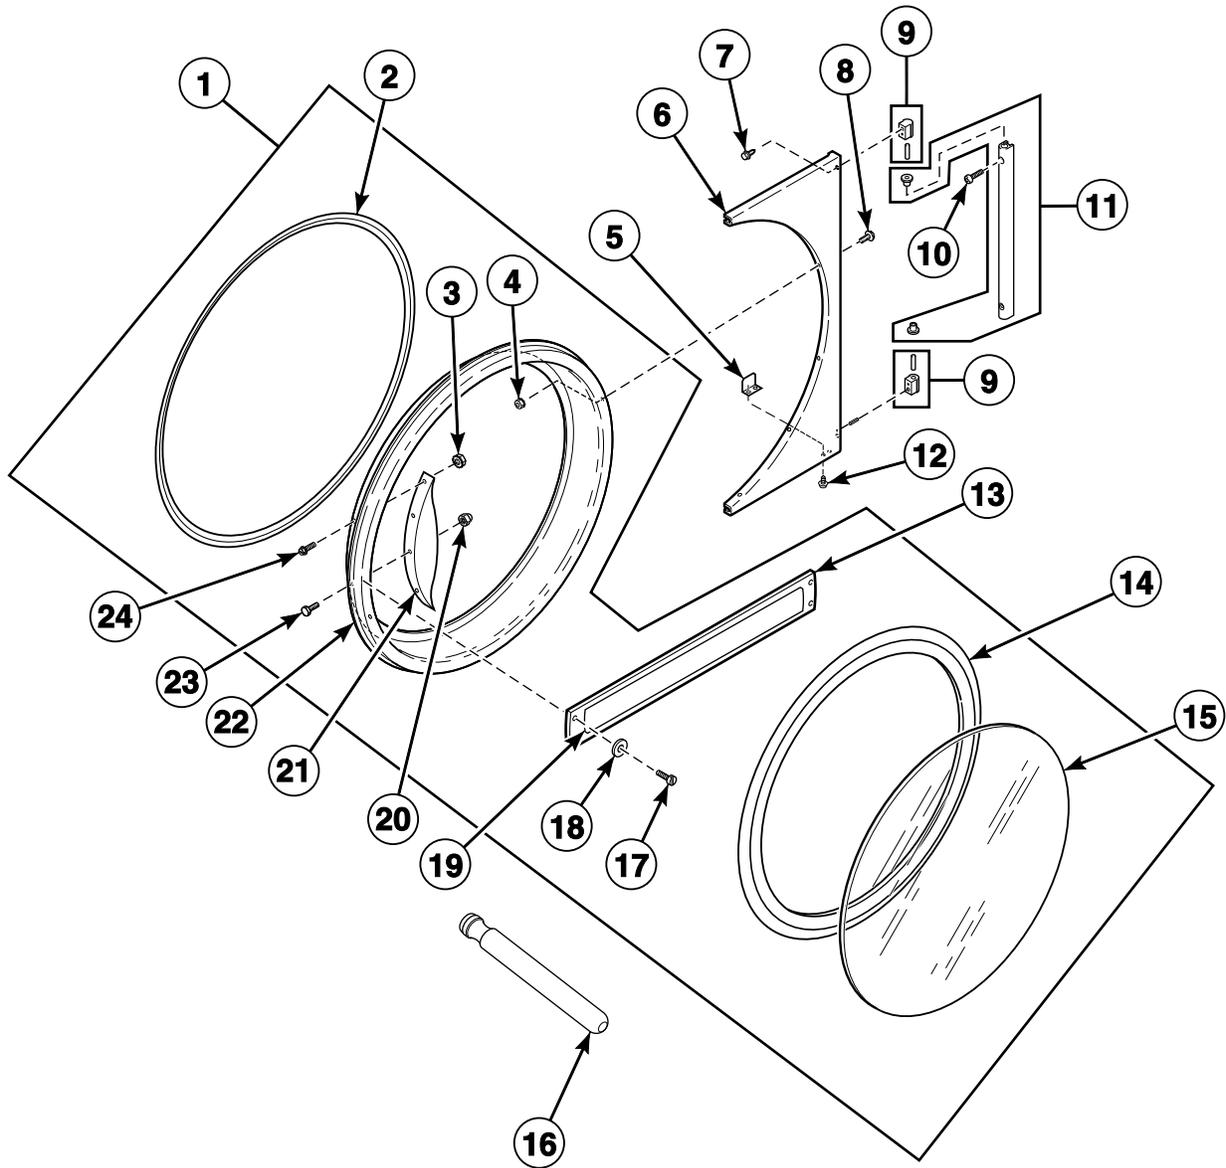


TMB3091P_70422001

Door and Hinge Components

REF	PART NO.	DESCRIPTION	COMMENTS
	M4786P3	Front Access Panel and Door Hinge Kit	D and I models; To change from old look to new look
1	44058102P	Door Assembly	H models
	44028902P	Door Assembly	S and U models
	44112101	Door Assembly	C, D and I models through 7/31/11
	44028904	Door Assembly	C, D and I models starting 8/1/11
	44029101	Door Assembly	L, P, X and Y models
	70407401	Door Assembly	G and K models
2	44008201P	Door Ring Gasket	
3	44071201	Nut	H, S and U models; 4 required
4	23951	Nut	6 required
5	70215001P	Door Switch Actuator Kit	
6	44075207B	Door Hinge	G and K models; D and I models starting 8/1/11
	44075201*	Door Hinge Assembly	H, L, P, S, U and Y models; C models starting 8/1/11
	44075202	Door Hinge Assembly	C, H, L, P, S, U and Y models; D and I models through 7/31/11; Stainless steel
7	70442101	Screw	3 required
8	M400044	Screw	6 required
9	M4773P3	Cam and Hinge Kit	G and K models; D and I models starting 8/1/11
	M4772P3	Cam and Hinge Kit	C, H, L, P, S, U and Y models; D and I models through 7/31/11
10	70409801	Screw	G and K models; D and I models starting 8/1/11; 2 required
	70033504	Screw	C, H, L, P, S, U and Y models; D and I models through 7/31/11; 2 required
11	44035002	Door Hinge Lug Assembly	G and K models; D and I models starting 8/1/11
	44035001	Door Hinge Lug Assembly	C, H, L, P, S, U and Y models; D and I models through 7/31/11
12	70058501	Pop Rivet	2 required
13	70399501B	Handle Bar	G and K models
14	70211902P	Door Seal Kit	Use Loctite 414 for seal
15	44008402P	Door Glass	H models
	44008401P	Door Glass	All other models
16	M4221P4	Door Glass Installation Tool	
17	70126301	Pop Rivet	G and K models; 4 required
18	70409301	Washer	G and K models; 2 required
19	70411401	Nameplate Overlay	G models; Coin
	44144401	Nameplate Overlay	K models; Coin
20	M414215	Nut	
21	44057702	Door Handle	H models
	44007901	Door Handle	S and U models; C, D and I models starting 8/1/11
22	44007702	Door Ring Assembly	H, L, P, S and U models
	44112001	Door Ring and Handle Assembly	C, D and I models through 7/31/11
	44007704B	Door Ring	C, D and I models starting 8/1/11
	44007703B	Door Ring	G and K models
23	M400661	Screw	Door strike
24	61199	Screw	H, S and U models; 4 required

* Add Letter To Designate Color. Q - Bisque W - White

Lint Panel Components

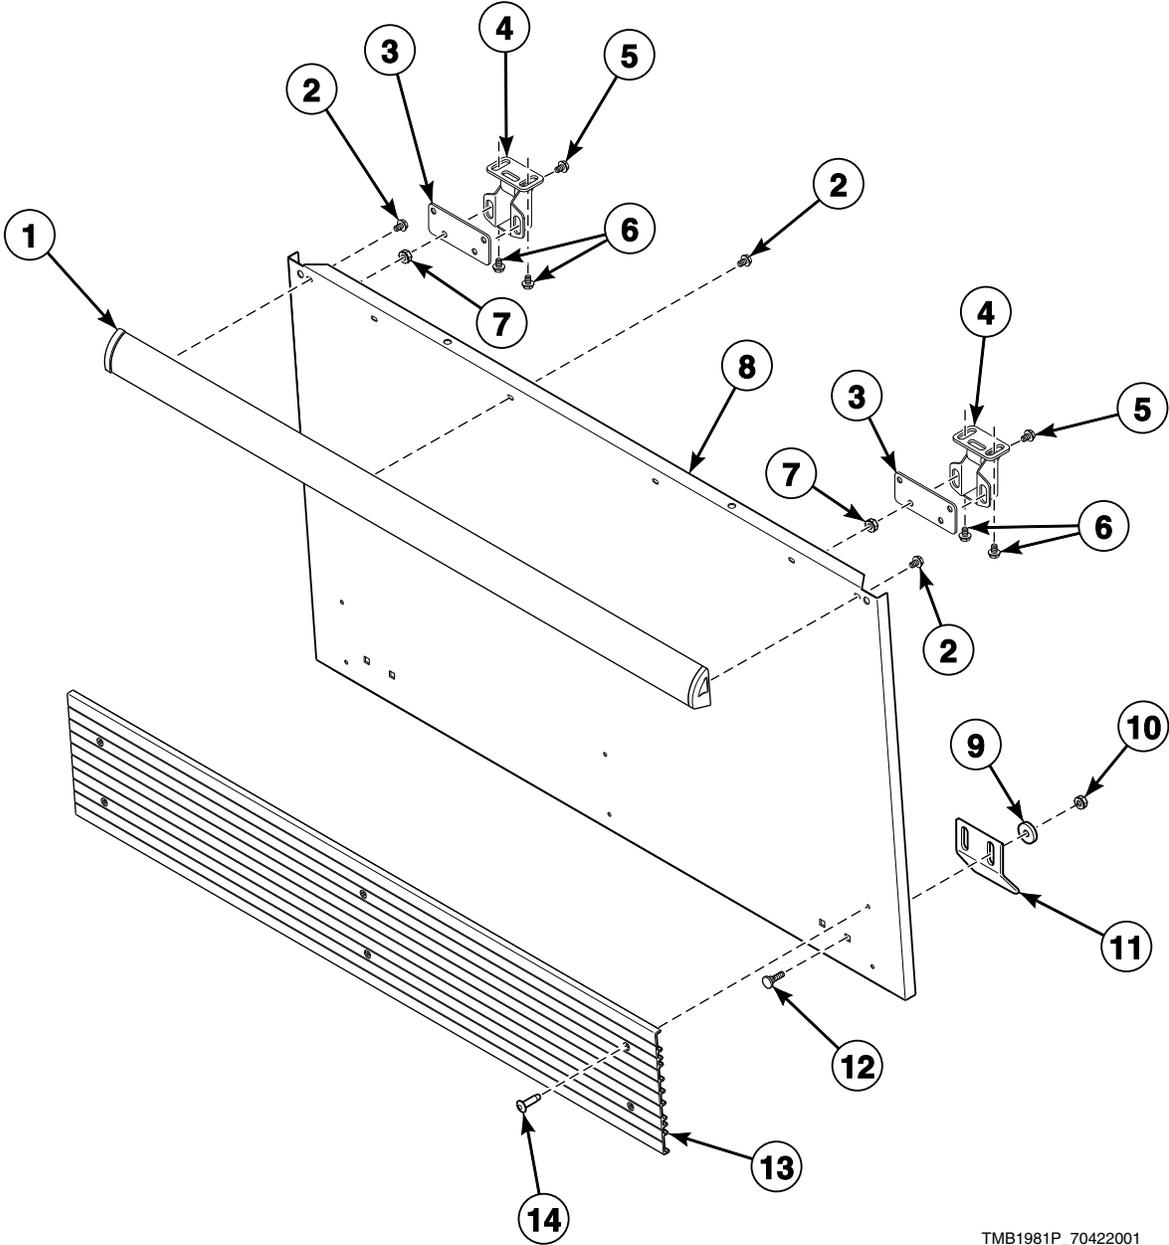


TMB1981P_70422001

Lint Panel Components

REF	PART NO.	DESCRIPTION	COMMENTS
1	44049901	Handle and Caps Assembly	C, D, I, L, P, S, U, X and Y models; Black; Includes endcaps
	44049902	Handle and Caps Assembly	H models; Gray; Includes endcaps
	70407203	Handle Bumper	G and K models; Black and blue; Does not have endcaps
2	430757	Screw	6 required
3	44014001	Roller Catch Mounting Bracket	2 required
4	H87020202	Roller Catch	2 required; Includes strike
5	61199	Screw	8 required
6	501086	Screw	4 required
7	70054	Nut	8 required
8	44012201W	Lint Panel	
	44012202	Lint Panel	Stainless steel
9	M405535	Washer	4 required
10	44087101	Nut	4 required
11	44017801	Lint Panel Clip	2 required
12	44017901	Bolt	4 required
13	70117609	Kickplate	C, D, G, I, K, L, P, S, U, X and Y models; Black
	70117610	Kickplate	H models; Gray
14	70126301	Pop Rivet	C, D, G, I, K, L, P, S, U, X and Y models; Black; 6 required
	70126401	Pop Rivet	H models; Gray; 6 required

* Add Letter To Designate Color. Q - Bisque W - White

Lint Panel Switch Assembly

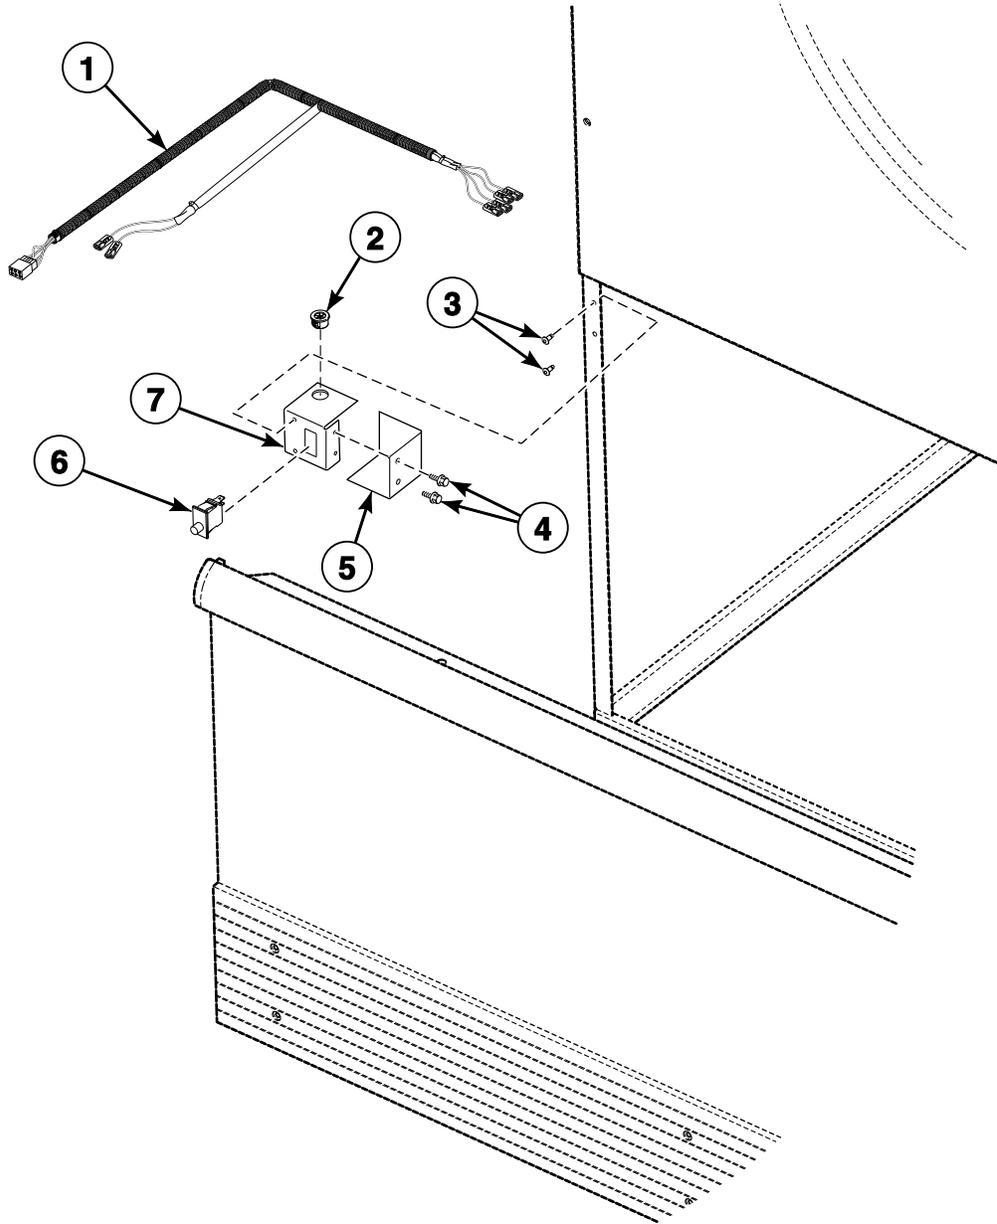


TMB2992P_70422001

Lint Panel Switch Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
1	44162701	Base Harness	
2	M411537	Bushing	
3	430725	Pop Rivet	2 required
4	430497	Screw	2 required
5	44026801	Lint Panel Switch Cover	
6	70413401	Switch Assembly	With boot
7	44013401	Lint Panel Switch Bracket	

Lint Screen and Drive Guard

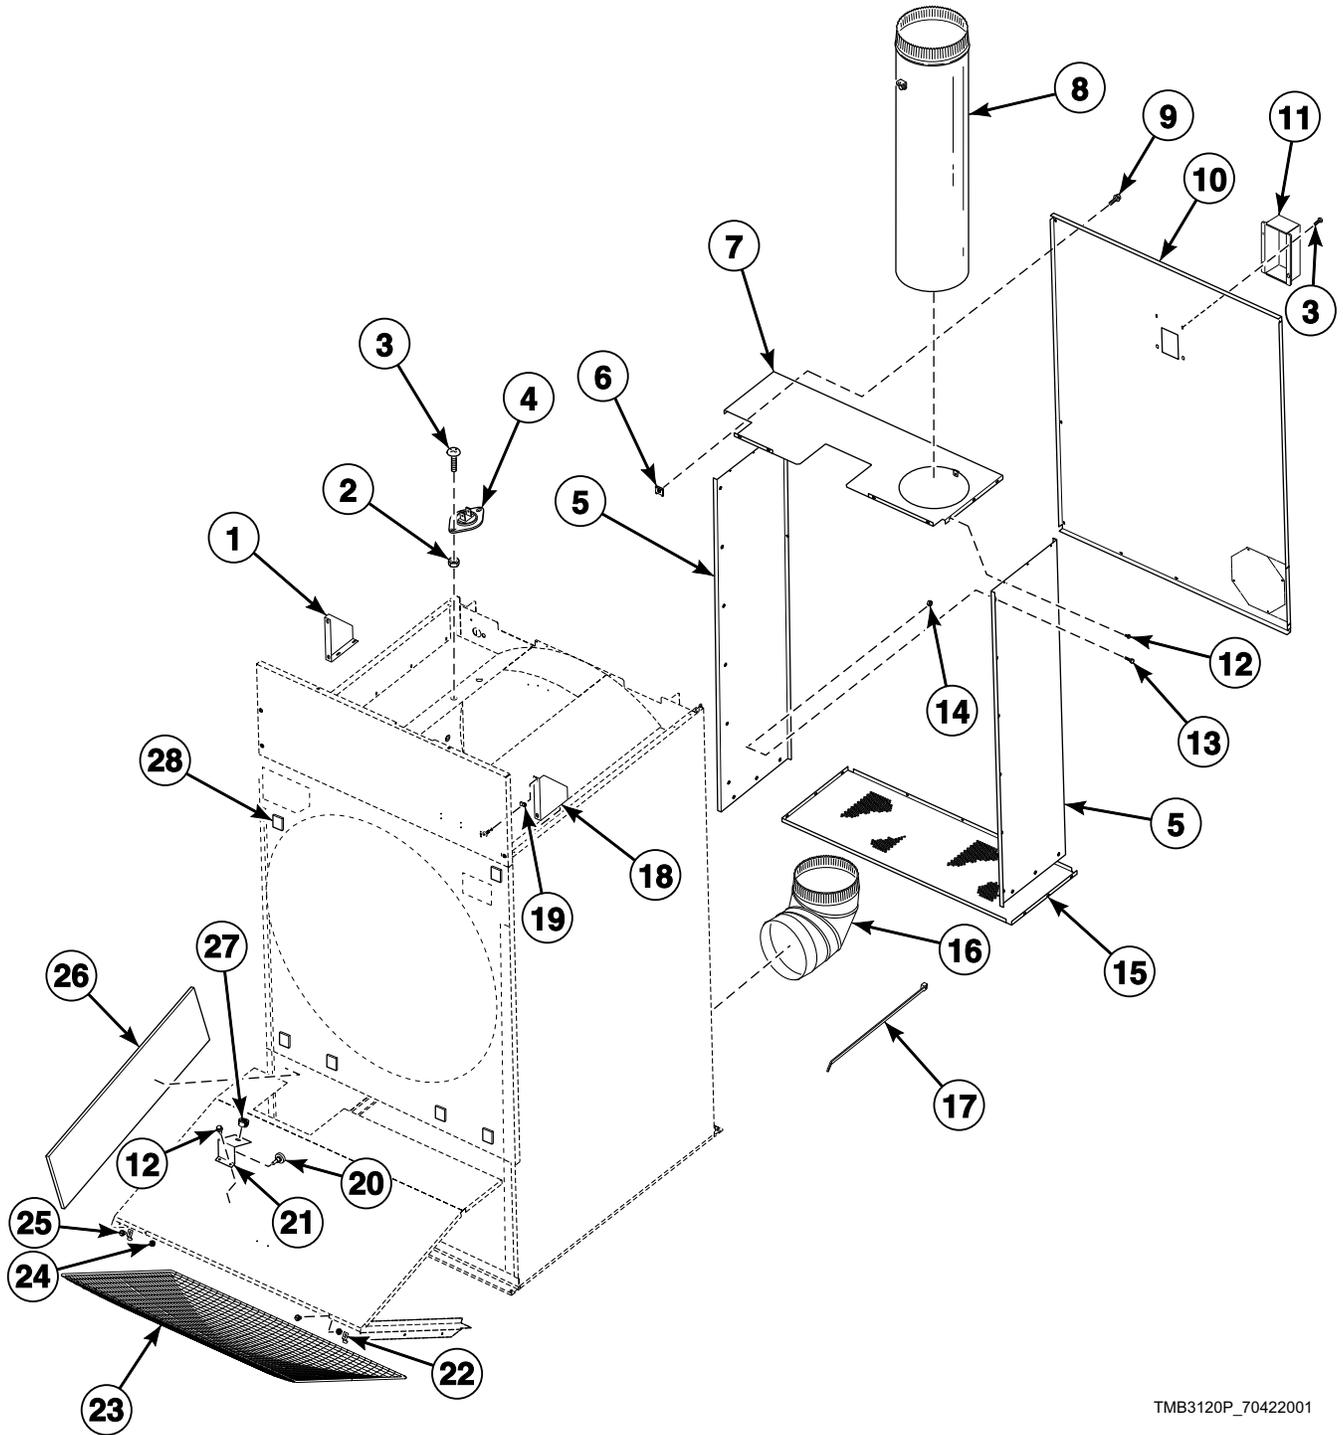


TMB3120P_70422001

Lint Screen and Drive Guard

REF	PART NO.	DESCRIPTION	COMMENTS
1	44028202*	Top Access Panel Gusset	Left
2	23951	Nut	
3	430497	Screw	
4	44064701	Thermistor	2 required; For fire suppression system
5	44160201	Belt Guard	Side; 2 required; Use 70015709 Gasket on edges
6	M400984	Clip	
7	44160401	Belt Guard	Top
8	M411185	Vent Pipe	Gas models; Models through 12/31/09
	M411187	Vent Pipe	Steam models; Gas and electric models starting 1/1/10
9	M411072	Screw	
10	44160301P	Belt Guard	Back; Non-moisture sensing
	44160302	Belt Guard	Back; Moisture sensing
11	44222501	Guard Extension	Moisture sensing
12	430497	Screw	
13	M400043	Screw	
14	20274	Nut	
15	44160501	Belt Guard	Bottom
16	H87494019	Vent Elbow	
17	M405829	Cable Tie	Required for thermistor harness
18	44028201*	Top Access Panel Gusset	Right
19	70030401	Nut	For access panel and front panel attachment
20	M414704	Thermistor	
21	44051301	Thermistor Bracket Assembly	Includes bracket and thermistor nut
22	H96418413	Lint Screen Clip	
23	44063602	Lint Screen	Includes frame
	44077702P	Lint Screen	Includes snaps; Frame not included
24	70054	Nut	
25	61199	Screw	
26	M411593	Insulation	
27	M411537	Bushing	2 required for thermistor harness and cabinet rear
28	M402144	Felt Pad	6 required; Behind front panel

* Add Letter To Designate Color. Q - Bisque W - White

Cylinder and Trunnion Assembly

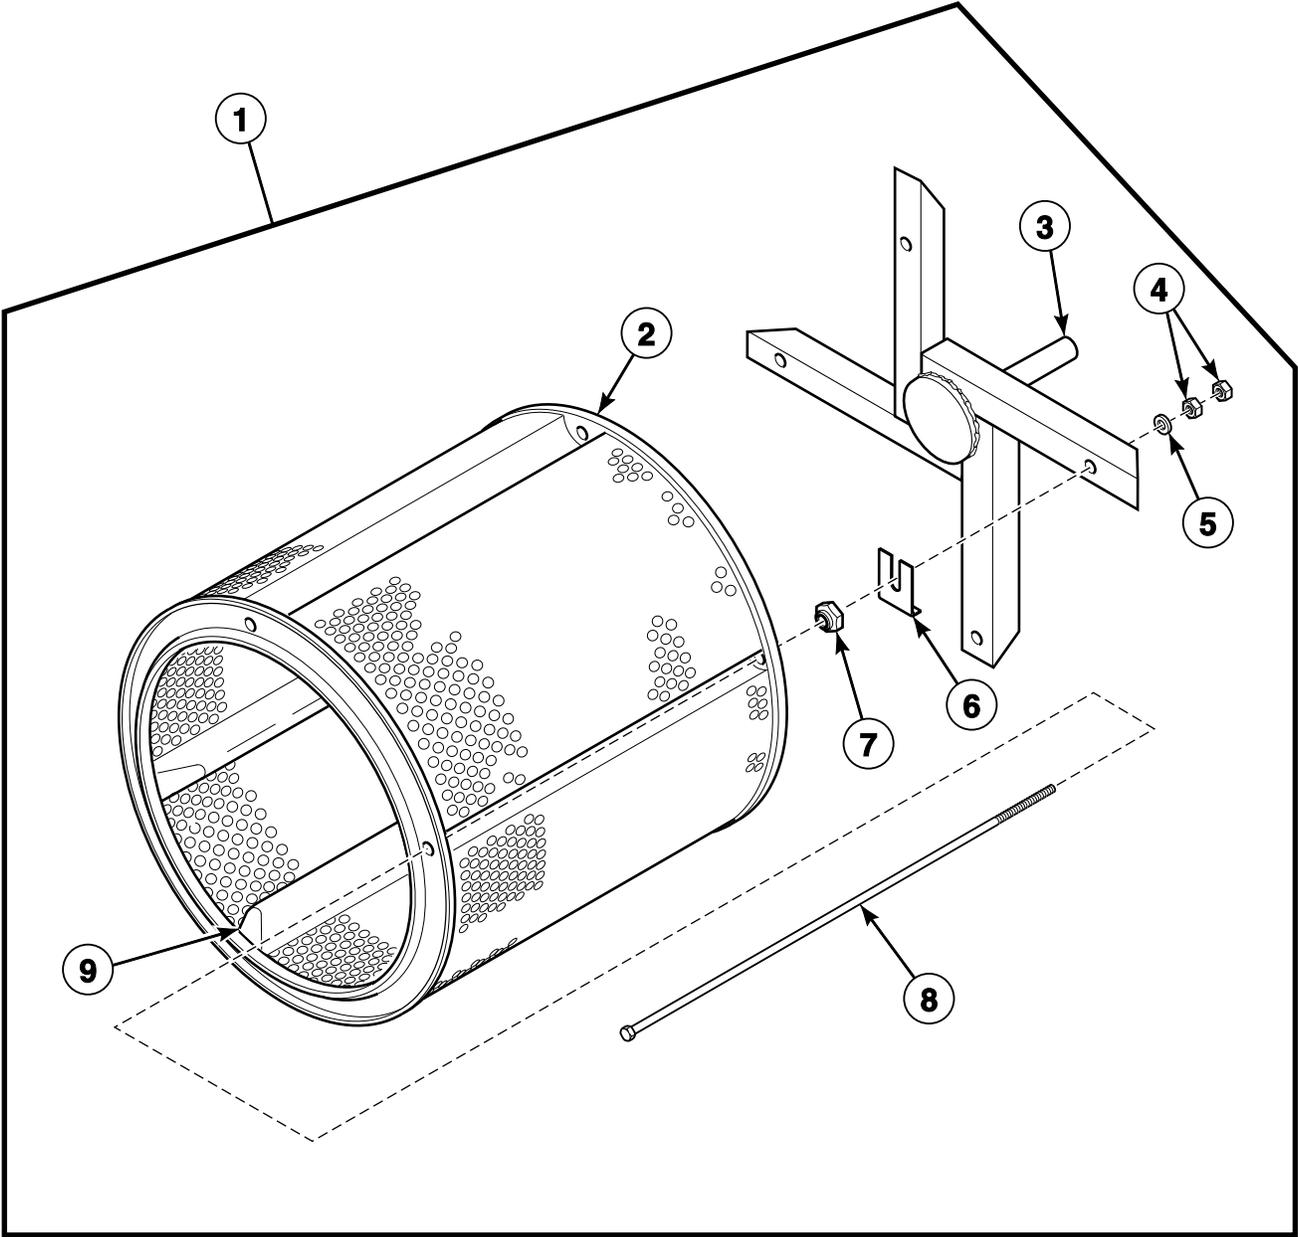


TMB1811B_70422001

Cylinder and Trunnion Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	44208101	Rib Wire	Moisture sensing
	44208201	Shaft Wire	Moisture sensing
1	44054801	Cylinder and Trunnion Assembly	Galvanized; Non-moisture sensing
	44194101	Cylinder and Trunnion Assembly	Galvanized; Moisture sensing
	44054802	Cylinder and Trunnion Assembly	Stainless steel; Non-moisture sensing
	44194102	Cylinder and Trunnion Assembly	Stainless steel; Moisture sensing
2	H96427513	Cylinder Assembly	Galvanized; Includes items 4 and 8; Non-moisture sensing
	44193301	Cylinder Assembly	Galvanized; Moisture sensing
	M409788	Cylinder Assembly	Stainless steel; Includes items 4 and 8; Non-moisture sensing
	44193302	Cylinder Assembly	Stainless steel; Moisture sensing
3	44055501	Trunnion Assembly	Non-moisture sensing
	44055502	Trunnion Assembly	Moisture sensing
4	H88412101	Nut	8 required
5	70261401	Washer	4 required
6	M401402	Spacer	As required
7	M412334	Nut	4 required
8	H88301411	Bolt	4 required
9	44191203	Cylinder Rib Assembly	Moisture sensing

Trunnion Bearings

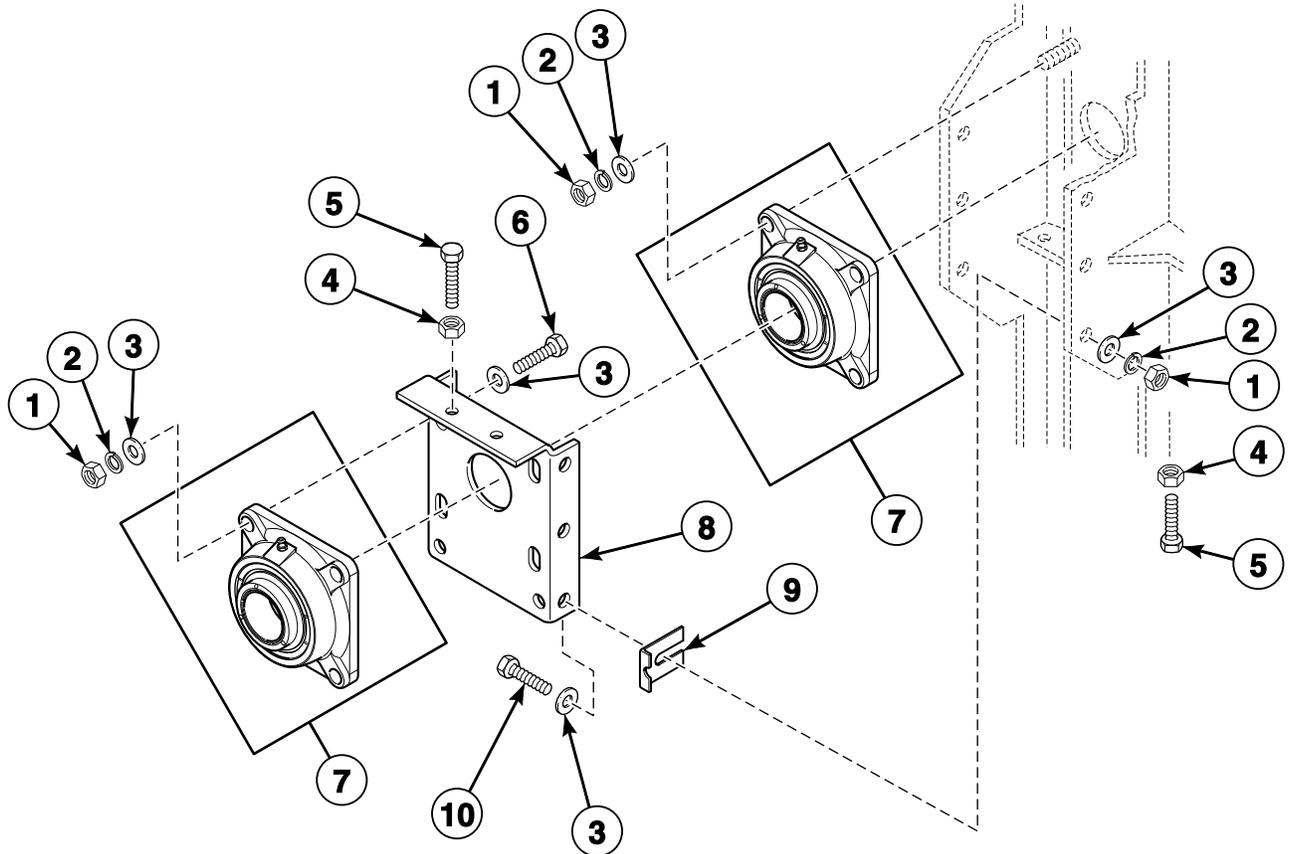


TMB3251P_70422001

Trunnion Bearings

REF	PART NO.	DESCRIPTION	COMMENTS
1	H88412101	Nut	
2	91200	Washer	
3	70261401	Washer	
4	20274	Nut	
5	H88213996	Screw	
6	M411165	Screw	
7	44048301P	Flange Bearing	
8	H96428008	Bearing Mounting	
9	M401402	Spacer	As required
10	H88012034	Screw	

Drive Sheave, Step Pulley and Belts

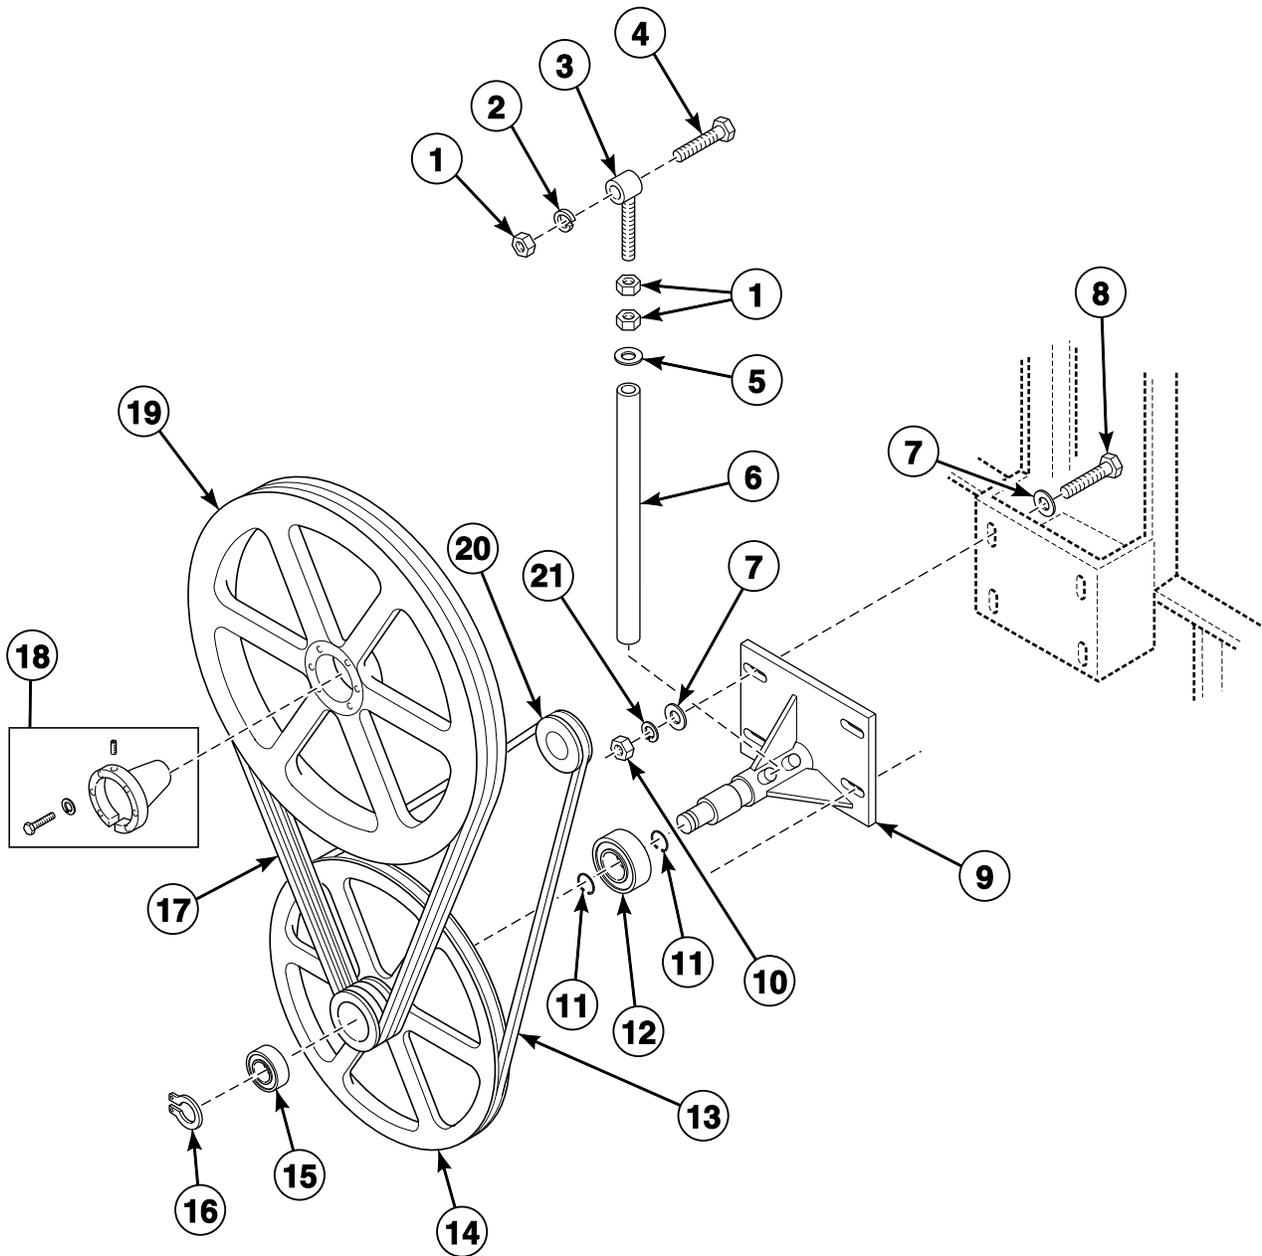


TMB2585P_70422001

Drive Sheave, Step Pulley and Belts

REF	PART NO.	DESCRIPTION	COMMENTS
1	H88412101	Nut	
2	M400015	Washer	
3	44048501	Rod End	Eyebolt assembly
4	M400063	Screw	
5	70261401	Washer	
6	H96428487	Belt Adjustment Tube	
7	M400081	Washer	8 required
8	22688	Screw	4 required
9	H96357751	Jackshaft Assembly	
10	20274	Nut	4 required
11	H88603477	Retaining Ring	Step pulley bearings stops; 2 required
12	H87672374	Ball Bearing	Inner; Step pulley
13	H87533014	Belt	
14	M4696P3	Step Pulley and Bearing Kit	Includes H96428024 Step Pulley, M414321 Spacer, M4718P3 Step Pulley Outer Bearing Kit and items 11, 12 and 15
15	M414367	Ball Bearing	Outer
16	H88602263	Retaining Ring	Step pulley to jackshaft
17	H87533816P	Belt Set	Set of 3
18	H8752985HP	Bushing	Includes M400014 Washer, 44048902 Screw and 44079204 Screw
19	H8752251H	Sheave	
20	H87520334	Sheave	50 Hertz; 3.35 inch OD
	H87520466	Sheave	60 Hertz; 4.12 inch OD
21	M400014	Washer	4 required

Cylinder Drive Motor

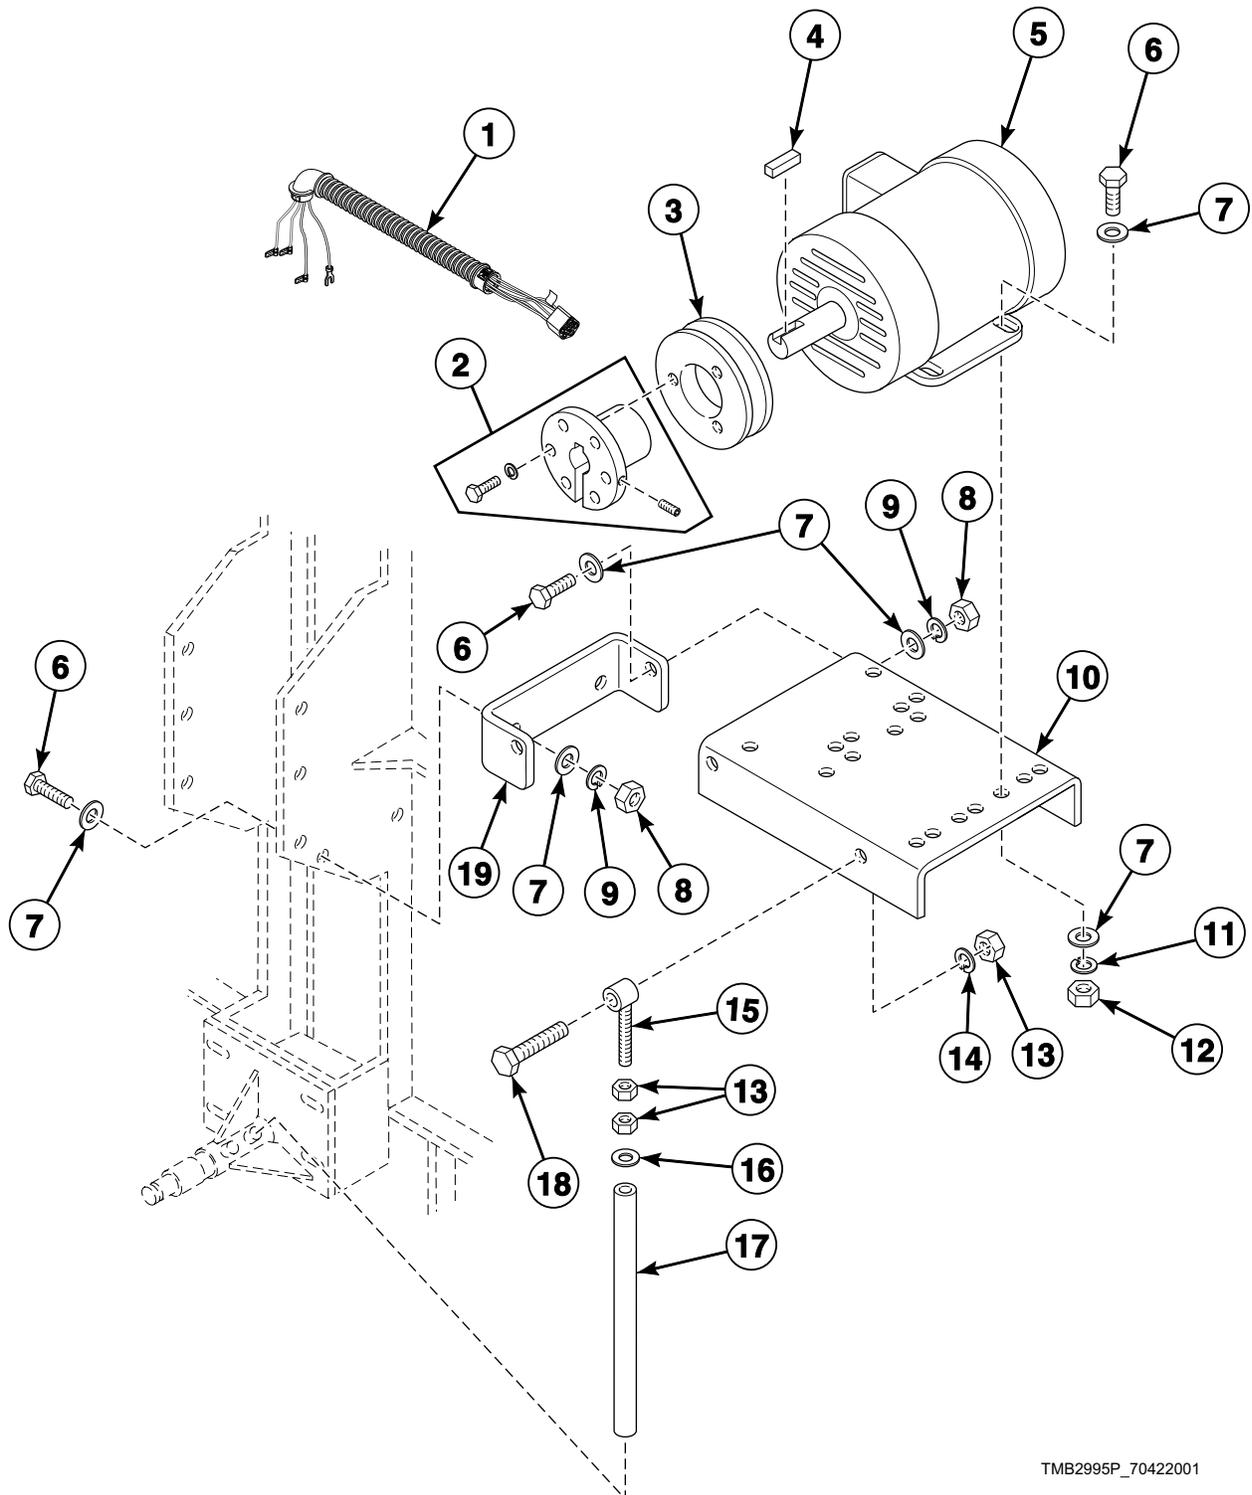


TMB2995P_70422001

Cylinder Drive Motor

REF	PART NO.	DESCRIPTION	COMMENTS
1	44162901	Cylinder Motor Harness	
2	H87529129P	Bushing	60 Hertz; Includes 44079301 Screw, 44048901 Screw and 56552 Washer; Key not included
	H87529111P	Bushing	50 Hertz; Includes 44079301 Screw, 44048901 Screw and 56552 Washer; Key not included
3	H87520466	Sheave	60 Hertz; 4.12 inch OD
	H87520334	Sheave	50 Hertz; 3.35 inch OD
4	H8752006H	Key	
5	44052901P	Motor	208-460 Volt/60 Hertz/3 Phase; Includes key; No capacitor
	44053001P	Motor	200-415 Volt/50 Hertz/3 Phase; Includes key; No capacitor
	44157601	Motor	380 Volt/60 Hertz/3 Phase; Includes key; No capacitor
6	M400056	Screw	
7	M400080	Washer	
8	M412986	Nut	
9	M400014	Washer	
10	M413171	Motor Base	
11	M400013	Washer	
12	70142	Nut	
13	H88412101	Nut	
14	M400015	Washer	
15	44048501	Rod End	Eyebolt assembly
16	70261401	Washer	
17	H96428487	Belt Adjustment Tube	
18	M400063	Screw	
19	H96428693	Base Bracket	

Moisture Sensing Components

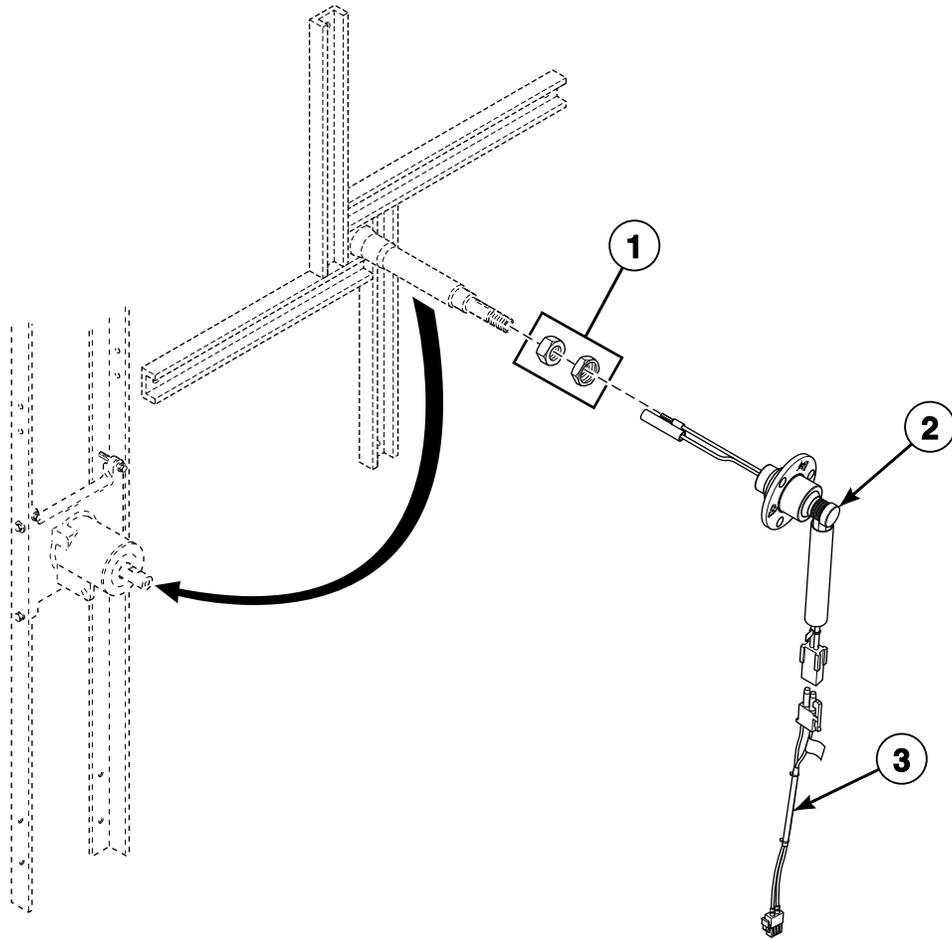


TMB3153P_70422001

Moisture Sensing Components

REF	PART NO.	DESCRIPTION	COMMENTS
	70468901	Moisture Sensor Test Wires	Use to troubleshoot the moisture sensor circuit
1	M400035	Nut	
2	44240201	Slip Ring Assembly	
3	44209201	Moisture Sensor Harness Assembly	Goes from item 2 to main harness

Fan Assembly - 50 Hertz Models

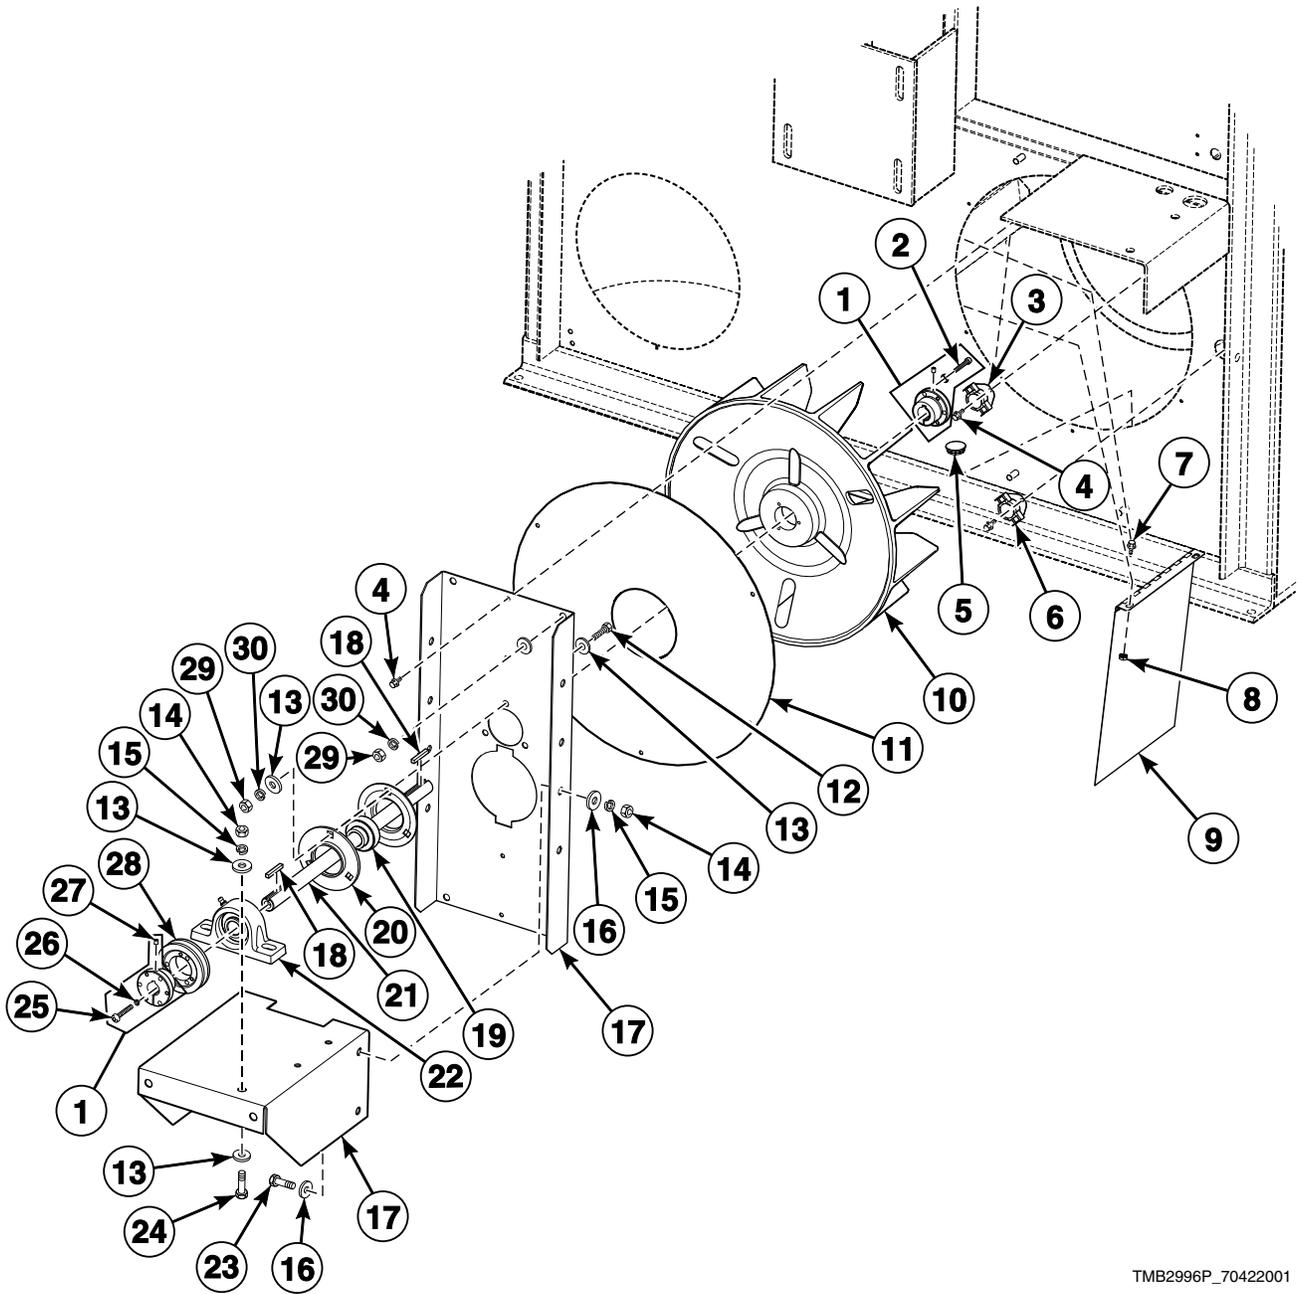

TMB2996P_70422001


Fan Assembly - 50 Hertz Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	M412917P	Bushing	2 required; Includes screws and washers; Key not included
2	H8800901H	Screw	3 required
3	44237401	Thermostat	Non-CE and non-Australian gas models and all electric and steam models
	44232601	Thermostat	CE and Australian gas models; Manual reset
4	430497	Screw	
5	M400985	Plug	
6	H8900530H	Thermostat	Load ready
7	61199	Screw	
8	70054	Nut	
9	M409967	Damper Assembly	
10	M414546	Fan and Bushing Assembly	Discard bushing on 50 Hertz models
11	H96358007	Blower Cover	
12	M400056	Screw	3 required
13	M400080	Washer	10 required
14	20274	Nut	6 required
15	M400014	Washer	4 required
16	M400081	Washer	8 required
17	H608P3	Blower Motor Base Kit	
18	H8752006H	Key	2 required
19	H8768212H	Ball Bearing Insert	
20	H8768302H	Bearing Mounting Flangette	2 required
21	M412000	Blower Shaft	
22	44104801	Ball Bearing	
23	M400043	Screw	4 required
24	22688	Screw	2 required
25	44079301	Screw	3 required
26	56552	Washer	6 required
27	44048901	Screw	
28	H87520284	Sheave	2.8 inch OD
29	70142	Nut	3 required
30	M400013	Washer	3 required

Fan Motor Assembly - 50 Hertz Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	M400080	Washer	
2	M400043	Screw	
3	H608P3	Blower Motor Base Kit	Bracket
4	20274	Nut	
5	M400014	Washer	
6	H96428628	Motor Adjustment Tube	
7	70261401	Washer	
8	H88412101	Nut	
9	44048501	Rod End	Eyebolt assembly; Belt adjuster
10	H88412093	Nut	
11	M400015	Washer	
12	H8753170H	Belt	
13	44079301	Screw	3 required
14	H87529111P	Bushing	Includes screws and washers; Key not included
15	56552	Washer	3 required
16	44242601	Fan Motor Harness	
17	H87520334	Sheave	3.35 inch OD
18	44046401P	Fan Motor	200, 240, 380 and 415 Volt; No capacitor
19	M400056	Screw	
20	M413171	Motor Base	
21	M400081	Washer	
22	H96428693	Base Bracket	
23	22688	Screw	
24	70142	Nut	
25	M400013	Washer	
26	H88001565	Screw	

Fan and Fan Motor Assembly - 60 Hertz Models

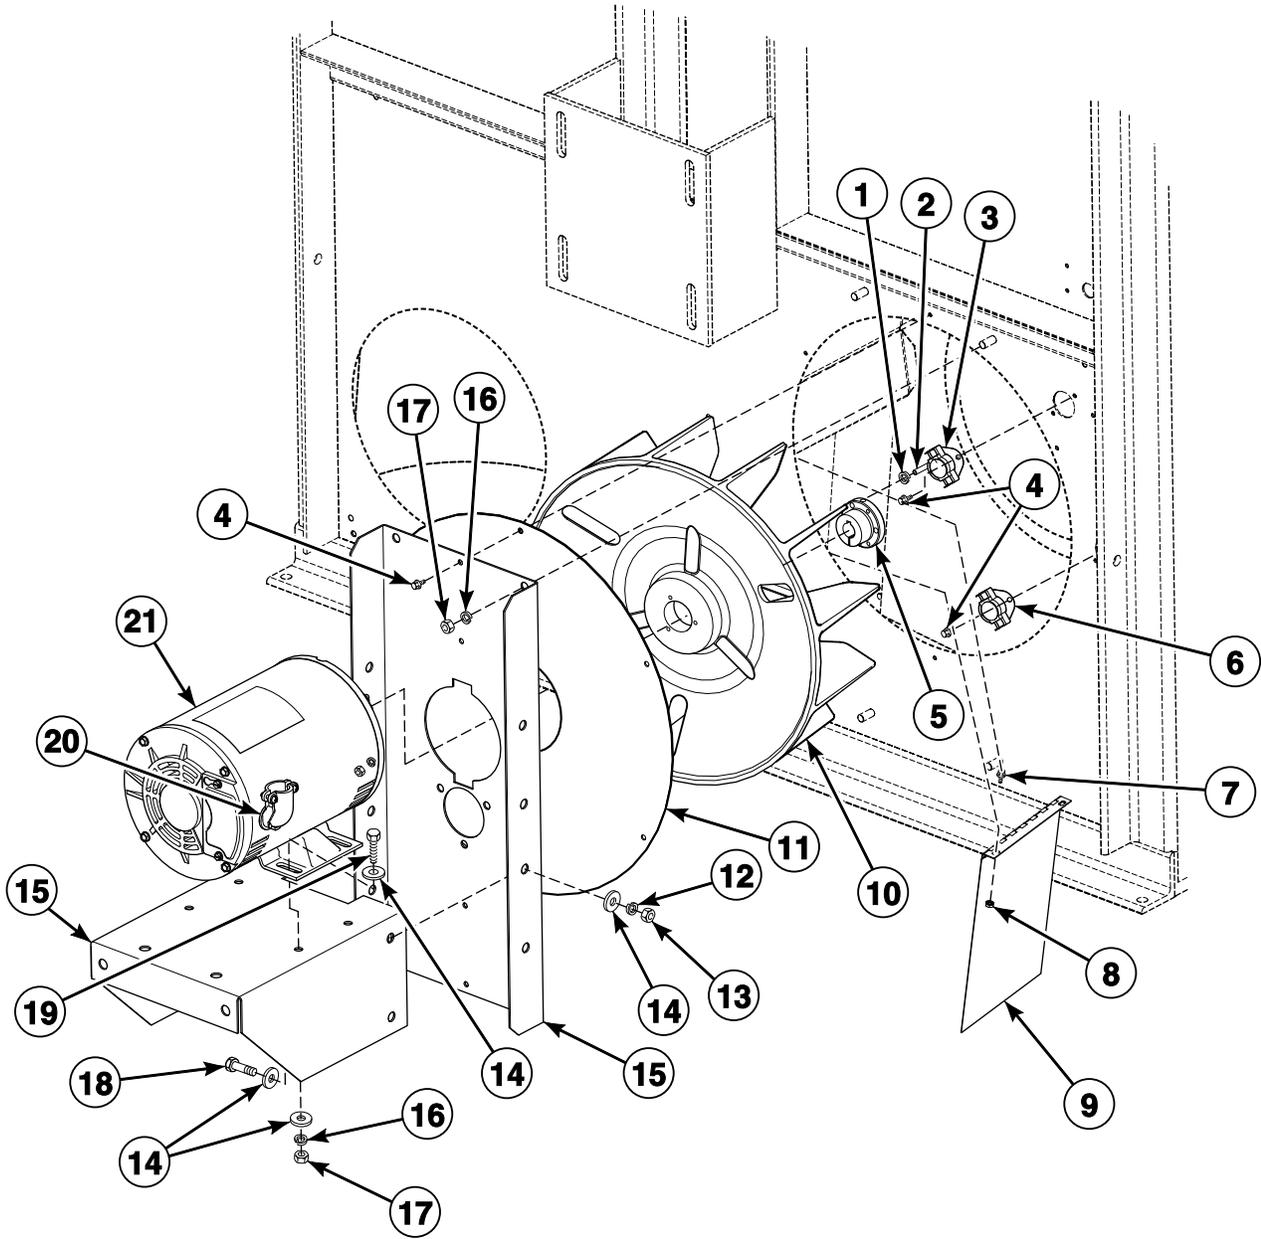


TMB2998P_70422001

Fan and Fan Motor Assembly - 60 Hertz Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	56552	Washer	
2	H8800901H	Screw	3 required; Fan bushing
3	44237401	Thermostat	
4	430497	Screw	
5	H87529111P	Bushing	Includes screws and washers; Key not included
6	H8900530H	Thermostat	Load ready
7	61199	Screw	
8	70054	Nut	
9	M409967	Damper Assembly	
10	M414546	Fan and Bushing Assembly	Included with item 5 and hardware
11	H96358007	Blower Cover	
12	M400014	Washer	
13	20274	Nut	
14	M400080	Washer	
15	H608P3	Blower Motor Base Kit	
16	M400013	Washer	
17	70142	Nut	
18	M400043	Screw	4 required
19	M400056	Screw	4 required
20	M403862	Connector	
21	44046301P	Motor	200-208, 240, 460-480 Volt; No capacitor
	44157701	Motor	380 Volt/60 Hertz/3 Phase; No capacitor

Airflow Switch

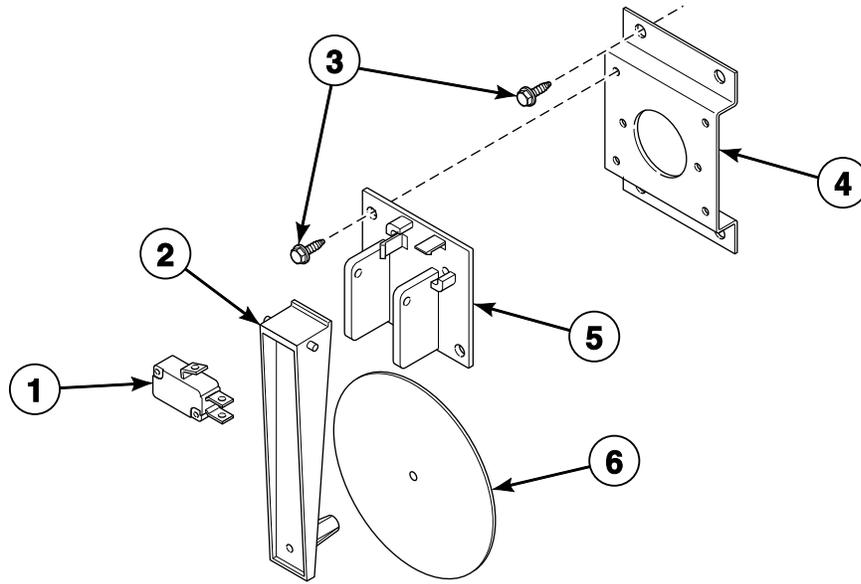


TMB3000P_70422001

Airflow Switch

REF	PART NO.	DESCRIPTION	COMMENTS
	70429601	Airflow Switch Assembly	Models through 9/18/11; Includes items 1-6
	44142901	Airflow Switch Assembly	Models starting 9/19/11; Includes items 1-6
1	70411901	Switch	
2	70319401	Airflow Switch Arm	
3	430497	Screw	
4	70356301	Switch Bracket	
5	70319601	Airflow Switch and Arm Bracket	
6	70319201	Airflow Switch Vane	Models through 9/18/11
	70319202	Airflow Switch Vane	Models starting 9/19/11

Gas Heater Components - Non-CE Models Through 3/10/13

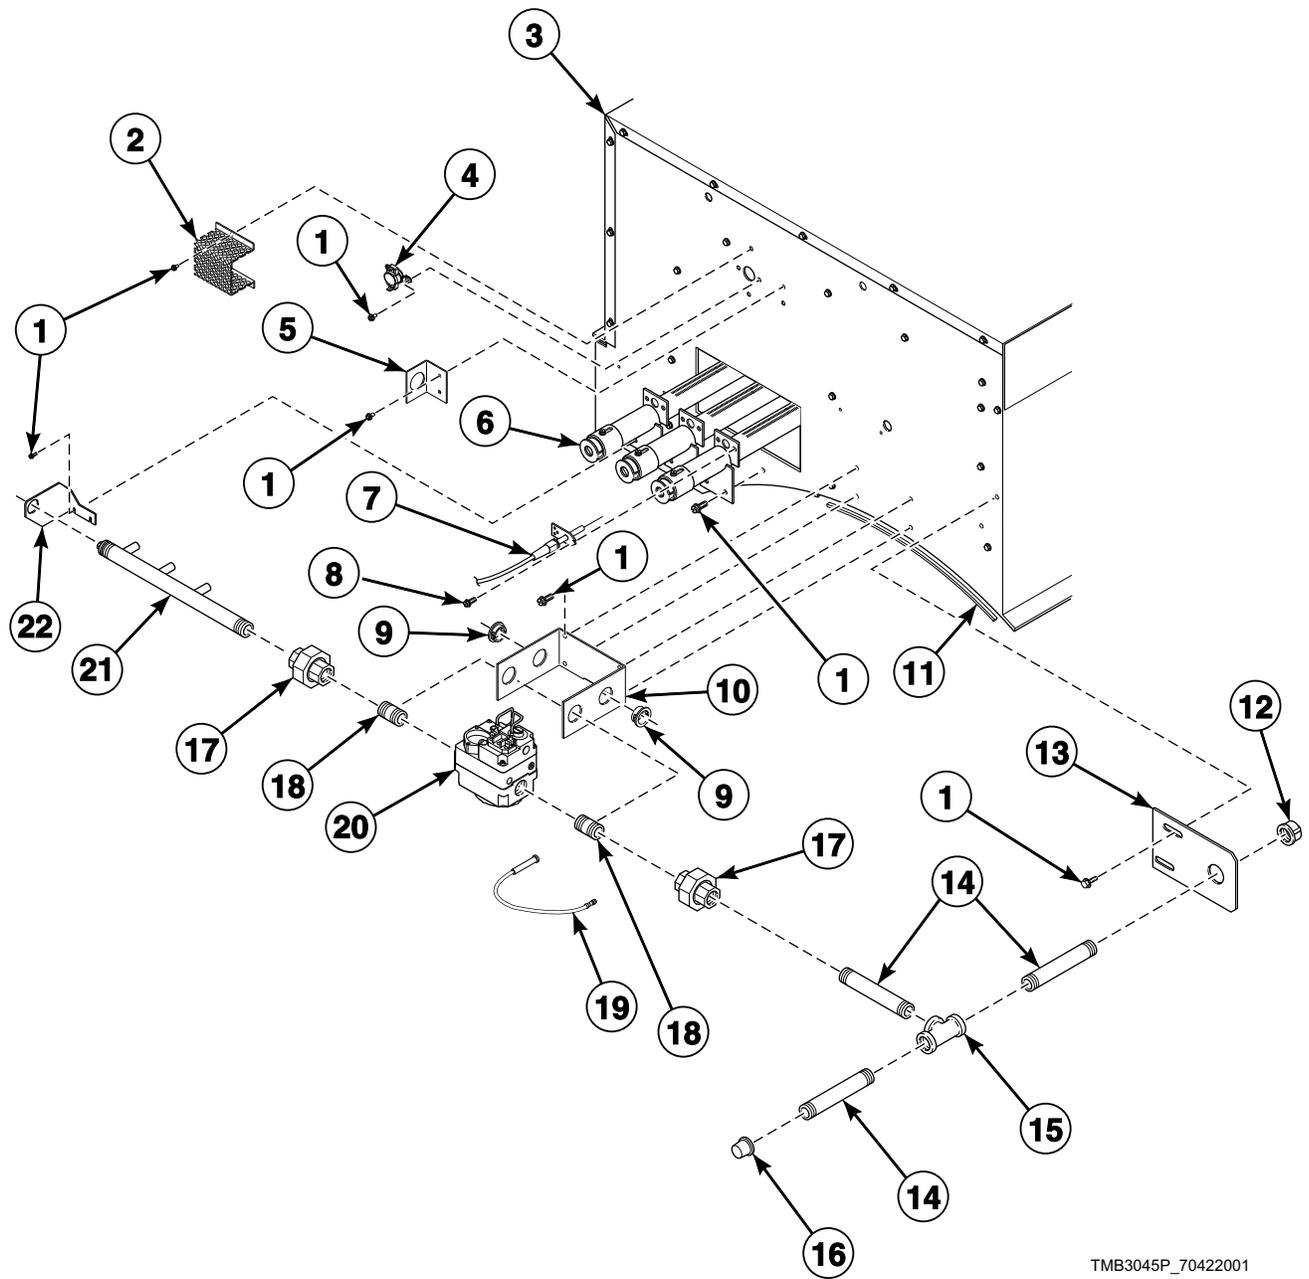


TMB3045P_70422001

Gas Heater Components - Non-CE Models Through 3/10/13

REF	PART NO.	DESCRIPTION	COMMENTS
	M4577P3	Conversion Kit	Natural Gas (N.G.) to Liquid Petroleum Gas (L.P.); 60 Hertz models through 2/14/11
	M4578P3	L.P. Gas Conversion Kit	N.G. to L.P.; 60 Hertz models starting 2/15/11
	M4973P3	L.P. Gas Conversion Kit	N.G. to L.P.; 50 Hertz models through 2/14/11
	M4975P3	L.P. Gas Conversion Kit	N.G. to L.P.; 50 Hertz models starting 2/15/11
	M412997	Harness Assembly	
	M411506	Stove Partition Gasket	3 feet
1	430497	Screw	
2	M414477	Thermostat Cover	
3	44196401	Gas Stove Assembly	
4	M411404	Stove Limit Thermostat	Non-Australian models through 10/31/11
	M413988	Thermostat	Australian models through 10/31/11
	44236501	Thermostat	Non-Australian models starting 11/1/11
	44236601	Thermostat	Australian models starting 11/1/11; Korean models
5	431078	Stove Limit Harness Bracket	
6	M412025P	Burner	3 required
7	M406934P	Spark Igniter	Models through 9/16/12
	44253701	Spark Electrode	Models starting 9/17/12
8	56693	Screw	2 required
9	70178701	Snap Bushing	2 required
10	M411259	Gas Valve Bracket	
11	M411505	Stove Gasket	Sold per foot; 3 feet required
12	44165901	Pipe Cap	
13	M411498	Pipe Bracket	
14	H85101673	Nipple	3 required
15	44174201	Pipe Tee	
16	44087701	Pipe Cap	
17	M411419	Pipe Union	2 required
18	M411417	Pipe Nipple	2 required
19	44061602P	High Temperature Ignition Lead	Connects to item 7; Models through 9/16/12
	44239703	High Voltage Suppression Cable	Models starting 9/17/12; Use with 70458601 Ignition Control
20	44166701	Gas Valve	N.G.; 50 Hertz
	44166702	Gas Valve	L.P.; 50 Hertz
	M413470P	Gas Valve	N.G.; 60 Hertz
	M4883P3	Gas Valve Kit	L.P.; 60 Hertz
21	M411254	Spud Holder	
22	44173801	Manifold End Bracket	

Gas Heater Components - CE Models Through 3/10/13

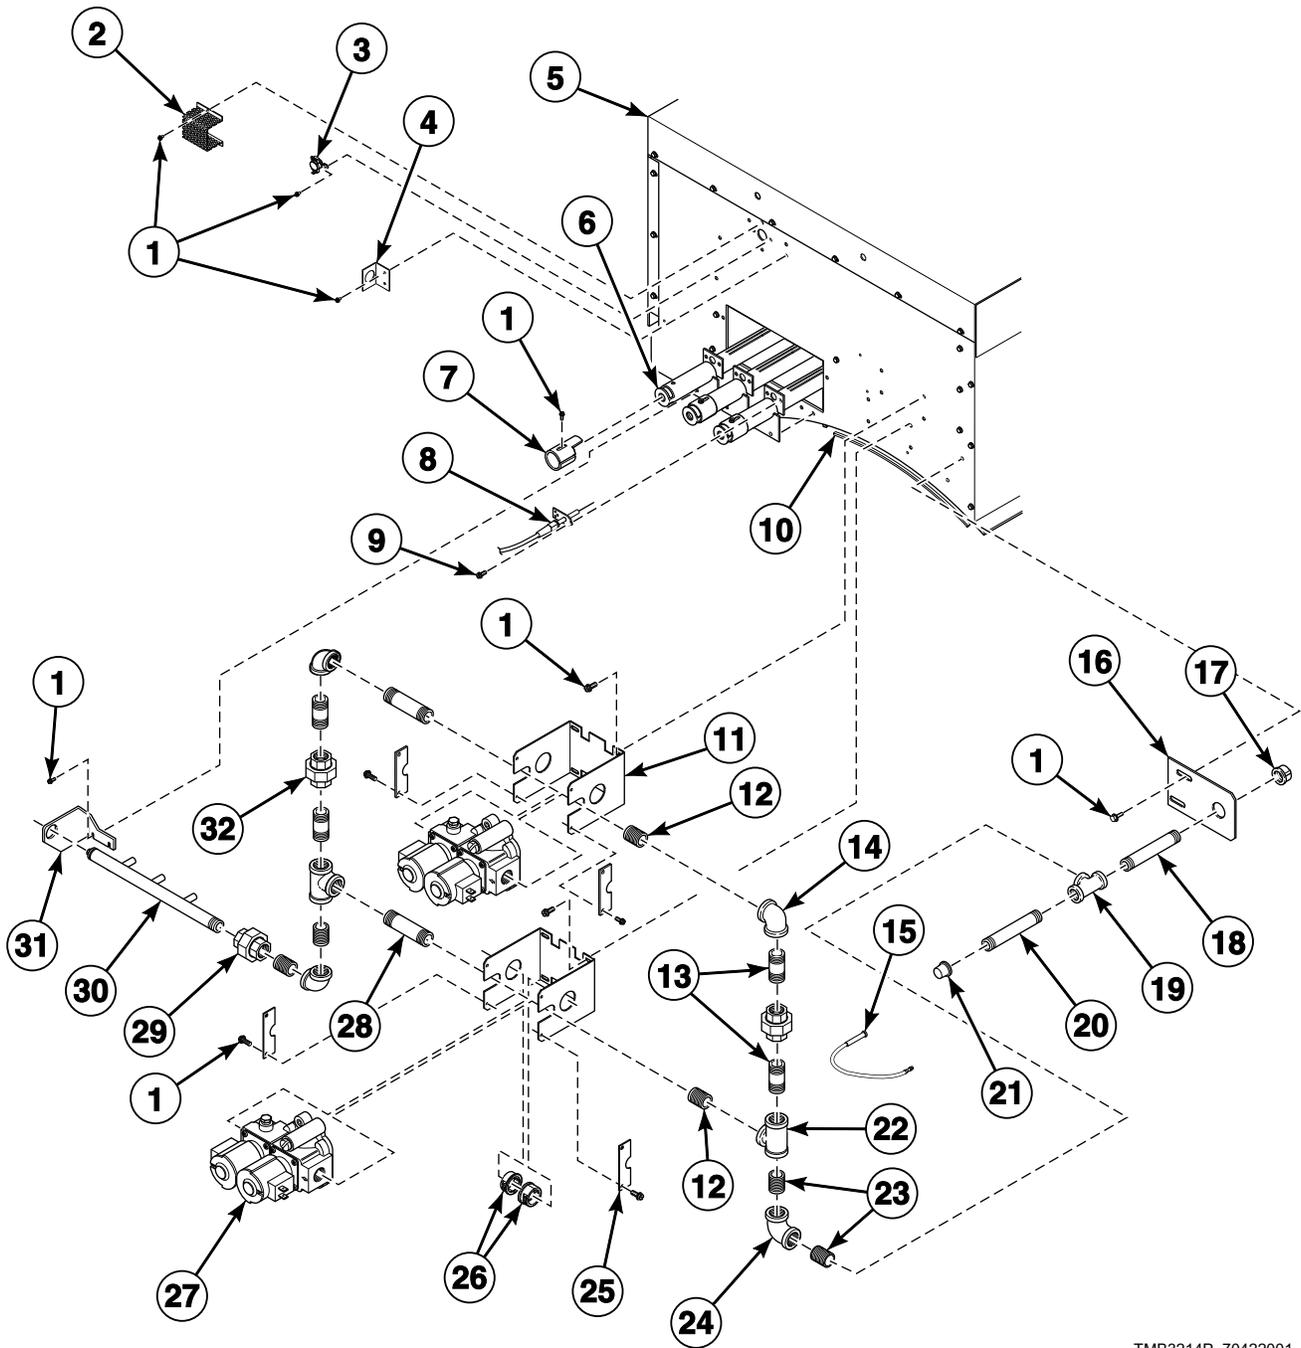


TMB3214P_70422001

Gas Heater Components - CE Models Through 3/10/13

REF	PART NO.	DESCRIPTION	COMMENTS
	44199101	Gas Valve Harness	
	M4904P3	Valve Replacement Kit	Natural Gas (N.G.); Models through 7/13/09
	M4905P3	Valve Replacement Kit	Liquid Petroleum Gas (L.P.); Models through 7/13/09
	M4906P3	Valve Replacement Kit	N.G.; Models starting 7/14/09 through 11/30/09
	M4907P3	Valve Replacement Kit	L.P.; Models starting 7/14/09 through 11/30/09
1	430497	Screw	
2	M414477	Thermostat Cover	
3	M413988	Thermostat	Models through 10/31/11
	44236601	Thermostat	Models starting 11/1/11
4	431078	Stove Limit Harness Bracket	
5	44196401	Gas Stove Assembly	
6	M412025P	Burner	3 required
7	M413795	Burner Shutter	3 required
8	M406934P	Spark Igniter	Models through 9/16/12
	44253701	Spark Electrode	Models starting 9/17/12
9	56693	Screw	2 required
10	M411505	Stove Gasket	Sold per foot; 3 feet required
11	44117501	Gas Valve Bracket	2 required
12	70435601	Pipe Nipple	2 required
13	M403934	Nipple	4 required
14	70079601	Elbow	2 required
15	44061602P	High Temperature Ignition Lead	Connects to item 8; Models through 9/16/12
	44239703	High Voltage Suppression Cable	Models starting 9/17/12; Use with 70458701 Ignition Control
16	M411498	Pipe Bracket	
17	44165901	Pipe Cap	
18	H85101673	Nipple	
19	44174201	Pipe Tee	
20	H85101673	Pipe Nipple	
21	44087801	Pipe Cap	
22	44117401	Reducing Tee	2 required
23	H85101608	Nipple	4 required
24	F421107	Elbow	2 required
25	44117901	Pipe Keeper Bracket	4 required
26	M402542	Snap Bushing	2 required
27	44178301P	Gas Valve	N.G.; 2 required; Use to replace valves starting 12/1/09
	44178302P	Gas Valve	L.P.; 2 required; Use to replace valves starting 12/1/09
28	901403	Pipe Nipple	2 required
29	M411419	Pipe Union	
30	M411254	Spud Holder	
31	44173801	Manifold End Bracket	
32	H86000031	Union	2 required

Gas Heater Components - Models Starting 3/11/13

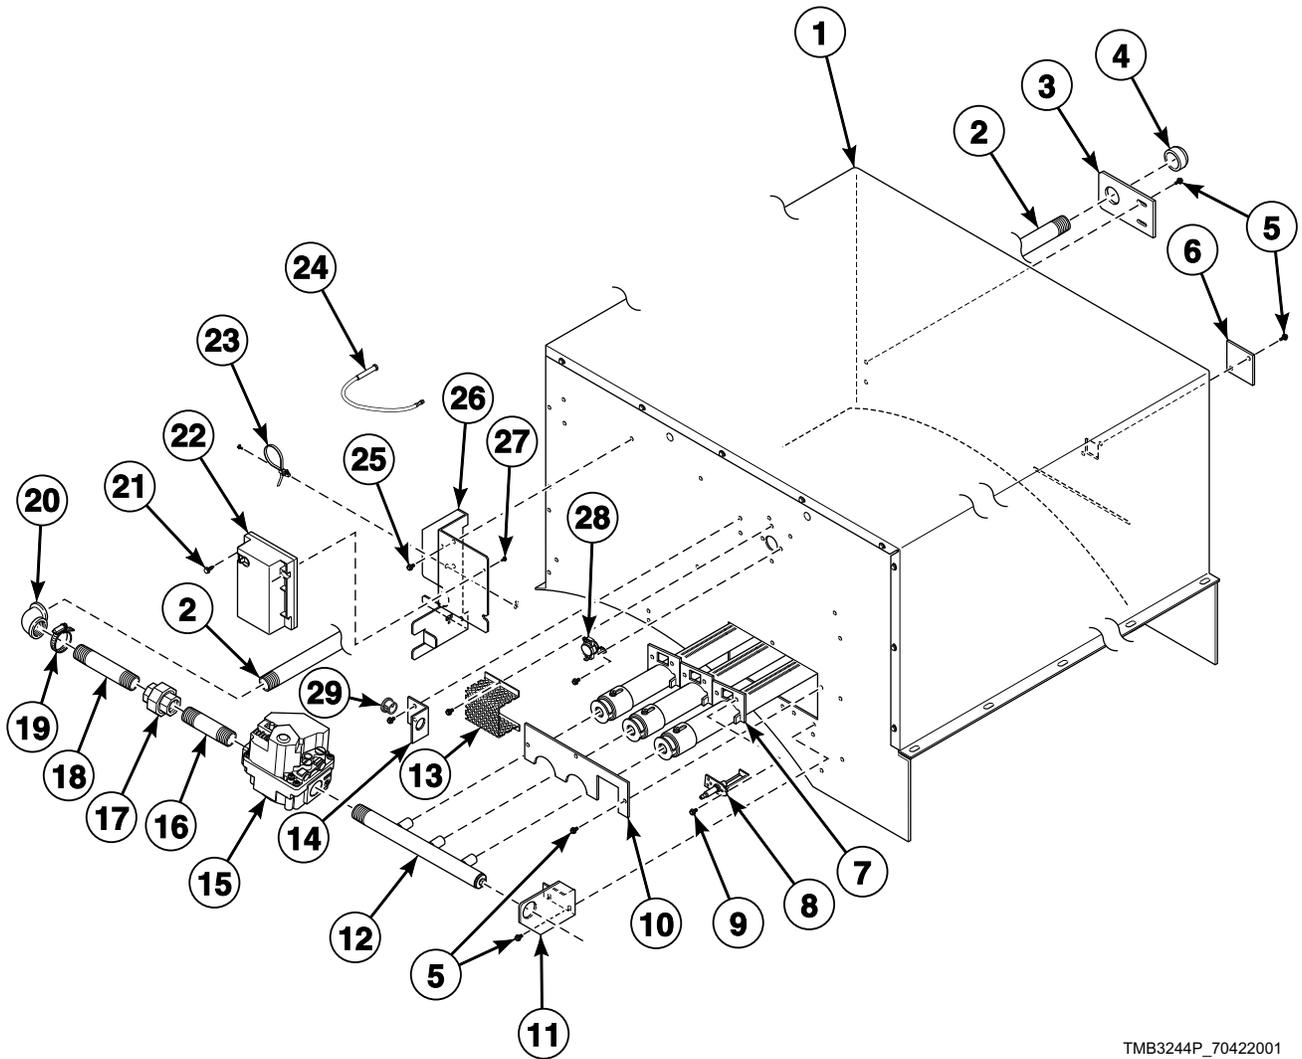


TMB3244P_70422001

Gas Heater Components - Models Starting 3/11/13

REF	PART NO.	DESCRIPTION	COMMENTS
	M4578P3	L.P. Gas Conversion Kit	Natural Gas (N.G.) to Liquid Petroleum Gas (L.P.); 60 Hertz; Non-CE models starting 2/15/11
	M4973P3	L.P. Gas Conversion Kit	N.G. to L.P.; 50 Hertz; Non-CE models starting 2/15/11
1	44248801	Gas Stove Assembly	
2	44252401	Pipe Nipple	
3	44249301	Pipe Bracket	
4	44087801	Pipe Cap	
5	430497	Screw	
6	70159601	Igniter Cover	
7	M412025P	Burner	3 required
8	44253701	Spark Electrode	
9	56693	Screw	2 required
10	44249701	Burner Hole Cover	
11	44173801	Manifold End Bracket	
12	44245803	Spud Holder Weldment	
13	M414477	Thermostat Cover	
14	431078	Stove Limit Harness Bracket	
15	44166701	Gas Valve	N.G.; 50 Hertz; Australian models
	44166702	Gas Valve	L.P.; 50 Hertz; Australian models
	M413470P	Gas Valve	N.G.; 60 Hertz; Non-CE and non-Australian models
	M4883P3	Gas Valve Kit	L.P.; 60 Hertz; Non-CE and non-Australian models
	44227201	Gas Valve	N.G.; 50 Hertz; CE models
	44227202	Gas Valve	L.P.; 50 Hertz; CE models
16	44249501	Pipe Nipple	
17	M411419	Pipe Union	
18	44252301	Pipe Nipple	
19	20391	Hose Clamp	
20	44249401	Pipe Elbow	
21	51783	Screw	
22	70458601P	Ignition Control	Non-CE and non-Australian models
	70458701P	Ignition Control	CE models
	70367401P	Ignition Control	Australian models
23	M405829	Cable Tie	
24	44239703	High Voltage Suppression Cable	
25	51780	Screw	
26	44245701	Gas Valve Bracket	
27	38272	Screw	
28	44236501	Thermostat	Non-CE and non-Australian models
	44236601	Thermostat	CE and Australian models
29	44071501	Snap Bushing	

Burner Orifices for Non-CE and Non-Australian Gas Models

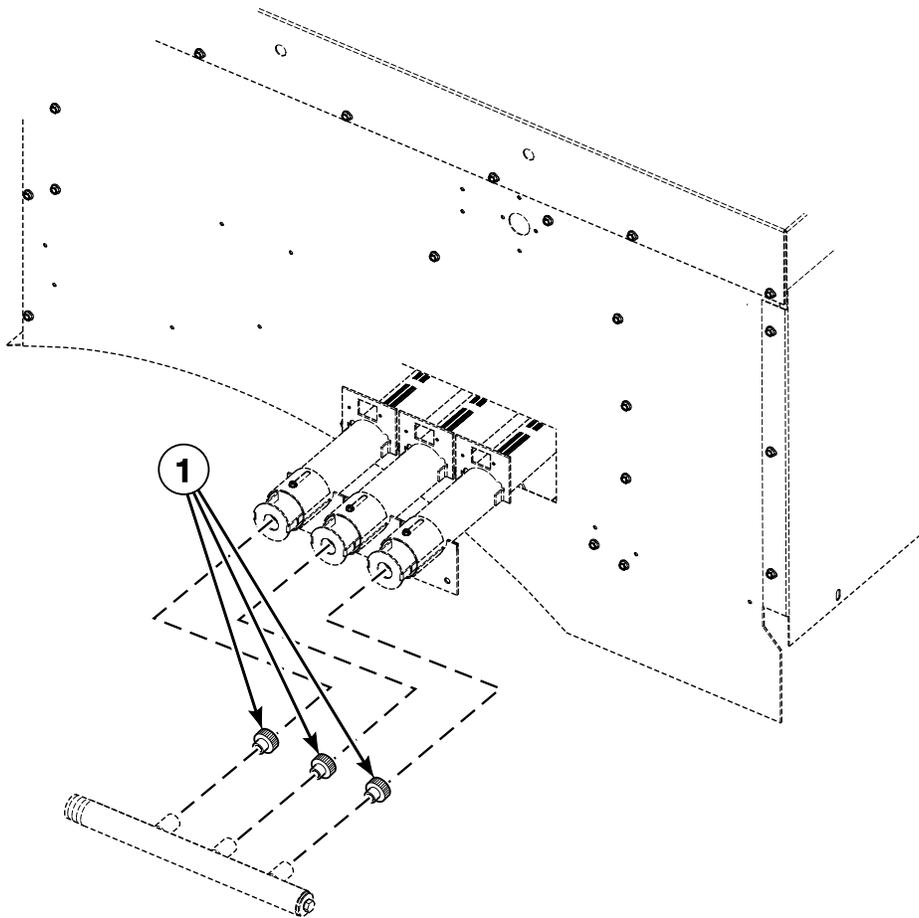


TMB3215P_70422001

Burner Orifices for Non-CE and Non-Australian Gas Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	M411373	Burner Orifice	Natural Gas (N.G.); 0-2,000 feet; Drill no. 16 (4.5 mm); 3 required
	M402988	Burner Orifice	N.G.; 2,001-4,000 feet; Drill no. 18 (4.3 mm); 3 required
	M402995	Burner Orifice	N.G.; 4,001-6,000 feet; Drill no. 19 (4.2 mm); 3 required
	M401002	Burner Orifice	N.G.; 6,001-8,000 feet; Drill no. 20 (4.1 mm); 3 required
	M401020	Burner Orifice	N.G.; 8,001-10,000 feet; Drill no. 23 (3.9 mm); 3 required
	M411375	Burner Orifice	Liquid Petroleum Gas (L.P.); 0-2,000 feet; Drill no. 36 (2.7 mm); 3 required
	M411376	Burner Orifice	L.P.; 2,001-4,000 feet; Drill no. 38 (2.6 mm); 3 required
	M401007	Burner Orifice	L.P.; 4,001-6,000 feet; Drill no. 39 (2.5 mm); 3 required
	M401015	Burner Orifice	L.P.; 6,001-8,000 feet; Drill no. 41 (2.4 mm); 3 required
	M403017	Burner Orifice	L.P.; 8,001-10,000 feet; Drill no. 42 (2.4 mm); 3 required

NOTE: For CE gas and orifice information, refer to Installation Manual.

Steam Heater Components - Except C, D, and I Models

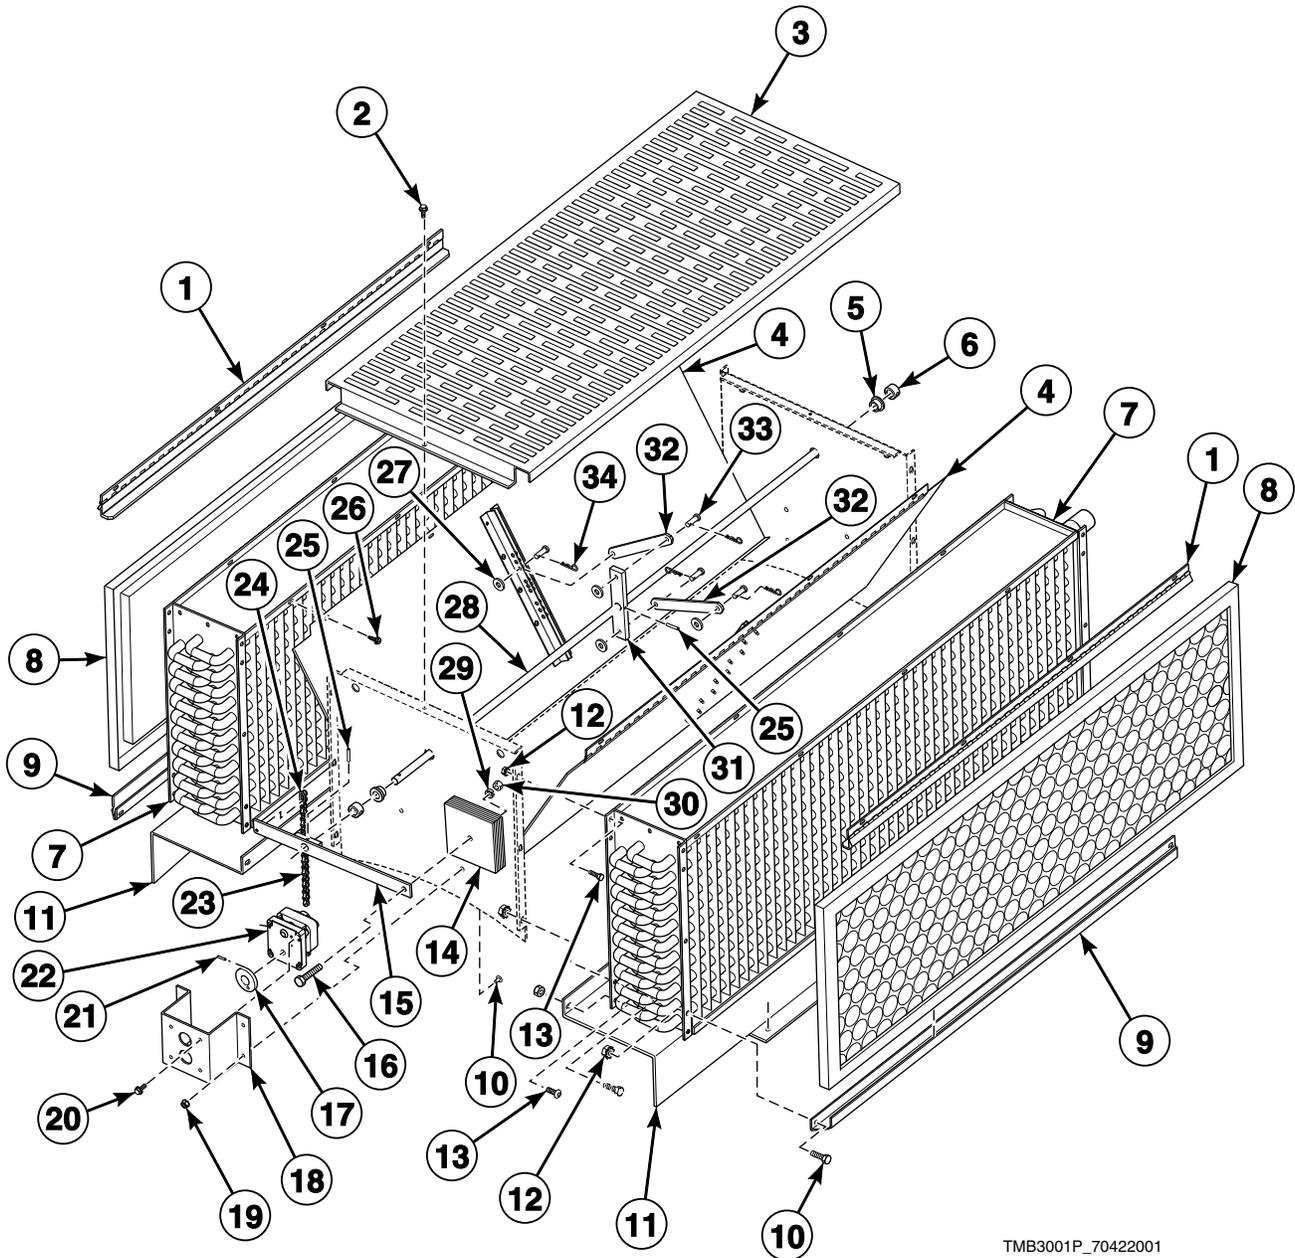


TMB3001P_70422001

Steam Heater Components - Except C, D, and I Models

REF	PART NO.	DESCRIPTION	COMMENTS
	M414458	Steam Heater Assembly	60 Hertz; Includes items 1-34
	M414482	Steam Heater Assembly	50 Hertz; Includes items 1-34
	M414534	Damper Bracket	Thermal oil models; 4 required
	M412997	Harness Assembly	Models through 3/10/13
	44243601	Steam Valve Interface Harness	Models starting 3/11/13
1	44088101	Steam Filter Top Hinge Assembly	2 required
2	M405188	Screw	
3	44115101	Steam Cover	
4	H96387519	Damper	2 required; Use M405750 Pop Rivet
5	M414459	Bushing	2 required
6	M414451	Shaft Collar	2 required
7	H96382023P	Steam Coil	All models except thermal oil models; 2 required; 902303 Steam Pressure Label by inlet connection
8	44172201	Filter	2 required; CE models
	H96382106	Steam Coil Filter	2 required; All other models
9	H96388087	Filter Channel	2 required; Upper
10	801019	Screw	2 required
11	M411550	Steam Coil Support	3 required
12	29786	Nut	3 required
13	02422	Screw	3 required
14	M413331	Damper Counterweight	6 required
15	H96387501	Actuator Arm Assembly	
16	H88010574	Screw	
17	H96388178	Drive Wheel	Damper
18	H96388145	Motor Bracket	
19	23951	Nut	3 required
20	61199	Screw	
21	H88900683	Spring Pin	Damper
22	M413592P	Damper Motor	
23	H96388186	Drive Chain	
24	H96382072P	Master Link	2 required
25	H88970256	Roll Pin	2 required
26	501086	Screw	
27	800465	Washer	4 required
28	H96388079	Damper Shaft	
29	M400013	Washer	
30	70142	Nut	
31	44096401	Steam Damper Actuator	
32	H96388012	Damper Link	2 required
33	44091501	Clevis Pin	4 required
34	44091601	Hairpin Cotter	4 required

Steam Heater Components - C, D and I Models

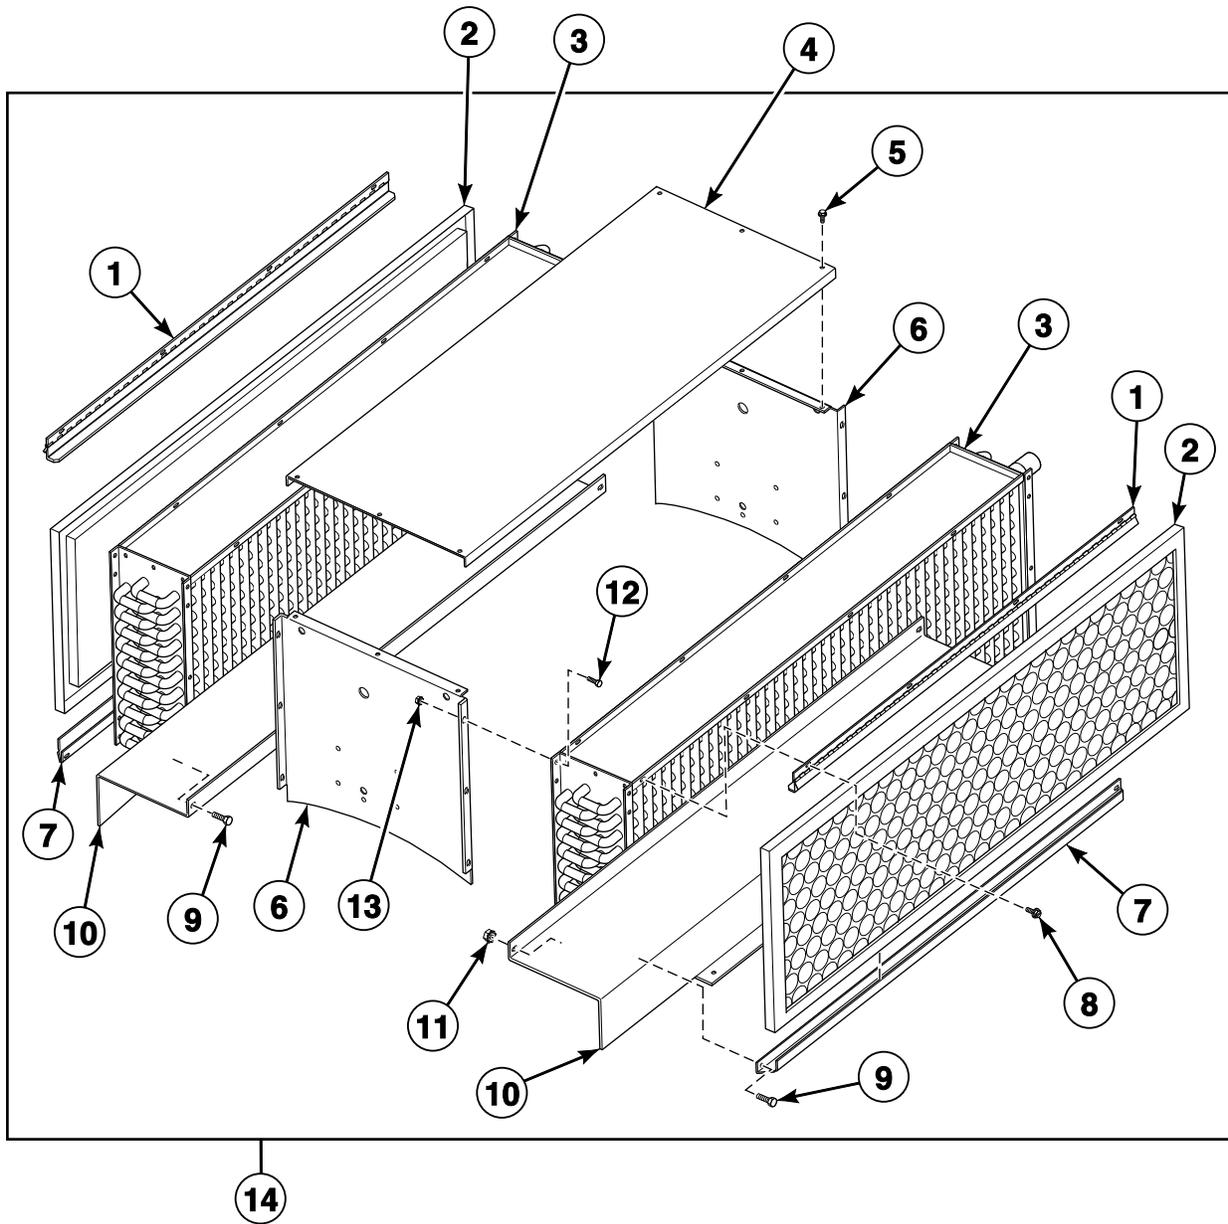


TMB3209P_70422001

Steam Heater Components - C, D and I Models

REF	PART NO.	DESCRIPTION	COMMENTS
	M414534	Damper Bracket	Thermal oil models; 4 required
	44243601	Steam Valve Interface Harness	Models starting 3/11/13
1	44088101	Steam Filter Top Hinge Assembly	2 required
2	44172201	Filter	2 required; CE models
	H96382106	Steam Coil Filter	2 required; Non-CE models
3	H96382023P	Steam Coil	All models except thermal oil models; 902303 Steam Pressure Label by inlet connection
4	44114501	Steam Cover	
5	430497	Screw	6 required
6	44114901	Steam Coil Housing End	2 required
7	H96388087	Filter Channel	2 required; Upper
8	501086	Screw	8 required
9	801019	Screw	4 required
10	M411550	Steam Coil Support	2 required
11	23951	Nut	4 required
12	02422	Screw	16 required
13	29786	Nut	16 required
14	44114701P	Steam Heater Assembly	Includes items 1-13

Steam Solenoid Valve

All Steam Models Except Thermal Oil Models

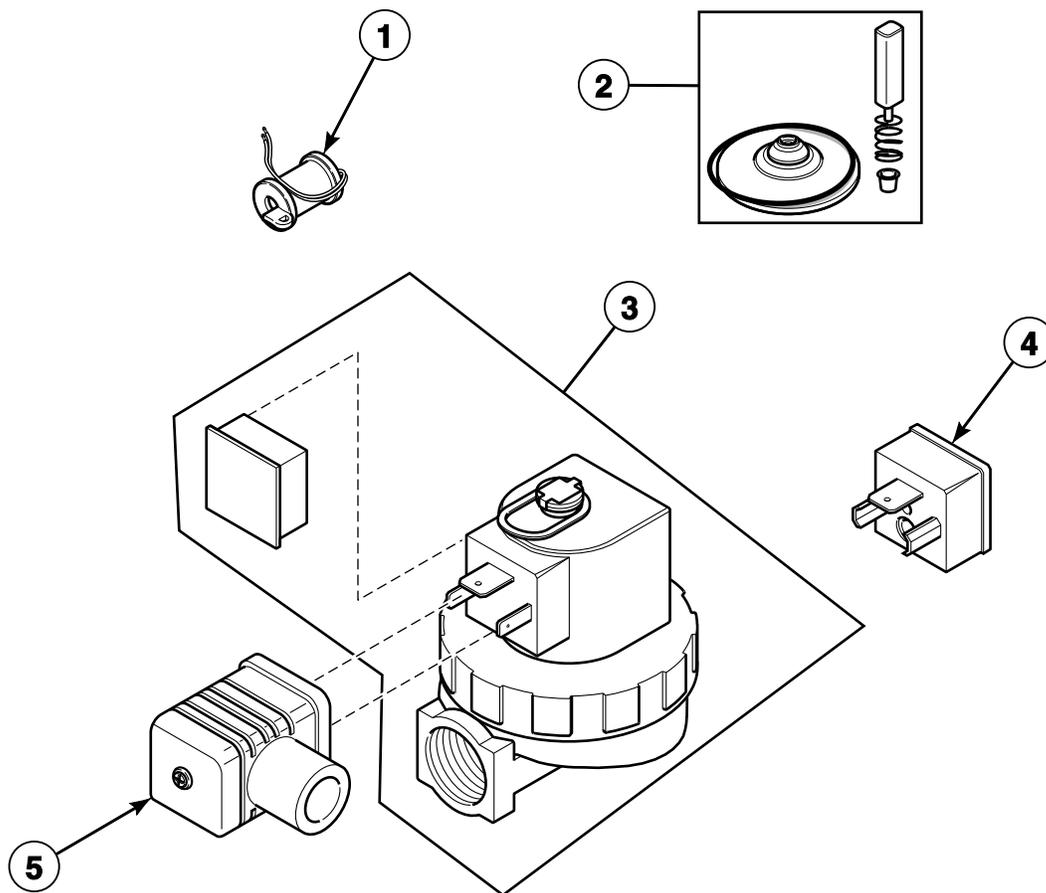


TMB3245P_70422001

Steam Solenoid Valve

REF	PART NO.	DESCRIPTION	COMMENTS
1	70351011P	Steam Solenoid	Use with 70351001P Steam Valve
	M412258	Steam Valve Coil	Use with F8322903 Steam Valve
2	70351021P	Steam Valve Rebuild Kit	Use with 70351001P Steam Valve
	F8379502	Valve Rebuild Kit	Use with F8322902 and F8322903 Steam Valves
3	70351001P	Steam Valve	24Volt; Models through Serial No. 1009000099
	F8322902	Steam Valve	24Volt/60 Hertz; Models starting Serial No. 1009000100 through 3/10/13
	F8322903	Steam Valve	24 Volt; Models starting 3/11/13
	F8322901P	Valve	220 Volt/50 Hertz or 240 Volt/60 Hertz; Models starting 3/11/13
4	F8382301	DIN Valve Adapter Kit	Models starting 3/11/13
5	70370301P	Solenoid Valve DIN Connector	

Electric Heater Components

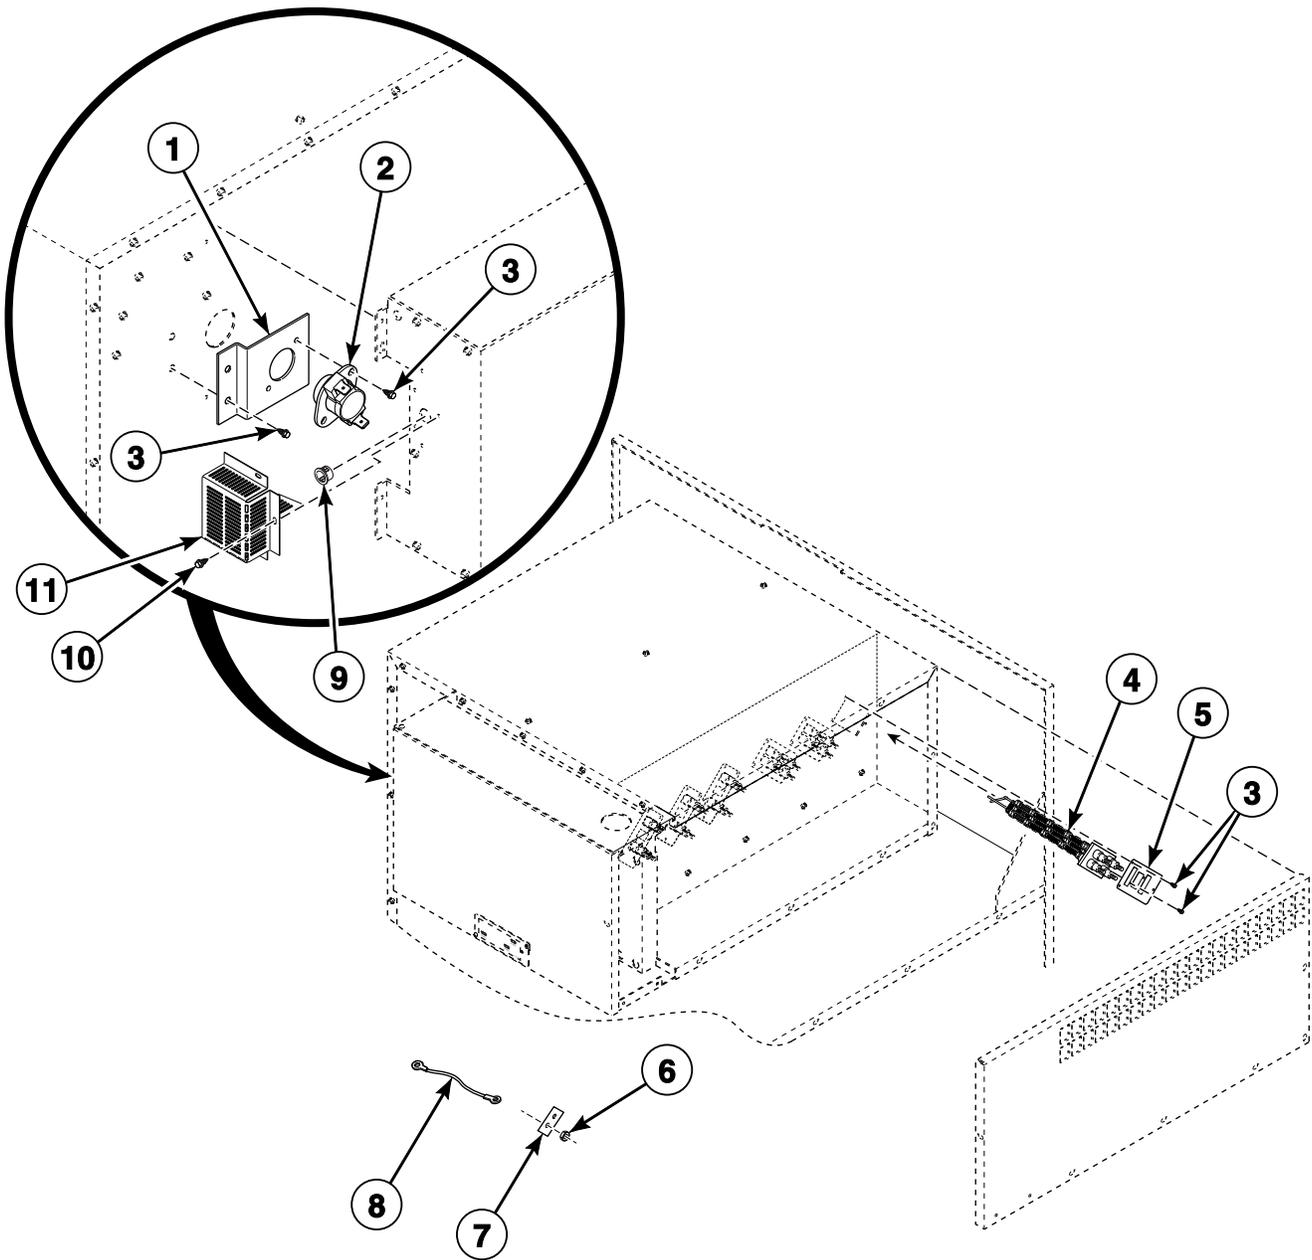


TMB3135P_70422001

Electric Heater Components

REF	PART NO.	DESCRIPTION	COMMENTS
1	44226101	Limit Offset Bracket	
2	M410542	Limit Thermostat	
3	430497	Screw	
4	M410939P	Heater Element	6 required; 10 kW; 240 Volt heater element for 230-240, 400-415 and 480 Volt/3 Phase
	M410941P	Heater Element	6 required; 10 kW; 220 Volt heater element for 380 and 440 Volt/3 Phase
5	44226001	Heater Element Sub-Plate	
6	70054	Nut	24 required
7	M400869	Jumper Strip	12 required for 240 Volt/60 Hertz/3 Phase, 380 Volt/50 or 60 Hertz/3 Phase and 400-415 Volt/50 Hertz/3 Phase; 6 required for 480 Volt/60 Hertz/3 Phase
8	44229101	Jumper Cable	4 required for 380 Volt/50 or 60 Hertz/3 Phase and 400-415 Volt/50 Hertz/3 Phase
	44229201	Jumper Cable	2 required for 480 Volt/60 Hertz/3 Phase
9	44071501	Snap Bushing	
10	51780	Screw	
11	44243001	Stove Limit Cover	

Rotation Sensor

C, D, H, I S and U Models

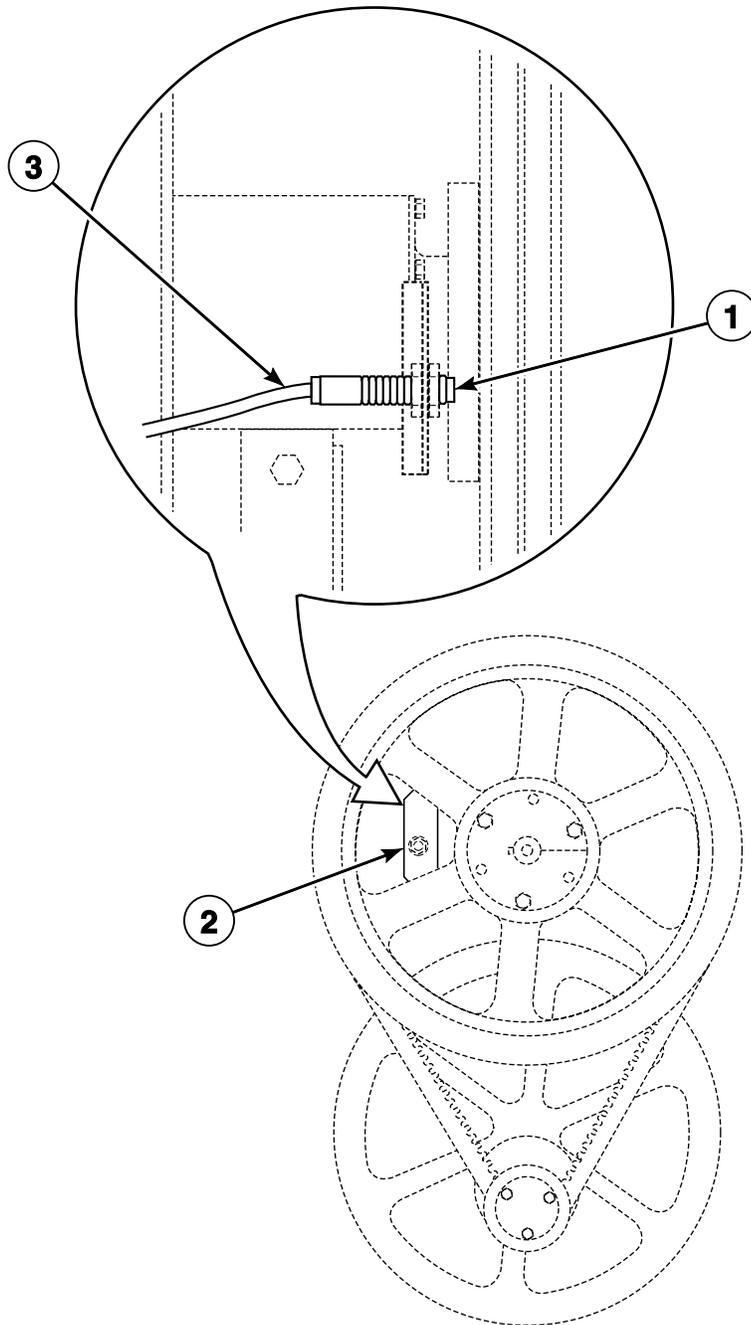

TMB2009P_70422001


Rotation Sensor

REF	PART NO.	DESCRIPTION	COMMENTS
	7010P	Rotation Sensor Kit	Includes item 1 and 44250501 Rotation Sensor Harness
1	F8066201	Rotation Sensor	
2	44111101	Rotation Sensor Bracket	
3	44201701	Rotation Sensor Harness	RE and RU control suffixes
	44250501	Rotation Sensor Harness	Models with R3 and RD control suffixes

Control Tray Wrap Components for Gas and Steam Models

REF	PART NO.	DESCRIPTION	COMMENTS
	M414276	Mount Bracket	Used to mount items 3 and 19 to machine
1	70058501	Pop Rivet	
2	70313301	Fuse Cover	
3	44159001	Contactactor Box Side	
4	M400985	Plug	3 required
5	F8223801	Hole Plug	2 required
6	70218801	Wire Label	L1, N
	70218701	Wire Label	L1, L2, L3
	70219001	Wire Label	L1, N, L2
7	F8206901	Screw	4 required
8	00177	Male Tab Terminal	3 required
9	F430909	Screw	
10	F230739	Ground Decal	
11	M412096	Earth Terminal Sticker	
12	44133701	Contactactor Box Base	
13	M411283	Ground Lug Connector	
14	F430232	Nut	
15	M405340	Snap Bushing	
16	70030501	Expansion Clip	5 required
17	70058502	Pop Rivet	2 required
18	44175801	Pipe Bracket	
19	44158901	Contactactor Box Side	
20	70178701	Snap Bushing	
21	44134001	Contactactor Box Cover	Non-CE models
	44134002	Contactactor Box Cover	CE models
22	70337301	Fuse Label	3 fuses
	70337201	Fuse Label	4 fuses; Models with less than 380 Volts
	70337401	Fuse Label	4 fuses; Models with 380 Volts or higher

Control Tray Wrap Components for Electric Models

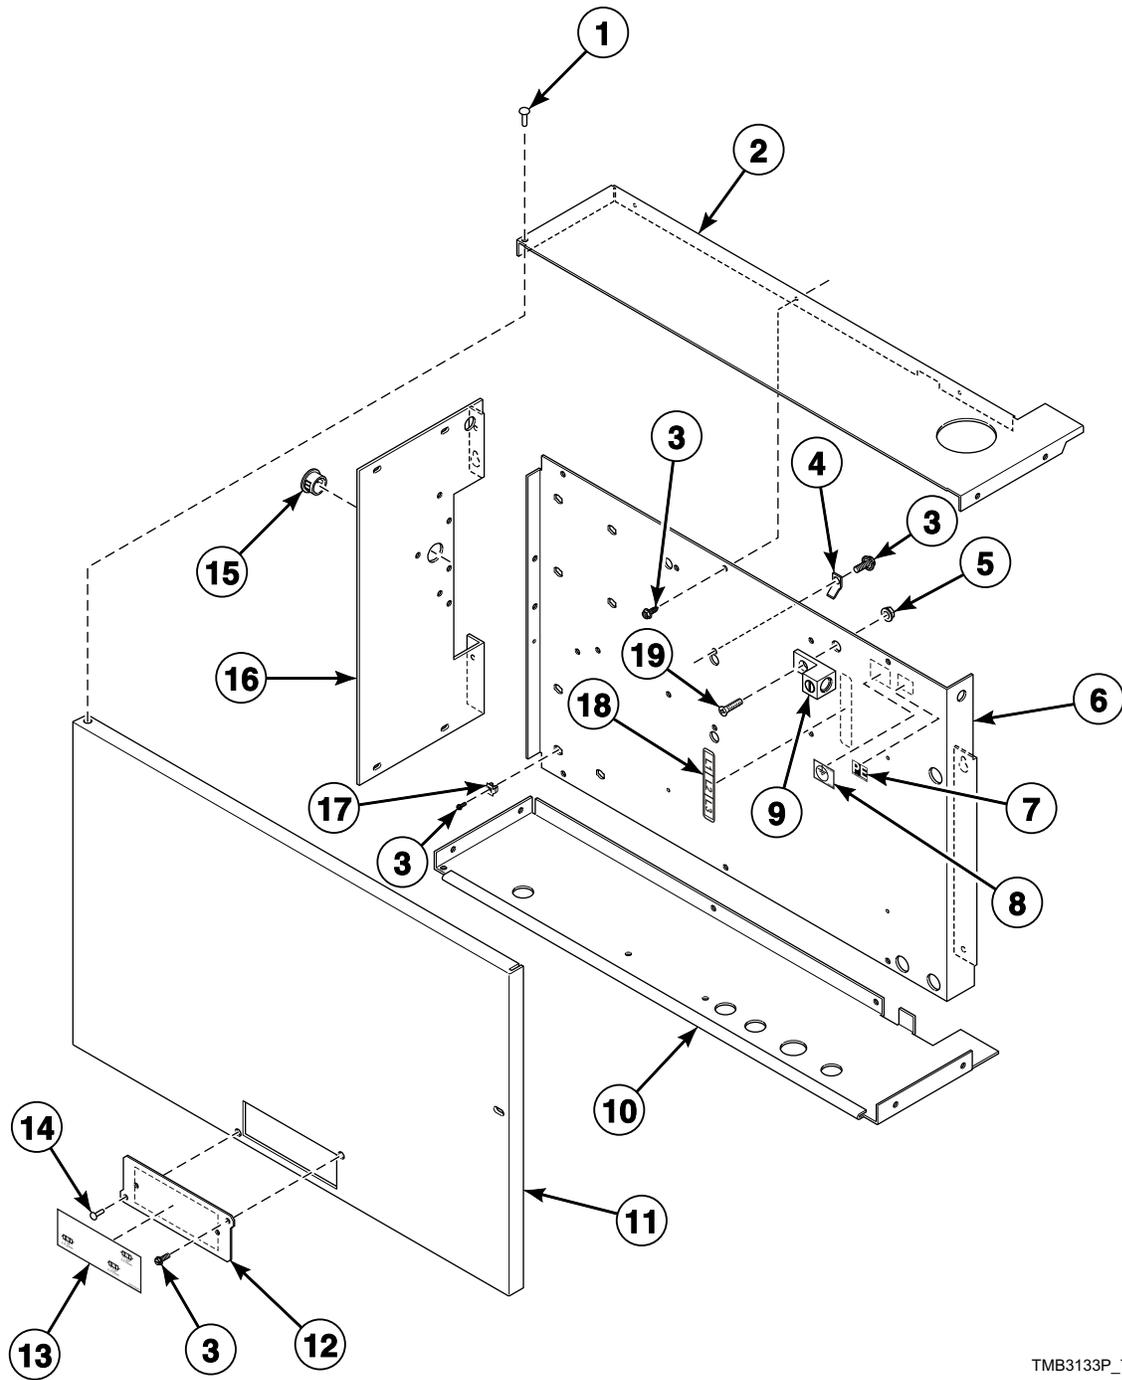


TMB3133P_70422001

Control Tray Wrap Components for Electric Models


REF	PART NO.	DESCRIPTION	COMMENTS
1	70058502	Pop Rivet	2 required
2	44226301	Top Plate	
3	F8206901	Screw	
4	00177	Male Tab Terminal	3 required
5	70288801	Nut	
6	44226401	Base Plate	
7	M412096	Earth Terminal Sticker	
8	F230739	Ground Decal	
9	44212301	Ground Lug Connector	
10	44230701	Bottom Plate	
11	44226501	Front Cover Plate	
12	70313301	Fuse Cover	
13	70337201	Fuse Label	240 Volt/60 Hertz/3 Phase
	70337401	Fuse Label	380 Volt/50 or 60 Hertz/3 Phase, 400-415 Volt/50 Hertz/3 Phase and 480 Volt/60 Hertz/3 Phase
14	70058501	Pop Rivet	
15	44071501	Snap Bushing	
16	44230801	Contacto Box Side	
17	70030501	Expansion Clip	4 required
18	70218701	Wire Label	L1, L2, L3
19	70244801	Screw	

Control Tray Fuses


MODELS WITH LESS THAN 380 VOLTS/1 PHASE

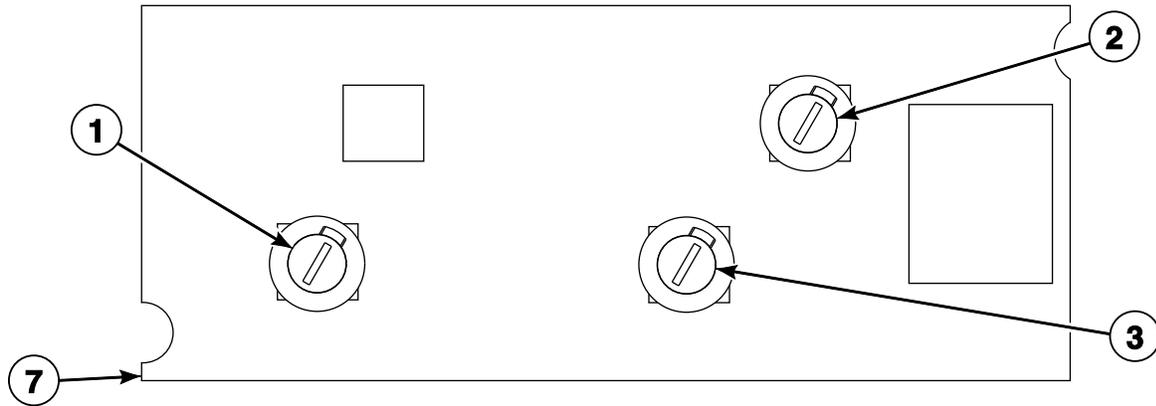

MODELS WITH LESS THAN 380 VOLTS/3 PHASE

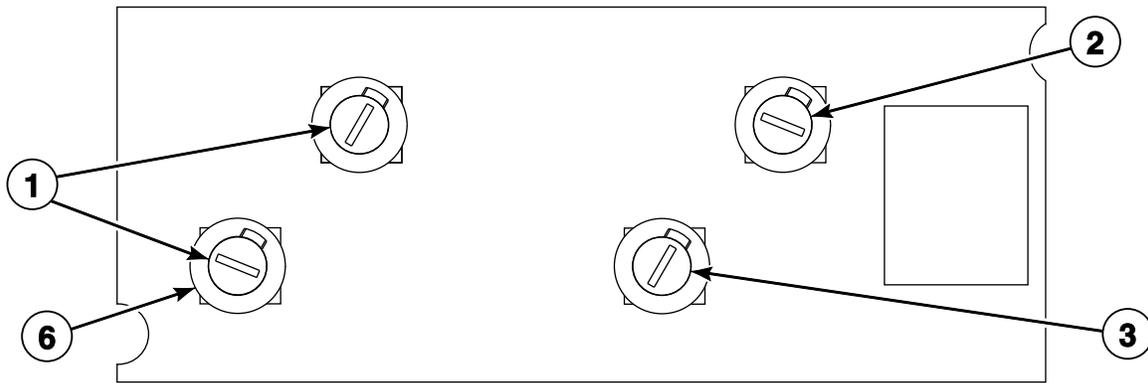

MODELS WITH 380 VOLTS OR HIGHER/3 PHASE

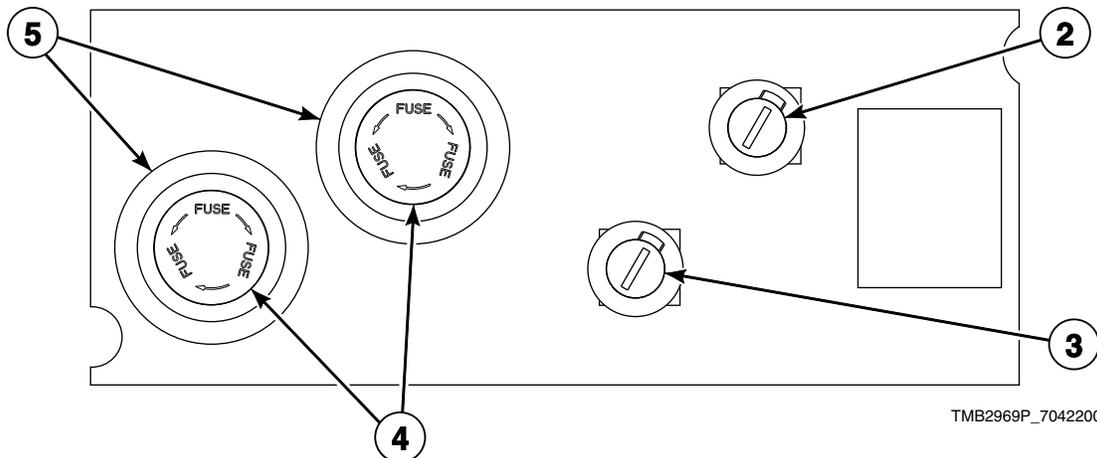


TMB2969P_70422001

Control Tray Fuses

REF	PART NO.	DESCRIPTION	COMMENTS
1	70406701	Fuse	2 Amp
2	70406501	Fuse	1.25 Amp
3	70406601	Fuse	3.5 Amp
4	M413621	Fuse	.5 Amp
5	44155601P	Fuse Holder	
6	70329401P	Fuse Holder Body	
	70329501	Fuse Holder Cap	
7	70313602	Fuse Bracket	Models with 380 Volts or higher
	70306901	Fuse Bracket	Models with less than 380 Volts

Control Tray Harnesses for Gas and Steam Models

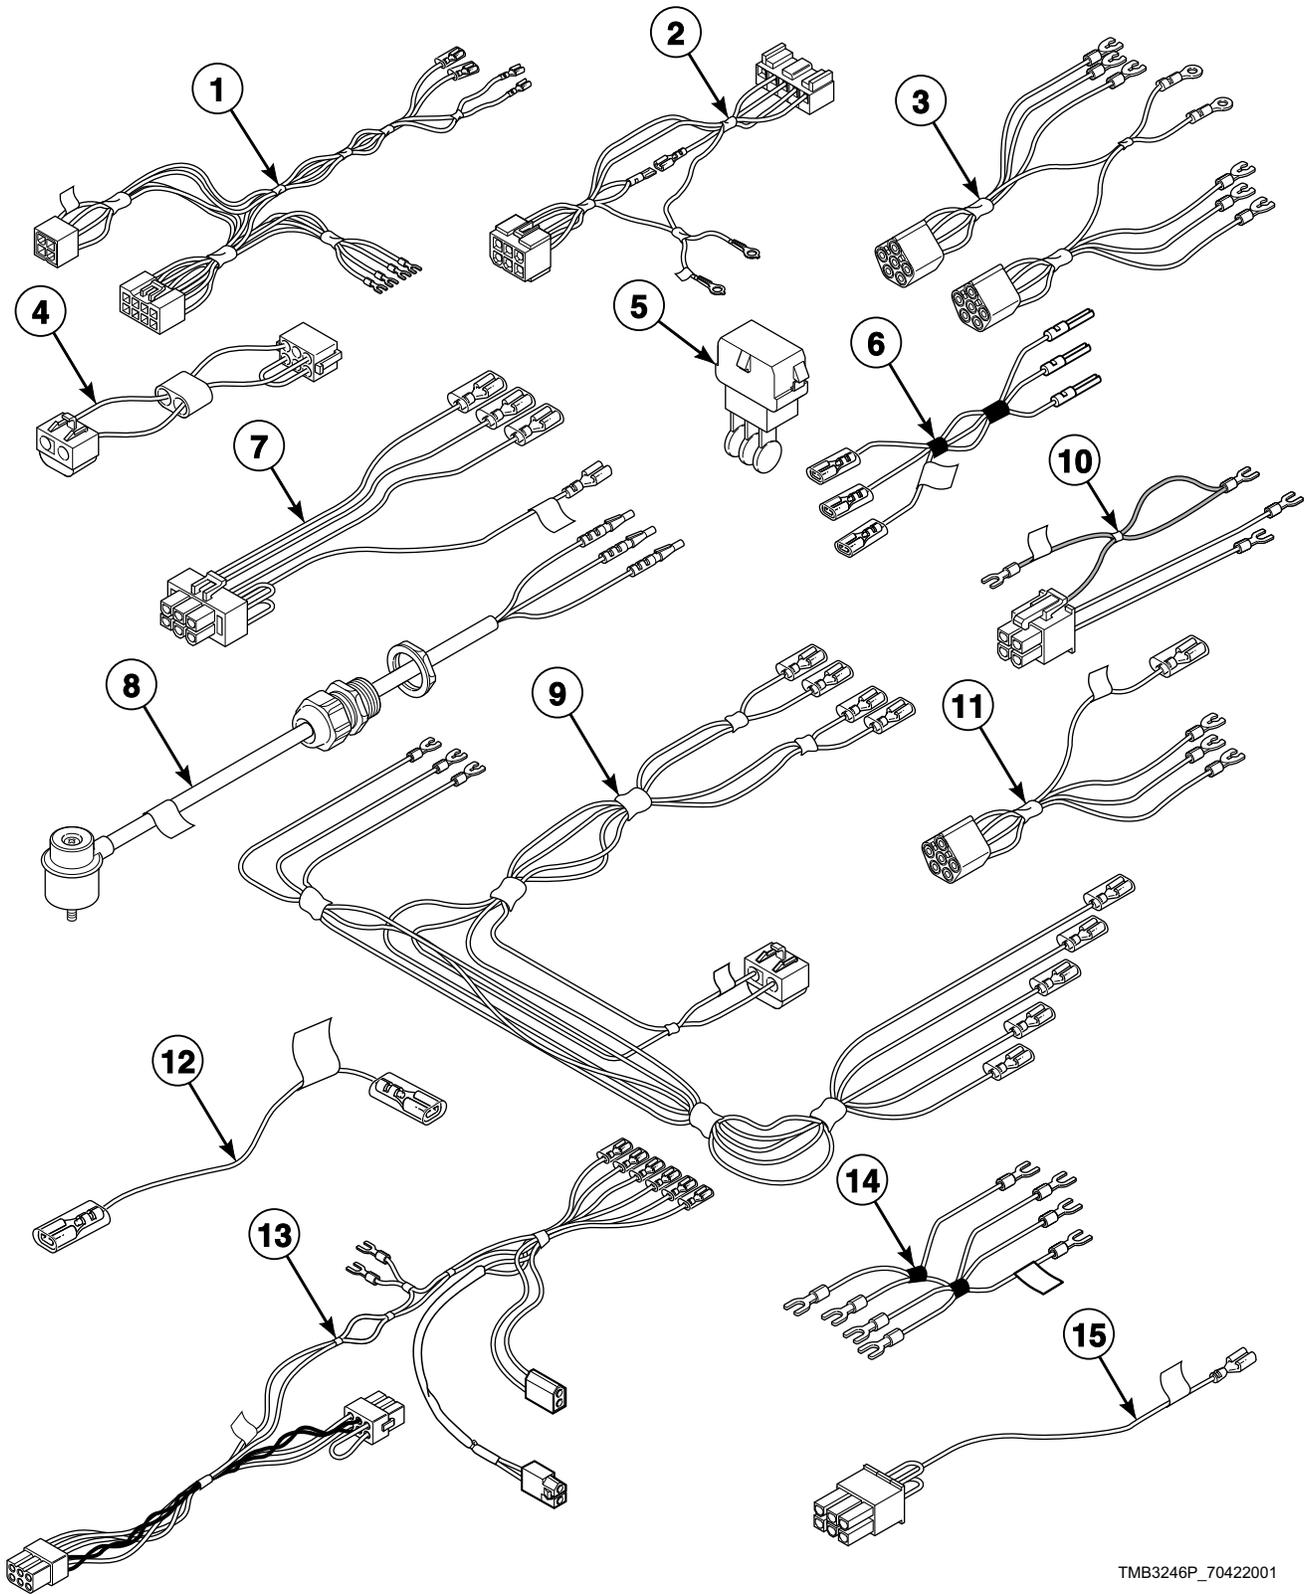


TMB3246P_70422001

Control Tray Harnesses for Gas and Steam Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	44136701P	Junction Box Harness	
2	44186701	Ignition Control Harness	Non-CE gas models; Models through 3/10/13
	44186901	Ignition Control Harness	CE gas models; Models with RE and RU control suffixes; Models through 3/10/13
	44136601P	Ignition Control Harness	CE gas models; Models with all other control suffixes; Models through 3/10/13
	44251601	Ignition Control Harness	Non-CE gas models; Models starting 3/11/13
	44251701	Ignition Control Harness	CE gas models; Models with RE and RU control suffixes; Models starting 3/11/13
	44251201	Ignition Control Harness	CE gas models; Models with all other control suffixes; Models starting 3/11/13
3	44139901P	Motor Contactor Harness	1 Phase
	44142601P	Motor Contactor Harness	3 Phase
4	M413506	Jumper Harness Assembly	208 Volt
	M413507	Jumper Configuration Assembly	240 Volt
	M413508	Jumper Harness Assembly	380 Volt
	M413510	Jumper Configuration Assembly	480 Volt
5	M413863	Network Capacitor Assembly	
6	70342101	Gas Disconnect Harness	CE models
7	44143401P	Network Capacitor Harness Assembly	
8	44243601	Steam Valve Interface Harness	Steam models; Use with F8322901 Steam Valve
9	44136201P	Power Harness	3 Phase models with 380 Volts or higher
	44136301P	Power Harness	3 Phase models with less than 380 Volts
	44139801P	Power Harness	1 Phase
10	44139601P	Reversing Contactor Harness	
11	44137001P	Motor Contactor Harness	3 Phase
	44136401	Motor Contactor Harness	1 Phase
12	70389901	Steam Stove Limit Bypass Harness	Steam models
13	44201201	Steam Relay Harness	Steam models; 24 Volt
	44243401	Steam Relay Harness	Steam models; Use with F8322901 Steam Valve on 200-240 Volt models
	44243501	Steam Relay Harness	Steam models; Use with F8322901 Steam Valve on 380-480 Volt models
14	44157401	Reversing Contactor Jumper Wire	1 Phase; Upper
	44139501	Reversing Contactor Jumper	1 Phase; Lower
	44136801	Reversing Contactor Jumper Assembly	Upper
	44136901	Reversing Contactor Jumper Assembly	Lower
15	44142801	Steam Configuration Harness	Steam models

Control Tray Components for Gas Models

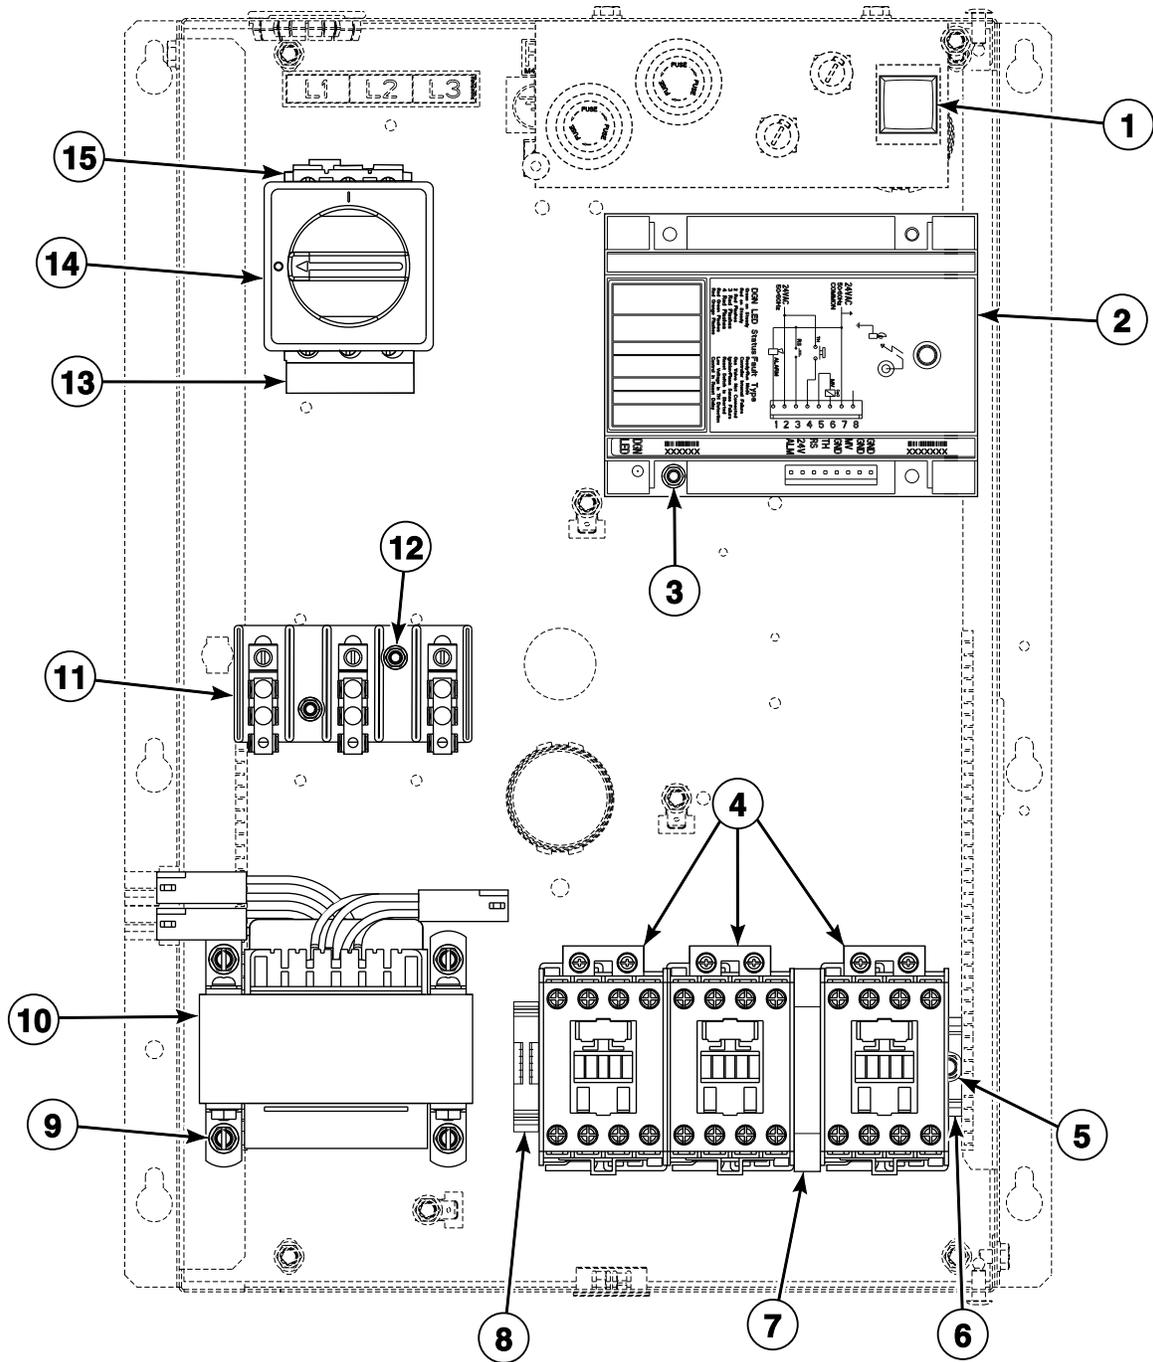


TMB3093P_70422001

Control Tray Components for Gas Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	M413431	Pushbutton Switch	CE and Australian models
2	70367301P	Ignition Control	Non-CE and non-Australian models; Models through 9/16/12
	70367401P	Ignition Control	CE models through 9/16/12; Australian models starting 9/17/12 through 3/10/13
	70458601P	Ignition Control	Non-CE and non-Australian models; Models starting 9/17/12 through 3/10/13
	70458701P	Ignition Control	CE models; Models starting 9/17/12 through 3/10/13
3	38272	Screw	2 required; Models through 9/16/12
	51783	Screw	2 required; Models starting 9/17/12 through 3/10/13
4	70323701P	Contactator	3 required
5	430497	Screw	2 required
6	M412693	Din Rail	
7	F330186P	Interlock Contactator	
8	70121001	End Stop	
9	M411072	Screw	4 required
10	M414228P	Transformer	Multitap; 100-240 Volt
	M414229P	Transformer	Multitap; 380-480 Volt
	44074401	Transformer	Dual secondary; 440 Volt
	M414230P	Transformer	Single secondary; 120 Volt
	M414312P	Transformer	Dual secondary; 120 Volt
11	430642	Terminal Block	Use 70333001 Terminal Block Shield to protect terminal block
12	51783	Screw	2 required
13	M412366	Finger Guard	CE models; Models through 7/31/11
14	M412208	Handle	CE models; Models through 7/31/11; 44160701 Extension Handle attaches to operator handle; M412368 Interlock Door mounts under operator handle
15	M412187P	Mounting Switch Base	CE models; Models through 7/31/11; Use 51782 Screw to attach

Control Tray Components for Steam Models

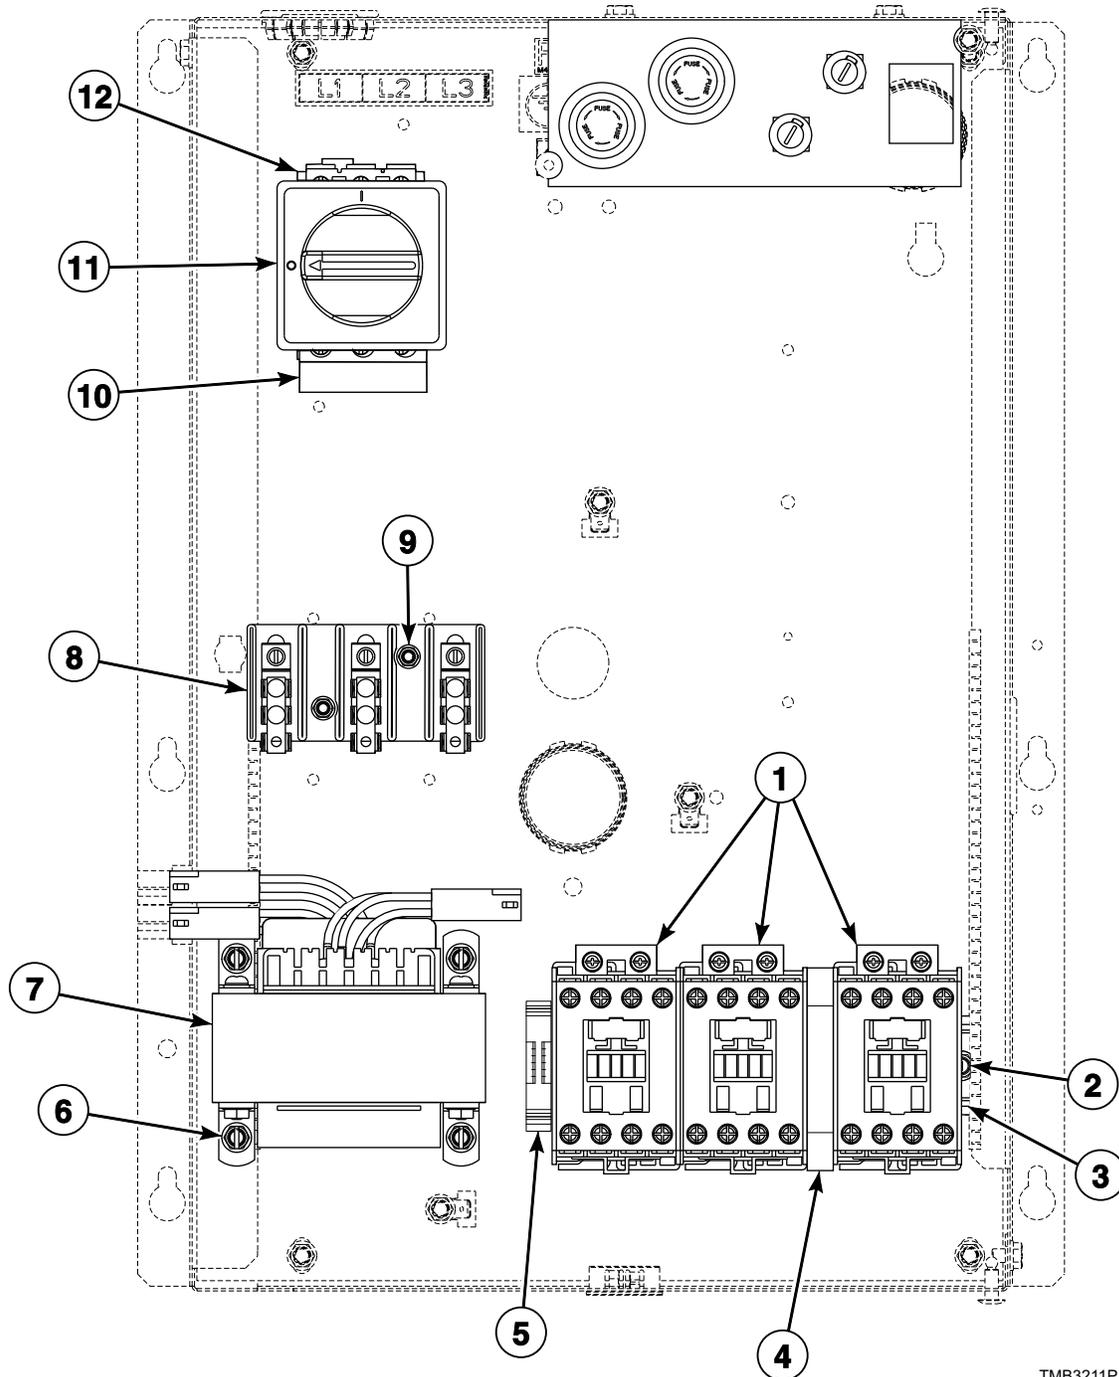


TMB3211P_70422001

Control Tray Components for Steam Models

REF	PART NO.	DESCRIPTION	COMMENTS
	M4984P3	Steam Kit	Includes item 12, 44201201 Steam Relay Harness and 2 of M405188 Screw
1	70323701P	Contactora	3 required
2	430497	Screw	2 required
3	M412693	Din Rail	
4	F330186P	Interlock Contactora	
5	70121001	End Stop	
6	M411072	Screw	4 required
7	M414228P	Transformer	Multitap; 100-240 Volt
	M414229P	Transformer	Multitap; 380-480 Volt
	44074401	Transformer	Dual secondary; 440 Volt
	M414230P	Transformer	Single secondary; 120 Volt
	M414312P	Transformer	Dual secondary; 120 Volt
8	430642	Terminal Block	Use 70333001 Terminal Block Shield to protect terminal block
9	51783	Screw	2 required
10	M412366	Finger Guard	CE models; Models through 7/31/11
11	M412208	Handle	CE models; Models through 7/31/11; 44160701 Extension Handle attaches to operator handle; M412368 Interlock Door mounts under operator handle
12	M412187P	Mounting Switch Base	CE models; Models through 7/31/11; Use 51782 Screw to attach

Control Tray Harnesses for Electric Models

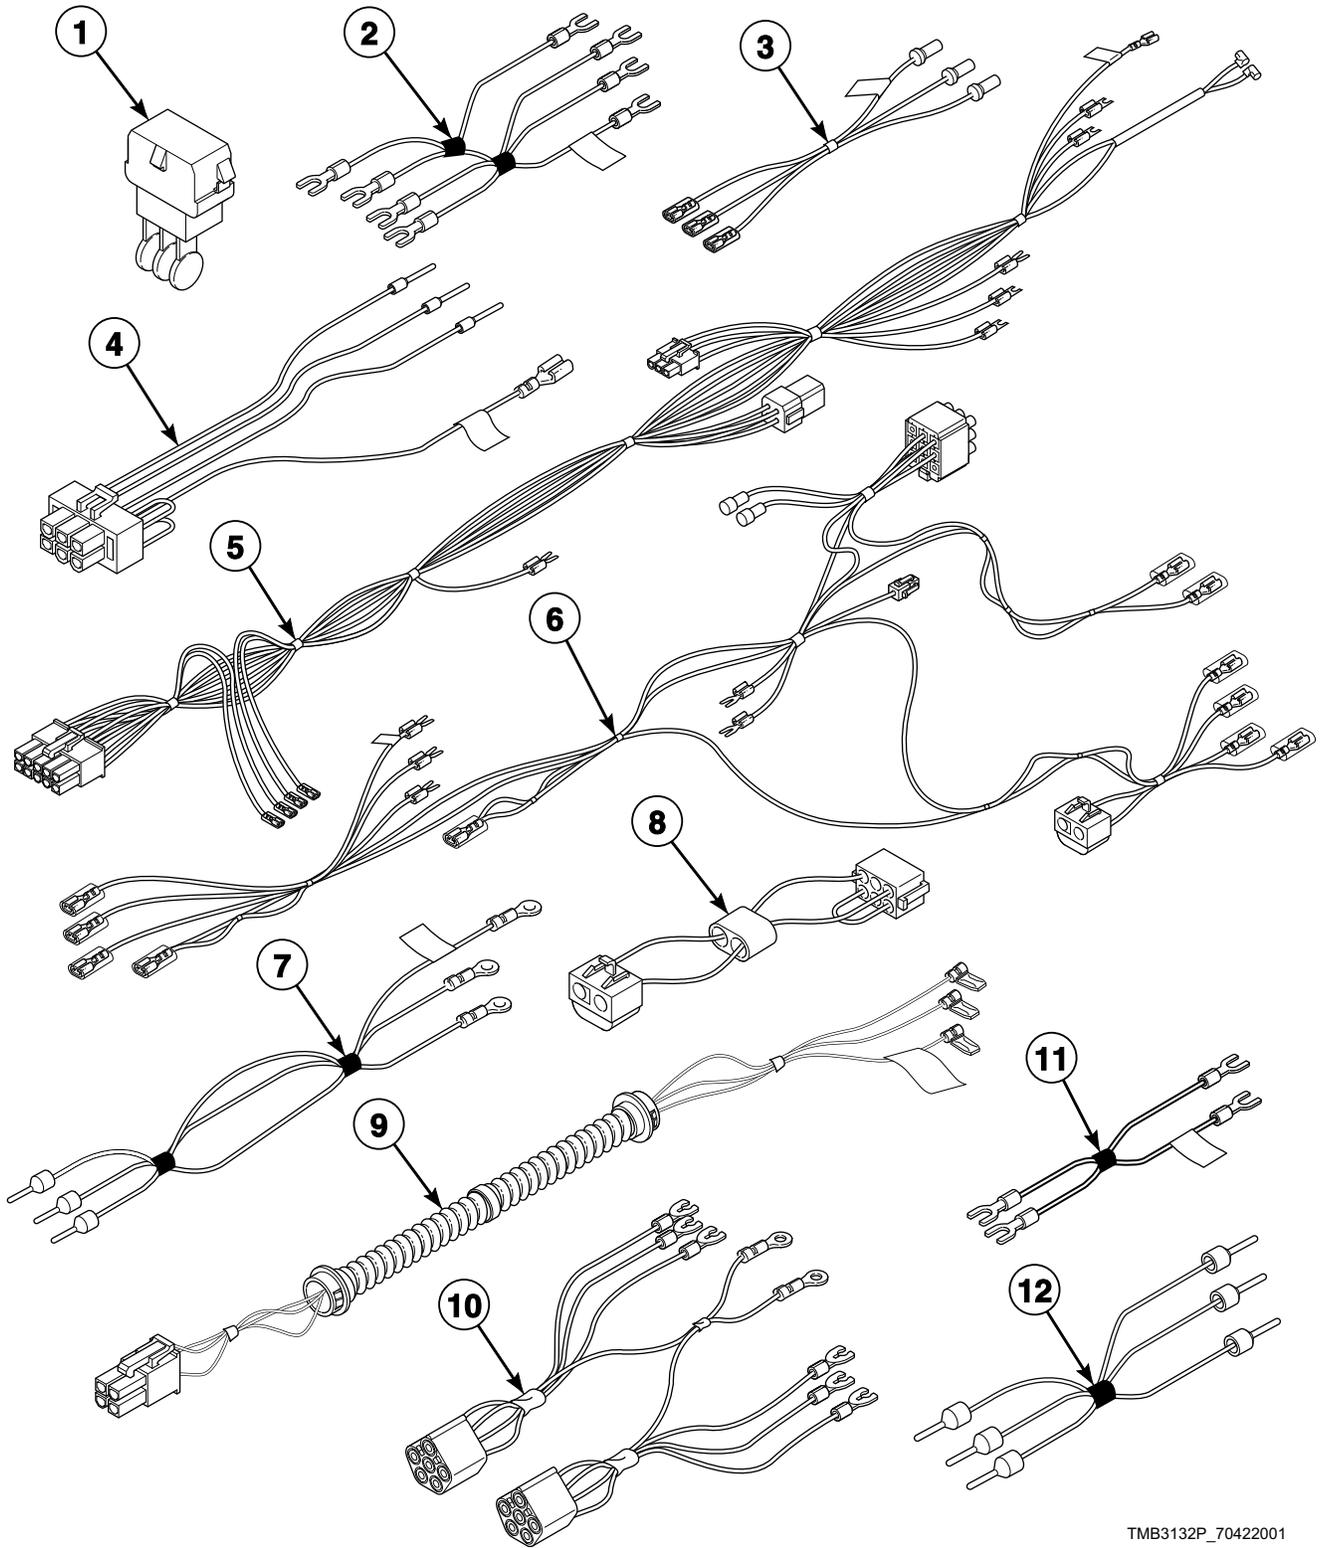


TMB3132P_70422001

Control Tray Harnesses for Electric Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	M413863	Network Capacitor Assembly	R3, RD and RM control suffixes
2	44136801	Reversing Contactor Jumper Assembly	Upper
	44136901	Reversing Contactor Jumper Assembly	Lower
3	44229801	Power Jumper	
4	44152001	Network Capacitor Harness Assembly	R3, RD and RM control suffixes
	M413930P	Ferrite Core Assembly	R3, RD and RM control suffixes
5	44227601	Contactor Tray Harness	
6	44227701	Power Harness	Models with less than 380 Volts
	44227801	Power Harness	Models with 380 Volts or higher
7	44228701	Heater Cable Set	HC1-HC2
	44246701	Heater Cable Set	HC1-HC2; 1 required for models with less than 380 Volts
	44228801	Heater Cable Set	HC3-HC4
	44246801	Heater Cable Set	HC3-HC4; 1 required for models with less than 380 Volts
8	M413507	Jumper Configuration Assembly	240 Volt
	M413508	Jumper Harness Assembly	380 Volt
	M413509	Jumper Harness Assembly	415 Volt
	M413510	Jumper Configuration Assembly	480 Volt
9	44228101	Airflow Switch Harness	
10	44142601P	Motor Contactor Harness	
11	44227901	Contactor Harness	
	44228001	Contactor Jumper Harness	3 required for models with less than 380 Volts; 1 required for models with 380 Volts or higher
12	44228201	Cable Set	PDB to breaker
	44228401	Cable Set	PDB to HC2; 2 required for models with less than 380 Volts; 1 required for models with 380 Volts or higher
	44228501	Cable Set	PDB to HC3
	44228601	Cable Set	PDB to HC4; 240 Volt

Control Tray Components for Electric Models

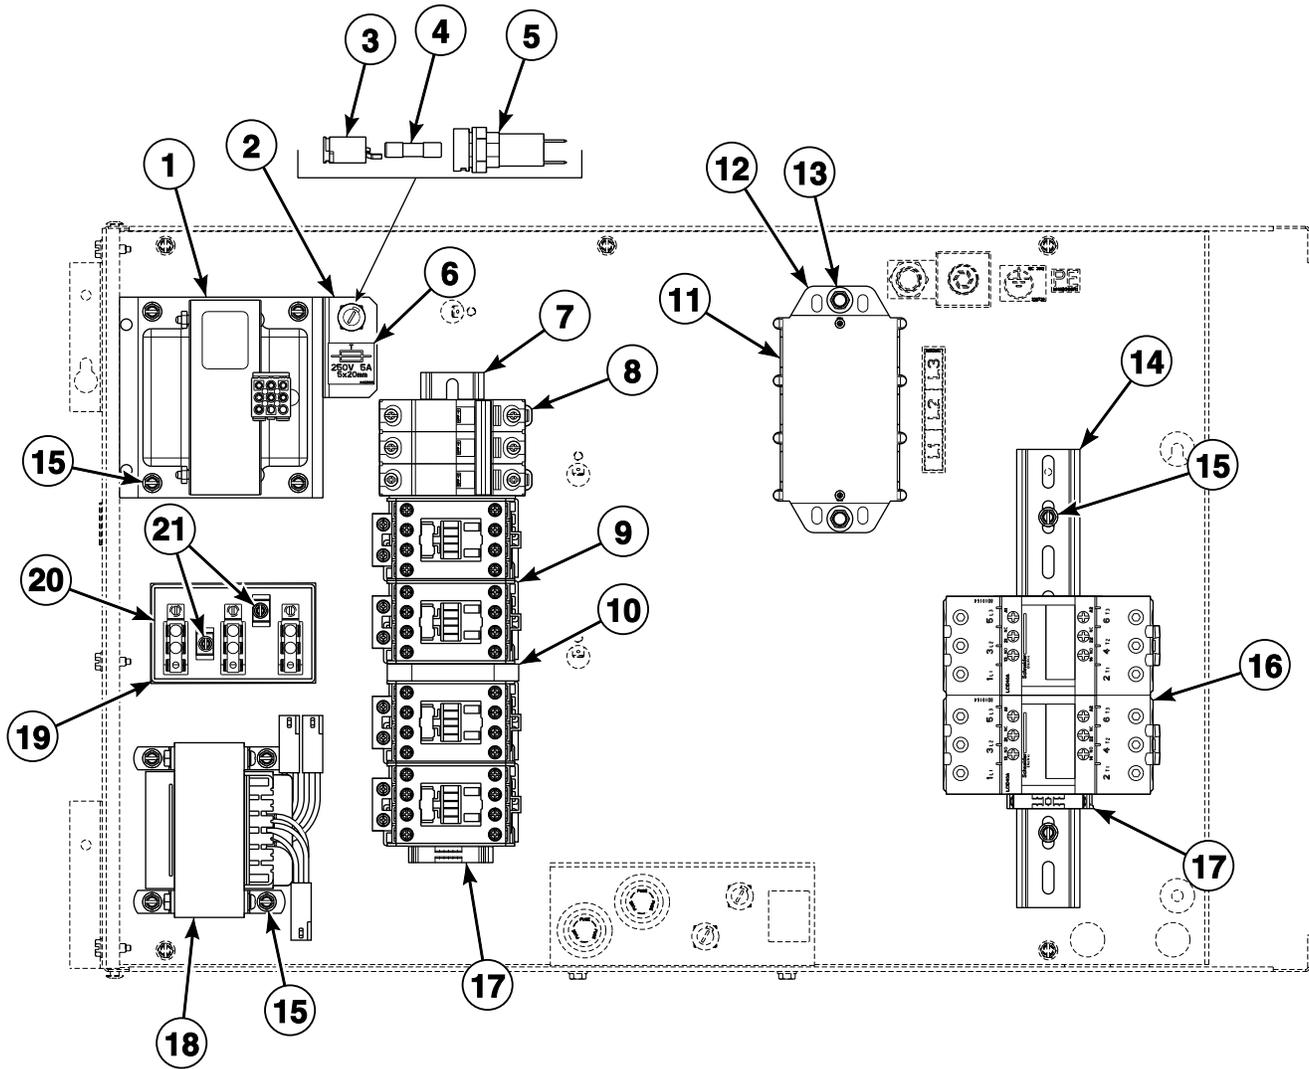

TMB3134P_70422001

Control Tray Components for Electric Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	F8401301	Transformer	Models with 380 Volts or higher
2	44230901	Fuse Mounting Bracket	Models with 380 Volts or higher
3	70329501	Fuse Holder Cap	Models with 380 Volts or higher
4	802492	Fuse	Models with 380 Volts or higher
5	70329401P	Fuse Holder Body	Models with 380 Volts or higher
6	44231001	Fuse Sticker	Models with 380 Volts or higher
7	44229701	Din Rail	
8	44212901	Circuit Breaker	
9	70323701P	Contactors	4 required
10	F330186P	Interlock Contactor	
11	44014902	Power Distribution Block Shield	
12	44211501	Power Distribution Block	
13	202175	Screw	
	44087101	Nut	
14	44229601	Din Rail	
15	F8206901	Screw	
16	44213001	Contactors	4 required for models with less than 380 Volts; 2 required for models with 380 Volts or higher
17	70121001	End Stop	2 required
18	M414228P	Transformer	240 Volts
	M414229P	Transformer	380 Volts or higher
19	M413862	Insulator	
	70333001	Terminal Block Shield	
20	430642	Terminal Block	
21	51783	Screw	

Parts Index

A

Access Panel	
44012601*	31
44012602	31
Access Panel Trim	
70399403	31
Actuator Arm Assembly	
H96387501	67
Adjustable Buzzer	
505447	19
Airflow Switch and Arm Bracket	
70319601	57
Airflow Switch Arm	
70319401	57
Airflow Switch Assembly	
44142901	57
70429601	57
Airflow Switch Harness	
44228101	89
Airflow Switch Vane	
70319201	57
70319202	57

B

Ball Bearing	
H87672374	45
M414367	45
44104801	51
Ball Bearing Insert	
H8768212H	51
Base Bracket	
H96428693	47, 53
Base Harness	
44162701	37
Base Plate	
44226401	79
Bearing Mounting	
H96428008	43
Bearing Mounting Flangette	
H8768302H	51
Belt	
H8753170H	53
H87533014	45
Belt Adjustment Tube	
H96428487	45, 47
Belt Guard	
44160201	39
44160301P	39
44160302	39
44160401	39
44160501	39
Belt Set	
H87533816P	45
Blower Cover	
H96358007	51, 55
Blower Motor Base Kit	
H608P3	51, 53, 55

Blower Shaft	
M412000	51
Bolt	
H88301411	41
44017901	35
Bottom Plate	
44230701	79
Burner	
M412025P	59, 61, 63
Burner Hole Cover	
44249701	63
Burner Orifice	
M401002	65
M401007	65
M401015	65
M401020	65
M402988	65
M402995	65
M403017	65
M411373	65
M411375	65
M411376	65
Burner Shutter	
M413795	61
Bushing	
H87529111P	47, 53, 55
H87529129P	47
H8752985HP	45
M411537	37, 39
M412917P	51
M414459	67
Buzzer Kit	
M4860P3	17
Bypass Harness	
70364103	15, 17, 21, 23, 25

C

Cable Set	
44228201	89
44228401	89
44228501	89
44228601	89
Cable Tie	
M405829	39, 63
Cam and Hinge Kit	
M4772P3	33
M4773P3	33
Circuit Board Support	
501523	27
Circuit Breaker	
44212901	91
Clevis Pin	
44091501	67
Clip	
M400984	39
Connector	
M403862	55
Contacto	
44213001	91
70323701P	85, 87, 91

N/A items do not appear in index.

Door Assembly	
44028902P	33
44028904	33
44029101	33
44058102P	33
44112101	33
70407401	33
Door Glass	
44008401P	33
44008402P	33
Door Glass Installation Tool	
M4221P4	33
Door Handle	
44007901	33
44057702	33
Door Hinge	
44075207B	33
Door Hinge Assembly	
44075201*	33
44075202	33
Door Hinge Lug Assembly	
44035001	29, 33
44035002	33
Door Latch	
M401223	29
Door Ring	
44007703B	33
44007704B	33
Door Ring and Handle Assembly	
44112001	33
Door Ring Assembly	
44007702	33
Door Ring Gasket	
44008201P	33
Door Seal Kit	
70211902P	33
Door Switch	
44018201	29
Door Switch Actuator Kit	
70215001P	33
Door Switch Cover	
44001301	29
Door Switch Harness	
44162501	29
Door Switch Wire Channel	
44001801	29
Drive Chain	
H96388186	67
Drive Rivet	
M400713	15, 17, 27
Drive Wheel	
H96388178	67

E

Earth Terminal Sticker	
M412096	77, 79
Elbow	
F421107	61
70079601	61
Electronic Control	
44037801P	19

Emergency Stop Contact Harness	
70364105P	15, 17
Emergency Stop Harness	
70364106P	15, 17, 23, 25
Emergency Stop Label	
44012901	15, 17, 23, 25
Emergency Stop Pushbutton	
F200233500	15, 17, 23, 25
End Stop	
70121001	85, 87, 91
Ethernet Gateway Kit	
NK320	25
Expansion Clip	
70030501	15, 17, 23, 25, 77, 79

F

Fan and Bushing Assembly	
M414546	51, 55
Fan Motor	
44046401P	53
Fan Motor Harness	
44242601	53
Felt Pad	
M402144	39
Ferrite Core Assembly	
M413930P	15, 19, 21, 89
Fill Hose Kit	
38349P	27
Filter	
44172201	67, 69
Filter Channel	
H96388087	67, 69
Finger Guard	
M412366	85, 87
Fire Suppression System Label	
44128901	29
Flange Bearing	
44048301P	43
Front Access Panel	
44012607*P	31
44012608	31
44012609B	31
Front Access Panel and Door Hinge Kit	
M4786P3	31, 33
Front Cover Plate	
44226501	79
Front Panel	
44012401W	29
44012402	29
Fuse	
M413621	81
70406501	81
70406601	81
70406701	81
802492	91
Fuse Bracket	
70306901	81
70313602	81
Fuse Cover	
70313301	77, 79
Fuse Holder	
44155601P	81

N/A items do not appear in index.

Fuse Holder Body 70329401P	81, 91
Fuse Holder Cap 70329501	81, 91
Fuse Label 70337201	77, 79
70337301	77
70337401	77, 79
Fuse Mounting Bracket 44230901	91
Fuse Sticker 44231001	91

G

Gas Disconnect Harness 70342101	83
Gas Stove Assembly 44196401	59, 61
44248801	63
Gas Valve M413470P	59, 63
44166701	59, 63
44166702	59, 63
44178301P	61
44178302P	61
44227201	63
44227202	63
Gas Valve Bracket M411259	59
44117501	61
44245701	63
Gas Valve Harness 44199101	61
Gas Valve Kit M4883P3	59, 63
Graphic Overlay 44240501	21
Ground Decal F230739	77, 79
Ground Lug Connector M411283	77
44212301	79
Guard Extension 44222501	39

H

Hairpin Cotter 44091601	67
Handle M412208	85, 87
Handle and Caps Assembly 44049901	35
44049902	35
Handle Bar 70399501B	33
Handle Bumper 70407203	35
Harness Assembly M412997	59, 67

Harness Strap 55881	29
Heater Cable Set 44228701	89
44228801	89
44246701	89
44246801	89
Heater Element M410939P	73
M410941P	73
Heater Element Sub-Plate 44226001	73
High Temperature Ignition Lead 44061602P	59, 61
High Voltage Suppression Cable 44239703	59, 61, 63
Hole Plug F8223801	77
Hose 44073302	27
Hose Clamp 20391	63
36801	27
Hose Fitting 44069101	27

I

Igniter Cover 70159601	63
Ignition Control 70367301P	85
70367401P	63, 85
70458601P	63, 85
70458701P	63, 85
Ignition Control Harness 44136601P	83
44186701	83
44186901	83
44251201	83
44251601	83
44251701	83
Insulation M411593	39
Insulator M413862	91
Interlock Contactor F330186P	85, 87, 91

J

Jackshaft Assembly H96357751	45
Jumper Cable 44229101	73
44229201	73
Jumper Calibration Wire 70084305	15
70324604	17, 23, 25
Jumper Configuration Assembly M413507	83, 89
M413510	83, 89

N/A items do not appear in index.

Jumper Harness Assembly	
M413506	83
M413508	83, 89
M413509	89
Jumper Strip	
M400869	73
Junction Box Harness	
44136701P	83

K

Key	
H8752006H	47, 51
70155601	27
Kickplate	
70117609	35
70117610	35

L

Label	
44108201	29
44190901	29
70414001	31
Light	
801432	27
Limit Offset Bracket	
44226101	73
Limit Thermostat	
M410542	73
Lint Panel	
44012201W	35
44012202	35
Lint Panel Clip	
44017801	35
Lint Panel Switch Bracket	
44013401	37
Lint Panel Switch Cover	
44026801	37
Lint Screen	
44063602	39
44077702P	39
Lint Screen Clip	
H96418413	39
Lock, Key and Nut Kit	
44089301P	27
L.P. Gas Conversion Kit	
M4578P3	59, 63
M4973P3	59, 63
M4975P3	59

M

Main Harness	
44162401	13
44227501	13
44243701	13
44251301	13
Male Tab Terminal	
00177	19, 21, 77, 79

Manifold	
44079601	27
44079602	27
Manifold End Bracket	
44173801	59, 61, 63
Master Link	
H96382072P	67
Membrane Switch	
M414368P	15
44037901P	19
Mixing Valve	
36958P	27
Moisture Sensor Harness Assembly	
44209201	49
Moisture Sensor Test Wires	
70468901	49
Motor	
44046301P	55
44052901P	47
44053001P	47
44157601	47
44157701	55
Motor Adjustment Tube	
H96428628	53
Motor Base	
M413171	47, 53
Motor Bracket	
H96388145	67
Motor Contactor Harness	
44136401	83
44137001P	83
44139901P	83
44142601P	83, 89
Mount Bracket	
M414276	77
Mounting Switch Base	
M412187P	85, 87

N

Nameplate	
B12389801	31
44010401	31
44010601	31
44035801	31
70243901	31
70348501	31
Nameplate Overlay	
44104501	31
44130401	31
44144401	33
44235401	31
70128901	31
70410201	31
70411401	33
Network Capacitor Assembly	
M413863	83, 89
Network Capacitor Harness Assembly	
44143401P	83
44152001	89
Network Controller Kit	
NK220	25
Network Retrofit Kit	
NK209	25

N/A items do not appear in index.

Nipple	H85101608	61
	H85101673	59, 61
	M403934	61
Nut	F430232	77
	H88412093	53
	H88412101	41, 43, 45, 47, 53
	M400035	49
	M400977	15, 17, 23, 31
	M412334	41
	M412986	47
	M414215	33
	02788	29
	20274	39, 43, 45, 51, 53, 55
	23951	33, 39, 67, 69
	24205	17
	29786	29, 67, 69
	29787	17, 19, 21
	44071201	33
	44087101	35, 91
	70030401	29, 39
	70054	15, 17, 19, 21, 23, 25, 35, 39, 51, 55, 73
	70142	47, 51, 53, 55, 67
	70288801	79

O

Output Harness	44186101	23, 25
Overlay	44130001	15
	70128401	15
	70128601	15
	70130501	15
	70130701	15
	70135301	15
	70362202	17
	70362402	17
	70362502	17
	70432201	25
	70445002	23
	70445004	23
	70462401	23
	70462701	23
	70462901	23
	70472201	23
	70472401	23

P

Panel Locator	56079	17
Pipe Bracket	M411498	59, 61
	44175801	77
	44249301	63
Pipe Cap	44087701	59
	44087801	61, 63
	44165901	59, 61
Pipe Elbow	44249401	63
Pipe Keeper Bracket	44117901	61

N/A items do not appear in index.

Pipe Nipple	H85101673	61
	M411417	59
	44249501	63
	44252301	63
	44252401	63
	70435601	61
	901403	61
Pipe Tee	44174201	59, 61
Pipe Union	M411419	59, 61, 63
Plug	M400985	51, 77
Pop Rivet	430725	23, 25, 37
	44166601	29
	70058501	33, 77, 79
	70058502	77, 79
	70126301	33, 35
	70126401	35
Porcelain Touch-Up Paint	122P4P	29
	370P4P	29
Power Distribution Block	44211501	91
Power Distribution Block Shield	44014902	91
Power Harness	44136201P	83
	44136301P	83
	44139801P	83
	44227701	89
	44227801	89
Power Jumper	44229801	89
Pushbutton Switch	M413431	85
Push-to-Start Switch	801434W	27

R

RC Filter Kit	M4457P3	15
Reducing Tee	44117401	61
Relay	M412534	15, 19, 21
Relay/Buzzer Bracket	44041701	15, 19, 21
Retaining Ring	H88602263	45
	H88603477	45
Reversing Contactor Harness	44139601P	83
Reversing Contactor Jumper	44139501	83
Reversing Contactor Jumper Assembly	44136801	83, 89
	44136901	83, 89
Reversing Contactor Jumper Wire	44157401	83

Rib Wire	
44208101	41
Rocker Switch	
44099601	17
70455101	17
70461301	17
Rod End	
44048501	45, 47, 53
Roll Pin	
H88970256	67
Roller Catch	
H87020202	35
Roller Catch Mounting Bracket	
44014001	35
Rotation Sensor	
F8066201	75
Rotation Sensor Bracket	
44111101	75
Rotation Sensor Cable Assembly	
70274102P	19, 21
Rotation Sensor Harness	
44201701	75
44250501	75
Rotation Sensor Kit	
7010P	19, 21, 75

S

Screw	
F430909	77
F8206901	77, 79, 91
H88001565	53
H8800901H	51, 55
H88010574	67
H88012034	43
H88213996	43
M400043	39, 51, 53, 55
M400044	33
M400056	47, 51, 53, 55
M400063	45, 47
M400661	33
M402574	29
M405188	67
M411072	39, 85, 87
M411165	43
02422	67, 69
202175	91
22688	45, 51, 53
38272	63, 85
430497	15, 17, 27, 37, 39, 51, 55, 57, 59, 61, 63, 69, 73, 85, 87
430757	35
431287	29
44023301	29
44048901	51
44079301	51, 53
501086	21, 35, 67, 69
501524	23, 25
51780	27, 63, 73
51783	63, 85, 87, 91
56693	59, 61, 63
61199	33, 35, 39, 51, 55, 67
70033504	29, 33
70182601	29
70244801	79
70409801	33

70442101	33
800930	15, 17, 23, 25
801019	67, 69
Security Cover Kit	
M4795P3W	15, 17
Sensor Harness Assembly	
44166801	27
Shaft Collar	
M414451	67
Shaft Wire	
44208201	41
Sheave	
H87520284	51
H87520334	45, 47, 53
H87520466	45, 47
H8752251H	45
Sleeve	
44050601	21
Slip Ring Assembly	
44240201	49
Snap Bushing	
M400770	29
M402542	61
M405340	77
44071501	63, 73, 79
70178701	27, 59, 77
Solenoid Valve DIN Connector	
70370301P	71
Spacer	
M401402	41, 43
431264	23, 25
Spark Electrode	
44253701	61, 63
Spark Electroder	
44253701	59
Spark Igniter	
M406934P	59, 61
Spray Paint	
298P4P	29
Spring Pin	
H88900683	67
Spud Holder	
M411254	59, 61
Spud Holder Weldment	
44245803	63
Steam Coil	
H96382023P	67, 69
Steam Coil Filter	
H96382106	67, 69
Steam Coil Housing End	
44114901	69
Steam Coil Support	
M411550	67, 69
Steam Configuration Harness	
44142801	83
Steam Cover	
44114501	69
44115101	67
Steam Damper Actuator	
44096401	67
Steam Filter Top Hinge Assembly	
44088101	67, 69
Steam Heater Assembly	
M414458	67

N/A items do not appear in index.

M414482	67
44114701P	69
Steam Kit	
M4984P3	87
Steam Relay Harness	
44201201	83
44243401	83
44243501	83
Steam Solenoid	
70351011P	71
Steam Stove Limit Bypass Harness	
70389901	83
Steam Valve	
F8322902	71
F8322903	71
70351001P	71
Steam Valve Coil	
M412258	71
Steam Valve Interface Harness	
44243601	67, 69, 83
Steam Valve Rebuild Kit	
70351021P	71
Step Pulley and Bearing Kit	
M4696P3	45
Stove Gasket	
M411505	59, 61
Stove Limit Cover	
44243001	73
Stove Limit Harness Bracket	
431078	59, 61, 63
Stove Limit Thermostat	
M411404	59
Stove Partition Gasket	
M411506	59
Switch	
70411901	57
Switch Assembly	
70413401	37
Switch Bracket	
70356301	57
Switch Plate	
M413236	17

T

Temperature Knob	
44104601	17
Temperature Selector Switch	
511711	17
Temperature Selector Switch Bracket	
70391701	17
Terminal Block	
430642	85, 87, 91
Terminal Block Shield	
70333001	91
Thermistor	
M414704	39
44064701	39
Thermistor Bracket Assembly	
44051301	39
Thermostat	
H8900530H	51, 55
M413988	59, 61

N/A items do not appear in index.

44232601	51
44236501	59, 63
44236601	59, 61, 63
44237401	51, 55
Thermostat Cover	
M414477	59, 61, 63
Top Access Panel Gusset	
44028201*	39
44028202*	39
Top Plate	
44226301	79
Transformer	
F8401301	91
M414228P	85, 87, 91
M414229P	85, 87, 91
M414230P	85, 87
M414312P	85, 87
44074401	85, 87
Trunion Assembly	
44055501	41
44055502	41

U

Union	
H86000031	61
USB Gateway Kit	
NK330	25

V

Valve	
F8322901P	71
Valve Rebuild Kit	
F8379502	71
Valve Replacement Kit	
M4904P3	61
M4905P3	61
M4906P3	61
M4907P3	61
Vent Elbow	
H87494019	39
Vent Pipe	
M411185	39
M411187	39

W

Washer	
M400013	47, 51, 53, 55, 67
M400014	45, 47, 51, 53, 55
M400015	45, 47, 53
M400080	47, 51, 53, 55
M400081	45, 51, 53
M405535	35
03815	15, 17, 23, 25
56552	51, 53, 55
70261401	41, 43, 45, 47, 53
70409301	33
800465	29, 67
91200	43

Water Hose	
F200116.....	27
Wire Label	
70218701.....	77, 79
70218801.....	77
70219001.....	77
Wireless Network Kit	
NK309.....	25
