


Cabinet Bag Sleever

Refer to Page 3 for Model Numbers

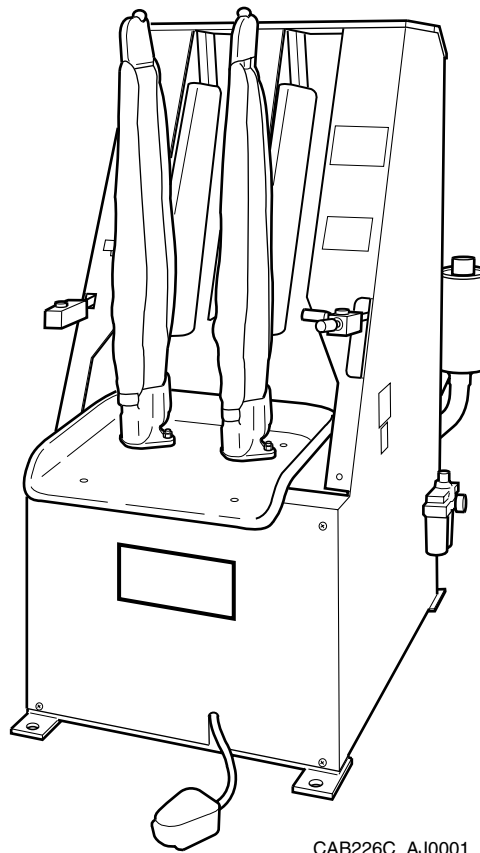

CAB226C_AJ0001

Table of Contents

Title	Page
Parts Ordering Information.....	2
Nameplate Location	2
Model Identification	3
Basic Frame and Cover	4
Buck and Clamp Assemblies - Model CBS-LC (Drawing 1 of 2).....	6
Buck and Clamp Assemblies - Model CBS-LC (Drawing 2 of 2).....	8
Buck and Clamp Assemblies - Models ACBS-C and CBS-C (Drawing 1 of 2)	10
Buck and Clamp Assemblies - Models ACBS-C and CBS-C (Drawing 2 of 2)	12
Mechanical Components	14
Shock Absorber and Link Assemblies	16
Pressure Arm and Head Lever Components	18
Steam System.....	20
Low Pressure Air System.....	22
Air System Schematic - Models Through December 31, 2002	24
Air System Schematic - Models ACBS-C and CBS-C Starting January 1, 2003	26
Shirt Hold-Down	28
Low Pressure Valve Assembly	30
Damper Housing Assembly	32
Filter/Regulator/Lubricator Assembly - Models Starting June 1997 Through November 2004	34
Filter/Regulator/Lubricator Assembly - Models Starting December 2, 2004 Through February 9, 2005	36
Filter/Regulator/Mist Separator Assembly - Models Starting February 10, 2005	38
Air Strainer Assembly	40
Valve and Bracket Assembly	42
Head Lift Cylinder Assembly	44
Buck-In Cylinder Assembly	46
Head Close Air Cylinder Assembly	48
Electrical Components	50
Limit Switch Assembly	52
Connection Box Assembly	54
Control Box Assembly (Drawing 1 of 2)	56
Control Box Assembly (Drawing 2 of 2)	58
Foot Switch Assembly.....	60
Safety Handle	62
Timer Control Box Assembly	64
Head Raising Switch Assembly (Drawing 1 of 2).....	66
Head Raising Switch Assembly (Drawing 2 of 2).....	68
Decals	70
Parts Index.....	73

© Copyright 2005, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.


Parts Ordering Information

If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.

For technical assistance, call (920) 748-3121.

Nameplate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on nameplate(s) as shown.

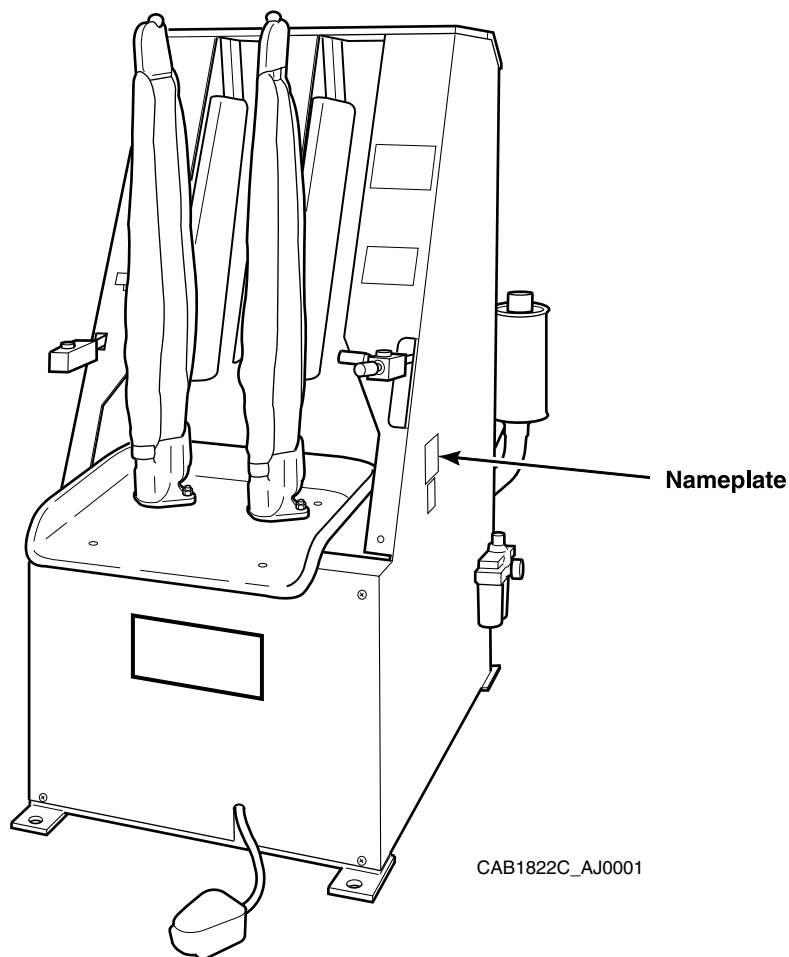

Model Identification


Information in this manual is applicable to these cabinet bag sleeve models:

ACBS-C

CBS-C

CBS-LC

Basic Frame and Cover

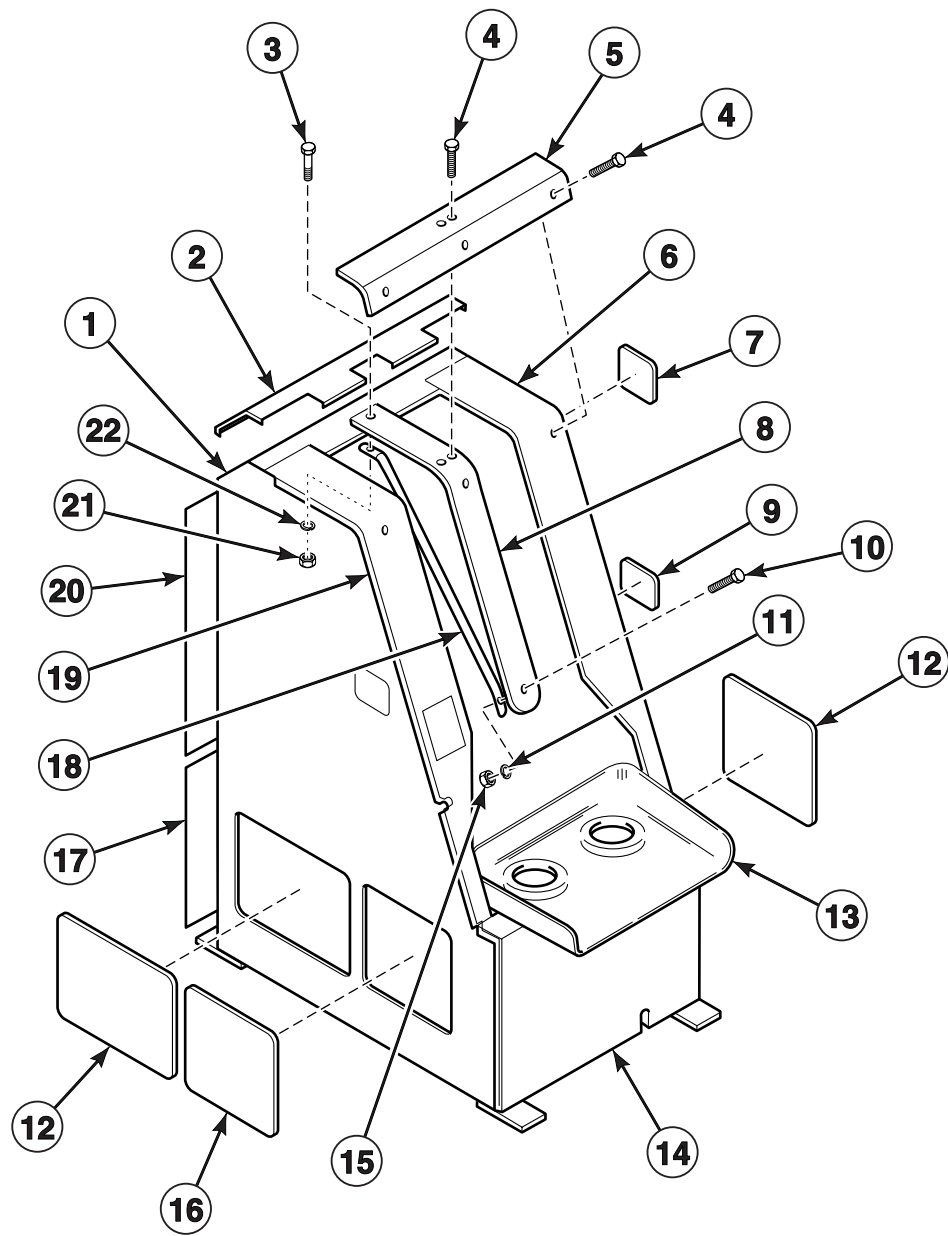


CAB180P_AJ0001

Basic Frame and Cover

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-09826	Frame Weldment	
2	J200210700	Top Cover Plate	
3	JC-61273	Screw	
4	JA-50998	Screw	
5	JA-19236	Top Front Cover	Models ACBS-C and CBS-C
6	J200210600	Right Front Cover Plate	
7	JA-05575	Cover Assembly	Inspection door
8	JA-19249	Front Center Cover	Models ACBS-C and CBS-C
	JA-18729	Front Center Cover	Model CBS-LC
9	JA-26765	Control Box Cover	
10	J1185107	Screw	
11	J1000975	Washer	
12	JA-03883	Side Cover Assembly	
13	JA-21381	Shirt Tray	
14	JA-20293	Front Cover	
15	J1000736	Nut	
16	N/A	Control Box Cover	Models ACBS-C and CBS-C through August 1993
	J1461086	Control Box Cover	Models ACBS-C and CBS-C starting August 1993
17	J1398742	Lower Rear Cover	Models starting January 1983
	JA-19968	Rear Lower Cover	Models through December 1982
18	JA-34491	Brace Cover	Models ACBS-C and CBS-C
	JA-18626	Center Panel Support Brace	Model CBS-LC
19	J200211300	Right Front Cover Plate	
20	J200211200	Top Rear Cover	
21	JA-50996	Nut	
22	J1001007	Washer	

N/A = Part no longer available

Buck and Clamp Assemblies - Model CBS-LC (Drawing 1 of 2)

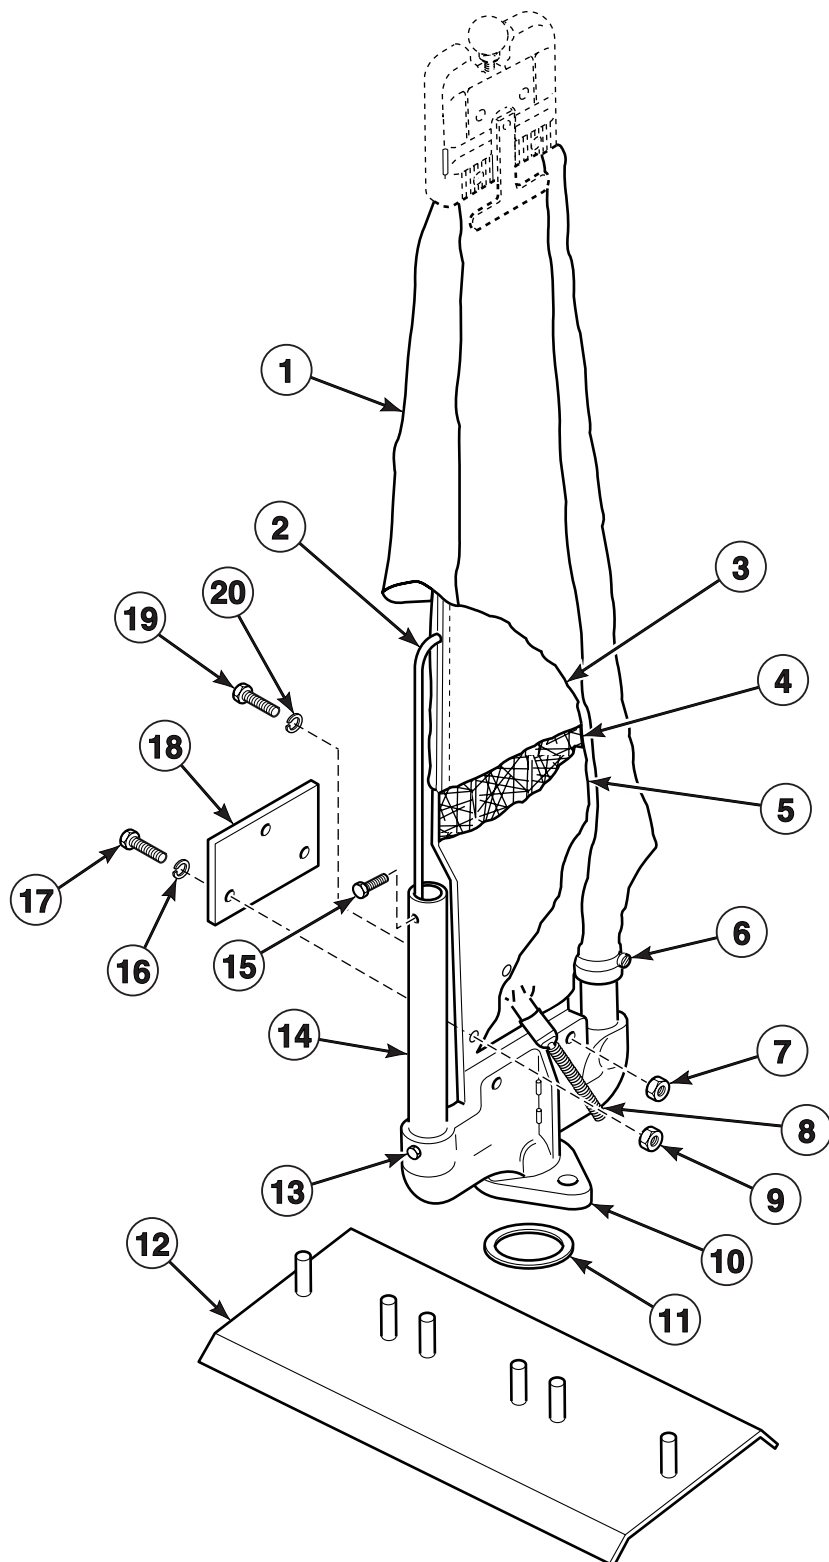


CAB2500P_AJ0001

Buck and Clamp Assemblies - Model CBS-LC (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-05745	Side Air Bag	
2	JA-18792	Air Bag Rod	
3	JA-52491	Pad	
4	JA-05659	Padding	Left
	JA-05660	Padding	Right
5	JA-18811	Coat Buck Plate	
6	JC-21541	Worm Gear Clamp	
7	70142	Nut	
8	JA-51657	Extension Spring	
9	J1209113	Nut	
10	JA-21682	Buck Base	
11	JA-52537	O-Ring	
12	N/A	Buck Stand	Optional
13	JA-50362	Screw	
14	JA-19260	Front Buck Base Tube	
15	J1199389	Screw	
16	J1120195	Washer	
17	JC-61353	Screw	
18	JA-18633	Buck Reinforcing Plate	
19	91202	Screw	
20	JC-43264	Washer	External tooth

N/A = Part no longer available

Buck and Clamp Assemblies - Model CBS-LC (Drawing 2 of 2)

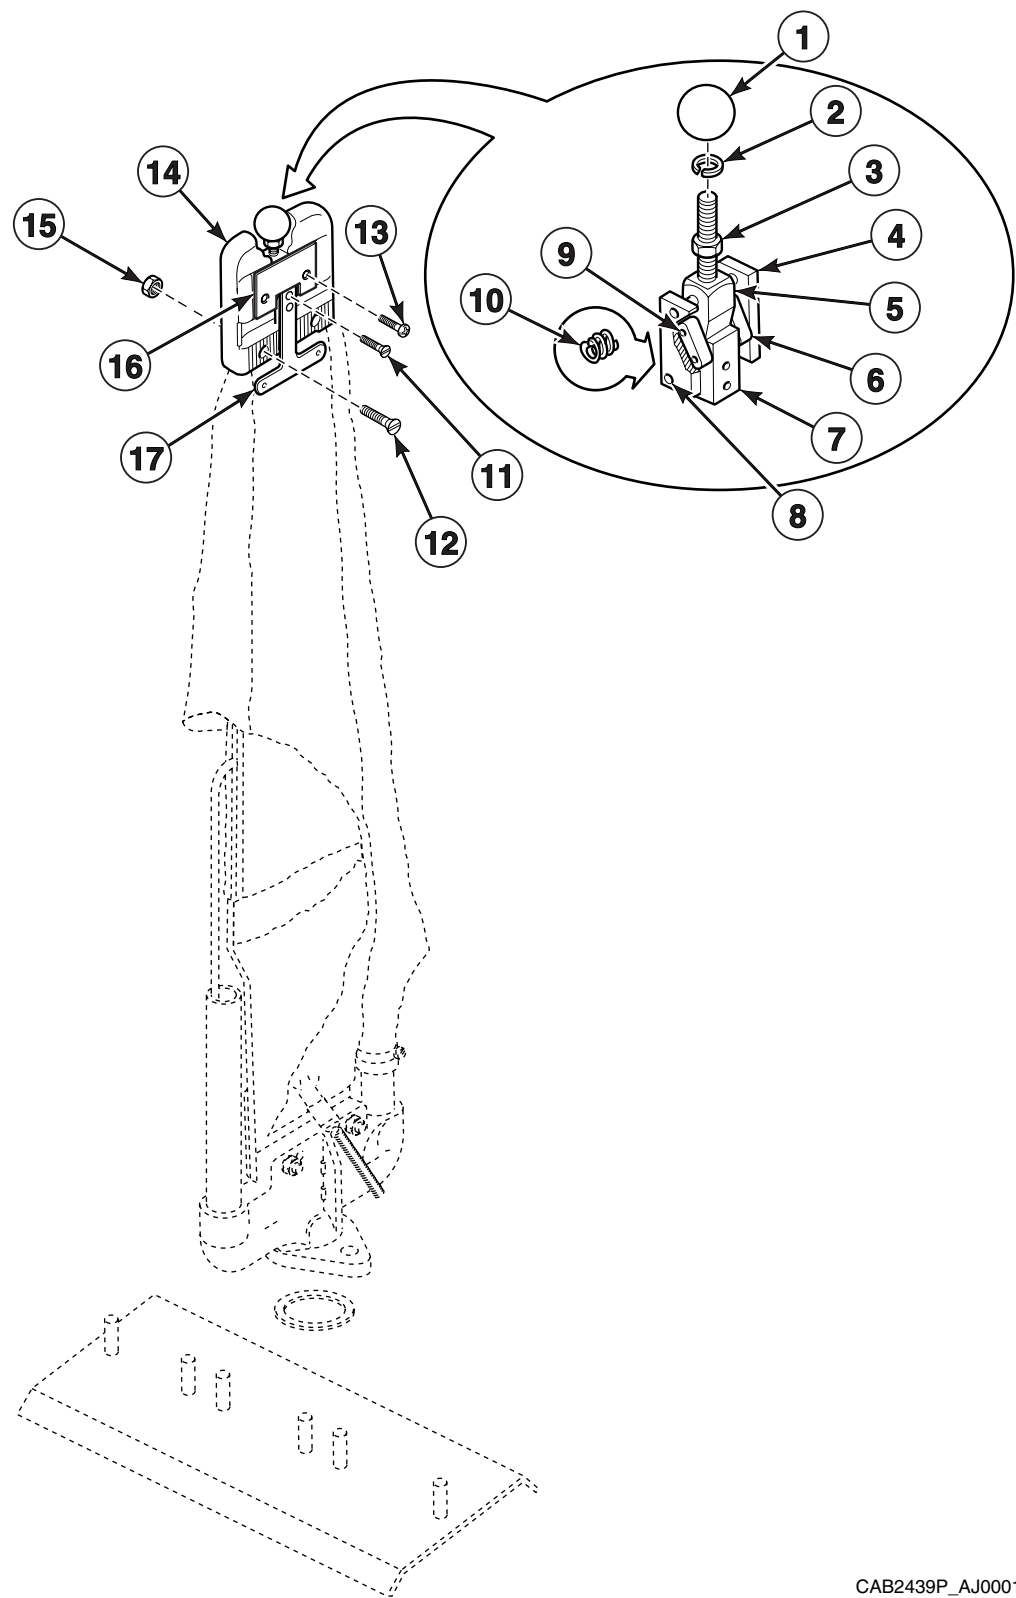


CAB2439P_AJ0001

Buck and Clamp Assemblies - Model CBS-LC (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-05563	Cuff Clamp Assembly	Includes items 1-16
	JA-05565	Cuff Clamp Linkage Assembly	Includes items 4-10
1	J1386119	Ball Knob	
2	JC-43336	Washer	Internal tooth
3	JC-48289	Nut	
4	JA-18640	Cuff Clamp Assembly Lever	2 required
5	JA-18636	Cuff Clamp Trip	
6	JA-18637	Cuff Clamp Link	2 required
7	JA-18886	Pivot	
8	JC-55026	Roll Pin	2 required
9	JA-51970	Dowel Pin	2 required
10	JA-52466	Spring	
11	JA-51675	Screw	
12	JC-62264	Screw	
13	JA-51187	Screw	
14	JA-18664	Cuff Block	
15	20275	Nut	
16	JA-18639	Front Cuff Clamp Cover	
	JA-18638	Rear Cuff Clamp Cover	
17	J1471564	Spring Clip	

Buck and Clamp Assemblies - Models ACBS-C and CBS-C (Drawing 1 of 2)

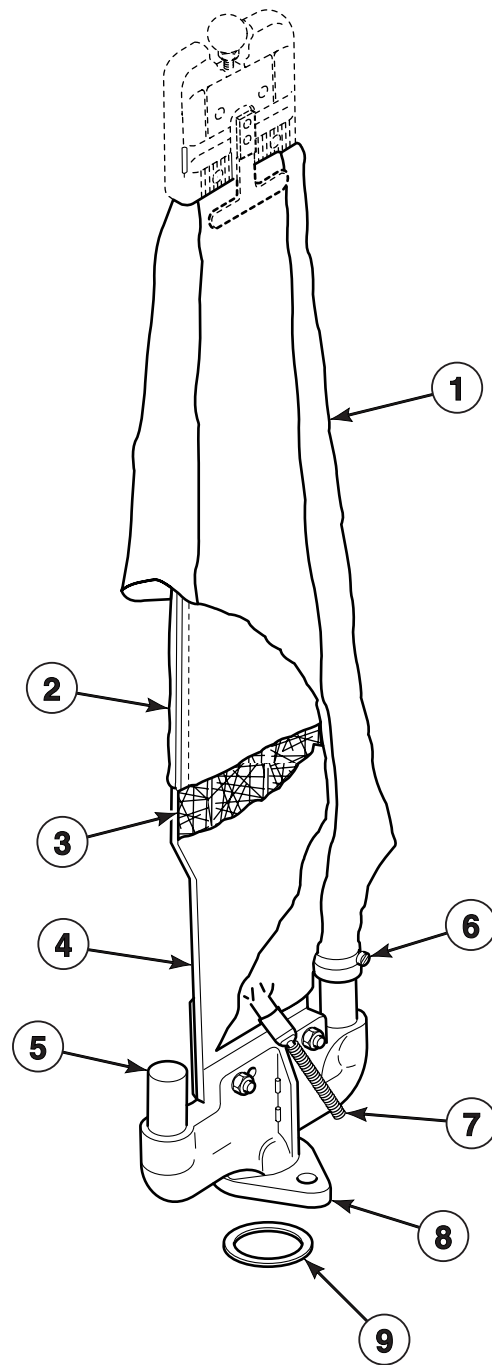


CAB1866P_AJ0001

Buck and Clamp Assemblies - Models ACBS-C and CBS-C (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-09985	Cover and Bag Assembly	Standard models
	JA-06015	Cover and Bag Assembly	Boys models
	JA-06667	Cover and Bag Assembly	Short coat models
	J1598465	Cover and Bag Assembly	Japanese models
2	JA-52657	Flamanel Pad	Standard models
	JA-52658	Steel Wool Pad	Boys models
	N/A	Flamanel Pad	Short coat models
	JA-54858	Buck Flamanel Pad	Japanese models
3	JA-05927	Padding	Standard models; Left
	JA-05928	Padding	Standard models; Right
	JA-05958	Spring Pad Assembly	Boys models; Left
	JA-05959	Spring Pad Assembly	Boys models; Right
	JA-06463	Spring Padding	Short coat models; Left
	JA-06464	Spring Padding	Short coat models; Right
	N/A	Steel Wool Pad	Japanese models; Left
	N/A	Steel Wool Pad	Japanese models; Right
4	JA-18797	Buck Shirt Plate	Standard models
	N/A	Buck Plate	Boys models
	N/A	Buck Plate	Short coat models
	N/A	Buck Plate	Japanese models
5	JA-04746	Butterfly Assembly	Located inside shaft
	20275	Nut	Located inside shaft
6	JC-21541	Worm Gear Clamp	
7	JA-51657	Extension Spring	
8	JA-21682	Buck Base	Standard and short coat models
	JA-21687	Buck Base	Boys and Japanese models
9	JA-52537	O-Ring	

N/A = Part no longer available

Buck and Clamp Assemblies - Models ACBS-C and CBS-C (Drawing 2 of 2)

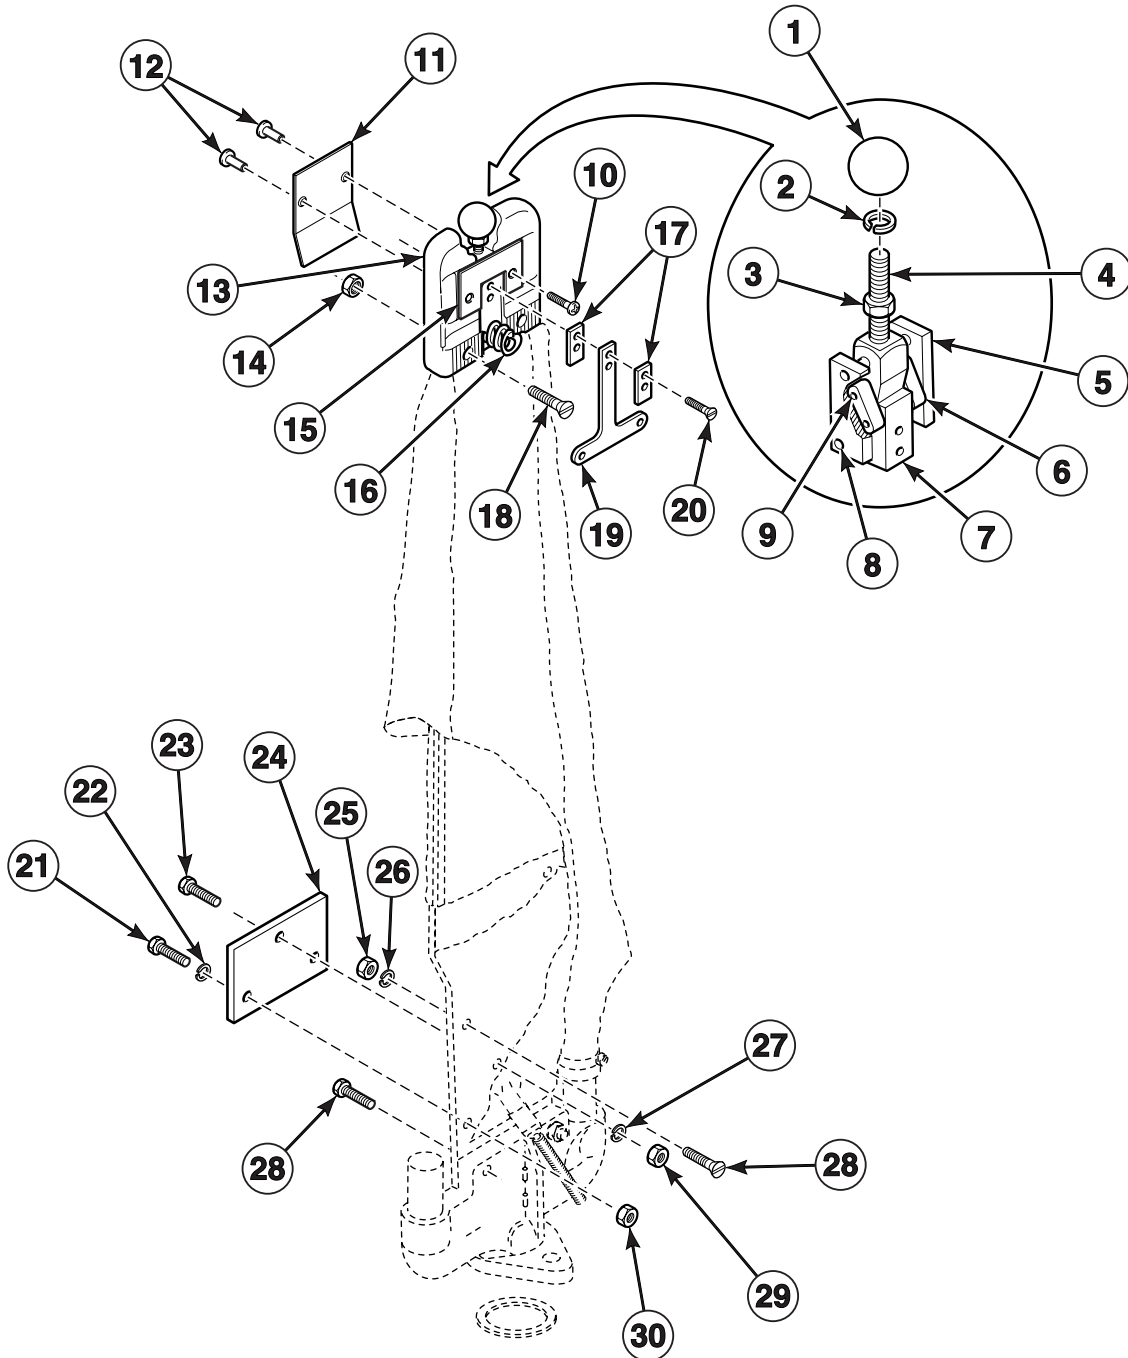


CAB2440P_AJ0001

Buck and Clamp Assemblies - Models ACBS-C and CBS-C (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-06208	Right Cuff Clamp	Standard and short coat models; Includes items 1-20
	JA-06209	Left Cuff Clamp	Standard and short coat models; Includes items 1-20
	J0798921-00	Cuff Spring Clips Kit	Use with item 17
	JA-05565	Cuff Clamp Linkage Assembly	Includes items 4-9
1	J1386119	Ball Knob	
2	JC-43336	Washer	
3	JC-48289	Nut	
4	JA-18636	Cuff Clamp Trip	
5	JA-18640	Cuff Clamp Assembly Lever	2 required
6	JA-18637	Cuff Clamp Link	2 required
7	JA-18886	Pivot	
8	JC-55026	Roll Pin	2 required
9	JA-51970	Dowel Pin	2 required
10	JA-51604	Screw	
11	JA-18638	Rear Cuff Clamp Cover	
12	JA-52611	Nut	
13	JA-18925	Right Shirt Cuff Block	Use with JA-06208 Right Cuff Clamp
	JA-18926	Left Shirt Cuff Block	Use with JA-06209 Left Cuff Clamp
	N/A	Cuff Block	Use with cuff clamp assembly
14	20275	Nut	
15	JA-18639	Front Cuff Clamp Cover	
16	JA-52466	Spring	
17	J0636872-00	Leaf Spring	2 required per assembly
18	JC-62264	Screw	
19	J1471564	Spring Clip	
20	JA-51675	Screw	
21	JC-61353	Screw	2 required per assembly
22	JC-43264	Washer	2 required per assembly
23	J1083641	Screw	
24	JA-18633	Buck Reinforcing Plate	Standard and short coat models
	N/A	Plate	Boys, midget and Japanese models
25	J1209113	Nut	2 required per assembly
26	J1120195	Washer	2 required per assembly
27	JC-43264	Washer	
28	JC-61353	Screw	4 required per assembly
29	70142	Nut	2 required per assembly
30	J1209113	Nut	

N/A = Part no longer available

Mechanical Components

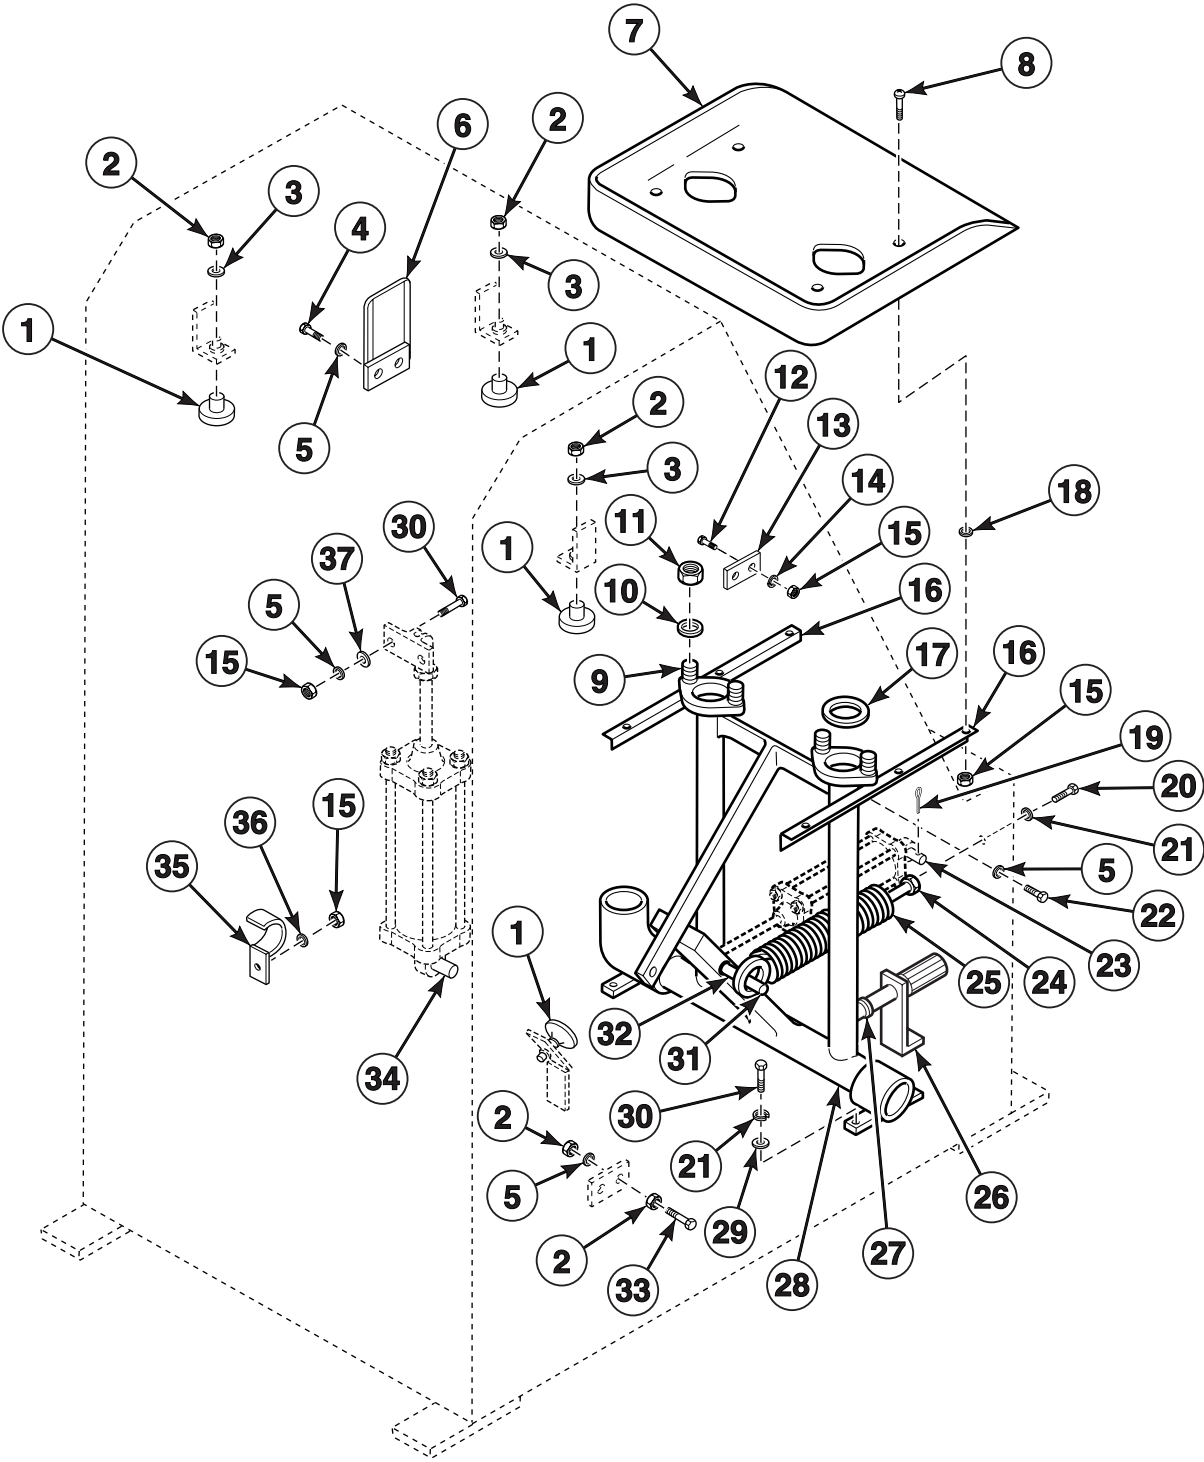


CAB2441P_AJ0001

Mechanical Components

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1042480	Bumper	4 required
2	70142	Nut	
3	M400080	Washer	
4	JA-20471	Screw	
5	J1185073	Washer	
6	JA-19755	Cuff Release Bracket	
7	JA-21381	Shirt Tray	
8	JA-50394	Screw	
9	JA-53390	Universal Wheel Stud	
10	91200	Washer	
11	J1065671	Nut	
12	JA-53020	Screw	
13	N/A	Bar Clamp	
14	J1001007	Washer	
15	20275	Nut	
16	JA-12615	Table Bracket	2 required
17	JA-52537	O-Ring	
18	JA-14180	Washer	Felt
19	JC-54533	Cotter Pin	
20	JA-18666	Bolt	
21	M400014	Washer	
22	02422	Screw	
23	JA-54392	Clevis Pin	
24	20274	Nut	
25	JA-05674	Spring Assembly	Models starting April 1992
	JA-52516	Extension Spring	Models through April 1992
26	JA-19329	Valve Mounting Bracket	
27	JA-15475	Collar Plunger Guide	
28	JA-05637	Buck Rocker Weldment	
29	J1001304	Washer	
30	J1122118	Screw	
31	JA-18907	Buck Return Spring Rod	
32	JA-51083	Retaining Ring	
33	J1238518	Screw	
34	JA-53333	Clevis Pin	
35	J1162478	Electrical Strap	
36	J1001007	Washer	
37	JC-80513	Washer	

N/A = Part no longer available

Shock Absorber and Link Assemblies

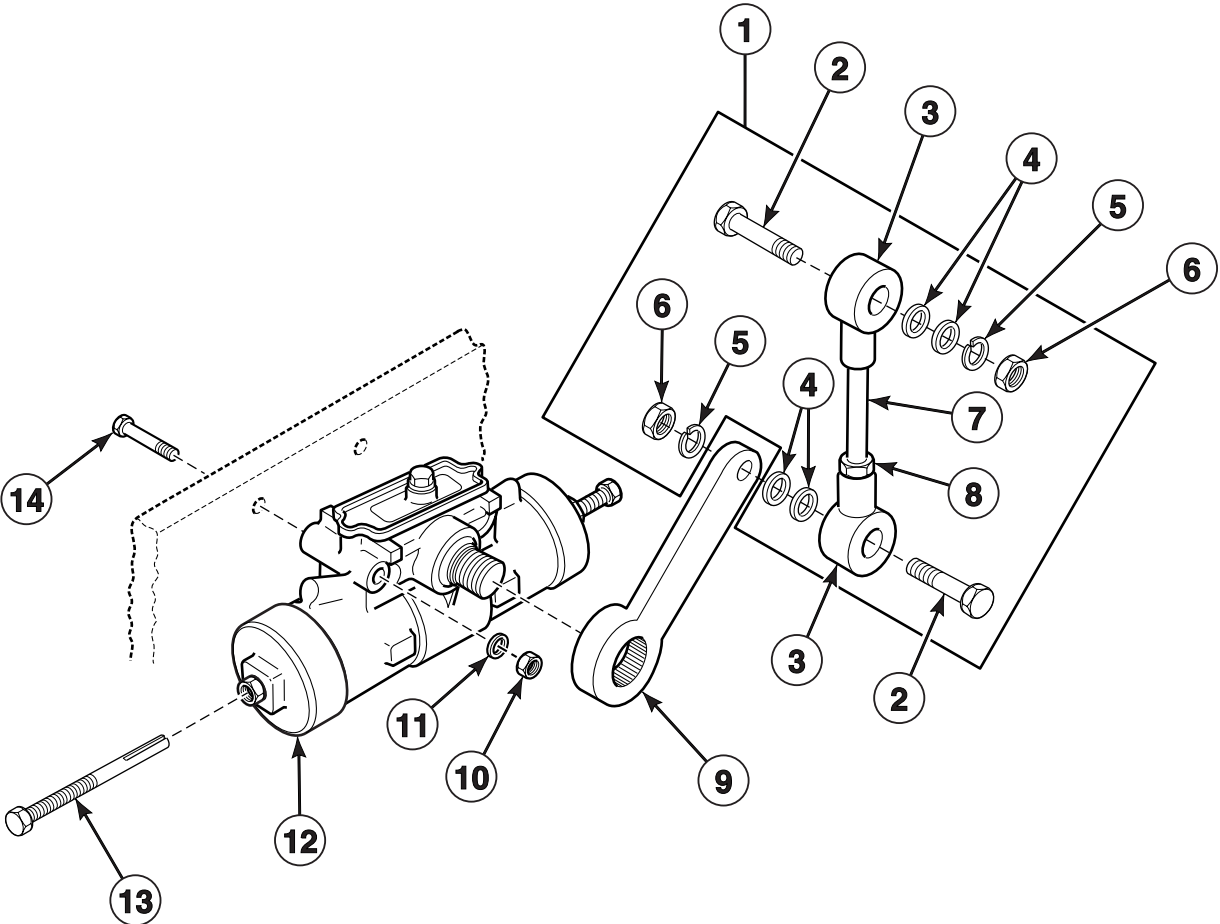


CAB39P_AJ0001

Shock Absorber and Link Assemblies

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-05574	Shock Absorber Assembly	Includes items 9, 12 and 13
	J1010-000122	Shock Absorber Rebuild Kit	
1	JA-09933	Shock Absorber Link Assembly	Includes items 2-8
2	JA-50282	Screw	
3	JA-53961	Female Rod End Bearing	
4	J1001338	Washer	
5	J1001106	Washer	
6	JA-52031	Nut	
7	JA-18894	Link Rod	
8	J1065671	Nut	
9	J1398916	Lever Arm	
10	J1000850	Nut	
11	91200	Washer	
12	JA-51273	Shock Absorber	
13	JA-51832	Screw	2 required
14	JA-50198	Screw	

Pressure Arm and Head Lever Components

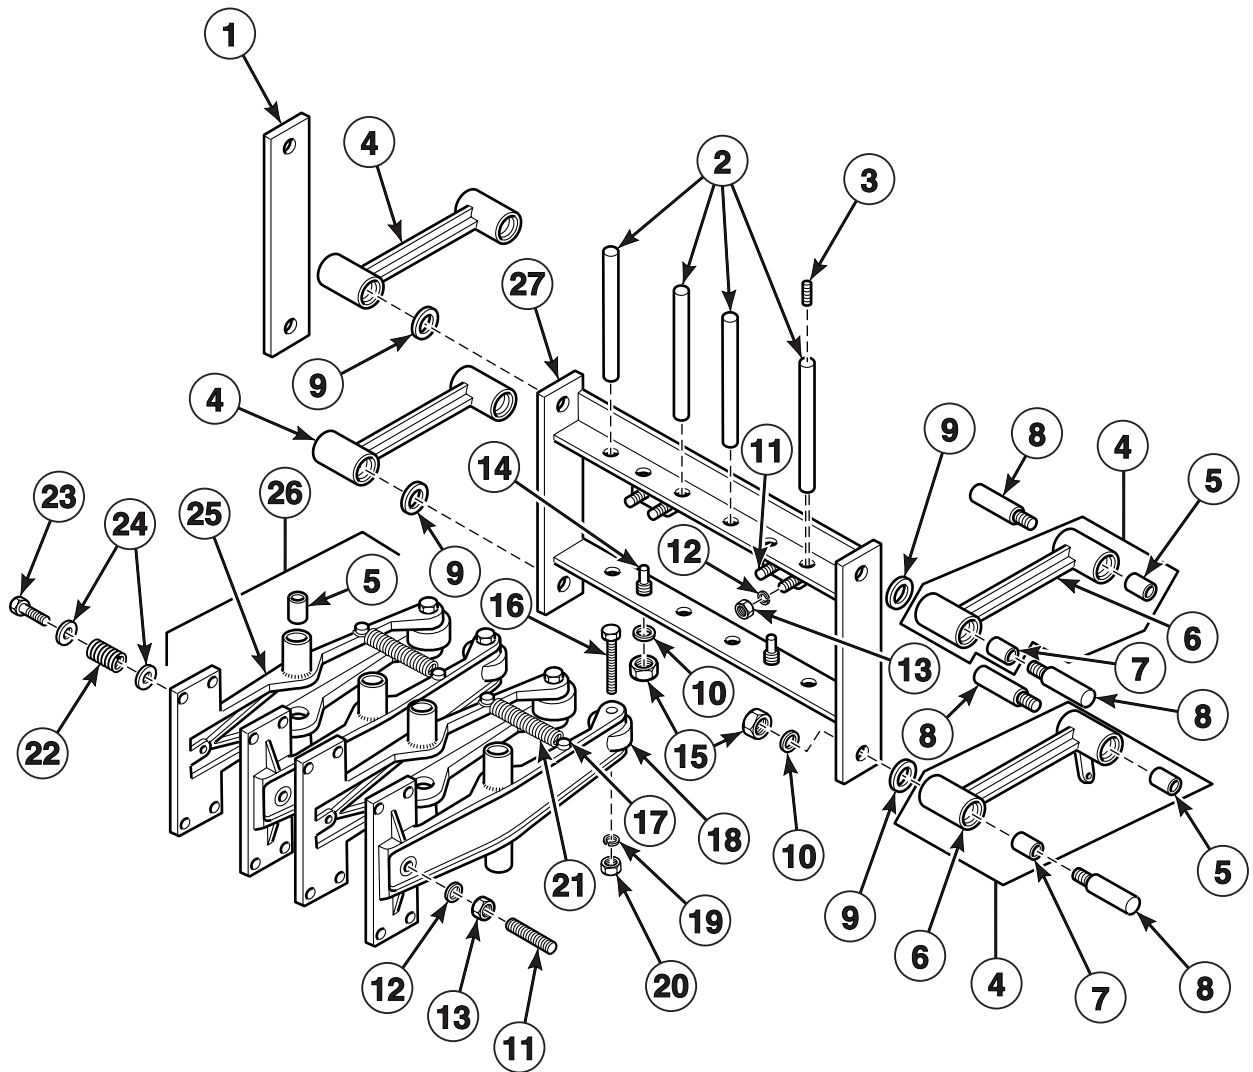


CAB190P_AJ0001

Pressure Arm and Head Lever Components

REF	PART NO.	DESCRIPTION	COMMENTS
1	JA-18859	Pivot Head Bar	
2	JA-11395	Pressure Arm Pin	4 required
3	J1179183	Screw	
4	JA-05624	Head Lever Assembly	4 required; Includes items 5-7
5	JA-50896	Oilless Sleeve Bearing	6 required
6	JA-05626	Head Lever Assembly	4 required
7	JA-51428	Oilless Sleeve Bearing	
8	JA-18856	Pivot Head Pin	8 required
9	JA-53134	Washer	4 required
10	JA-52666	Washer	External tooth; 4 required
11	J200160600	Screw	4 required
12	M400026	Nut	4 required
13	M400014	Washer	4 required
14	JA-18880	Bolt	2 required
15	J1065671	Nut	4 required
16	JC-62551	Screw	4 required
17	JA-54156	Screw	4 required
	20275	Nut	4 required
18	JA-52499	Needle Roller Bearing	4 required
19	J1338565	Washer	External tooth; 4 required
20	J1000884	Nut	4 required
21	JA-51318	Spring	
22	JA-51437	Compression Spring	
23	JC-63313	Screw	
24	J1001270	Washer	
25	N/A	Pressure Arm Casting	
26	JA-08338	Pressure Arm	Includes items 5 and 25
27	JA-05617	Head Frame Weldment	

N/A = Part no longer available

Steam System

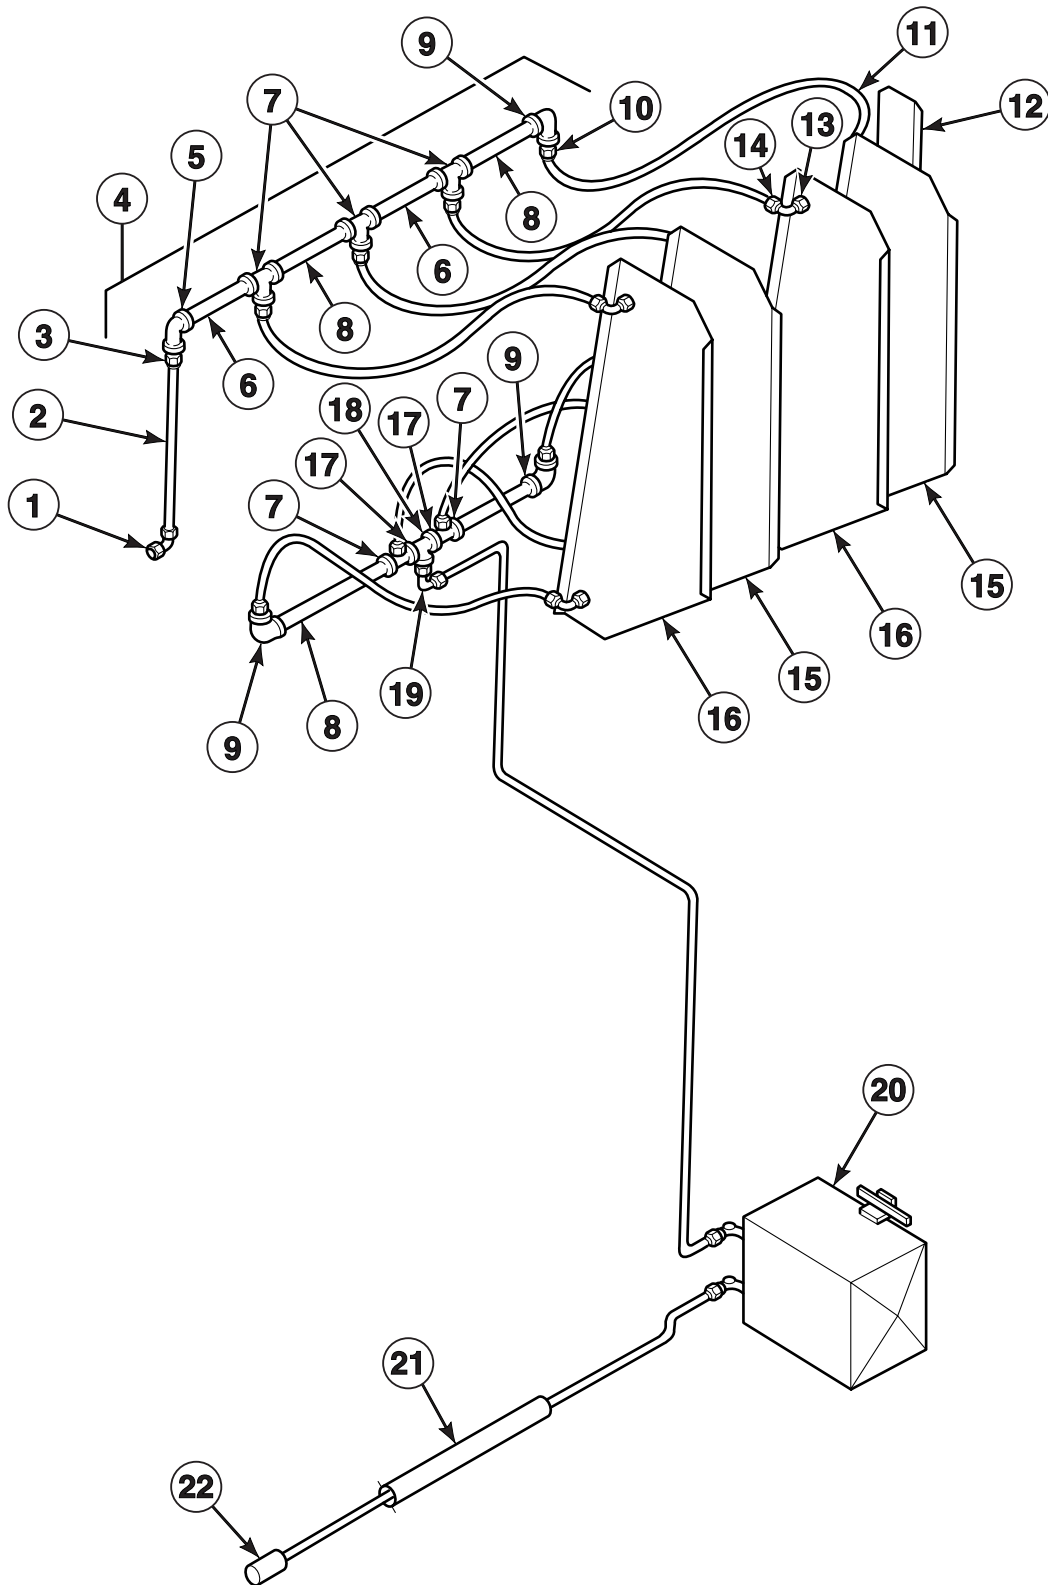


CAB192P_AJ0001

Steam System

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-05611	Lower Steam Pipe Assembly	Includes items 7-9, 17 and 18
1	J1161280	Male Compression Elbow	
2	J1117191	Tubing	Copper
3	JC-30857	Male Compression Connector	
4	JA-05612	Upper Steam Pipe Assembly	Includes items 5-9
5	J1084011	Pipe Elbow	
6	J1240860	Pipe Nipple	2 required
7	JA-51530	Pipe Tee	5 required
8	JC-46212	Pipe Nipple	Models ACBS-C and CBS-C; 4 required
	J1240860	Pipe Nipple	Model CBS-LC; 4 required
9	JA-51007	Pipe Elbow	
10	J1319276	Flare Connector	8 required
11	J1319268	Steam Hose	8 required
12	JA-19755	Cuff Release Bracket	
13	J1231422	Pipe Elbow	Models ACBS-C and CBS-C; 8 required
	JC-28696	Pipe Elbow	Model CBS-LC; 8 required
14	J115175201	Pipe Nipple	8 required
15	JA-07058	Right Shirt Head Weldment	Models ACBS-C and CBS-C; 2 required
	JA-07236	Right Coat Head Weldment	Model CBS-LC; 2 required
16	JA-07059	Left Shirt Head Weldment	Models ACBS-C and CBS-C; 2 required
	JA-07237	Left Coat Head Weldment	Model CBS-LC; 2 required
17	J1236553	Pipe Nipple	2 required; Connects item 7 to item 18
18	JA-52352	Pipe Tee	
19	JA-54351	Compression Elbow	Models ACBS-C and CBS-C
	JC-30754	Male Compression Elbow	Model CBS-LC
20	JA-05663	Heater Tank Weldment	Includes JA-52484 Steam Coil and JC-30454 Union Compression Elbow
21	JM-90527	Braided Sleeving Insulation	Insulation
22	J1161272	Male Compression Connector	

Low Pressure Air System

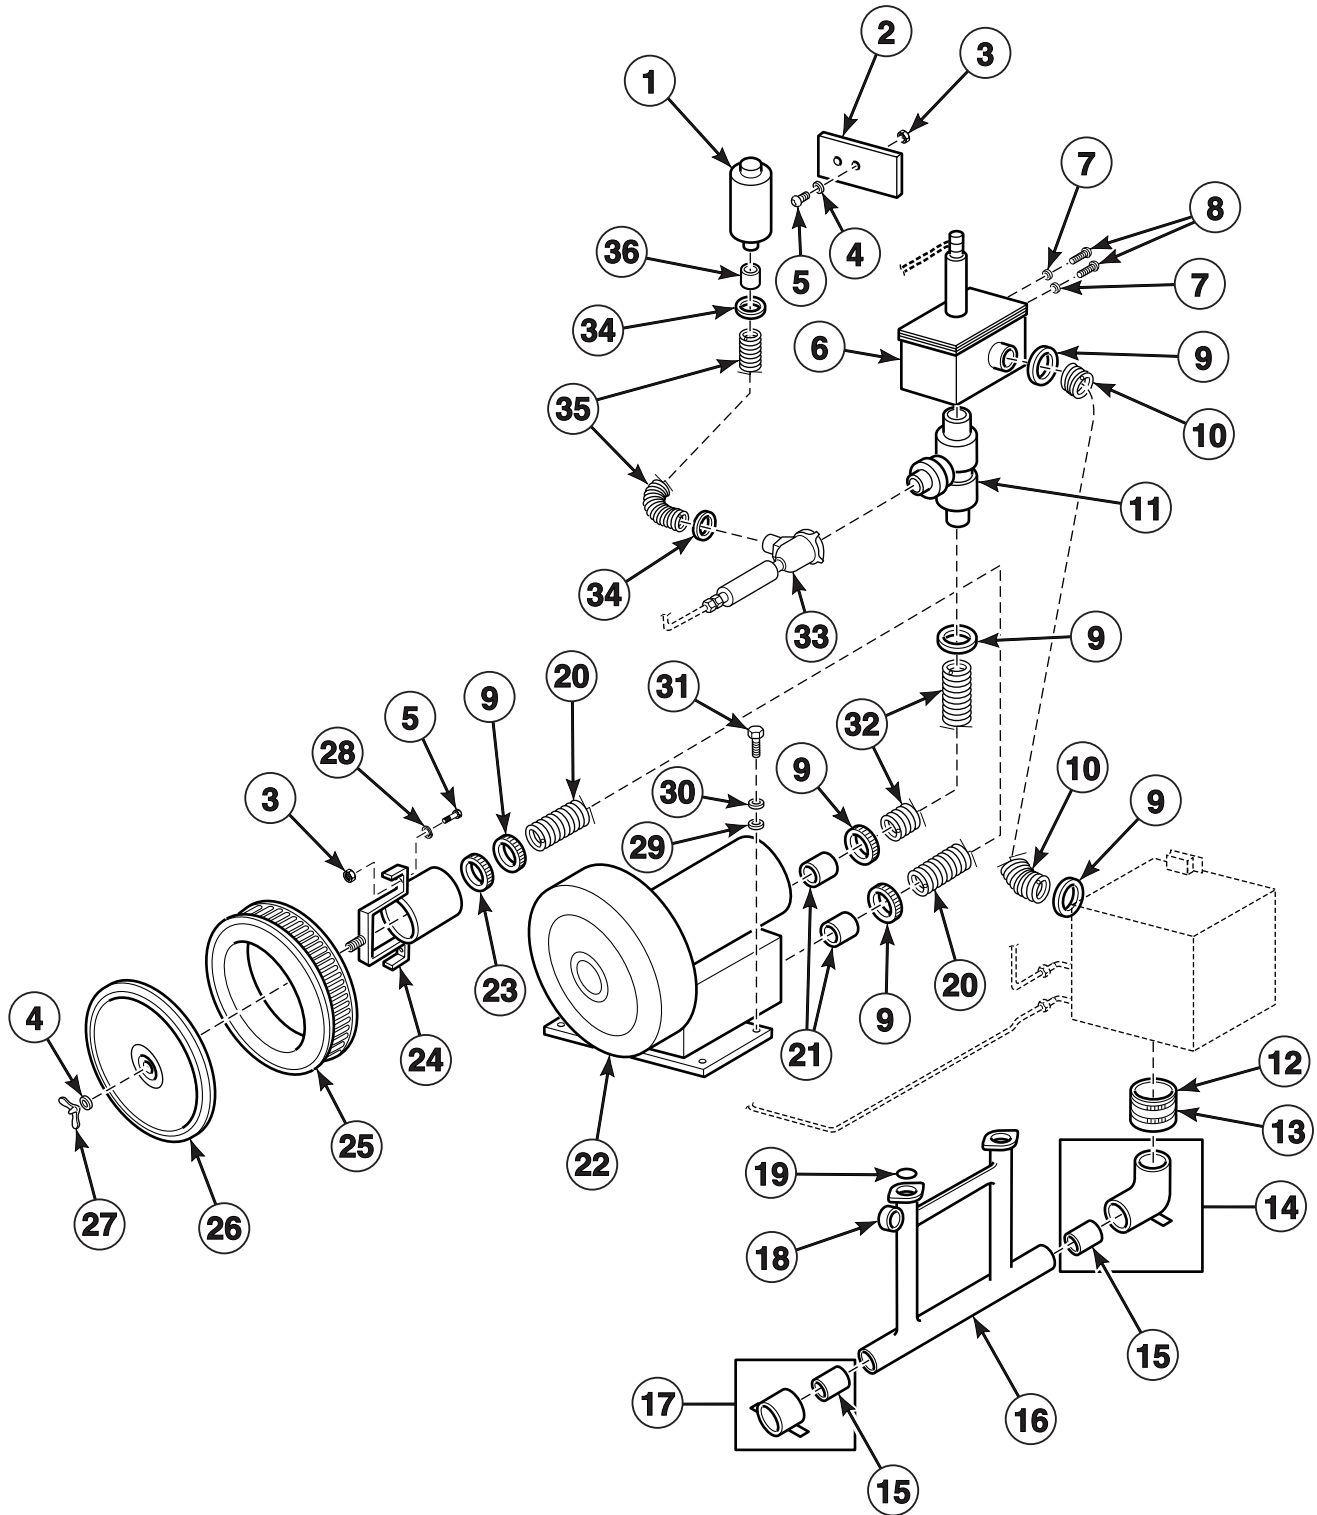


CAB2442P_AJ0001

Low Pressure Air System

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-19302	Muffler	Model CBS-LC through April 1992
	JA-19293	Manifold Bottom	Model CBS-LC through April 1992
	JA-19292	Manifold Top	Model CBS-LC through April 1992
	JA-18844	Blower Mounting Pad	Model CBS-LC through April 1992
	JA-20088	Air Intake Elbow	Model CBS-LC through April 1992
1	J1393545	Muffler Weldment	
2	J1393552	Bracket	Muffler
3	20275	Nut	
4	J1185073	Washer	
5	JA-53020	Screw	
6	J1398528	Damper Housing Assembly	Refer to <i>Damper Housing Assembly</i> section for parts breakdown
7	M400013	Washer	
8	M400057	Screw	
9	J200270900	Spiral Hose Clamp	6 required
10	J200180606	Hose	Heat exchanger
11	J1411552	Tee Weldment	
12	JA-19307	Discharge Hose	
13	JC-21520	Worm Gear Clamp	Models ACBS-C and CBS-C
	J200270900	Spiral Hose Clamp	Model CBS-LC
14	JA-05742	Buck Mounting Elbow Assembly	Includes item 15
15	N/A	Bearing	
16	JA-05637	Buck Rocker Weldment	
17	JA-05743	Buck Mounting Bracket Assembly	Includes item 15
18	JA-51283	Diaphragm Gauge	
19	JA-52537	O-Ring	
20	J200180604	Hose	Inlet
21	J1398544	Pipe Nipple	
22	J0220243-00	Blower	Siemens; Replace Gast and Fugi blowers; 200 Volt/50 Hertz/3 Phase; 208 Volt/60 Hertz/3 Phase; 230 Volt/60 Hertz/3 Phase; 460 Volt/60 Hertz/3 Phase; 220 Volt/50 Hertz/3 Phase; 380 Volt/50 Hertz/3 Phase; 415 Volt/50 Hertz/3 Phase
	J1567767	Blower	380 Volt/50 Hertz/3 Phase; 415 Volt/50 Hertz/3 Phase
23	J1401777	Washer	Models through January 1995
24	J1399013	Filter Mounting Weldment	
25	JA-55992	Air Filter	
26	J1399021	Air Filter Retainer Plate	
27	JC-48497	Nut	
28	J1001007	Washer	2 required
29	M400081	Washer	
30	M400014	Washer	
31	430648	Screw	
32	J200180608	Hose	Outlet
33	J1398510	Low Pressure Valve Assembly	Refer to <i>Low Pressure Valve Assembly</i> section for parts breakdown
34	J200270700	Spiral Hose Clamp	
35	J1393537	Hose	Muffler
36	J1398551	Pipe Nipple	

N/A = Part no longer available

Air System Schematic - Models Through December 31, 2002

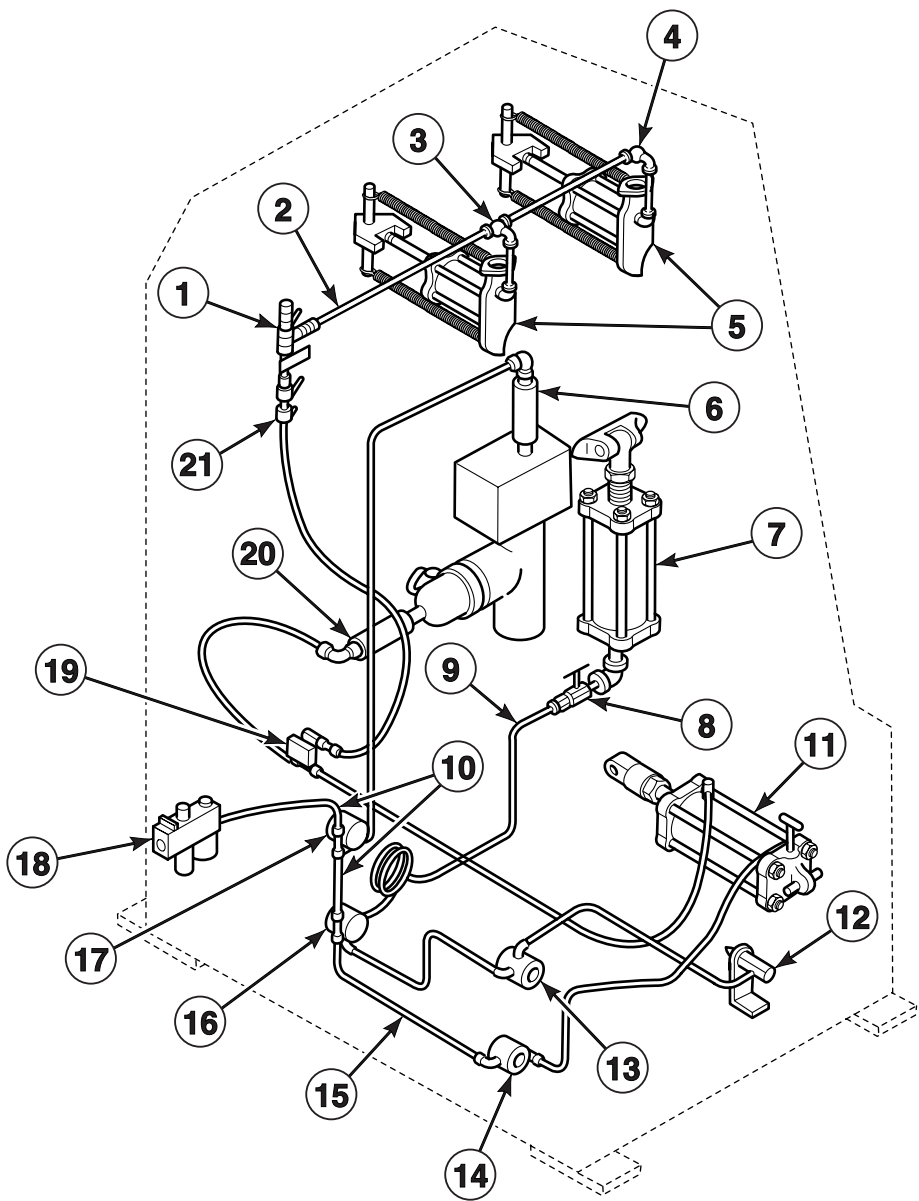


CAB222P_AJ0001

Air System Schematic - Models Through December 31, 2002

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-05608	Double Manifold	Models through September 1997; Used to connect air lines from item 11 to 19 and 11 to 14
1	JA-87000	Quick Exhaust	Includes JC-77269 Male Compression Needle Valve, J1335793 Single Bracket Coupling Weldment, J1232313 Pipe Nipple, JC-19609 Reducing Bushing, J1408004 Connector and JA-56925 Quick Exhaust Air Valve
2	J1107432	Tubing	White impolene
3	J1437029	Quick Tubing Tee	
	JA-53581	Male Polyflo Tee	
4	J1407741	Swivel Tubing Elbow	
5	JA-05679	Cylinder Assembly	Refer to <i>Head Close Air Cylinder Assembly</i> section for parts breakdown
6	J1398528	Damper Housing Assembly	Models starting 1987; Refer to <i>Damper Housing Assembly</i> section for parts breakdown
7	J1615004	Head Lift Cylinder Assembly	Refer to <i>Head Lift Cylinder Assembly</i> section for parts breakdown; Models through September 1997
	J1477579	Head Lift Cylinder Assembly	Refer to <i>Head Lift Cylinder Assembly</i> section for parts breakdown; Models starting September 1997
8	J1246024	Needle Valve	
9	J0141711-00	Tubing	Polyflo
10	J1113232	Tubing	Copper
11	JA-05677	Cylinder Assembly	Refer to <i>Buck-In Cylinder Assembly</i> section for parts breakdown
12	J1477546	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
13	J1477561	Head Position Solenoid Assembly	Replaces JA-05608 Double Manifold and JA-52747 3-Way Dump Valve; 125 Amp; NO
14	J1477553	Buck-In Solenoid Valve Assembly	Models starting 1987
	J1398510	Low Pressure Valve Assembly	Models through 1987; Refer to <i>Low Pressure Valve Assembly</i> section for parts breakdown
15	J1103970-00P	Tubing	Polyflo
16	J1477454	Lift Cylinder Solenoid Assembly	Replaces J1393099 Lift Cylinder Solenoid Assembly
17	J1393081	Damper Open Solenoid Assembly	
18	J1557479P	Filter/Regulator/Lubricator Assembly	Refer to <i>Filter/Regulator/Lubricator Assembly</i> section for parts breakdown; Use J1419803 Quick Tubing Connector
19	JA-05607	Single Manifold	Models through September 1997; Includes J1335793 Single Bracket Coupling Weldment, J1407741 Swivel Tubing Elbow and J1437029 Quick Tubing Tee
20	J1398510	Low Pressure Valve Assembly	Models starting 1987; Refer to <i>Low Pressure Valve Assembly</i> section for parts breakdown
21	N/A	Hose Assembly	Used on old air system; Includes J1113232 Tubing, N/A Clamp, JM-93401 Twin Hose, JC-77269 Male Compression Needle Valve, N/A Bracket, J1232313 Pipe Nipple, N/A Reducer Bushing, JA-56925 Quick Exhaust Air Valve and J1184548 Male Polyflo Connector

N/A = Part no longer available

Air System Schematic - Models ACBS-C and CBS-C Starting January 1, 2003

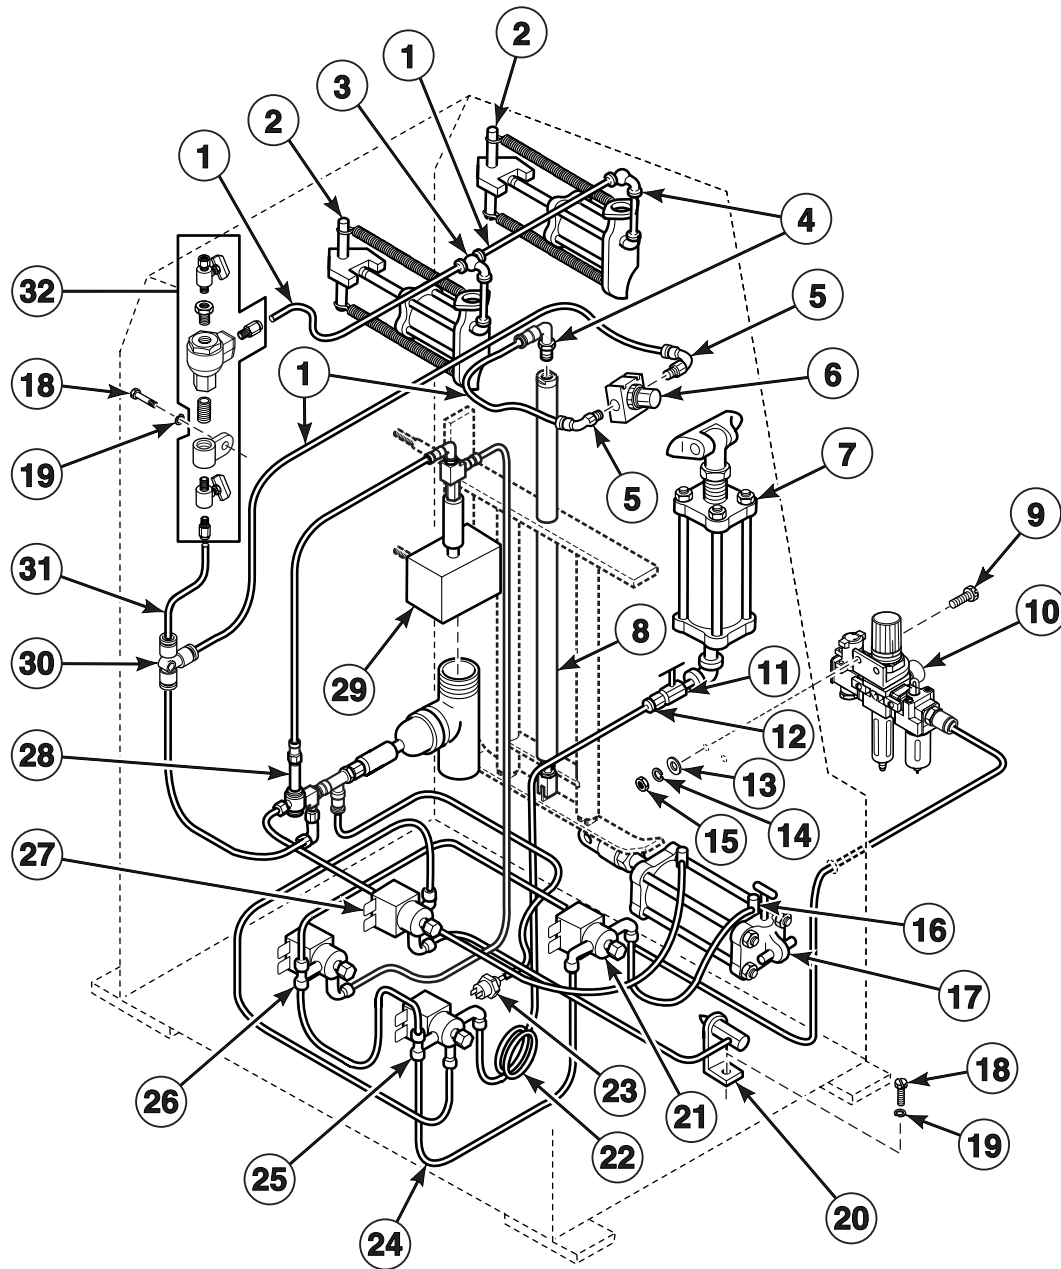


CAB1800B_AJ0001

Air System Schematic - Models ACBS-C and CBS-C Starting January 1, 2003

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1639707	High Temperature Tubing	6.3 feet required
2	JA-05679	Cylinder Assembly	2 required; Refer to <i>Head Close Air Cylinder Assembly</i> section for parts breakdown
3	J1437029	Quick Tubing Tee	
4	J1407741	Swivel Tubing Elbow	2 required
5	J0206020-00	Male Elbow	2 required
6	J0380120-00	Air Regulator	Shirt hold-down
7	J1615004	Head Lift Cylinder Assembly	Refer to <i>Head Lift Cylinder Assembly</i> section for parts breakdown
8	J0250322-00	Air Cylinder	Shirt hold-down
9	J1482314	Screw	2 required
10	J1557479P	Filter/Regulator/Lubricator Assembly	Refer to <i>Filter/Regulator/Lubricator Assembly</i> section for parts breakdown
11	J1246024	Needle Valve	Brass
12	JC-30551	Male Polyflo Connector	
13	J1001213	Washer	2 required
14	J1000975	Washer	2 required
15	20275	Nut	2 required
16	J1419811	Swivel Tubing Elbow	
17	JA-05677	Cylinder Assembly	Refer to <i>Buck-In Cylinder Assembly</i> section for parts breakdown
18	02422	Screw	3 required
19	J1001007	Washer	3 required
20	J1477546	Valve and Bracket Assembly	Refer to <i>Valve and Bracket Assembly</i> section for parts breakdown
21	J1362854	3-Way Solenoid Valve	
22	J0141711-00	Tubing	Polyflo; Black; 3/8 inch OD
23	J1364181	Pressure Switch	Models starting May 2003
	J1393594	Limit Switch Assembly	Models through May 2003
24	J1103970-00	Tubing	Blue; Nylon; 1/4 inch OD
25	J1478171	3-Way Solenoid Valve	
26	J1364173	3-Way Solenoid Valve	
27	J1477561	Head Position Solenoid Assembly	
28	J1398510	Low Pressure Valve Assembly	Refer to <i>Low Pressure Valve Assembly</i> section for parts breakdown
29	J1398528	Damper Housing Assembly	Refer to <i>Damper Housing Assembly</i> section for parts breakdown
30	J0140949-00	Union Tee	
31	JM-93516	Sleeve	Fiberglass
32	JA-87000	Quick Exhaust	Includes JC-77269 Male Compression Needle Valve, J1335793 Single Bracket Coupling Weldment, J1232313 Pipe Nipple, JC-19609 Reducing Bushing, J1408004 Connector and JA-56925 Quick Exhaust Air Valve

Shirt Hold-Down

Models Starting January 1, 2003

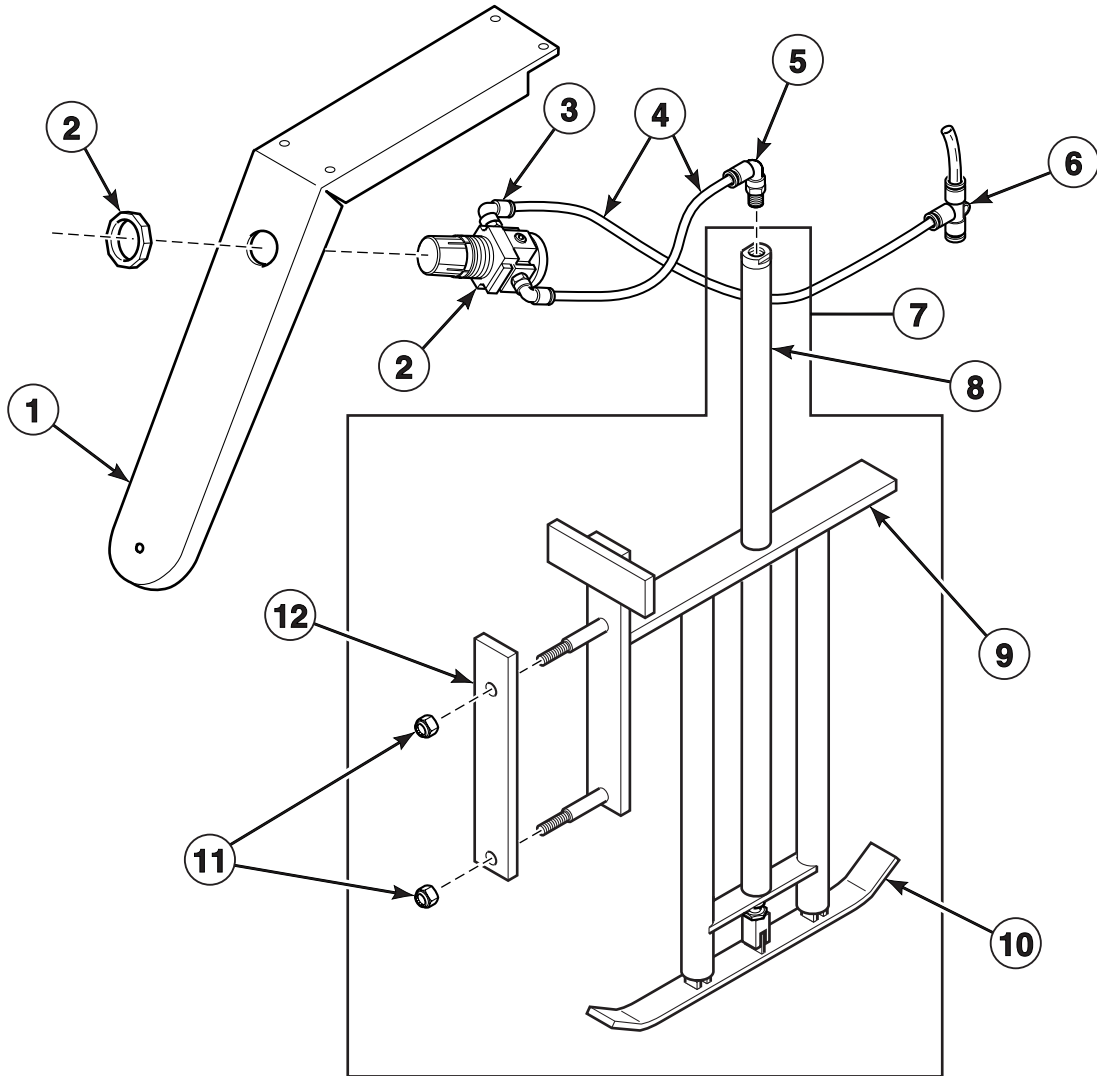


CAB1908K_AJ0001

Shirt Hold-Down

REF	PART NO.	DESCRIPTION	COMMENTS
	F140605	Cable Tie	3 required
	J1438357	Quick Tubing Tee	Models ACBS-C and CBS-C
	J1364181	Pressure Switch	Models ACBS-C and CBS-C
	F140527	Plug	Models ACBS-C and CBS-C
	F140552	Female Connector	2 required; Models ACBS-C and CBS-C
1	JA-19249	Front Center Cover	
2	J0380120-00	Air Regulator	Includes nut
3	J0206020-00	Male Elbow	2 required
4	J1639707	High Temperature Tubing	8 feet required
5	J1407741	Swivel Tubing Elbow	2 required
6	J0140949-00	Union Tee	
7	J0637156-00	Shirt Hold-Down Assembly	Includes items 8-12
8	J0250329-00	Air Cylinder	
9	J0637154-00	Frame Weldment	
10	J0637146-00	Foot Assembly	
11	F430218	Nut	Nylon; 2 required
12	J0637153-00	Clamp Bar	

Low Pressure Valve Assembly

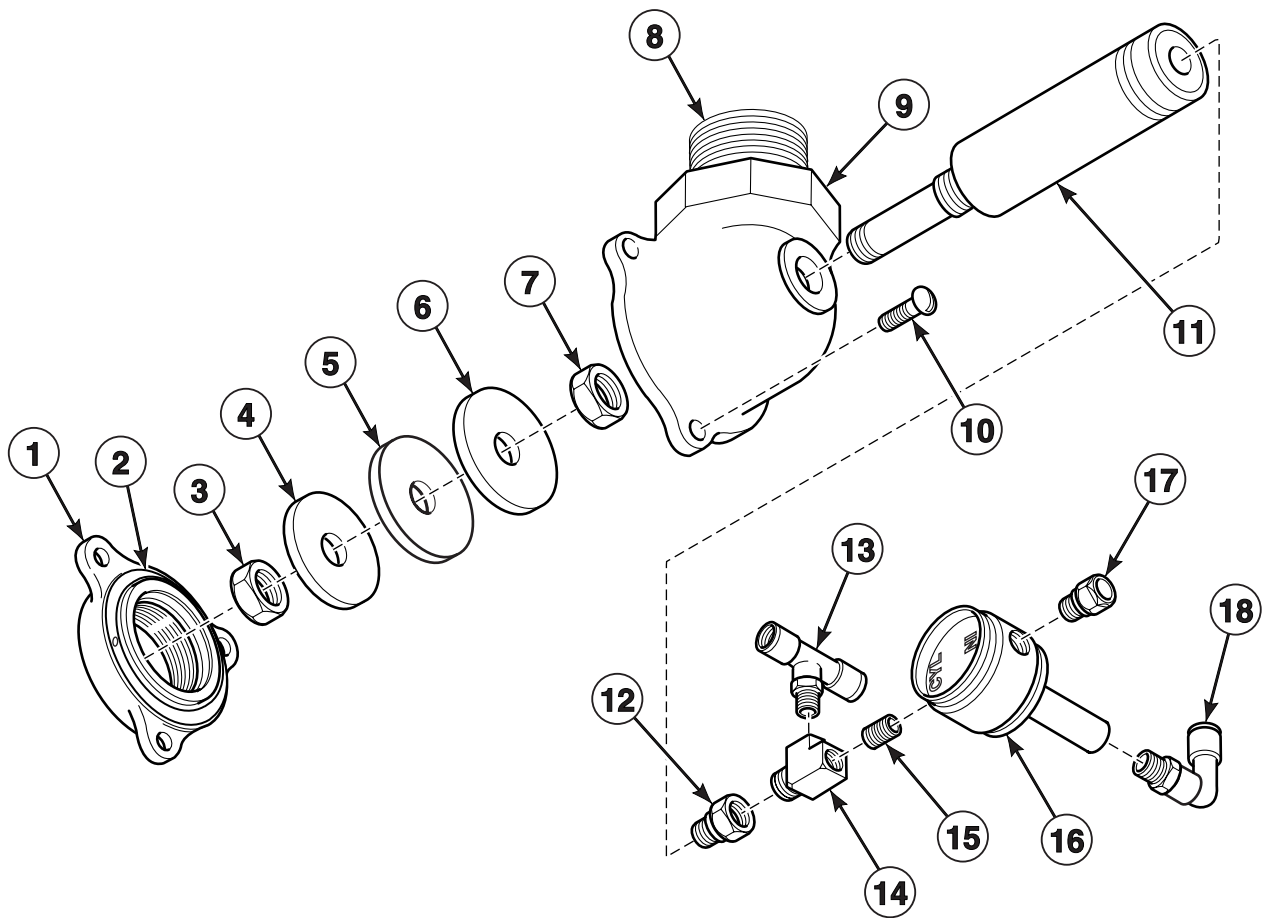


CAB2443P_AJ0001

Low Pressure Valve Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1398510	Low Pressure Valve Assembly	Includes items 1-18
1	JA-50577	Cover	Outlet
2	JA-50578	Gasket	
3	J1391515	Nut	
4	J1359892	Washer	
5	J1359884	Seal	Buna-N
6	J1359876	Washer	Large
7	JC-48289	Nut	
8	J1398551	Pipe Nipple	
9	J1383116	Valve Body	
10	JA-50055	Screw	
11	J1390806	Air Cylinder	Includes nut
12	JA-19559	Closing Speed Orifice	
13	J1438357	Quick Tubing Tee	
14	JC-30541	Street Pipe Tee	
15	J1232313	Pipe Nipple	
16	JA-54437	3-Way Dump Valve	NO
17	J1408004	Connector	
18	J1407741	Swivel Tubing Elbow	

Damper Housing Assembly

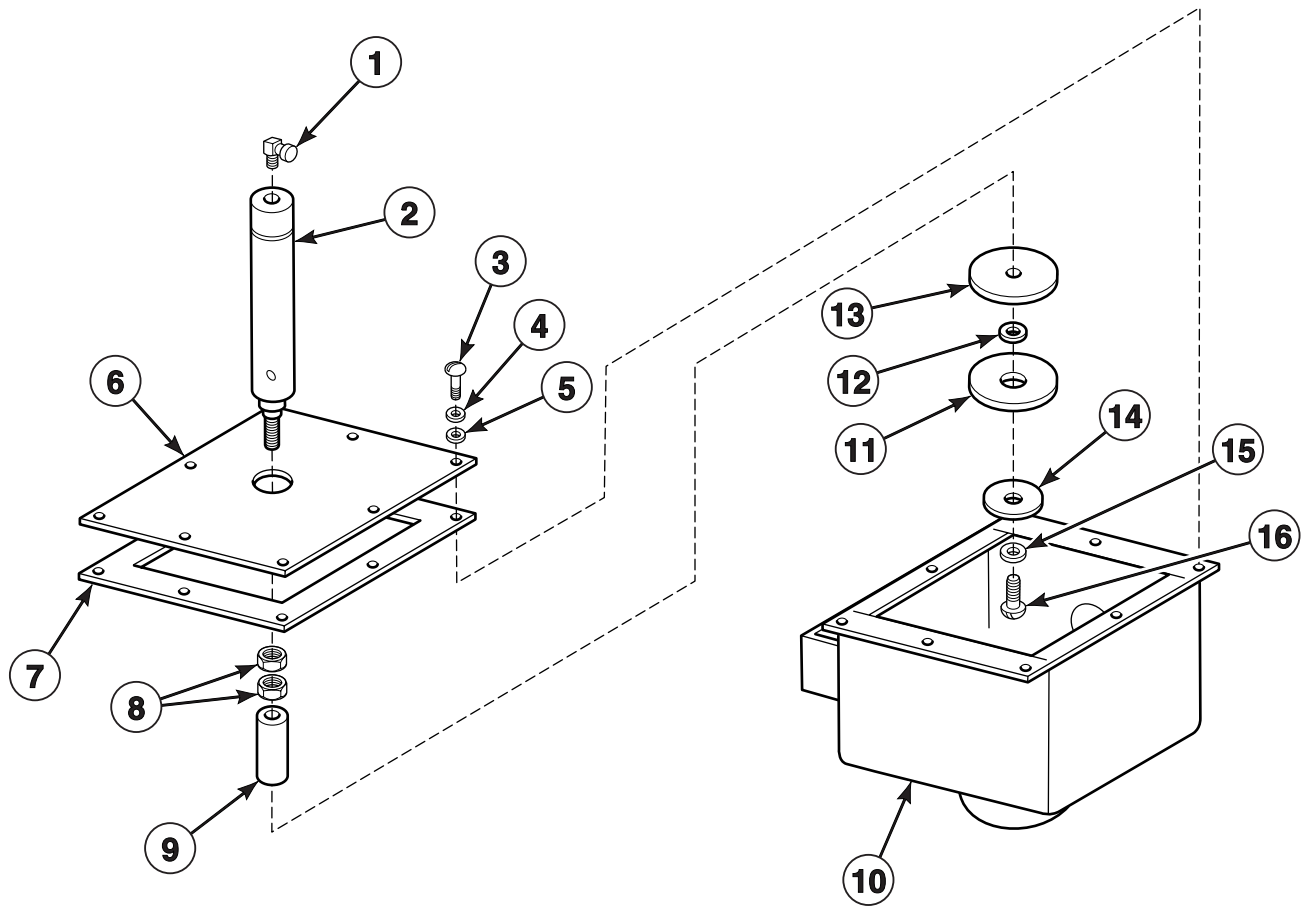


CAB40P_AJ0001

Damper Housing Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1398528	Damper Housing Assembly	Includes items 1-16
1	J1407741	Swivel Tubing Elbow	
2	J1390806	Air Cylinder	Includes nut
3	JC-61269	Screw	
4	J1001213	Washer	
5	J1000975	Washer	
6	J1398486	Top Damper Housing Plate	
7	J1363563	Damper Housing Gasket	
8	JC-48289	Nut	
9	J200101500	Cylinder Coupling	
10	J1398494	Damper Housing Weldment	
11	J1398460	Washer	Rubber
12	J1398452	Washer	Shim
13	J1398478	Washer	Large
14	J1398437	Washer	Outside
15	M400013	Washer	
16	JC-62851	Screw	

Filter/Regulator/Lubricator Assembly - Models Starting June 1997 Through November 2004

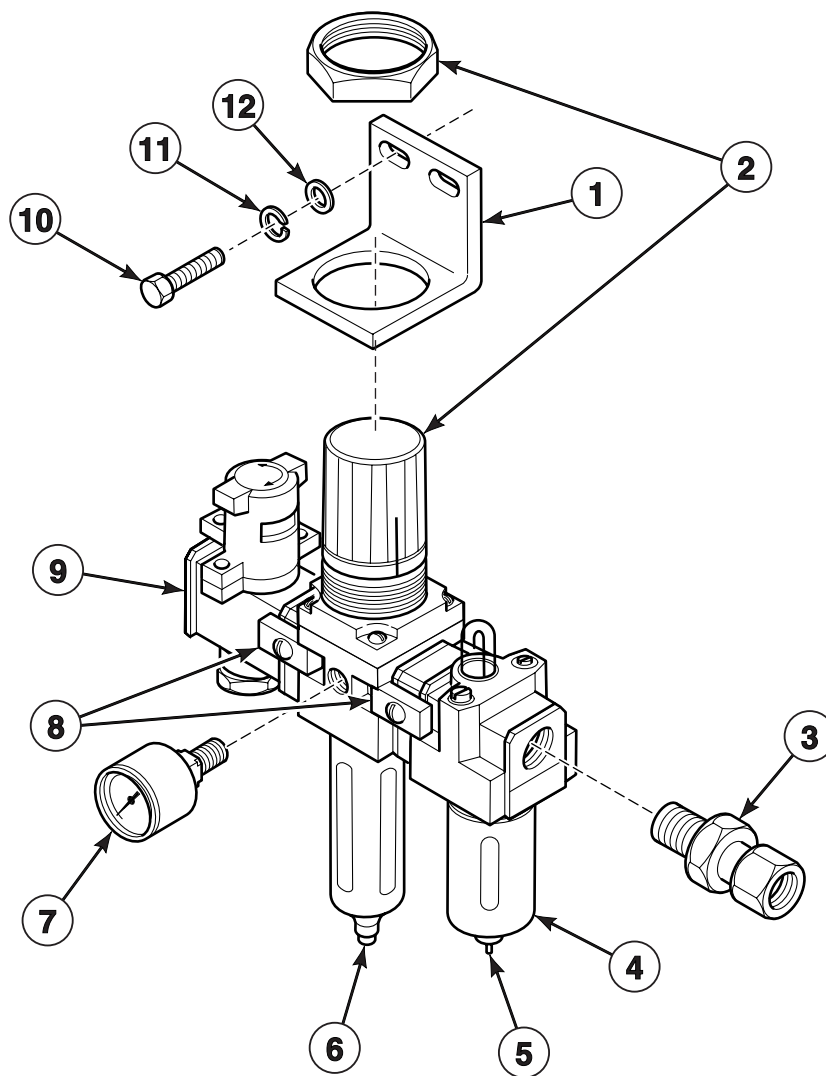


CAB1206P_AJ0001

Filter/Regulator/Lubricator Assembly - Models Starting June 1997 Through November 2004

REF	PART NO.	DESCRIPTION	COMMENTS
	J1557479P	Filter/Regulator/Lubricator Assembly	Includes items 1, 2, 4 and 7-9
	J200032100	Filter Kit	
	J200032200	Regulator Kit	
	J200032400	Lubricator Kit	
1	J1571405	Bracket	
2	J1557487	Filter/Regulator	0-125 psig; Includes nut
3	J1408020	Tubing Connector	
4	J1557495	Lubricator	
5	J1647536	Air Lubricator Bowl	Use with item 4
6	J1637644	Filter/Regulator Auto Drain Kit	Use with item 2
7	J1477959	Pressure Gauge	
8	J1571413	Spacer	2 required
9	J1557503	Lock-Out Valve	
10	JC-61608	Screw	2 required
11	J1000975	Washer	2 required
12	J1001213	Washer	2 required

Filter/Regulator/Lubricator Assembly - Models Starting December 2, 2004 Through February 9, 2005

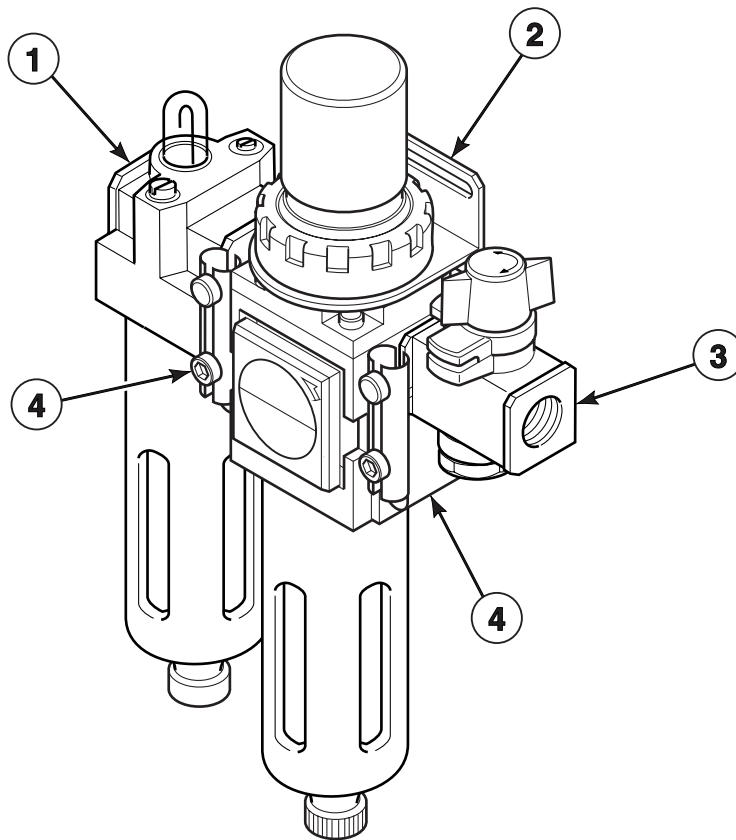


SCR1965P_AJ0001

Filter/Regulator/Lubricator Assembly - Models Starting December 2, 2004 Through February 9, 2005

REF	PART NO.	DESCRIPTION	COMMENTS
	J200127500	Filter/Regulator/Lubricator Assembly	Includes items 1-4
	J200032100	Filter Kit	
	J200032200	Regulator Kit	
	J1637644	Filter/Regulator Auto Drain Kit	
	J200032400	Lubricator Kit	
	J200296900	Mist Separator Kit	To change from FRL to FRML
1	J200179200	Lubricator Assembly	
2	J200179100	Filter/Regulator Assembly	
3	J200179000	Lock-Out Valve	
4	J200179300	Connector Assembly	

Filter/Regulator/Mist Separator Assembly - Models Starting February 10, 2005

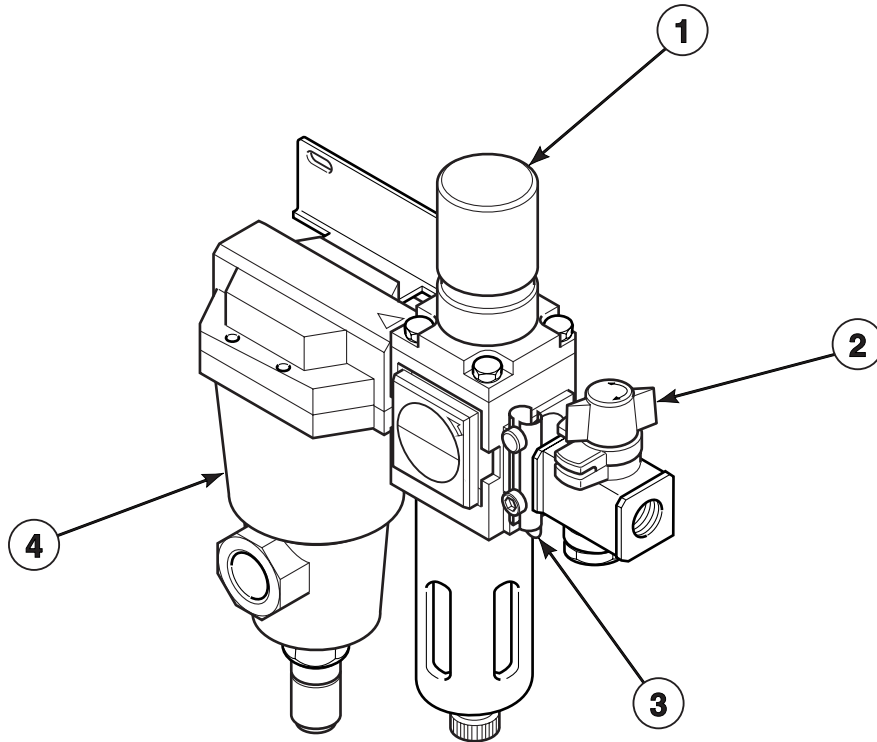


SCR1988P_AJ0001

Filter/Regulator/Mist Separator Assembly - Models Starting February 10, 2005

REF	PART NO.	DESCRIPTION	COMMENTS
	J200200400	Filter/Regulator/Mist Separator Assembly	Includes items 1-4
	J200200100	Element Replacement Kit	Use with item 4
	J200203300	Filter Element Kit	Use with item 1
1	J200203800	Filter/Regulator Assembly	
2	J200179000	Lock-Out Valve	
3	J200179300	Connector Assembly	
4	J200200000	Mist Separator	

Air Strainer Assembly

Models Through June 1997

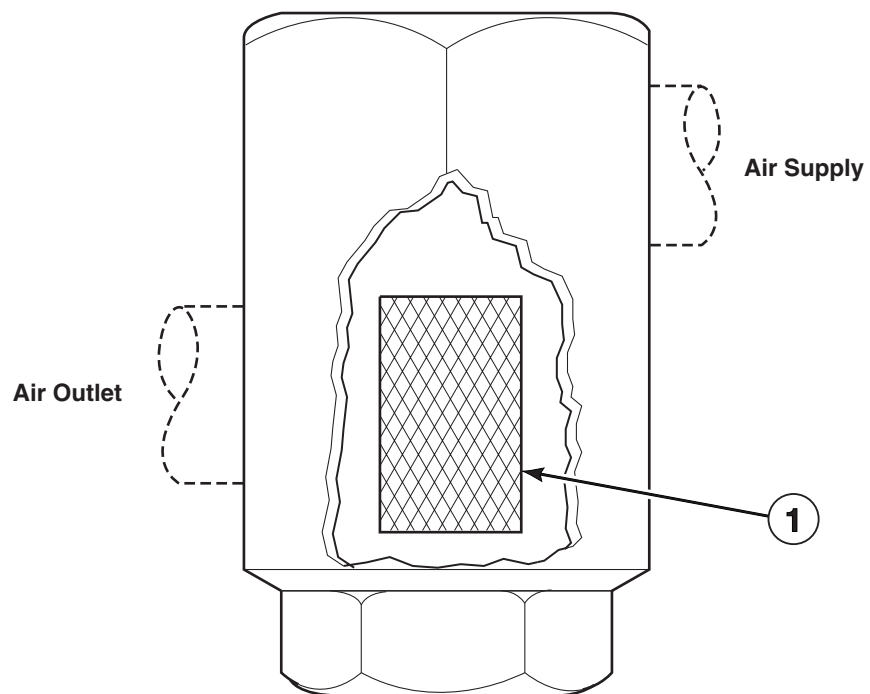


CAB224P_AJ0001

Air Strainer Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-00211	Air Strainer Assembly	Order if your machine does not have a Filter/Regulator/Lubricator Assembly; Includes body, screen and cap
1	JA-10908	Screen	

Valve and Bracket Assembly

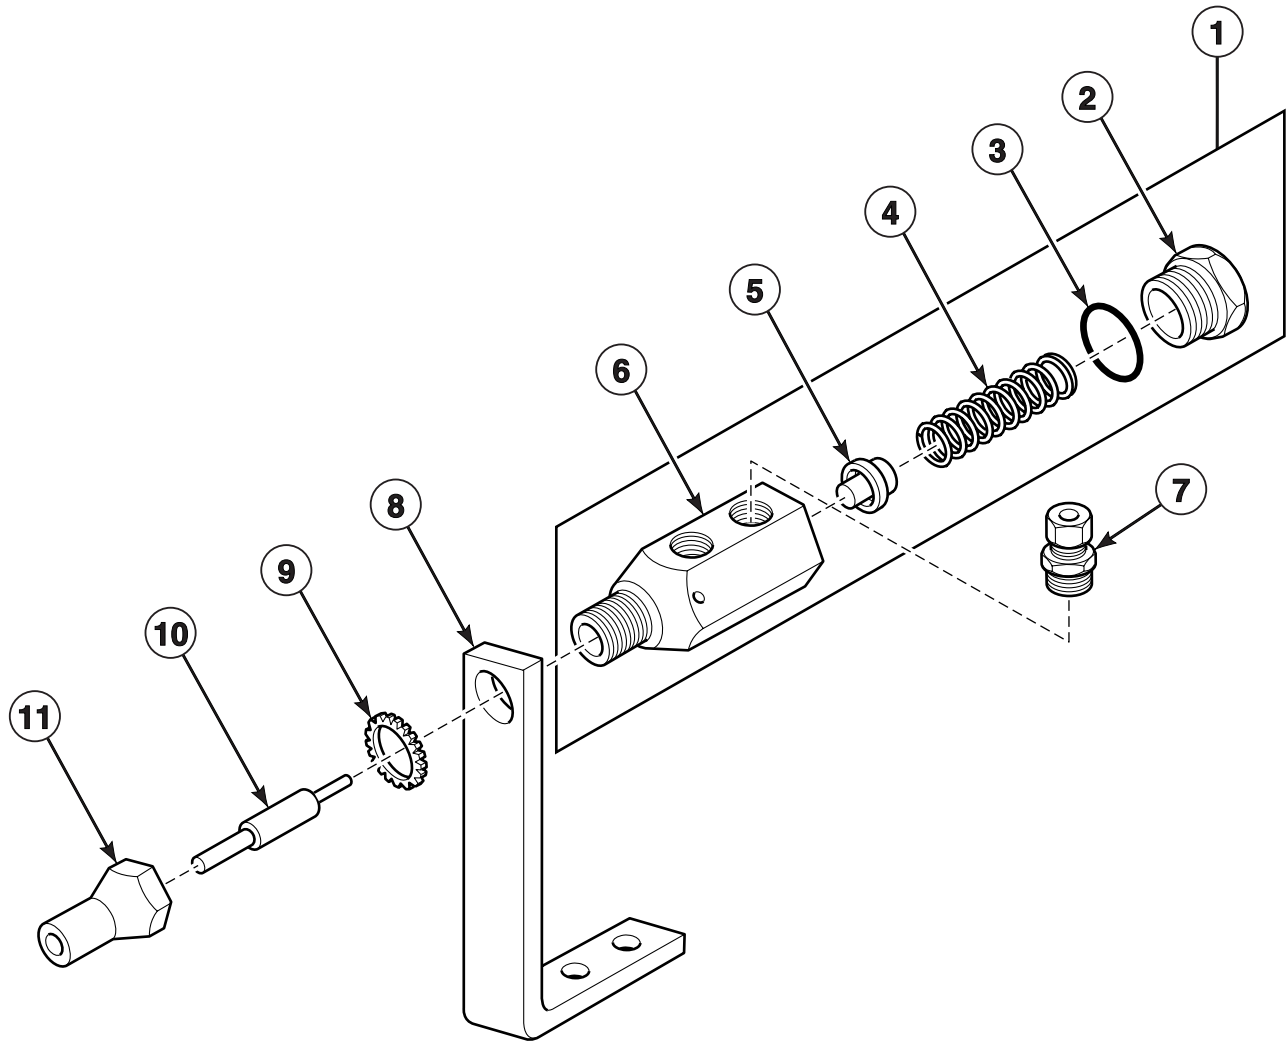


CAB199P_AJ0001

Valve and Bracket Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1477546	Valve and Bracket Assembly	Includes items 1-11
1	JA-06430	Valve Body Assembly	Includes items 2-6
2	JA-10515	Valve Cap	
3	JC-57441	O-Ring	Buna-N
4	JA-51336	Compression Spring	
5	JA-11599	Valve	Brass; With o-ring
6	JA-10514	Valve Body	
7	J1408004	Connector	
8	JA-19329	Valve Mounting Bracket	
9	N/A	Washer	External tooth
10	JA-19333	Valve Stem	
11	JA-15475	Collar Plunger Guide	

N/A = Part no longer available

Head Lift Cylinder Assembly

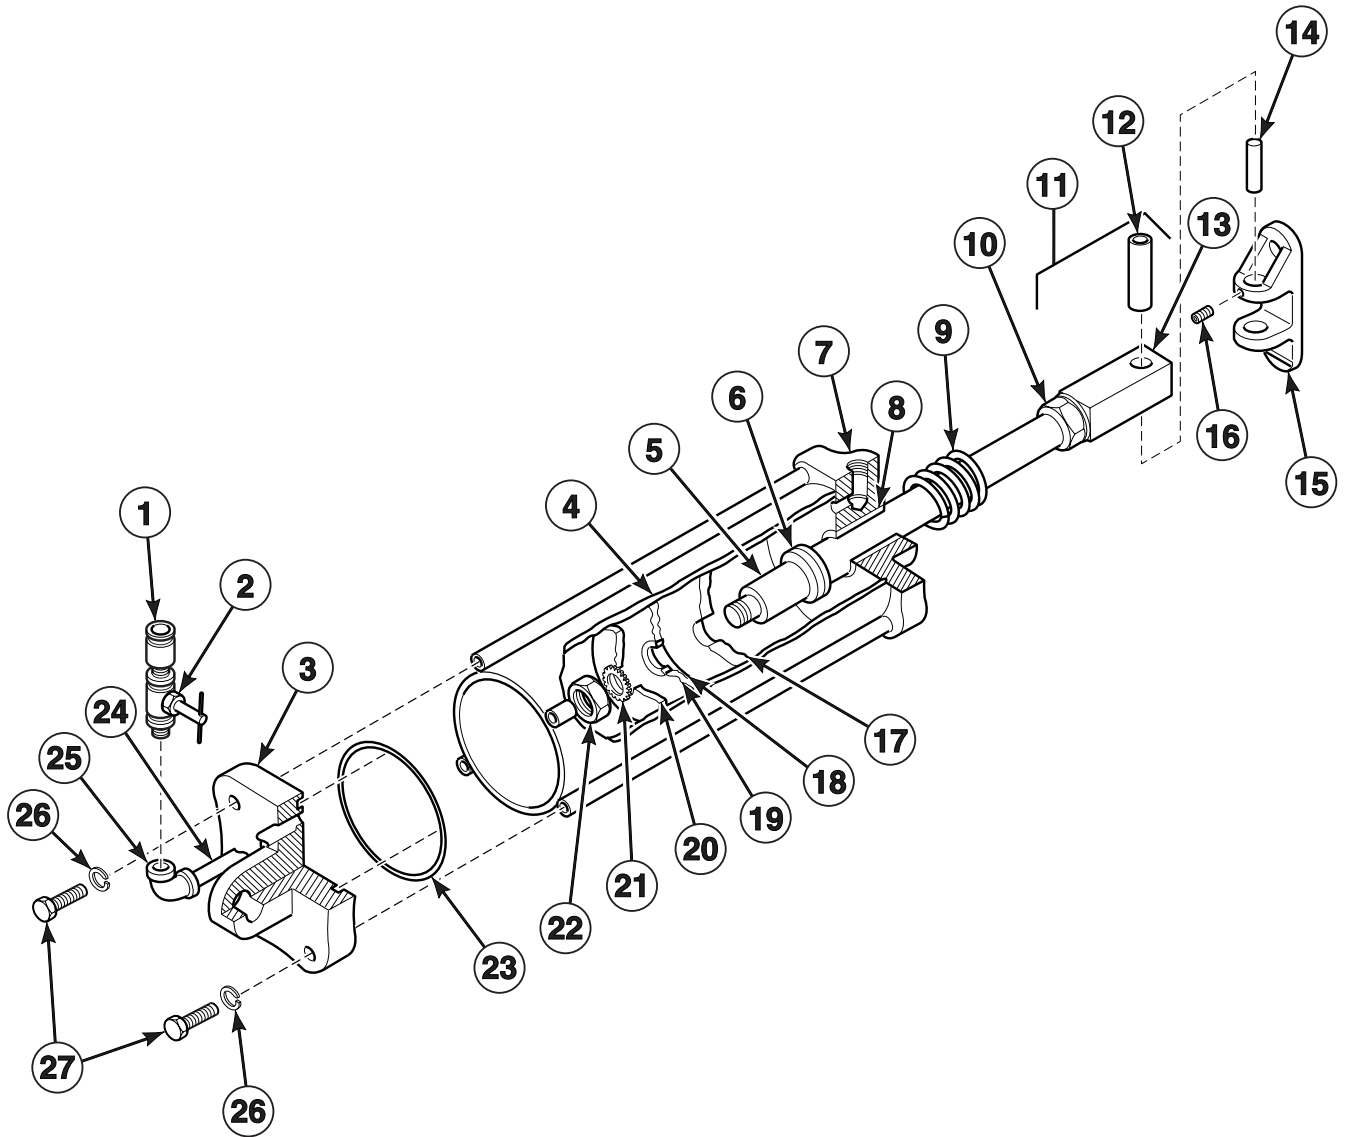


CAB2525P_AJ0001

Head Lift Cylinder Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1615004	Head Lift Cylinder Assembly	Models starting September 1997; Includes items 3-5, 7 and 9-27
	J1477579	Head Lift Cylinder Assembly	Models through September 1997; Includes items 1-27
	J1322577	Piston Plate Seal	Used in between items 17 and 18
1	JC-30551	Male Polyflo Connector	Polyflo; Use with J1477579 Head Lift Cylinder Assembly
2	J1246024	Needle Valve	Brass; Use with J1477579 Head Lift Cylinder Assembly
3	JA-18604	Lower Head	
4	JA-18612	Cylinder Body Tube	
5	JA-24082	Piston Rod	
6	J1178391	Washer	Use with J1477579 Head Lift Cylinder Assembly
7	JA-80202	Upper Head Assembly	Includes item 8
8	JA-51070	Oilless Sleeve Bearing	Use with J1477579 Head Lift Cylinder Assembly
9	JA-51340	Compression Spring	
10	JA-50434	Nut	
11	J1144757	Clevis Assembly	Includes items 12 and 13
12	J1242387	Oilless Sleeve Bearing	
13	J1144740	Right Clevis	
14	JA-11187	Clevis Pin	
15	JA-12718	Bracket	
16	JA-50354	Screw	
17	JA-18609	Outside Piston Plate	
18	J1324847	Piston Cup Seal	
19	JA-18610	Cylinder Washer Spacer	
20	JA-18611	Inside Piston Plate	
21	M403958	Washer	External tooth
22	JC-48220	Nut	
23	J1428978	Cylinder Head Gasket	
24	JC-46091	Pipe Nipple	
25	JA-50642	Pipe Elbow	
26	M400013	Washer	4 required
27	JA-53335	Screw	4 required

Buck-In Cylinder Assembly

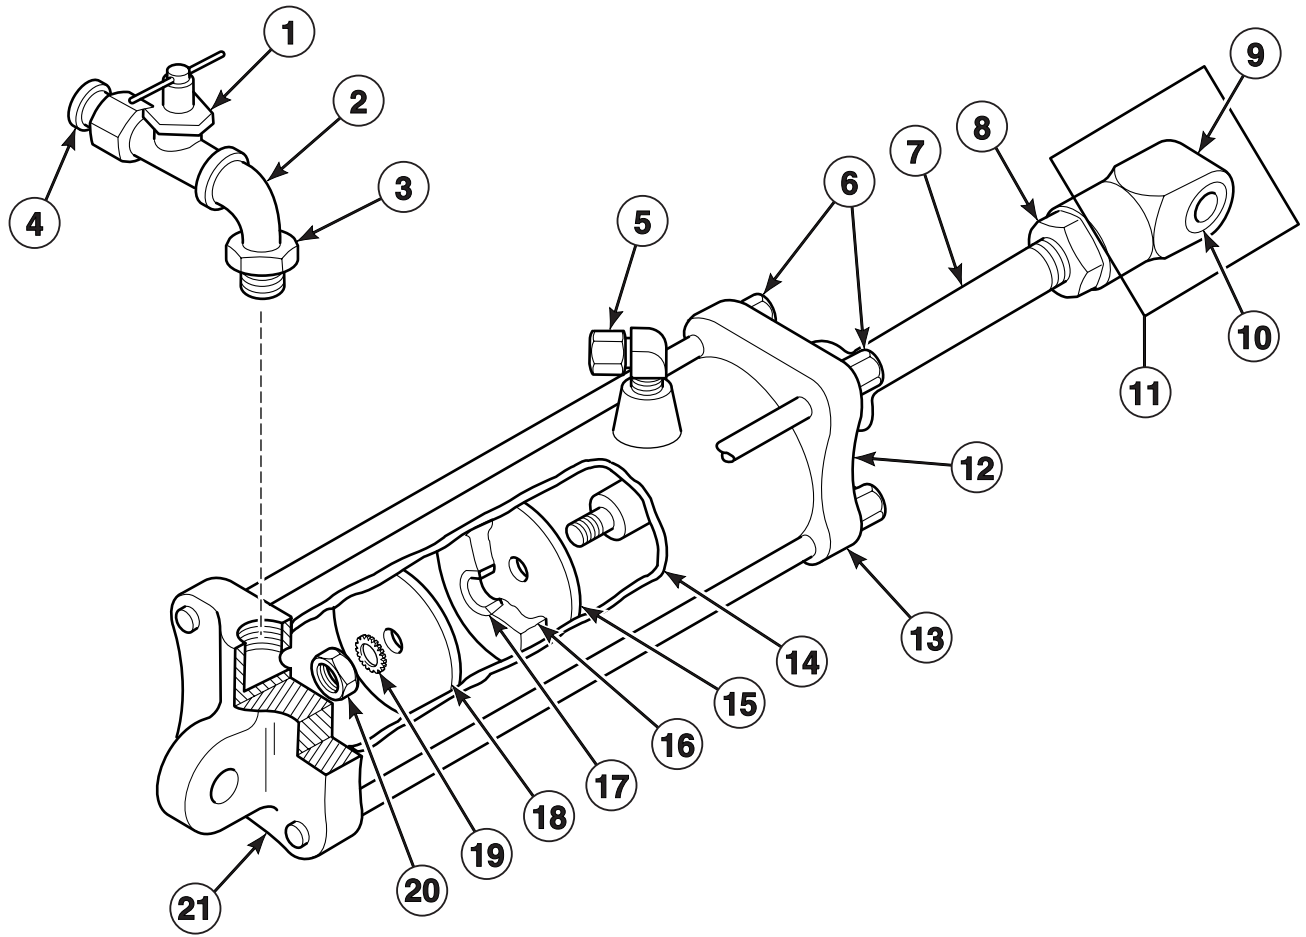


CAB389P_AJ0001

Buck-In Cylinder Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-05677	Cylinder Assembly	Includes items 1-9, 12-21 and J1428986 Cylinder Head Gasket
	J1010-000258	Cup Repair Kit	
	J1322585	Piston Plate Seal	
	J1428986	Cylinder Head Gasket	Fits between item 14 and item 21
1	J1246024	Needle Valve	
2	J1012574	Street Elbow	
3	JC-19609	Reducing Bushing	
4	J1408004	Connector	
5	J1407741	Swivel Tubing Elbow	
6	JA-53335	Screw	Use with M400013 Washer
7	JA-24079	Piston Rod	
8	JA-50434	Nut	
9	J1144740	Right Clevis	
10	J1242387	Oilless Sleeve Bearing	
11	J1144757	Clevis Assembly	Includes items 9 and 10
12	JA-51070	Oilless Sleeve Bearing	
13	JA-09724	Upper Head Assembly	Includes item 12
14	J1346451	Cylinder Body Weldment	
15	JA-11068	Outside Plate	
16	J1324854	Piston Cup Seal	
17	JA-13208	Cylinder Spacer	
18	JA-11069	Inside Plate	
19	M403958	Washer	External tooth
20	JA-50413	Nut	
21	JA-17711	Lower Head	

Head Close Air Cylinder Assembly

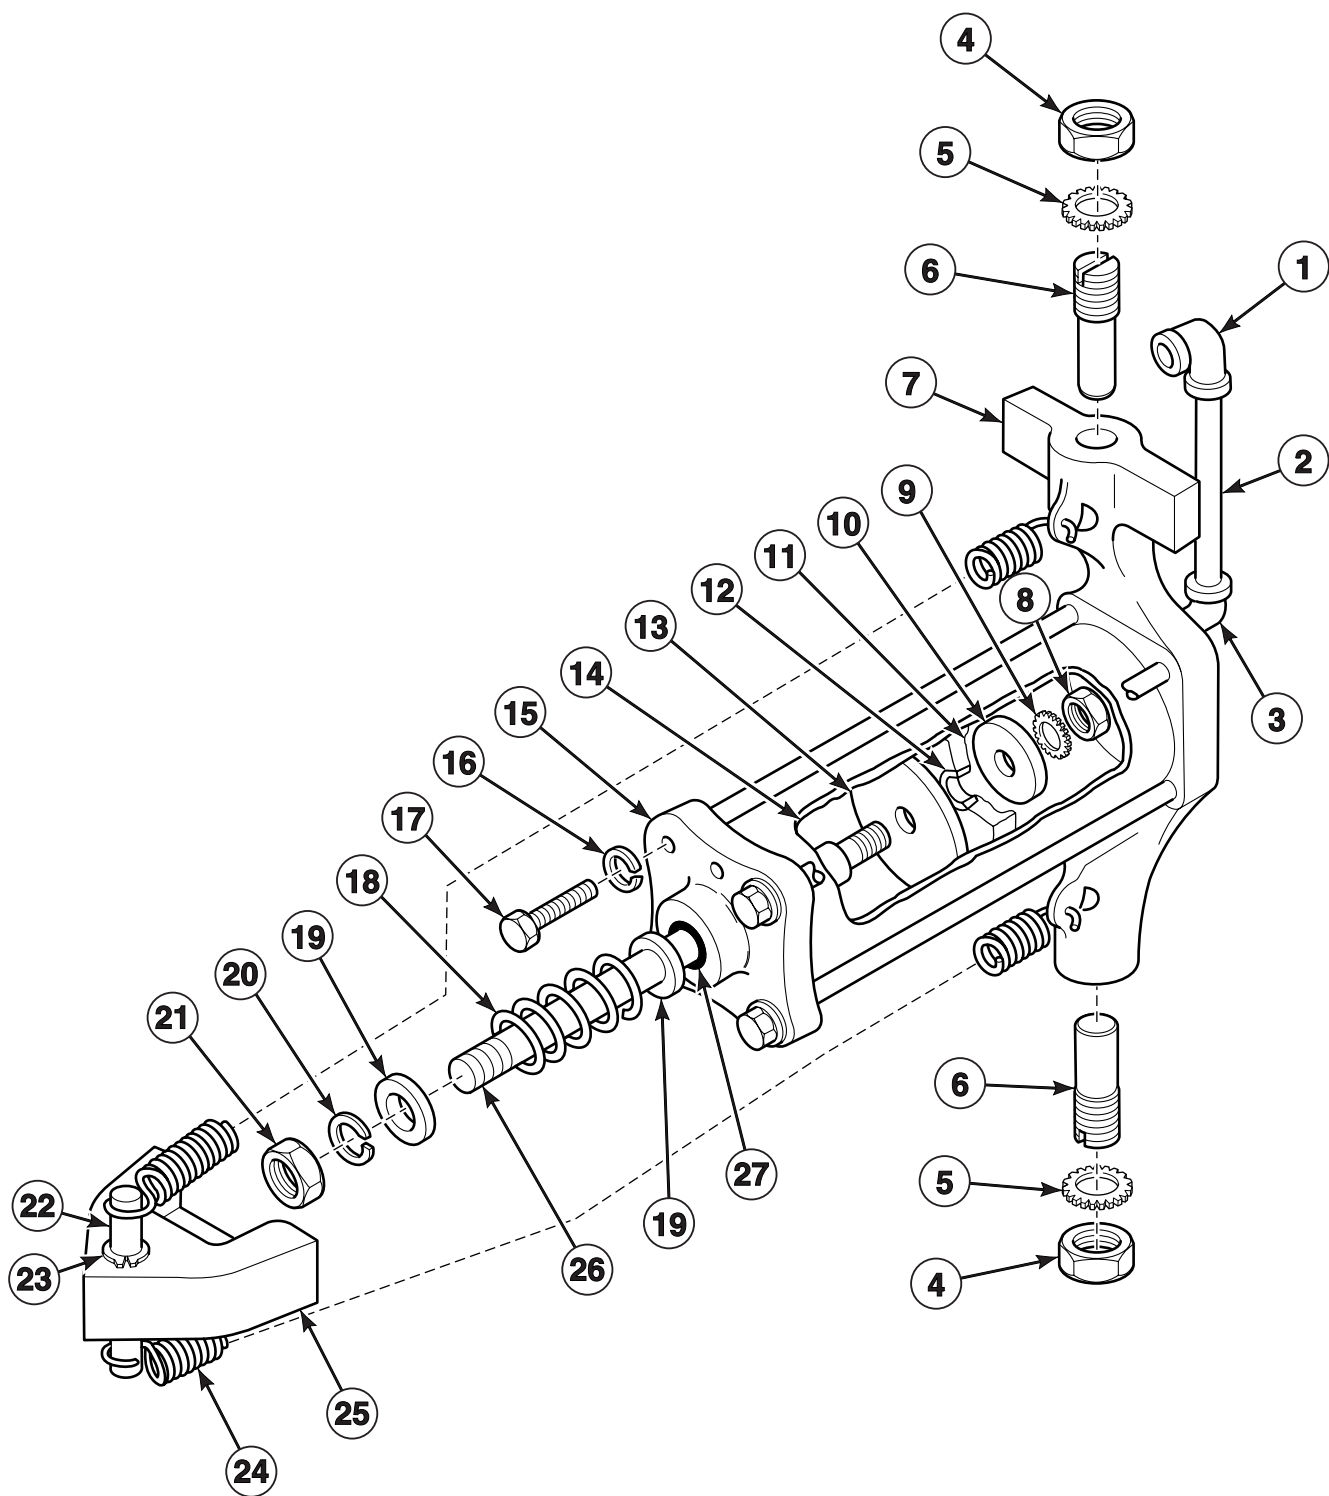


CAB202P_AJ0001

Head Close Air Cylinder Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-05679	Cylinder Assembly	Includes items 1-27
	J1428986	Cylinder Head Gasket	Fits between items 14 and 15
	J1322585	Piston Plate Seal	Fits between items 11 and 13
1	JA-50642	Pipe Elbow	
2	JA-52142	Nipple	
3	JC-28235	Street Pipe Elbow	
4	J1065671	Nut	2 required
5	JA-52666	Washer	2 required
6	JA-18880	Bolt	2 required
7	JA-18893	Lower Head	
8	JC-48142	Nut	
9	M403958	Washer	
10	JA-11069	Inside Plate	
11	J1324854	Piston Cup Seal	
12	JA-13208	Cylinder Spacer	
13	JA-11068	Outside Plate	
14	JA-20454	Body Pleat Cylinder	
15	JA-09724	Upper Head Assembly	Includes item 27
16	M400013	Washer	
17	JA-53294	Screw	
18	JA-50951	Spring	
19	J1001338	Washer	
20	JA-52666	Washer	
21	J1065671	Nut	
22	JA-21864	Spring Cam Return Rod	
23	JA-51082	Retaining Ring	
24	J1125889	Extension Spring	
25	JA-18812	Cam Head Cylinder	
26	JA-24081	Piston Rod	
27	JA-51070	Oilless Sleeve Bearing	

Electrical Components

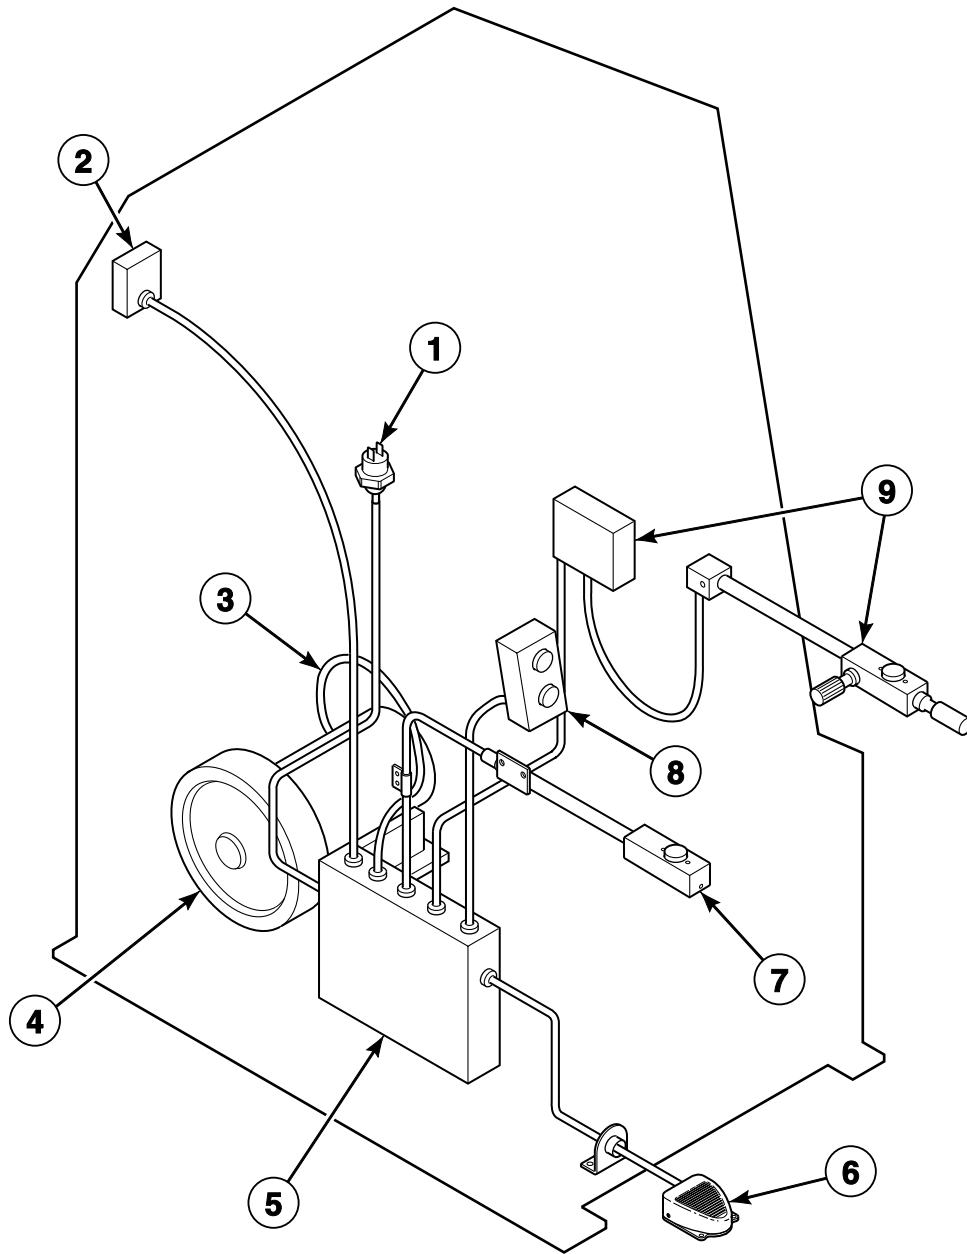


CAB2526P_AJ0001

Electrical Components

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1393594	Limit Switch Assembly	Refer to <i>Limit Switch Assembly</i> section for parts breakdown; Heads closed; Models through July 2003
	J1364181	Pressure Switch	Models starting August 2003
2	JA-80129	Connection Box Assembly	Refer to <i>Connection Box Assembly</i> section for parts breakdown
3	J1460625	Motor Junction Conduit Assembly	
4	J0220243-00	Blower	Siemens; 200 Volt/50 Hertz/3 Phase; 208 Volt/60 Hertz/3 Phase; 230 Volt/60 Hertz/3 Phase; 460 Volt/60 Hertz/3 Phase; 220 Volt/50 Hertz/3 Phase; 380 Volt/50 Hertz/3 Phase; 415 Volt/50 Hertz/3 Phase
	J1567767	Blower	380 Volt/50 Hertz/3 Phase; 415 Volt/50 Hertz/3 Phase
5	J1477595	Control Box Assembly	208-230 Volt; Refer to <i>Control Box Assembly</i> section for parts breakdown
6	J1393636	Foot Switch Assembly	Refer to <i>Foot Switch Assembly</i> section for parts breakdown
7	JA-05727	Safety Handle	Refer to <i>Safety Handle</i> section for parts breakdown
8	J1393610	Timer Control Box Assembly	Refer to <i>Timer Control Box Assembly</i> section for parts breakdown
9	J1393602	Head Raising Switch Assembly	Refer to <i>Head Raising Switch Assembly</i> section for parts breakdown

Limit Switch Assembly

Models Through July 2003

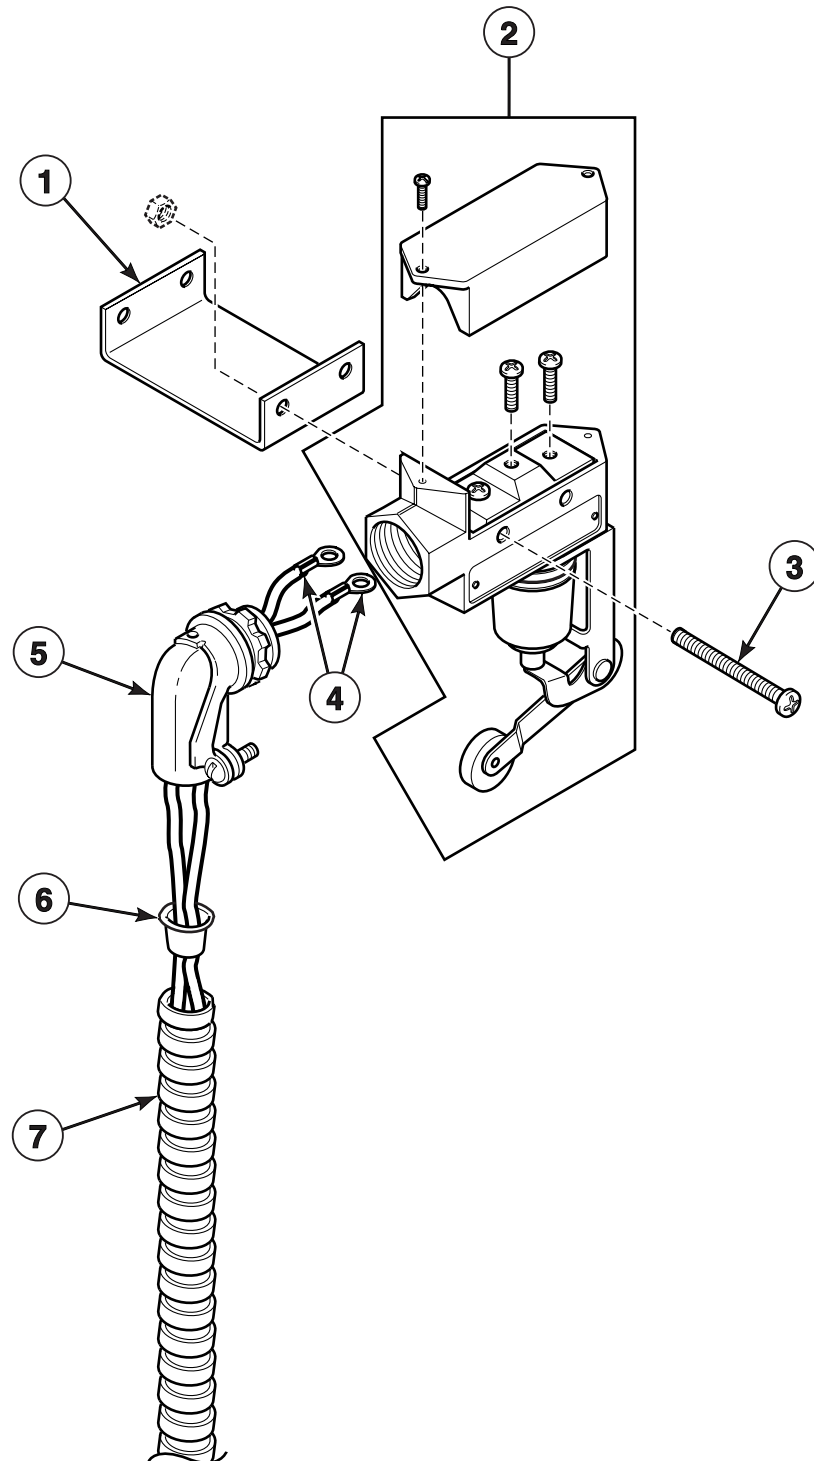


CAB103P_AJ0001

Limit Switch Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1393594	Limit Switch Assembly	Heads closed; Includes items 1-7 and wires
	J1121805	18 Gauge Wire	Orange
	45003	18 Gauge Wire	Brown
1	J1292531	Switch Mounting Bracket	
2	J1162429	Motor Switch	
3	J1185107	Screw	Use with J1000975 Washer
4	JC-70840	Ring Terminal	
5	J1086065	Connector	
6	JA-52036	Bushing	
7	J1086081	Conduit	Sold per foot

Connection Box Assembly

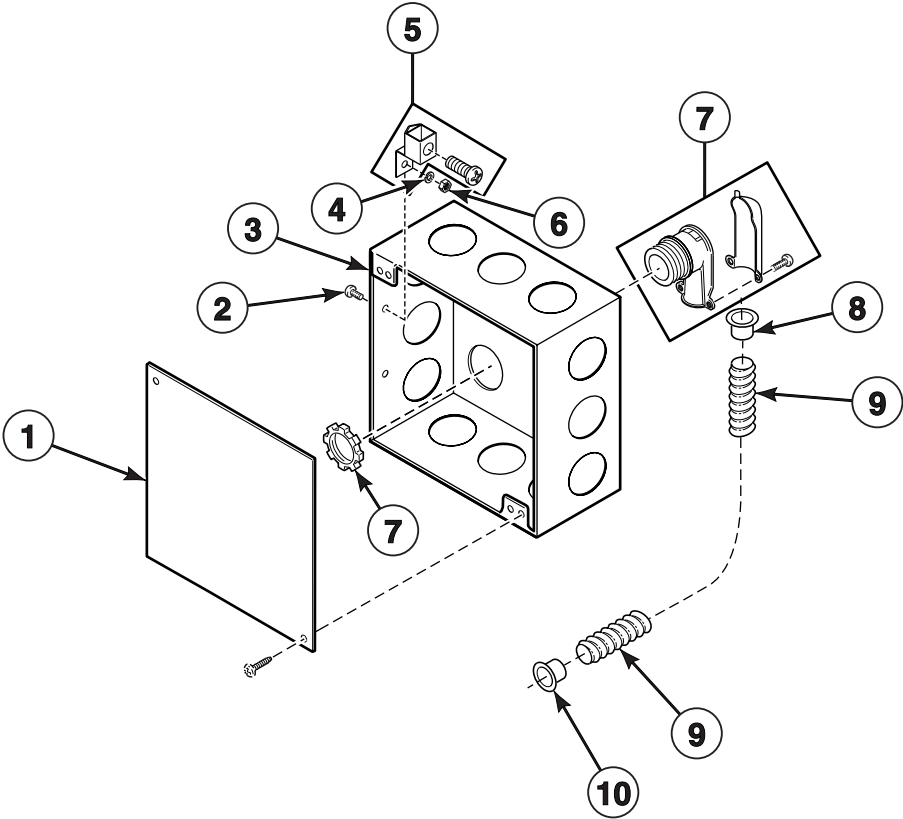


CAB104P_AJ0001

Connection Box Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-80129	Connection Box Assembly	Includes items 2-10
1	J1189950	Box Cover	
2	M400044	Screw	
3	J1189117	Electrical Outlet Box	
4	J1000975	Washer	
5	J1189125	Terminal Lug	
6	J1000736	Nut	
7	J1236066	Connector	
8	JA-52706	Insulator Bushing	
9	JA-24508	Conduit	
10	JA-52036	Bushing	

Control Box Assembly (Drawing 1 of 2)

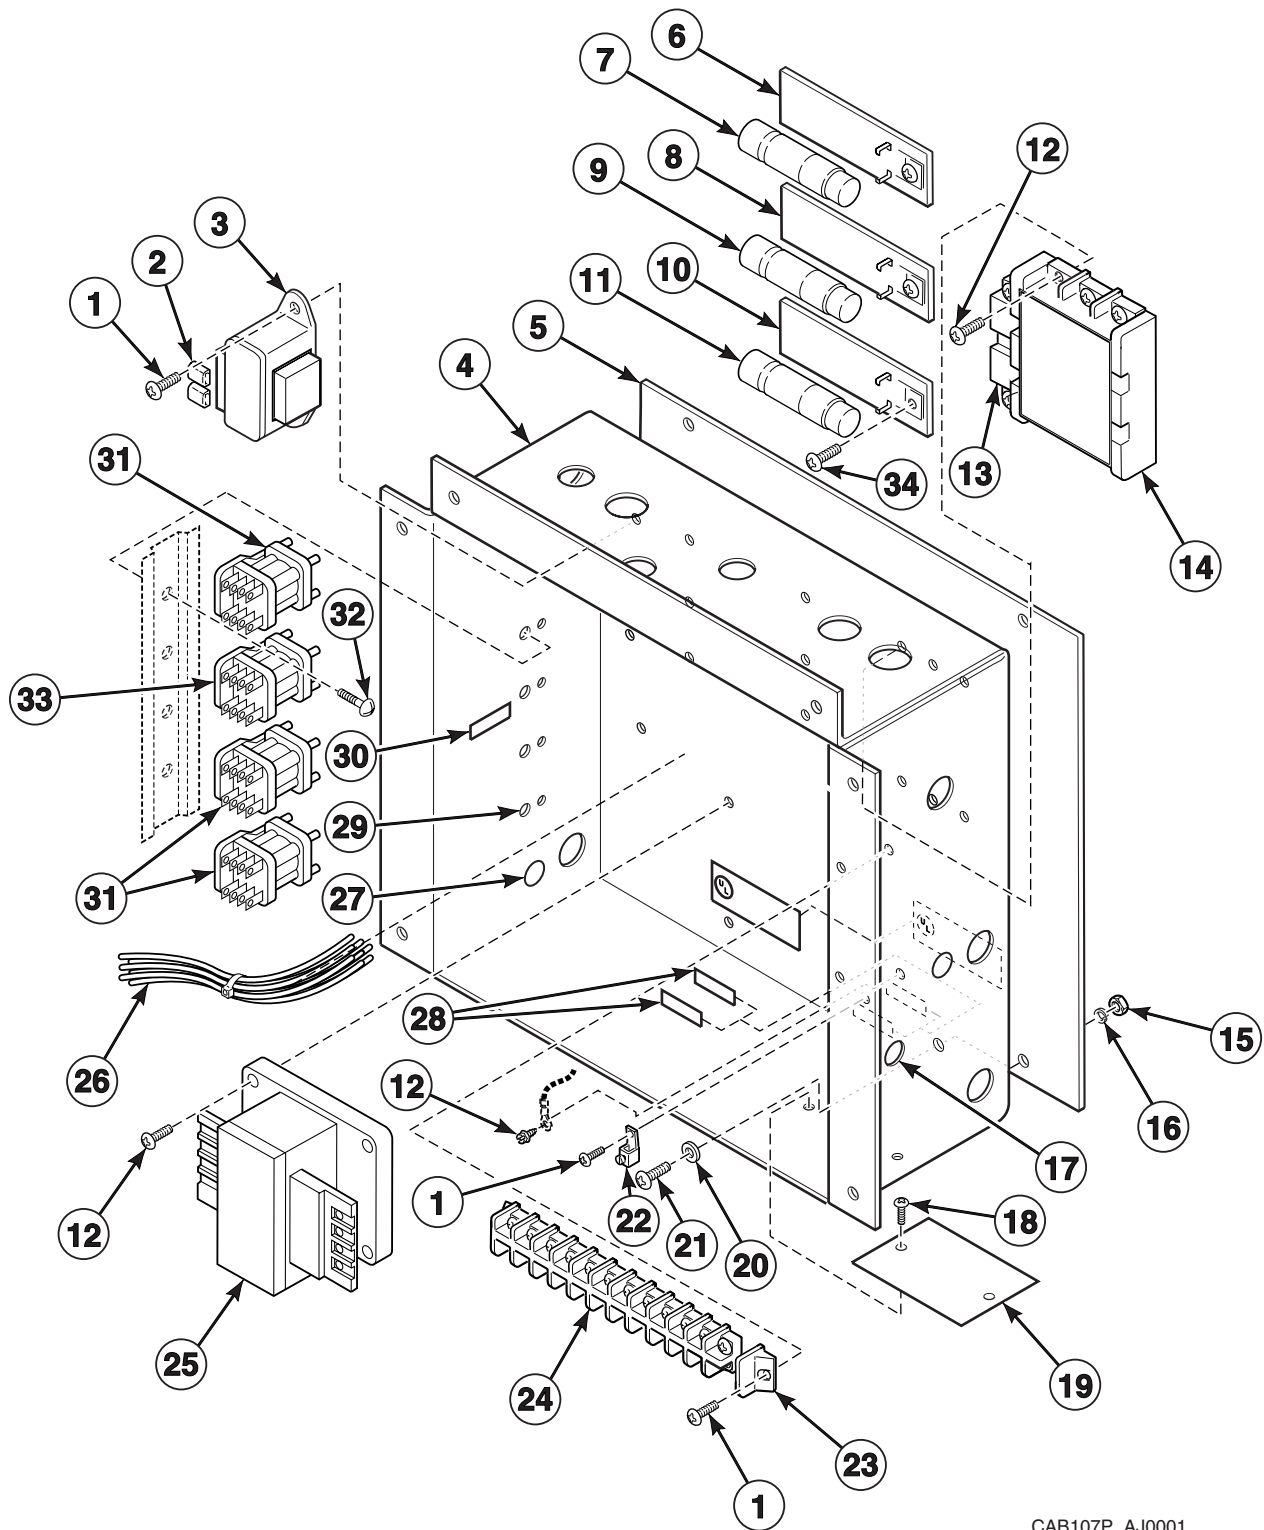


CAB107P_AJ0001

Control Box Assembly (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1477629	Control Box Assembly	380-415 Volt/50 Hertz/3 Phase
	J1477595	Control Box Assembly	Includes items 3-34; 208-230 Volt/50 or 60 Hertz/3 Phase
1	JC-64014	Screw	
2	J1418896	Transformer Insulator	
3	J1417120	Transformer	
4	J1640457	Control Box Weldment	
5	J1393461	Electrical Component Mounting Panel	
6	J1234616	Fuse Block	Below 250 Volt
7	J1235944	Fuse	Dual element; Time delay
8	J1401884	Fuse Holder	Above 250 Volt
9	JC-31691	Fuse	Below 250 Volt; 2 Amp
10	J1081710	Fuse Block	Above 250 Volt
11	J1477496	Fuse	Above 250 Volt; Lamp
12	J1063619	Screw	
13	JC-25008	Auxiliary Contact	
14	JC-57855	Contactor	30 Amp
15	J1000736	Nut	
16	J1085992	Washer	
17	F140527	Plug	
18	J1378603	Screw	
19	N/A	Nameplate	
20	J1001213	Washer	
21	J1185107	Screw	
22	J1376987	Ground Lug Terminal	
23	J1085943	End Terminal Block	
24	J1081793	Terminal Block	
25	J1475938	Transformer	208-230 or 460 Volt/50 or 60 Hertz/3 Phase; Models through March 2004
	J200113800	Transformer	Models starting March 2004
	J1475953	Transformer	308-415 Volt/50 or 60 Hertz/3 Phase
26	J1477538	Control Wire Harness Assembly	
27	J1085968	Plug	
28	J10-607	Ground Wire Label	
29	J1439280	Insulator	5 relay
30	J1119239	Blank Nameplate	
31	J1116243	Relay	3 required; Electrical; 2 pole
32	J1233162	Screw	
33	J1116250	Relay	Electrical; 3 pole
34	J1383355	Screw	

N/A = Part no longer available

Control Box Assembly (Drawing 2 of 2)

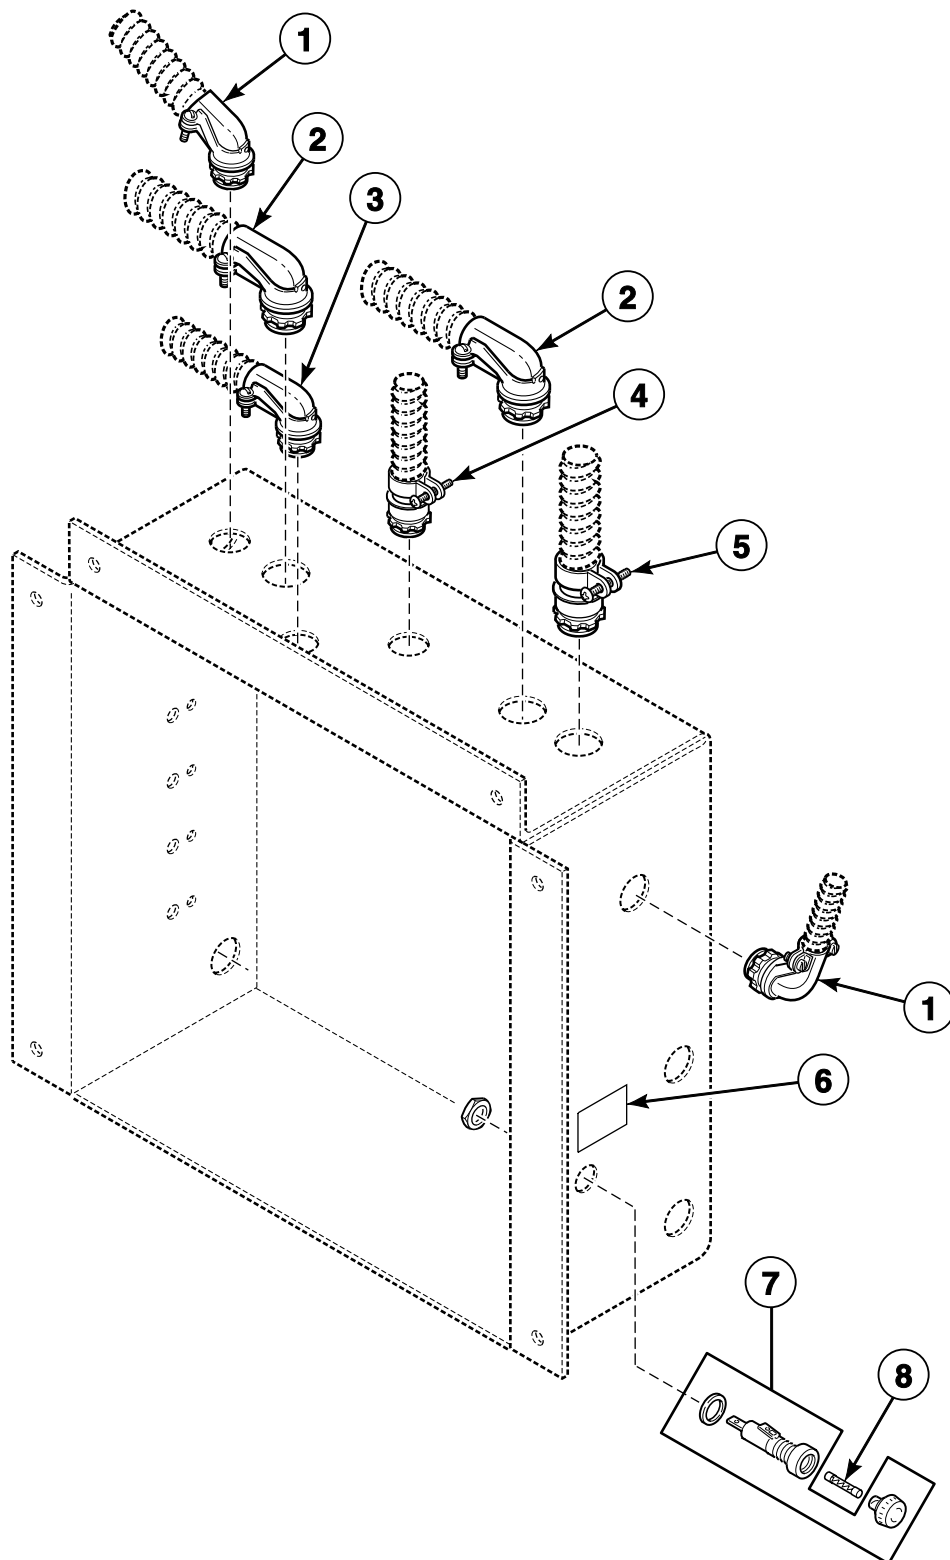


CAB106P_AJ0001

Control Box Assembly (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	J1086099	Connector	45 degree
2	J1086115	Connector	90 degree
3	J1086065	Connector	90 degree
4	J1238211	Straight Connector	
5	JC-22893	Straight Connector	
6	J1370279	Fuse Label	
7	JE-66016	Fuse Holder	250 Volt; 30 Amp
8	J1065218	Fuse	

Foot Switch Assembly

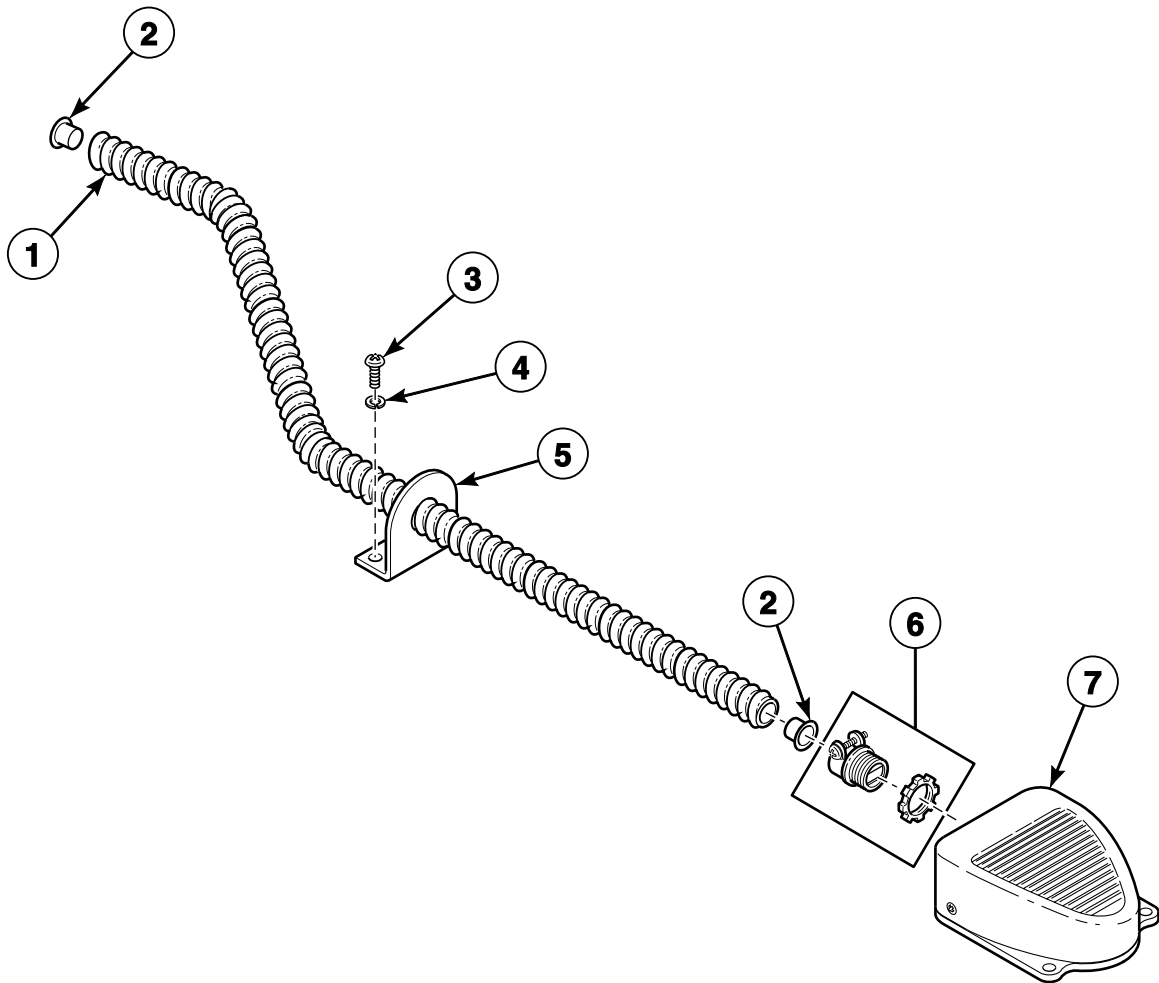


CAB102P_AJ0001

Foot Switch Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1393636	Foot Switch Assembly	Includes items 1, 2, 6, 7 and wires
	JM-94197	18 Gauge Wire	
	JM-99781	18 Gauge Wire	Copper
	J1121813	18 Gauge Wire	Yellow
1	JM-92602	Flexible Conduit	
2	JA-52036	Bushing	
3	02422	Screw	
4	J1185073	Washer	
5	JA-20291	Bracket	
6	J1238211	Straight Connector	
7	JA-52460	Foot Switch	

Safety Handle

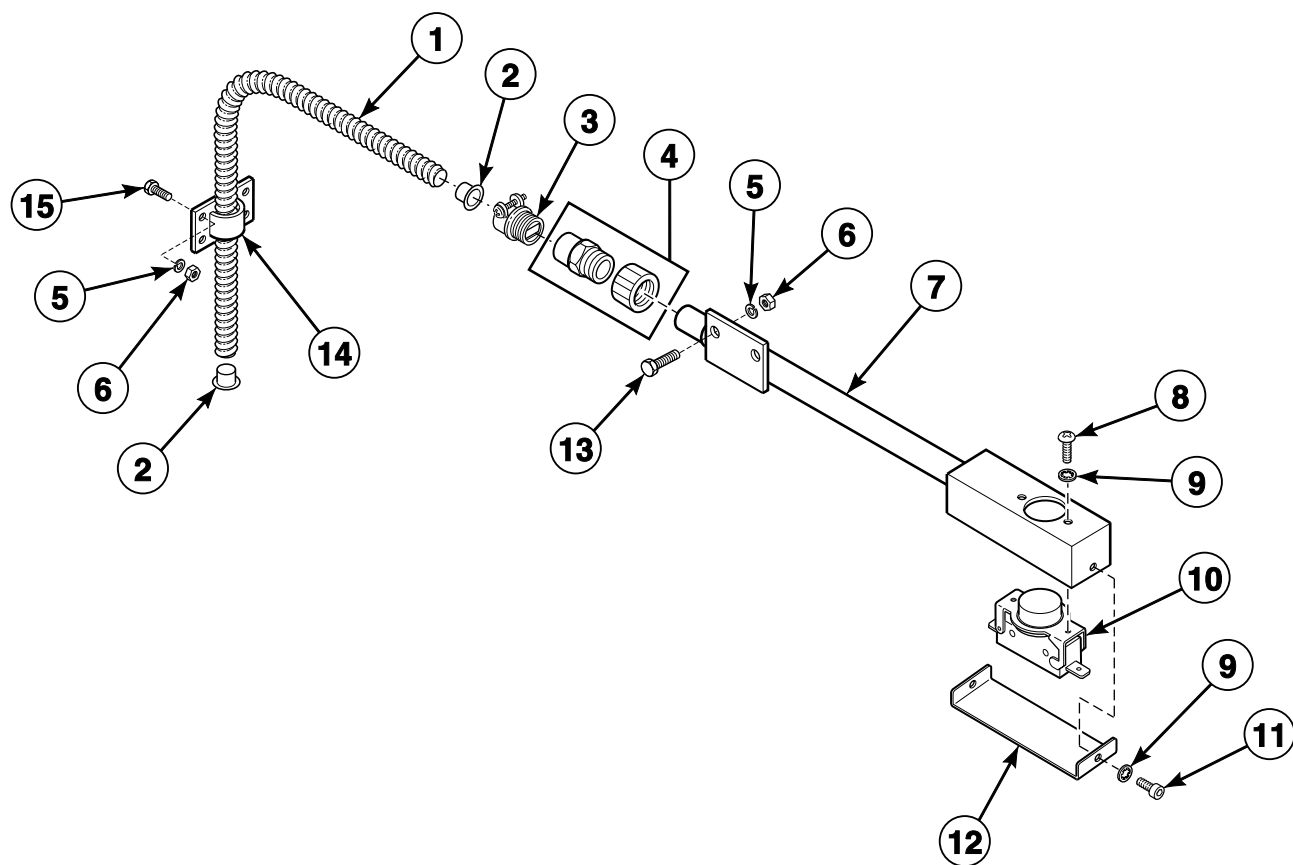


CAB105P_AJ0001

Safety Handle

REF	PART NO.	DESCRIPTION	COMMENTS
	JA-05727	Safety Handle	Includes items 1-4, 7-10 and 12
1	J1470731	Conduit	
2	JA-52036	Bushing	2 required
3	JC-30580	Fitting	
4	J1238211	Straight Connector	
5	J1185073	Washer	
6	20275	Nut	
7	JA-05726	Safety Handle Weldment	Includes attaching hardware
8	J1233659	Screw	
9	JC-43267	Washer	
10	M400954P	Push-to-Start Switch Kit	Black
11	J1550110	Screw	
12	JA-18864	Measuring Arm Box Cover	
13	24233	Screw	
14	J1162478	Electrical Strap	
15	JA-53020	Screw	

Timer Control Box Assembly

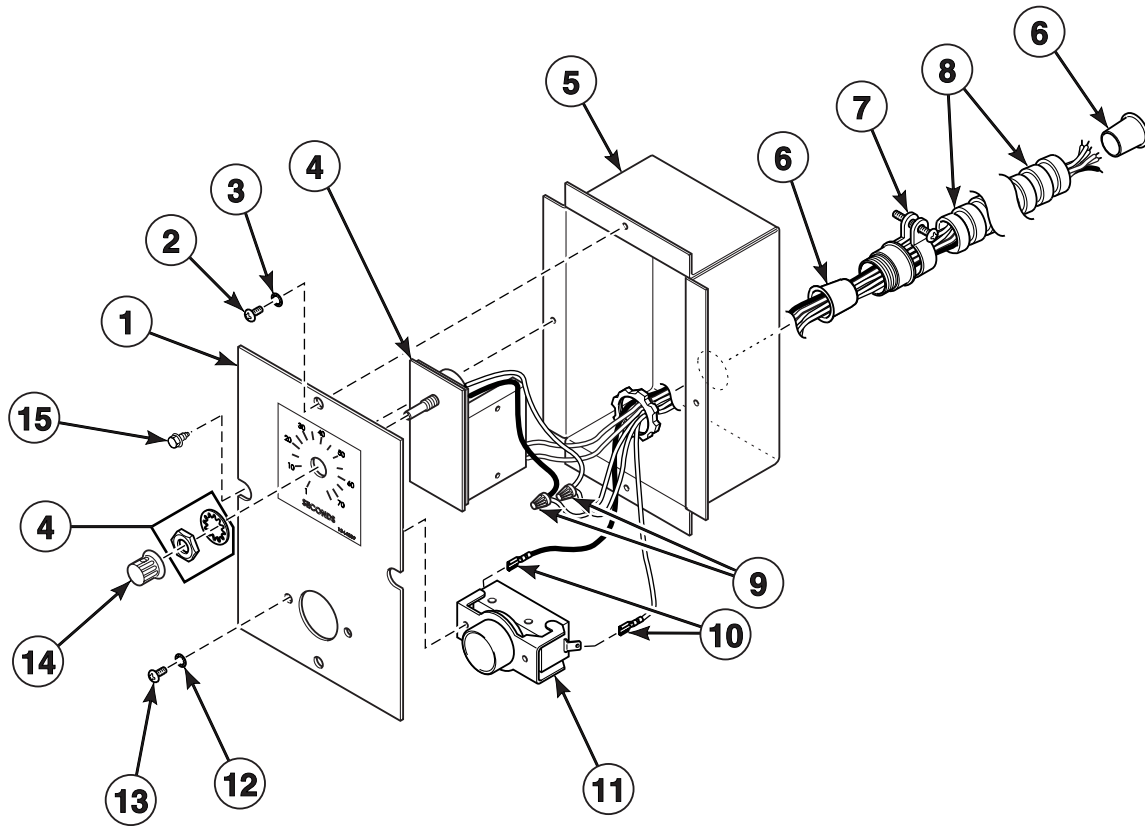


CAB111P_AJ0001

Timer Control Box Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	J1393610	Timer Control Box Assembly	Includes items 1-15
	J200050400	Common Timer Circuit Board Kit	Order if item 3 needs to be replaced
1	J1315852	Timer Cover	
2	J1187228	Screw	
3	J1085984	Washer	
4	J1345966	Timer Assembly	Includes nut and washer; Models through October 2003
	J200043100	Common Timer PCB	Models starting October 2003
5	JA-20228	Timer Box Frame	
6	J1232990	Bushing	2 required
7	JC-22893	Straight Connector	
8	J1108497	Conduit	
9	JC-22908	Connector	
10	J1121284	Terminal	
11	J200204600	Pushbutton Switch	
12	J1216357	Washer	
13	J1233659	Screw	
14	JE-66023	Knob	
15	JC-61582	Screw	

Head Raising Switch Assembly (Drawing 1 of 2)

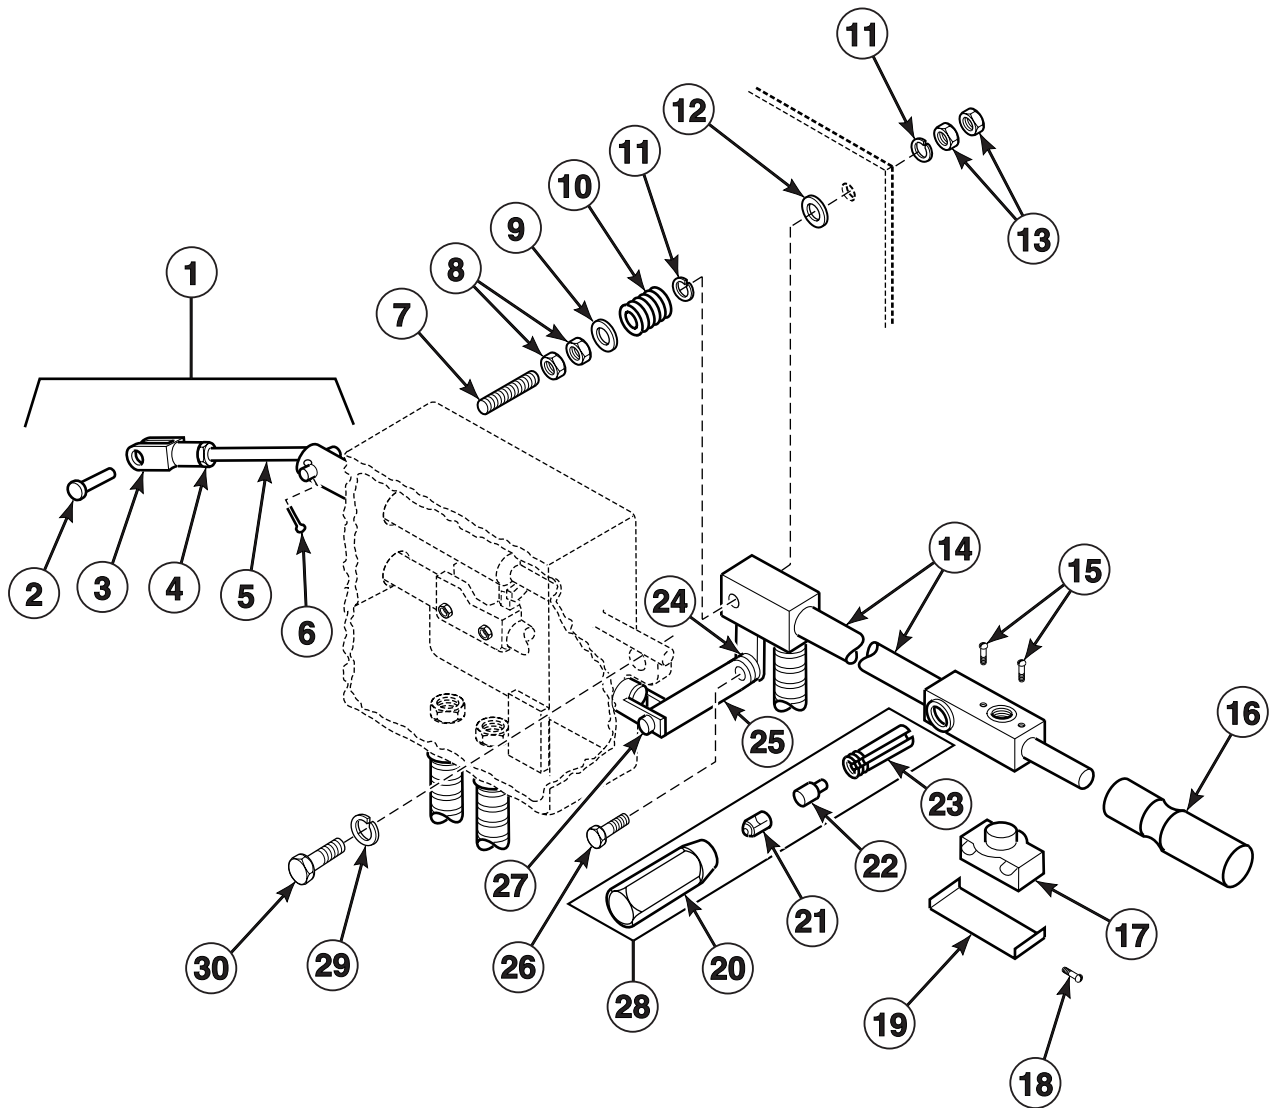


CAB2528P_AJ0001

Head Raising Switch Assembly (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1393602	Head Raising Switch Assembly	Includes all items in <i>Head Raising Switch Assembly</i> section
1	JA-06033	Clevis Assembly	Includes items 3-6
2	JA-52416	Clevis Pin	
3	JA-52415	Rod Clevis	
4	JC-48157	Nut	
5	JA-18765	Adjusting Link	
6	JC-54509	Cotter Pin	
7	J200149900	Bolt	
8	M400026	Nut	
9	JA-19149	Washer	
10	JA-51372	Compression Spring	
11	M400014	Washer	
12	J1001320	Washer	
13	M404993	Nut	
14	JA-80032	Measuring Arm Weldment	
15	J1233659	Screw	2 required
16	JA-01281	Tapered Handle	
17	M400954P	Push-to-Start Switch Kit	Black
18	J1550110	Screw	
19	JA-18864	Measuring Arm Box Cover	
20	JA-08329	Seam Indicator Housing Assembly	
21	JA-53523	Lamp	
22	JA-51486	Socket	
23	JA-16590	Tube	
24	M400080	Washer	
25	JA-19238	Control Box Link	
26	JC-63141	Screw	
27	JC-17796	Screw	Use with J1000975 Washer and J1000736 Nut
28	JA-05250	Seam Indicator Assembly	Includes items 20-23
29	J1185073	Washer	
30	JA-52426	Screw	

Head Raising Switch Assembly (Drawing 2 of 2)

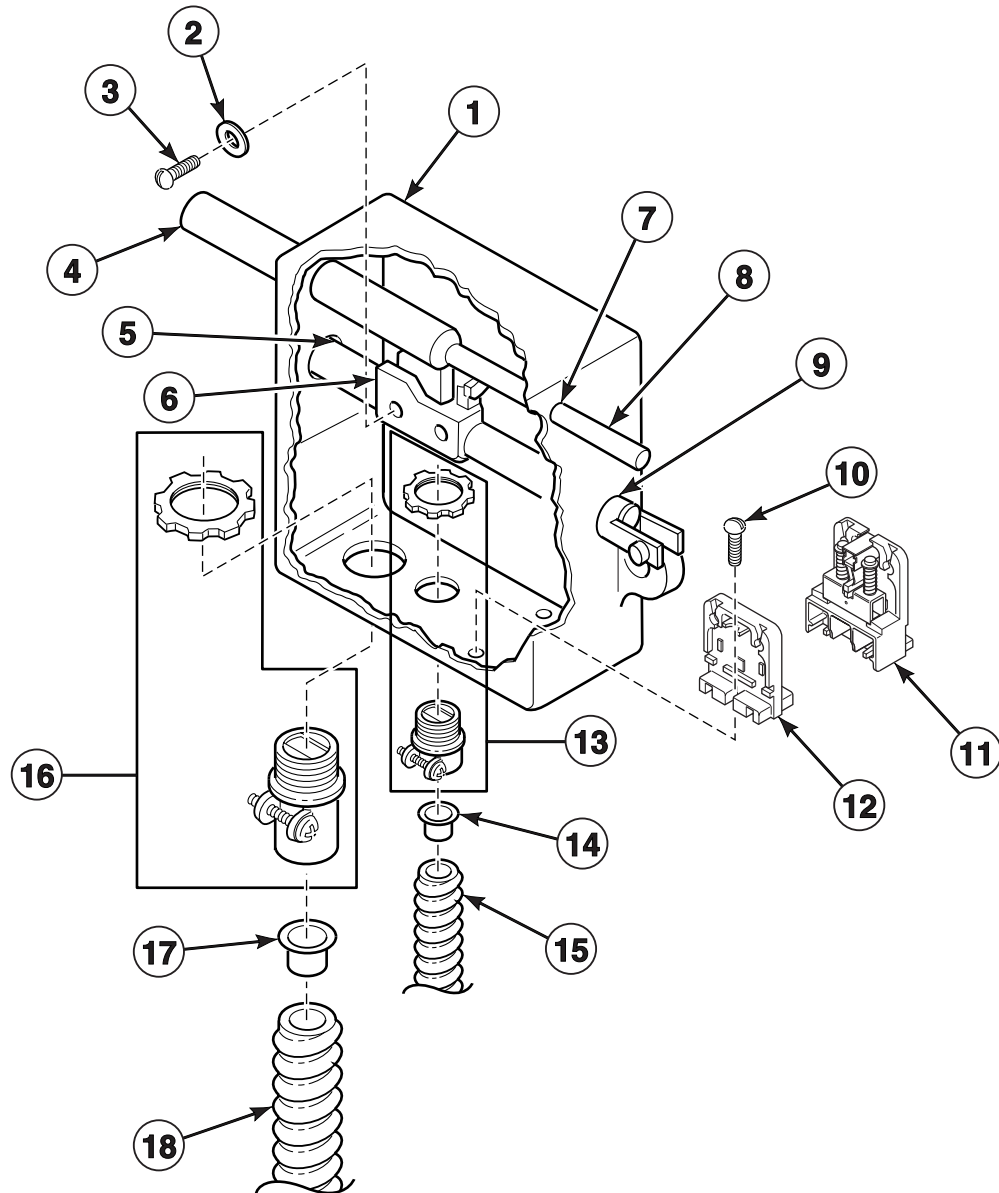


CAB2444P_AJ0001

Head Raising Switch Assembly (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	J1393602	Head Raising Switch Assembly	Includes all items in <i>Head Raising Switch Assembly</i> section
	JA-81517	Switch Box Assembly	Includes items 1, 7 and 9
	J1444850	Height Control Rod Assembly	Includes items 4 and 8
1	J1401199	Switch Box	
2	JC-80006	Washer	
3	JA-53131	Screw	
4	N/A	Rod Holder	Included with J1444850 Height Control Rod Assembly
5	JA-26757	Switch Control Rod	
6	JA-52480	Limit Switch	
7	JA-50909	Oilless Sleeve Bearing	
8	J1433655	Height Control Rod	Included with J1444850 Height Control Rod Assembly
9	JA-51703	Oilless Sleeve Bearing	
10	J1187228	Screw	
11	J1081793	Terminal Block	
12	J1085943	End Terminal Block	
13	JC-22893	Straight Connector	
14	JA-52036	Bushing	
15	J1470723	Conduit	
16	J1238211	Straight Connector	
17	JA-52036	Bushing	
18	J1470731	Conduit	

N/A = Part no longer available

Decals

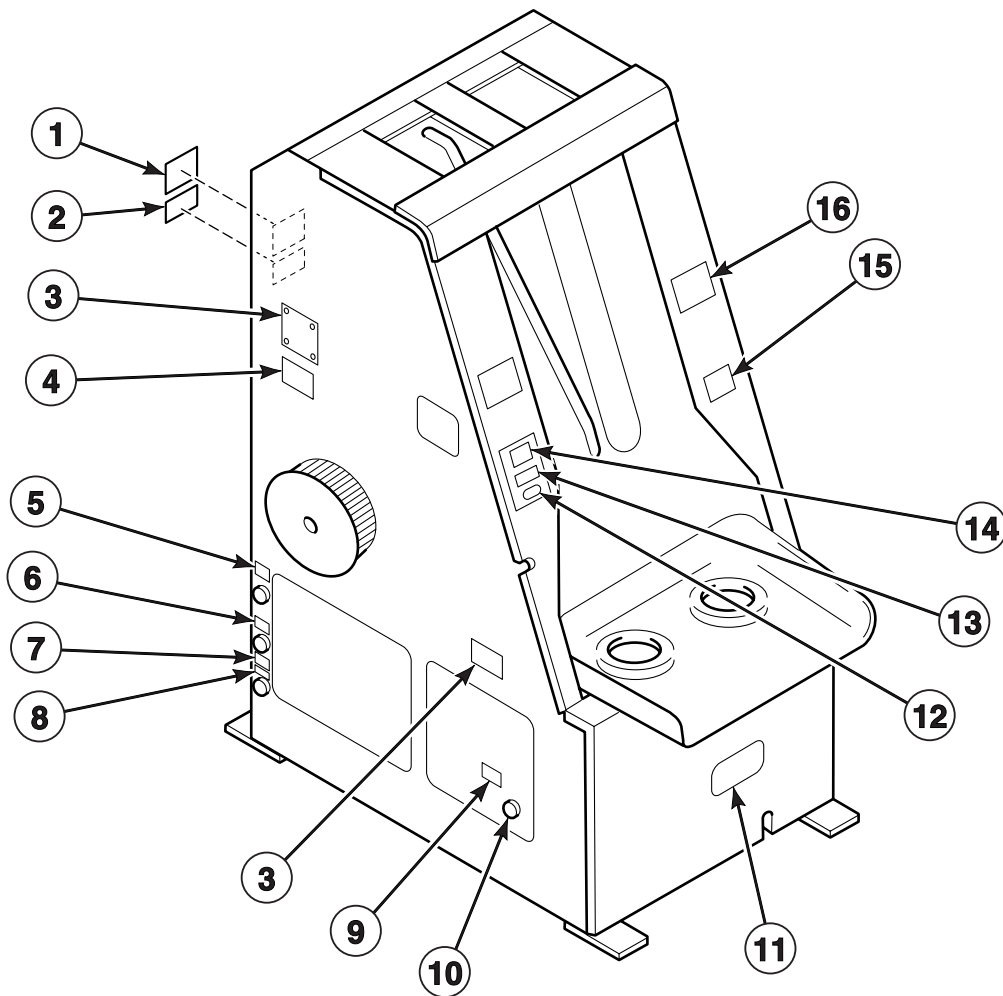

CAB2551P_AJ0001

Decals

REF	PART NO.	DESCRIPTION	COMMENTS
	J1111905	Blind Rivet	4 required
1	J200156500	Shut-Off Warning Decal	Models starting January 1983
	J200210300	Suitable Supply Info Decal	Models through December 1982
2	J200210300	Suitable Supply Info Decal	Caution; Models starting January 1983
	J200139600	Lockout/Tagout Warning Decal	2 required; Models through December 1982
3	J1312545	Fuse Supply Wire Nameplate	
4	J1401785	Clean Filter Daily Nameplate	
5	JA-17841	Steam Inlet Label	
6	JA-17842	Air Inlet Label	
7	J1326156	Air Pressure Label	
8	JA-17840	Steam Return Label	
9	JA-28955	Reset Label	Models through December 1982
10	J1069483	Reset Pushbutton	
11	70240801	Nameplate Overlay	
12	JA-19054	Stop Decal	
13	JA-21422	Reset Timer Label	
14	J1344589	Timer Label	75 second
15	JA-22464	Start Up and Down Sequence Decal	
16	J200181000	Warning Decal	Order J1111905 Blind Rivet to attach

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Parts Index

A

Adjusting Link	
JA-18765	67
Air Bag Rod	
JA-18792	7
Air Cylinder	
J0250322-00	27
J0250329-00	29
J1390806	31, 33
Air Filter	
JA-55992	23
Air Filter Retainer Plate	
J1399021	23
Air Inlet Label	
JA-17842	71
Air Intake Elbow	
JA-20088	23
Air Lubricator Bowl	
J1647536	35
Air Pressure Label	
J1326156	71
Air Regulator	
J0380120-00	27, 29
Air Strainer Assembly	
JA-00211	41
Auxiliary Contact	
JC-25008	57

B

Ball Knob	
J1386119	9, 13
Blank Nameplate	
J1119239	57
Blind Rivet	
J1111905	71
Blower	
J0220243-00	23, 51
J1567767	23, 51
Blower Mounting Pad	
JA-18844	23
Body Pleat Cylinder	
JA-20454	49
Bolt	
JA-18666	15
JA-18880	19, 49
J200149900	67
Box Cover	
J1189950	55
Brace Cover	
JA-34491	5
Bracket	
JA-12718	45
JA-20291	61
J1393552	23
J1571405	35
Braided Sleeve Insulation	
JM-90527	21

Buck Base	
JA-21682	7, 11
JA-21687	11
Buck Flamonal Pad	
JA-54858	11
Buck Mounting Bracket Assembly	
JA-05743	23
Buck Mounting Elbow Assembly	
JA-05742	23
Buck Reinforcing Plate	
JA-18633	7, 13
Buck Return Spring Rod	
JA-18907	15
Buck Rocker Weldment	
JA-05637	15, 23
Buck Shirt Plate	
JA-18797	11
Buck-In Solenoid Valve Assembly	
J1477553	25
Bumper	
J1042480	15
Bushing	
JA-52036	53, 55, 61, 63, 69
J1232990	65
Butterfly Assembly	
JA-04746	11

C

Cable Tie	
F140605	29
Cam Head Cylinder	
JA-18812	49
Center Panel Support Brace	
JA-18626	5
Clamp Bar	
J0637153-00	29
Clean Filter Daily Nameplate	
J1401785	71
Clevis Assembly	
JA-06033	67
J1144757	45, 47
Clevis Pin	
JA-11187	45
JA-52416	67
JA-53333	15
JA-54392	15
Closing Speed Orifice	
JA-19559	31
Coat Buck Plate	
JA-18811	7
Collar Plunger Guide	
JA-15475	15, 43
Common Timer Circuit Board Kit	
J200050400	65
Common Timer PCB	
J200043100	65
Compression Elbow	
JA-54351	21

N/A items do not appear in index.

Compression Spring	
JA-51336	43
JA-51340	45
JA-51372	67
JA-51437	19
Conduit	
JA-24508	55
J1086081	53
J1108497	65
J1470723	69
J1470731	63, 69
Connection Box Assembly	
JA-80129	51, 55
Connector	
JC-22908	65
J1086065	53, 59
J1086099	59
J1086115	59
J1236066	55
J1408004	31, 43, 47
Connector Assembly	
J200179300	37, 39
Contactora	
JC-57855	57
Control Box Assembly	
J1477595	51, 57
J1477629	57
Control Box Cover	
JA-26765	5
J1461086	5
Control Box Link	
JA-19238	67
Control Box Weldment	
J1640457	57
Control Wire Harness Assembly	
J1477538	57
Cotter Pin	
JC-54509	67
JC-54533	15
Cover	
JA-50577	31
Cover and Bag Assembly	
JA-06015	11
JA-06667	11
JA-09985	11
J1598465	11
Cover Assembly	
JA-05575	5
Cuff Block	
JA-18664	9
Cuff Clamp Assembly	
JA-05563	9
Cuff Clamp Assembly Lever	
JA-18640	9, 13
Cuff Clamp Link	
JA-18637	9, 13
Cuff Clamp Linkage Assembly	
JA-05565	9, 13
Cuff Clamp Trip	
JA-18636	9, 13
Cuff Release Bracket	
JA-19755	15, 21
Cuff Spring Clips Kit	
J0798921-00	13

Cup Repair Kit	
J1010-000258	47
Cylinder Assembly	
JA-05677	25, 27, 47
JA-05679	25, 27, 49
Cylinder Body Tube	
JA-18612	45
Cylinder Body Weldment	
J1346451	47
Cylinder Coupling	
J200101500	33
Cylinder Head Gasket	
J1428978	45
J1428986	47, 49
Cylinder Spacer	
JA-13208	47, 49
Cylinder Washer Spacer	
JA-18610	45

D

Damper Housing Assembly	
J1398528	23, 25, 27, 33
Damper Housing Gasket	
J1363563	33
Damper Housing Weldment	
J1398494	33
Damper Open Solenoid Assembly	
J1393081	25
Diaphragm Gauge	
JA-51283	23
Discharge Hose	
JA-19307	23
Double Manifold	
JA-05608	25
Dowel Pin	
JA-51970	9, 13
Dump Valve, 3-Way	
JA-54437	31

E

Electrical Component Mounting Panel	
J1393461	57
Electrical Outlet Box	
J1189117	55
Electrical Strap	
J1162478	15, 63
Element Replacement Kit	
J200200100	39
End Terminal Block	
J1085943	57, 69
Extension Spring	
JA-51657	7, 11
JA-52516	15
J1125889	49

F

Female Connector	
F140552	29
Female Rod End Bearing	
JA-53961	17
Filter Element Kit	
J200203300	39
Filter Kit	
J200032100	35, 37
Filter Mounting Weldment	
J1399013	23
Filter/Regulator	
J1557487	35
Filter/Regulator Assembly	
J200179100	37
J200203800	39
Filter/Regulator Auto Drain Kit	
J1637644	35, 37
Filter/Regulator/Lubricator Assembly	
J1557479P	25, 27, 35
J200127500	37
Filter/Regulator/Mist Separator Assembly	
J200200400	39
Fitting	
JC-30580	63
Flamone! Pad	
JA-52657	11
Flare Connector	
J1319276	21
Flexible Conduit	
JM-92602	61
Foot Assembly	
J0637146-00	29
Foot Switch	
JA-52460	61
Foot Switch Assembly	
J1393636	51, 61
Frame Weldment	
JA-09826	5
J0637154-00	29
Front Buck Base Tube	
JA-19260	7
Front Center Cover	
JA-18729	5
JA-19249	5, 29
Front Cover	
JA-20293	5
Front Cuff Clamp Cover	
JA-18639	9, 13
Fuse	
JC-31691	57
J1065218	59
J1235944	57
J1477496	57
Fuse Block	
J1081710	57
J1234616	57
Fuse Holder	
JE-66016	59
J1401884	57
Fuse Label	
J1370279	59

Fuse Supply Wire Nameplate	
J1312545	71

G

Gasket	
JA-50578	31
Ground Lug Terminal	
J1376987	57
Ground Wire Label	
J10-607	57

H

Head Frame Weldment	
JA-05617	19
Head Lever Assembly	
JA-05624	19
JA-05626	19
Head Lift Cylinder Assembly	
J1477579	25, 45
J1615004	25, 27, 45
Head Position Solenoid Assembly	
J1477561	25, 27
Head Raising Switch Assembly	
J1393602	51, 67, 69
Heater Tank Weldment	
JA-05663	21
Height Control Rod	
J1433655	69
Height Control Rod Assembly	
J1444850	69
High Temperature Tubing	
J1639707	27, 29
Hose	
J1393537	23
J200180604	23
J200180606	23
J200180608	23

I

Inside Piston Plate	
JA-18611	45
Inside Plate	
JA-11069	47, 49
Insulator	
J1439280	57
Insulator Bushing	
JA-52706	55

K

Knob	
JE-66023	65

N/A items do not appear in index.

L

Lamp	JA-53523	67
Leaf Spring	J0636872-00	13
Left Coat Head Weldment	JA-07237	21
Left Cuff Clamp	JA-06209	13
Left Shirt Cuff Block	JA-18926	13
Left Shirt Head Weldment	JA-07059	21
Lever Arm	J1398916	17
Lift Cylinder Solenoid Assembly	J1477454	25
Limit Switch	JA-52480	69
Limit Switch Assembly	J1393594	27, 51, 53
Link Rod	JA-18894	17
Lock-Out Valve	J1557503	35
	J200179000	37, 39
Lockout/Tagout Warning Decal	J200139600	71
Low Pressure Valve Assembly	J1398510	23, 25, 27, 31
Lower Head	JA-17711	47
	JA-18604	45
	JA-18893	49
Lower Rear Cover	J1398742	5
Lower Steam Pipe Assembly	JA-05611	21
Lubricator	J1557495	35
Lubricator Assembly	J200179200	37
Lubricator Kit	J200032400	35, 37

M

Male Compression Connector	JC-30857	21
	J1161272	21
Male Compression Elbow	JC-30754	21
	J1161280	21
Male Elbow	J0206020-00	27, 29
Male Polyflo Connector	JC-30551	27, 45
Male Polyflo Tee	JA-53581	25

Manifold Bottom	JA-19293	23
Manifold Top	JA-19292	23
Measuring Arm Box Cover	JA-18864	63, 67
Measuring Arm Weldment	JA-80032	67
Mist Separator	J200200000	39
Mist Separator Kit	J200296900	37
Motor Junction Conduit Assembly	J1460625	51
Motor Switch	J1162429	53
Muffler	JA-19302	23
Muffler Weldment	J1393545	23

N

Nameplate Overlay	70240801	71
Needle Roller Bearing	JA-52499	19
Needle Valve	J1246024	25, 27, 45, 47
Nipple	JA-52142	49
Nut	F430218	29
	JA-50413	47
	JA-50434	45, 47
	JA-50996	5
	JA-52031	17
	JA-52611	13
	JC-48142	49
	JC-48157	67
	JC-48220	45
	JC-48289	9, 13, 31, 33
	JC-48497	23
	J1000736	5, 55, 57
	J1000850	17
	J1000884	19
	J1065671	15, 17, 19, 49
	J1209113	7, 13
	J1391515	31
	M400026	19, 67
	M404993	67
	20274	15
	20275	9, 11, 13, 15, 19, 23, 27, 63
	70142	7, 13, 15

O

Oilless Sleeve Bearing	JA-50896	19
	JA-50909	69
	JA-51070	45, 47, 49
	JA-51428	19
	JA-51703	69

N/A items do not appear in index.

J1242387	45, 47
O-Ring	
JA-52537	7, 11, 15, 23
JC-57441	43
Outside Piston Plate	
JA-18609	45
Outside Plate	
JA-11068	47, 49

P

Pad	
JA-52491	7
Padding	
JA-05659	7
JA-05660	7
JA-05927	11
JA-05928	11
Pipe Elbow	
JA-50642	45, 49
JA-51007	21
JC-28696	21
J1084011	21
J1231422	21
Pipe Nipple	
JC-46091	45
JC-46212	21
J115175201	21
J1232313	31
J1236553	21
J1240860	21
J1398544	23
J1398551	23, 31
Pipe Tee	
JA-51530	21
JA-52352	21
Piston Cup Seal	
J1324847	45
J1324854	47, 49
Piston Plate Seal	
J1322577	45
J1322585	47, 49
Piston Rod	
JA-24079	47
JA-24081	49
JA-24082	45
Pivot	
JA-18886	9, 13
Pivot Head Bar	
JA-18859	19
Pivot Head Pin	
JA-18856	19
Plug	
F140527	29, 57
J1085968	57
Pressure Arm	
JA-08338	19
Pressure Arm Pin	
JA-11395	19
Pressure Gauge	
J1477959	35
Pressure Switch	
J1364181	27, 29, 51

Pushbutton Switch	
J200204600	65
Push-to-Start Switch Kit	
M400954P	63, 67

Q

Quick Exhaust	
JA-87000	25, 27
Quick Tubing Tee	
J1437029	25, 27
J1438357	29, 31

R

Rear Cuff Clamp Cover	
JA-18638	9, 13
Rear Lower Cover	
JA-19968	5
Reducing Bushing	
JC-19609	47
Regulator Kit	
J200032200	35, 37
Relay	
J1116243	57
J1116250	57
Reset Label	
JA-28955	71
Reset Pushbutton	
J1069483	71
Reset Timer Label	
JA-21422	71
Retaining Ring	
JA-51082	49
JA-51083	15
Right Clevis	
J1144740	45, 47
Right Coat Head Weldment	
JA-07236	21
Right Cuff Clamp	
JA-06208	13
Right Front Cover Plate	
J200210600	5
J200211300	5
Right Shirt Cuff Block	
JA-18925	13
Right Shirt Head Weldment	
JA-07058	21
Ring Terminal	
JC-70840	53
Rod Clevis	
JA-52415	67
Roll Pin	
JC-55026	9, 13

S

Safety Handle	
JA-05727	51, 63

N/A items do not appear in index.

Safety Handle Weldment		Shock Absorber Assembly	
JA-05726	63	JA-05574	17
Screen		Shock Absorber Link Assembly	
JA-10908	41	JA-09933	17
Screw		Shock Absorber Rebuild Kit	
JA-20471	15	J1010-000122	17
JA-50055	31	Shut-Off Warning Decal	
JA-50198	17	J200156500	71
JA-50282	17	Side Air Bag	
JA-50354	45	JA-05745	7
JA-50362	7	Side Cover Assembly	
JA-50394	15	JA-03883	5
JA-50998	5	Single Manifold	
JA-51187	9	JA-05607	25
JA-51604	13	Sleeve	
JA-51675	9, 13	JM-93516	27
JA-51832	17	Socket	
JA-52426	67	JA-51486	67
JA-53020	15, 23, 63	Solenoid Valve, 3-Way	
JA-53131	69	J1362854	27
JA-53294	49	J1364173	27
JA-53335	45, 47	J1478171	27
JA-54156	19	Spacer	
JC-17796	67	J1571413	35
JC-61269	33	Spiral Hose Clamp	
JC-61273	5	J200270700	23
JC-61353	7, 13	J200270900	23
JC-61582	65	Spring	
JC-61608	35	JA-50951	49
JC-62264	9, 13	JA-51318	19
JC-62551	19	JA-52466	9, 13
JC-62851	33	Spring Assembly	
JC-63141	67	JA-05674	15
JC-63313	19	Spring Cam Return Rod	
JC-64014	57	JA-21864	49
J1063619	57	Spring Clip	
J1083641	13	J1471564	9, 13
J1122118	15	Spring Pad Assembly	
J1179183	19	JA-05958	11
J1185107	5, 53, 57	JA-05959	11
J1187228	65, 69	Spring Padding	
J1199389	7	JA-06463	11
J1233162	57	JA-06464	11
J1233659	63, 65, 67	Start Up and Down Sequence Decal	
J1238518	15	JA-22464	71
J1378603	57	Steam Hose	
J1383355	57	J1319268	21
J1482314	27	Steam Inlet Label	
J1550110	63, 67	JA-17841	71
J200160600	19	Steam Return Label	
M400044	55	JA-17840	71
M400057	23	Steel Wool Pad	
02422	15, 27, 61	JA-52658	11
24233	63	Stop Decal	
430648	23	JA-19054	71
91202	7	Straight Connector	
Seal		JC-22893	59, 65, 69
J1359884	31	J1238211	59, 61, 63, 69
Seam Indicator Assembly		Street Elbow	
JA-05250	67	J1012574	47
Seam Indicator Housing Assembly		Street Pipe Elbow	
JA-08329	67	JC-28235	49
Shirt Hold-Down Assembly		Street Pipe Tee	
J0637156-00	29	JC-30541	31
Shirt Tray			
JA-21381	5, 15		
Shock Absorber			
JA-51273	17		

N/A items do not appear in index.

Suitable Supply Info Decal J200210300	71
Switch Box J1401199	69
Switch Box Assembly JA-81517	69
Switch Control Rod JA-26757	69
Switch Mounting Bracket J1292531	53
Swivel Tubing Elbow J1407741	25, 27, 29, 31, 33, 47
J1419811	27

T

Table Bracket JA-12615	15
Tapered Handle JA-01281	67
Tee Weldment J1411552	23
Terminal J1121284	65
Terminal Block J1081793	57, 69
Terminal Lug J1189125	55
Timer Assembly J1345966	65
Timer Box Frame JA-20228	65
Timer Control Box Assembly J1393610	51, 65
Timer Cover J1315852	65
Timer Label J1344589	71
Top Cover Plate J200210700	5
Top Damper Housing Plate J1398486	33
Top Front Cover JA-19236	5
Top Rear Cover J200211200	5
Transformer J1417120	57
J1475938	57
J1475953	57
J200113800	57
Transformer Insulator J1418896	57
Tube JA-16590	67
Tubing J0141711-00	25, 27
J1103970-00	27
J1103970-00P	25
J1107432	25
J1113232	25
J1117191	21

Tubing Connector J1408020	35
------------------------------------	----

U

Union Tee J0140949-00	27, 29
Universal Wheel Stud JA-53390	15
Upper Head Assembly JA-09724	47, 49
JA-80202	45
Upper Steam Pipe Assembly JA-05612	21

V

Valve JA-11599	43
Valve and Bracket Assembly J1477546	25, 27, 43
Valve Body JA-10514	43
J1383116	31
Valve Body Assembly JA-06430	43
Valve Cap JA-10515	43
Valve Mounting Bracket JA-19329	15, 43
Valve Stem JA-19333	43

W

Warning Decal J200181000	71
Washer JA-14180	15
JA-19149	67
JA-52666	19, 49
JA-53134	19
JC-43264	7, 13
JC-43267	63
JC-43336	9, 13
JC-80006	69
JC-80513	15
J1000975	5, 27, 33, 35, 55
J1001007	5, 15, 23, 27
J1001106	17
J1001213	27, 33, 35, 57
J1001270	19
J1001304	15
J1001320	67
J1001338	17, 49
J1085984	65
J1085992	57
J1120195	7, 13
J1178391	45
J1185073	15, 23, 61, 63, 67
J1216357	65
J1338565	19

N/A items do not appear in index.

J1359876	31
J1359892	31
J1398437	33
J1398452	33
J1398460	33
J1398478	33
J1401777	23
M400013	23, 33, 45, 49
M400014	15, 19, 23, 67
M400080	15, 67
M400081	23
M403958	45, 47, 49
91200	15, 17
Wire, 18 Gauge	
JM-94197	61
JM-99781	61
J1121805	53
J1121813	61
45003	53
Worm Gear Clamp	
JC-21520	23
JC-21541	7, 11
