


## PARTS ILLUSTRATION VALVE MANIFOLD

NOTE:  
IF MANUAL OVERRIDE HAS SCREW  
SLOT, NEVER PUSH AND TURN.  
IT WILL LOCK VALVE OPEN.  
ONLY PUSH IN AND RELEASE.

NOTE:  
SEE "SOLENOID VALVES"  
IN THIS SECTION FOR  
VALVE COMPONENTS.

MANUAL  
OVERRIDE  
(TYP.)

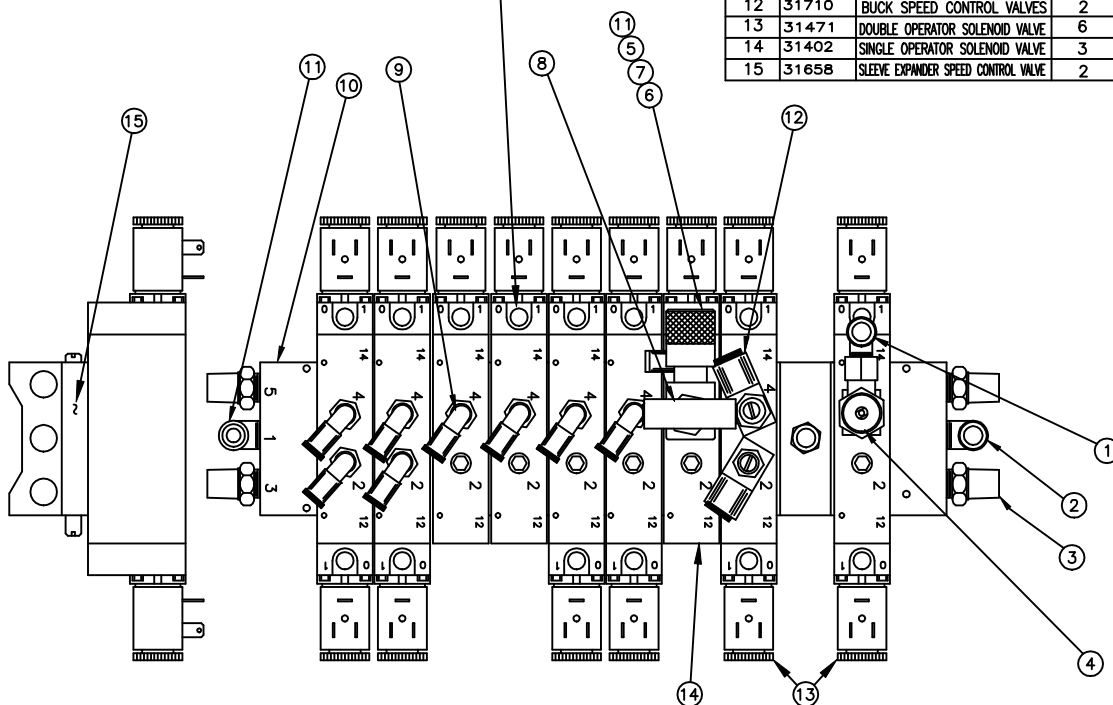

REF. No.	PART No.	DESCRIPTION	No. REQD.	REMARKS
1	30889-4	PUSH-IN TUBE ELBOW	1	1/4"THD.x 3/8" TUBE
2	30889-12	PUSH-IN TUBE ELBOW	1	3/8"THD.x 3/8" TUBE
3	31227	BRONZE MUFFLER	4	3/8"NPT.
4	31592	SLOW START VALVE	1	1/4"NPT.
5	27153-5	STREET TEE	1	3/8" TUBE x 3/8" TUBE x 3/8" TUBE
6	31593	HEAD CLOSING SPEED CONTROL VALVE	1	3/8"NPT.
7	31640-2	3/8"to 1/4" REDUCING HEX NIPPLE	1	3/8" TO 1/4"
8	30890-7	PUSH-IN MALE BRANCH TEE	1	3/8"THD.x 1/4" TUBE
9	30889-3	PUSH-IN TUBE ELBOW	8	1/4"THD.x 1/4" TUBE
10	31588	VALVE MANIFOLD ASS'Y.	1	WITHOUT FITTINGS
11	30889-13	PUSH-IN TUBE ELBOW	2	3/8"THD.x 1/4" TUBE
12	31710	BUCK SPEED CONTROL VALVES	2	1/4"THD.x 1/4" TUBE
13	31471	DOUBLE OPERATOR SOLENOID VALVE	6	
14	31402	SINGLE OPERATOR SOLENOID VALVE	3	
15	31658	SLEEVE EXPANDER SPEED CONTROL VALVE	2	