




COMMERCIAL ELECTRIC DRYER

MODELS:

MLE26PRBYW0 (White)


CONTROL PANEL AND SEPARATOR PARTS

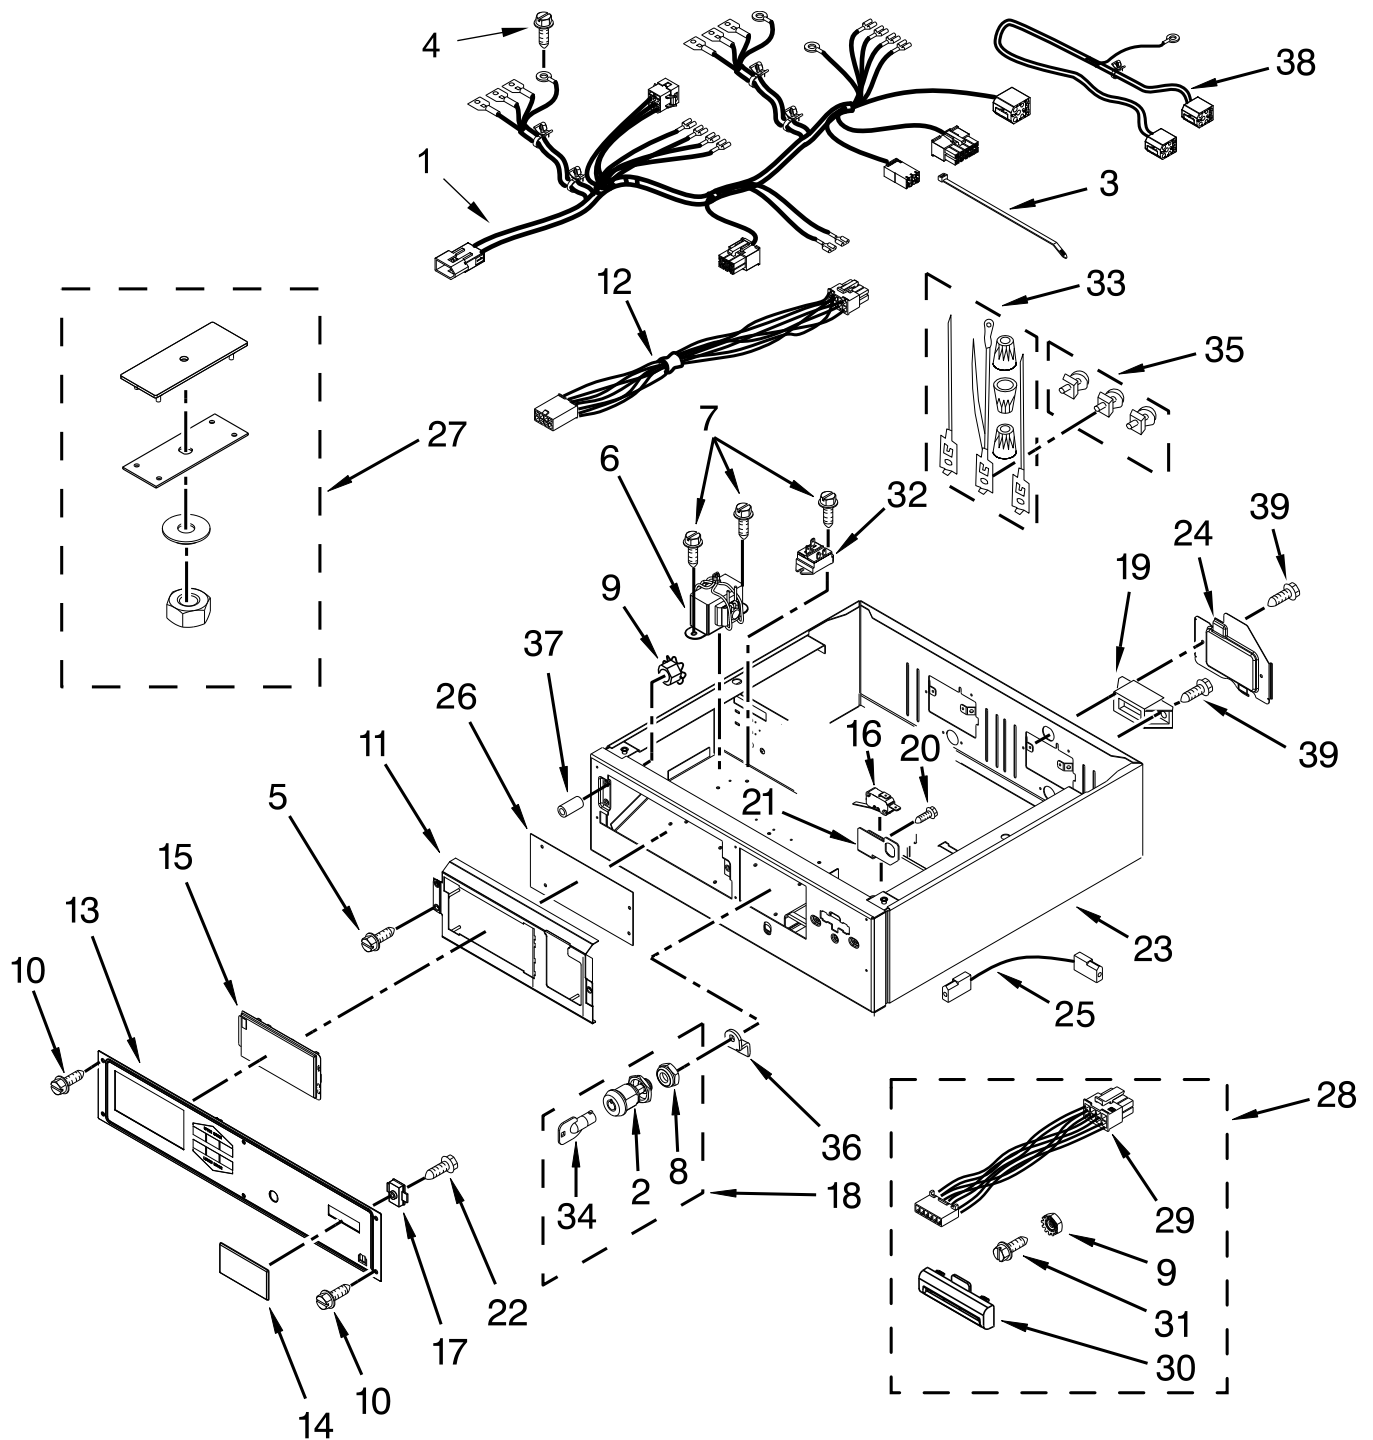

CONTROL PANEL AND SEPARATOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10702048	Harness, Collar	17	W10145157	Retainer, Facia Cover	32	W10133335	Relay, Motor
2	W10139762	Nut, Hex	18	W10133264	Assembly, Lock Access Door	33	279318	Terminal, Brass and Tinned (Includes Terminal Block Screw Kit)
3	8529895	Tie, Cable	19	3397659	Block, Terminal	34	W10140858	Key, Access Door
4	8533974	Screw	20	3400408	Screw	35	279393	Screw Kit, Terminal Block
5	W10140652	Screw	21	W10160652	Bracket-Switch	36	W10133266	Cam, Locking
6	W10133285	Transformer 120Vac To 22.5Vac	22	3400618	Screw	37	W10133514	Standoff, Circuit Board
7	8533971	Screw	23	W10678213	Collar	38	W10702055	Jumper, Lower to Collar
8	W10177242	Nut, Hex	24	W10684155	Cover, Terminal Block	39	3400000	Screw
9	W10139046	Nut	25	W10769481	Jumper, Coin Box			
10	W10386302	Screw	26	W10678217	Control Board			
11	W10657185	Plate, Control Mounting	27	W10169579	Kit-Coin Box, Security (To be serviced as a kit)			
12	W10111027	Jumper, Transformer	28	W10135263	Card Reader Conversion Kit			
13	W10678216	Facia Console	29	W10239515	Harness, Card Reader			
14	W10137769	Cover, Card Reader	30	W10163036	Bezel			
15	W10133268	Cover, Display	31	W10143462	Screw			
16	W10447152	Switch, Service Access						


LOWER CABINET AND FRONT PANEL PARTS

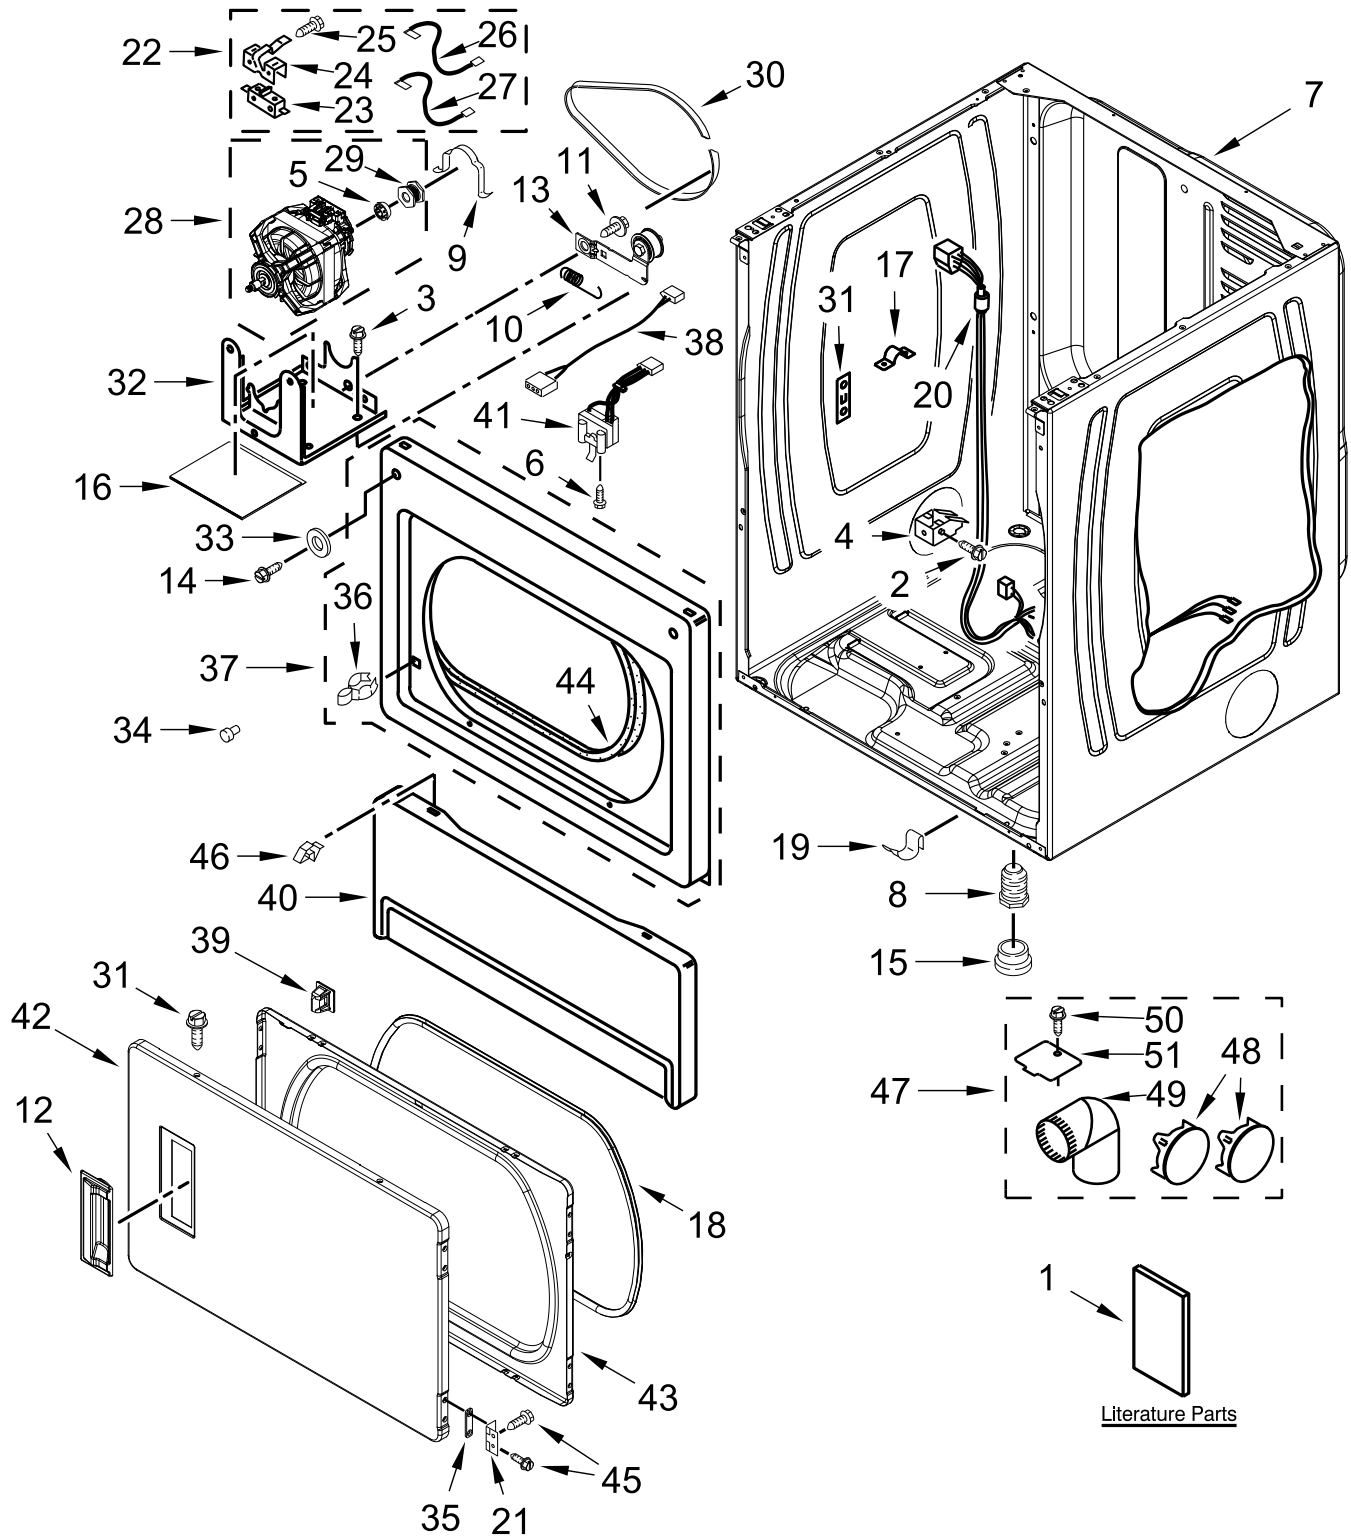

LOWER CABINET AND FRONT PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts (Located Behind Toe Panel)	18	3390735	Seal, Door	37		Panel, Front
	W10761033	Installation Instructions	19	W10291934	Clip		W10192882	White
	W10135168	Tech Sheet	20	W10702049	Harness	38	8283298	Jumper, Door Switch
	W10738550	Wiring Diagram	21		Hinge & Pin Assembly	39	3392538	Assembly, Door Catch
2	3391915	Screw		W10279703	Silver	40		Panel, Toe
3	3390663	Screw	22	8066134	Switch Assembly		697215	White
4	3391846	Clip, Front Panel	23	3394881	Switch - Belt	41	3406109	Switch, Door
5	3393657	Restrainer, Belt	24	8066120	Lever Switch	42	W10322546	Door, Front
6	697773	Screw	25	98129	Screw	43	W10323061	Door, Rear
7		Cabinet	26	W10167612	Wire, Belt Switch	44	3387242	Seal, Front Panel
	W10547697	White	27	3398948	Wire, Jumper (Broken Belt Switch)	45	342055	Screw
8	3392100	Foot, Dryer	28	W10396031	Motor	46	3388229	Retainer
9	660658	Clamp, Motor	29	3394341	Pulley, Motor	47		Optional Parts Not Included Dryer Exhaust Kit (For Side & Bottom Venting)
10	W10446781	Spring, Idler	30	3387610	Belt, Drive		279818	White
11	3389420	Screw	31	3390647	Screw	48		Multivent Plug
12	W10116360	Handle, Door	32	3387118	Bracket, Motor		697750	White
13	W10344193	Pulley-Idler Assembly	33	3392186	Washer	49	49026	Elbow
14	3400077	Screw	34	693152	Bumper	50	488729	Screw
15	3391943	Boot, Foot	35		Plug, Hinge	51	3394331	Plate, Cover
16	W10212660	Motor, Sound Pad		W10191265	White			
17	98997	Clip	36	696144	Strike, Door			


UPPER CABINET AND FRONT PANEL PARTS

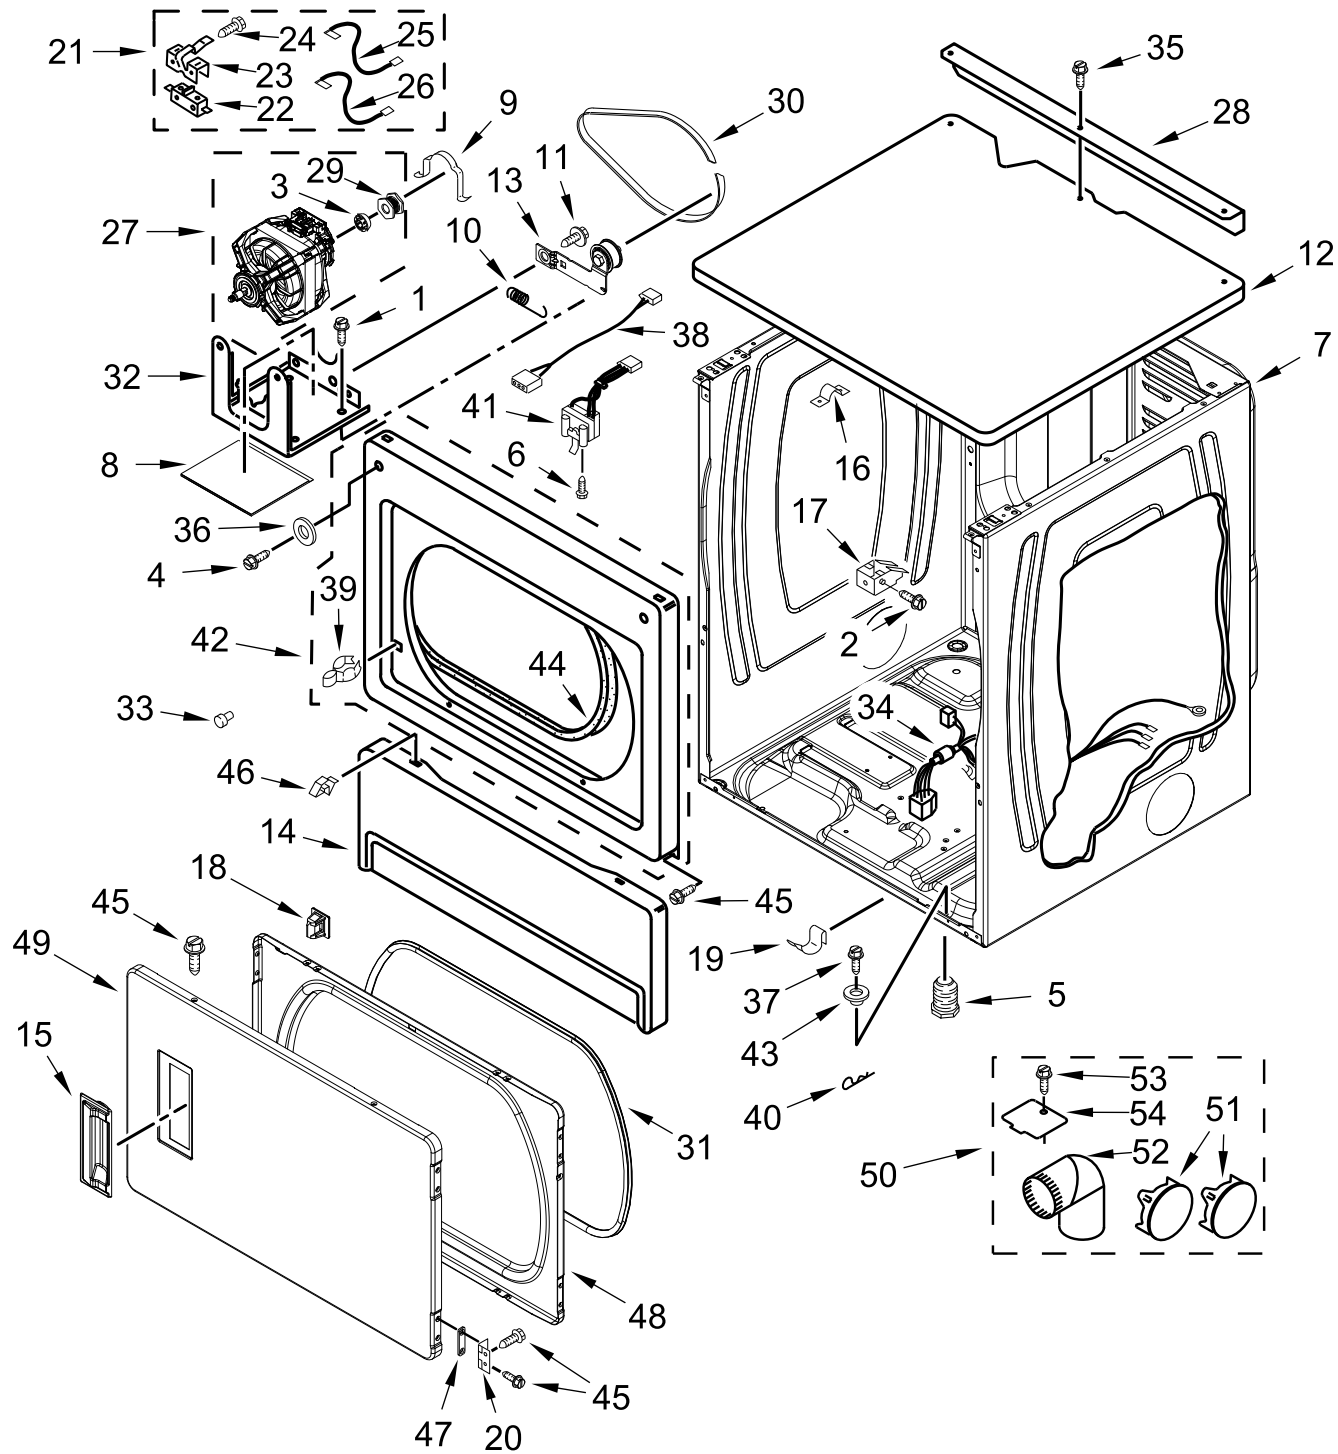

UPPER CABINET AND FRONT PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3390663	Screw	20		Hinge & Pin Assembly	41	3406109	Switch, Door
2	3391915	Screw		W10279703	Silver	42		Panel, Front
3	3393657	Restrainer, Belt	21	8066134	Switch Assembly		W10192882	White
4	3400077	Screw	22	3394881	Switch - Belt	43	3389233	Bushing
5	689172	Foot, Dryer Plastic	23	8066120	Lever Switch	44	3387242	Seal, Front Panel
6	697773	Screw	24	98129	Screw	45	342055	Screw
7		Cabinet	25	W10167612	Wire, Belt Switch	46	3388229	Retainer
	W10547697	White	26	3398948	Wire, Jumper (Broken Belt Switch)	47		Plug, Hinge
8	W10212660	Motor, Sound Pad	27	W10396031	Motor	48	W10323061	Door, Rear
9	660658	Clamp, Motor	28	3979115	Bracket, Angle	49	W10322546	Door, Front
10	W10446781	Spring, Idler	29	3394341	Pulley, Motor		W10191265	White
11	3389420	Screw	30	3387610	Belt, Drive	50		Optional Parts Not Included Dryer Exhaust Kit (For Side & Bottom Venting)
12		Top	31	3390735	Seal, Door		279818	White
	3389351	White	32	3387118	Bracket, Motor	51		Multivent Plug
13	W10344193	Pulley-Idler Assembly	33	693152	Bumper		697750	White
14		Panel, Toe	34	W10702049	Harness	52	49026	Elbow
	697215	White	35	3390647	Screw	53	488729	Screw
15	W10116360	Handle, Door	36	3392186	Washer	54	3394331	Plate, Cover
16	98997	Clip	37	3400523	Bolt, Security			
17	3391846	Clip, Front Panel	38	8283298	Jumper, Door Switch			
18	3392538	Assembly, Door Catch	39	696144	Strike, Door			
19	W10291934	Clip	40	W10117347	Cotter Pin			

UPPER AND LOWER BULKHEAD PARTS

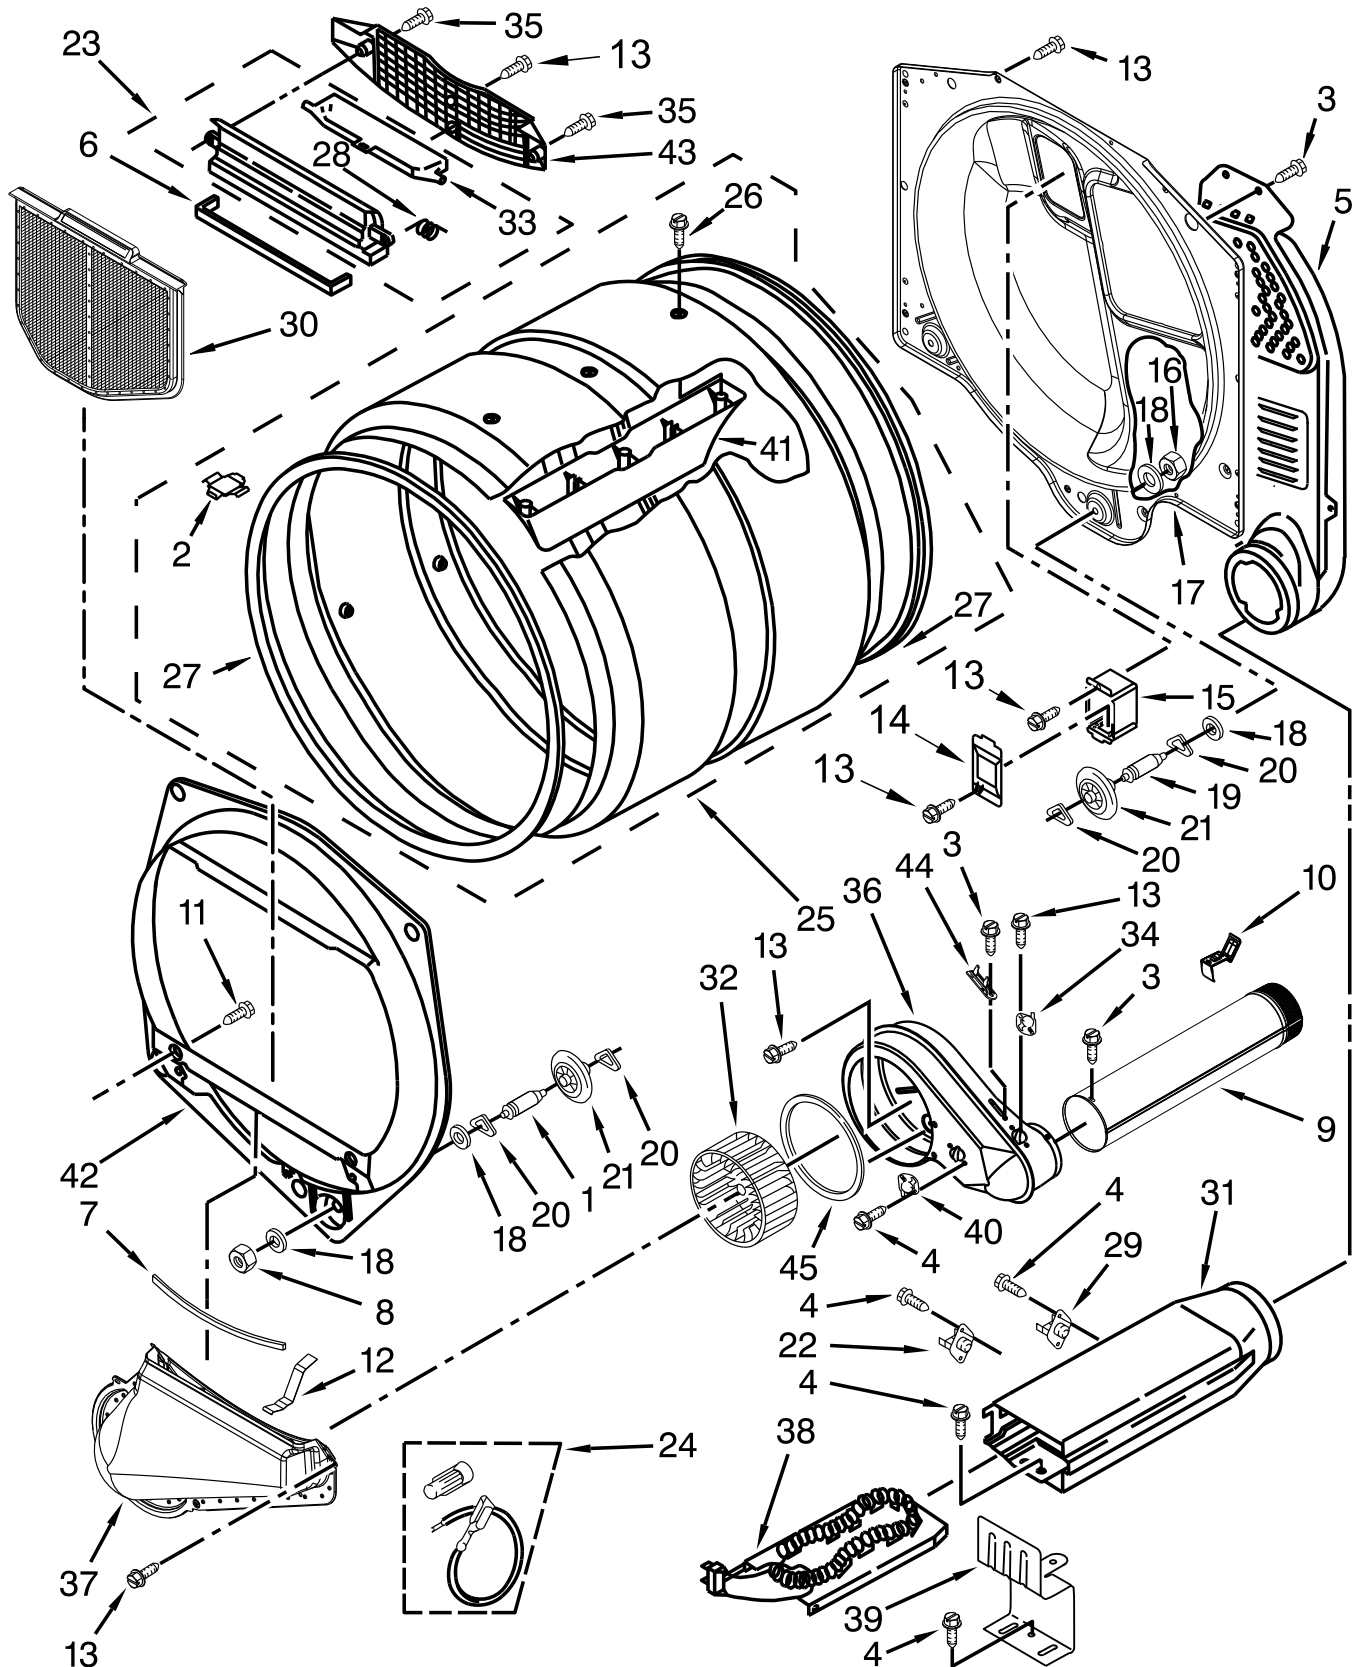

UPPER AND LOWER BULKHEAD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10359271	Shaft, Drum Roller - Right Hand Thread	19	W10359272	Shaft, Drum Roller - Left Hand Thread	34	W10131836	Thermostat
2	8066086	Plug, Drum Hole	20	W10512946	Washer, Tri Ring	35	3387230	Screw
3	8533971	Screw	21	W10314171	Roller, Support	36	W10135254	Housing, Blower
4	90767	Screw	22	3391914	Thermostat HL-295/215	37	8066168	Assembly, Lint Duct
5	697354	Assembly, Air Duct	23	W10685669	Assembly, Outlet Housing	38	3387748	Element, Heater
6	697813	Seal, Outlet Housing	24	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)	39	8066099	Bracket, Heater Box
7	697814	Seal, Drum Front	25	W10545923	Assembly, Drum	40	W10193019	Thermostat, Electronic (155F)
8	3934666	Nut, Hex	26	W10219342	Screw	41	697693	Baffle, Drum
9	8066224	Pipe, Exhaust	27	W10521118	Seal, Drum	42	697557	Bulkhead, Front
10	8572105	Clip, Exhaust	28	3394986	Spring, Lint Screen Door	43	W10692558	Grill, Outlet
11	3357011	Screw	29	8318314	Kit, Thermal Cut-Off (Includes High Limit Thermostat)	44	3392519	Fuse, Thermal (91C)
12	W10345456	Clip, Spring	30		Screen, Lint	45	697770	Seal, Plate Cover
13	3390647	Screw		W10596627	White			
14	3402841	Lens, Drum Light	31	W10608837	Assembly, Weld Heater Box			
15	8578825	Bracket, Drum Light	32	W10349492	Wheel, Blower			
16	W10001120	Nut, Hex (Left Hand Thread)	33	W10685668	Door, Lint Screen			
17	8520836	Bulkhead, Rear						
18	3387459	Washer						

OPTIONAL PARTS (NOT INCLUDED)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4392067	Kit, Dryer Repair
	285875	Kit, Security
	8522199	Kit, Dryer Vent Testing

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350938	Gray Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White