




COMMERCIAL ELECTRIC DRYER

MODELS:

MLE26PRKYW1 (White)

LOWER CABINET AND FRONT PANEL PARTS

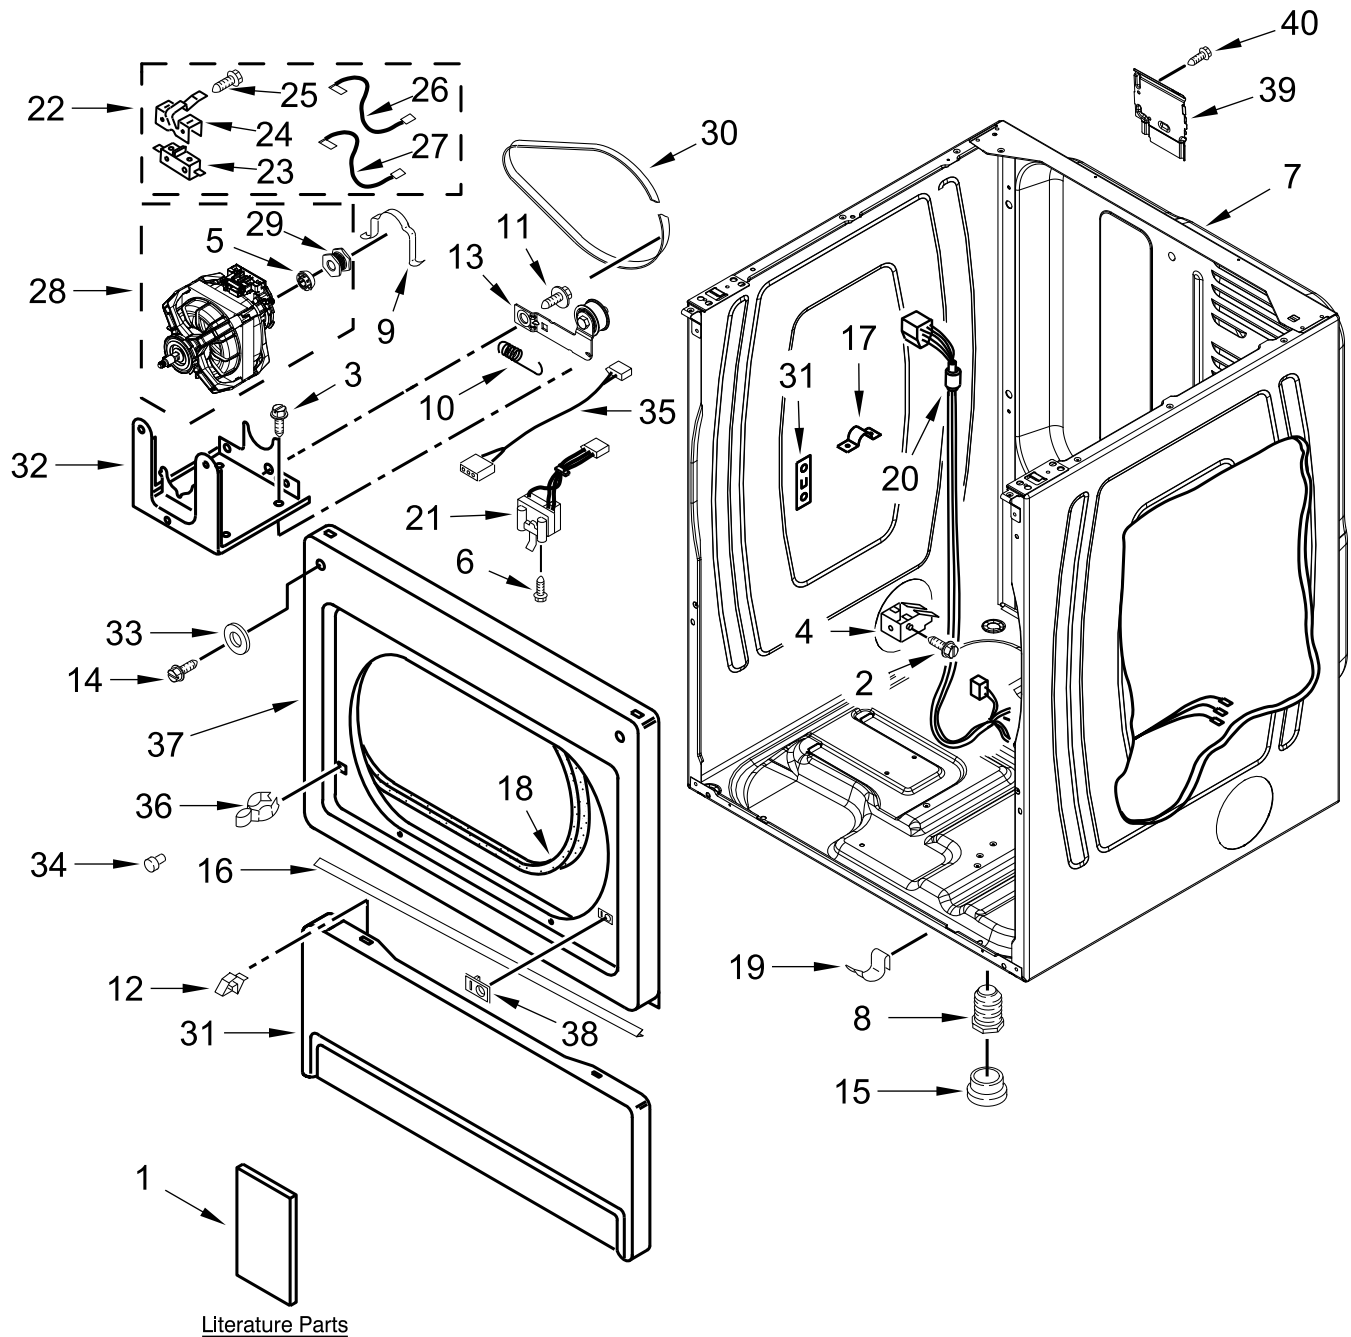


Literature Parts

LOWER CABINET AND FRONT PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts (Located Behind Toe Panel)	12	3388229	Retainer	28	W10396031	Motor
	W10761033	Installation Instructions	13	W10344193	Pulley-Idler Assembly	29	3394341	Pulley, Motor
	W10866494	Tech Sheet	14	3400077	Screw	30	W10131172	Belt, Drive
	W10738550	Wiring Diagram	15	3391943	Boot, Foot	31		Panel, Toe
2	3391915	Screw	16	W10576519	Seal, Deflector		697215	White
3	3390663	Screw	17	98997	Clip	32	3387118	Bracket, Motor
4	3391846	Clip, Front Panel	18	3387242	Seal, Front Panel	33	3392186	Washer
5	3393657	Restrainer, Belt	19	W10291934	Clip	34	693152	Bumper
6	697773	Screw	20	W10807486	Harness, Upper/Lower	35	8283298	Jumper, Door Switch
7		Cabinet	21	3406109	Switch, Door	36	3403431	Strike, Door
	W11161907	White	22	8066134	Switch Assembly	37	W10694688	Panel, Front
8	3392100	Foot, Dryer	23	3394881	Switch, Belt	38		Cover, Strike
9	660658	Clamp, Motor	24	8066120	Lever, Belt Switch		W10521429	White
10	W10446781	Spring, Idler	25	98129	Screw	39	W11378153	Cover, Terminal
11	3389420	Screw	26	W10167612	Wire, Belt Switch	40	98139	Screw
			27	3398948	Wire, Jumper (Broken Belt Switch)			


CONTROL PANEL AND SEPARATOR PARTS

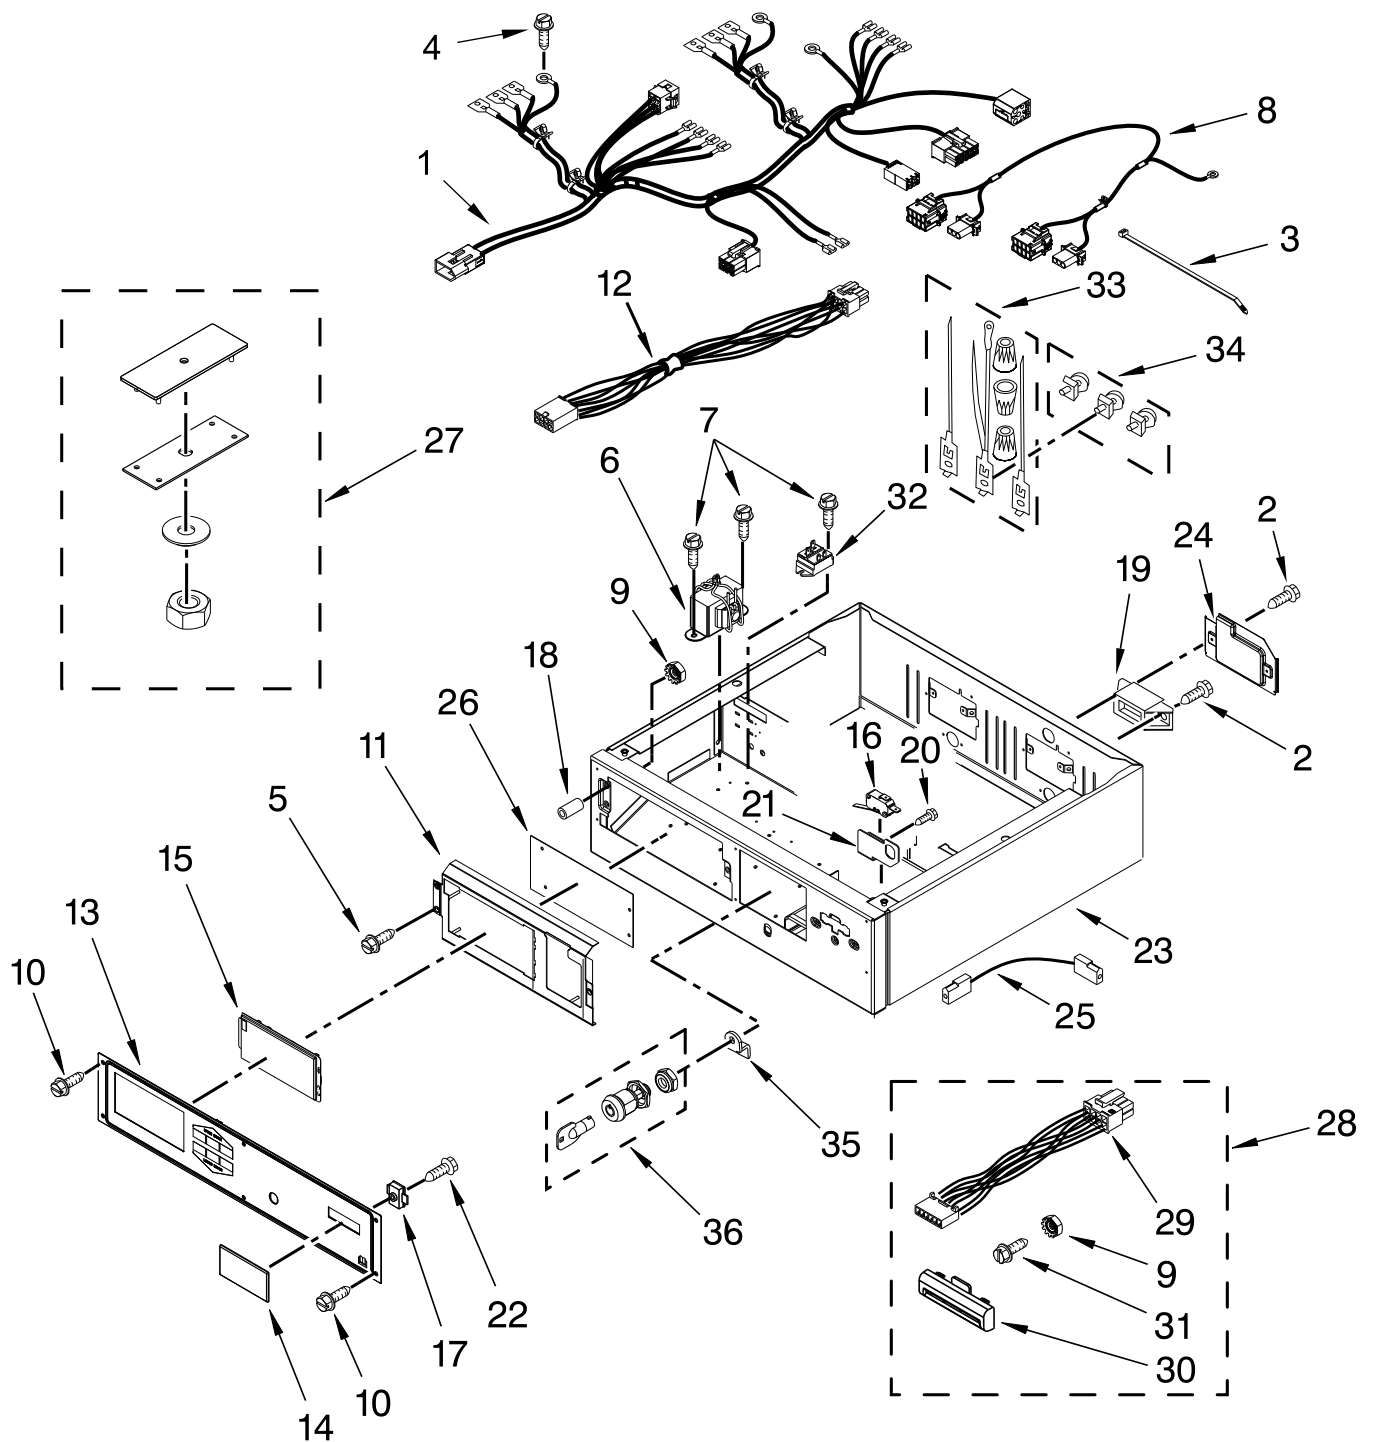

CONTROL PANEL AND SEPARATOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10807485	Harness, Collar (Includes Motor Relay)	14	W10137769	Cover, Card Reader	28	W10135263	Card Reader Conversion Kit
2	3400000	Screw	15	W10133268	Cover, Display	29	W10239515	Harness, Card Reader
3	W10155270	Cable Tie	16	W10447152	Switch, Service Access	30	W10163036	Bezel
4	W10773242	Screw	17	W10145157	Retainer, Facia Cover	31	W10143462	Screw
5	W10140652	Screw	18	W10133514	Standoff, Circuit Board	32	W10827406	Relay, Motor
6	W10133285	Transformer 120Vac To 22.5Vac	19	3397659	Block, Terminal	33	279318	Terminal, Brass and Tinned (Includes Terminal Block Screw Kit)
7	8533971	Screw	20	3400408	Screw			
8	W10807493	Jumper, Lower to Collar	21	W10160652	Bracket-Switch	34	279393	Screw Kit, Terminal Block
9	W10139046	Nut	22	3400618	Screw			
10	W10386302	Screw	23	W10862446	Collar	35	W10913660	Cam, Locking
11	W10657185	Plate, Control Mounting	24	W10850065	Cover, Terminal Block	36	W10899602	Assembly, Lock Access Door
12	W10111027	Jumper, Transformer	25	W10769481	Jumper, Coin Box			
13	W10678216	Facia Console	26	W11393069	Control Board			
			27	W10169579	Kit-Coin Box, Security (To be serviced as a kit)			


UPPER CABINET AND FRONT PANEL PARTS

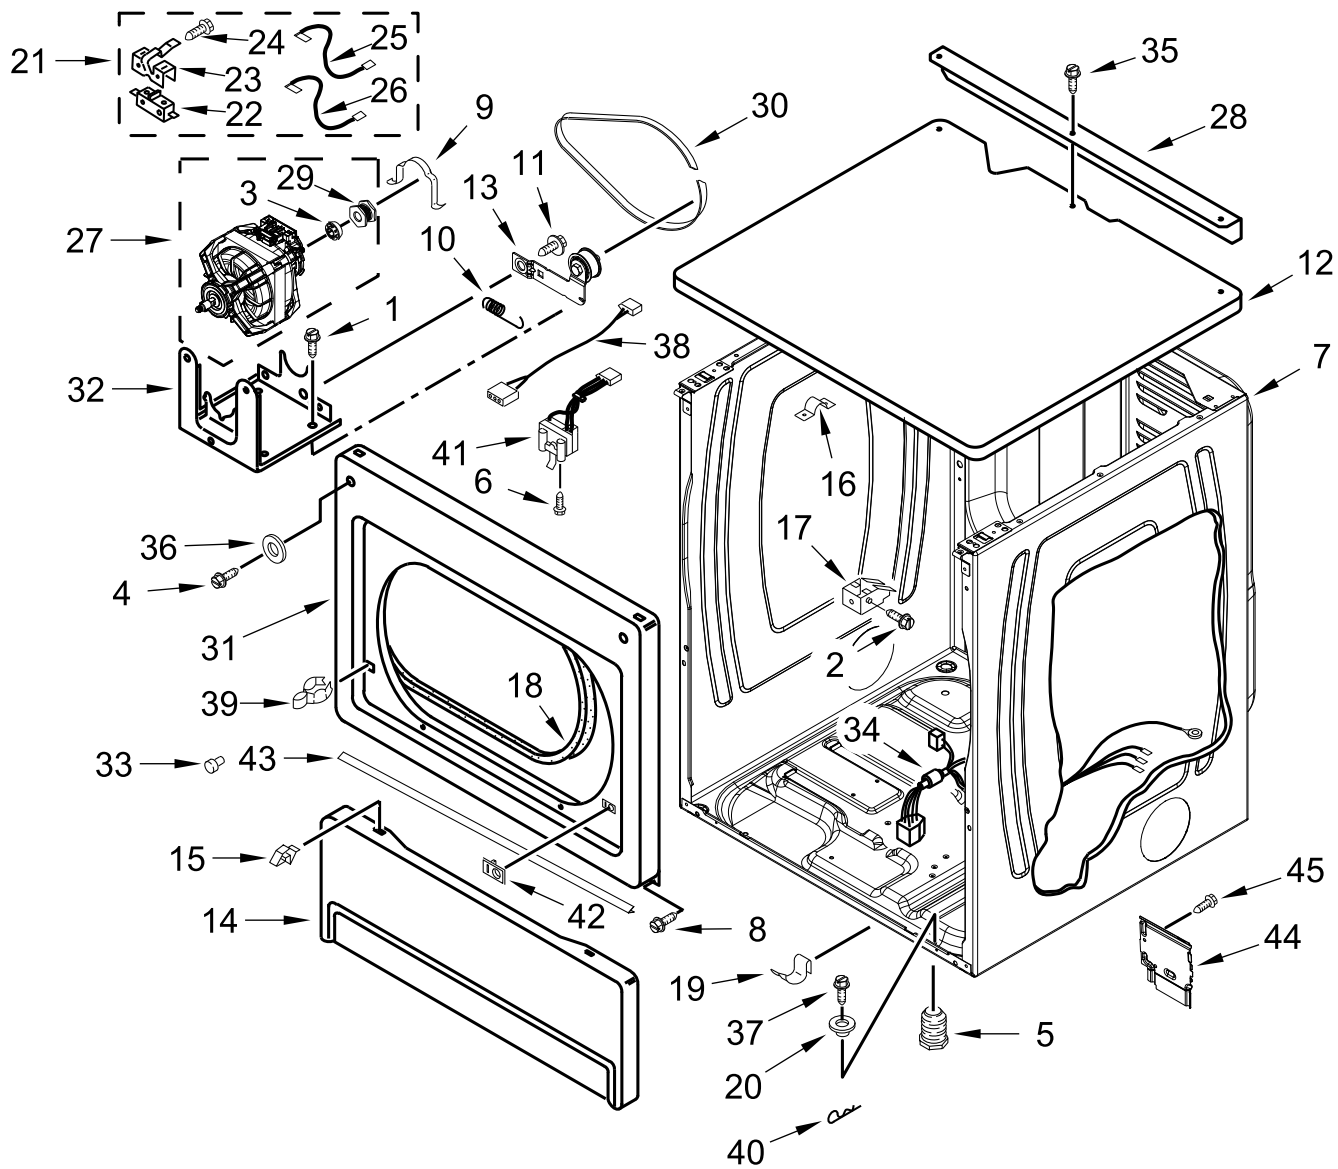

UPPER CABINET AND FRONT PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3390663	Screw	16	98997	Clip	33	693152	Bumper
2	3391915	Screw	17	3391846	Clip, Front Panel	34	W10807486	Harness, Upper/Lower
3	3393657	Restrainer, Belt	18	3387242	Seal, Front Panel	35	3390647	Screw
4	3400077	Screw	19	W10291934	Clip	36	3392186	Washer
5	689172	Foot, Dryer Plastic	20	3389233	Bushing	37	3400523	Bolt, Security
6	697773	Screw	21	8066134	Switch Assembly	38	8283298	Jumper, Door Switch
7		Cabinet	22	3394881	Switch, Belt	39	3403431	Strike, Door
	W11161907	White	23	8066120	Lever, Belt Switch	40	W10117347	Cotter Pin
8	W10879744	Screw	24	98129	Screw	41	3406109	Switch, Door
9	660658	Clamp, Motor	25	W10167612	Wire, Belt Switch	42		Cover, Strike
10	W10446781	Spring, Idler	26	3398948	Wire, Jumper (Broken Belt Switch)		W10521429	White
11	3389420	Screw	27	W10396031	Motor	43	W10576519	Seal, Deflector
12		Top	28	3979115	Bracket, Angle	44	W11378153	Cover, Terminal
	3389351	White	29	3394341	Pulley, Motor	45	98139	Screw
13	W10344193	Pulley-Idler Assembly	30	W10131172	Belt, Drive			
14		Panel, Toe	31	W10694688	Panel, Front			
	697215	White	32	3387118	Bracket, Motor			
15	3388229	Retainer						
	W10191265	White						


DOOR PARTS

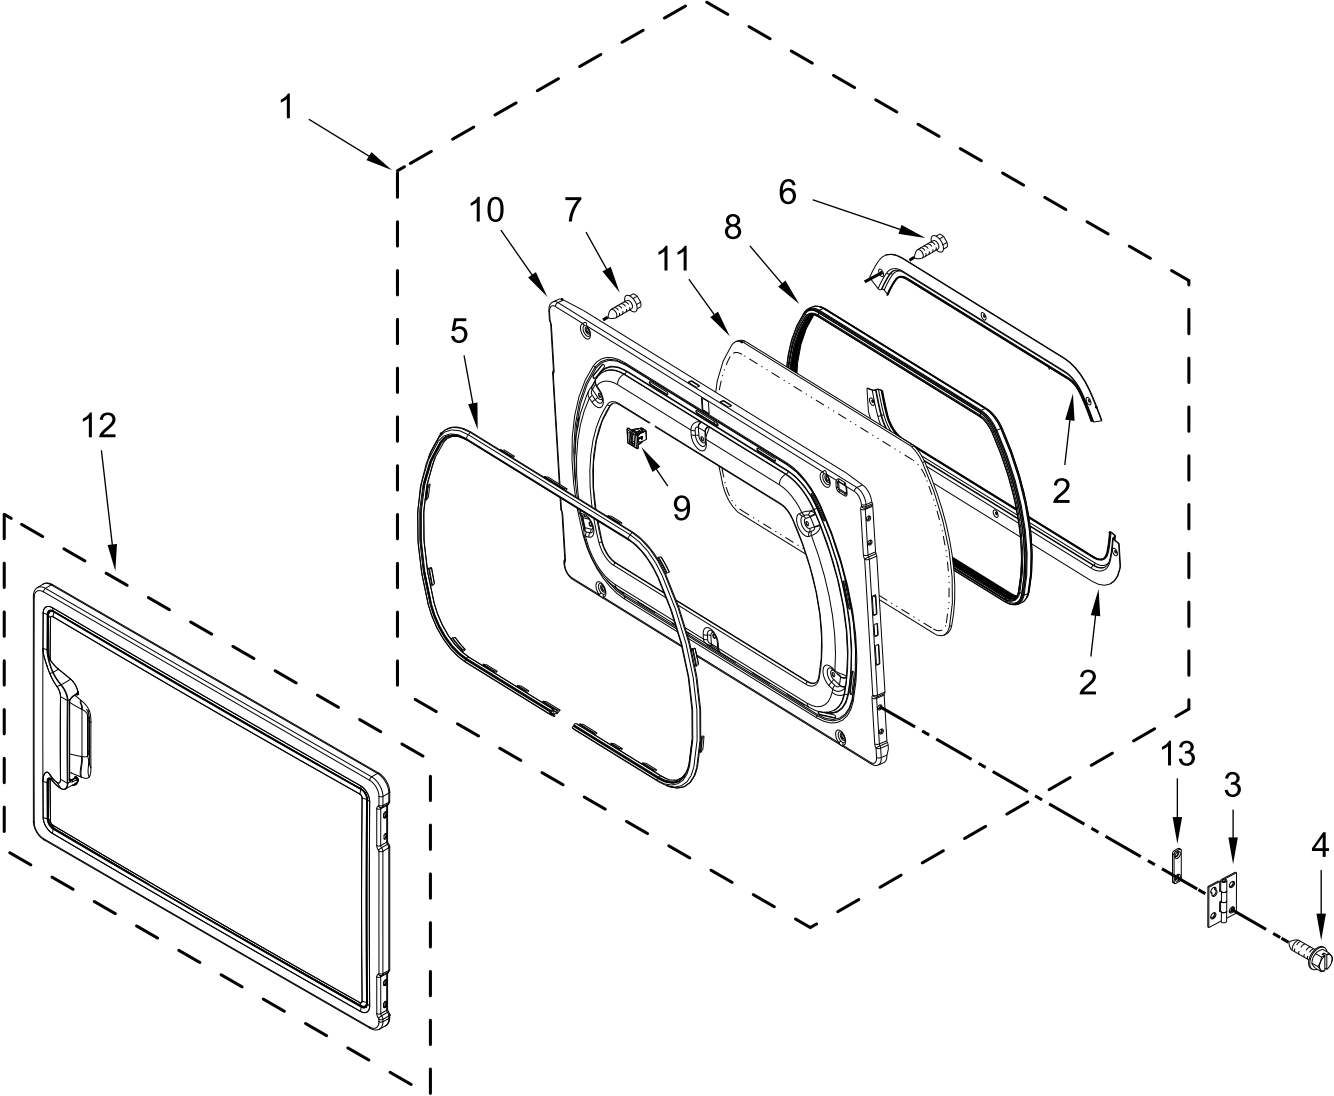

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10513690	White	7	W10192860	Screw	13		Plug-Hinge Screw
2	8519354	Retainer, Window	8	W10284122	Seal, Window		W10191265	White
3		Hinge & Pin Assembly	9	690081	Assembly, Door Catch			
	W10279703	Silver	10	W10470571	White			
4	342055	Screw	11	W10284121	Glass, Door			
5	W10354795	Seal, Door	12		Door, Outer Assembly			
6	3393258	Screw		W10284127	White			

UPPER AND LOWER BULKHEAD PARTS

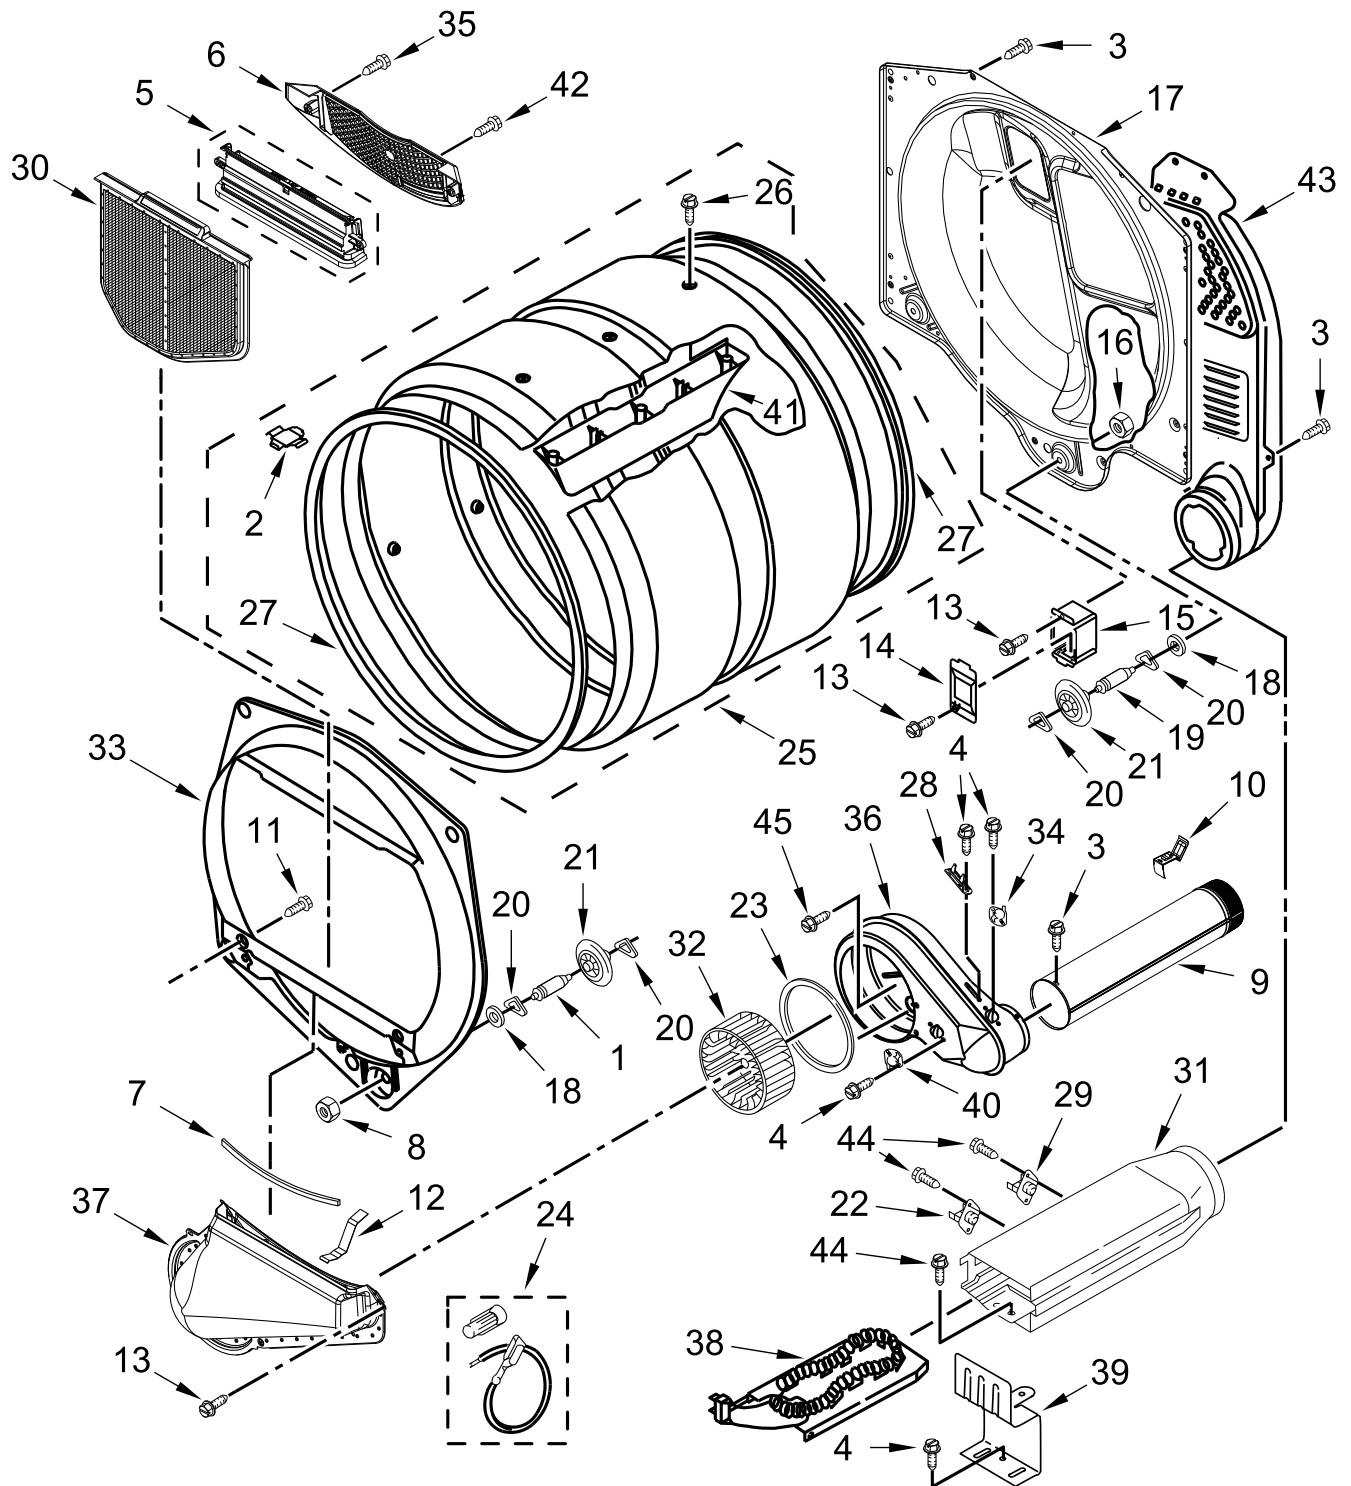

UPPER AND LOWER BULKHEAD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10359271	Shaft, Drum Roller - Right Hand Thread	18	3387459	Washer	32	W10349492	Wheel, Blower
2	8066086	Plug, Drum Hole	19	W10359272	Shaft, Drum Roller - Left Hand Thread	33	697557	Bulkhead, Front
3	8533971	Screw	20	W10512946	Washer, Tri Ring	34	W10193019	Thermostat, Electronic (155F)
4	693995	Screw	21	W10314171	Roller, Support	35	3387230	Screw
5	W10685669	Assembly, Outlet Housing	22	3391914	Thermostat HL-295/215	36	W10135254	Housing, Blower
6	W10692558	Grill, Outlet	23	697770	Seal, Plate Cover	37	8066168	Assembly, Lint Duct
7	697814	Seal, Drum Front	24	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)	38	W10832958	Element, Heater
8	3934666	Nut, Hex				39	8066099	Bracket, Heater Box
9	8066224	Pipe, Exhaust	25	W10545923	Assembly, Drum	40	W10131836	Thermostat
10	8572105	Clip, Exhaust	26	W10219342	Screw	41	697693	Baffle, Drum
11	3357011	Screw	27	W10521118	Seal, Drum	42	695240	Screw
12	W10345456	Clip, Spring	28	3392519	Fuse, Thermal (91C)	43	W11104018	Assembly, Air Duct
13	3390647	Screw	29	279973	Kit, Thermal Cut-Off (Includes Thermostat)	44	90767	Screw
14	3402841	Lens, Drum Light				45	489463	Screw
15	8578825	Bracket, Drum Light	30	W10049370	Screen, Lint			
16	W10001120	Nut, Hex (Left Hand Thread)	31	W10891205	Assembly, Weld Heater Box			
17	W11162455	Bulkhead, Rear						

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

72017	White
-------	-------

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

799344	White (Uncut)
--------	---------------

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

350930	White
350938	Gray Primer

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

4392067	Kit, Dryer Repair
285875	Kit, Security
8522199	Kit, Dryer Vent Testing