




COMMERCIAL ELECTRIC DRYER

MODELS:

MLE27PRBYW0 (White)


CONTROL PANEL AND SEPARATOR PARTS

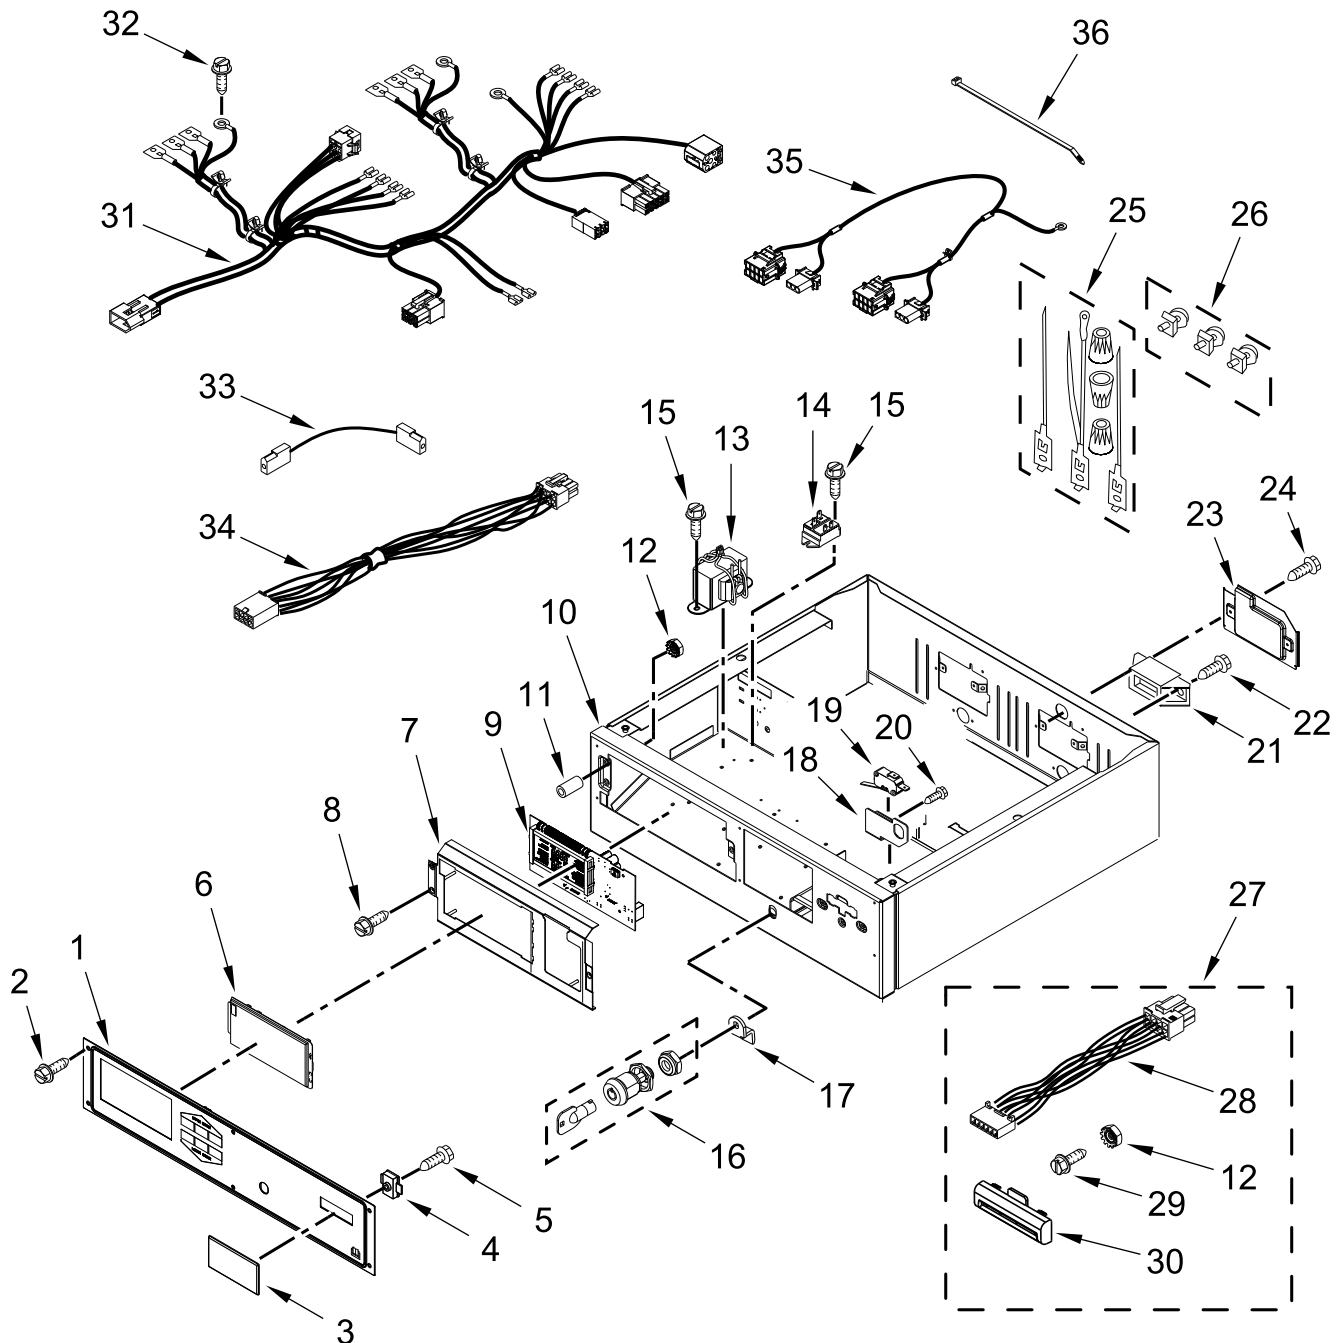

CONTROL PANEL AND SEPARATOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10678216	Facia Console	16	W10899602	Assembly, Lock Access Door	28	W10239515	Harness, Card Reader
2	W10386302	Screw	17	W10913660	Cam, Locking	29	W10143462	Screw
3	W10137769	Cover, Card Reader	18	W10160652	Bracket-Switch	30	W10163036	Bezel
4	W10145157	Retainer, Facia Cover	19	W10447152	Switch, Service Access	31	W10807485	Harness, Collar
5	3400618	Screw	20	3400408	Screw	32	W10773242	Screw
6	W10133268	Cover, Display	21	3397659	Block, Terminal	33	W10769481	Jumper, Coin Box
7	W10657185	Plate, Control Mounting	22	3400000	Screw	34	W10111027	Jumper, Transformer
8	W10140652	Screw	23	W10850065	Cover, Terminal Block	35	W10807493	Jumper, Lower to Collar
9	W11298307	Control Board	24	3390814	Screw	36	W10155270	Cable Tie
10	W10862446	Collar	25	279318	Terminal, Brass and Tinned (Includes Terminal Block Screw Kit)			Coin Mechanism Parts May Be Ordered From Maytag or Vendor Below:
11	W10133514	Standoff, Circuit Board	26	279393	Screw Kit, Terminal Block			Greenwald Industries 212 Middlesex Ave Chester, CT 06412 1-800-221-0982 sales@greenwaldindustries.com
12	W10139046	Nut	27	W10135263	Card Reader Conversion Kit			
13	W10133285	Transformer 120Vac To 22.5Vac						
14	W10827406	Relay, Motor						
15	8533971	Screw						


LOWER CABINET AND FRONT PANEL PARTS

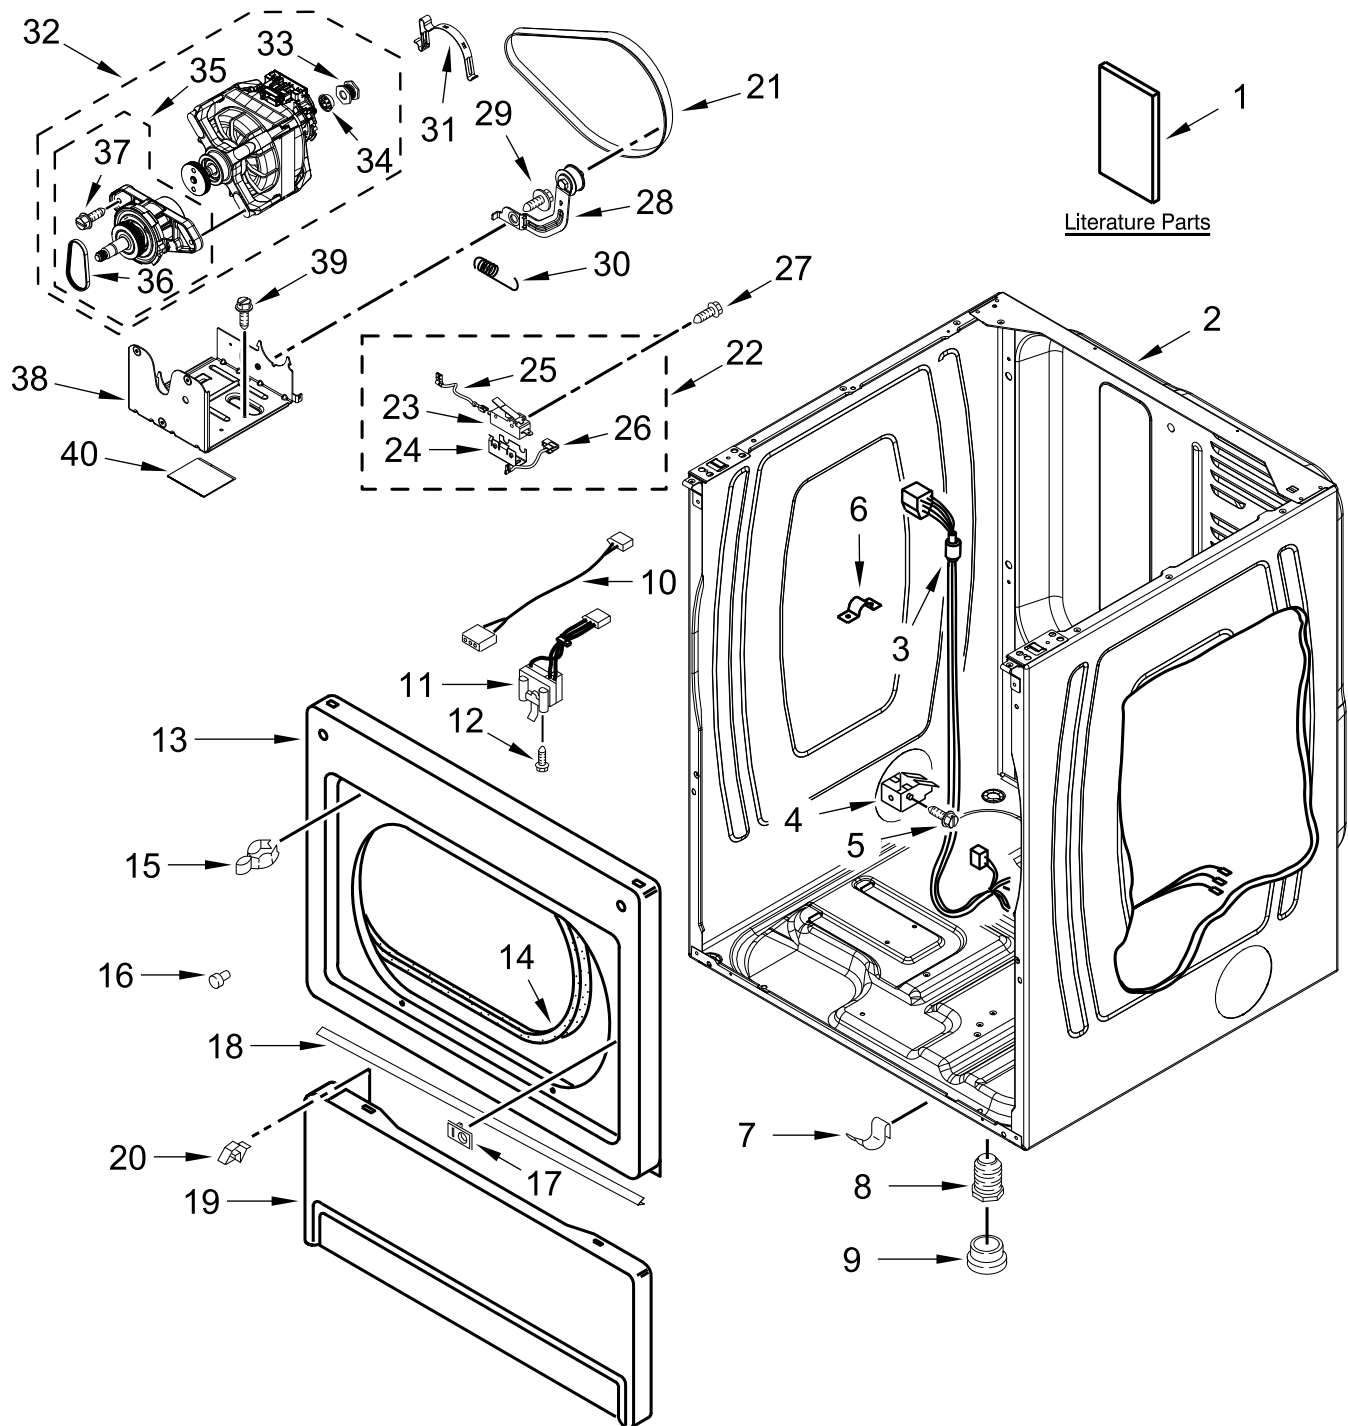

LOWER CABINET AND FRONT PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts (Located Behind Toe Panel)	12	697773	Screw	29	3389420	Screw
	W11281003	Installation Instructions	13	W10694688	Panel, Front	30	W10446781	Spring, Idler
	W10866494	Tech Sheet	14	3387242	Seal, Front Panel	31	660658	Clamp, Motor
	W10738550	Wiring Diagram	15	3403431	Strike, Door	32	W10918085	Assembly, Motor 60 HZ.
	W10135291	Instructions, Installation (Card Reader)	16	693152	Bumper	33	3394341	Pulley, Motor
2		Cabinet	17		Cover, Strike	34	3393657	Restrainer, Belt
	W10547697	White		W10521429	White	35	W11232513	Dryer Motor Speed Increaser Bipod 120V (Complete)
3	W10807486	Harness, Upper/Lower	18	W10576519	Seal, Deflector	36	3405160	Belt, Drive (Blower Wheel)
4	3391846	Clip, Front Panel	19		Panel, Toe	37	22001995	Screw
5	3391915	Screw		697215	White	38	W10135695	Bracket, Motor
6	98997	Clip	20	3388229	Retainer	39	3390663	Screw
7	W10291934	Clip	21	W10131172	Belt, Drive	40	W10836094	Pad, Sound
8	3392100	Foot, Dryer	22	W11233966	Switch, Assembly			DRYER EXHAUST KIT NOT INCLUDED
9	3391943	Boot, Foot	23	8564010	Assembly, Switch and Actuator	W10470674		Kit, 4-Way Venting
10	8283298	Jumper, Door Switch	24	W11159569	Bracket, Switch			
11	3406109	Switch, Door	25	W10167613	Wire, Belt Switch			
			26	8539892	Wire, Motor To Belt Switch			
			27	98129	Screw			
			28	W10344192	Assembly, Idler			


UPPER CABINET AND FRONT PANEL PARTS

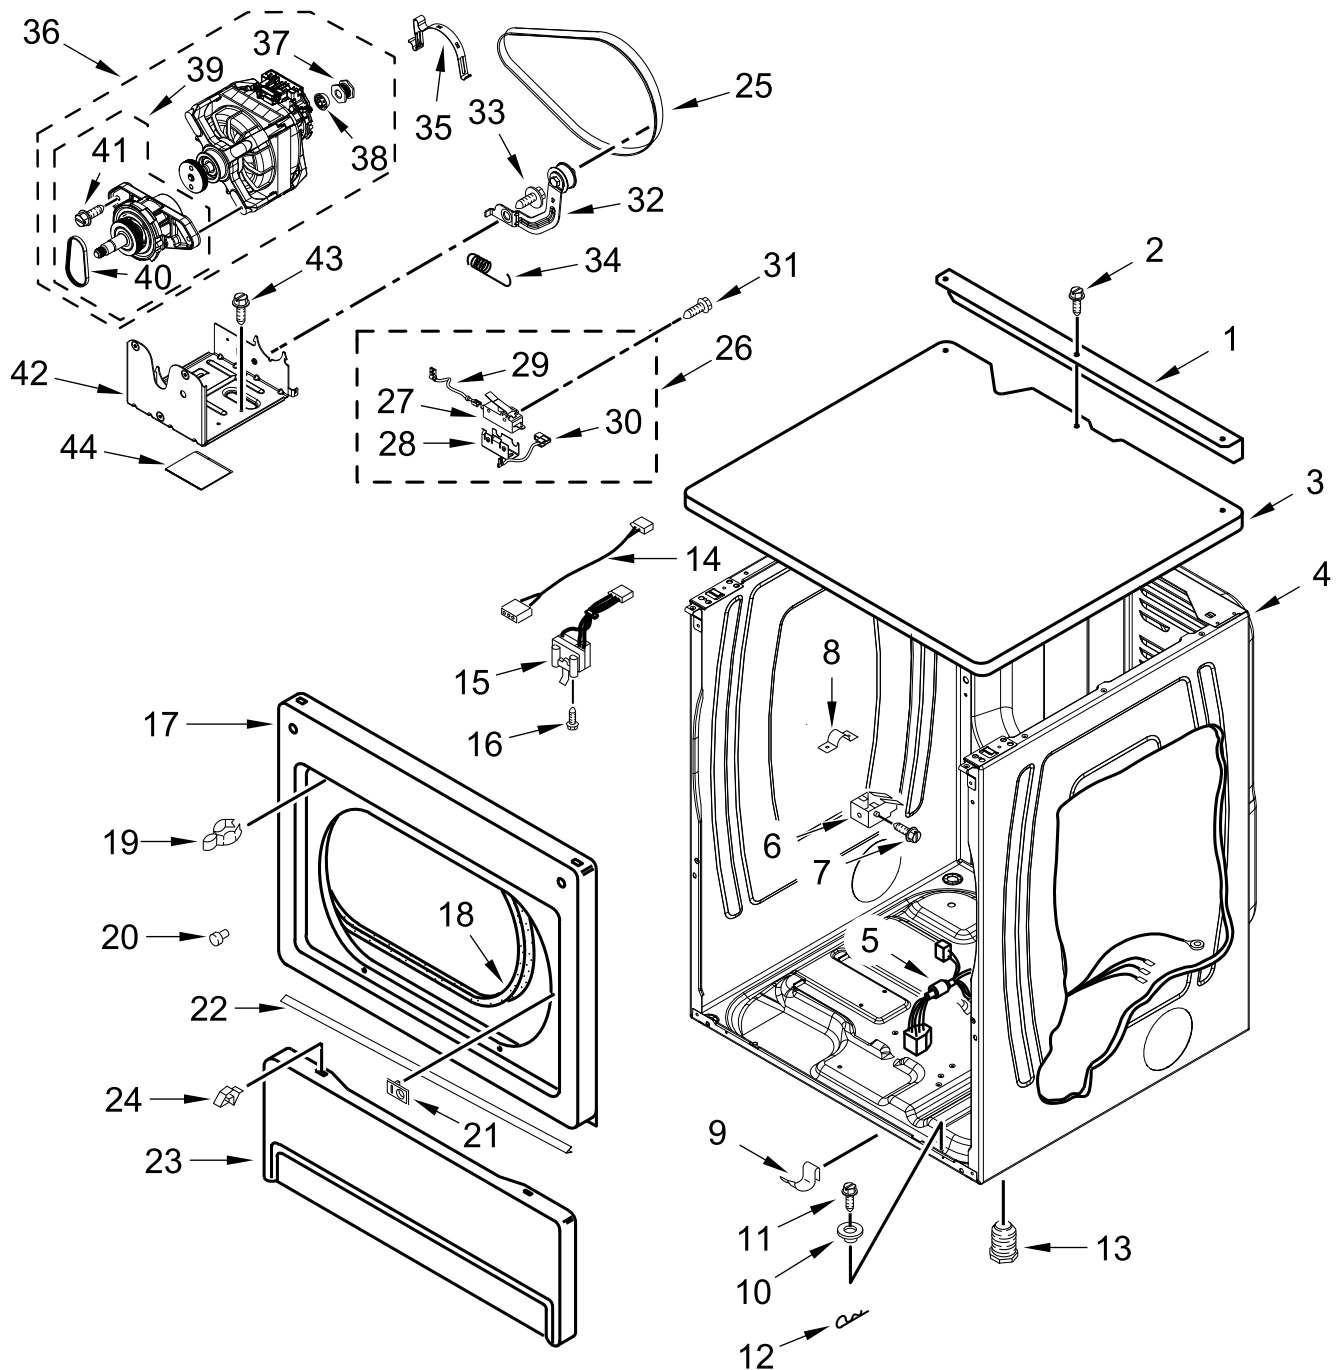

UPPER CABINET AND FRONT PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3979115	Bracket, Angle	17	W10694688	Panel, Front	32	W10344192	Assembly, Idler
2	3390647	Screw	18	3387242	Seal, Front Panel	33	3389420	Screw
3		Top	19	3403431	Strike, Door	34	W10446781	Spring, Idler
	3389351	White	20	693152	Bumper	35	660658	Clamp, Motor
4		Cabinet	21		Cover, Strike	36	W10918085	Assembly, Motor 60 HZ.
	W10547697	White		W10521429	White	37	3394341	Pulley, Motor
5	W10807486	Harness, Upper/Lower	22	W10576519	Seal, Deflector	38	3393657	Restrainer, Belt
6	3391846	Clip, Front Panel	23		Panel, Toe	39	W11232513	Dryer Motor Speed Increaser Bipod 120V (Complete)
7	3391915	Screw		697215	White			
8	98997	Clip	24	3388229	Retainer	40	3405160	Belt, Drive (Blower Wheel)
9	W10291934	Clip	25	W10131172	Belt, Drive	41	22001995	Screw
10	3389233	Bushing	26	W11233966	Switch, Assembly	42	W10135695	Bracket, Motor
11	3400523	Bolt, Security	27	8564010	Assembly, Switch and Actuator	43	3390663	Screw
12	W10117347	Cotter Pin	28	W11159569	Bracket, Switch	44	W10836094	Pad, Sound
13	3392100	Foot, Dryer	29	W10167613	Wire, Belt Switch			DRYER EXHAUST KIT NOT INCLUDED
14	8283298	Jumper, Door Switch	30	8539892	Wire, Motor To Belt Switch			
15	3406109	Switch, Door						
16	697773	Screw	31	98129	Screw		W10470674	Kit, 4-Way Venting


DOOR PARTS

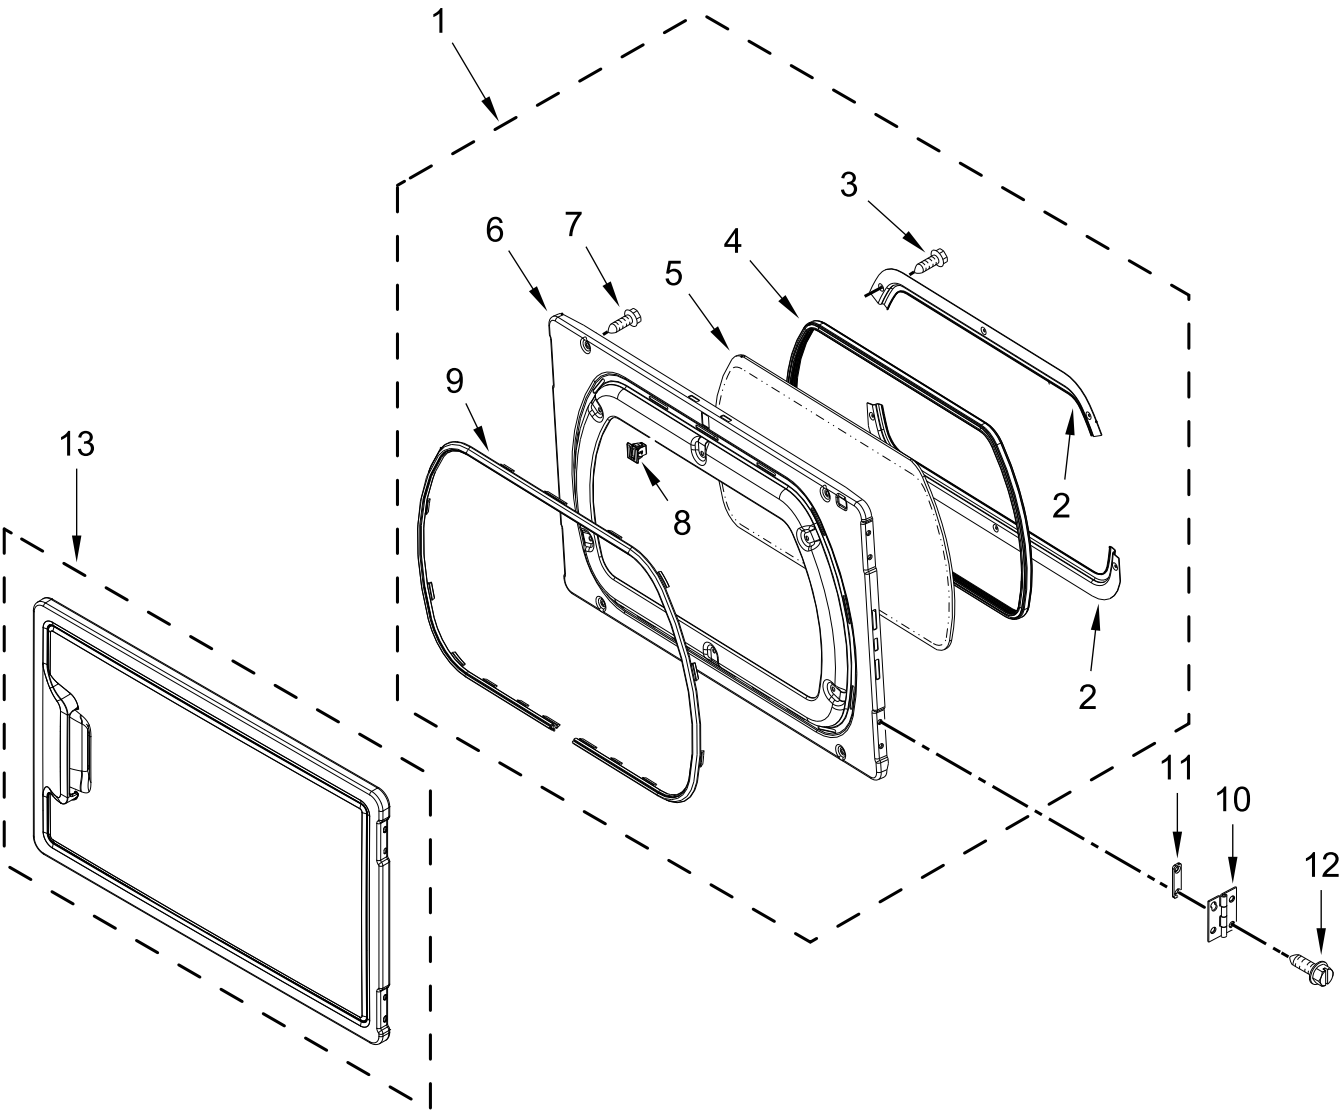

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Inner Door	7	W10192860	Screw	13		Door, Outer Assembly
	W10513690	White	8	690081	Assembly, Door Catch		W10284127	White
2	8519354	Retainer, Window	9	W10354795	Seal, Door			
3	3393258	Screw	10		Hinge & Pin Assembly			
4	W10284122	Seal, Window		W10279703	Silver			
5	W10284121	Glass, Door	11		Plug-Hinge Screw			
6		Door, Inner		W10191265	White			
	W10470571	White	12	342055	Screw			

UPPER AND LOWER BULKHEAD PARTS

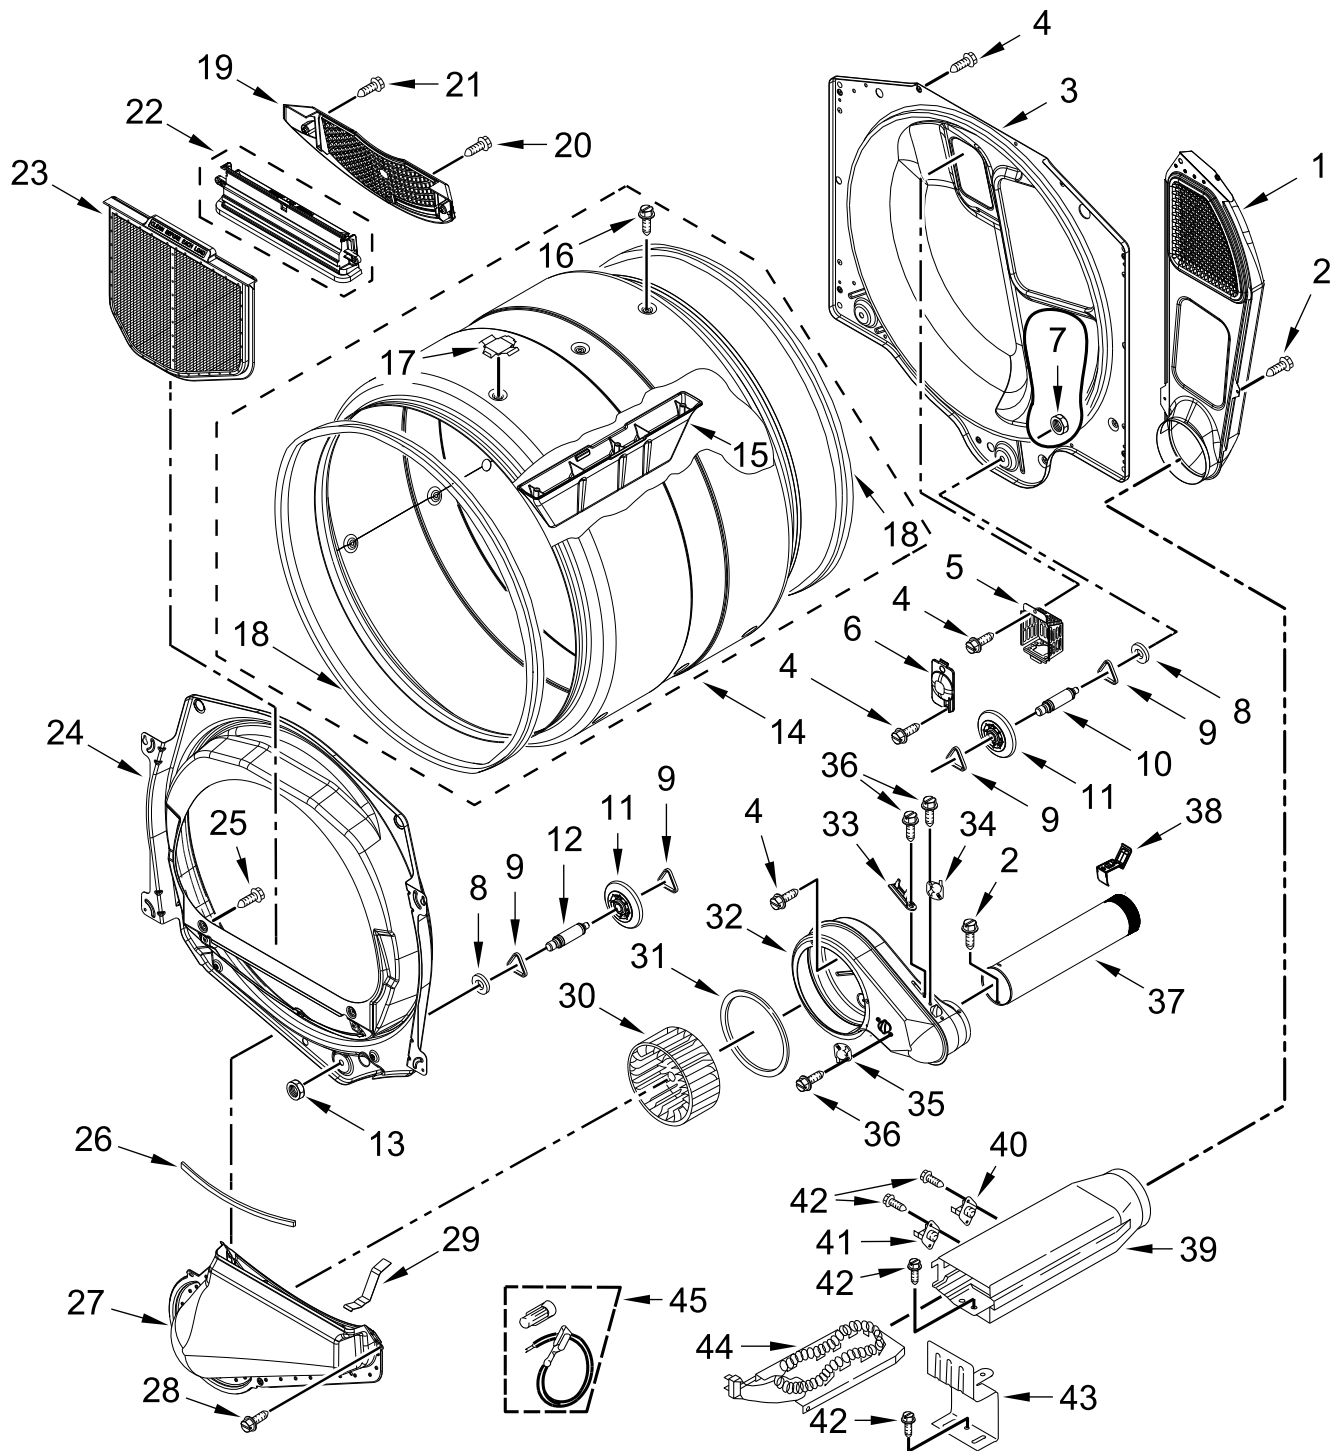

UPPER AND LOWER BULKHEAD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	697354	Assembly, Air Duct	17	8066086	Plug, Drum Hole	35	W10193019	Thermostat, Electronic (155F)
2	8533971	Screw	18	W10521118	Seal, Drum	36	693995	Screw
3	W11162455	Bulkhead, Rear	19	W10692558	Grill, Outlet	37	8066224	Pipe, Exhaust
4	3390647	Screw	20	3387230	Screw	38	8572105	Clip, Exhaust
5	8578825	Bracket, Drum Light	21	695240	Screw	39	W10608837	Assembly, Weld Heater Box
6	3402841	Lens, Drum Light	22	W10685669	Assembly, Outlet Housing	40	279973	Kit, Thermal Cut-Off (Includes Thermostat)
7	W10001120	Nut, Hex (Left Hand Thread)	23	W10049370	Screen, Lint	41	3391914	Thermostat HL-295/215
8	3387459	Washer	24	697557	Bulkhead, Front	42	90767	Screw
9	W10512946	Washer, Tri Ring	25	3357011	Screw	43	8066099	Bracket, Heater Box
10	W10359272	Shaft, Drum Roller - Left Hand Thread	26	697814	Seal, Drum Front	44	W10832958	Element, Heater
11	W10314171	Roller, Support	27	8066168	Assembly, Lint Duct	45	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)
12	W10359271	Shaft, Drum Roller - Right Hand Thread	28	489463	Screw			
13	3934666	Nut, Hex	29	W10345456	Clip, Spring			
14	W10545923	Assembly, Drum	30	W10349492	Wheel, Blower			
15	697693	Baffle, Drum	31	697770	Seal, Plate Cover			
16	W10219342	Screw	32	W10135254	Housing, Blower			
			33	3392519	Fuse, Thermal (91C)			
			34	W10131836	Thermostat			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	72017	White
--	-------	-------

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	799344	White (Uncut)
--	--------	---------------

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	350930	White
	350938	Gray Primer

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	4392067	Kit, Dryer Repair
	285875	Kit, Security
	8522199	Kit, Dryer Vent Testing