




**COMMERCIAL GAS DRYER
MULTI-LOAD SERVICE PARTS LIST**

MODELS:

MDG120PJVW. (White) (as of January 2017)


PN CONTROL DOOR ASSEMBLY

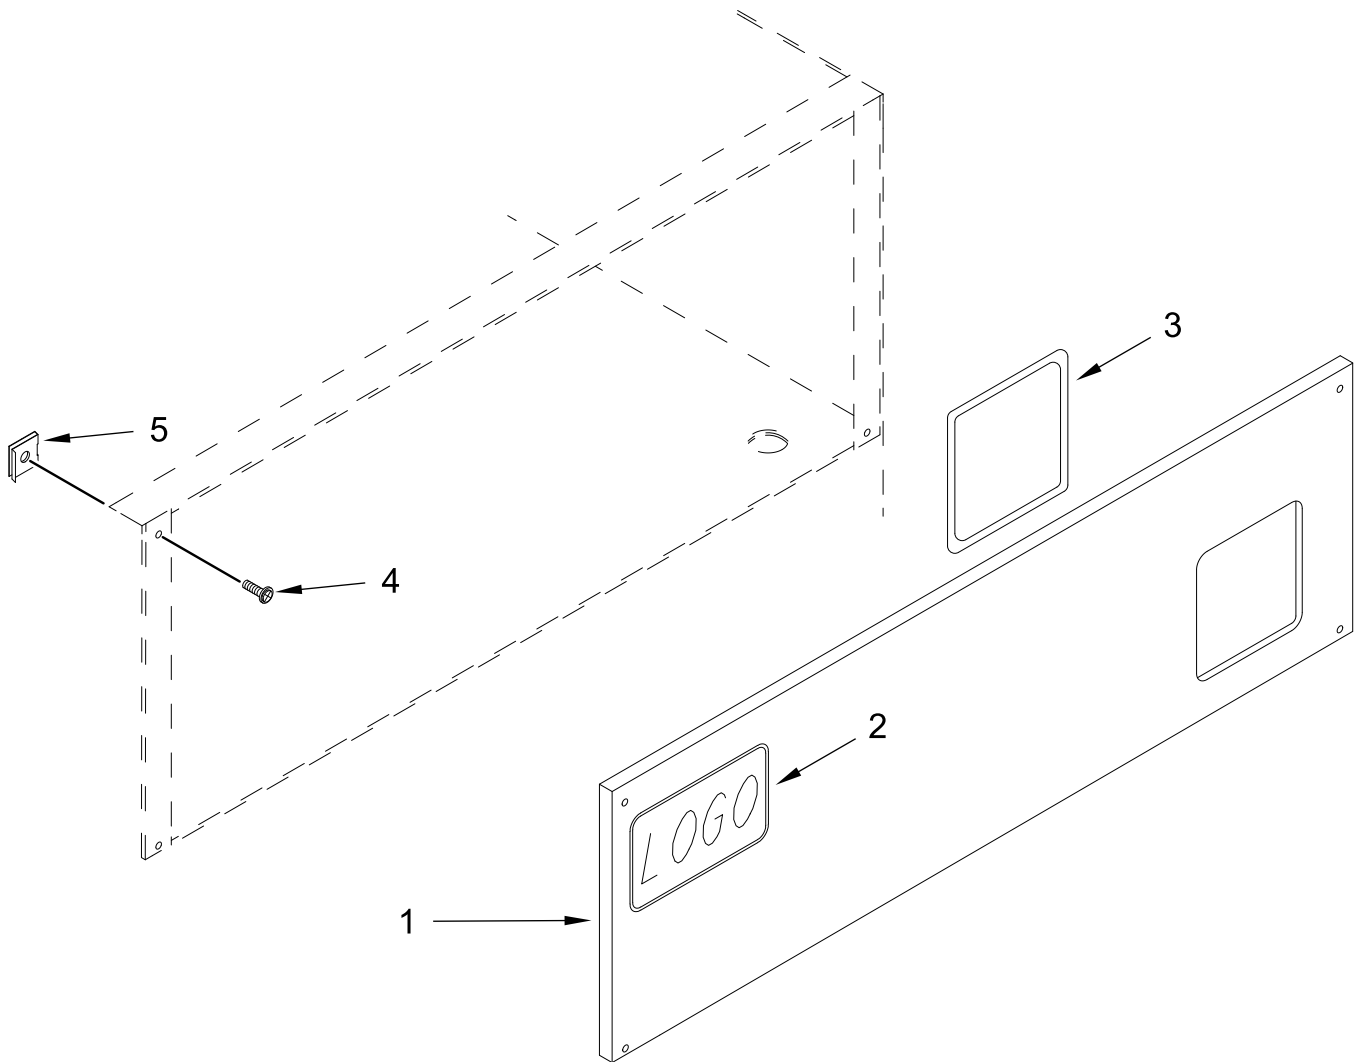

PN CONTROL DOOR ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR883765	OPL Control Door (includes No(s) 1 and 2)	3	WFR117604	Foam Tape (When Ordering Specify Length, sold by the inch)	4	WFR150321	Screw 10-32 x 1/2 in
2	WFR112353	Maytag Badge				5	WFR154011	U-Nut 10-32


MICROPROCESSOR CONTROL PANEL ASSEMBLY

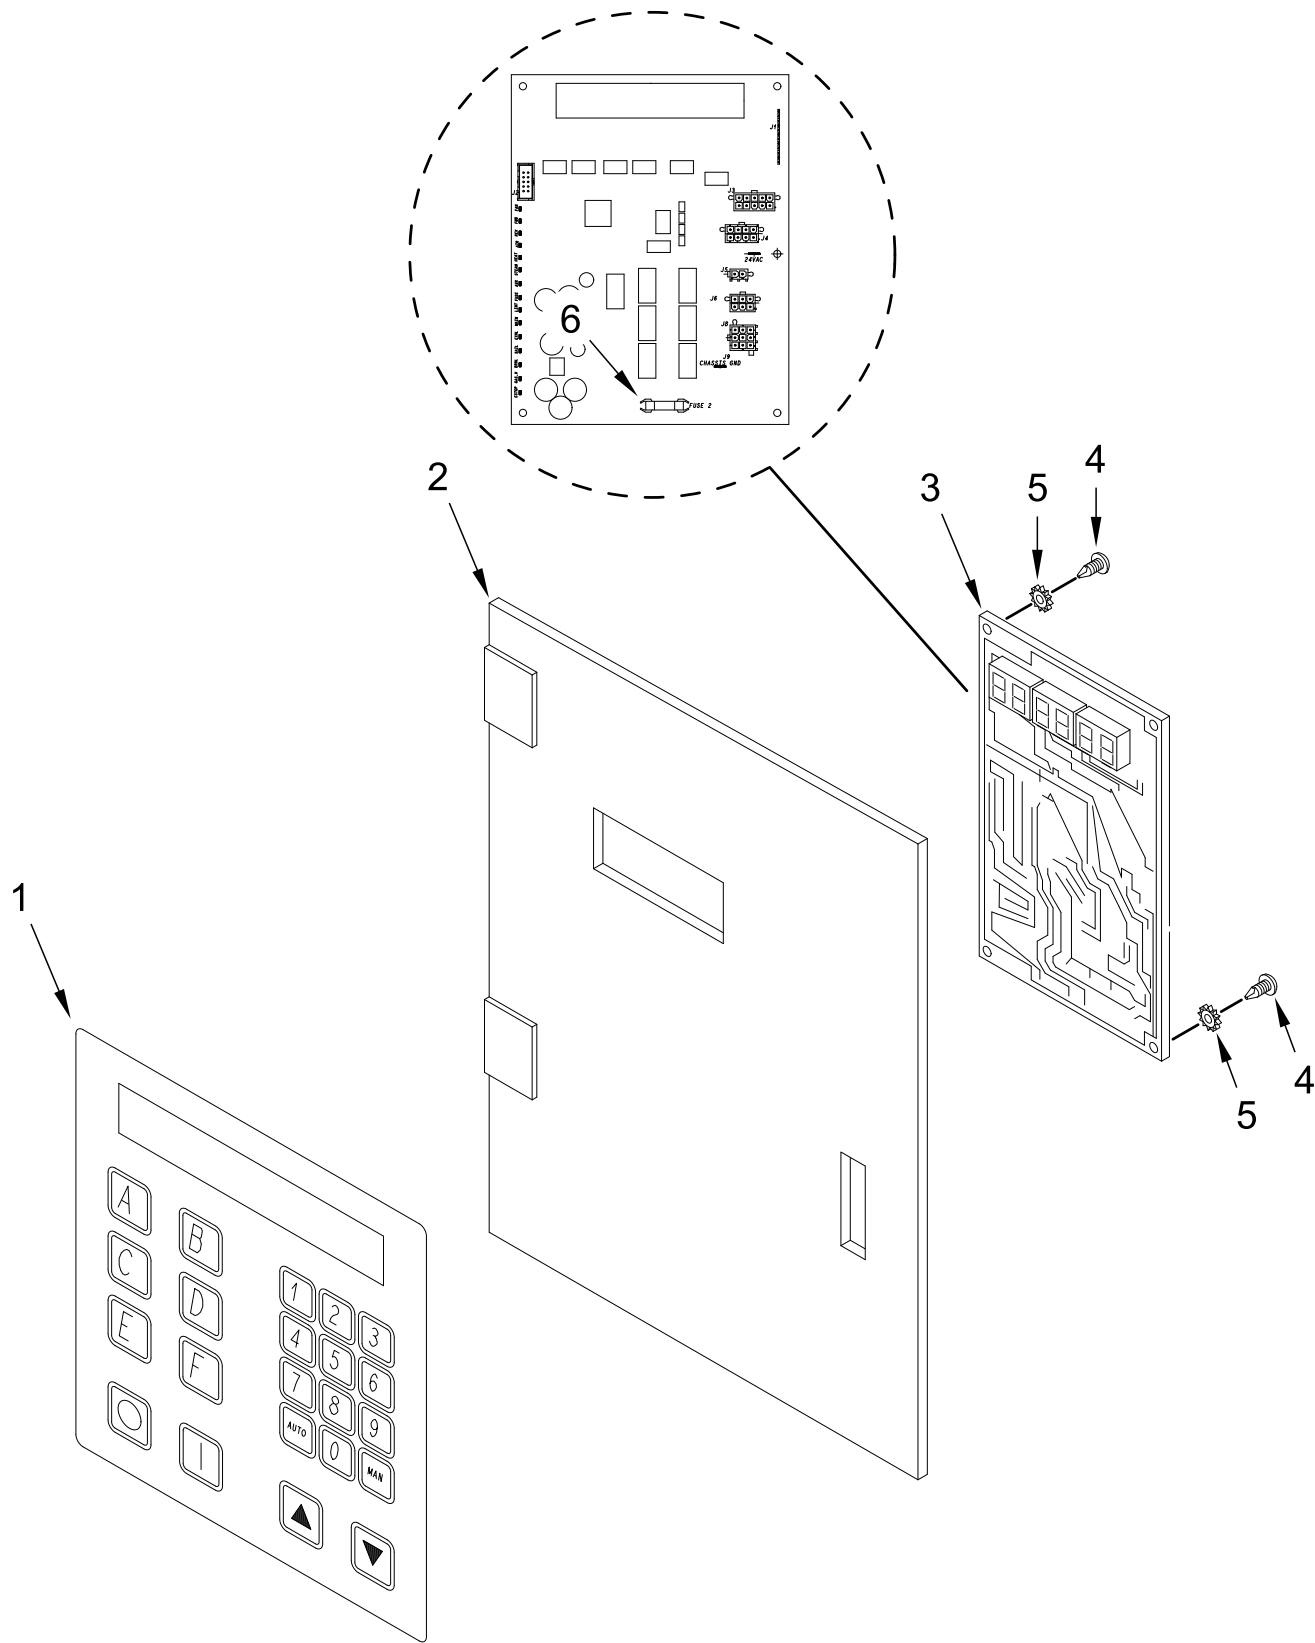

MICROPROCESSOR CONTROL PANEL ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR112577	Phase 7 OPL Keypad	3	WFR887003	Phase 7.2.2 Board	4	WFR150005	Screw 6-32 x 1/4 in
2	WFR814923	Phase 7 OPL Panel			(Sensor Activated Fire Extinguishing System and H2O Pressure Switch)	5	WFR153010	Lock Washer #6
						6	WFR136016	Fuse 5A (Fast Acting)

MICROPROCESSOR CONTROL BOX ASSEMBLY

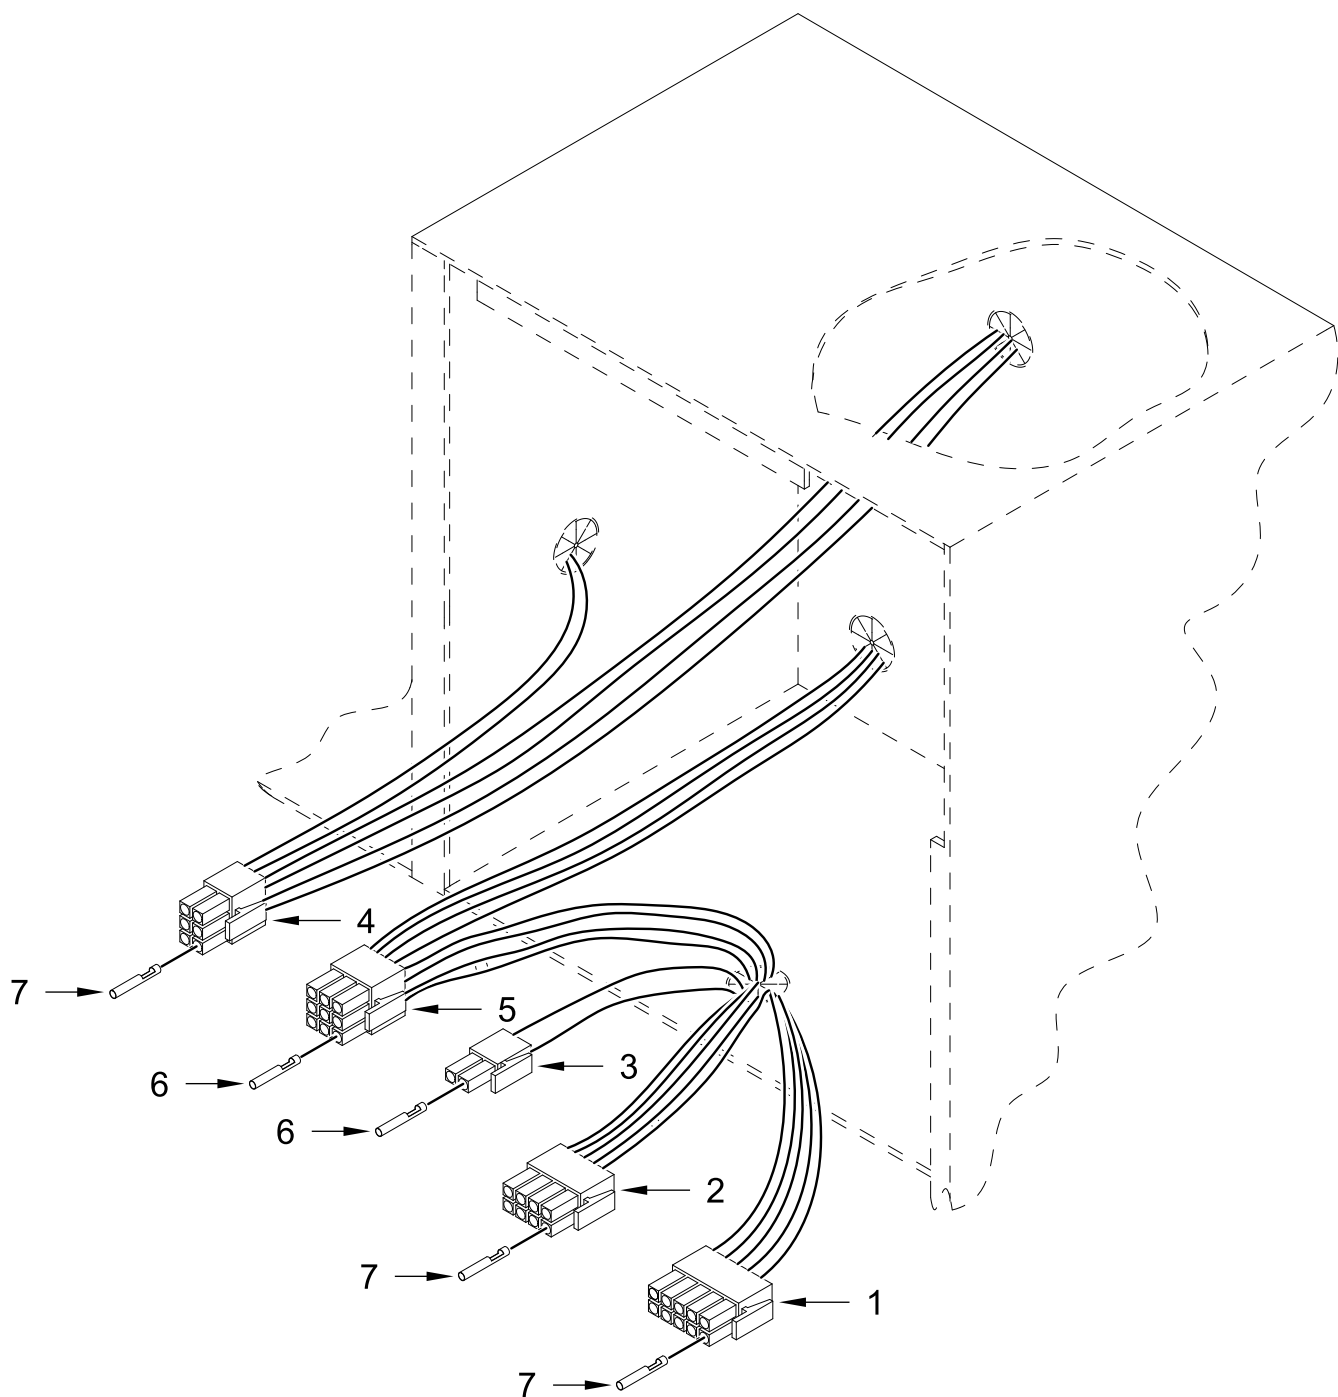


MICROPROCESSOR CONTROL BOX ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR122681	10 Pin Connector
2	WFR122676	8 Pin Connector

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	WFR122646	2 Pin Connector
4	WFR122683	6 Pin Connector
5	WFR122640	9 Pin Connector

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	WFR122706	Female Crimp Socket
7	WFR122669	Female Crimp Socket


FRONT PANEL ASSEMBLY

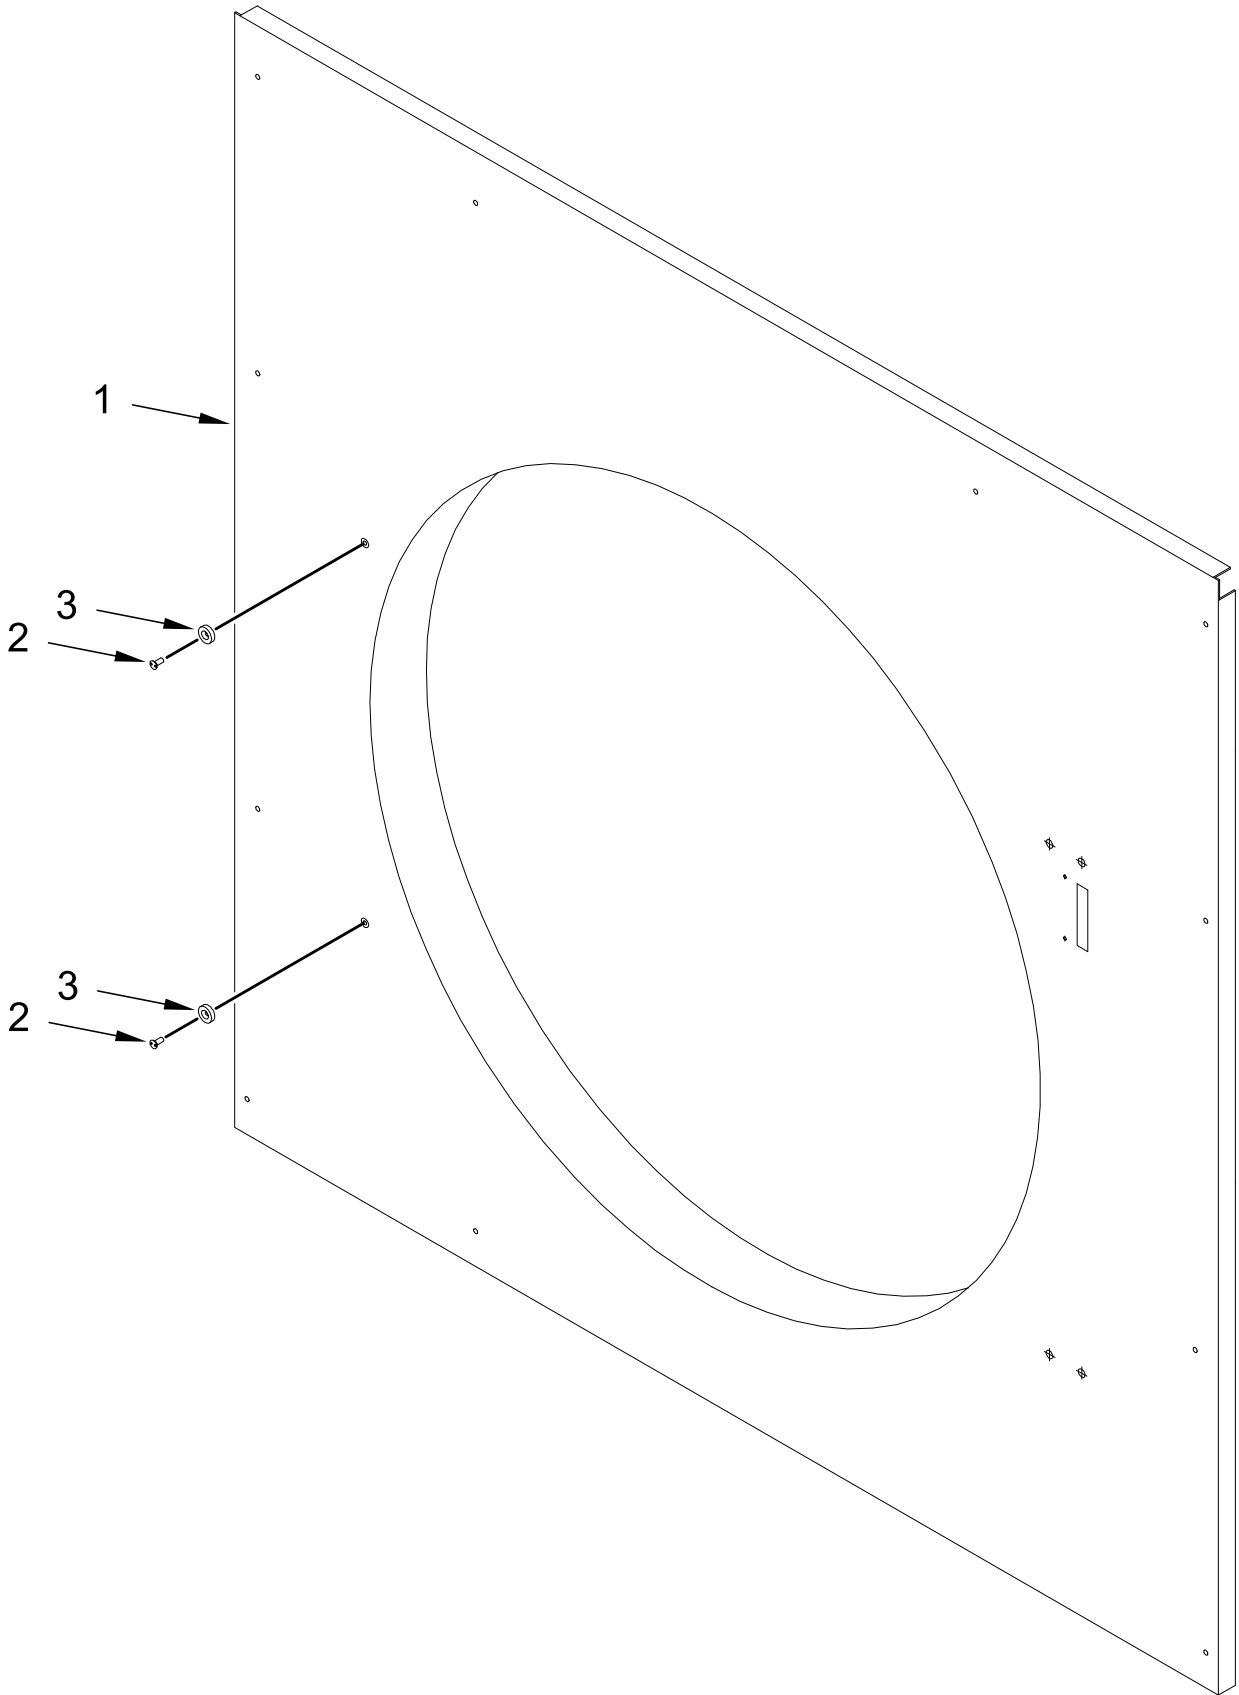

FRONT PANEL ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR801623	Front Panel Assembly
2	WFR152223	Screw 10-32 x 1/2 in (TORX®)
3	WFR102004	Round Door Magnet 3/4 in


37-1/4 in. MAIN DOOR ASSEMBLY

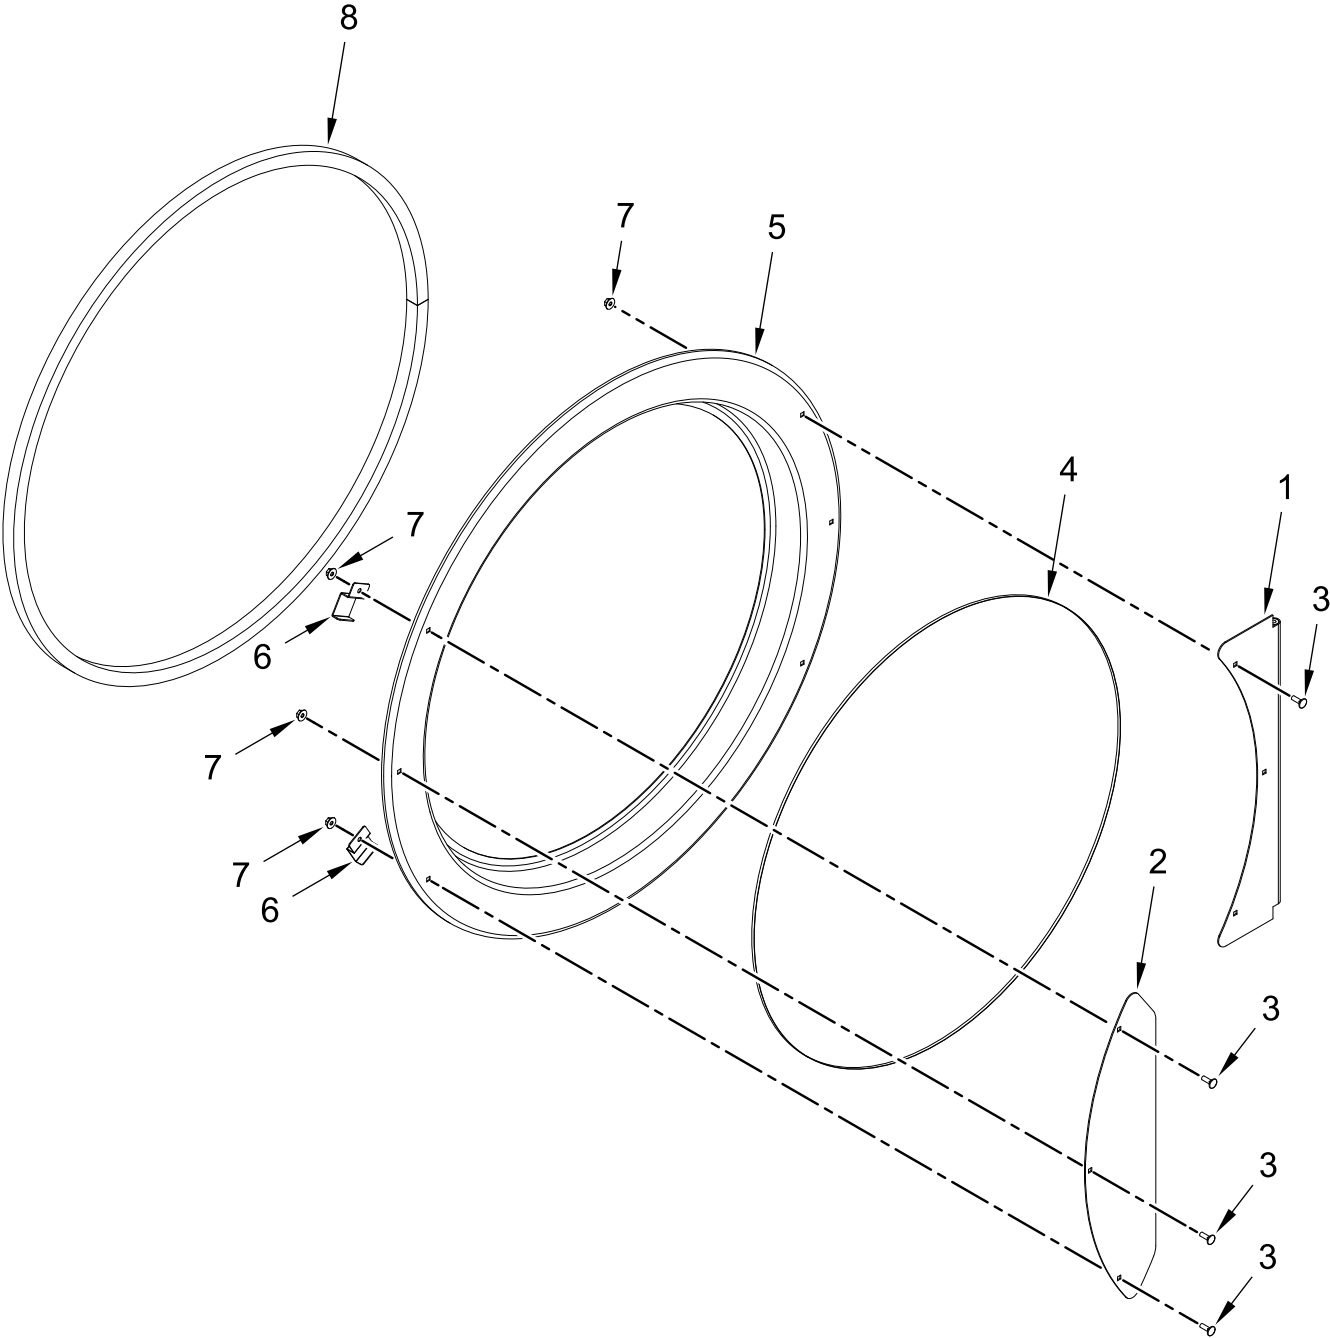

37-1/4 in. MAIN DOOR ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR185524	Door Hinge	5	WFR822631	Main Door Assembly Complete	8	WFR102357	Door Gasket
2	WFR884367	Door Handle					WFR401038	Black Adhesive (10.3 oz. Cartridge)
3	WFR150683	Carriage Bolt 1/4-20 x 5/8 in	6	WFR185522	Door Magnet Bracket			
4	WFR102221	Door Glass	7	WFR152014	Serrated Hex Flange Nut 1/4-20			
	WFR401038	Black Adhesive (10.3 oz. Cartridge)						


37-1/4 in. MAIN DOOR SWITCH ASSEMBLY

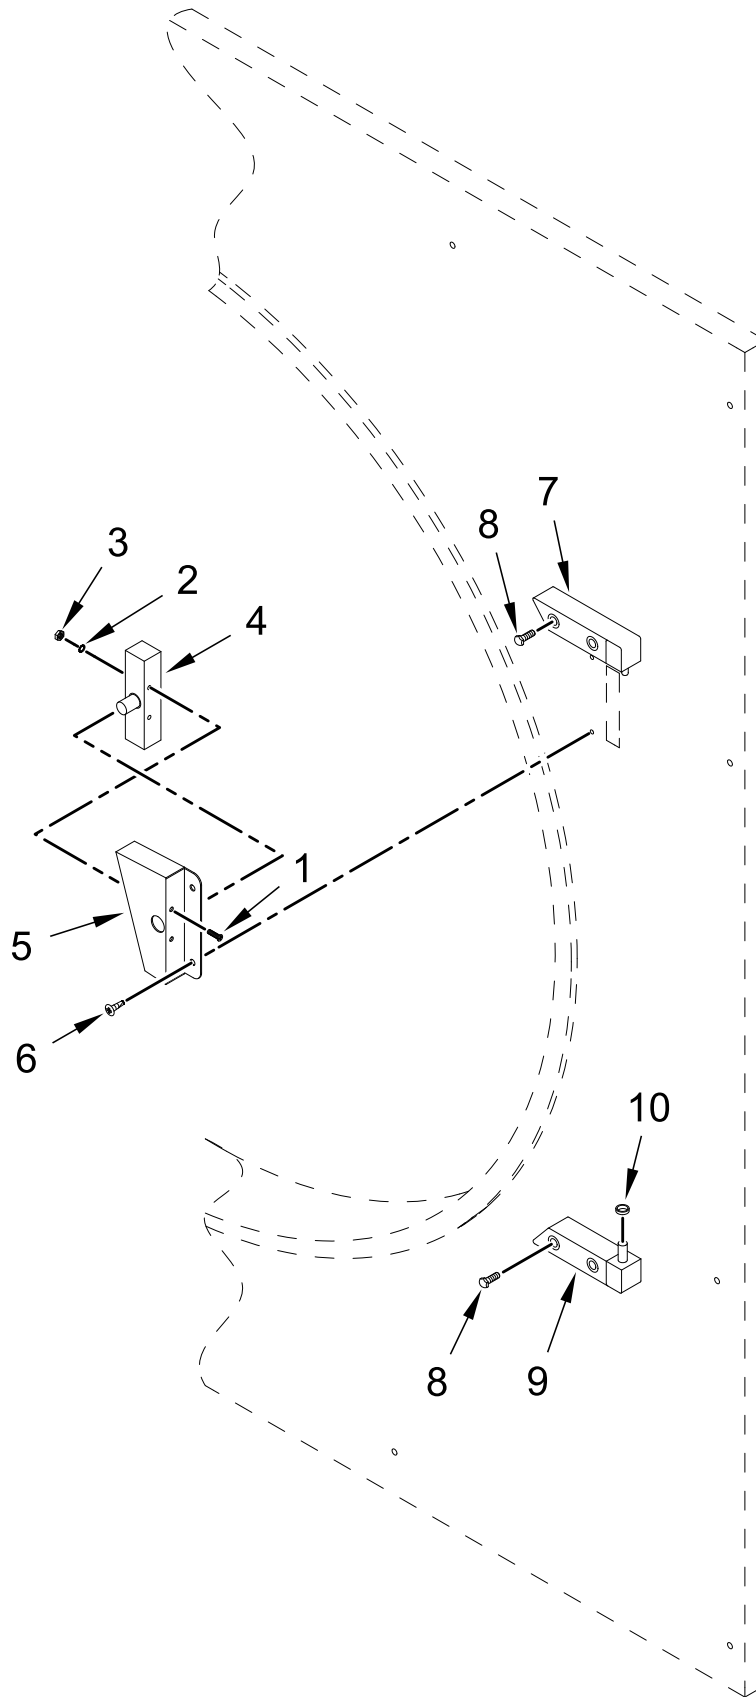

37-1/4 in. MAIN DOOR SWITCH ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR150006	Screw 6-32 x 7/8 in	7	WFR881152	Main Door Hinge Block Assembly (Top)
2	WFR153010	Lock Washer #6			(includes No(s) 7 and 8)
3	WFR152013	Nut 6-32			
4	WFR137005	Switch, Single Pole Door	8	WFR150445	Cap Screw 1/4-20 x 3/4 in
5	WFR882866	Black Main Door Switch Housing	9	WFR881151	Main Door Hinge Block Assembly (Bottom)
	WFR883338	Black Main Door Switch with Housing Assembly			(includes No(s) 8, 9, and 10)
		(includes No(s) 1 through 5)	10	WFR153031	Nylon Washer
6	WFR150301	Screw 8-18 x 7/16 in			



TUMBLER / SUPPORT ASSEMBLIES

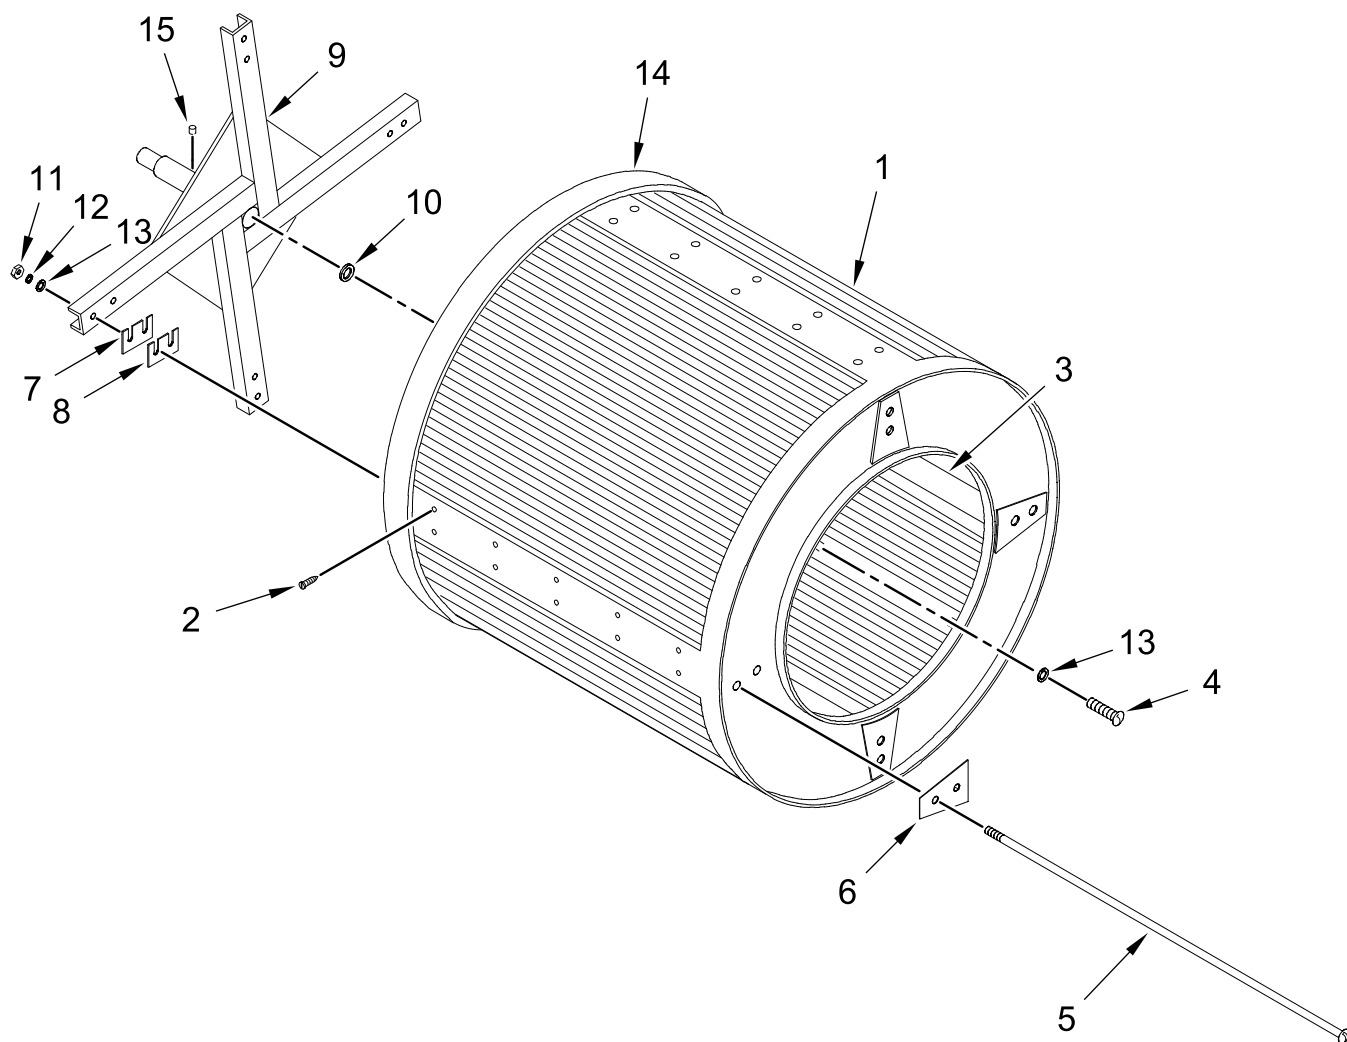

TUMBLER / SUPPORT ASSEMBLIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR820110	Tumbler ONLY without Felt Collar	3	WFR331105	Tumbler Rib ONLY	9	WFR820116	Tumbler Support ONLY with Rotational Sensor Option
	WFR820111	Stainless Steel Tumbler ONLY without Felt Collar		WFR331106	Stainless Steel Tumbler Rib ONLY			
	WFR820052	Tumbler and Support Assembly Complete with Rotational Sensor Option	4	WFR150407	Socket Button Head Screw 5/16-18 x 3/4 in	10	WFR115986	Felt Tumbler Pad
	WFR820029	Stainless Steel Tumbler and Support Assembly Complete with Rotational Sensor Option	5	WFR100910	Tie Rod 1/2-13 x 44 in	11	WFR152011	Nut 1/2-13
			6	WFR301700	Tumbler Reinforcing Plate ONLY	12	WFR153026	Lock Washer 1/2 in
			7	WFR301701	Tumbler Shims 16 Gauge	13	WFR153011	Flat Washer 9/16 in
			8	WFR301703	Tumbler Shims 20 Gauge	14	WFR116006	Felt Collar 138-7/8 x 2-1/2 x 1/8 in
2	WFR150309	Screw 10-16 x 1/2 in (Hex Head TEK Crimptite®)					WFR401010	Adhesive for Felt Collar (5 oz. tube)
						15	WFR821002	Rotational Magnet Holder Assembly


LINT DRAWER ASSEMBLIES

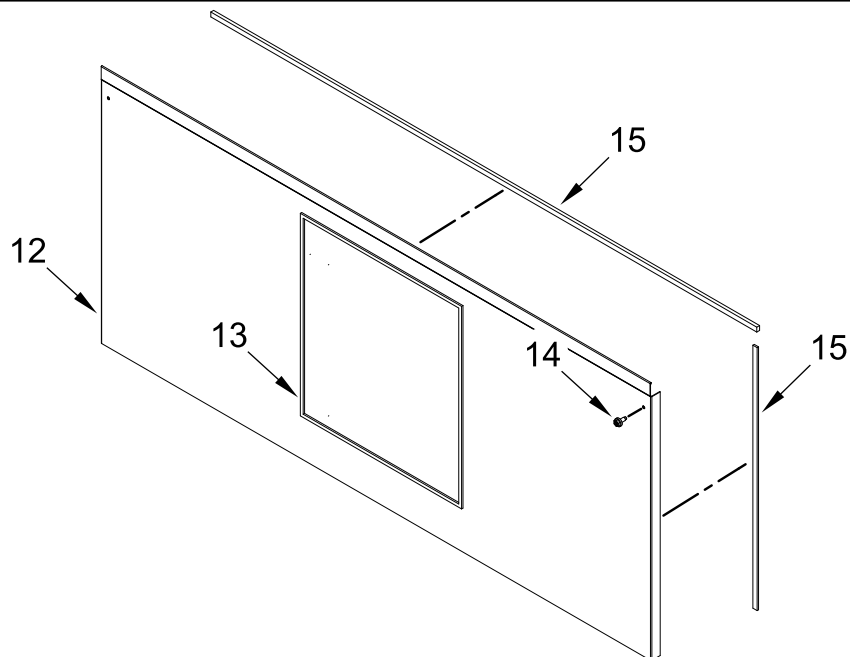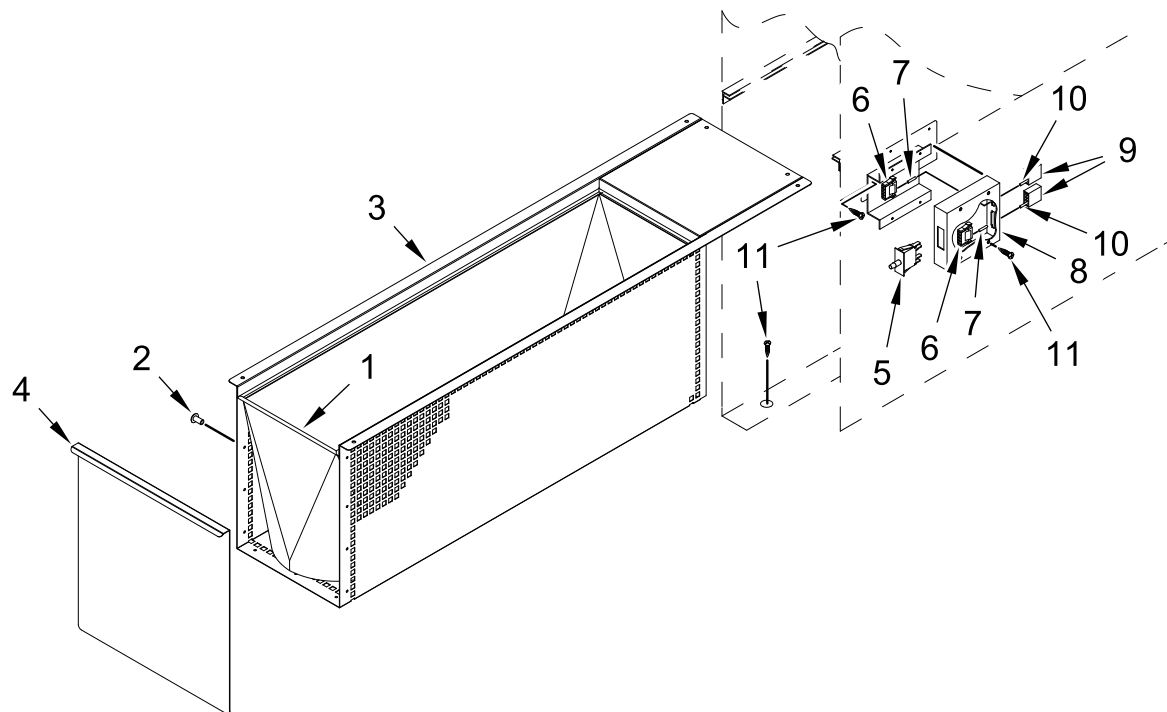

LINT DRAWER ASSEMBLIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR108209	Lint Bag	8	WFR800478	Lint Drawer Switch Box Assembly Complete	14	WFR150309	Screw 10-16 x 1/2 in (Hex Head TEK Crimptite®)
2	WFR154211	Rivet 5/32 in						
3	WFR850949	Lint Basket	9	WFR122604	4 Pin Connector	15	WFR117604	Foam Tape (When Ordering Specify Length, sold by the inch)
4	WFR801137	Lint Drawer Handle	10	WFR122700	Male Crimp Pin			
	WFR883829	Lint Drawer Assembly	11	WFR150301	Screw 8-18 x 7/16 in			
5	WFR122116	Lint Door Switch	12	WFR824256	Lint Door Assembly			
6	WFR122605	4 Pin Connector	13	WFR117607	Foam Tape (When Ordering Specify Length)			
7	WFR122701	Female Crimp Socket						
	WFR122801	Pin / Socket Extraction Tool (Not Illustrated)						


IDLER BEARING ASSEMBLY

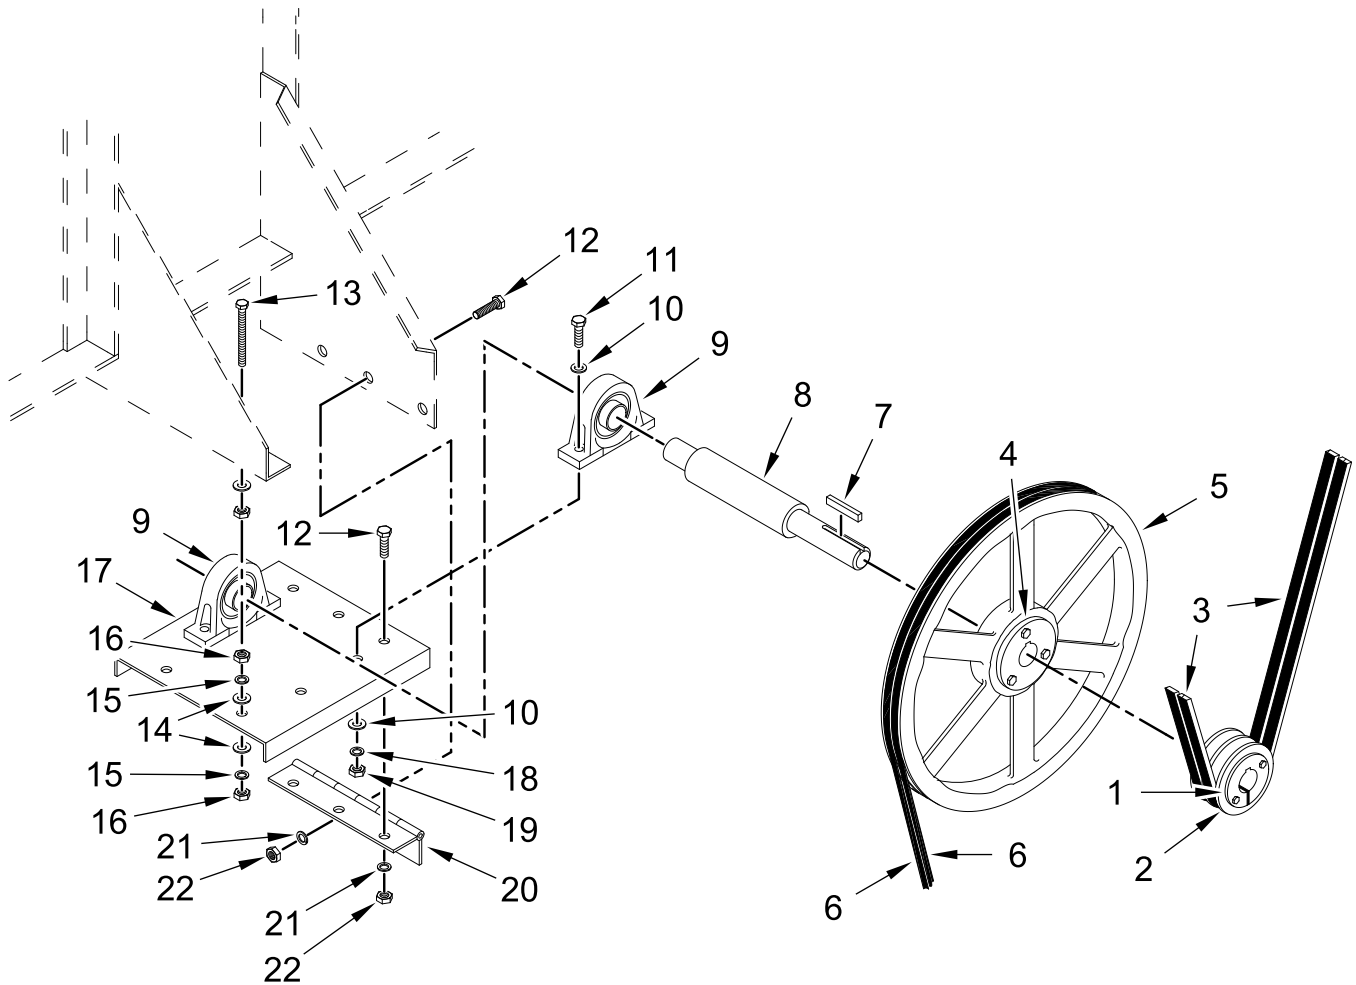

IDLER BEARING ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR101110	Taper Lock Bushing	11	WFR150600	Bolt 3/8-16 x 1 1/2 in	18	WFR153005	Split Lock Washer 3/8 in
2	WFR101113	Pulley 2 in	12	WFR150512	Hex Head Machine Bolt 1/4-20 x 1/2 in	19	WFR152005	Nut 3/8-16 in
3	WFR100135	Belt AP-74	13	WFR150509	Bolt 5/16-18 x 3 in	20	WFR103005	Idler Adjustment Hinge ONLY
4	WFR101107	Bushing with Set Screw	14	WFR153001	Washer 5/16 in	21	WFR153007	Split Lock Washer 1/4 in
5	WFR101112	Pulley 19 in	15	WFR153002	Split Lock Washer 5/16 in	22	WFR152002	Nut 1/4-20
6	WFR100170	V Belt 3VX710BR	16	WFR152004	Nut 5/16-18			
7	WFR100715	Key 1/4 x 1/4 x 4 5/8 in	17	WFR801001	Idler Bearing Mount Assembly Complete			
8	WFR301852	Idler Shaft ONLY 1 in		WFR311401	Idler Bearing Mount ONLY			
9	WFR880205	Pillow Block Bearing ONLY 1 in						
10	WFR153004	Washer 3/8 x 1 in						


TUMBLER BEARING MOUNT ASSEMBLY

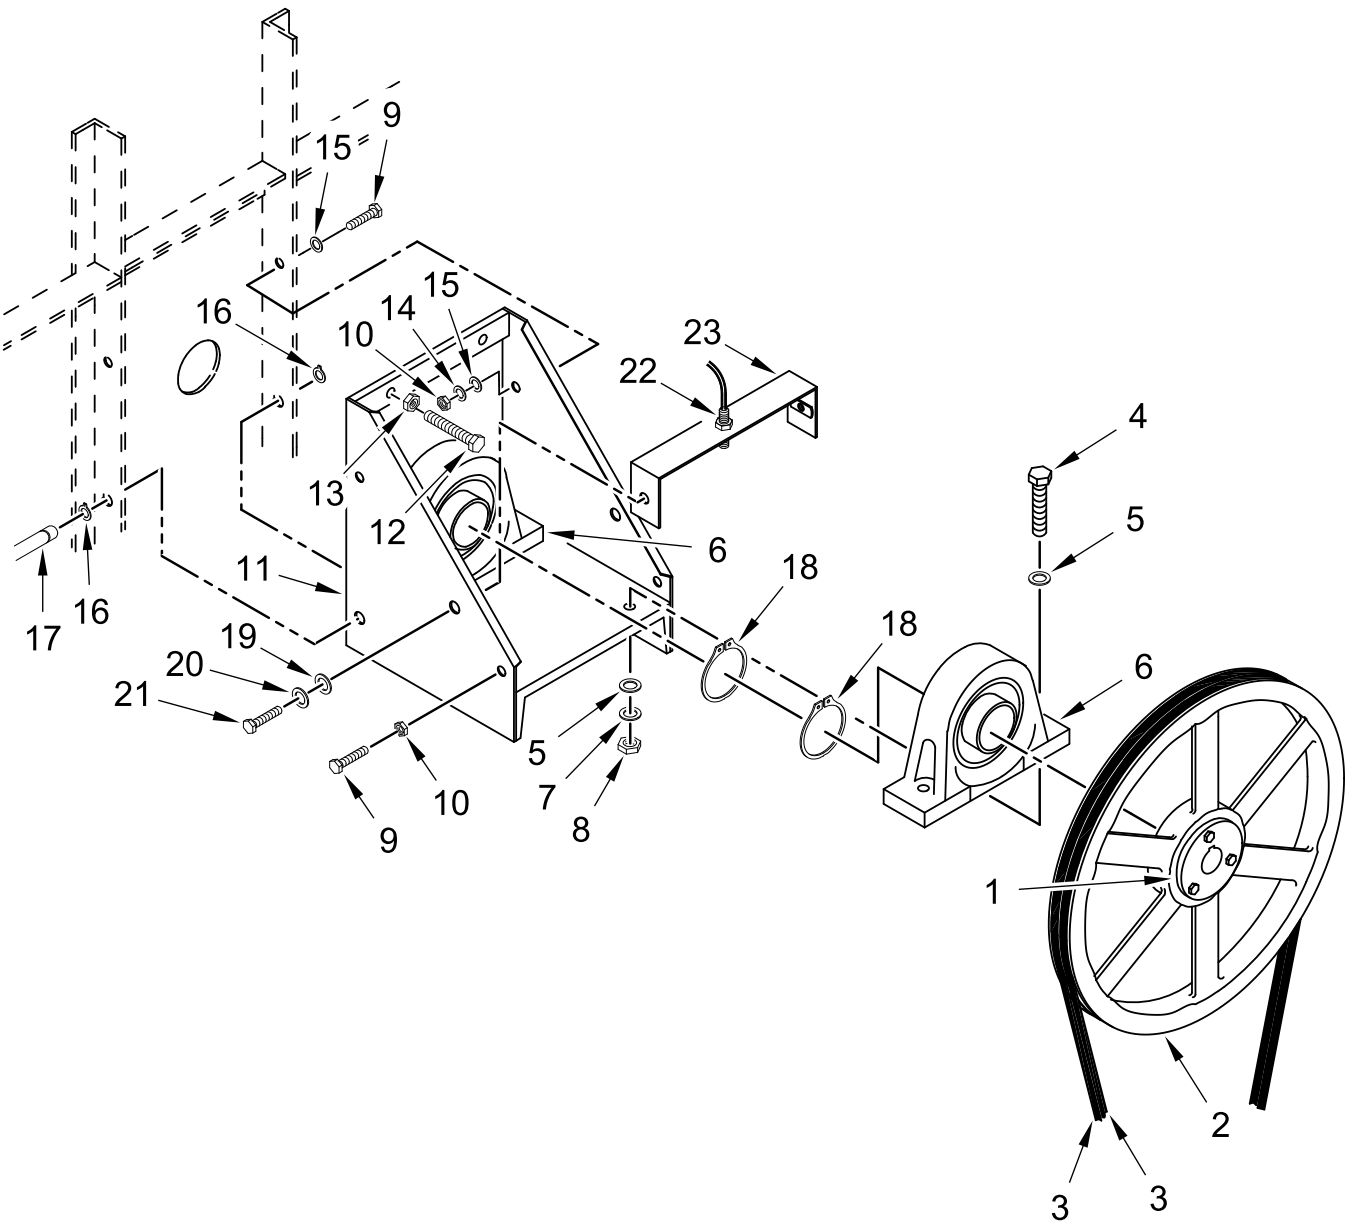

TUMBLER BEARING MOUNT ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR101137	Bushing with Set Screw 2-1/4 in	8	WFR152010	Hex Nut 5/8-11 in	17	WFR883033	Hinge Pin Assembly 5/8 in
2	WFR101136	Tumbler Pulley 20 in	9	WFR150600	Bolt 3/8-16 x 1 1/2 in	18	WFR100811	Retaining Ring 2-1/4 in
3	WFR100135	Belt AP-74	10	WFR152005	Nut 3/8-16 in	19	WFR153018	Flat Washer 1/4 in
4	WFR150602	Hex Head Machine Bolt 5/8-11 x 3 in	11	WFR801102	Tumbler Bearing Mount Assembly	20	WFR153007	Split Lock Washer 1/4 in
5	WFR153016	Flat Washer 5/8 in	12	WFR150604	Bolt 1/2-20 x 3 in	21	WFR150512	Hex Head Machine Bolt 1/4-20 x 1/2 in
6	WFR880204	Pillow Block Bearing 2-1/4 in	13	WFR152012	Nut 1/2-20 in	22	WFR883386	Rotational Sensor Assembly
7	WFR153015	Split Lock Washer 5/8 in	14	WFR153005	Split Lock Washer 3/8 in	23	WFR880841	Rotational Sensor Mounting Bracket
			15	WFR153004	Washer 3/8 x 1 in			
			16	WFR100801	Retaining Ring 5/8 in			


TUMBLER MOTOR MOUNT ASSEMBLY

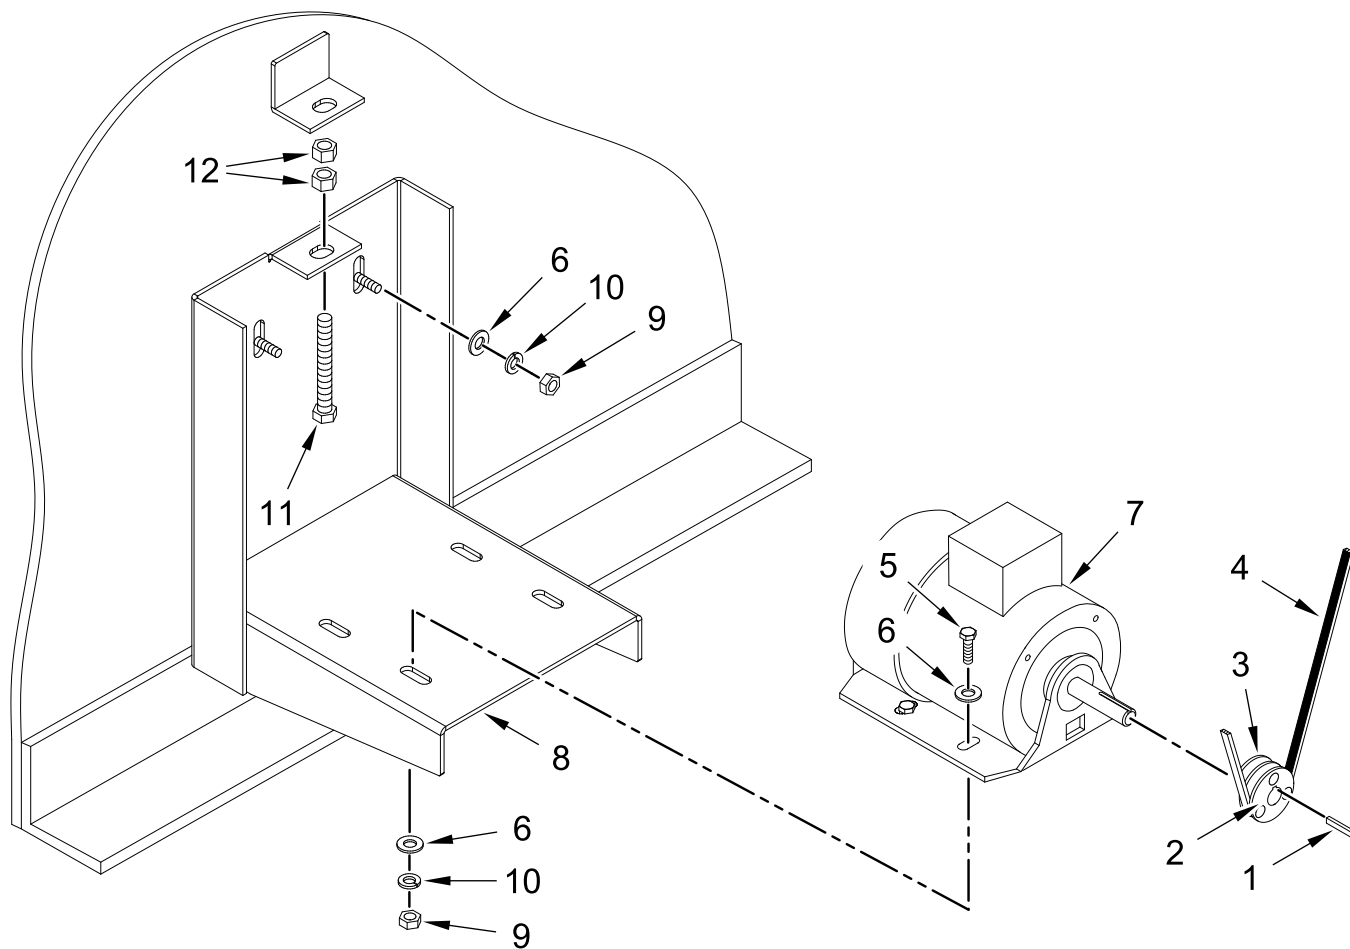

TUMBLER MOTOR MOUNT ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR100705	Key 3/16 x 3/16 x 1 3/8 in	7	WFR100029	Motor 3/4 hp 200-460v (1ø) 50/60Hz	11	WFR150619	Hex Head Machine Bolt 3/8-16 x 3 in
2	WFR101121	Bushing with Set Screw	8	WFR800952	Tumbler Motor Mount ONLY	12	WFR152005	Nut 3/8-16 in
3	WFR101114	Pulley 2.65 in		WFR800953	Motor Mount Assembly Complete			
4	WFR100170	V Belt 3VX710BR	9	WFR152004	Nut 5/16-18			
5	WFR150501	Tap Bolt 5/16-18 x 3/4 in	10	WFR153002	Split Lock Washer 5/16 in			
6	WFR153001	Washer 5/16 in						


BLOWER MOTOR MOUNT ASSEMBLY

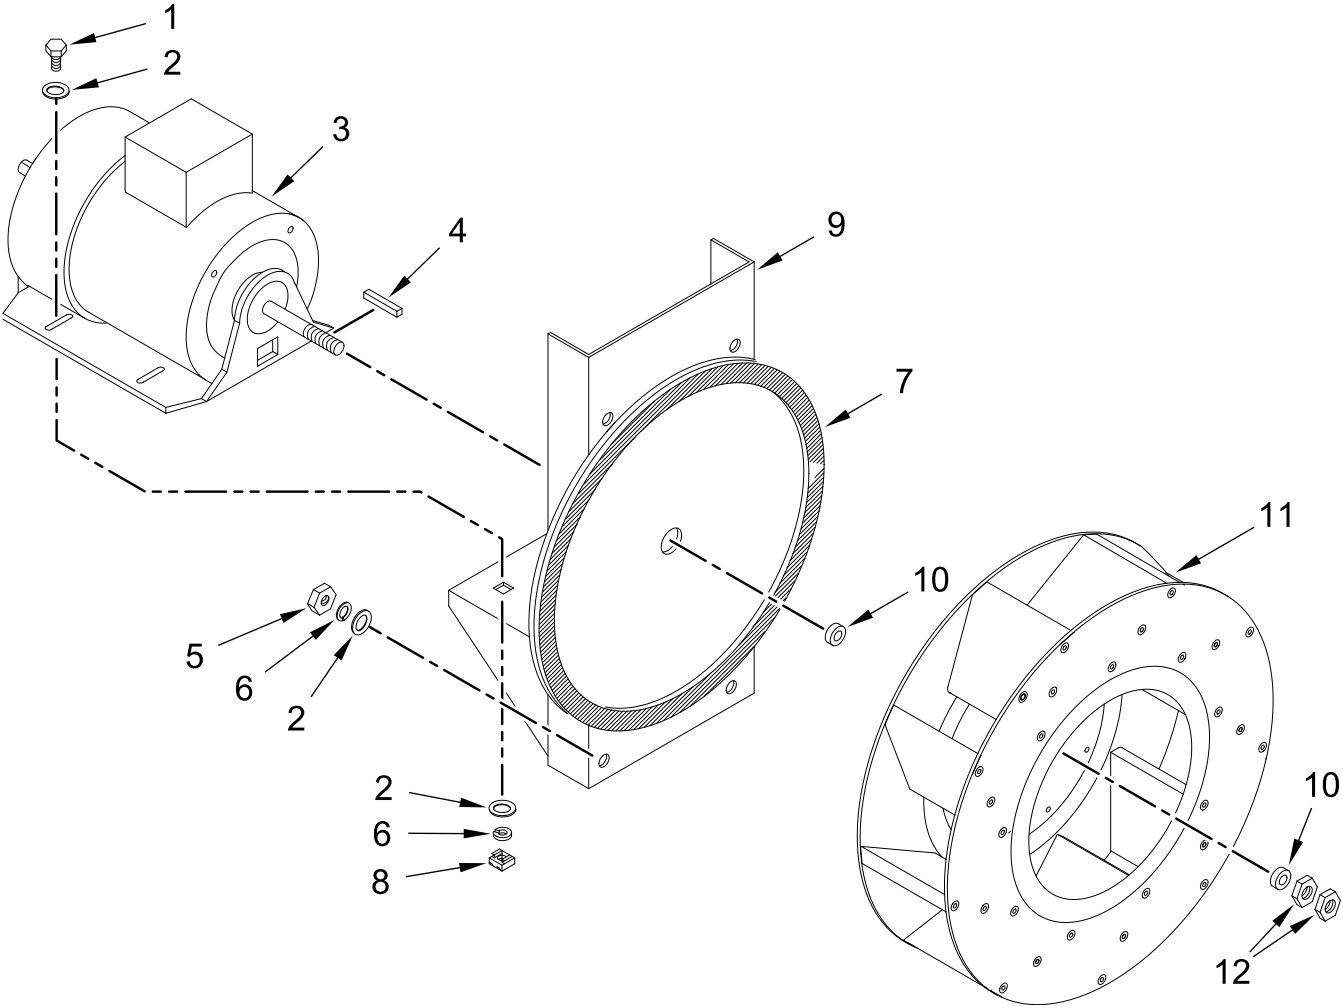

BLOWER MOTOR MOUNT ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR150501	Tap Bolt 5/16-18 x 3/4 in	7	WFR117604	Foam Tape (When Ordering Specify Length, sold by the inch)	11	WFR802027	Impellor, Riveted High Flow 16 in. 7/8 in. Bore
2	WFR153001	Washer 5/16 in				12	WFR152006	Nut 1/2-20
3	WFR181043	Motor 3 hp 208-230/460v 60 Hz	8	WFR154000	Tinnerman® Nut 5/16-18			
4	WFR100705	Key 3/16 x 3/16 x 1 3/8 in	9	WFR803561	Non-Reversing Motor Mount ONLY			
5	WFR152004	Nut 5/16-18	10	WFR153065	Washer 1-1/2 x .505 x .116 in			
6	WFR153002	Split Lock Washer 5/16 in						


PN SENSOR BRACKET ASSEMBLY

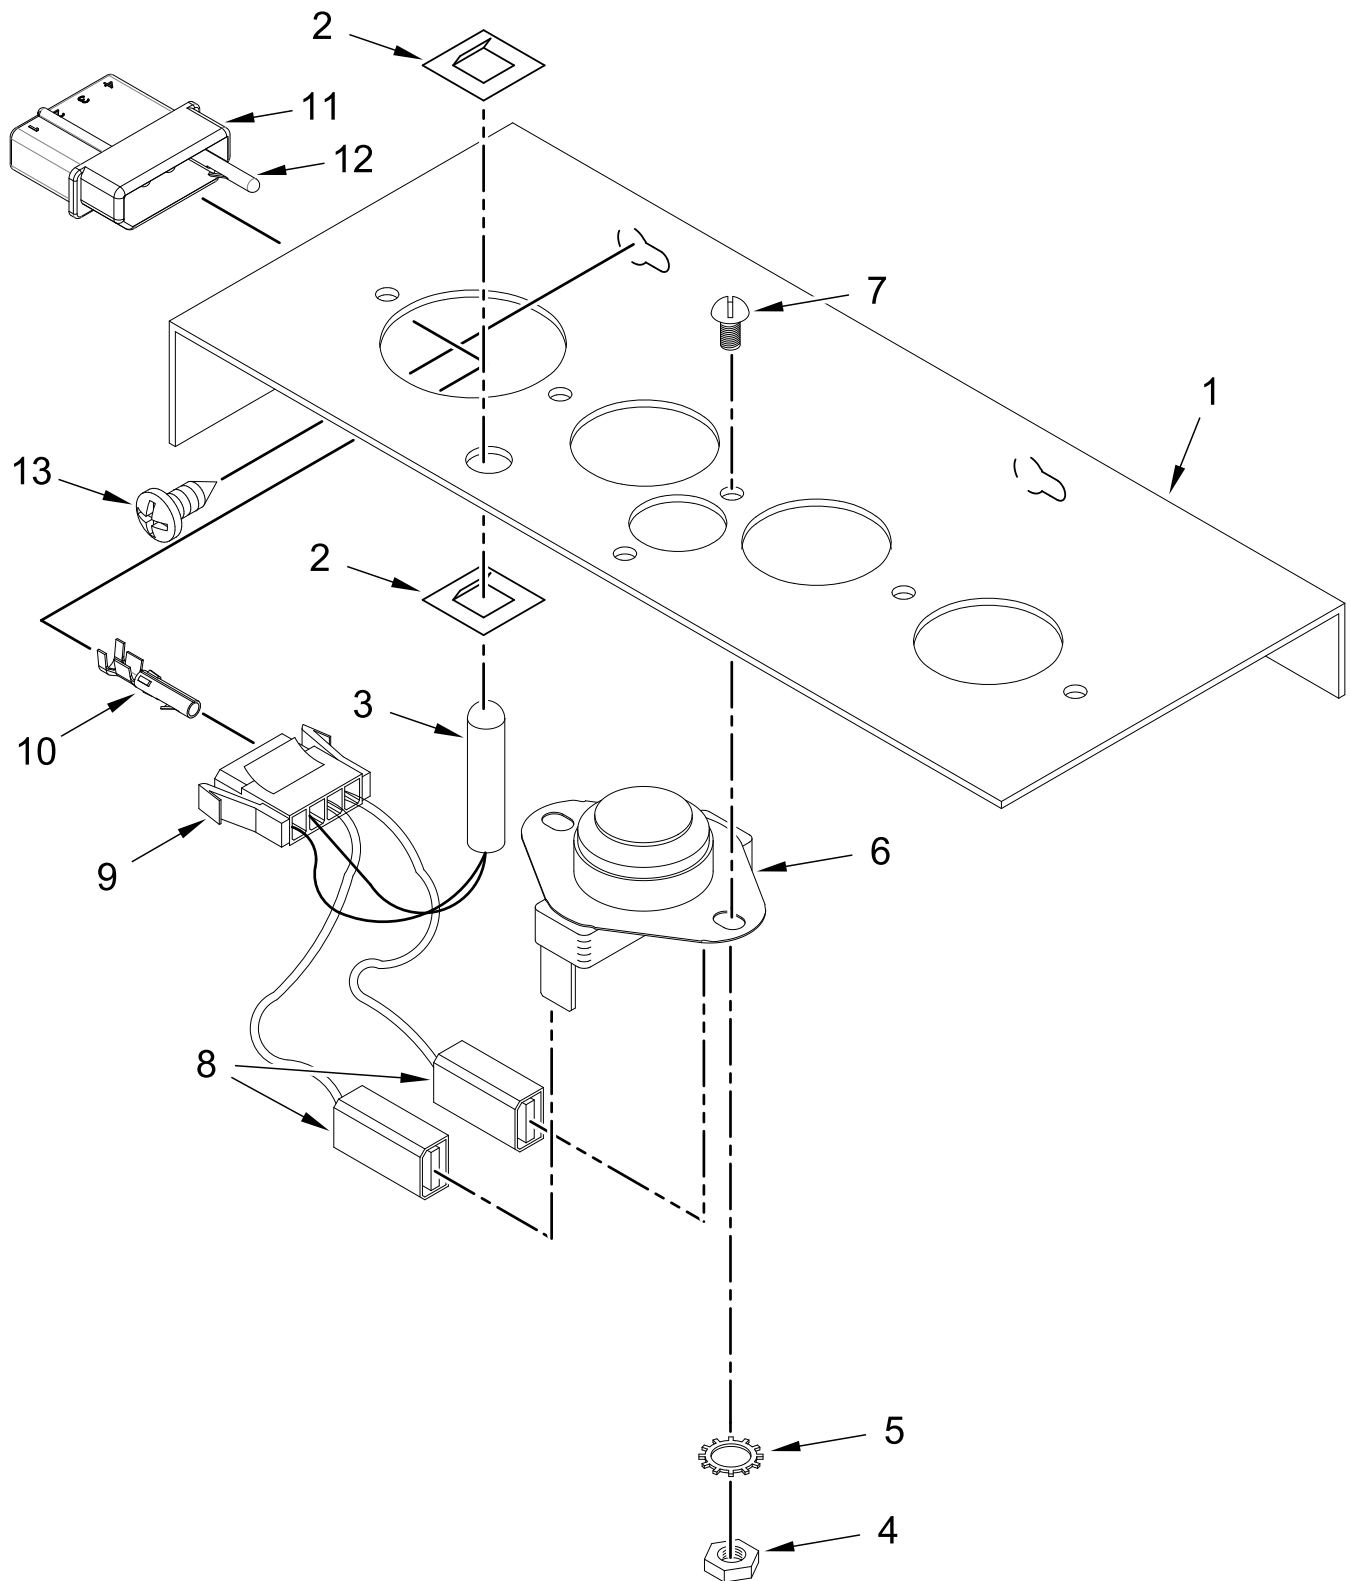

PN SENSOR BRACKET ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR820022	Temperature Sensor Probe Assembly Complete (includes No(s) 1 through 10)	4	WFR152000	Nut 6-32	11	WFR122604	4 Pin Connector
	WFR331295	Temperature Sensor Bracket ONLY	5	WFR153010	Lock Washer #6	12	WFR122700	Male Crimp Pin
2	WFR154007	Push On Fastener 1/4 in	6	WFR130112	Thermostat, Automatic Reset ONLY 225 Degrees		WFR122801	Pin / Socket Extraction Tool (Not Illustrated)
3	WFR880251	Temperature Sensor Probe Assembly	7	WFR150005	Screw 6-32 x 1/4 in	13	WFR150301	Screw 8-18 x 7/16 in
			8	WFR121028	Insulated Female Terminal			
			9	WFR122605	4 Pin Connector			
			10	WFR122701	Female Crimp Socket			


DIRECT SPARK IGNITION BURNER ASSEMBLY

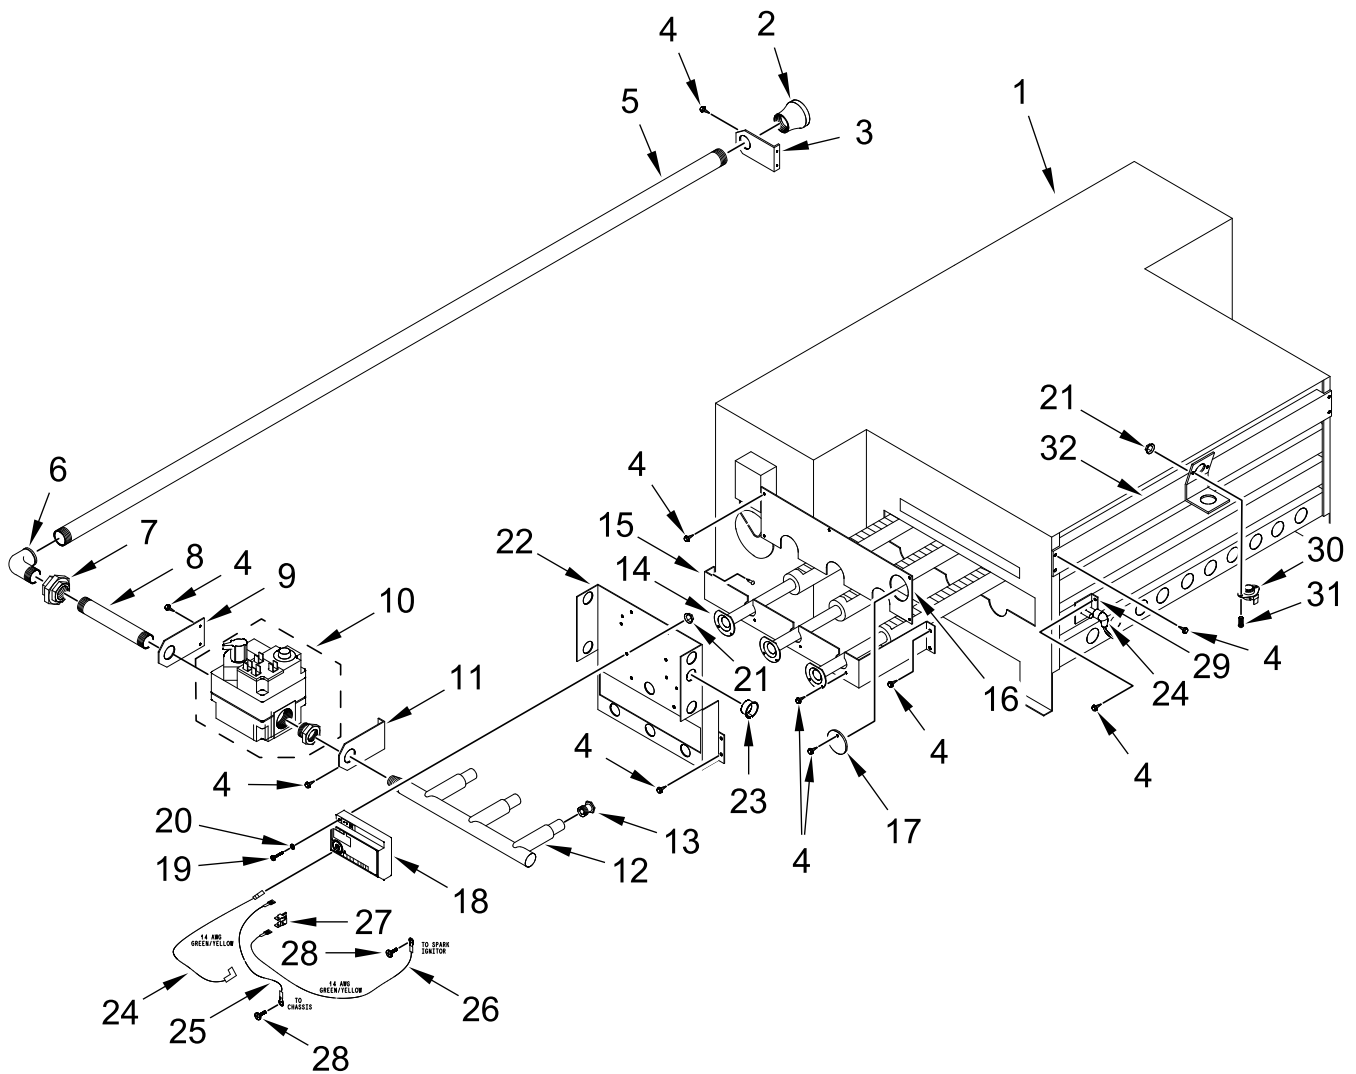

DIRECT SPARK IGNITION BURNER ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR820201	Burner Box ONLY	11	WFR331088	Bracket, Pipe	21	WFR151000	Nut 6-32
	WFR835048	Direct Spark Ignition Burner Assembly Complete	12	WFR141219	Manifold 1/2 in. (3-port)	22	WFR335031	Direct Spark Ignition Module Mounting Bracket
2	WFR142924	Reducing Coupling 1 to 3/4 in	13	WFR140832	Burner Orifice #4	23	WFR121300	Open/Closed Bushing
3	WFR331291	Pipe Bracket		WFR140819	Burner Orifice #30	24	WFR829999	High Voltage Wire with 1/4 in. Spade Connection
4	WFR150309	Screw 10-16 x 1/2 in (Hex Head TEK Crimptite®)		WFR887232	Liquid Propane Conversion Kit	25	WFR822513	Ground Wire
5	WFR142807	Black Pipe 3/4 x 32-1/2 in	14	WFR141136	Burner Tube	26	WFR822432	Ignition Ground Wire
6	WFR142854	Black Elbow 3/4 x 3/4 in	15	WFR331287	Bracket, Burner Tube (Lower)	27	WFR121007	DSI Adapter
7	WFR142601	Black Union 3/4 in	16	WFR331289	Bracket, Burner Tube (Upper)	28	WFR120910	Screw 10-32 x 3/8 in
8	WFR142710	Black Pipe 3/4 x 4 in	17	WFR331290	Ignition Sight Hole Disc	29	WFR128915	Ignitor Probe ONLY
9	WFR390125	Bracket, Pipe (Flat)	18	WFR128937	Direct Spark Ignition Module (3 Tries)	30	WFR130201	Thermostat Hi-Limit Reset Switch 330°
10	WFR128099	Gas Valve (Natural Gas)	19	WFR150002	Screw 6-32 x 1 in	31	WFR150001	Screw 6-32 x 1/2 in
			20	WFR153017	SAE Washer #6	32	WFR821457	Hi-Limit Mounting Bracket


ELECTRICAL PANEL ASSEMBLY

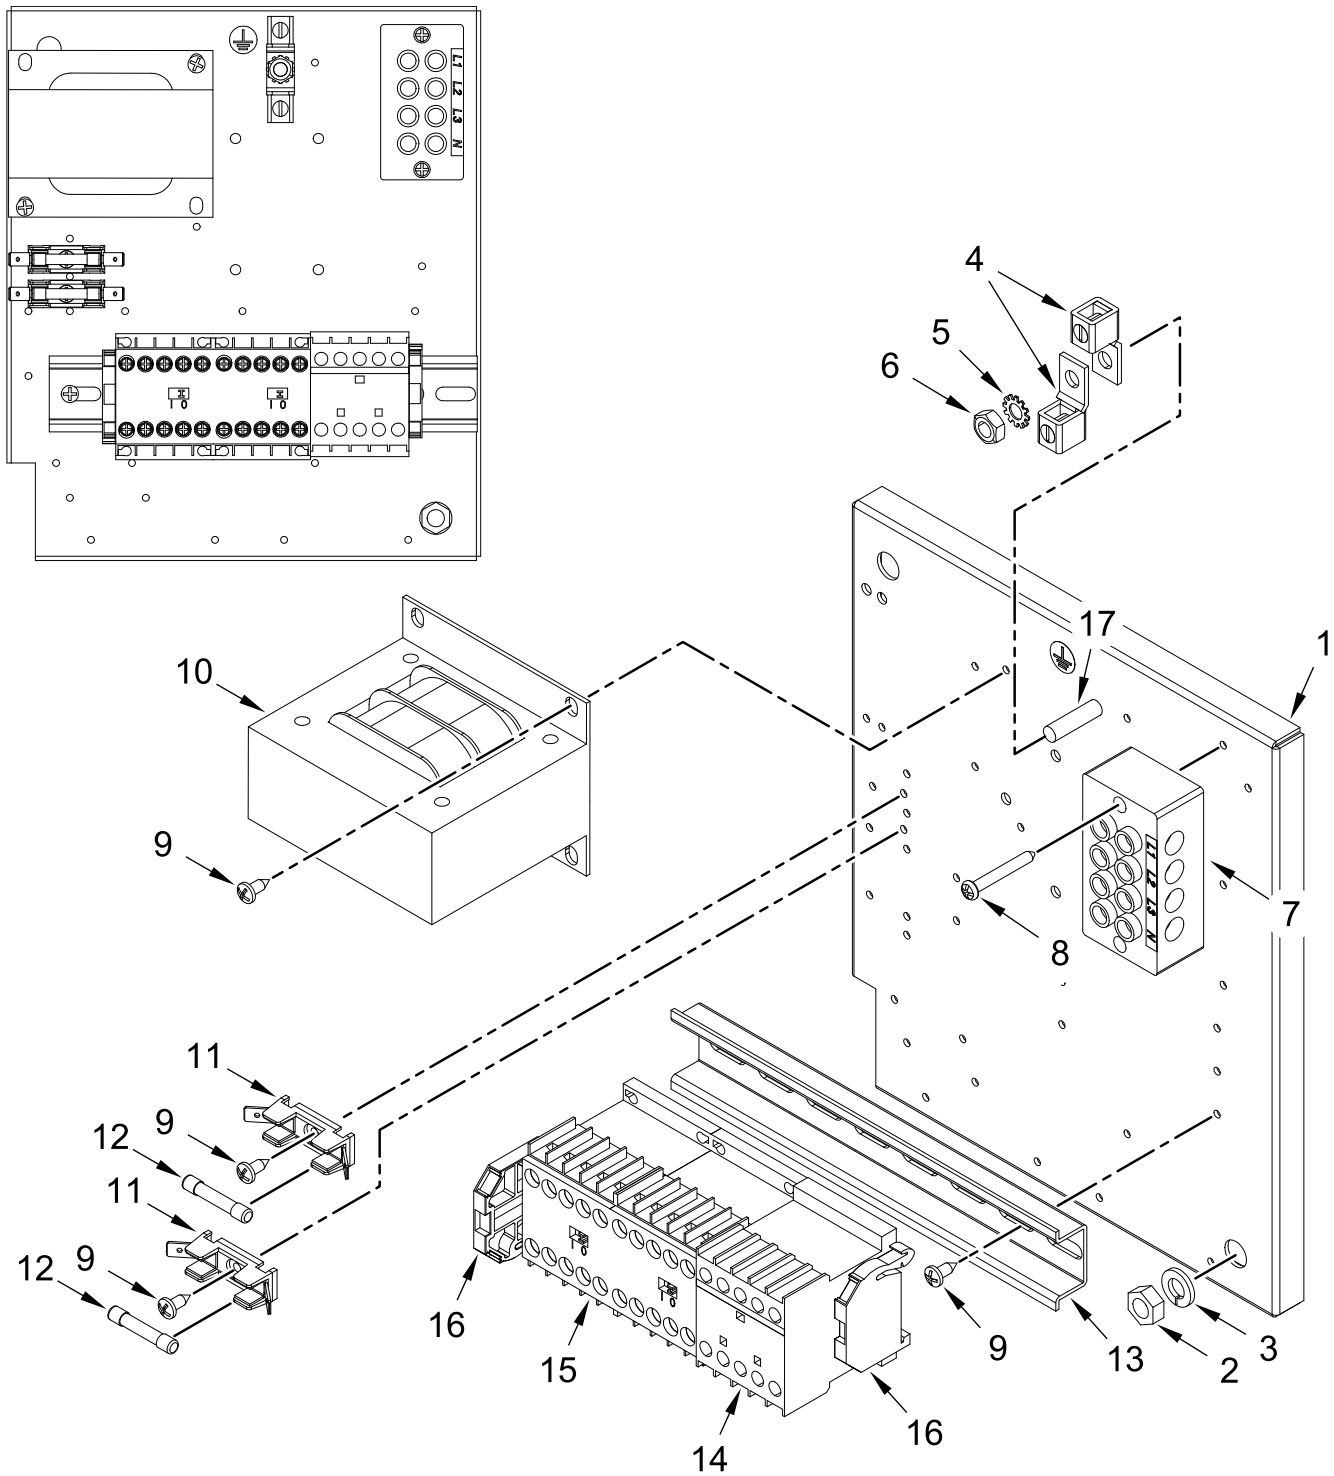

ELECTRICAL PANEL ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR332346	Electric Mounting Plate ONLY	6	WFR152002	Nut 1/4-20	13	WFR120768	DIN Rail 35 x 15 mm
	WFR823032	Electric Panel Assembly Complete	7	WFR120701	4-Position Terminal Block	14	WFR131396	Contactor K-Line 24v 12A 3PH
2	WFR152004	Nut 5/16-18	8	WFR150539	Screw 8 x 1 1/4 in	15	WFR132497	Contactor K-Line Reversing 24V 6A
3	WFR153002	Split Lock Washer 5/16 in	9	WFR150301	Screw 8-18 x 7/16 in	16	WFR120774	End Stop (Rail)
4	WFR121010	Lug Terminal 14-4 (Ground)	10	WFR132109	Transformer – 24 vac Assembly (for 120V 60 Hz Models Only)	17	WFR153525	Self Clinching Stud 1/4-20 x 1 in
5	WFR153021	Washer Serrated 1/4 in	11	WFR136008	Fuse Block			
			12	WFR136050	Fuse 1 Amp (Slo-Blo)			


SAIL SWITCH ASSEMBLY

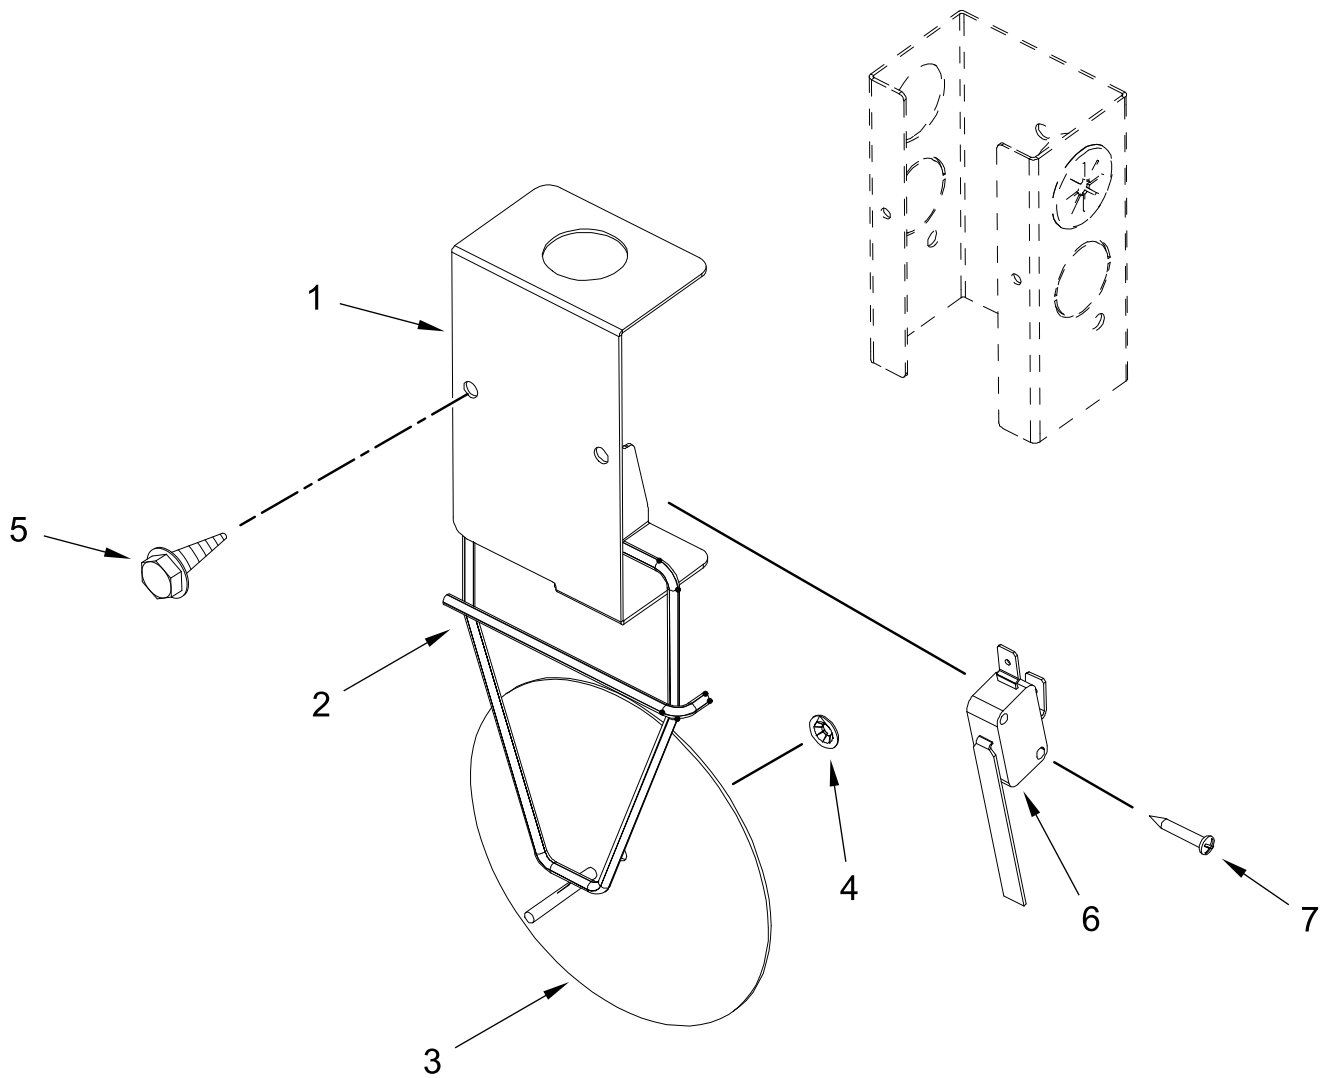

SAIL SWITCH ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR350283	Sail Switch Box Cover and Bracket ONLY	4	WFR154002	Push-On Fastener 1/8 in	6	WFR122200	Service Switch
2	WFR105500	Sail Switch Rod Assembly	5	WFR150309	Screw 10-16 x 1/2 in (Hex Head TEK Crimpitite®)	7	WFR150303	Screw #4 x 3/4 in
3	WFR319202	Sail Switch Damper						


S.A.F.E. SYETEM ASSEMBLY

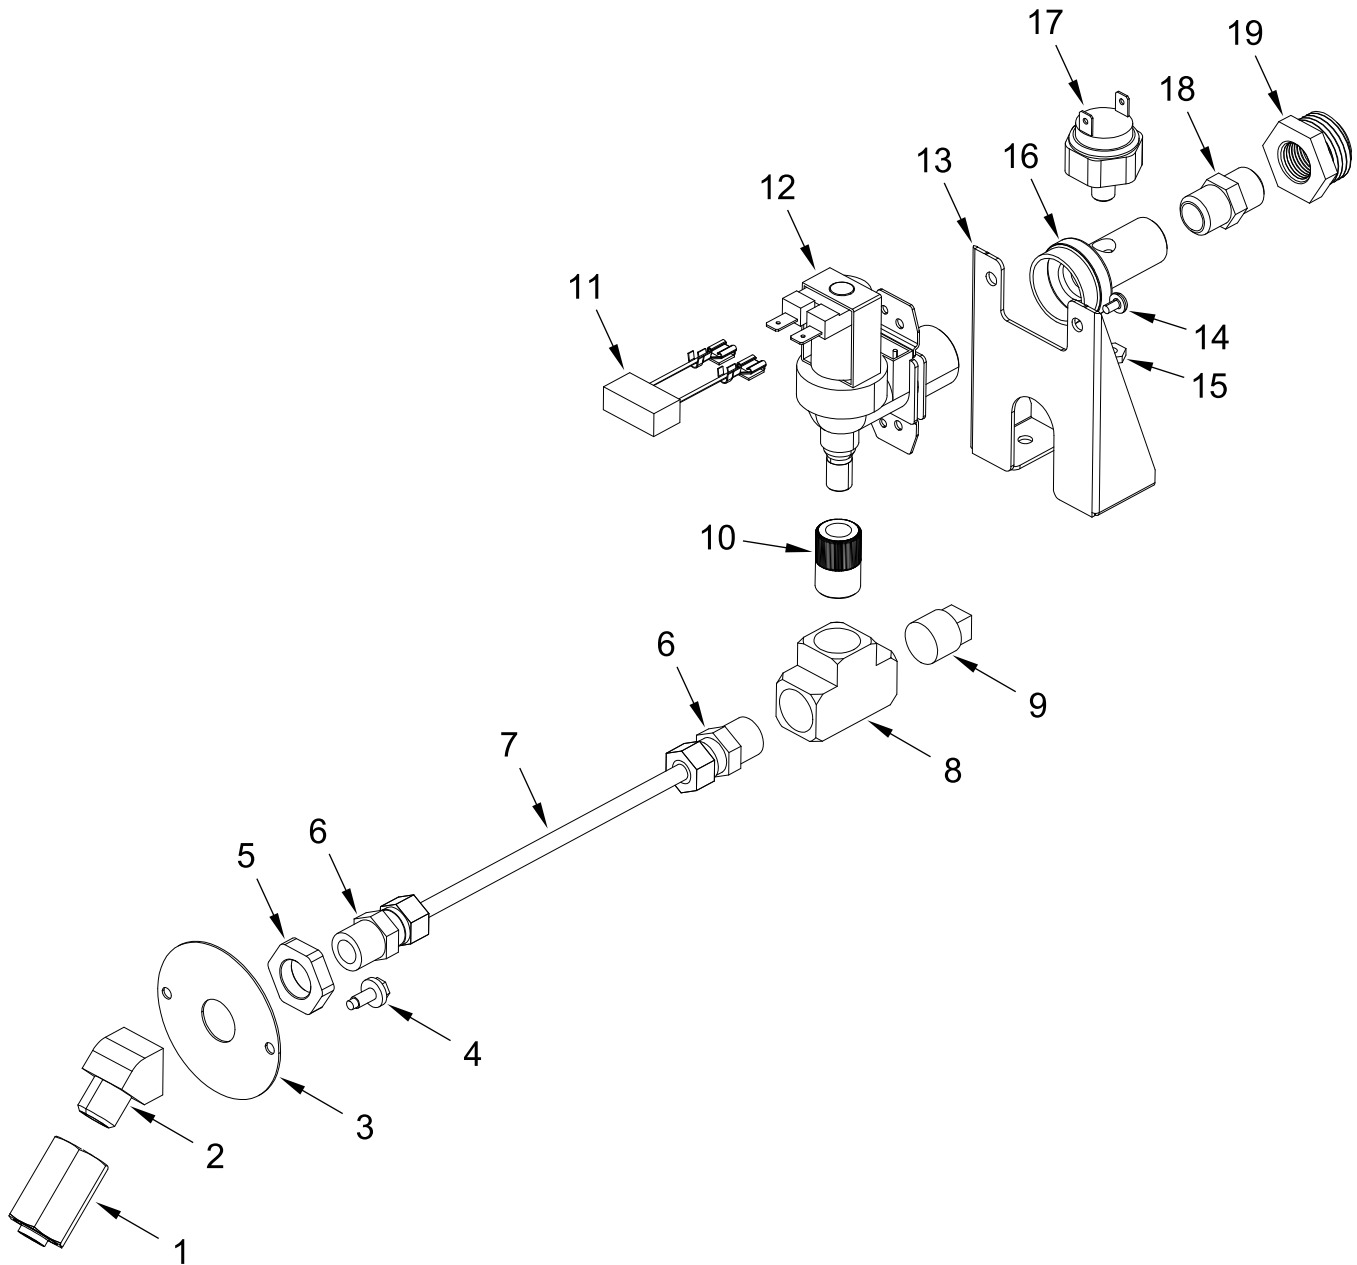

S.A.F.E. SYSTEM ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR143581	S. A. F. E. System Spray Nozzle 3 GPM 3/8 in	7	WFR143108	Stainless Steel Flex Hose 20 in. with 3/8 in. Compression	14	WFR154338	Screw M4 x 6 mm
2	WFR143301	Brass Elbow 3/8 in	8	WFR143220	F.P.T. Brass Tee 3/8 in	15	WFR152001	Nut 8-32 x 3/8 in
3	WFR311588	S.A.F.E. System Sprinkler Head Mounting Plate ONLY	9	WFR143251	Plug 3/8 in	16	WFR143182	Brass Tee 3/4 x 1/8 x 3/8 in
4	WFR150309	Screw 10-16 x 1/2 in (Hex Head TEK Crimptite®)	10	WFR143183	Brass Adaptor 7/16-20 x 3/8 in	17	WFR136987	Water Pressure Switch
5	WFR143303	Brass Lock Nut 3/8 in	11	WFR824081	RC Network Assembly	18	WFR182579	Brass Nipple 3/8 MPT x 3/8 MPT in
6	WFR143208	Brass Connect 3/8 x 3/8 in	12	WFR165119	S. A. F. E. System H2O Valve 24VAC	19	WFR143356	Nylon Adaptor 3/8 x 3/4 in
			13	WFR311587	S.A.F.E. System Valve Bracket			


S.A.F.E. TEMPERATURE PROBE ASSEMBLY

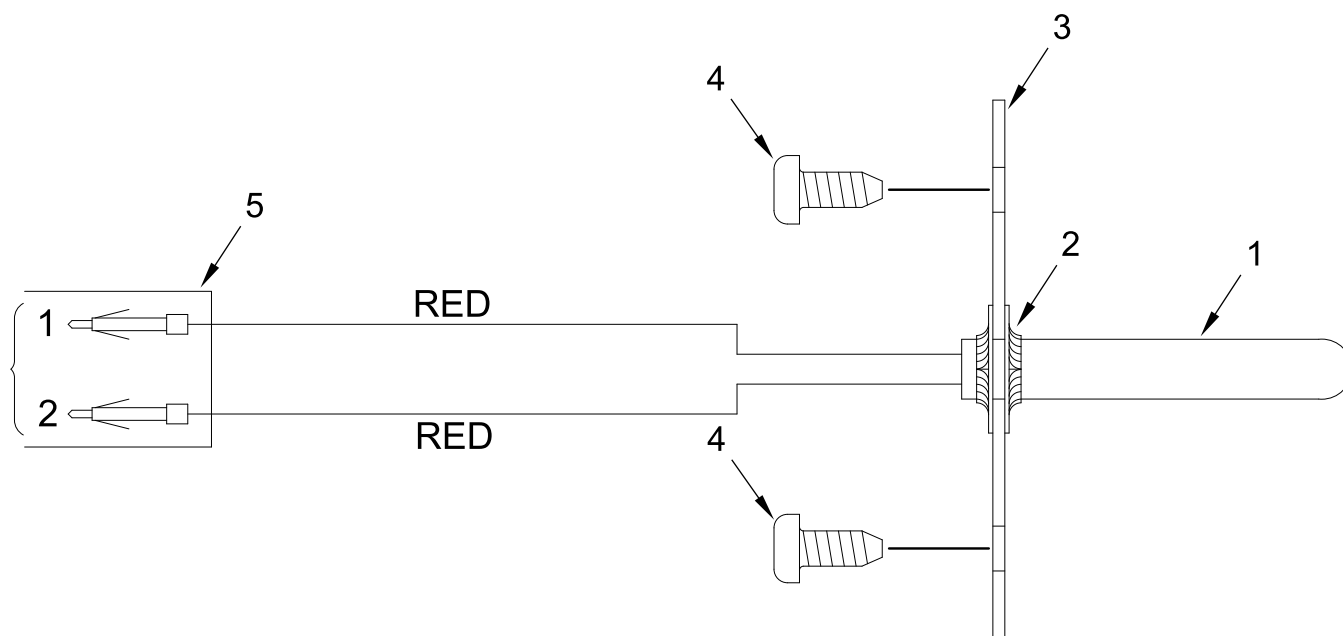

S.A.F.E. TEMPERATURE PROBE ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR822752	S. A. F. E. System Temperature Probe Assembly (includes No(s) 1 through 5)	2	WFR154007	Push On Fastener 1/4 in	4	WFR150301	Screw 8-18 x 7/16 in
			3	WFR390390	Sensor Bracket ONLY	5	WFR122647	Connector ONLY

OUTER TOP / BACK GUARD ASSEMBLIES

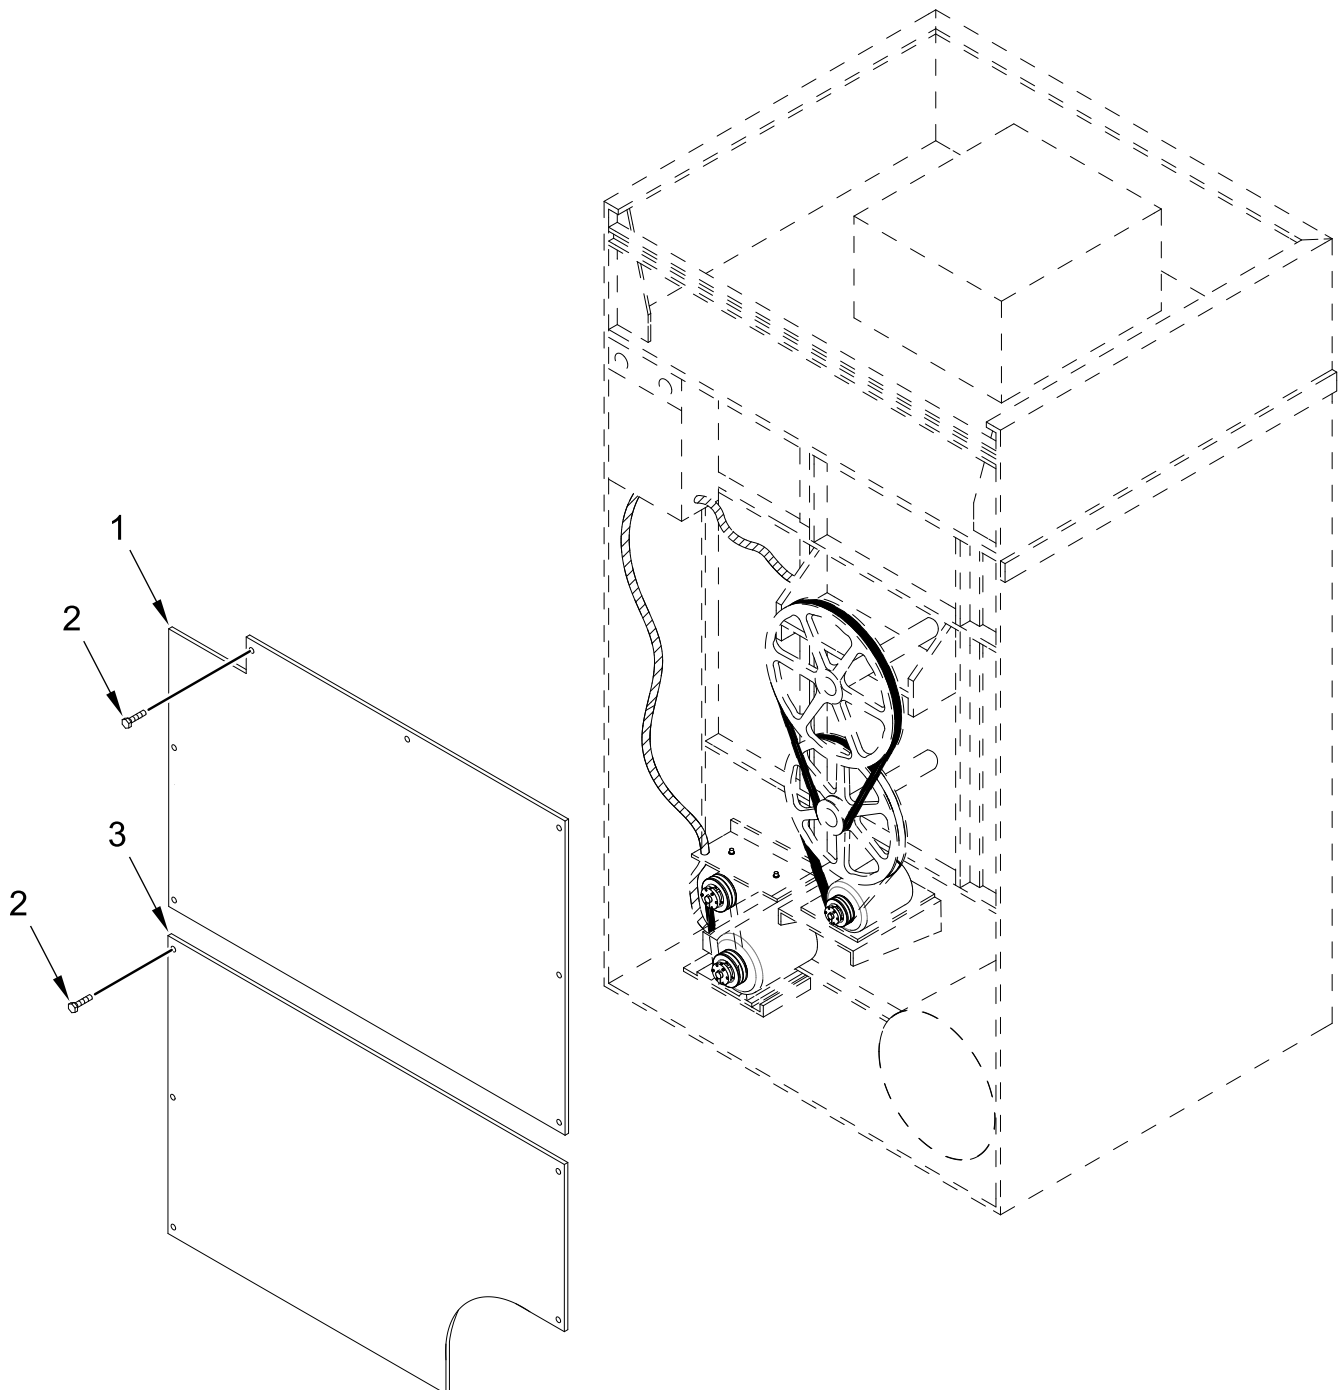

OUTER TOP / BACK GUARD ASSEMBLIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Top Back Guard
2	WFR150301	Screw 8-18 x 7/16 in
3	WFR354000	Lower Back Guard