




**COMMERCIAL GAS DRYER
MULTI-LOAD SERVICE PARTS LIST**

MODELS:

MDG170PJVW. (White) (as of January 2017)


OPL CONTROL DOOR ASSEMBLY

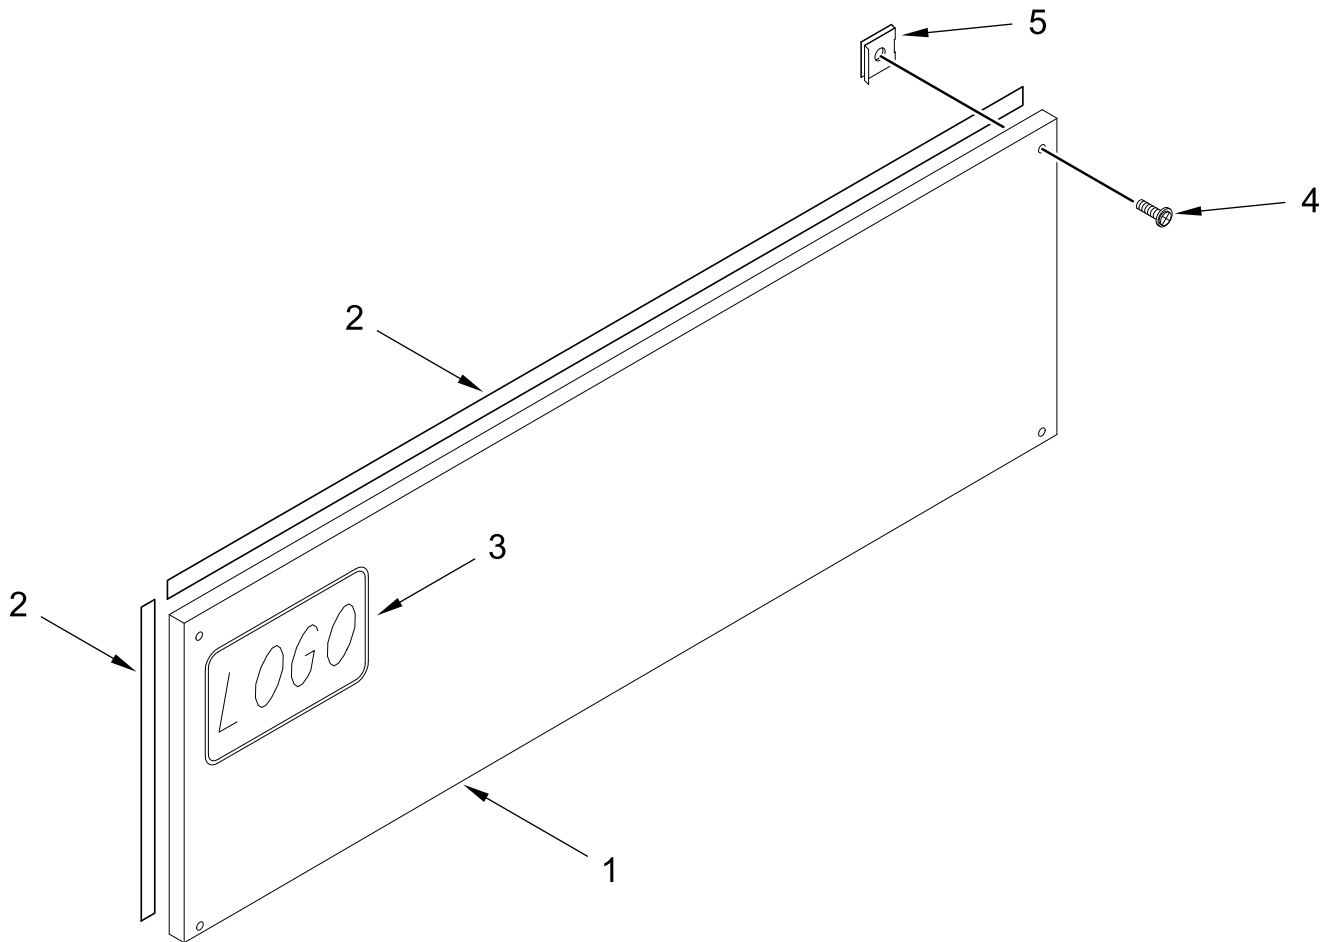

OPL CONTROL DOOR ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR883860	OPL Control Door (includes No(s) 1 and 2)	2	WFR117604	Foam Tape (When Ordering Specify Length, sold by the inch)	4	WFR150321	Screw 10-32 x 1/2 in
			3	WFR112353	Maytag Badge	5	WFR154011	U-Nut 10-32


MICROPROCESSOR CONTROL PANEL ASSEMBLY

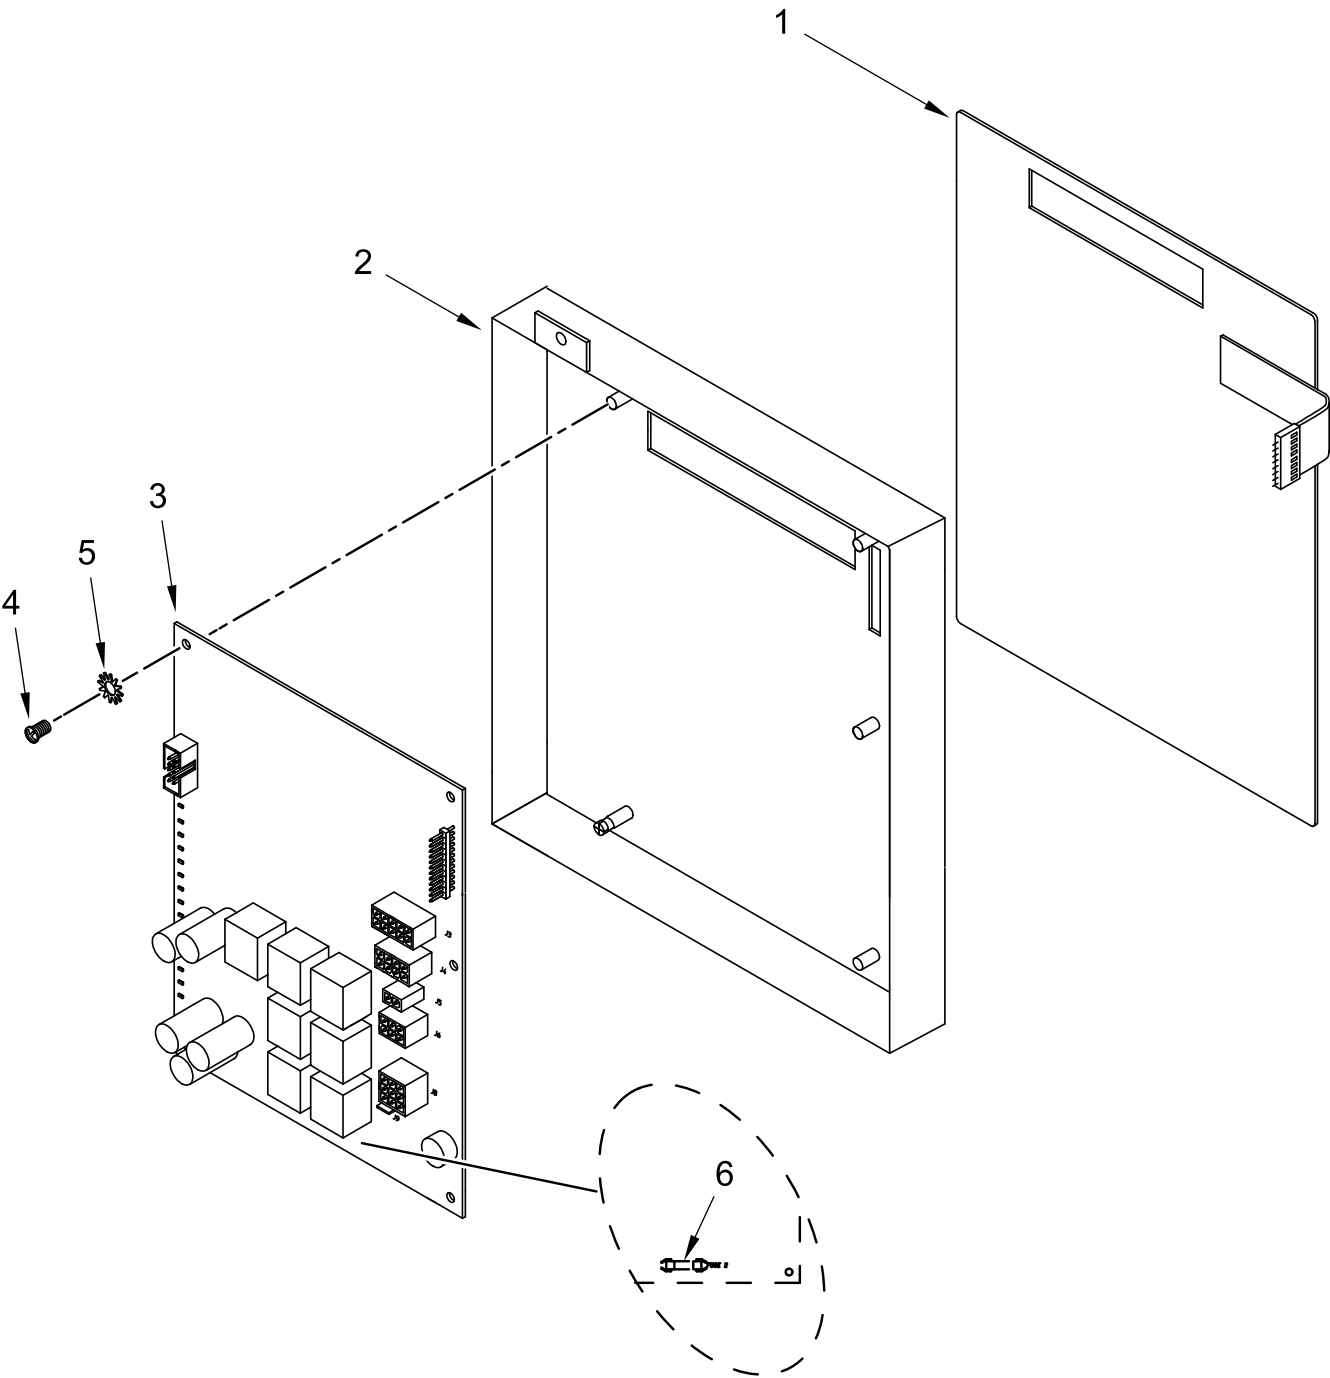

MICROPROCESSOR CONTROL PANEL ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR112577	Phase 7 OPL Keypad	3	WFR887003	Phase 7.2.2 Board (Sensor Activated Fire Extinguishing System and H2O Pressure Switch)	4	WFR150005	Screw 6-32 x 1/4 in
2	WFR850980	Phase 7 Panel				5	WFR153010	Lock Washer #6
						6	WFR136016	Fuse 5A (Fast Acting)


FRONT PANEL ASSEMBLY

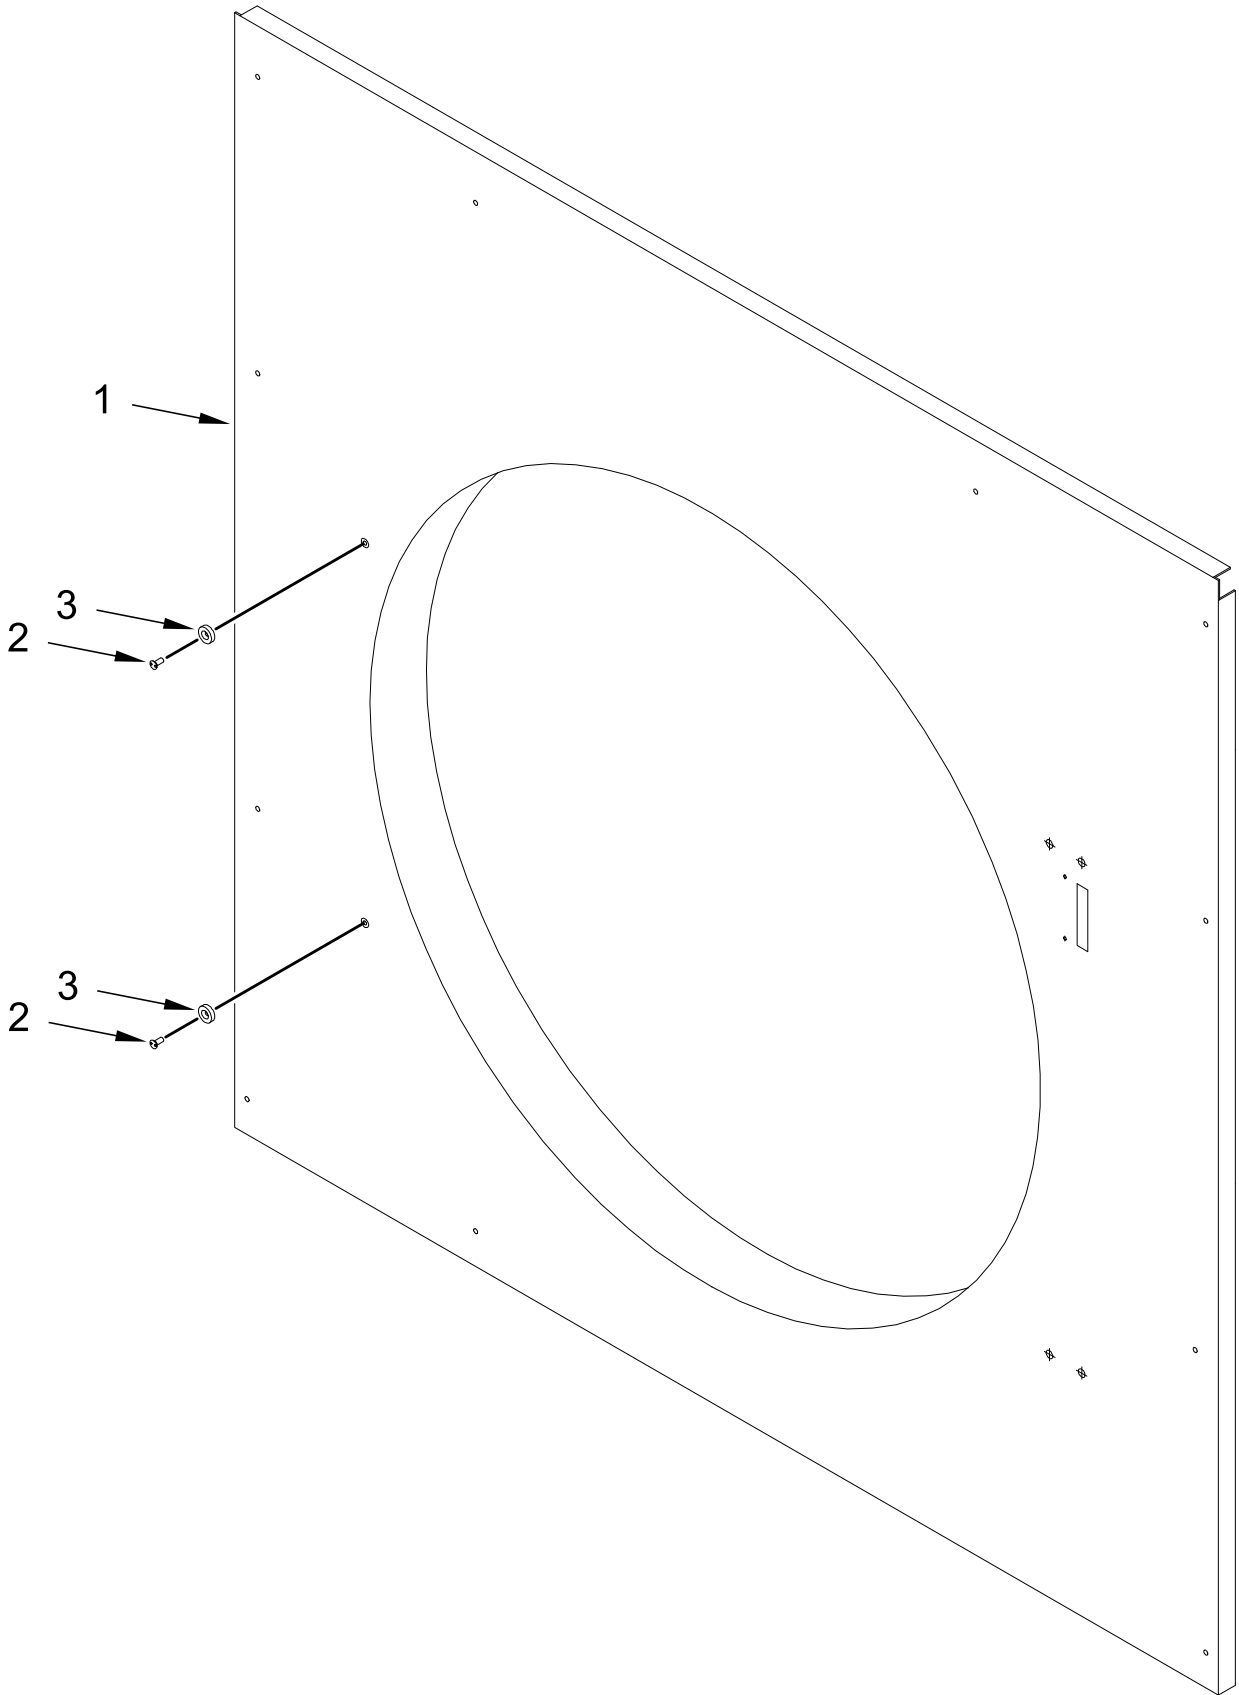

FRONT PANEL ASSEMBLY

<u>Illus.</u>	<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR801633	Front Panel Assembly	
2	WFR152223	Screw 10-32 x 1/2 in (TORX®)	
3	WFR102004	Round Door Magnet 3/4 in	


37-1/4 in. MAIN DOOR ASSEMBLY

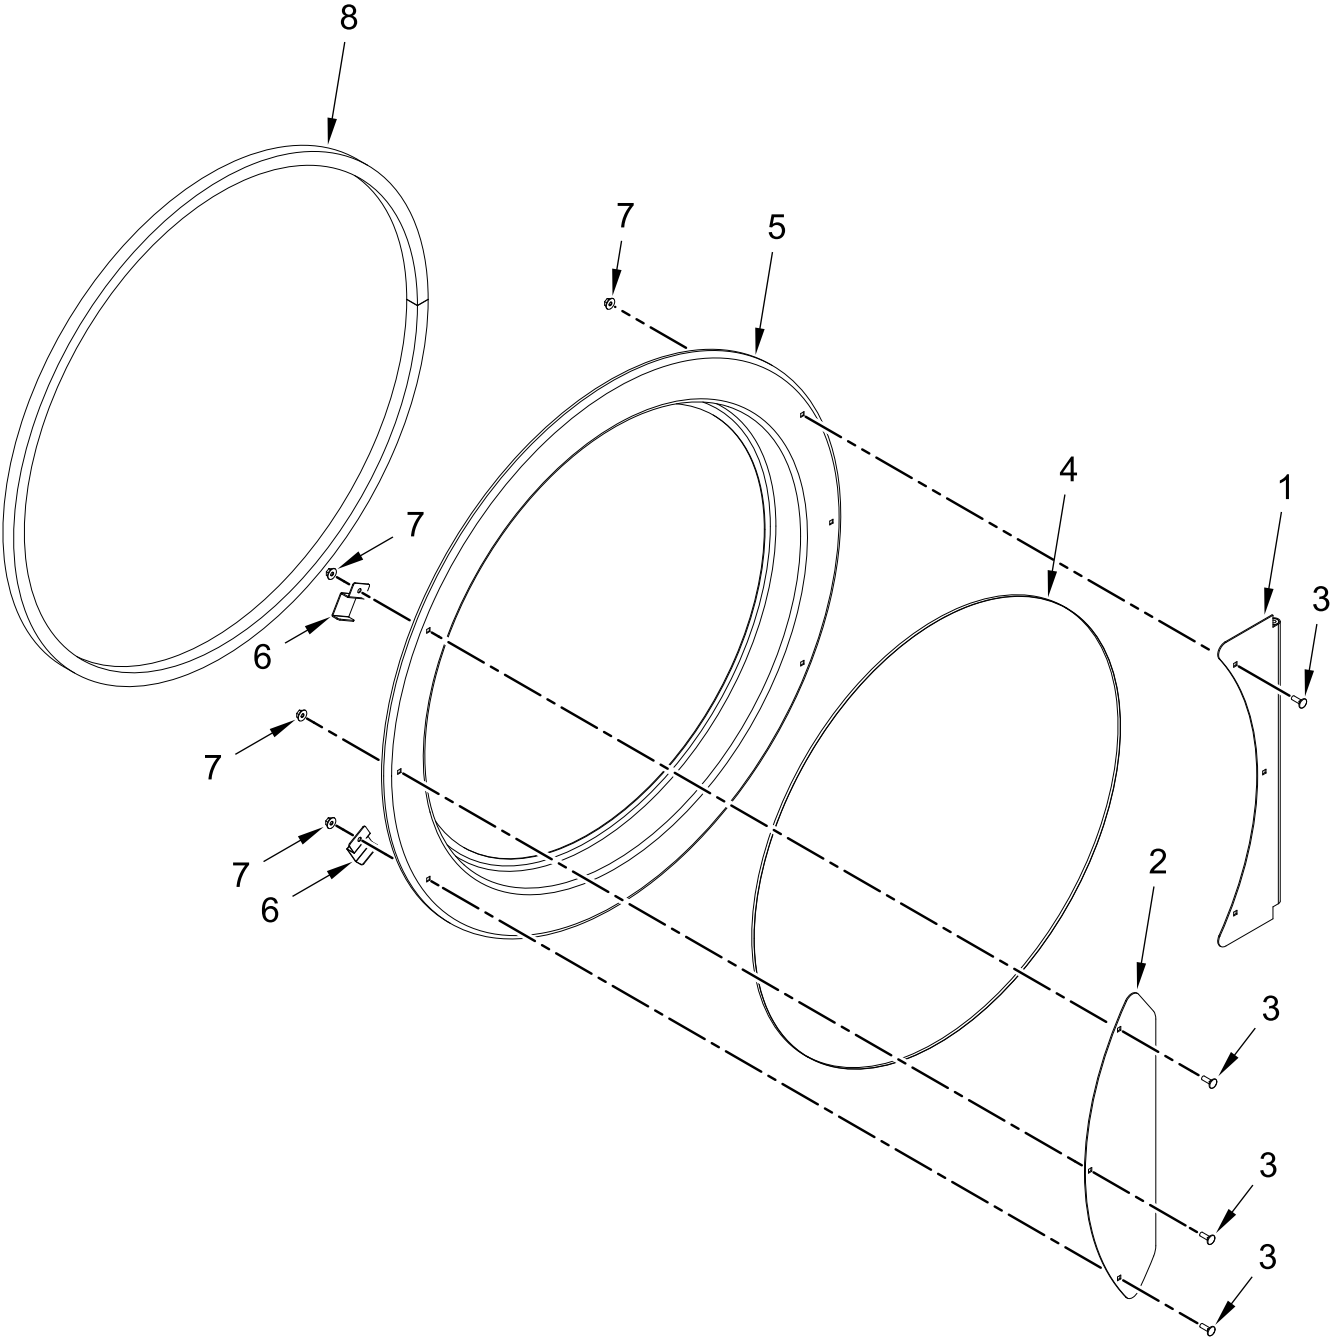

37-1/4 in. MAIN DOOR ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR185524	Door Hinge	5	WFR822631	Main Door Assembly Complete	8	WFR102357	Door Gasket
2	WFR884367	Door Handle					WFR401038	Black Adhesive (10.3 oz. Cartridge)
3	WFR150683	Carriage Bolt 1/4-20 x 5/8 in	6	WFR185522	Door Magnet Bracket			
4	WFR102221	Door Glass	7	WFR152014	Serrated Hex Flange Nut 1/4-20			
	WFR401038	Black Adhesive (10.3 oz. Cartridge)						


37-1/4 in. MAIN DOOR SWITCH ASSEMBLY

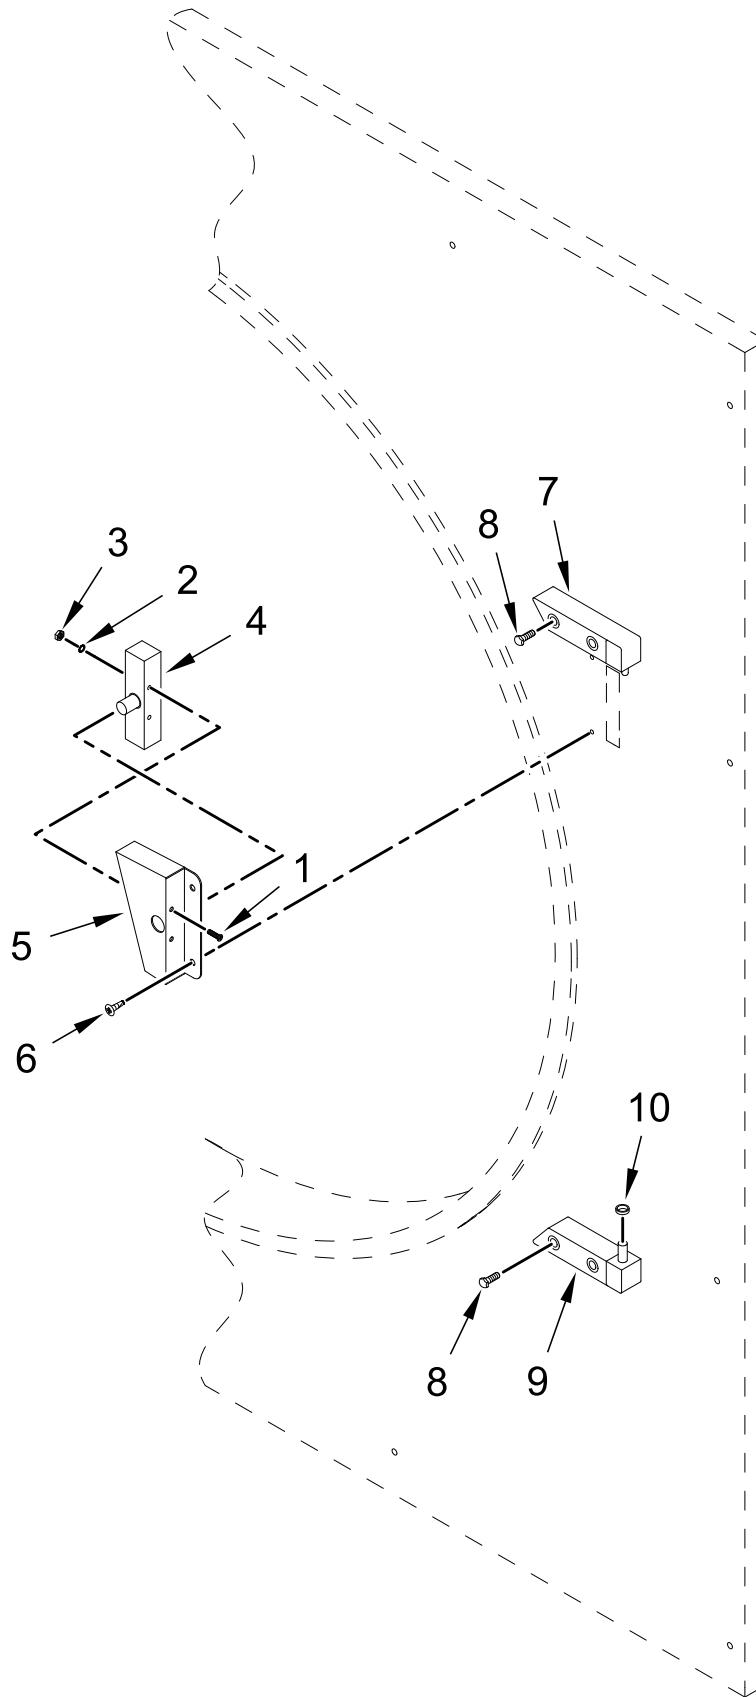

37-1/4 in. MAIN DOOR SWITCH ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR150006	Screw 6-32 x 7/8 in	7	WFR881152	Main Door Hinge Block Assembly (Top)
2	WFR153010	Lock Washer #6			(includes No(s) 7 and 8)
3	WFR152013	Nut 6-32			
4	WFR137005	Switch, Single Pole Door	8	WFR150445	Cap Screw 1/4-20 x 3/4 in
5	WFR882866	Black Main Door Switch Housing ONLY	9	WFR881151	Main Door Hinge Block Assembly (Bottom)
	WFR883338	Black Main Door Switch with Housing Assembly Complete			(includes No(s) 8, 9, and 10)
		(includes No(s) 1 through 5)	10	WFR153031	Nylon Washer
6	WFR150301	Screw 8-18 x 7/16 in			



TUMBLER / SUPPORT ASSEMBLIES

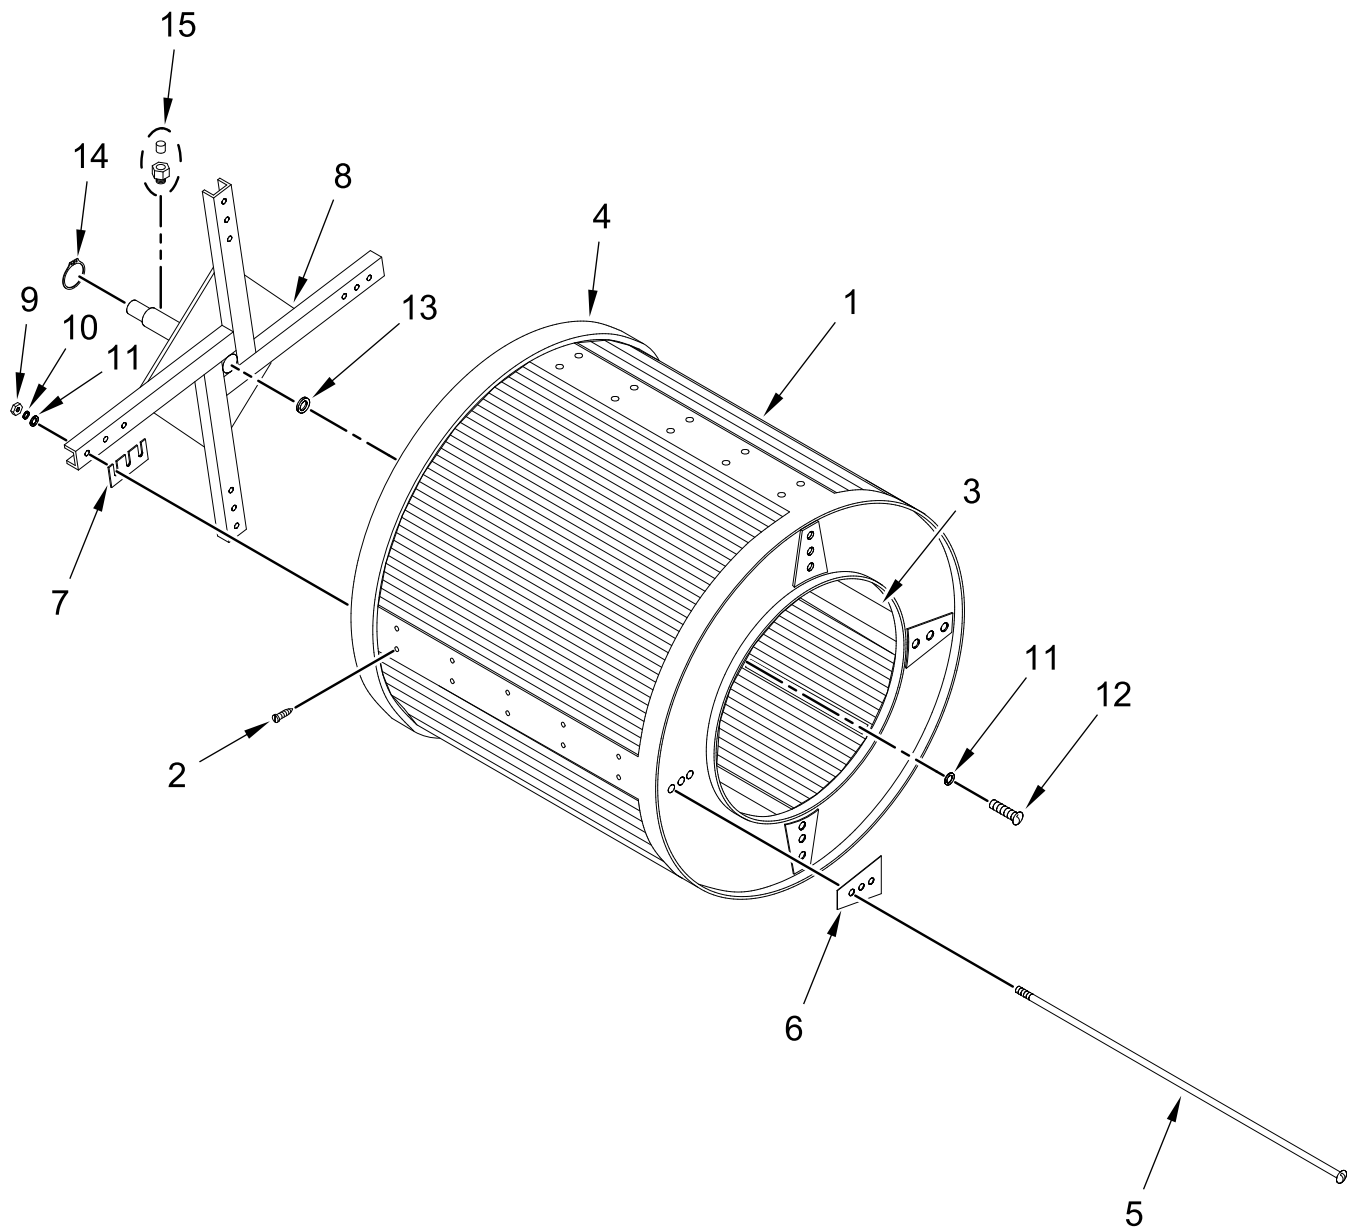

TUMBLER / SUPPORT ASSEMBLIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR820979	Tumbler ONLY without Felt Collar	5	WFR100910	Tie Rod 1/2-13 x 44 in	12	WFR150407	Socket Button Head Screw 5/16-18 x 3/4 in
	WFR821795	Tumbler and Support Assembly Complete	6	WFR332139	Tumbler Reinforcing Plate ONLY	13	WFR115986	Felt Tumbler Pad
2	WFR150309	Screw 10-16 x 1/2 in (Hex Head TEK Crimpitite®)	7	WFR332177	Tumbler Shims 19 Gauge	14	WFR100810	Retaining Ring 3-1/8 in
3	WFR332140	Tumbler Rib ONLY	8	WFR881555	Tumbler Support ONLY with Rotational Sensor Option	15	WFR881619	Rotational Sensor Magnet Assembly
4	WFR116007	Felt Collar 160-3/4 x 2-1/2 x 1/8 in	9	WFR152011	Nut 1/2-13			
	WFR401010	Adhesive for Felt Collar (5 oz. tube)	10	WFR153026	Lock Washer 1/2 in			
			11	WFR153011	Flat Washer 9/16 in			


LINT DRAWER ASSEMBLIES

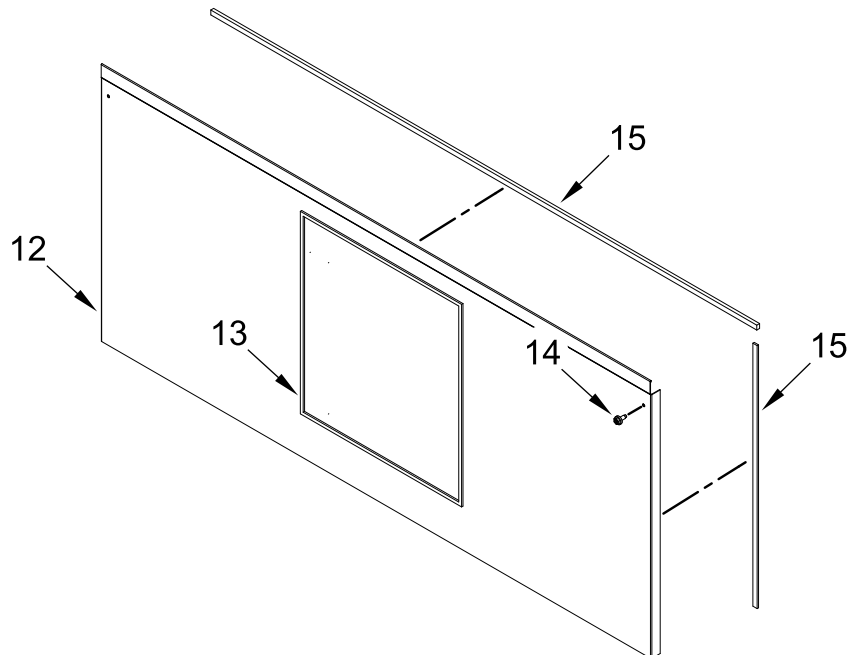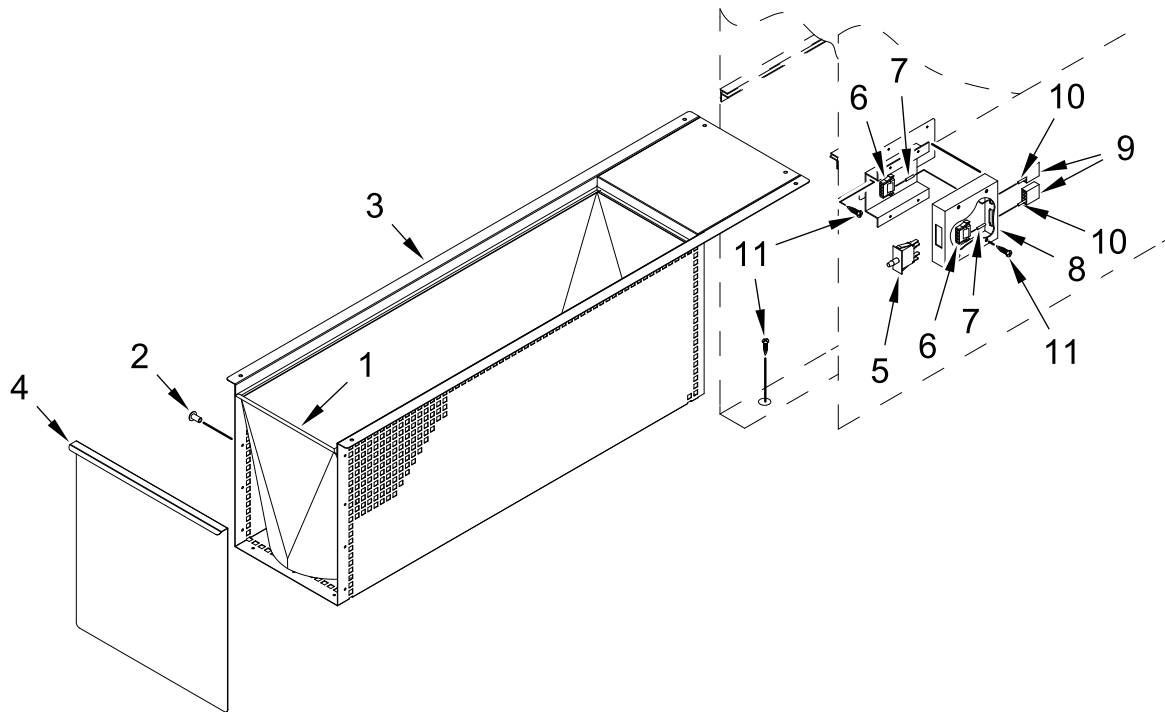

LINT DRAWER ASSEMBLIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR108220	Lint Bag	8	WFR800478	Lint Drawer Switch Box Assembly Complete	14	WFR150309	Screw 10-16 x 1/2 in (Hex Head TEK Crimptite®)
2	WFR154211	Rivet 5/32 in						
3	WFR850958	Lint Basket	9	WFR122604	4 Pin Connector	15	WFR117604	Foam Tape (When Ordering Specify Length, sold by the inch)
4	WFR850954	Lint Drawer Handle	10	WFR122700	Male Crimp Pin			
	WFR850959	Lint Drawer Assembly	11	WFR150301	Screw 8-18 x 7/16 in			
5	WFR122116	Lint Door Switch	12	WFR820945	Lint Door Assembly			
6	WFR122605	4 Pin Connector	13	WFR117607	Foam Tape (When Ordering Specify Length)			
7	WFR122701	Female Crimp Socket						
	WFR122801	Pin / Socket Extraction Tool (Not Illustrated)						


IDLER BEARING ASSEMBLY

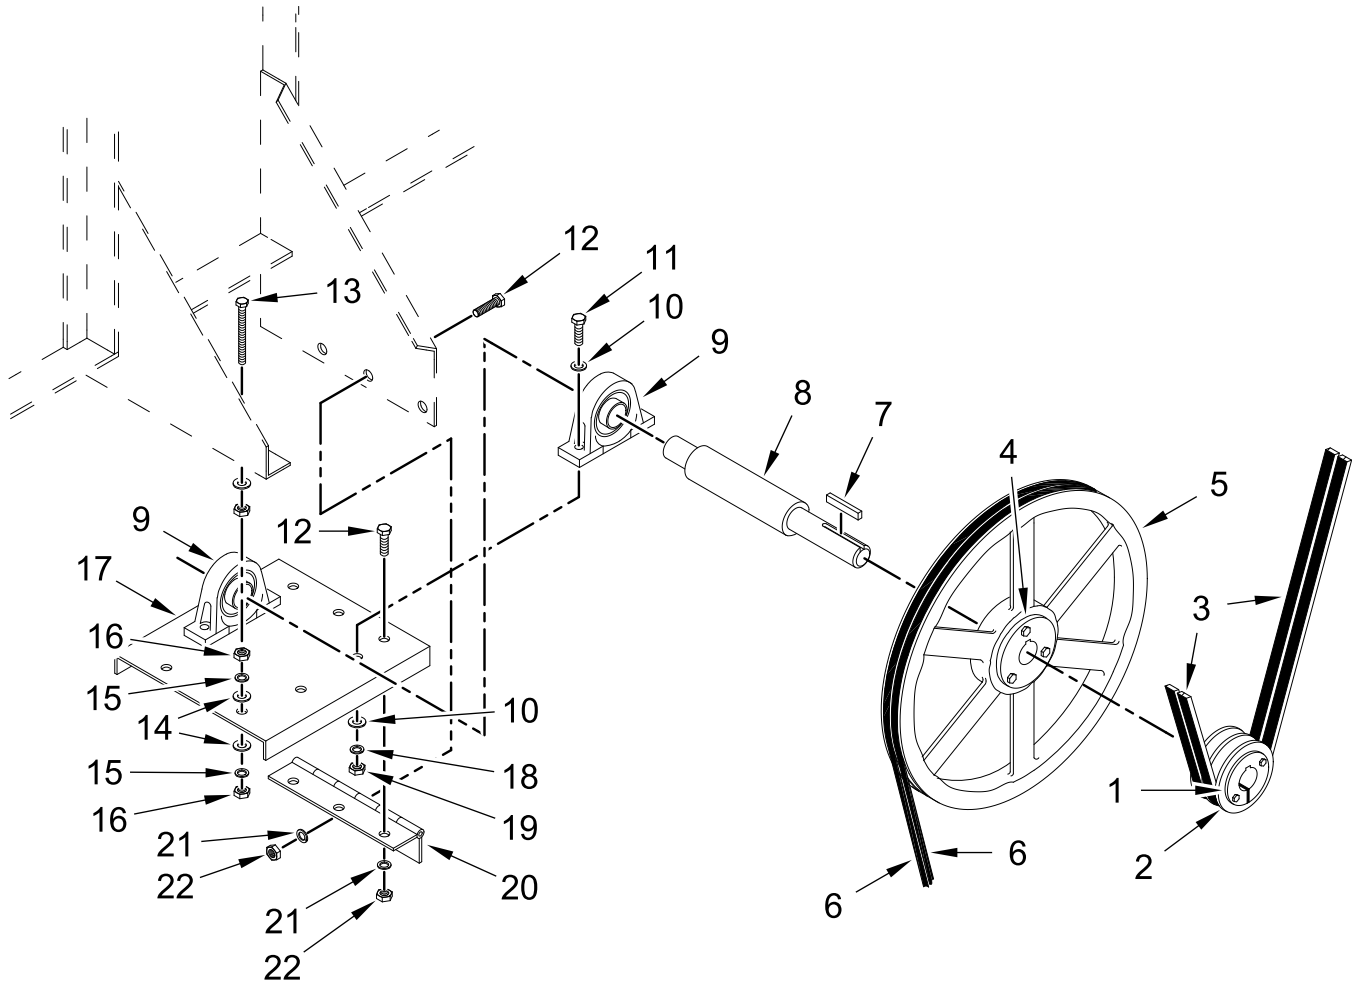

IDLER BEARING ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR101152	Bushing with Setscrew SH x 1-3/8 in	9	WFR100222	Pillow Block Bearing ONLY 1-3/8 in	17	WFR332151	Idler Bearing Mounting ONLY
2	WFR101143	Pulley 2 Groove x 3.8 in Pitch Dia. x 4.15 OD	10	WFR153011	Flat Washer 9/16 in		WFR820932	Idler Assembly Complete
3	WFR100137	Belt AP-91	11	WFR150606	Tap Bolt 1/2-13 x 2 in	18	WFR153026	Lock Washer 1/2 in
4	WFR101184	Bushing with Setscrew SK x 1-3/8 in	12	WFR150501	Tap Bolt 5/16-18 x 3/4 in	19	WFR152011	Nut 1/2-13
5	WFR100102	V-Belt 3V x 740 (Cogged)	13	WFR152034	Tap Bolt 3/8-16 x 3-1/2 in	20	WFR103005	Idler Adjustment Hinge ONLY
6	WFR101112	Pulley 19 in	14	WFR153004	Washer 3/8 x 1 in	21	WFR153002	Split Lock Washer 5/16 in
7	WFR100715	Key 1/4 x 1/4 x 4 5/8 in	15	WFR152005	Nut 3/8-16 in	22	WFR152004	Nut 5/16-18
8	WFR332152	Idler Shaft ONLY 1-3/8 in	16	WFR153005	Split Lock Washer 3/8 in			


TUMBLER BEARING MOUNT ASSEMBLY

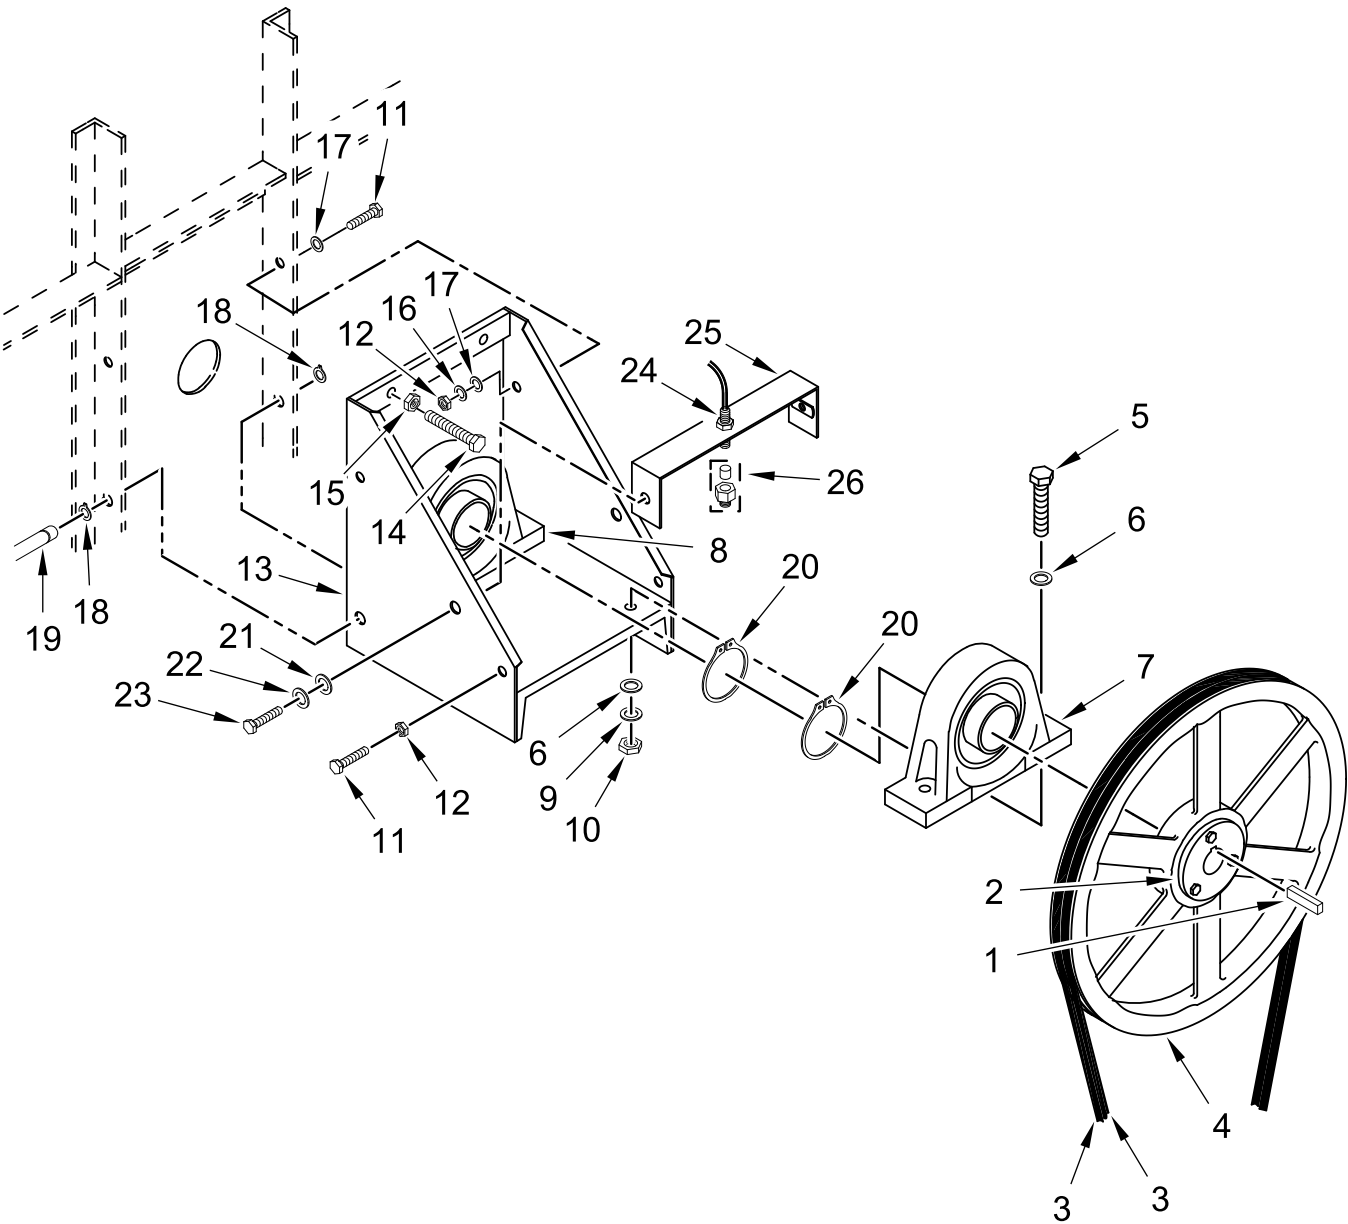

TUMBLER BEARING MOUNT ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR100703	Key 1/2 x 1/2 x 2 in	11	WFR150600	Bolt 3/8-16 x 1 1/2 in	22	WFR153007	Split Lock Washer 1/4 in
2	WFR101217	Bushing with Setscrew SF x 2-1/2	12	WFR152005	Nut 3/8-16 in	23	WFR150512	Hex Head Machine Bolt 1/4-20 x 1/2 in
3	WFR100137	Belt AP-91	13	WFR821175	Tumbler Bearing Mount ONLY	24	WFR822735	Rotational Sensor Assembly
4	WFR101182	Pulley 25 in	14	WFR150604	Bolt 1/2-20 x 3 in	25	WFR820997	Rotational Sensor Mounting Bracket
5	WFR150602	Hex Head Machine Bolt 5/8-11 x 3 in	15	WFR152012	Nut 1/2-20 in	26	WFR881619	Rotational Sensor Magnet Assembly
6	WFR153016	Flat Washer 5/8 in	16	WFR153005	Split Lock Washer 3/8 in			
7	WFR881775	Pillow Block Bearing Kit 2-1/2 in	17	WFR153004	Washer 3/8 x 1 in			
8	WFR880883	Pillow Block Bearing Kit 3-1/8 in	18	WFR100801	Retaining Ring 5/8 in			
9	WFR153015	Split Lock Washer 5/8 in	19	WFR332153	Hinge Pin 5/8 in			
10	WFR152010	Hex Nut 5/8-11 in	20	WFR100810	Retaining Ring 3-1/8 in			
			21	WFR153018	Flat Washer 1/4 in			


TUMBLER MOTOR MOUNT ASSEMBLY

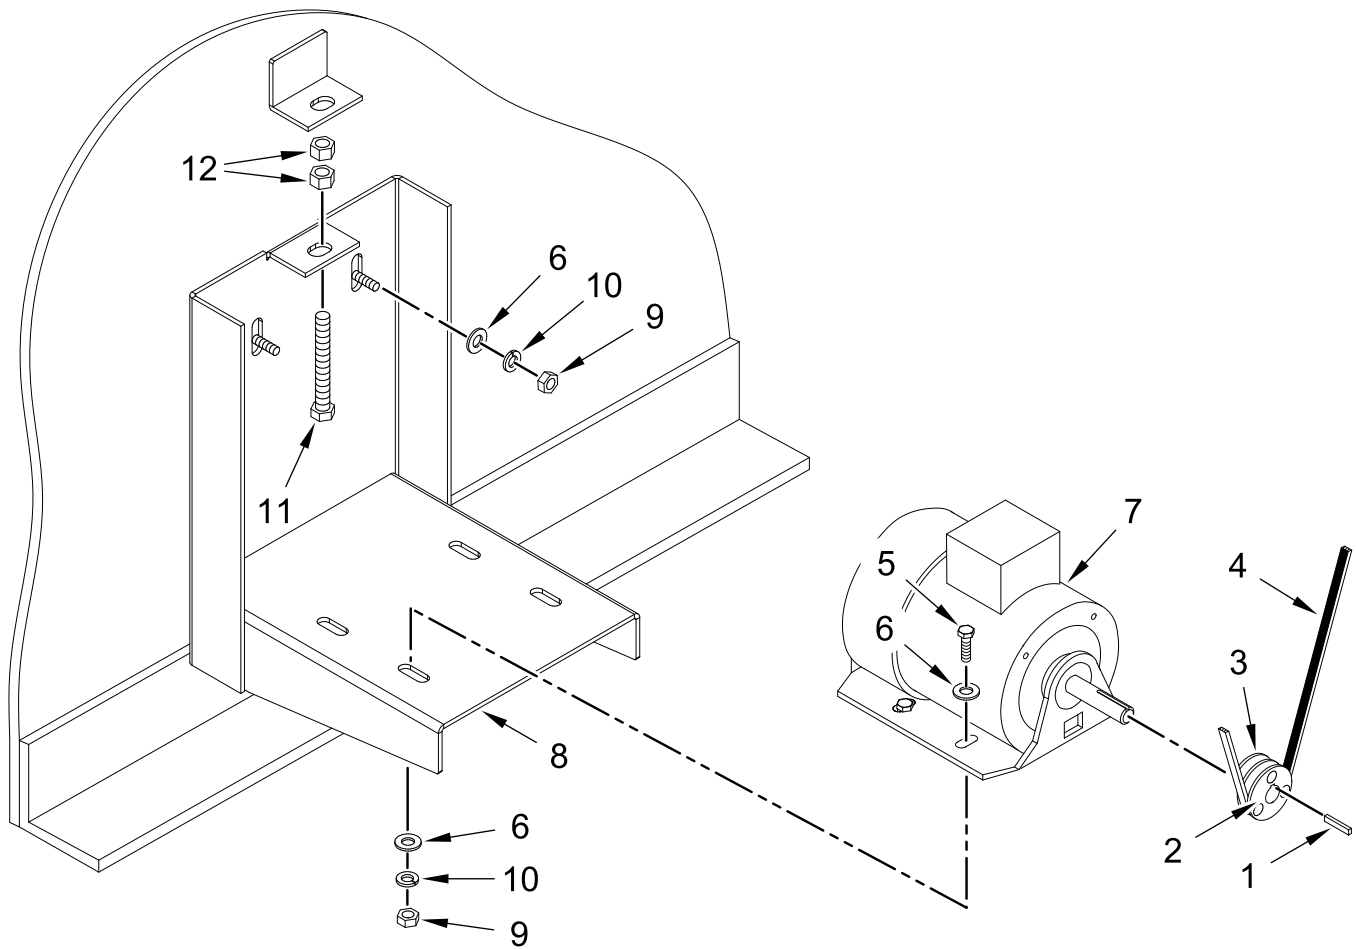

TUMBLER MOTOR MOUNT ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR100705	Key 3/16 x 3/16 x 1 3/8 in	7	WFR181204	Motor 1Hp 3Ph 50/60Hz	11	WFR150619	Hex Head Machine Bolt 3/8-16 x 3 in
2	WFR101121	Bushing with Set Screw	8	WFR800952	Tumbler Motor Mount ONLY	12	WFR152005	Nut 3/8-16 in
3	WFR101114	Pulley 2.65 in		WFR821839	Motor Mount Assembly Complete			
4	WFR100102	V-Belt 3V x 740 (Cogged)	9	WFR152004	Nut 5/16-18			
5	WFR150501	Tap Bolt 5/16-18 x 3/4 in	10	WFR153002	Split Lock Washer 5/16 in			
6	WFR153001	Washer 5/16 in						


BLOWER MOTOR MOUNT ASSEMBLY

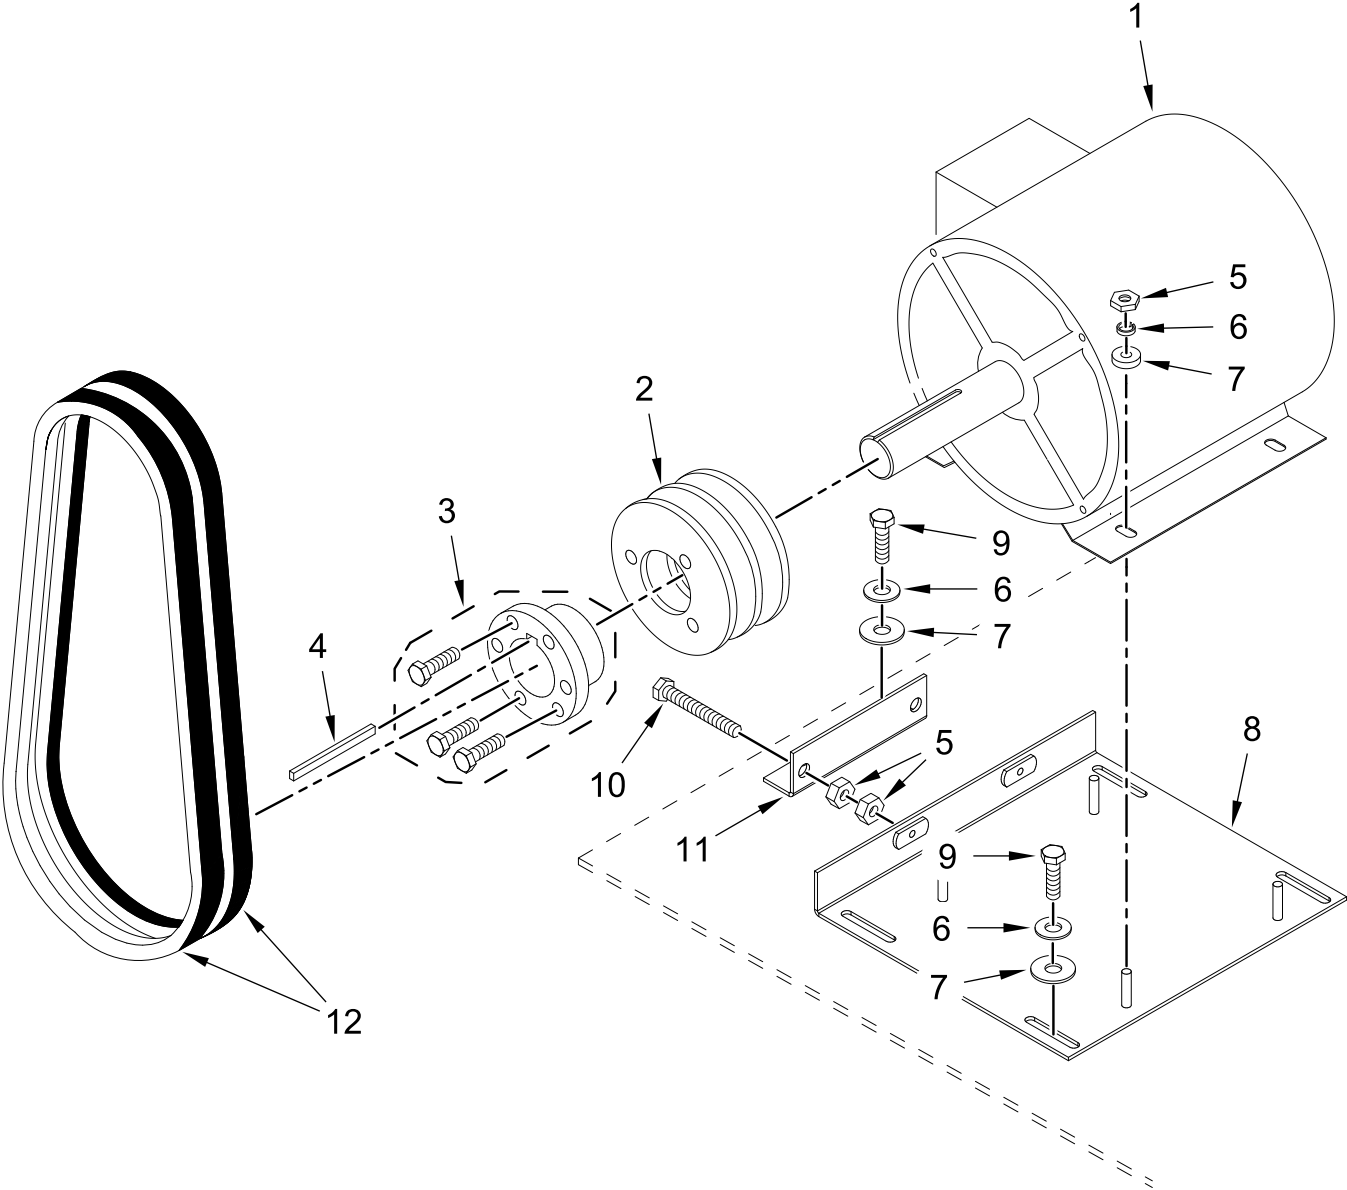

BLOWER MOTOR MOUNT ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR181149	Motor 7.5Hp 208-230/460V 60Hz	6	WFR153002	Split Lock Washer 5/16 in	11	WFR332322	Motor Mount Adjustment Angle ONLY
2	WFR101148	Pulley SB x 4.0 in	7	WFR153001	Washer 5/16 in	12	WFR100128	Belt, Cogged BX-50
3	WFR101152	Bushing with Setscrew SH x 1-3/8 in	8	WFR821091	Motor Mount Adjustment Plate ONLY			
4	WFR100706	Key 5/16 x 5/16 x 1-3/8 in	9	WFR150501	Tap Bolt 5/16-18 x 3/4 in			
5	WFR152004	Nut 5/16-18	10	WFR150503	Bolt 5/16-18 x 2 in			


IMPELLER SHAFT MOUNT ASSEMBLY

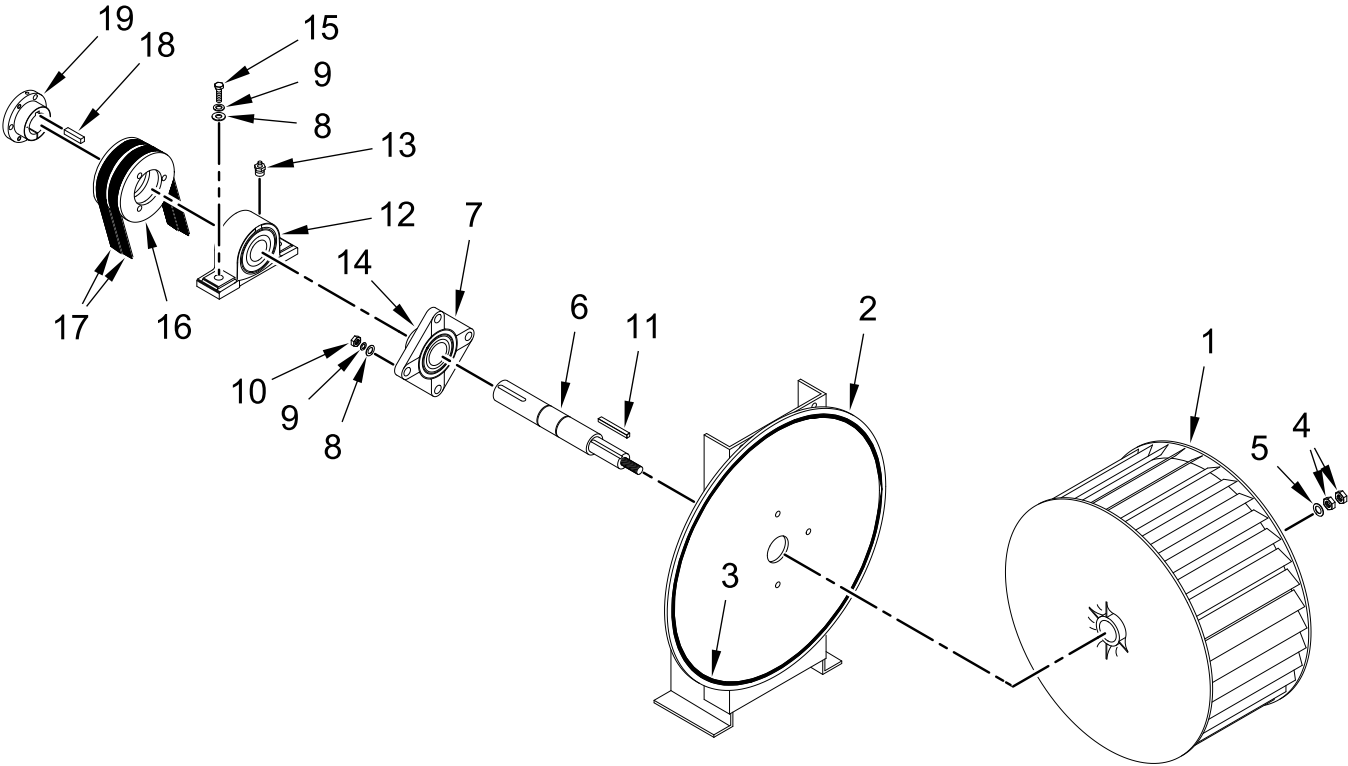

IMPELLER SHAFT MOUNT ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR100612	Impeller 15 in Dia. 1-1/4 in Bore	7	WFR881061	Flange Bearing 1-3/8 in (includes Setscrews and Grease Fitting)	14	WFR829120	Set Screws 5/16-24 x 3/8 in (2 pcs)
2	WFR821073	Impeller Shaft Mount ONLY	8	WFR153004	Washer 3/8 x 1 in	15	WFR150600	Bolt 3/8-16 x 1 1/2 in
	WFR821078	Impeller Shaft Mount Assembly Complete	9	WFR153005	Split Lock Washer 3/8 in	16	WFR101177	Pulley 2B x 5.8 in
3	WFR117604	Foam Tape (When Ordering Specify Length, sold by the inch)	10	WFR152005	Nut 3/8-16 in	17	WFR100128	Belt, Cogged BX-50
4	WFR152006	Nut 1/2-20	11	WFR100704	Key 1/4 x 1/4 x 1-3/4 in	18	WFR100706	Key 5/16 x 5/16 x 1-3/8 in
5	WFR153065	Washer 1-1/2 x .505 x .116 in	12	WFR100222	Pillow Block Bearing ONLY 1-3/8 in	19	WFR101194	Bushing with Setscrew SDS x 1-3/8 in
6	WFR332280	Impeller, Shaft ONLY	13	WFR170512	Grease Fitting 1/8-27 ONLY			


SENSOR BRACKET ASSEMBLY

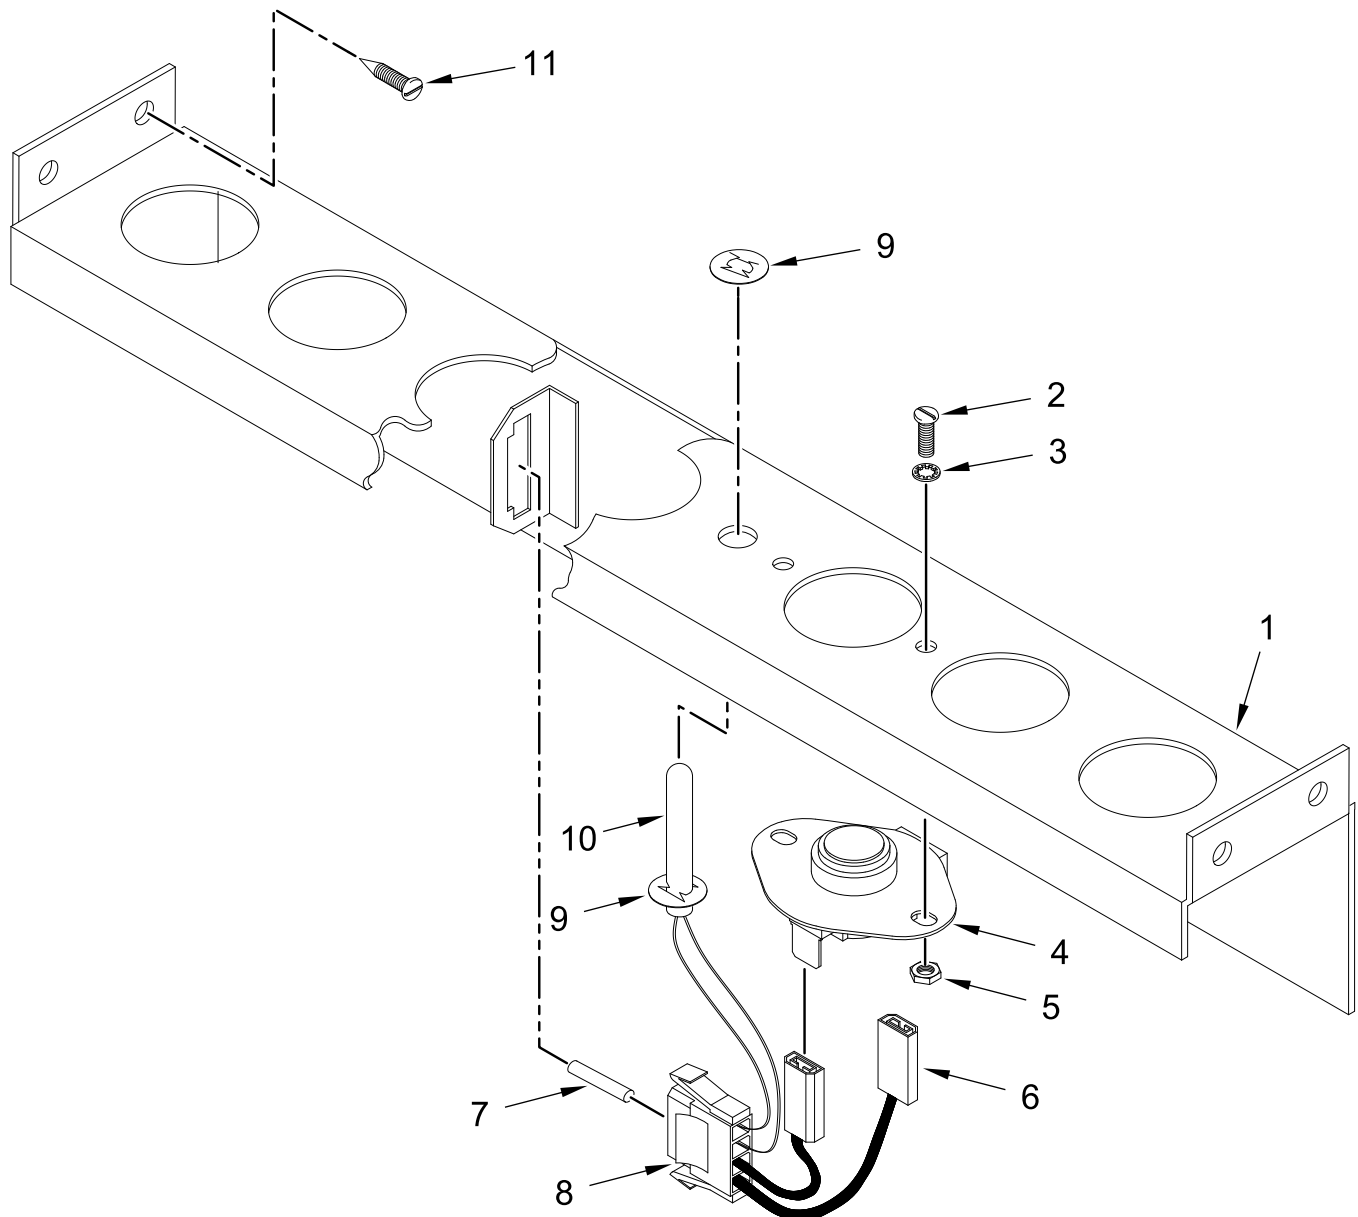

SENSOR BRACKET ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR815931	Temperature Sensor Probe Assembly Complete	5	WFR152000	Nut 6-32	9	WFR154007	Push On Fastener 1/4 in
	WFR820967	Temperature Sensor Bracket ONLY	6	WFR121028	Insulated Female Terminal	10	WFR880251	Temperature Sensor Probe Assembly
2	WFR150005	Screw 6-32 x 1/4 in	7	WFR122701	Female Crimp Socket	11	WFR150301	Screw 8-18 x 7/16 in
3	WFR153010	Lock Washer #6		WFR122801	Pin / Socket Extraction Tool (Not Illustrated)			
4	WFR130103	Hi-Limit Thermostat 225°	8	WFR122605	4 Pin Connector			


DIRECT SPARK IGNITION BURNER ASSEMBLY

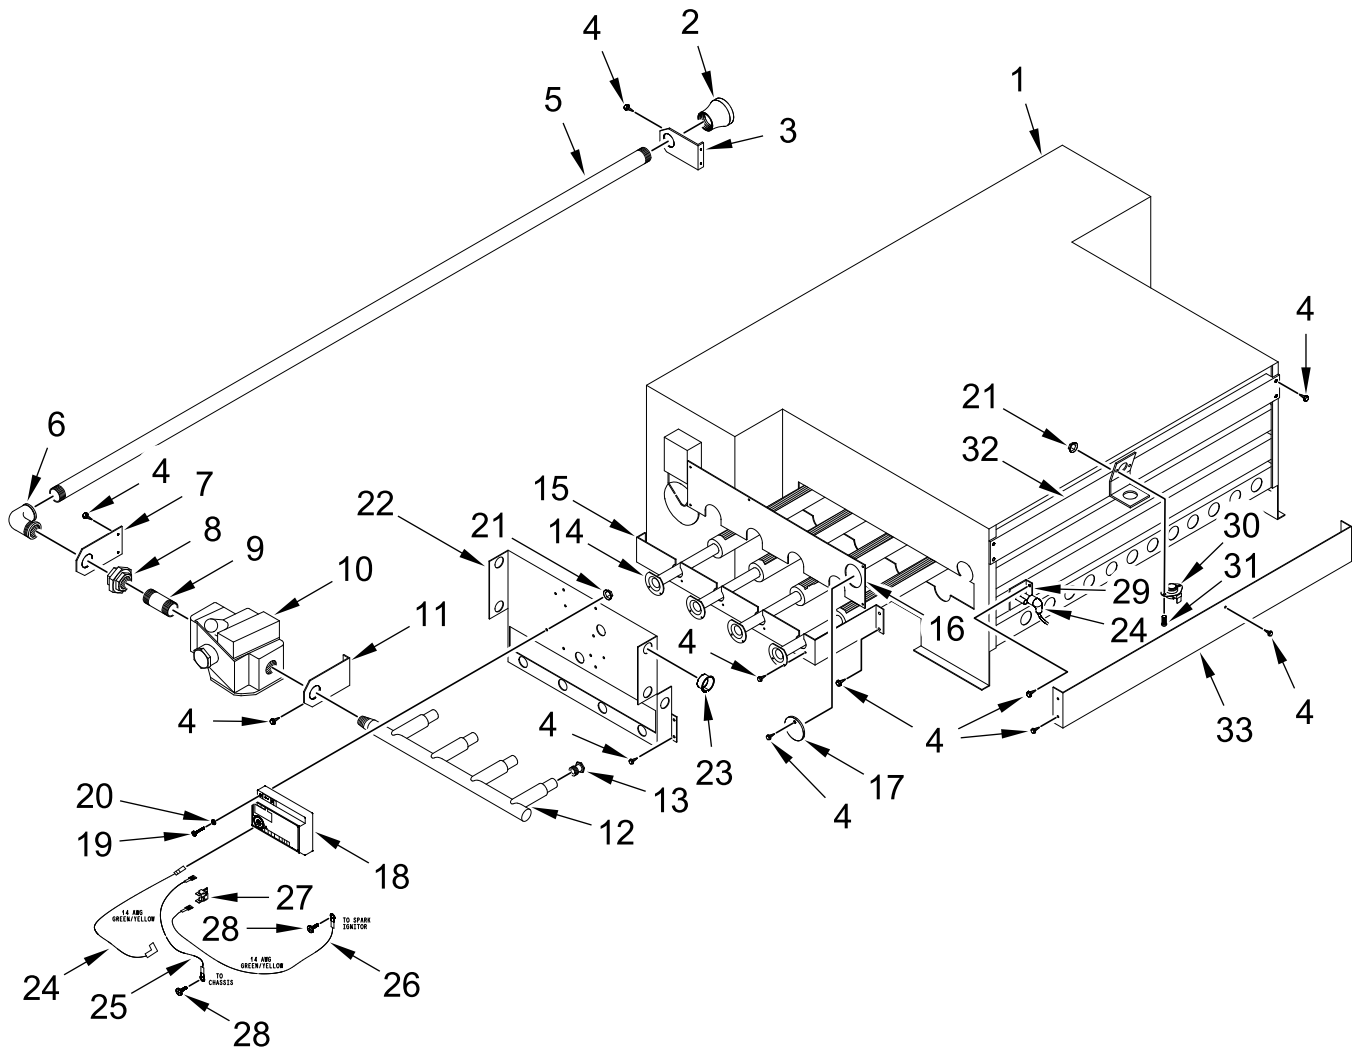

DIRECT SPARK IGNITION BURNER ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR820904	Burner Box ONLY	13	WFR140839	Burner Orifice #2	23	WFR121300	Open/Closed Bushing
	WFR835037	Direct Spark Ignition Burner Assembly Complete		WFR140820	Burner Orifice #29	24	WFR829999	High Voltage Wire with 1/4 in. Spade Connection
2	WFR142929	Reducing Coupling 1-1/2 to 1 in		WFR880978	Liquid Propane Conversion Kit	25	WFR822513	Ground Wire
3	WFR332117	Pipe Bracket	14	WFR141136	Burner Tube	26	WFR822432	Ignition Ground Wire
4	WFR150309	Screw 10-16 x 1/2 in (Hex Head TEK Crimptite®)	15	WFR332121	Bracket, Burner Tube (Lower)	27	WFR121007	DSI Adapter
5	WFR142583	Black Pipe 1 x 40 in	16	WFR332113	Bracket, Burner Tube (Upper)	28	WFR120910	Screw 10-32 x 3/8 in
6	WFR142942	Black Elbow 1 x 1 in	17	WFR331290	Ignition Sight Hole Disc	29	WFR128915	Ignitor Probe ONLY
7	WFR332487	Bracket, Pipe (Flat)	18	WFR128937	Direct Spark Ignition Module (3 Tries)	30	WFR130201	Thermostat Hi-Limit Reset Switch 330°
8	WFR142602	Black Union 1 in	19	WFR150002	Screw 6-32 x 1 in	31	WFR150005	Screw 6-32 x 1/4 in
9	WFR142808	Black Pipe 1 x 3 in	20	WFR153017	SAE Washer #6	32	WFR821457	Hi-Limit Mounting Bracket
10	WFR140017	Gas Valve (Natural Gas)	21	WFR151000	Nut 6-32	33	WFR332256	Large Dryer Burner Baffle (LP Models ONLY)
11	WFR332486	Bracket, Pipe	22	WFR390169	Direct Spark Ignition Module Mounting Bracket			
12	WFR141240	Manifold 1 in. (4-port)						


ELECTRICAL PANEL ASSEMBLY

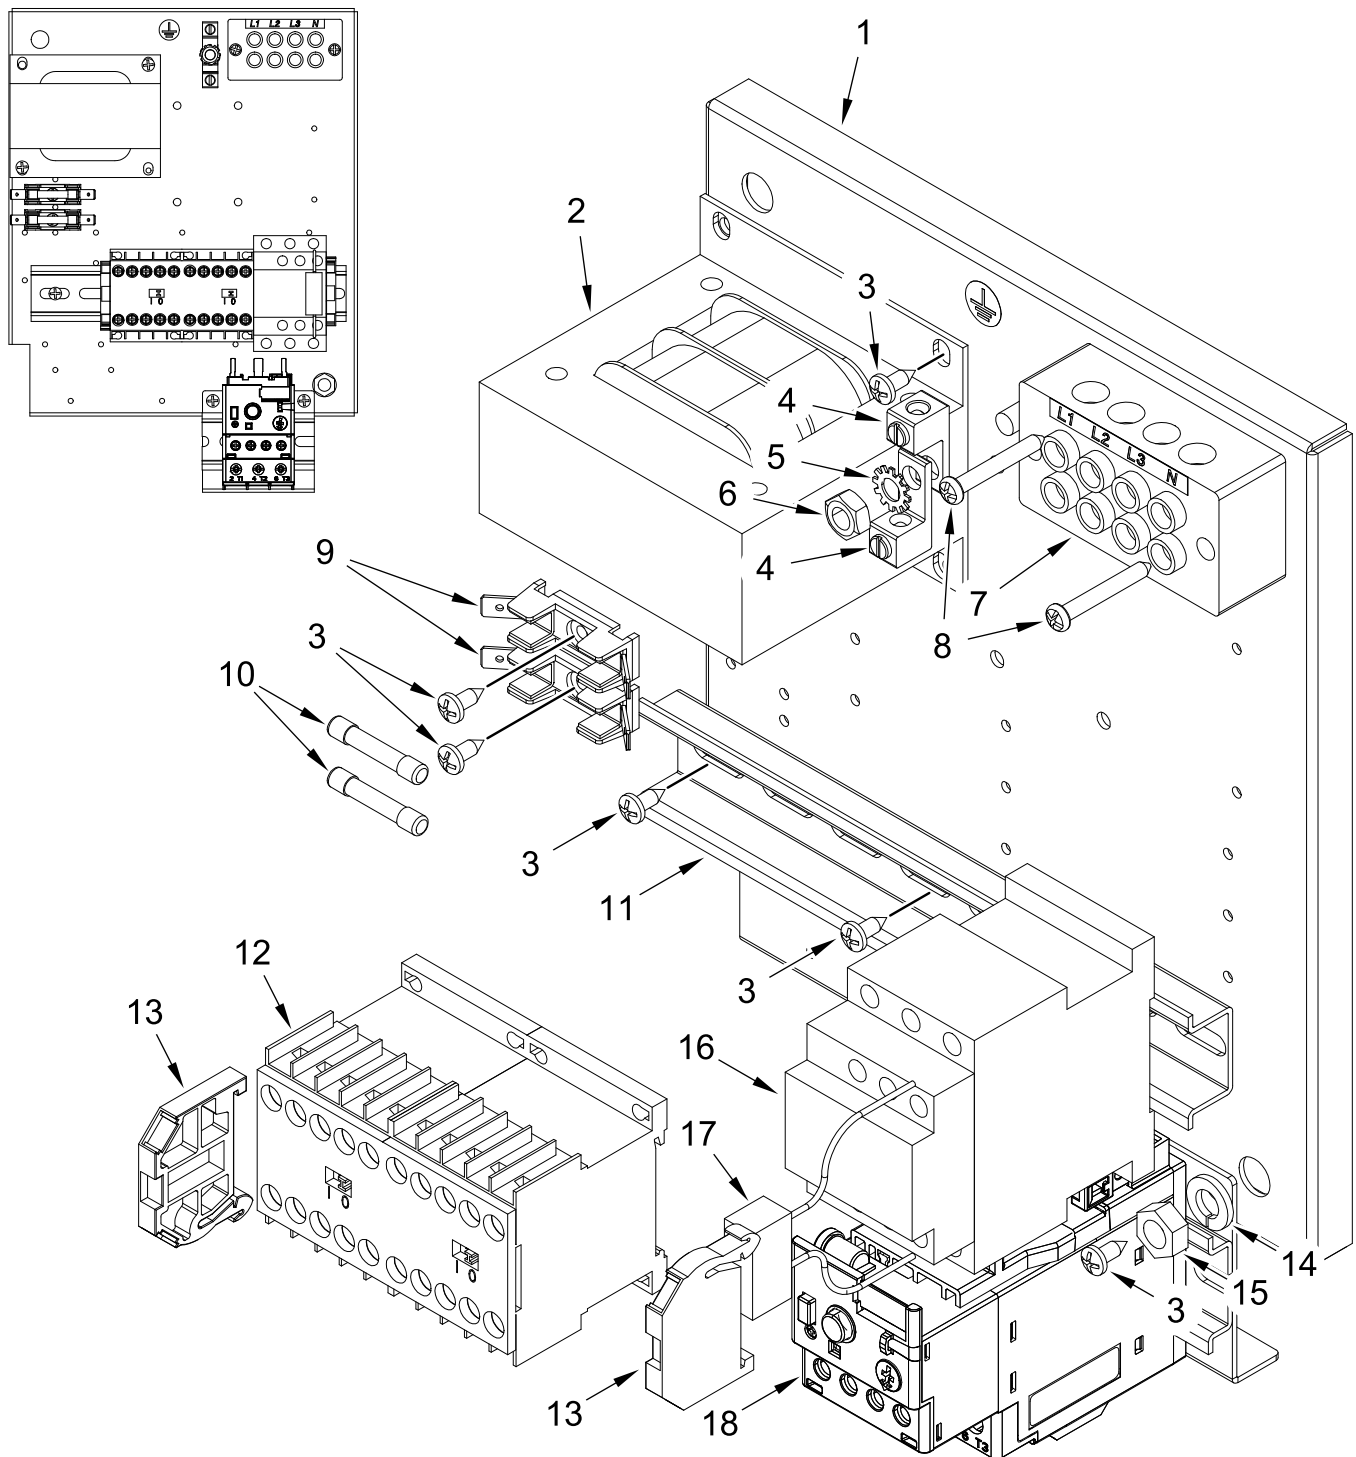

ELECTRICAL PANEL ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR332346	Electric Mounting Plate ONLY	6	WFR152002	Nut 1/4-20	13	WFR120774	End Stop (Rail)
2	WFR822764	Transformer Assembly AC: 120-208-240V 50/60Hz DC: 24V 6.5A 150VA	7	WFR120701	4-Position Terminal Block	14	WFR153002	Split Lock Washer 5/16 in
3	WFR150301	Screw 8-18 x 7/16 in	8	WFR150539	Screw 8 x 1 1/4 in	15	WFR152004	Nut 5/16-18
4	WFR121010	Lug Terminal 14-4 (Ground)	9	WFR136008	Fuse Block	16	WFR131393	Contactors 24v 32A 3PH
5	WFR153021	Washer Serrated 1/4 in	10	WFR136057	Fuse 1/2 Amp (Slo-Blo)	17	WFR137015	Arc Suppressor with Leads
			11	WFR120768	DIN Rail 35 x 15 mm	18	WFR801890	Relay Overload (5.4A - 27A) Assembly Complete
			12	WFR132497	Contactors K-Line Reversing 24V 6A			


PNEUMATIC VALVE ASSEMBLY

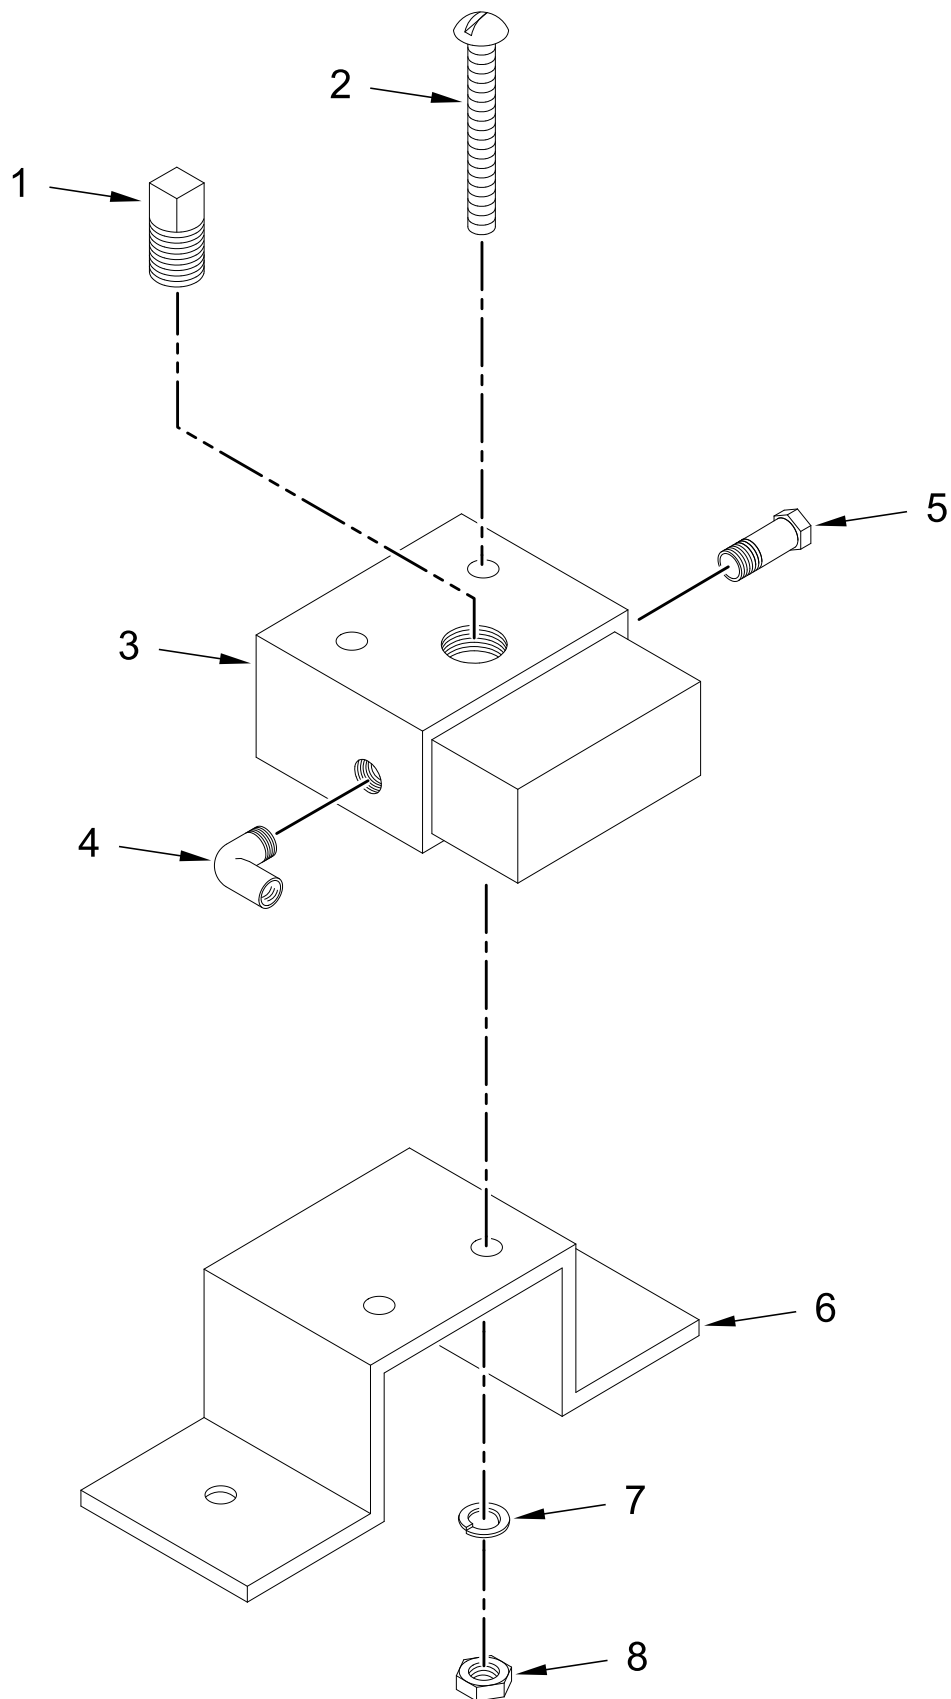

PNEUMATIC VALVE ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR143250	M.P.T. Brass Plug 1/8 in	4	WFR143149	M.P.T. Elbow 1/4 POLY X 1/8 in	7	WFR153010	Lock Washer #6
2	WFR150002	Screw 6-32 x 1 in	5	WFR100472	M.P.T. Connector 1/4 POLY X 1/8 in	8	WFR152000	Nut 6-32
3	WFR100498	Valve, 3-Way 24V	6	WFR330987	Bracket, Damper Valve			
	WFR821105	Pneumatic Valve Assembly Complete						


AIR JET ASSEMBLY

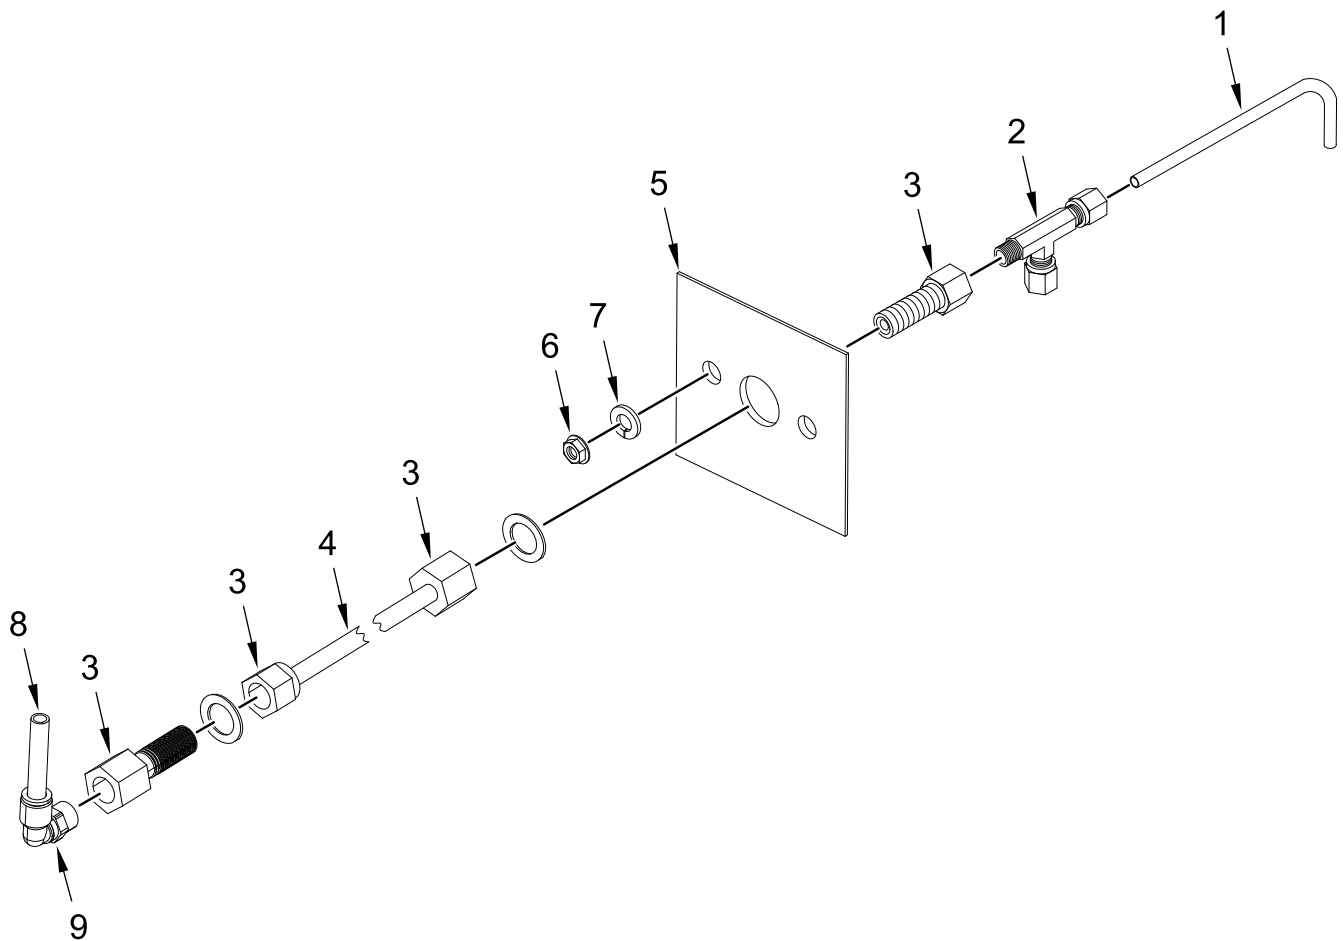

AIR JET ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR332700	Air Jet Tube	5	WFR332531	Air Jet Mounting Plate ONLY	8	WFR143115	Tubing 1/4 in (sold by the foot)
2	WFR143287	M.P.T. Male Tee 1/4 Compression x 1/8 in		WFR821081	Air Jet Assembly Complete	9	WFR143149	M.P.T. Elbow 1/4 POLY X 1/8 in
3	WFR143259	Aluminum Tubing Compression Fitting	6	WFR152002	Nut 1/4-20			
4	WFR143100	Tube, Aluminum 1/4 in	7	WFR153007	Split Lock Washer 1/4 in			


SAIL SWITCH ASSEMBLY

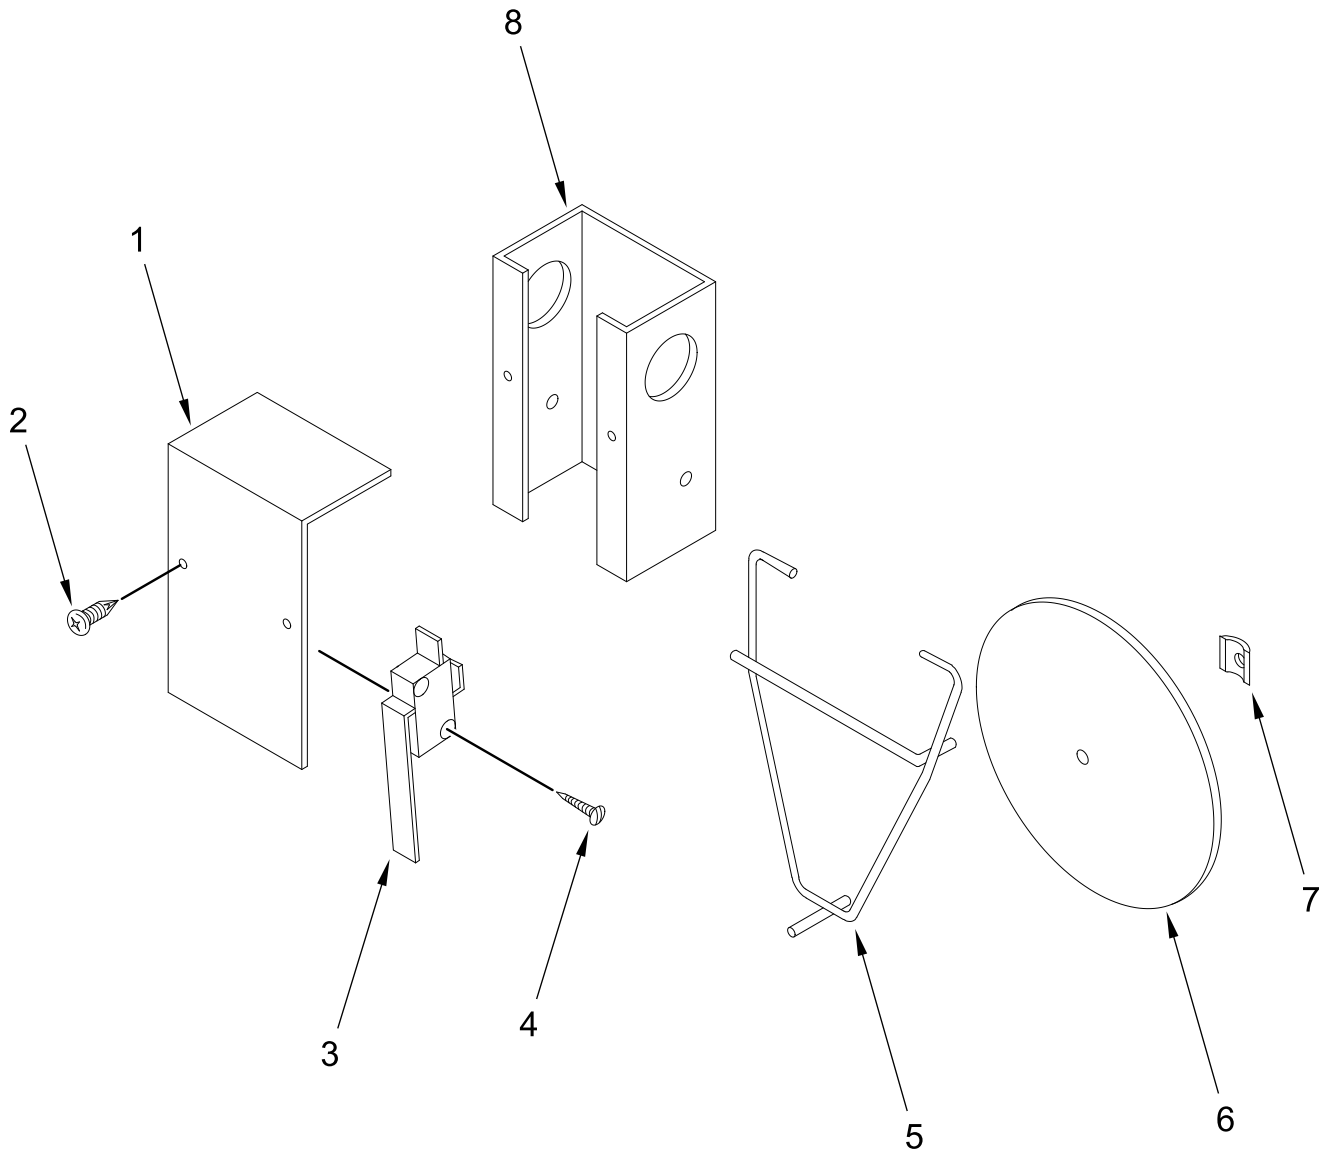

SAIL SWITCH ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR350283	Sail Switch Box Cover and Bracket ONLY	4	WFR150303	Screw #4 x 3/4 in	7	WFR154002	Push-On Fastener 1/8 in
2	WFR150300	Screw 10-16 x 1/2 in (Hex Washer TEK Crimpitite®)	5	WFR105500	Sail Switch Rod Assembly	8	WFR319200	Sail Switch Bracket ONLY
3	WFR122200	Service Switch	6	WFR319202	Sail Switch Damper			


S.A.F.E. SYTEM ASSEMBLY

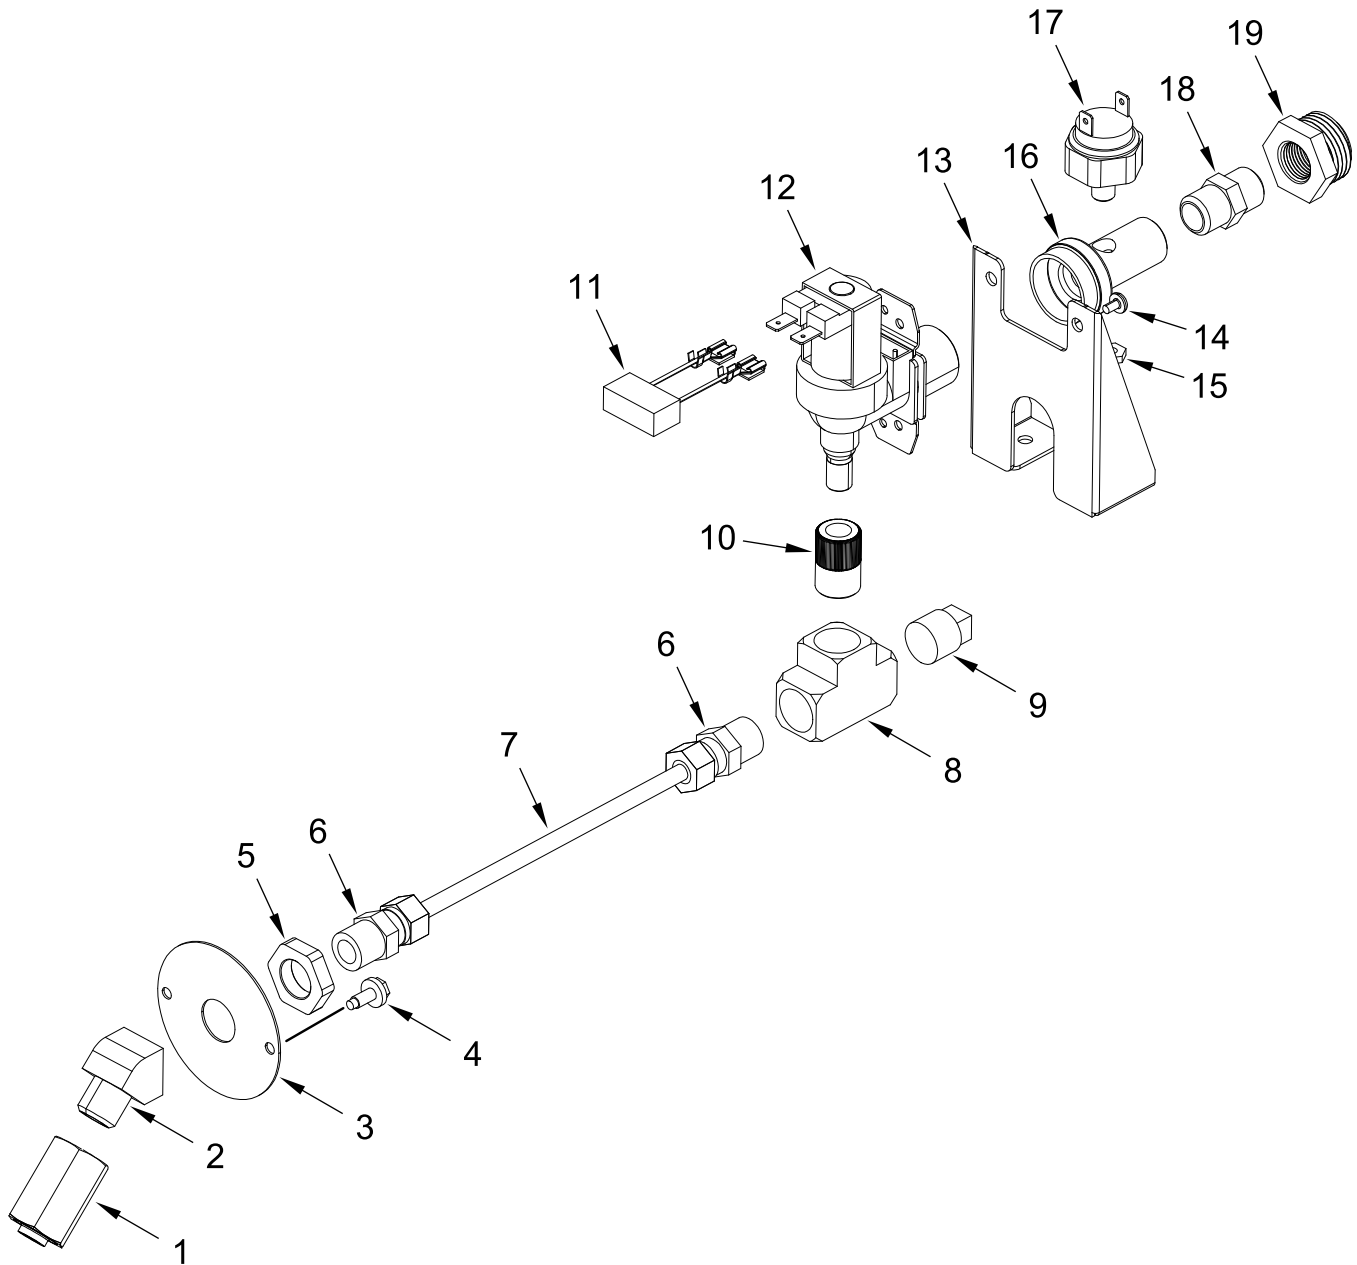

S.A.F.E. SYSTEM ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR143581	S. A. F. E. System Spray Nozzle 3 GPM 3/8 in	7	WFR143108	Stainless Steel Flex Hose 20 in. with 3/8 in. Compression	14	WFR154338	Screw M4 x 6 mm
2	WFR143301	Brass Elbow 3/8 in	8	WFR143220	F.P.T. Brass Tee 3/8 in	15	WFR152001	Nut 8-32 x 3/8 in
3	WFR311588	S.A.F.E. System Sprinkler Head Mounting Plate ONLY	9	WFR143251	Plug 3/8 in	16	WFR143182	Brass Tee 3/4 x 1/8 x 3/8 in
4	WFR150309	Screw 10-16 x 1/2 in (Hex Head TEK Crimptite®)	10	WFR143183	Brass Adaptor 7/16-20 x 3/8 in	17	WFR136987	Water Pressure Switch
5	WFR143303	Brass Lock Nut 3/8 in	11	WFR824081	RC Network Assembly	18	WFR182579	Brass Nipple 3/8 MPT x 3/8 MPT in
6	WFR143208	Brass Connect 3/8 x 3/8 in	12	WFR165119	S. A. F. E. System H2O Valve 24VAC	19	WFR143356	Nylon Adaptor 3/8 x 3/4 in
			13	WFR311587	S.A.F.E. System Valve Bracket			


S.A.F.E. TEMPERATURE PROBE ASSEMBLY

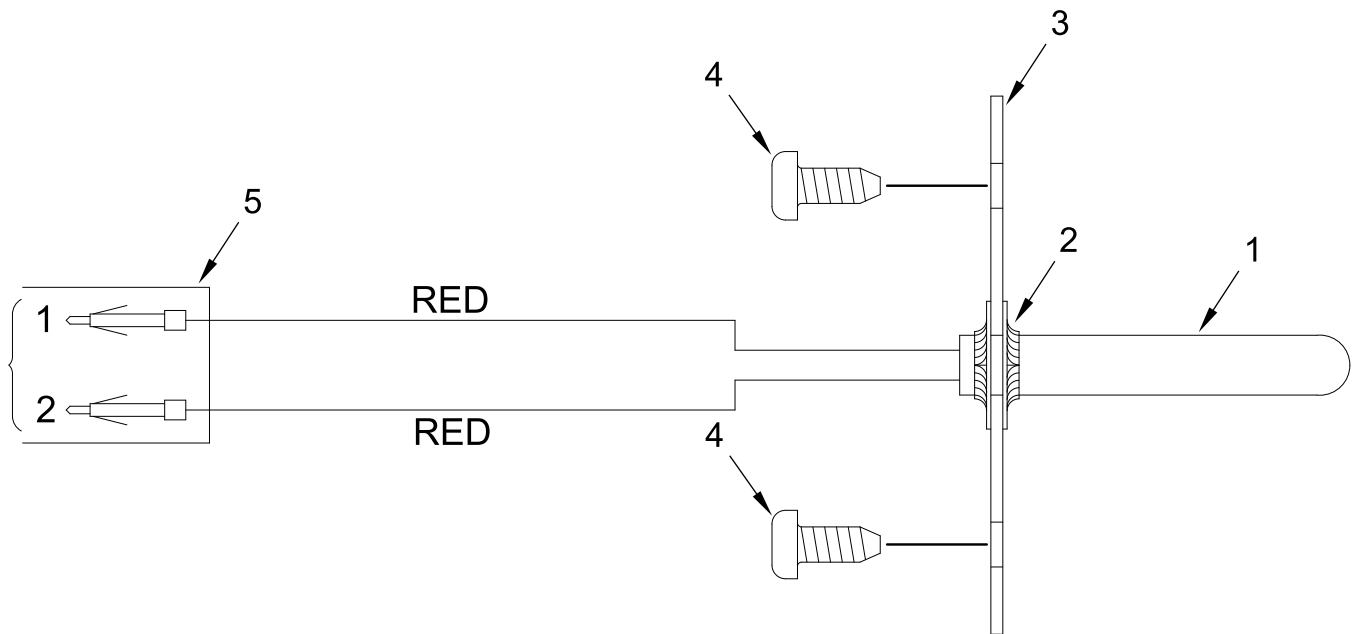

S.A.F.E. TEMPERATURE PROBE ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR822752	S. A. F. E. System Temperature Probe Assembly (includes No(s) 1 through 5)	2	WFR154007	Push On Fastener 1/4 in	4	WFR150301	Screw 8-18 x 7/16 in
			3	WFR390390	Sensor Bracket ONLY	5	WFR122647	Connector ONLY


TOP CONSOLE ASSEMBLY

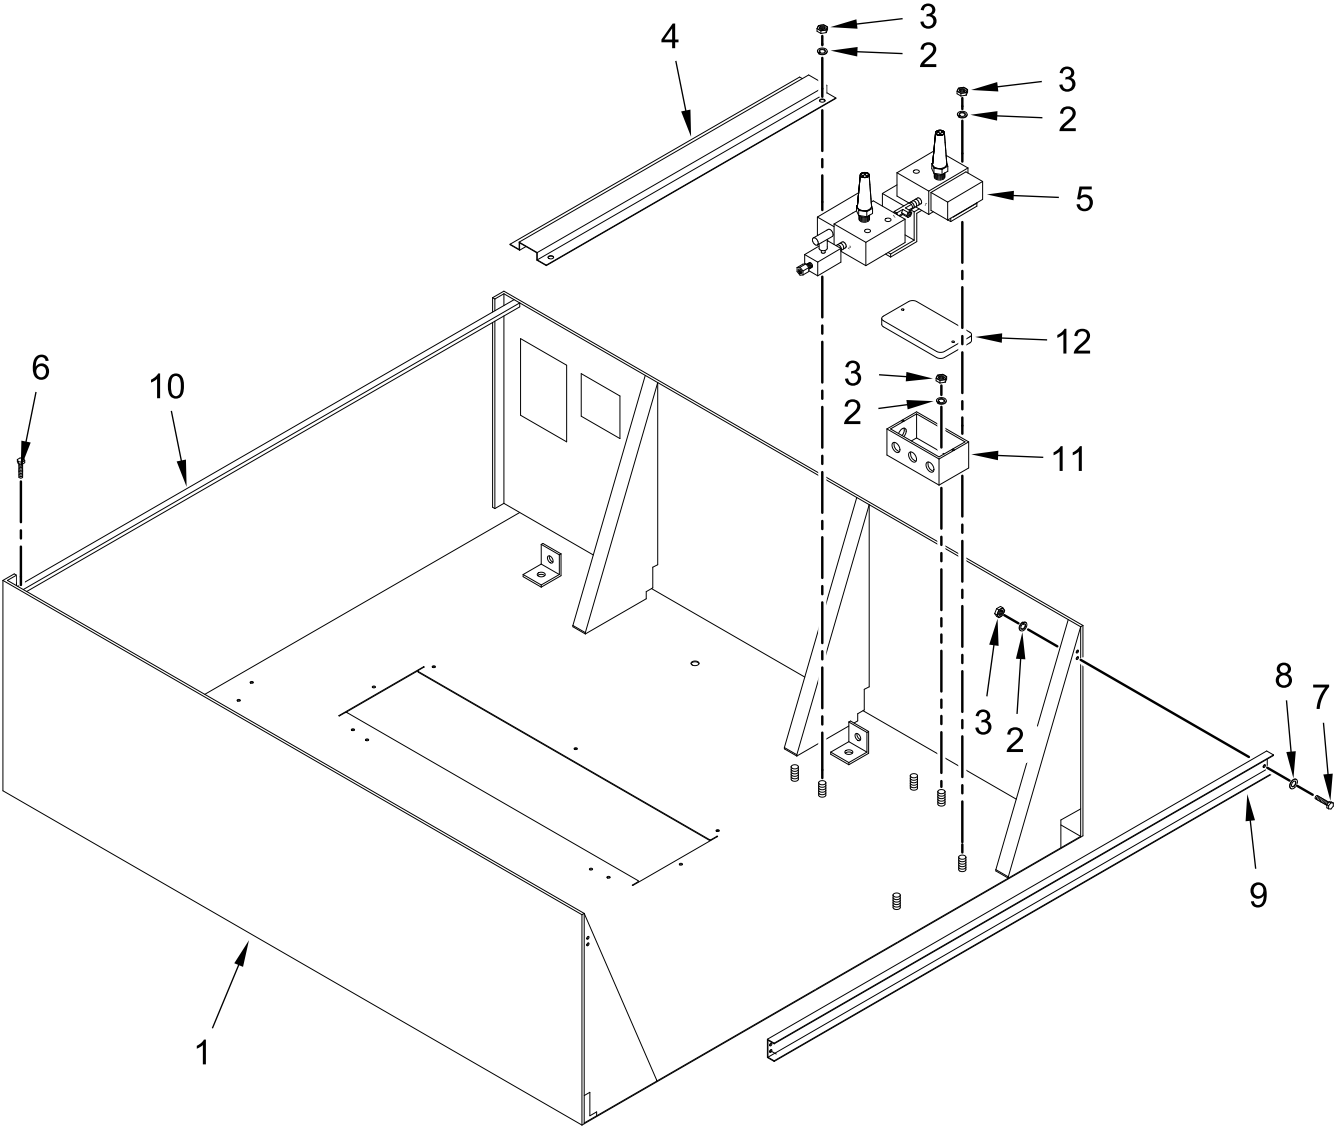

TOP CONSOLE ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR821085	Top Console ONLY	6	WFR150300	Screw 10-16 x 1/2 in (Hex Washer TEK Crimptite®)	10	WFR883866	Control Door Channel
2	WFR153007	Split Lock Washer 1/4 in				11	WFR121104	Junction Box (2 x 4 in) ONLY
3	WFR152005	Nut 3/8-16 in	7	WFR150615	Bolt 1/4-20 x 3/4 in	12	WFR121105	Junction Box Cover ONLY
4	WFR883864	Wire Channel 32 in	8	WFR153018	Flat Washer 1/4 in			
5	WFR821105	Pneumatic Valve Assembly Complete	9	WFR883865	Console Gusset Brace			

BACK GUARD ASSEMBLIES

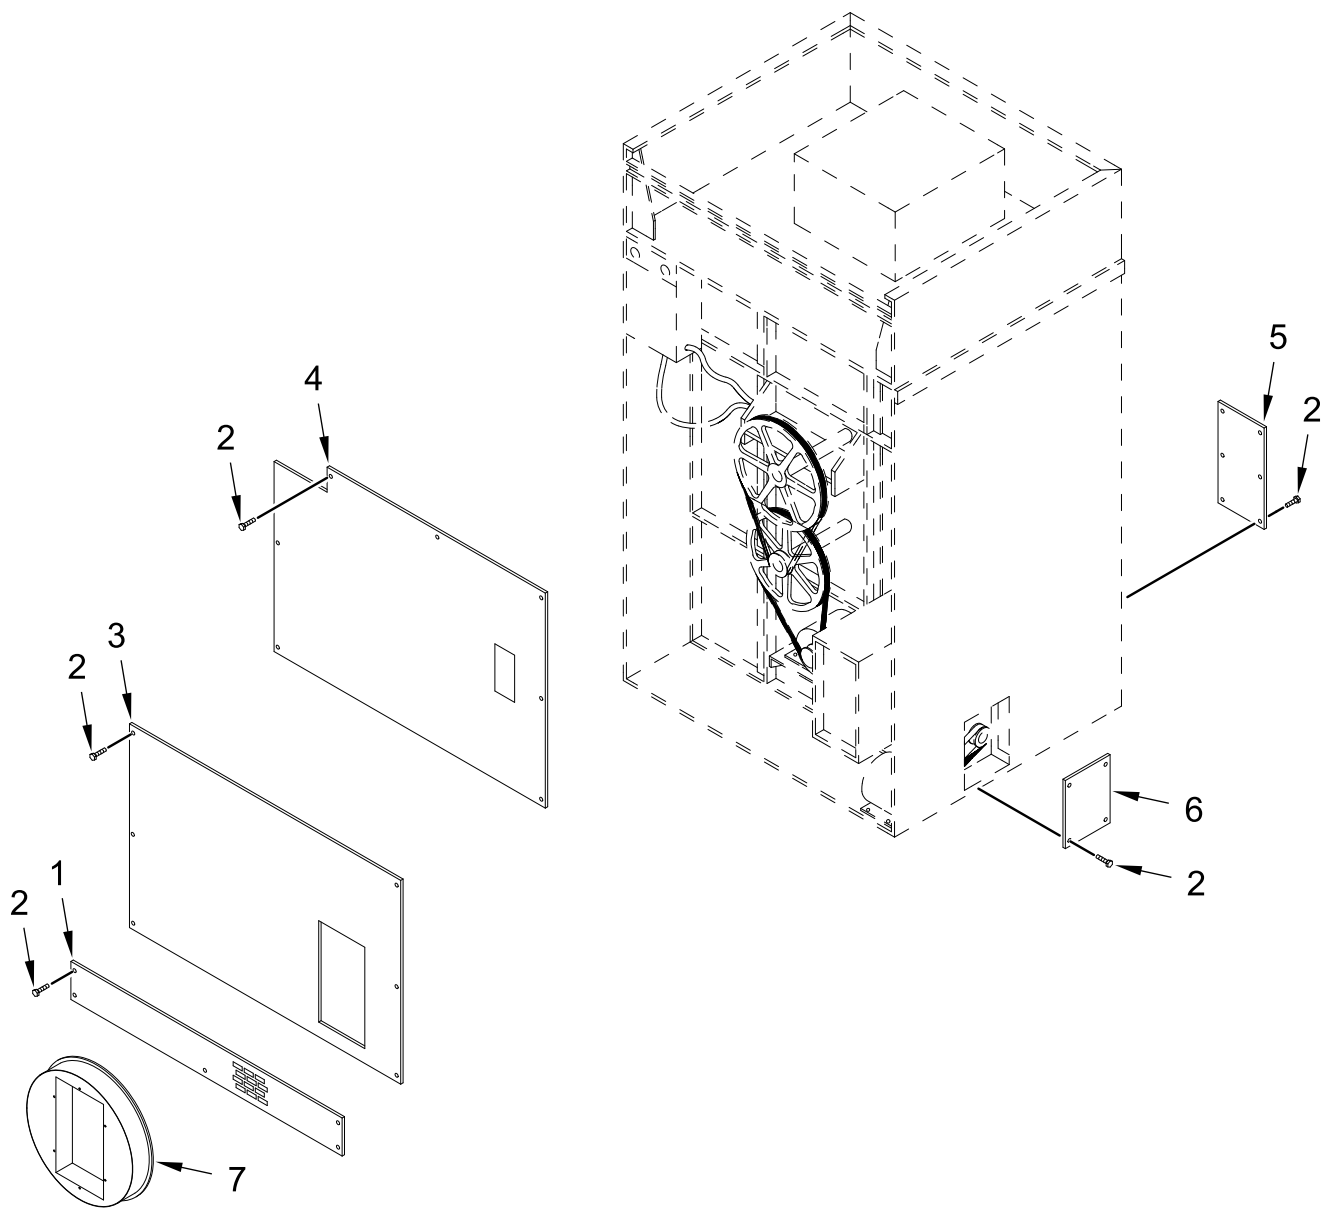

BACK GUARD ASSEMBLIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR332328	Bottom Back Guard	5	WFR332295	Blower Housing Front Access Panel	7	WFR821720	Duct Transition (Square to Round)
2	WFR150301	Screw 8-18 x 7/16 in	6	WFR332309	Side Access Panel		WFR117505	Aluminum Duct Tape (When Ordering Specify length, sold by the inch)
3	WFR821096	Lower Back Guard						
4	WFR821095	Top Back Guard						