



MLG32PDB Parts Manual (ADG-435B)

Series 23 May 2002

For Internal Use Only

**RETAIN THESE INSTRUCTIONS IN A SAFE PLACE
FOR FUTURE REFERENCE**

Whirlpool Corporation
Commercial Laundry
Benton Harbor, MI 49022
1-800-662-3587

Retain This Manual In A Safe Place For Future Reference

This product embodies advanced concepts in engineering, design, and safety. If this product is properly maintained, it will provide many years of safe, efficient, and trouble free operation.

ONLY qualified technicians should service this equipment.

OBSERVE ALL SAFETY PRECAUTIONS displayed on the equipment or specified in the installation manual included with the dryer.

The following “**FOR YOUR SAFETY**” caution must be posted near the dryer in a prominent location.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

POUR VOTRE SÉCURITÉ

Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.

We have tried to make this manual as complete as possible and hope you will find it useful. The manufacturer reserves the right to make changes from time to time, without notice or obligation, in prices, specifications, colors, and material, and to change or discontinue models.

Important

For your convenience, log the following information:

DATE OF PURCHASE _____ MODEL NO. **MLG32PDB**

DISTRIBUTOR'S NAME _____

Serial Number(s) _____

For replacement parts, contact the distributor from which the dryer was purchased or contact:

Whirlpool Corporation
Commercial Laundry
Benton Harbor, MI 49022
1-800-662-3587

The illustrations on the following pages may not depict your particular dryer exactly. The illustrations are a composite of the various dryer models. Be sure to check the descriptions of the parts thoroughly before ordering.


“IMPORTANT NOTE TO PURCHASER”

Information must be obtained from your local gas supplier on the instructions to be followed if the user smells gas. These instructions must be posted in a prominent location near the dryer.

Table of Contents

Control Door Assembly	4
Main Computer / Coin Acceptor Assembly	5
Microprocessor Controller (Computer) Assembly	6
Microprocessor Control Box Assembly	7
Main Door Assembly	8
Upper Front Panel Assembly	9
Lower Front Panel Assembly	10
Main Door Switch Assembly	11
Coin Vault Assembly for Models Mfd. as of July 1, 2002	12
Coin Vault Assembly for Models Mfd. prior to July 1, 2002	13
Lint Door Assembly	14
Lint Coop Assembly	15
Lint Drawer (Basket) Assembly	16
Lint Drawer Switch Assembly	17
Tumbler / Support Assemblies	18
Temperature Sensor Bracket Assembly	19
Tumbler Bearing Assembly	20
Motor Mount Assembly	21
Gas Valve Train Assembly	22
Burner Box / Gas Piping Assemblies	24
Sail Switch Assembly	26
Idler Bearing Assembly	27
Exhaust Ducting Assembly	28
Back Guard Assembly	29


Control Door Assembly

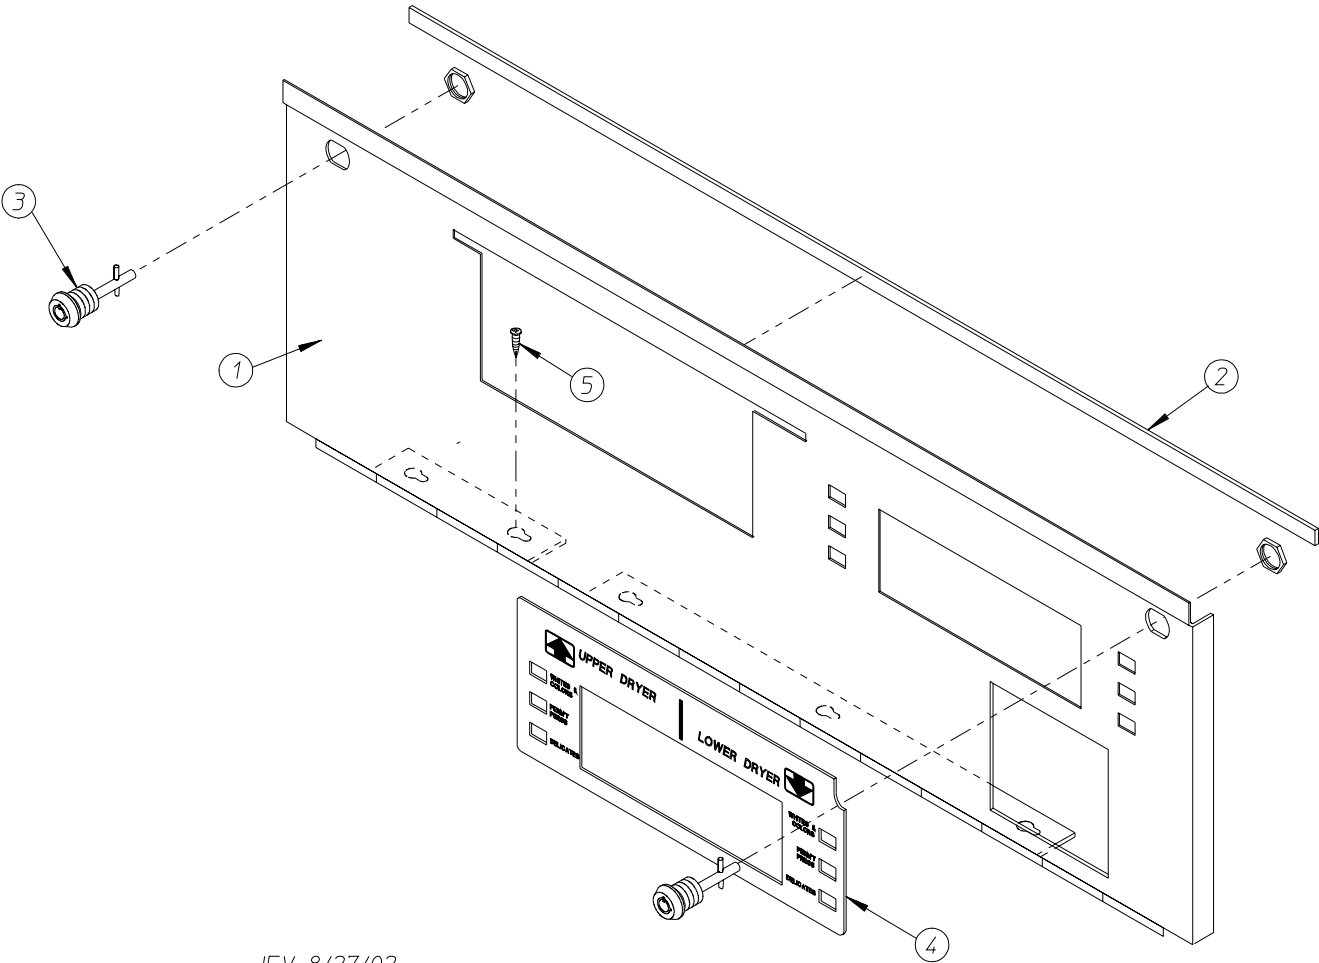

JEV 8/27/02


MAN6251

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883501	1	White Hinged Control Door Assembly (includes illus. nos. 1 and 2)
	883520	1	Bisque Hinged Control Door Assembly (includes illus. nos. 1 and 2)
	883494	1	Stainless Steel Hinged Control Door Assembly (includes illus. nos. 1 and 2)
2	117603	3	1/8" x 9/16" Suppression Tape (sold by the foot)
3	160040	2	Lock ONLY (keyed XX4451)
	160140	1	Key ONLY (keyed XX4451)
4	114075	1	"Maytag Control Display" Label
5	150301	5	#8-18 x 7/16" Phillips Pan Head TEK Screw

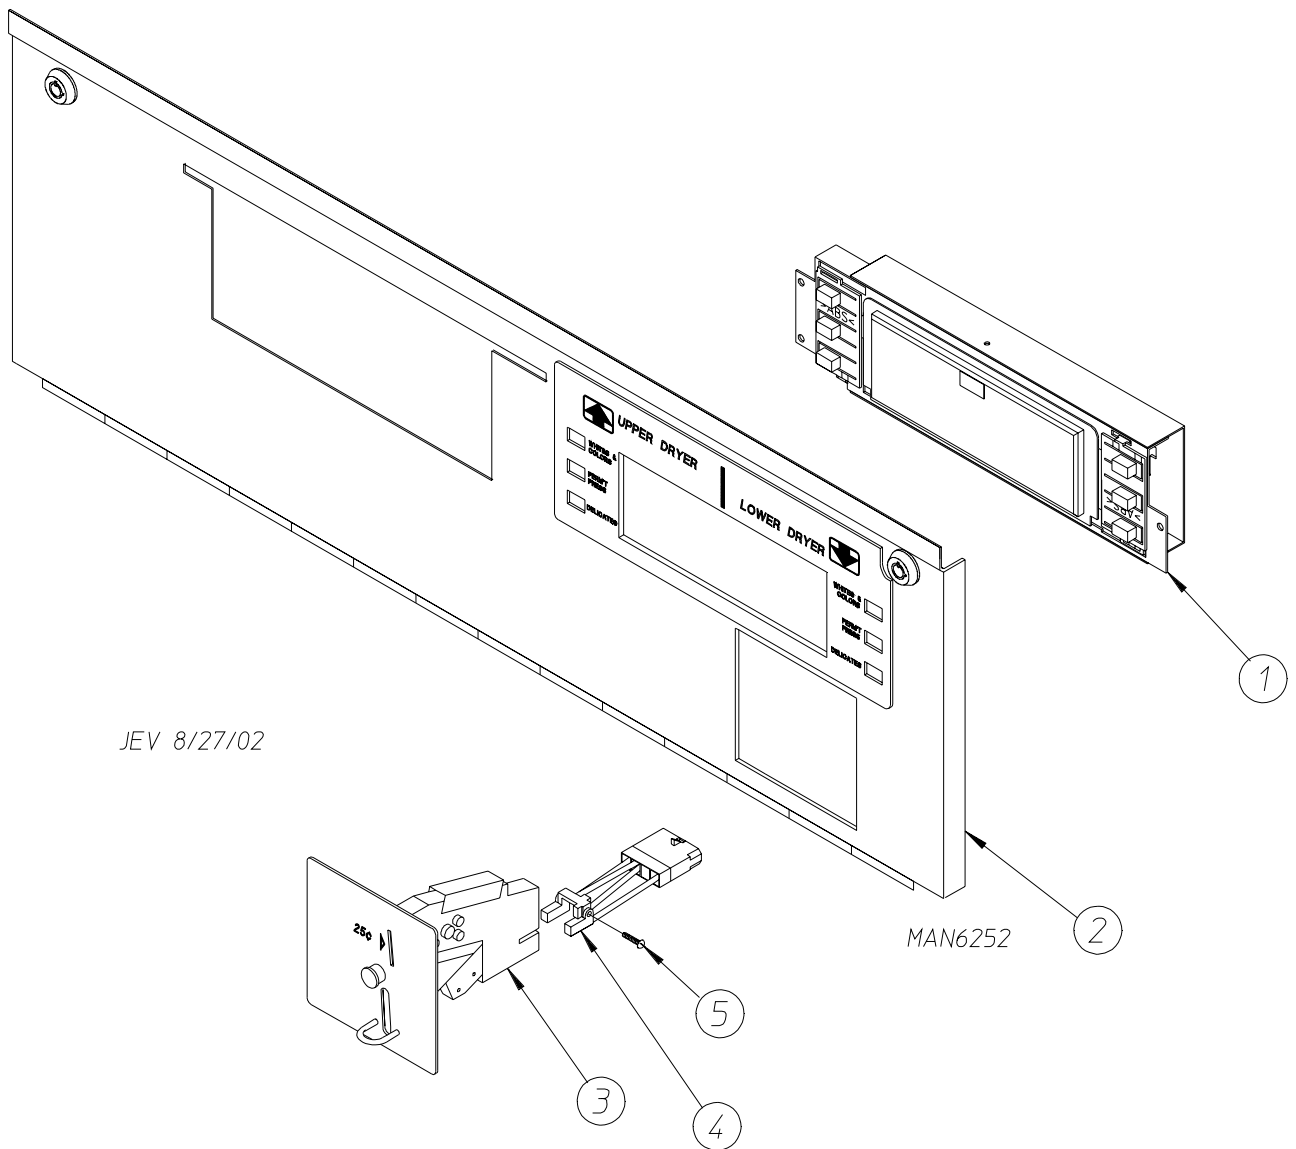

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	—	1	Microprocessor Controller (computer) (refer to Microprocessor Controller [Computer] Assembly on page 6)
2	—	1	Control Door (refer to Control Door Assembly on page 4)
3	883639	1	Hanke 25¢ Coin Acceptor Assembly (includes illus. nos. 3 through 5)
4	125157	1	Optic Switch ONLY for Hanke 25¢ Coin Acceptor
5	150002	1	#6-32 x 1" Phillips Round Head Machine Screw


Microprocessor Controller (Computer) Assembly

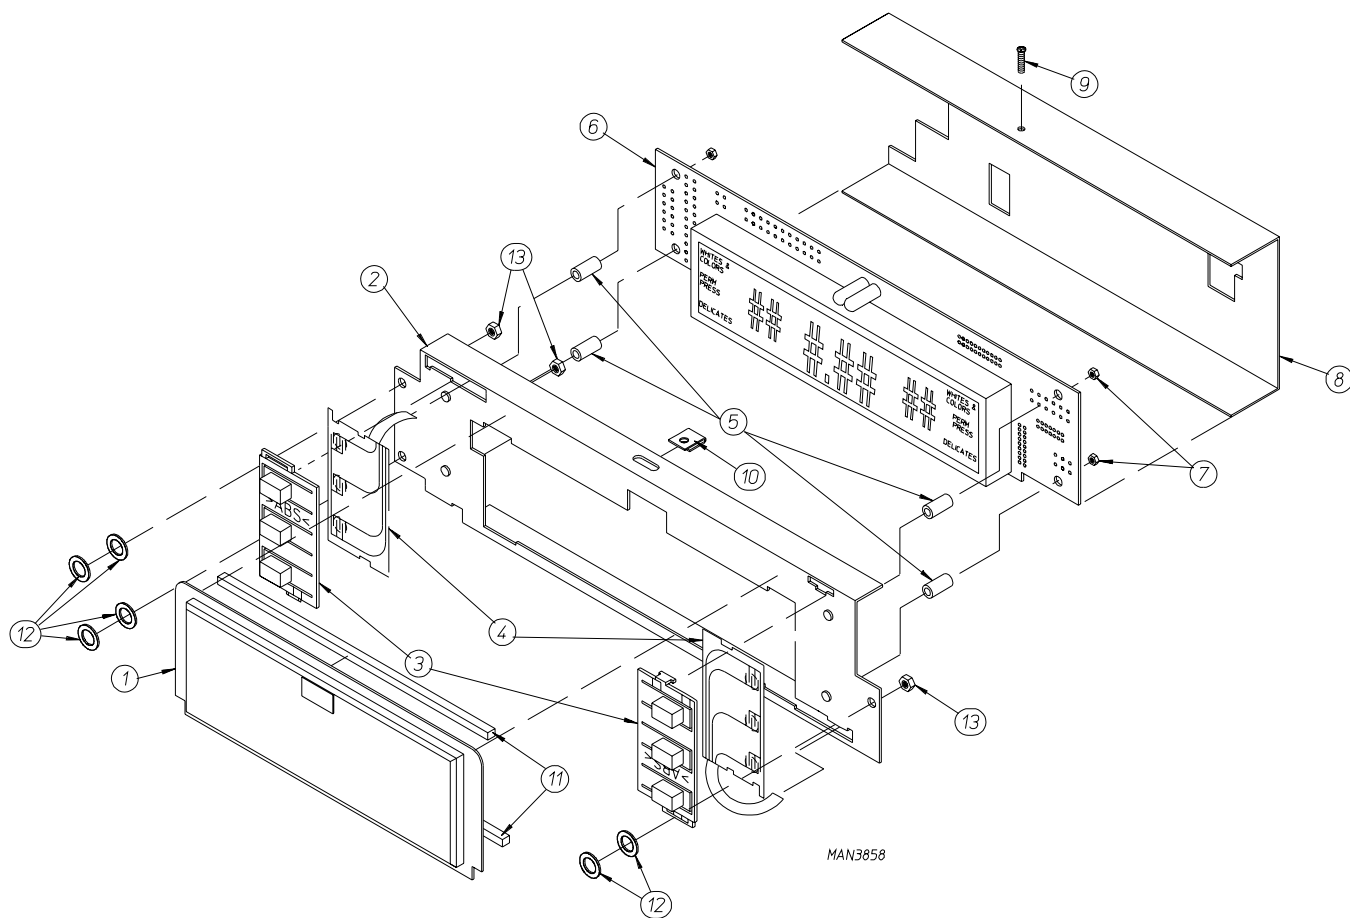

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
-------------------	-----------------	-------------	--------------------


1	112543	1	Microprocessor Controller (computer) Display Lens
2	800949	1	Microprocessor Controller (computer) Mounting Panel
3	112544	2	Membrane Switch Push Button
4	112541	2	Membrane Switch
5	153595	4	#6-32 x 9/16" Nylon Stand Off
6	137239	1	Microprocessor Controller (computer) Board
7	152013	4	#6-32 x 1/4" Hex Nut
8	311514	1	Microprocessor Controller (computer) Board Cover
9	150310	1	#8 x 1/2" Phillips Pan Head Screw
10	154008	1	Tinnerman "U" Clip
11	117605	1	1/4" x 3/8" Suppression Tape (sold by the foot)
12	153022	6	#10 Flat Washer
13	152001	3	#8-32 x 3/8" Hex Nut

Microprocessor Control Box Assembly

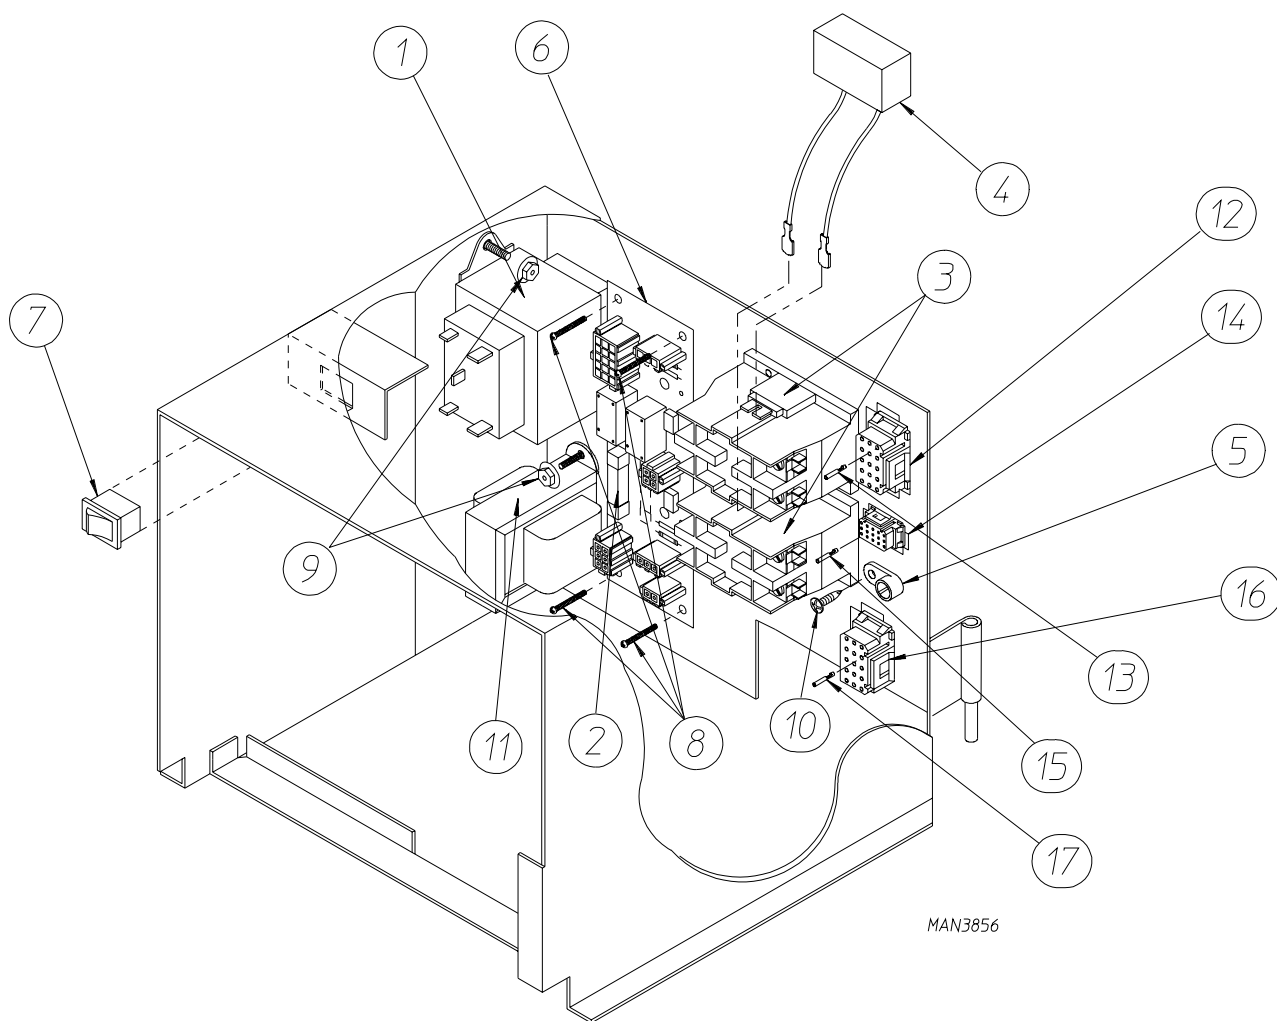


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	132068	1	Multi-Tap Transformer Assembly
2	136057	1	1/2-Amp (Slo-Blo) Fuse
3	132475	2	2-Pole Motor Contactor
4	824828	2	RC Network with Connectors
5	121010	1	L-70 Ground Lug
6	137241	1	Interconnect Board
7	122401	1	Single Pole, Single Throw Rocker Switch
8	150005	4	#6-32 x 1/4" Phillips Round Head Machine Screw
9	151001	4	#8-32 Pal Nut
10	150300	3	#10-16 x 1/2" Hex Washer TEK Screw
11	821982	1	24V Micro Transformer Assembly
12	122626	1	15-Pin Female Connector
13	122705	15	Socket
14	122631	1	6-Position Female Connector
15	122705	6	Socket
16	122626	1	15-Pin Female Connector
17	122705	15	Socket

Main Door Assembly

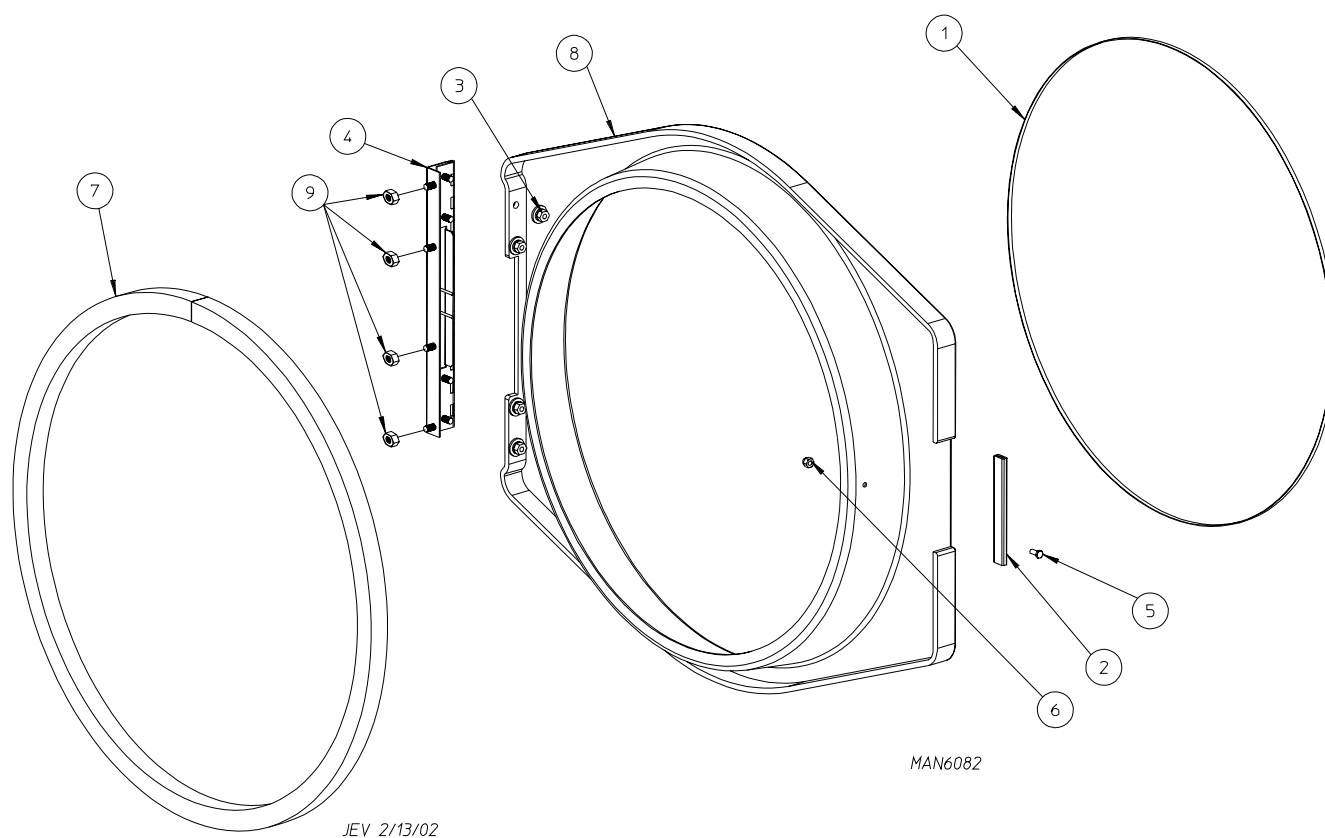

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	102210	1	Main Door Glass
2	102328	1	Handle Edge
3	152014	4	1/4-20 Free Spin Wash Nut
4	801524	1	Black Door Hinge
5	150120	1	Latch Screw
6	151010	1	Black Acorn Nut
7	102349	4	Door Gasket
8	882991	4	Black Main Door Assembly (includes illus. nos. 1 through 8)
9	152014	4	1/4-20 Free Spin Wash Nut

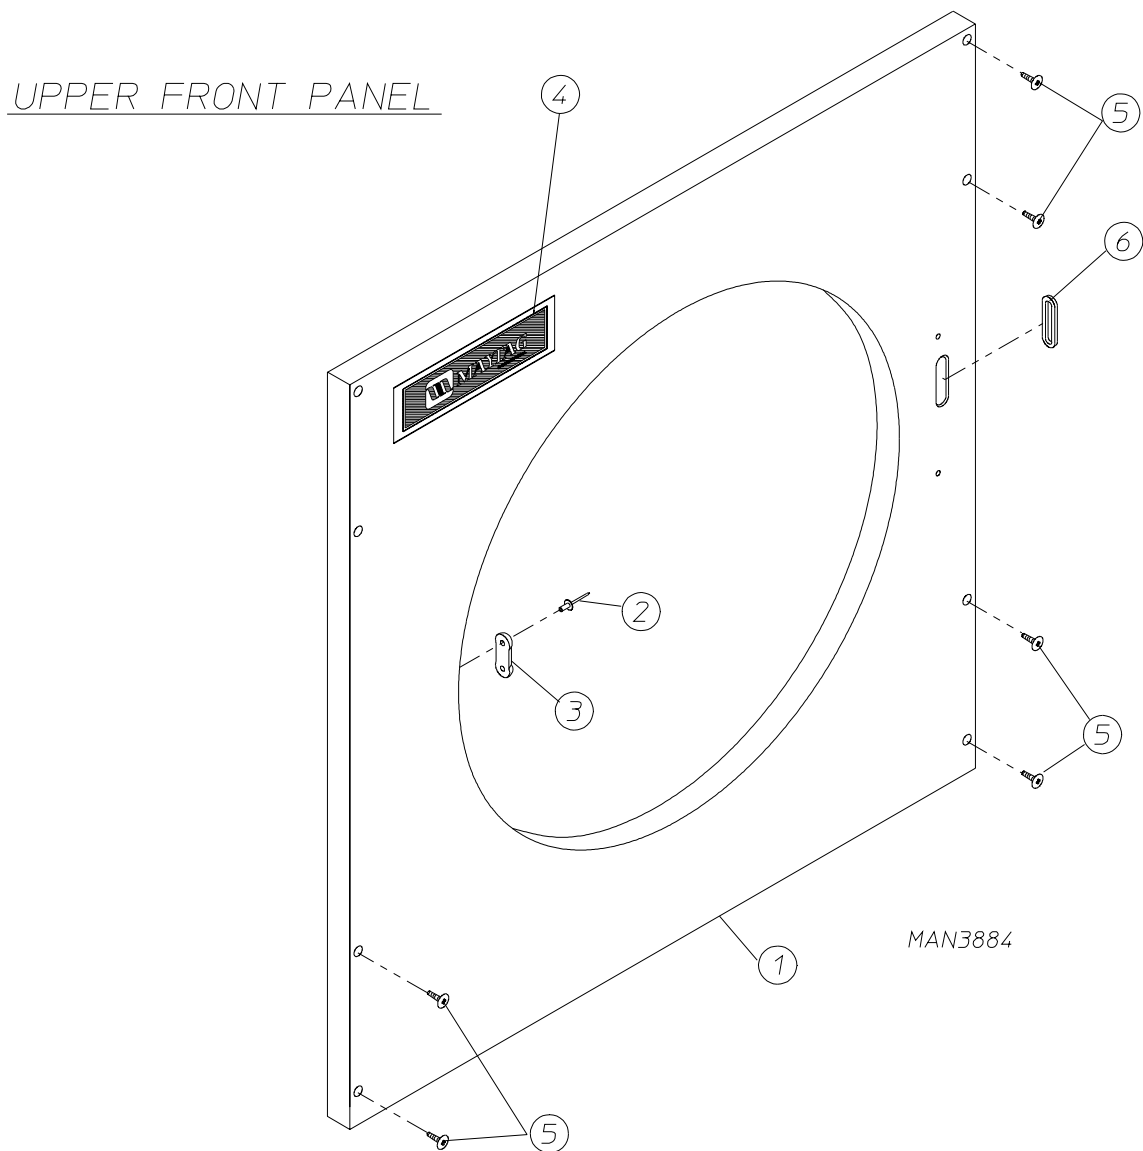


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883496	1	White Upper Front Panel (includes illus. nos. 1 through 3 and 6)
	883517	1	Bisque Upper Front Panel (includes illus. nos. 1 through 3 and 6)
	883489	1	Stainless Steel Upper Front Panel (includes illus. nos. 1 through 3 and 6)
2	154215	2	1/4" Pop Rivet
3	881987	1	Friction Door Latch Kit (includes illus. nos. 2 and 3)
4*	—	1	Maytag Logo with Tape
5	150313	8	#10-16 x 1/2" TORX PLUS® Head Screw
6	121405	1	Rubber Grommet

* Not available from ADC. Contact Maytag Co.


Lower Front Panel Assembly

LOWER FRONT PANEL

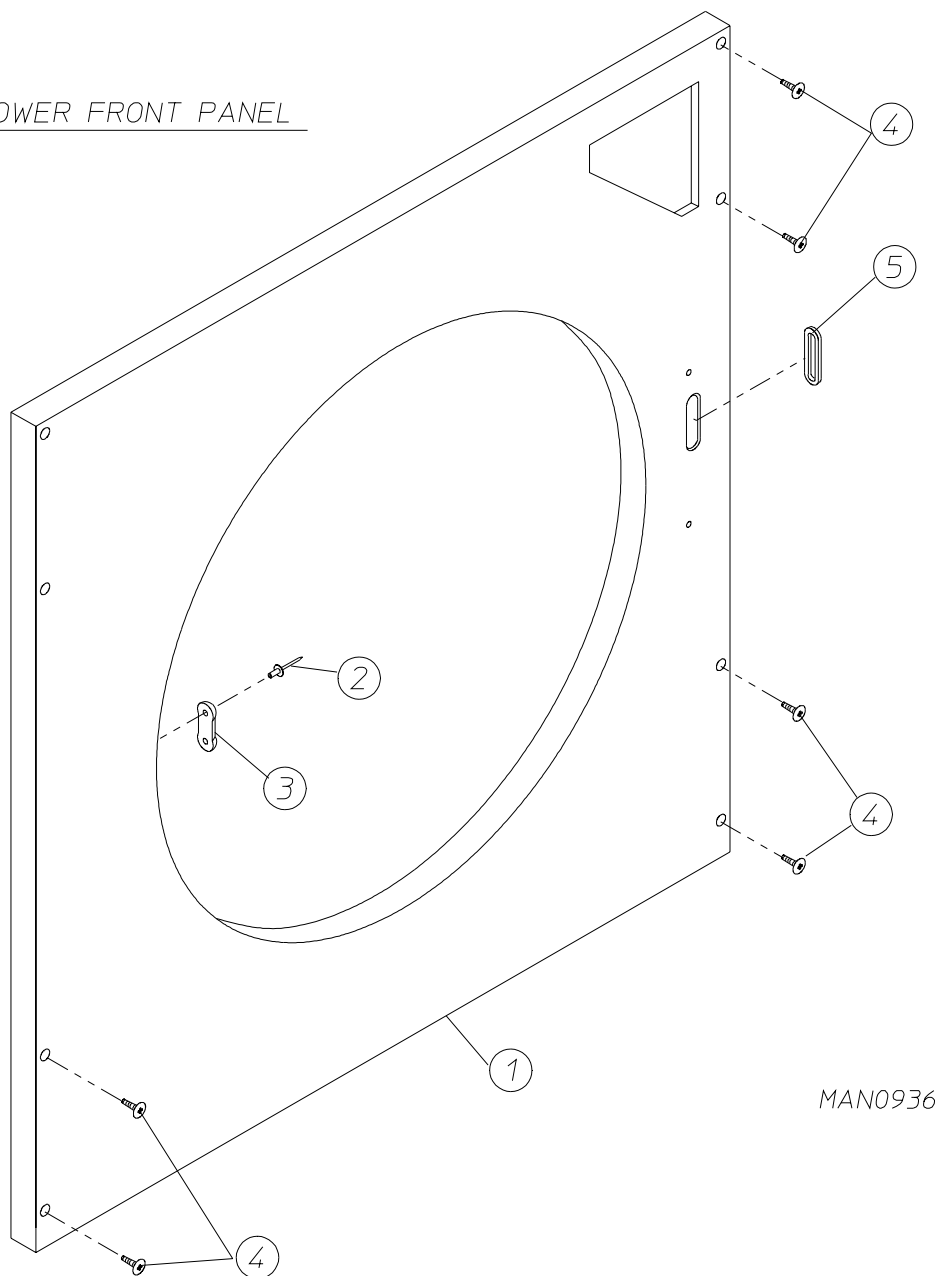

MAN0936


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883497	1	White Lower Front Panel (includes illus. nos. 1 through 3 and 5)
	883518	1	Bisque Lower Front Panel (includes illus. nos. 1 through 3 and 5)
	883490	1	Stainless Steel Lower Front Panel (includes illus. nos. 1 through 3 and 5)
2	154215	2	1/4" Pop Rivet
3	881987	1	Friction Door Latch Kit (includes illus. nos. 2 and 3)
4	150313	9	#10-16 x 1/2" TORX PLUS® Head Screw
5	121405	1	Rubber Grommet

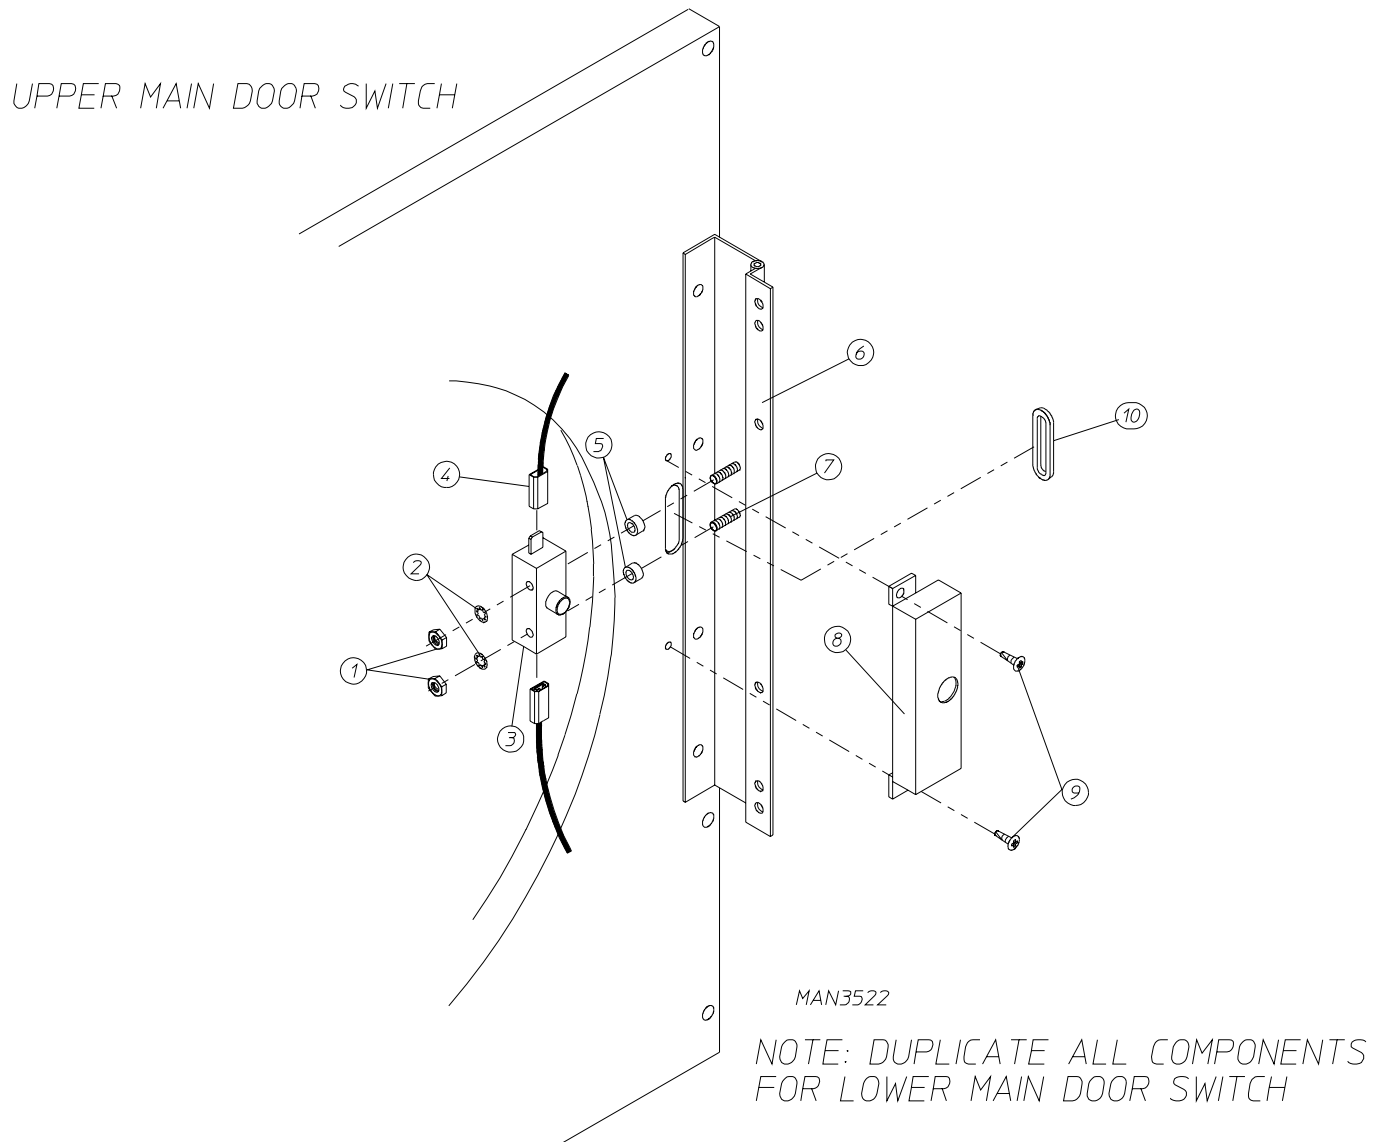

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	152013	2	#6-32 x 1/4" Hex Nut
2	153010	2	#6 Star Washer
3	137005	1	Single Pole Door Switch
4	121028	2	Insulated Female Terminal
5	154281	2	3/8" Standard Nylon Spacer
6	801524	1	11-1/2" Black Main Door Hinge
7	153565	2	#6-32 x 1" Self-Clinching Stud
8	881246	1	Main Door Switch Housing
9	150201	2	#10-32 x 1/4" Phillips Pan Head TEK Screw
10	121405	1	Rubber Grommet


Coin Vault Assembly

For Models Mfd. as of July 1, 2002

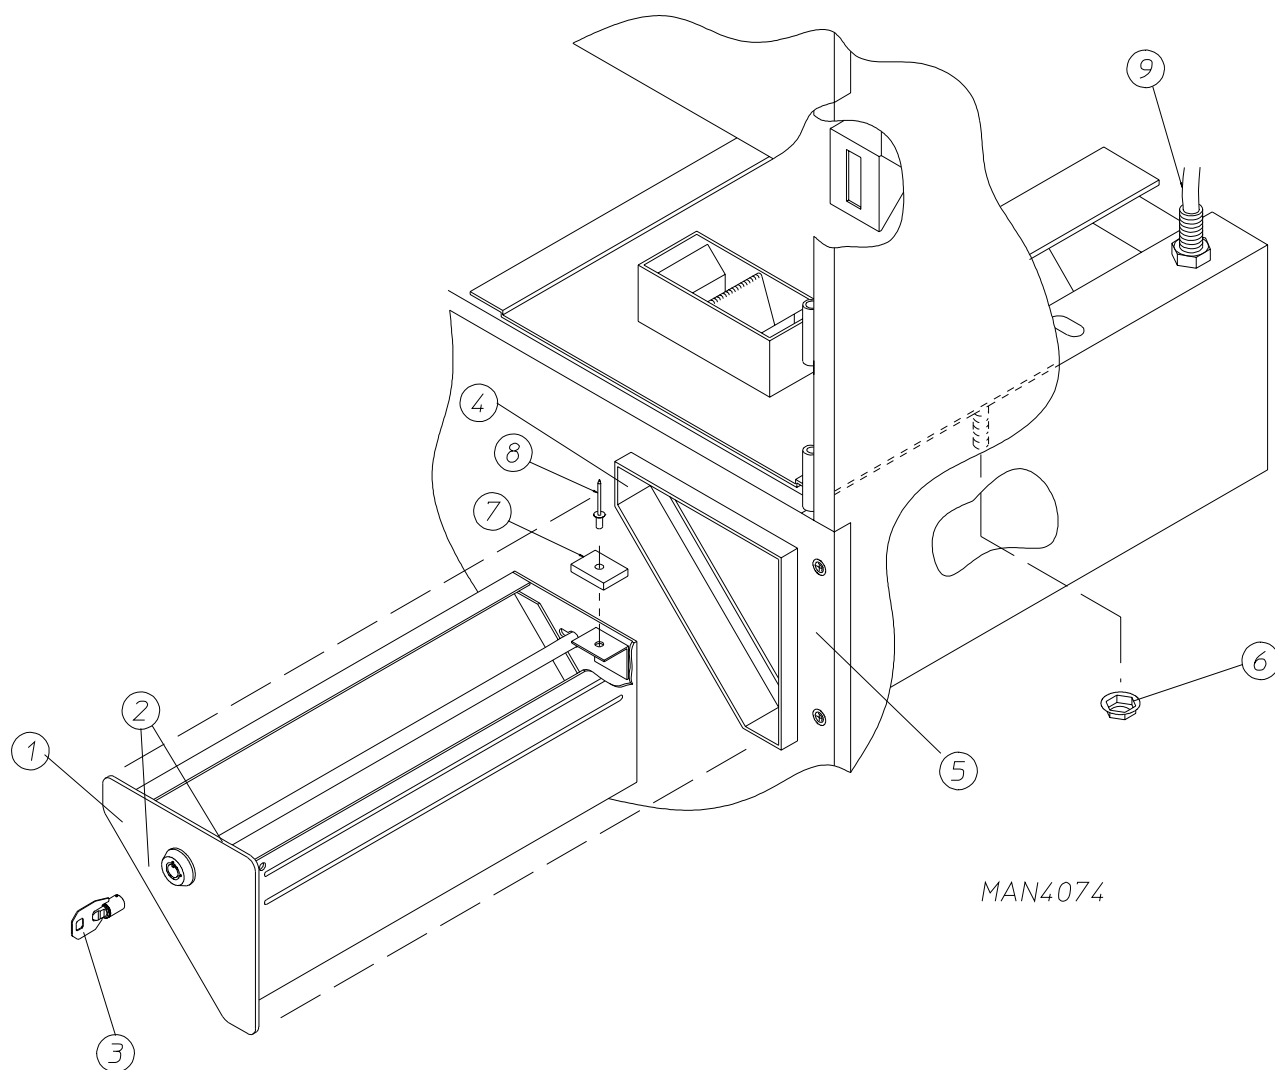

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	884215	1	Coin Box with Black Faceplate, Magnet, and Insert
2	160036	1	ACE® Lock Assembly with Key
3*	160136	1	ACE® Key ONLY
4	883498	1	Black Coin Vault ONLY
5	—	1	Lower Front Panel (refer to Lower Front Panel Assembly on page 10)
6	152014	4	1/4-20 Free Spin Wash Nut
7	102102	1	1" x 3/4" Magnet
8	154200	1	5/32" Pop Rivet
9	824807	1	Coin Box Sensor Switch Assembly

* Specify key number when ordering.

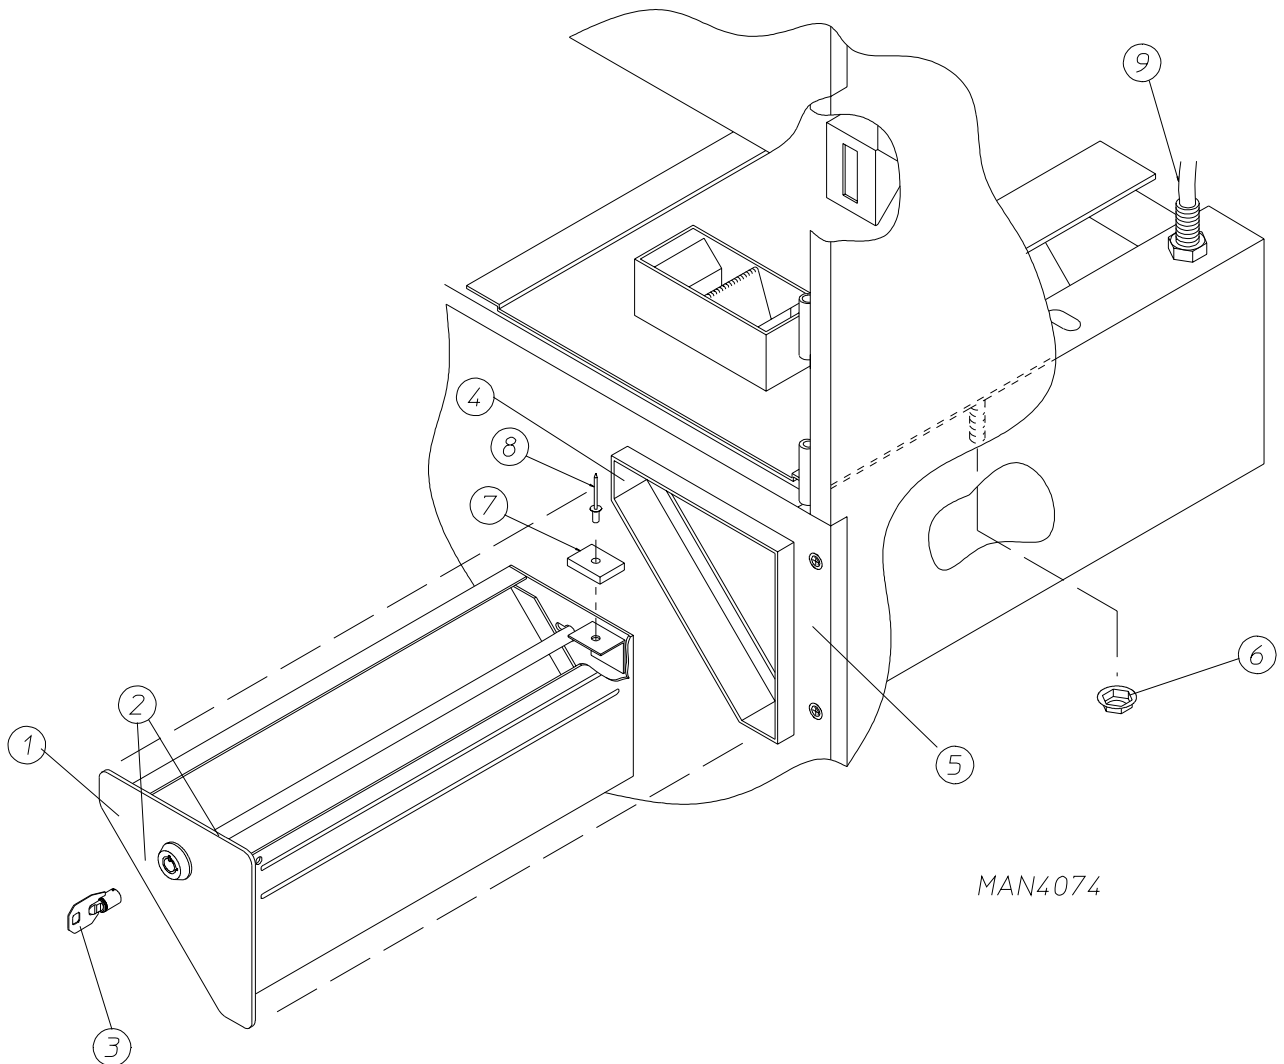


MAN4074

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883487	1	Coin Box with Black Faceplate and Magnet
2	160036	1	ACE® Lock Assembly with Key
3*	160136	1	ACE® Key ONLY
4	801160	1	Black Coin Vault ONLY
5	—	1	Lower Front Panel
			(refer to Lower Front Panel Assembly on page 10)
6	152014	4	1/4-20 Free Spin Wash Nut
7	102102	1	1" x 3/4" Magnet
8	154200	1	5/32" Pop Rivet
9	824807	1	Coin Box Sensor Switch Assembly

* Specify key number when ordering.


Lint Door Assembly

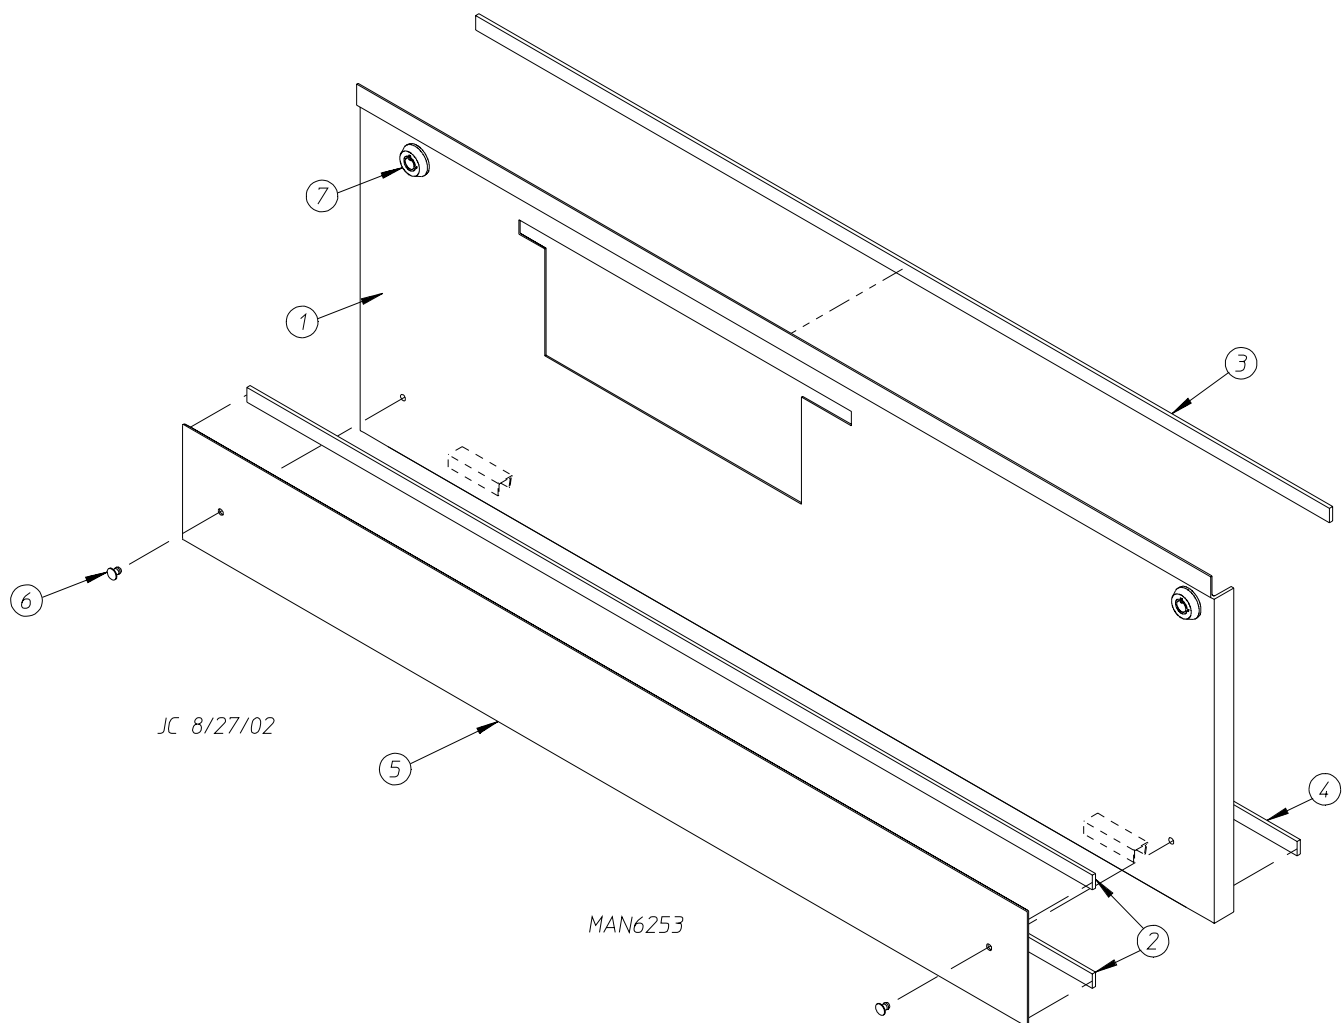

Illus. No.	Part No.	Qty.	Description
1	883502	1	White Lint Door Assembly Complete (includes illus. nos. 1 through 6)
	883521	1	Bisque Lint Door Assembly Complete (includes illus. nos. 1 through 6)
	883500	1	Stainless Steel Lint Door Assembly Complete (includes illus. nos. 1 through 6)
2	117516	72	1/32" x 1/2" Tape (sold by the inch)
3	117603	3	1/8" x 9/16" Suppression Tape (sold by the foot)
4	117604	3	1/8" x 3/8" Suppression Tape (sold by the foot)
5	883495	1	Black Trim (includes illus. nos. 2, 5, and 6)
6	121513	2	Push In Fastener
7	160040	2	Lock ONLY (keyed XX4451)
	160140	—	Key ONLY (keyed XX4451)

LINT COOP ASSEMBLY

NOTE: DUPLICATE ALL COMPONENTS FOR LOWER LINT COOP ASSEMBLY.

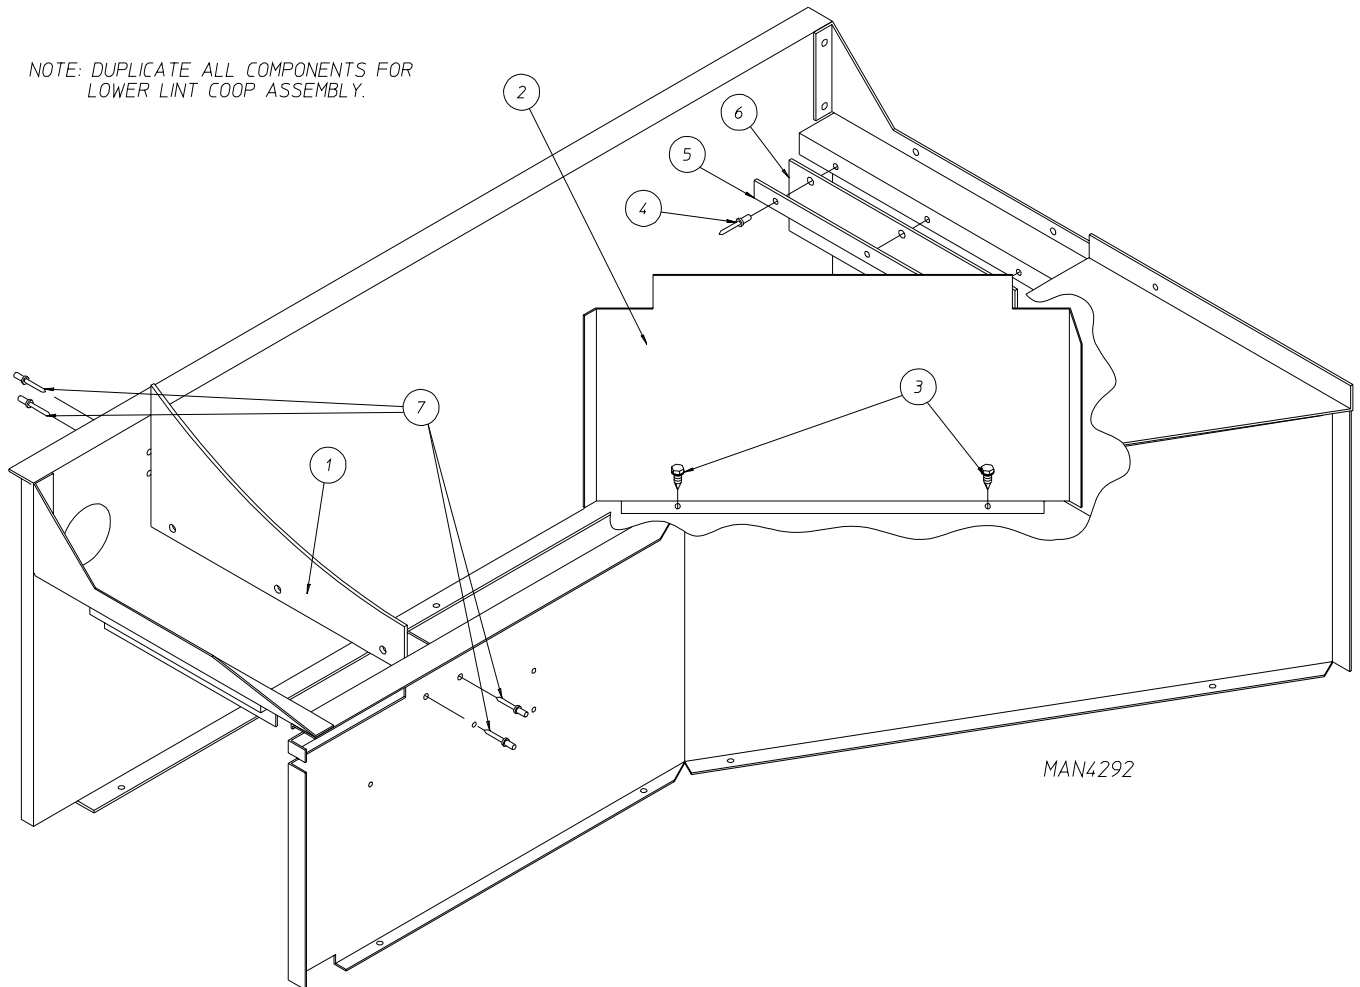


MAN4292

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	882249	1	Wire Clip / Lint Coop Assembly with Felt
2	311527	1	Lint Coop Baffle
3	150300	2	#10-16 x 1/2" Hex Washer TEK Screw
4	154200	3	5/32" Pop Rivet
5	317650	1	Felt Seal Retainer
6	116012	1	Lint Basket Seal
7	154200	4	5/32" Pop Rivet


Lint Drawer (Basket) Assembly

LINT DRAWER ASSEMBLY

NOTE: DUPLICATE ALL COMPONENTS FOR
UPPER LINT BASKET ASSEMBLY

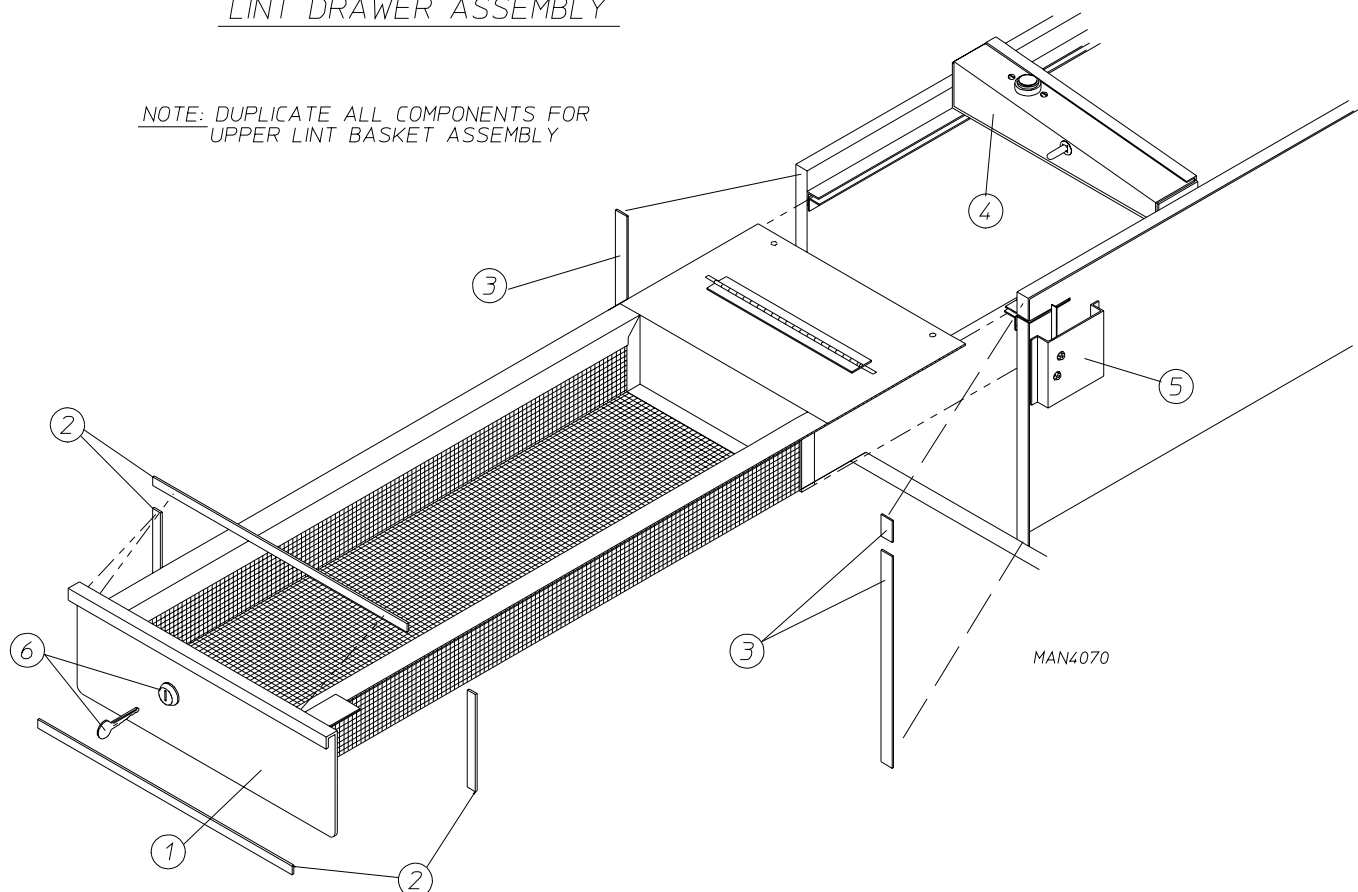


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	883872	1	White Locking Lint Drawer (basket) Assembly (includes illus. nos. 1 and 2)
	883873	1	Bisque Locking Lint Drawer (basket) Assembly (includes illus. nos. 1 and 2)
	883874	1	Black Locking Lint Drawer (basket) Assembly (includes illus. nos. 1 and 2)
2	117604	4	1/8" x 3/8" Suppression Tape (sold by the foot)
3	117605	3	1/4" x 3/8" Suppression Tape (sold by the foot)
4	—	1	Temperature Sensor Bracket (refer to Temperature Sensor Bracket Assembly on page 19)
5	—	1	Lint Drawer (basket) Switch (refer to Lint Drawer Switch Assembly on page 17)
6	160039	1	Lint Drawer Lock / Cam ONLY (keyed XX4451)
	160140	1	Key ONLY (keyed XX4451)
	160034	1	Cam ONLY ... Not Illustrated

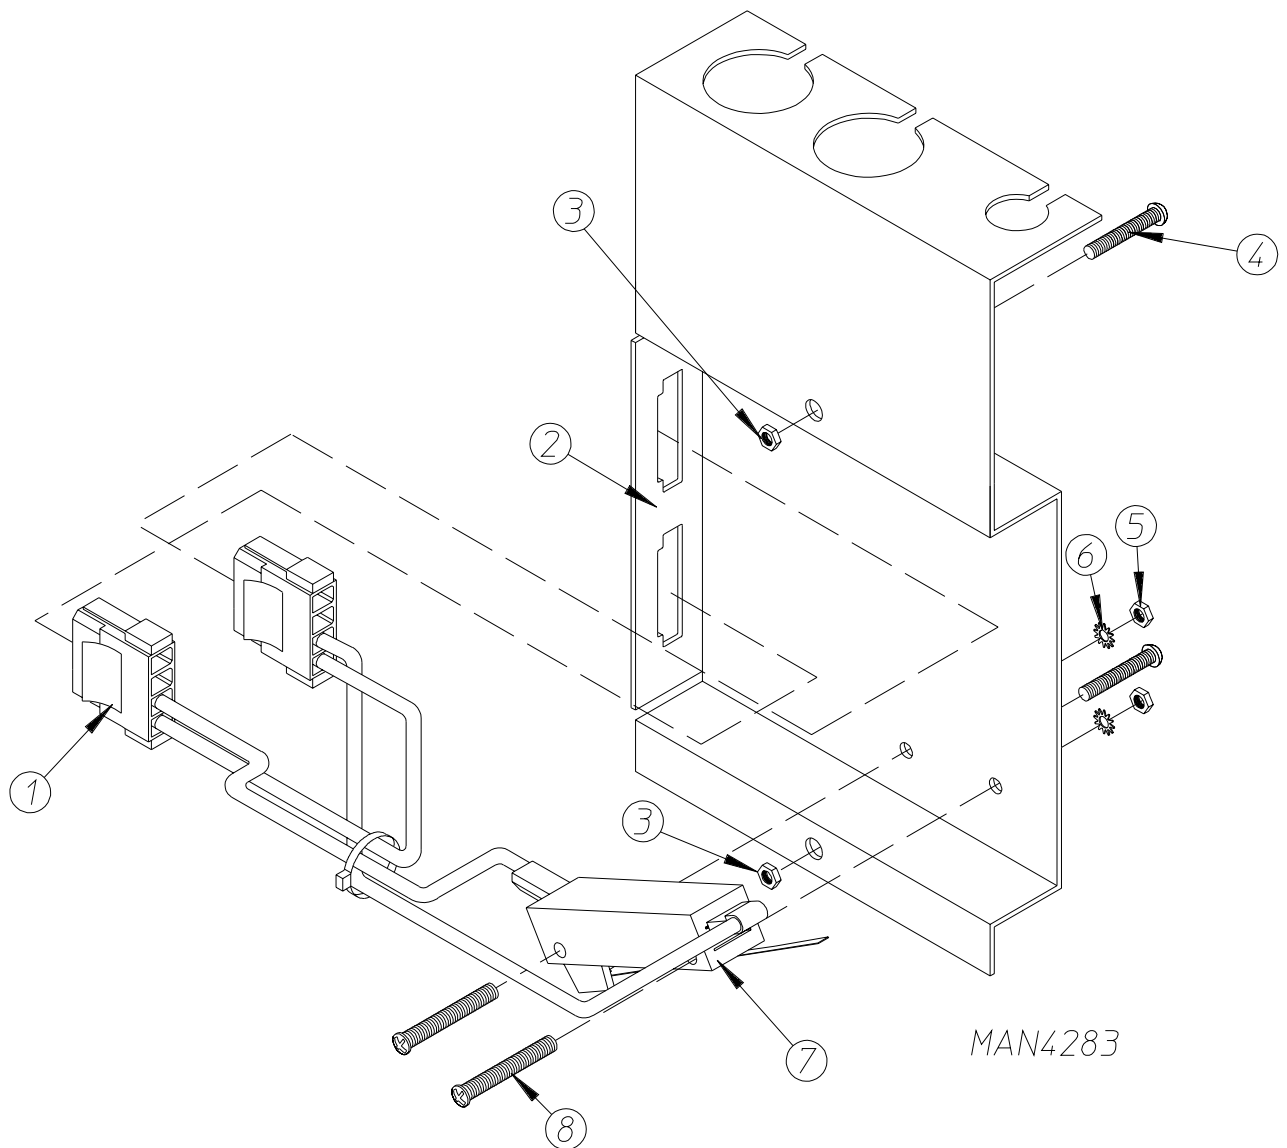


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	882188	1	Top Lint Drawer Switch Harness ONLY
	882187	1	Bottom Lint Drawer Switch Harness ONLY
2	882185	1	Top Lint Drawer Switch Assembly (includes illus. nos. 1 through 8)
	882189	1	Bottom Lint Drawer Switch Assembly (includes illus. nos. 1 through 8)
3	152000	2	#6-32 x 5/16" Hex Nut
4	150001	2	#6-32 x 1/2" Phillips Round Head Machine Screw
5	152013	2	#6-32 x 1/4" Hex Nut
6	153010	2	#6 Star Washer
7	136992	1	Lint Drawer Safety Switch
8	150006	2	#6-32 x 7/8" Phillips Round Head Machine Screw

Tumbler / Support Assemblies

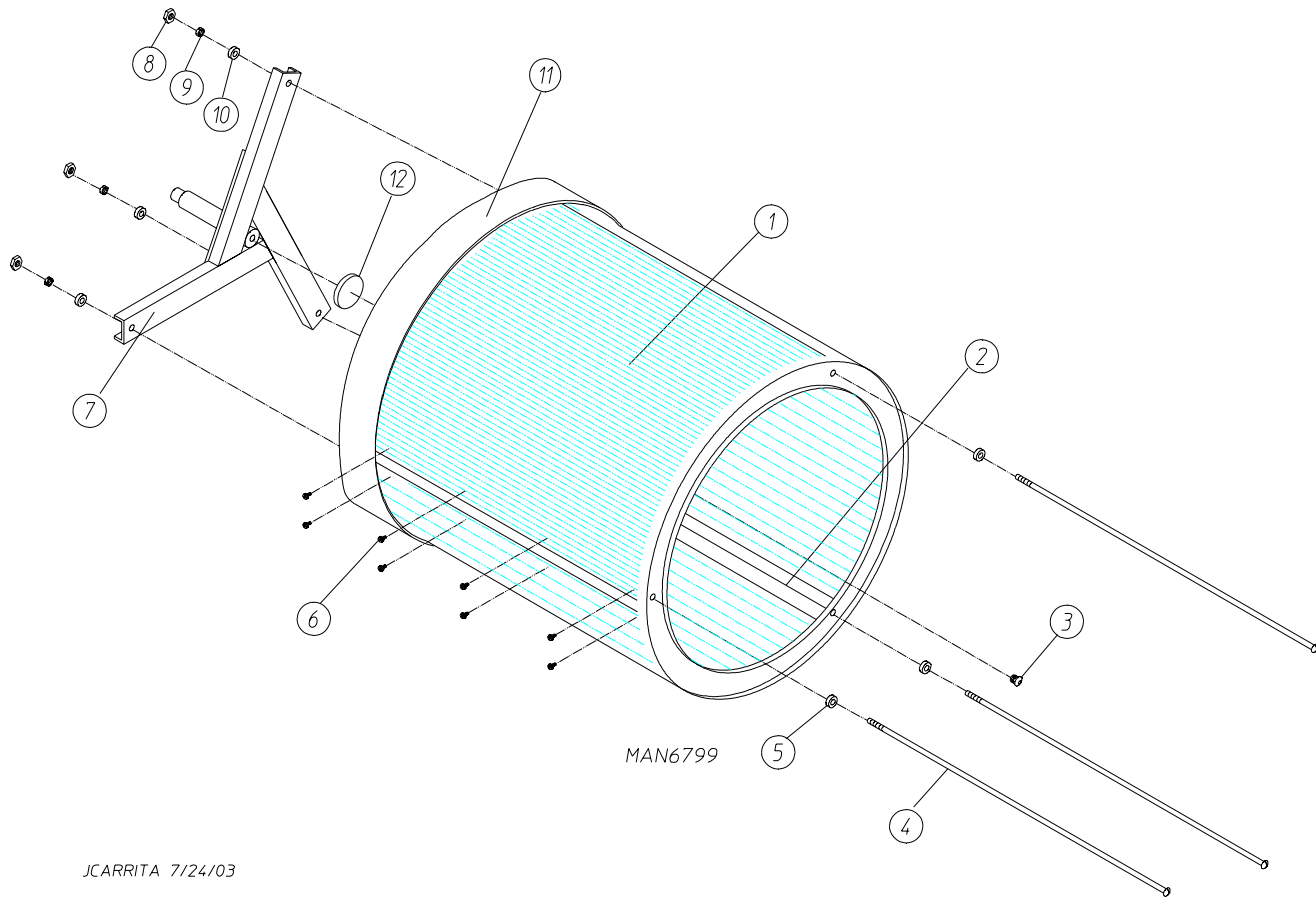


Illus. No.	Part No.	Qty.	Description
1	800994	1	Tumbler / Support Assembly Complete (includes illus. nos. 1, 2, and 4 through 12)
	882192	1	Tumbler ONLY with Felt Collar and Ribs
2	301315	2	Short Tapered Rib
	301316	1	Tall Tapered Rib
3	150518	1	5/16" x 3/8" Socket Head Screw (for models mfd. prior to April 26, 2002)
4	100915	3	3/8-16 x 31" Tie Rod
5	153004	3	3/8" Flat Washer
6	150313	30	#10-16 x 1/2" TORX PLUS® Head Screw
	150429	1	TORX® Hand Driver ... Not Illustrated (for removal of TORX® head screw)
7	850064	1	Tumbler Support
8	152027	3	3/8-16 Hex Nut
9	153005	3	3/8" Lock Washer
10	153004	3	3/8" Flat Washer
11	115999	1	Felt Collar
12	115986	1	Felt Tumbler Pad (for models mfd. as of April 26, 2002)
	401010	—	#847 Adhesive for Felt (5 oz. tube)

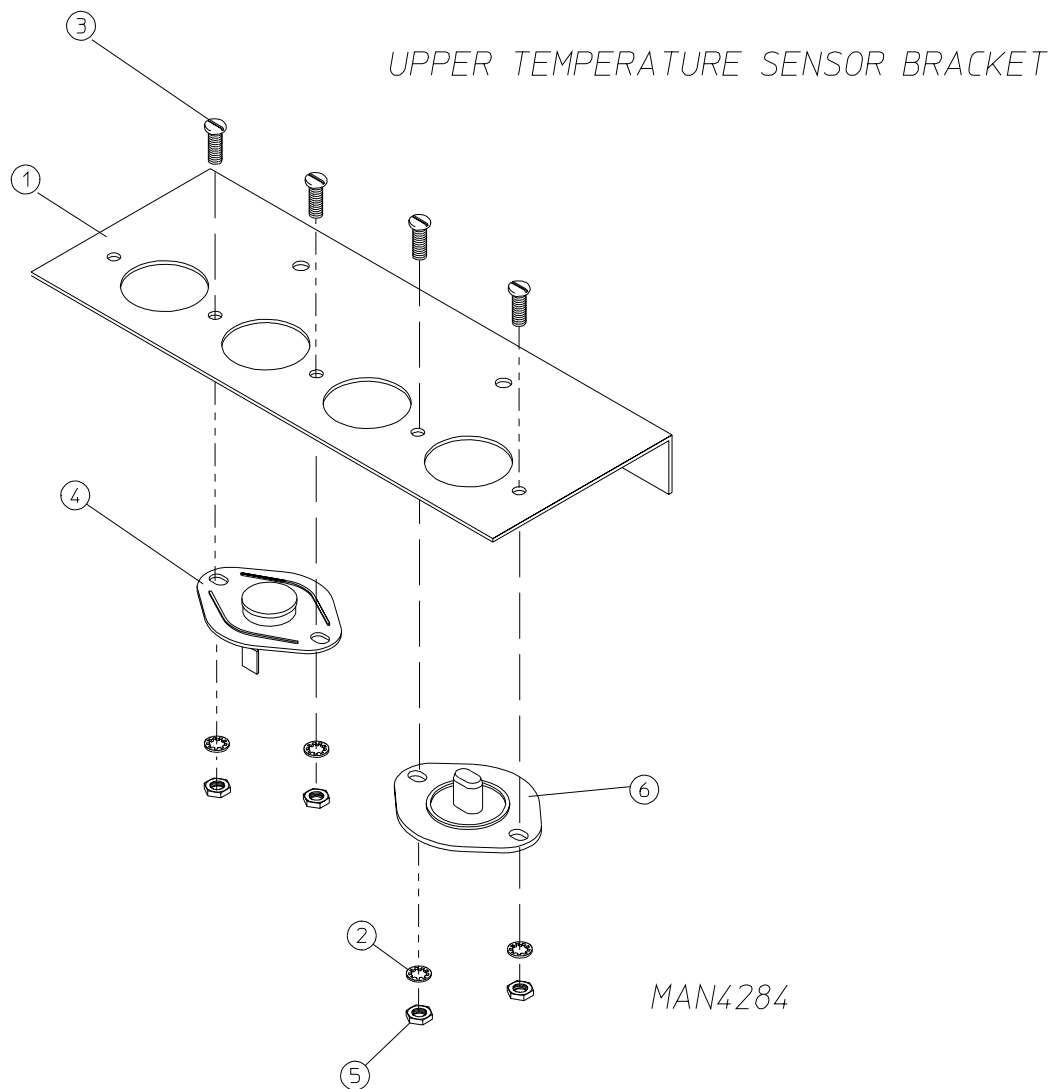


NOTE: DUPLICATE ALL COMPONENTS FOR
LOWER TEMPERATURE SENSOR BRACKET

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	819891	1	Temperature Sensor Bracket Complete (includes illus. nos. 1 through 6)
	322846	1	Temperature Sensor Bracket ONLY
2	153010	4	#6 Star Washer
3	150005	4	#6-32 x 1/4" Phillips Round Head Machine Screw
4	130118	1	170° Thermostat
5	152000	4	#6-32 Hex Nut
6	130117	1	Thermistor
-	822028	1	Sensor Bracket Harness (top) ... Not Illustrated
-	822029	1	Sensor Bracket Harness (bottom) ... Not Illustrated

Tumbler Bearing Assembly

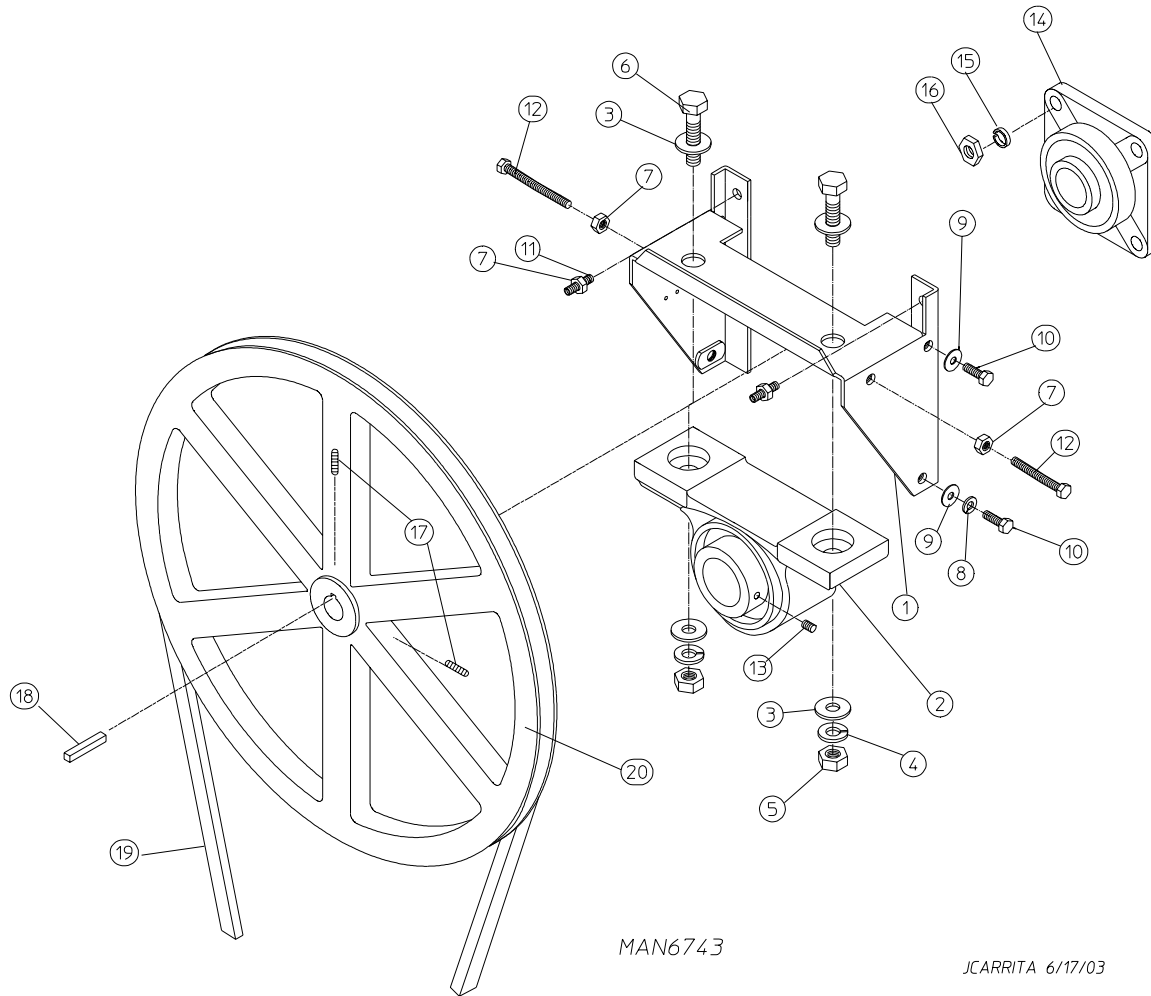


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	800981	1	Tumbler Bearing Support Complete (includes illus. nos. 1 through 13)
	800980	1	Tumbler Bearing Support ONLY
2	880202	1	1-3/8" Pillow Block Bearing
3	153004	4	3/8" Flat Washer
4	153005	2	3/8" Lock Washer
5	152005	2	3/8-16 Hex Nut
6	150601	2	3/8-16 x 2" Hex Bolt
7	152004	4	5/16-18 Hex Nut
8	153002	4	5/16" Lock Washer
9	153004	4	3/8" Flat Washer
10	150501	4	5/16-18 x 3/4" Hex Bolt
11	150610	2	5/16-18 x 1-1/2" Allen Setscrew
12	150621	1	5/16-18 x 1-1/2" Hex Bolt
13	154321	2	5/16-24 x 3/8" Setscrew
14	880203	1	1-3/8" Flange Bearing
15	153005	4	3/8" Lock Washer
16	152005	4	3/8-16 Hex Nut
17	154301	2	5/16-18 x 1" Allen Setscrew
18	100713	1	1/4" x 1/4" x 7/8" Key
19	100100	1	5L-660 V-Belt
20	101100	1	18" Pulley

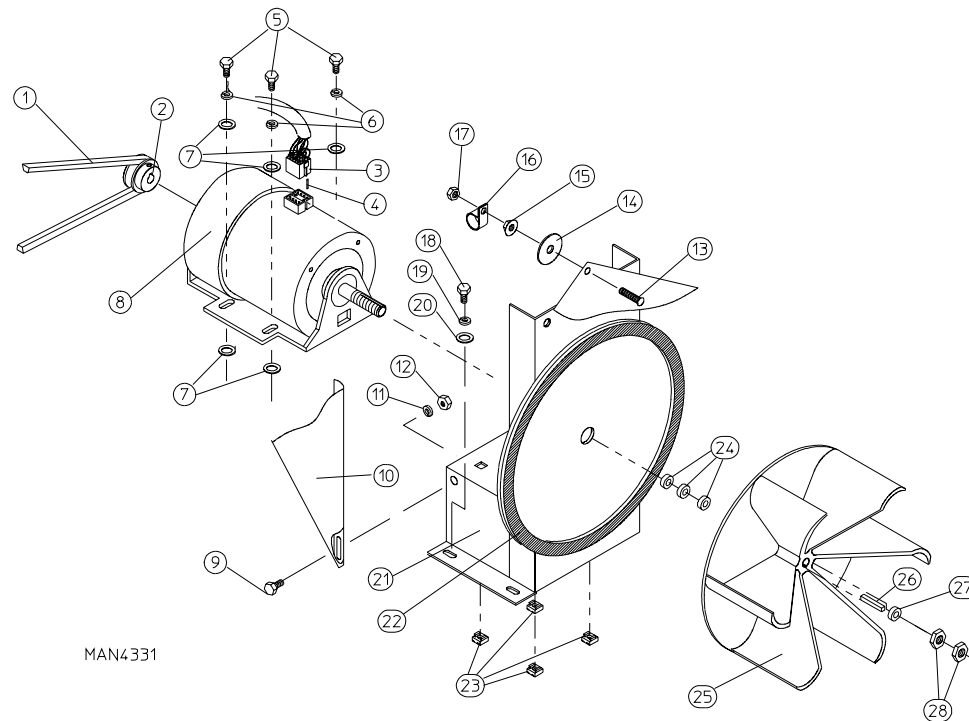

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	100144	1	4L-420 V-Belt (motor to idler)
2	101131	1	1/2" x 2-1/4" Motor Pulley
3	137030	1	8-Pin Socket Connector
4	122701	*	Socket Terminal ONLY
	122801	1	Pin / Socket Extraction Tool ... Not Illustrated
5	150501	4	5/16" x 3/4" Hex Head Machine Bolt
6	153002	4	5/16" Lock Washer
7	153001	4	5/16" Flat Washer
8	181049	1	1/2 hp 120/230v 50/60 Hz Motor with Plug
9	150111	1	1/4" x 1/2" Phillips Round Head Machine Screw
10	311551	1	Idler Support Bracket
11	153007	1	1/4" Lock Washer
12	152002	1	1/4" Hex Nut
13	153525	1	1/4" x 1" Self-Clinching Stud
14	153003	1	3/8" x 1-1/2" Washer
15	152014	1	1/4-20 Free Spin Wash Nut
16	121490	1	1/2" Nylon Clamp
17	152002	1	1/4-20 Hex Nut
18	150501	4	5/16-18 x 3/4" Hex Head Machine Bolt
19	153002	4	5/16" Lock Washer
20	153001	4	5/16" Flat Washer
21	882191	1	1/2 hp Motor Mount ONLY
	882190	1	1/2 hp 120/230v Motor Mount Assembly (includes illus. nos. 2, 5 through 8, and 21 through 28)
22	117604	4	1/8" x 3/8" Suppression Tape (sold by the foot)
23	154000	4	5/16-18 Tinnerman Nut
24	153050	3	1/2" Flat Washer
25	100604	1	12-1/2" Impellor with 1/2" Bore
26	100702	1	1/8" x 1/8" x 1-1/2" Key
27	153050	2	1/2" Flat Washer
28	152006	2	1/2" Left Hand Jam Nut

* As needed.


Gas Valve Train Assembly

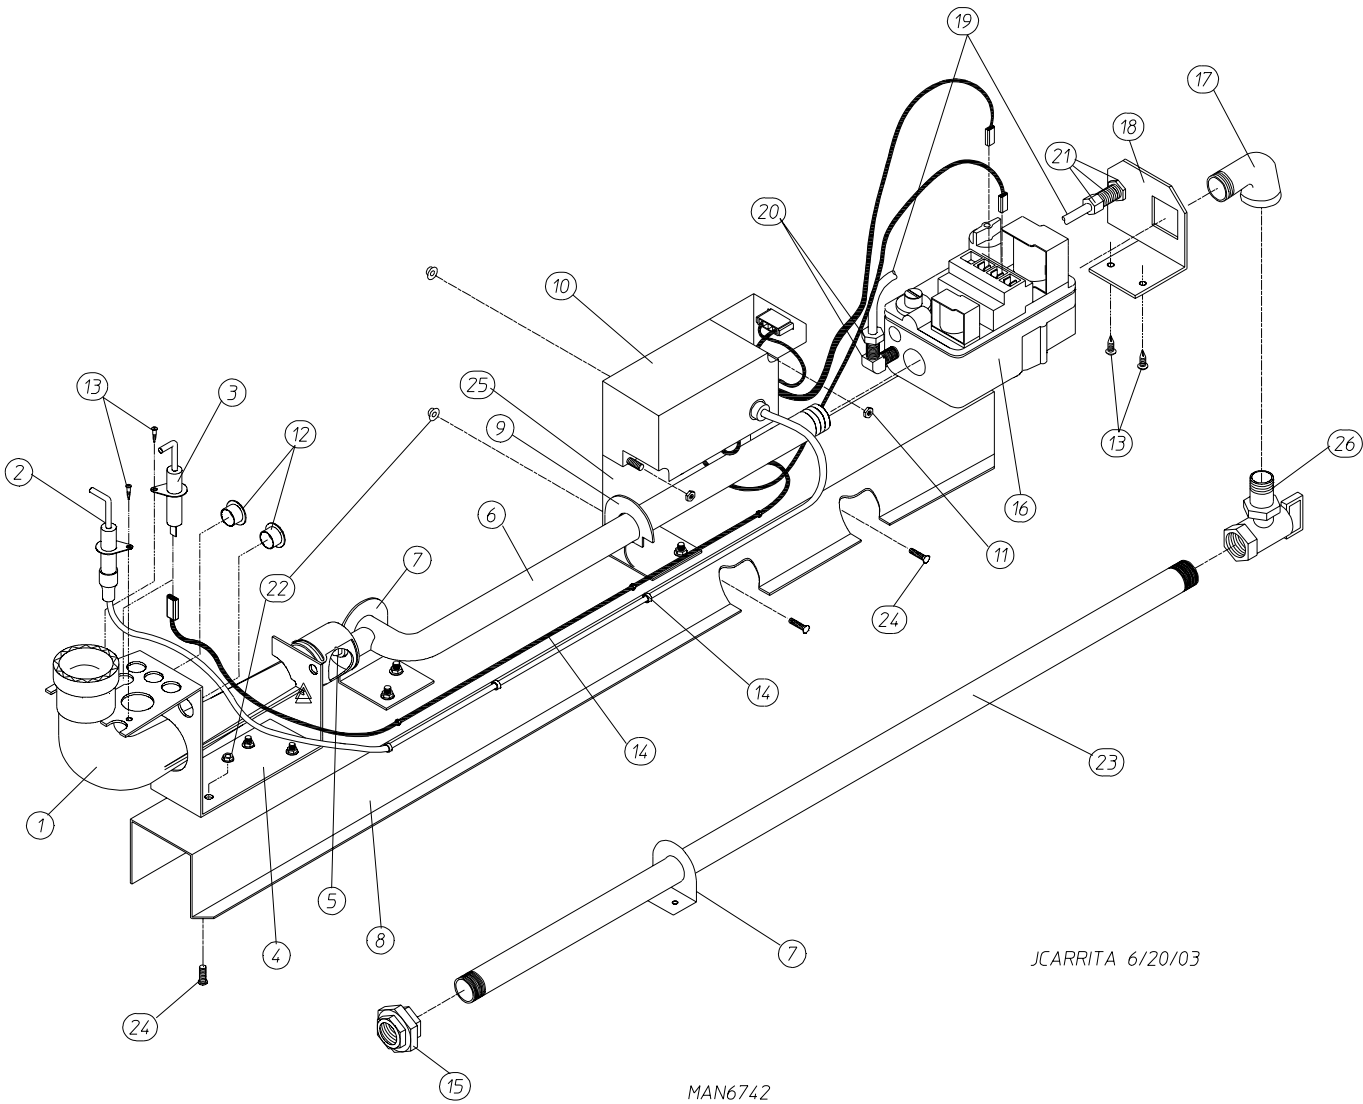

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	141130	1	Up-Shot Burner Tube
2	128917	1	Spark Ignitor with 36" Wire
3	128918	1	Flame Sensor
4	318009	1	Burner Tube Bracket
5	140829*	1	#18 Burner Orifice (natural gas)
	140814*	1	#38 Burner Orifice (liquid propane gas)
6	141226	1	Single-Port Manifold
7	318700	1	Pipe Bracket
8	801249**	1	Natural Gas Train Assembly Complete (includes illus. nos. 1 through 4 and 6 through 26)
	883892**	1	Liquid Propane Gas Train Assembly Complete (includes illus. nos. 1 through 4 and 6 through 26)
	882175	1	Conversion Kit Natural Gas to Liquid Propane
	319522	1	Gas Valve Train Slide ONLY
9	318711	1	Notched Pipe Bracket
10	128935	1	Direct Spark Ignition Module
11	152013	2	#6-32 Hex Nut
12	121300	2	Open / Closed Bushing
13	150301	4	#8-18 x 7/16" Phillips Pan Head TEK Screw
14	121499	6	Wire Tie
15	142600	1	1/2" Union
16	128927	1	1/2" 24 VAC (natural gas) Valve
	880960	1	1/2" 24 VAC (liquid propane gas) Valve
17	142506	1	1/2" x 1/2" Street Elbow
18	318712	1	Pipe Bracket
19	882157	1	1/4" Aluminum Tubing (12" length)
20	143203	1	Aluminum Tubing Adapter
21	143259	1	Aluminum Tubing Compression Fitting
22	151001	8	#8-32 Pal Nut
23	142823	1	1/2" x 40" Pipe
24	153528	9	#8-32 x 1/2" Self-Clinching Stud
25	815974	1	Direct Spark Ignition Module Mounting Bracket
26	881367	1	1/2" Union Shutoff with Tailpiece

* Consult factory for elevations over 2,000 feet.

** Orifice is not included and must be ordered separately.

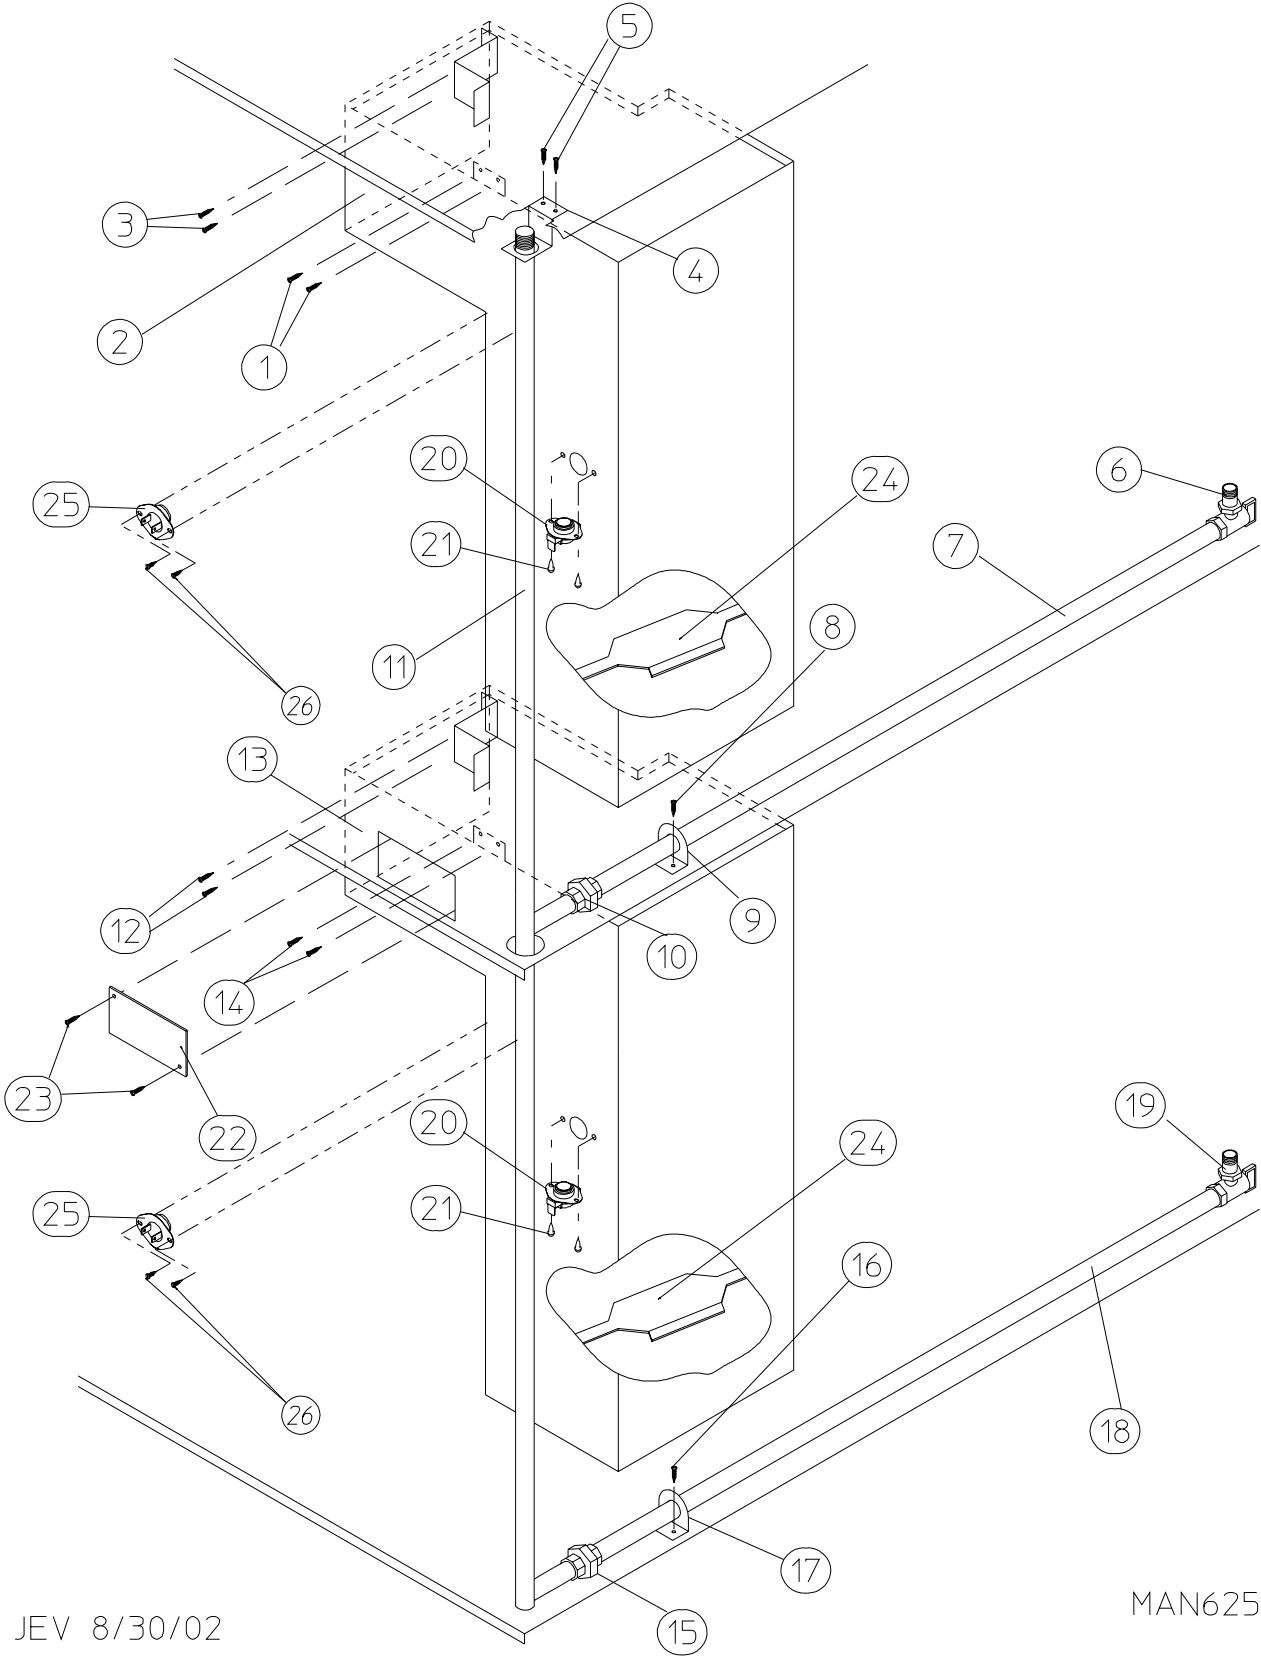


JEV 8/30/02

MAN6257

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	150301	2	#8-18 x 7/16" Phillips Pan Head TEK Screw
2	883893	1	Burner Box with Spreader Assembly
3	150301	2	#8-18 x 7/16" Phillips Pan Head TEK Screw
4	318702	1	Top Pipe Support Bracket
5	150300	2	#10-16 x 1/2" Hex Washer TEK Screw
6	881367	1	1/2" Union Shutoff with Tailpiece
7	142823	2	1/2" x 40" Pipe
8	150300	2	#10-16 x 1/2" Hex Washer TEK Screw
9	318700	1	Pipe Bracket
10	142600	1	1/2" Union
11	141237	1	Inlet Manifold
12	150301	2	#8-18 x 7/16" Phillips Pan Head TEK Screw
13	883893	1	Burner Box with Spreader Assembly
14	150301	2	#8-18 x 7/16" Phillips Pan Head TEK Screw
15	142600	1	1/2" Union
16	150300	2	#10-16 x 1/2" Hex Washer TEK Screw
17	318700	1	Pipe Bracket
18	142823	1	1/2" x 40" Pipe
19	881367	1	1/2" Union Shutoff with Tailpiece
20	130403	2	330° Burner Hi-Limit Thermostat
21	150300	4	#10-16 x 1/2" Hex Washer TEK Screw
22	318065	1	Burner Box Clean Out Cover
23	150300	4	#10-16 x 1/2" Hex Washer TEK Screw
24	318099	1	Spreader Assembly ONLY
25	130107	2	160° Cabinet Hi-Limit Thermostat
26	150301	4	#8-18 x 7/16" Phillips Pan Head TEK Screw

UPPER SAIL SWITCH ASSEMBLY

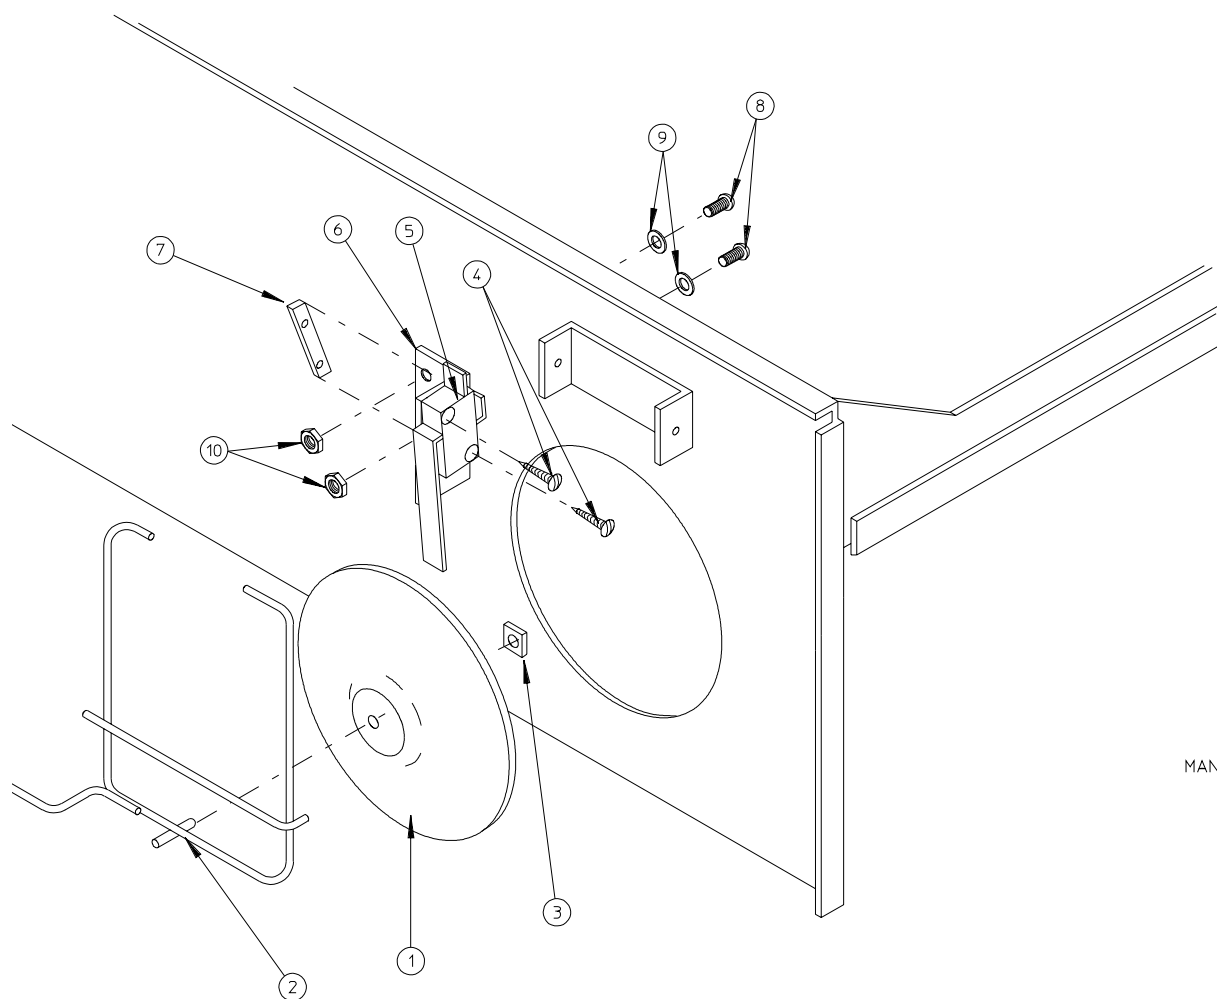


MAN0570

NOTE: DUPLICATE ALL COMPONENTS
FOR LOWER SAIL SWITCH ASSEMBLY

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	319206	1	Sail Switch Damper
	802817	1	Sail Switch Rod and Damper Assembly (includes illus. nos. 1 through 3)
2	105550	1	Sail Switch Rod
3	154002	1	1/8" Push-On Fastener
4	150303	2	#4 x 3/4" Phillips Pan Head Machine Screw
5	122200	1	Sail Switch
	802807	1	Sail Switch Bracket Assembly (includes illus. nos. 4 through 7)
6	319208	1	Sail Switch Bracket
7	154004	1	Tinnerman Twin Speed Nut
8	150001	2	#6-32 x 1/2" Phillips Round Head Machine Screw
9	153010	2	#6 Star Washer
10	152000	2	#6-32 Hex Nut

UPPER IDLER BEARING

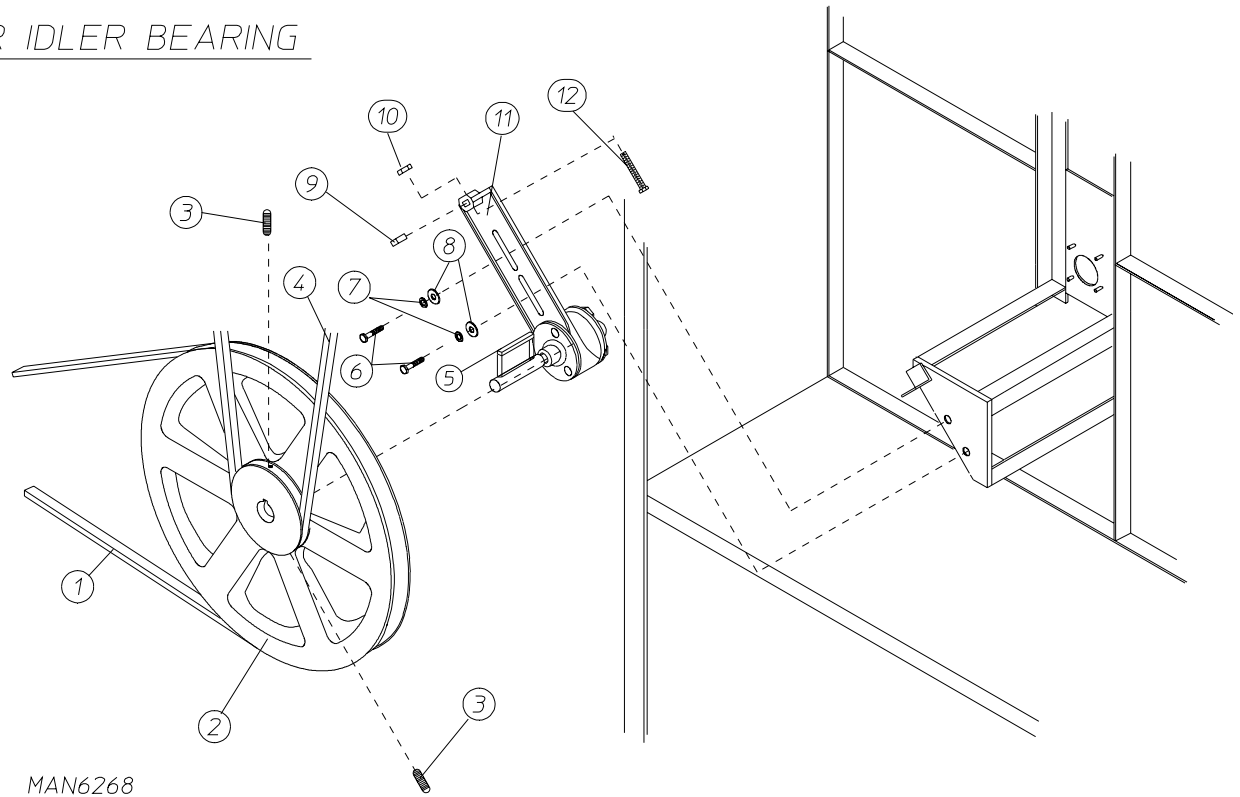


NOTE: DUPLICATE ALL COMPONENTS
FOR LOWER IDLER BEARING

WM 9/11/02


<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	100144	1	4L-420 V-Belt (idler to motor)
2	101129	1	9" x 2-1/2" Compound Pulley
3	154301	2	5/16-18 x 1" Setscrew
4	100100	1	5L-660 V-Belt (idler to tumbler)
5	100705	1	3/16" x 3/16" x 1-3/8" Key
6	150617	2	3/8-16 x 1" Hex Head Machine Bolt
7	153005	2	3/8" Lock Washer
8	153004	2	3/8" Flat Washer
9	152004	1	5/16-18 Hex Nut
10	152004	1	5/16-18 Hex Nut
11	882777	1	Idler Bearing Assembly Complete (includes illus. nos. 5 through 12)
12	150509	1	5/16-18 x 3" Tap Zinc Bolt

Exhaust Ducting Assembly

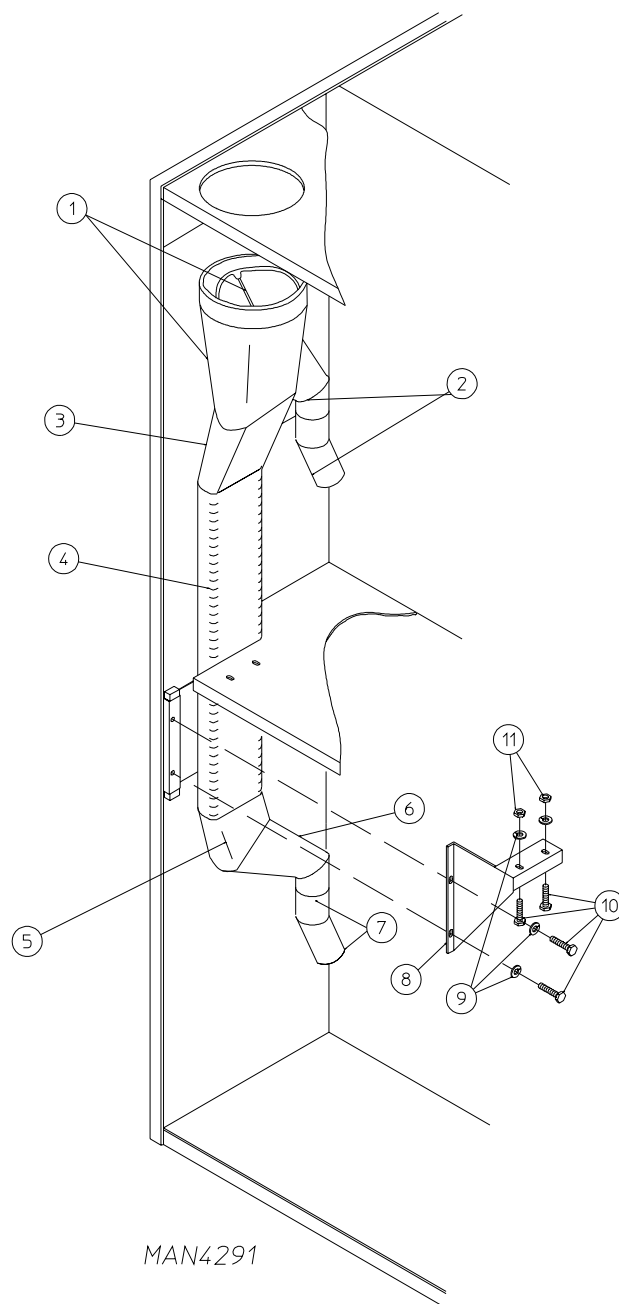

MAN4291

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	143535	1	Wye Branch
2	143536	2	6" Round x 45° Elbow
3	143527	1	6" Round x 7" Oval Straight Boot
4	143539	1	7" Oval x 15-1/2" Long Duct
5	143537	1	7" Oval x 45° Elbow
6	143538	1	6" Round x 7" Oval Straight Boot
7	143536	2	6" Round x 45° Elbow
	117505	6	Aluminum Duct Tape (sold by the foot)
8	851168	1	Exhaust Brace
9	153007	4	1/4" Split Lock Washer
10	150512	4	1/4-20 x 1/2" Hex Head Machine Bolt
11	152002	2	1/4-20 Hex Nut

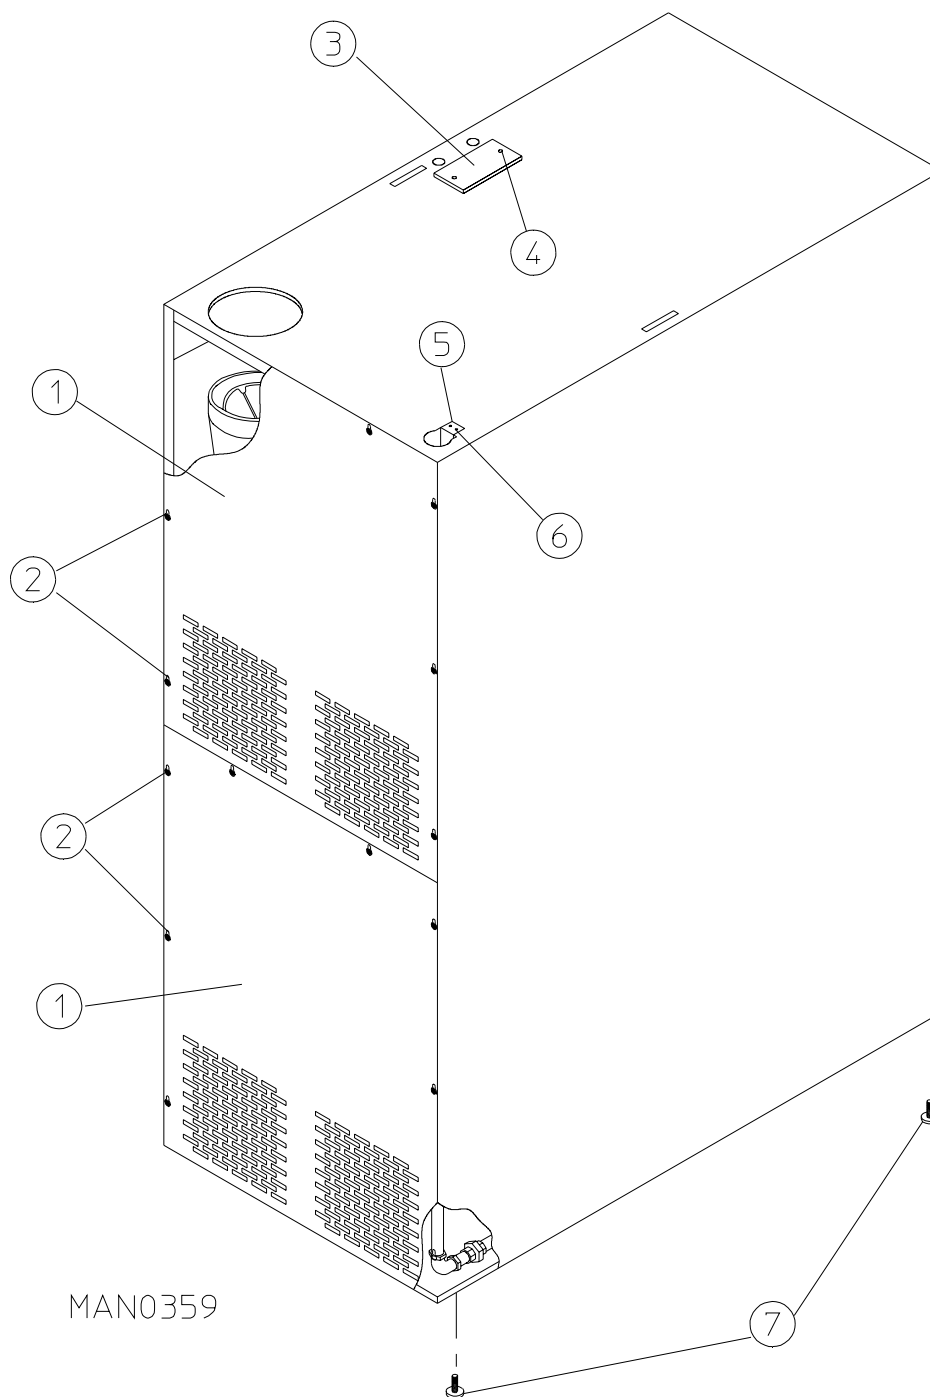

<u>Illus. No.</u>	<u>Part No.</u>	<u>Qty.</u>	<u>Description</u>
1	311544	2	Back Guard
2	150301	16	#8-18 x 7/16" Phillips Pan Head TEK Screw
3	315014	1	Cover Plate (top electric box)
4	150301	2	#8-18 x 7/16" Phillips Pan Head TEK Screw
5	318702	1	Top Pipe Support Bracket
6	150300	2	#10-16 x 1/2" Hex Washer TEK Screw
7	103500	4	Leveling Leg

