




COMMERCIAL GAS DRYER MULTI-LOAD STACK DRYER SERVICE PARTS LIST

MODELS:

MLG52PDBWW. (Painted) (as of January 2017)
MLG52PDBWS. (Stainless) (as of January 2017)


TRIM / CONTROL PANELS

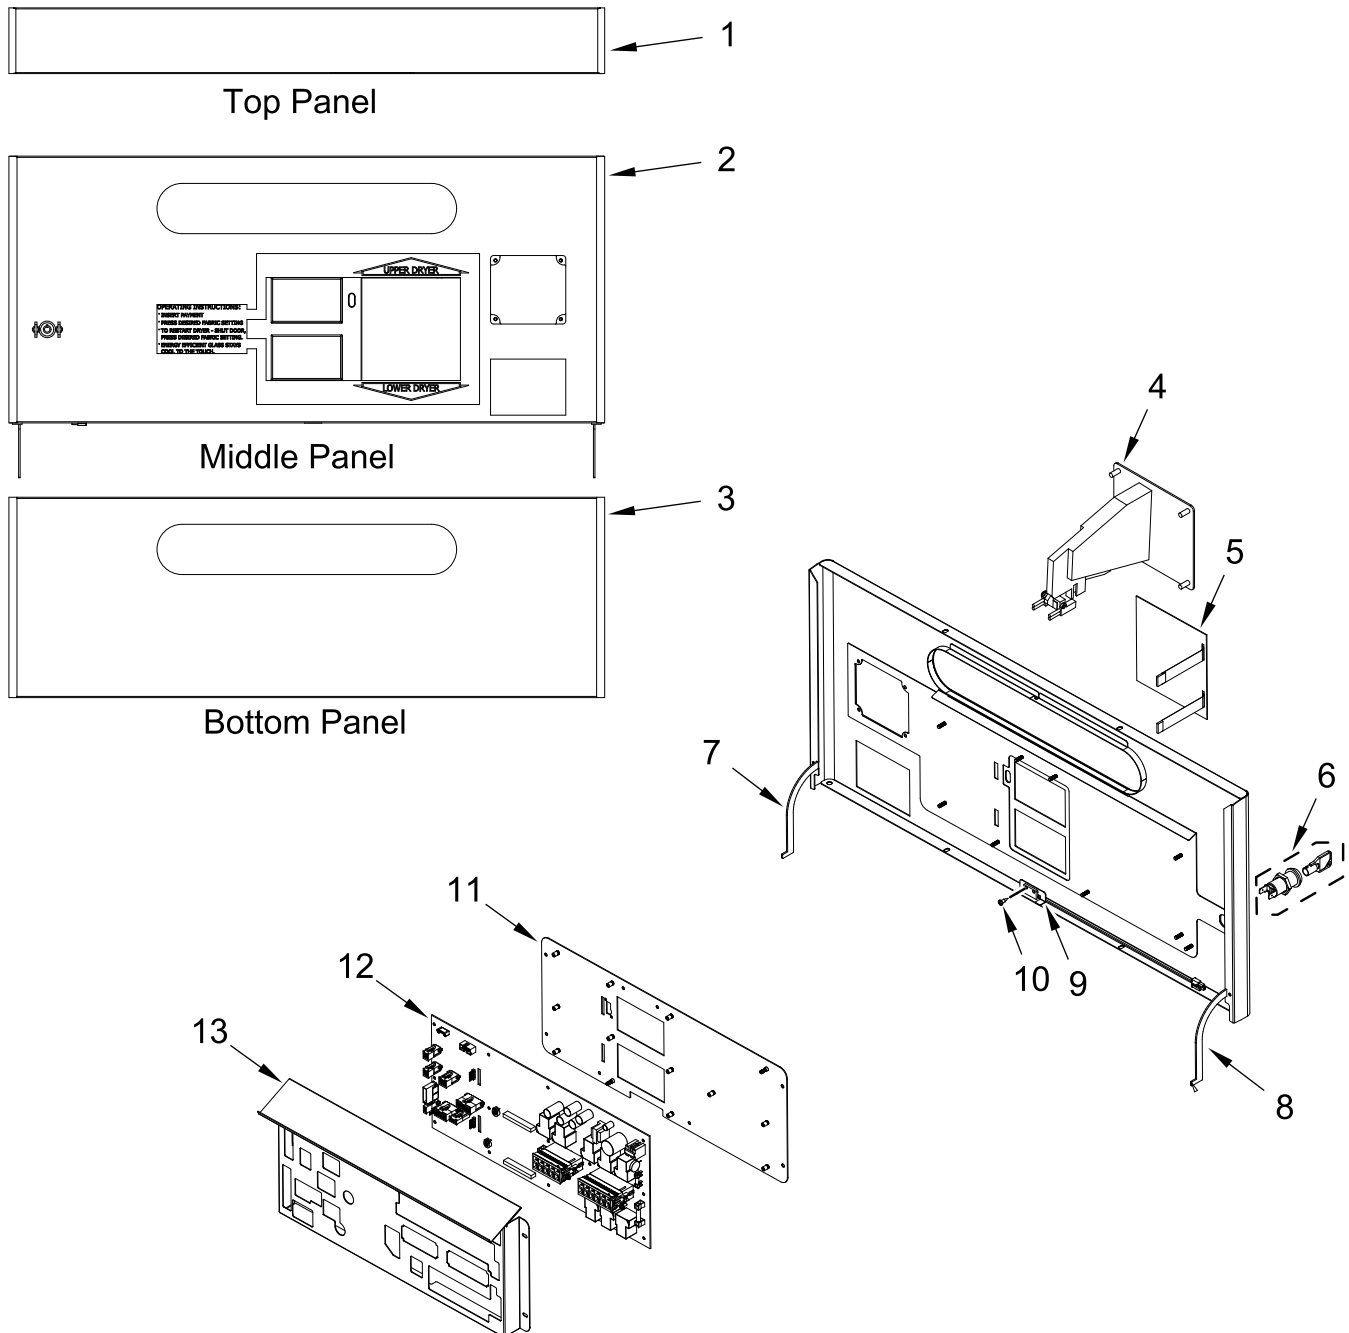

TRIM / CONTROL PANELS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR828390	Top Trim Panel Assembly	7	WFR315627	Control Panel Left Hinge	12	WFR884478	Phase 8 Computer Board
2	WFR828394	Phase 8 Control Door Assembly	8	WFR315626	Control Panel Right Hinge		WFR136116	Fuse 3 Amp (Fast Acting)
3	WFR815356	Toe Panel	9	WFR819196	Door Switch Assembly		WFR136056	Fuse 15 Amp (SLO-BLO)
4	WFR818213	Coin Acceptor Assembly	10	WFR150329	Screw 4 x 3/8 in	13	WFR315532	Phase 8 Control Cover
	WFR819807	Optic Switch Assembly	11	WFR828395	Control Board Mount Assembly			
5	WFR112606	Keypad						
6	WFR160070	Control Door Lock Assembly						


FRONT PANEL / DOOR ASSEMBLY

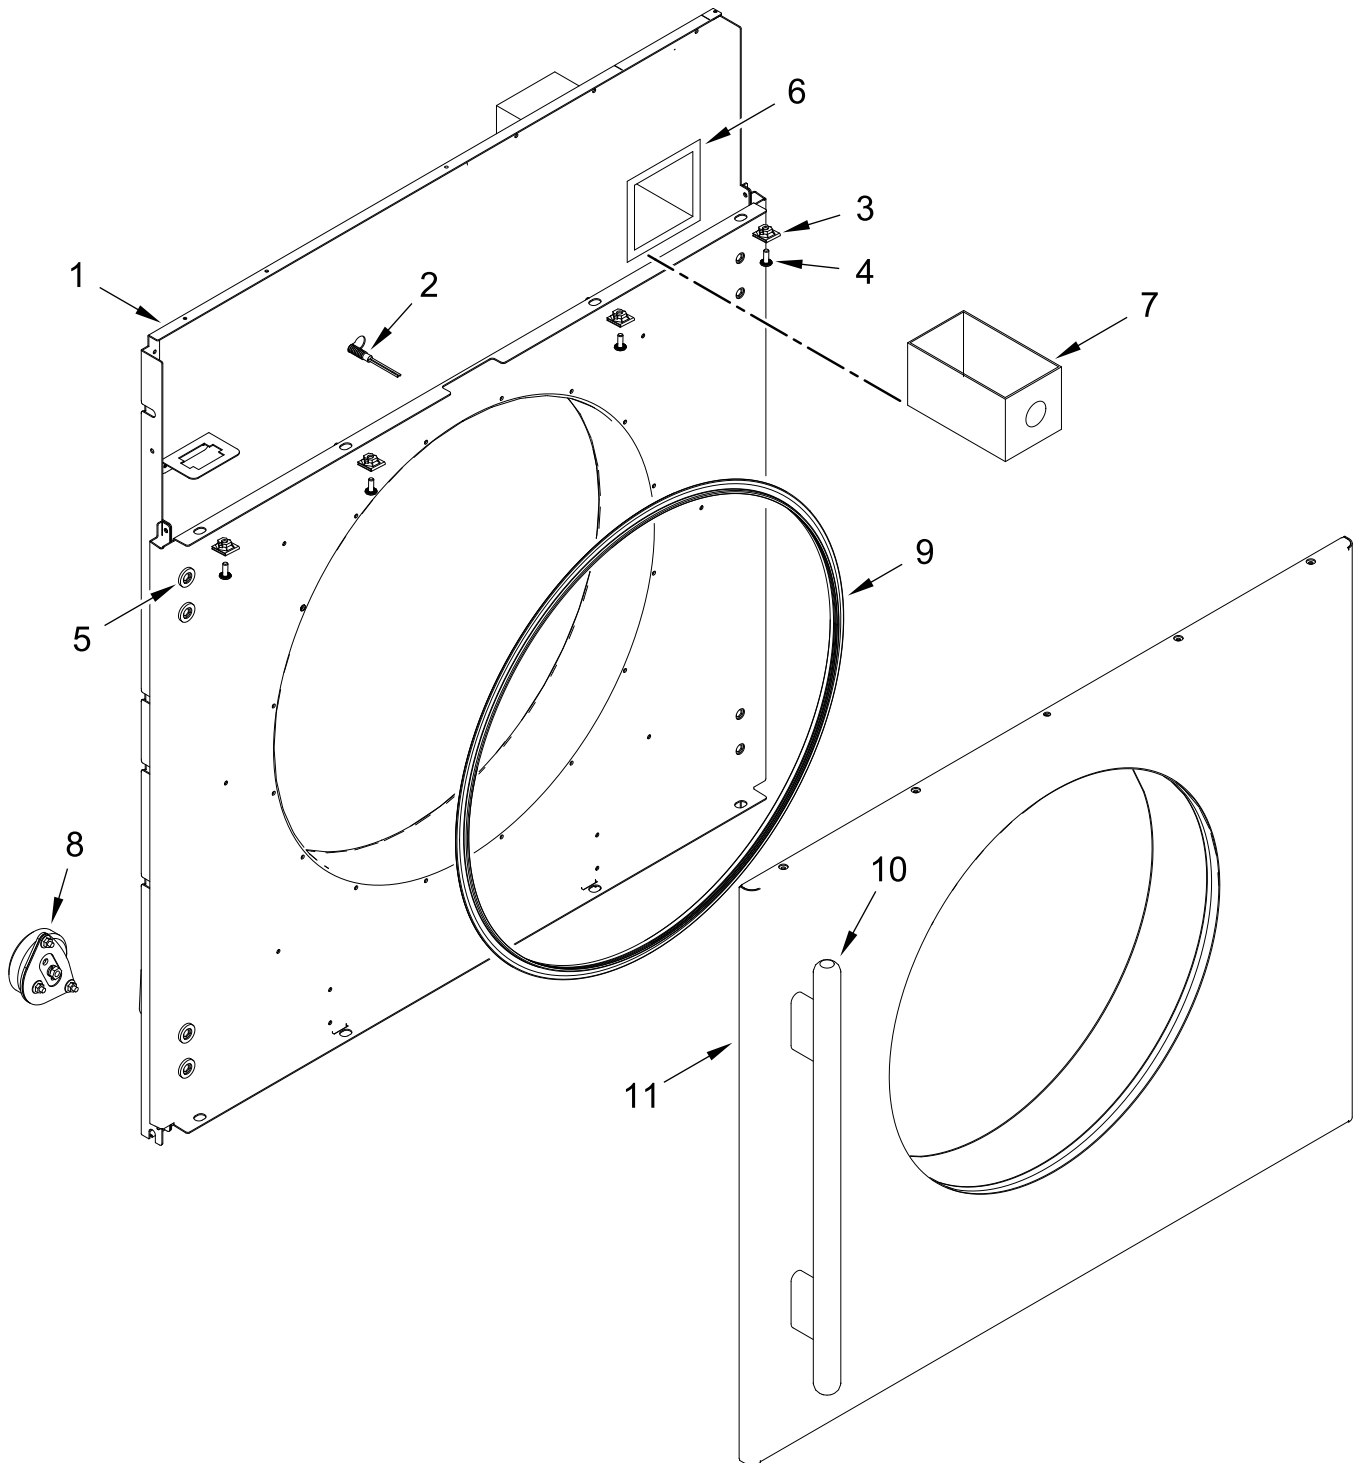

FRONT PANEL / DOOR ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR884499	Front Panel Assembly	6	WFR851339	Coin Vault Assembly	11	WFR815412	Door Assembly Hinge Right Cold Rolled Steel (painted)
2	WFR851528	Rotation Sensor Assembly	7	WFR125916	Coin Box			
3	WFR154065	U Nut	8	WFR815280	Front Wheel Assembly (refer to Wheel Assembly page)		WFR815419	Door Assembly Hinge Right (Stainless Steel)
4	WFR154364	Screw 10-16 x 1/2 in (Stainless Steel)						
5	WFR102004	Round Door Magnet 3/4 in	9	WFR102422	Door Gasket			
	WFR102005	Door Magnet Blank	10	WFR185183	Door Handle			
	WFR152223	Screw 10-32 x 1/2 in (TORX®)		WFR185182	Standoff (Door Handle)			


BLOWER ASSEMBLY

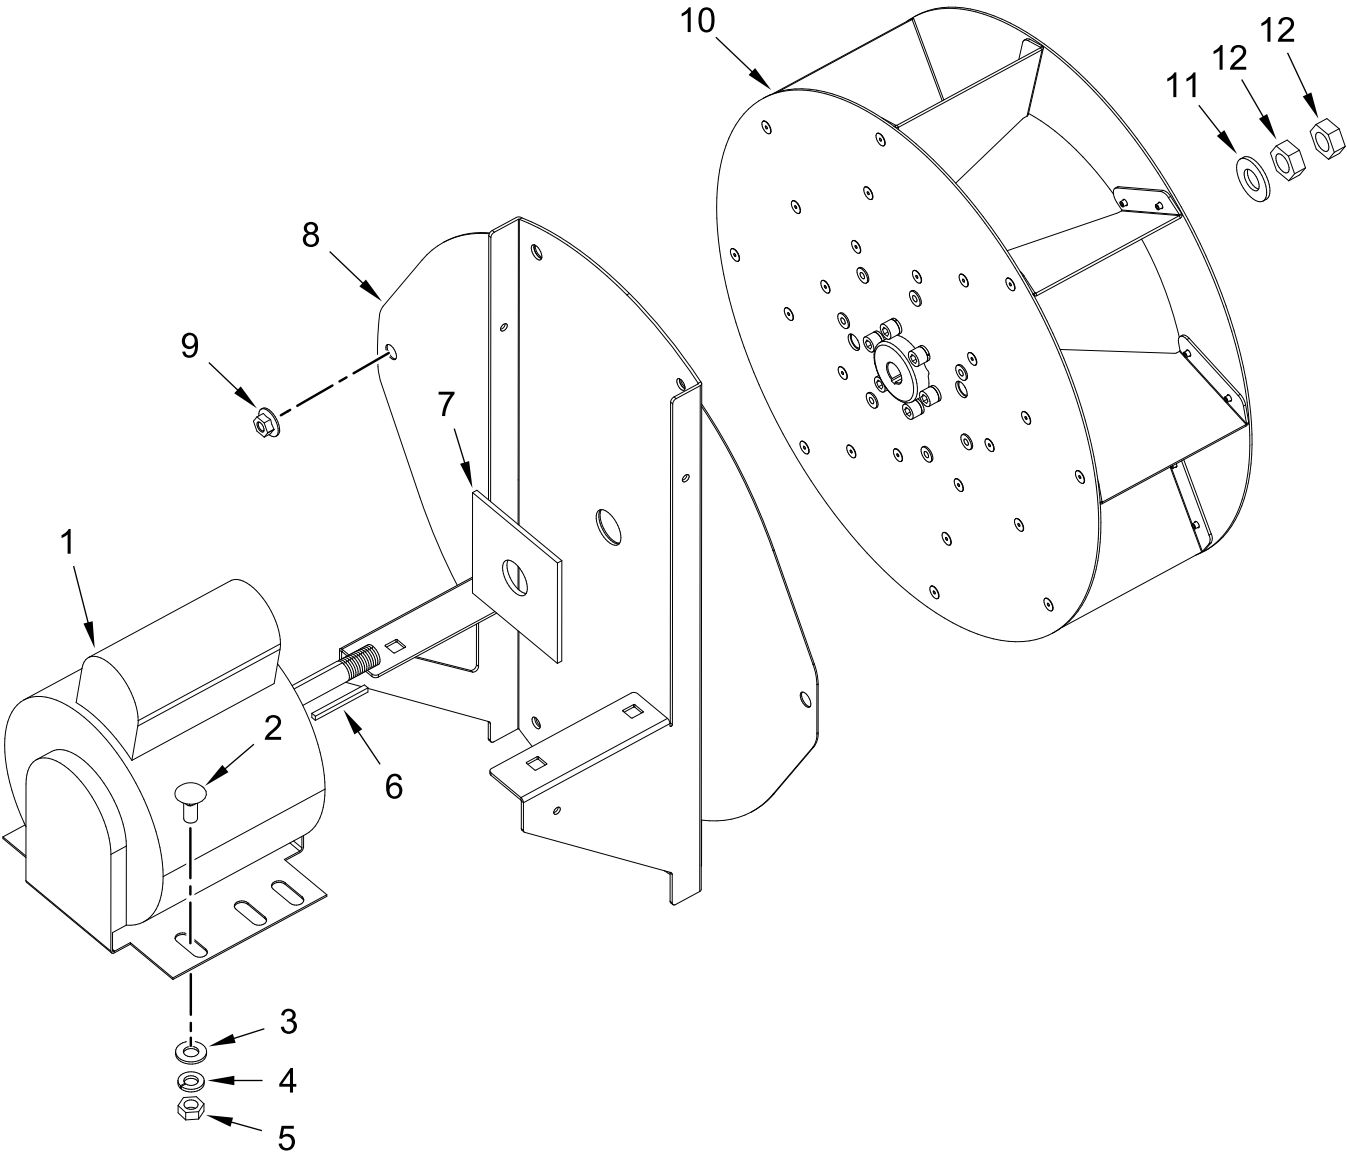

BLOWER ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR181038	Blower Motor 1/4 hp 100-115/200-230v 60Hz	5	WFR152004	Nut 5/16-18	10	WFR846062	Riveted Impellor 13-1/2 in
2	WFR154279	Carriage Bolt 5/16-18 x 3/4 in	6	WFR100702	Key 1/8 x 1/8 x 1-1/2 in	11	WFR153050	Washer 1/2 x 1 1/6 in
3	WFR153001	Washer 5/16 in	7	WFR116010	Felt Motor Seal ONLY	12	WFR152006	Nut 1/2-20
4	WFR153002	Split Lock Washer 5/16 in	8	WFR815395	Impellor/Motor Mount ONLY			
			9	WFR152014	Serrated Hex Flange Nut 1/4-20			


LINT BOX ASSEMBLY

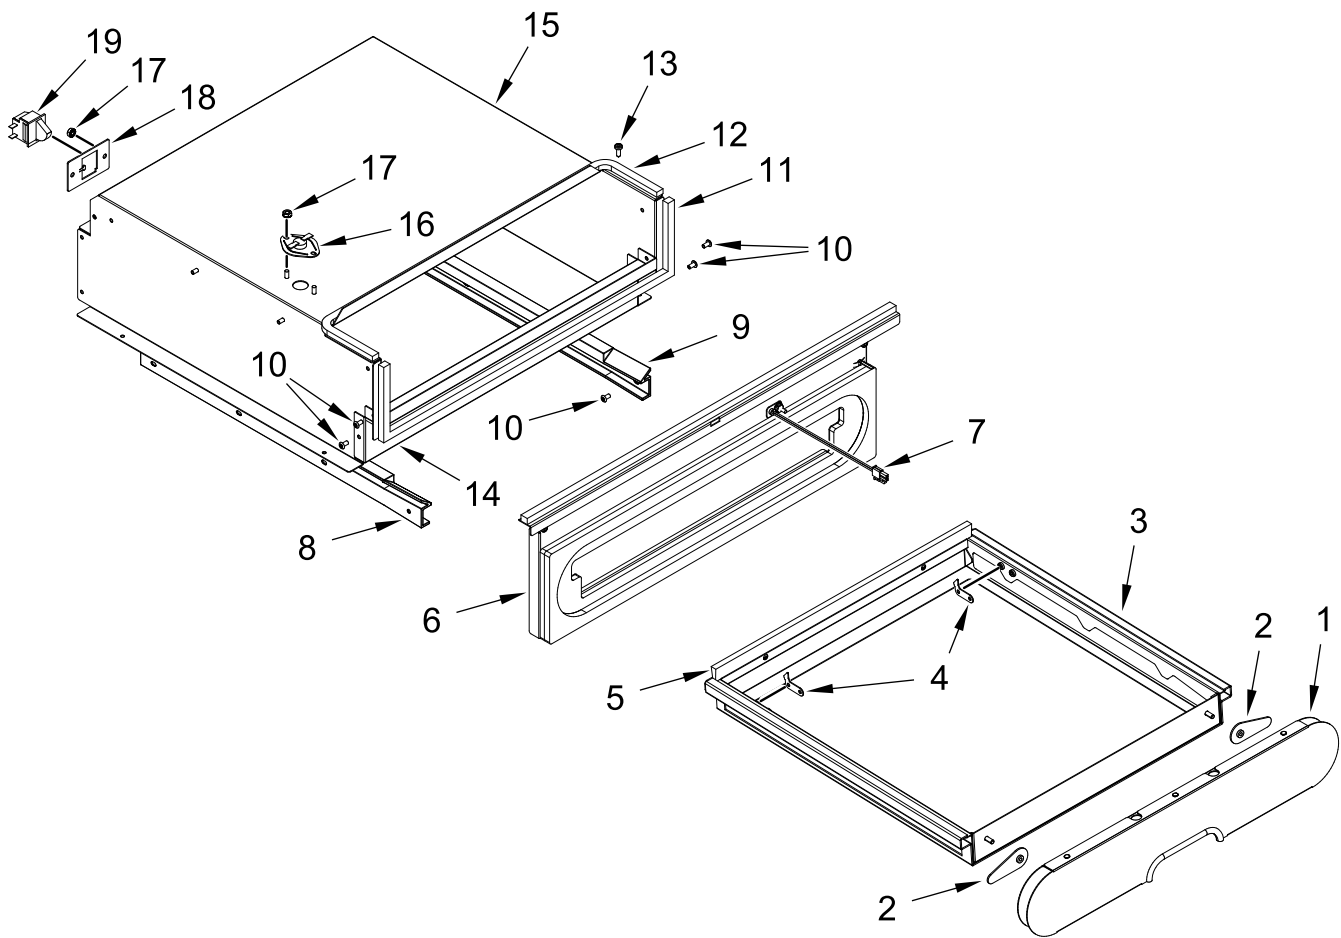

LINT BOX ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR828392	Lint Drawer Handle	8	WFR185216	Left Lint Rail	14	WFR315651	Lower Lint Box Front
2	WFR851536	Lint Drawer Clinch Nut Plate	9	WFR185215	Right Lint Rail	15	WFR815377	Lint Box Front and Clinch Stud Assembly
3	WFR815275	Lint Drawer Assembly	10	WFR154200	Rivet 5/32 in	16	WFR130119	190° Automatic High Limit
4	WFR185423	Lint Drawer Stop	11	WFR117617	Foam Tape (When Ordering Specify Length, sold by the inch)	17	WFR153073	Nut 8-32
5	WFR170237	Lint Drawer Brush	12	WFR117616	Semi-Closed Cell EPDM PSA 1/2 x 1/2 in	18	WFR315590	Lint Drawer Switch Bracket
6	WFR815378	Upper Lint Box Front Assembly	13	WFR150331	Screw 8-18 x 1/2 in	19	WFR122002	Lint Drawer Switch Only
7	WFR836028	Exhaust Temperature Probe						


TUMBLER / SUPPORT ASSEMBLIES

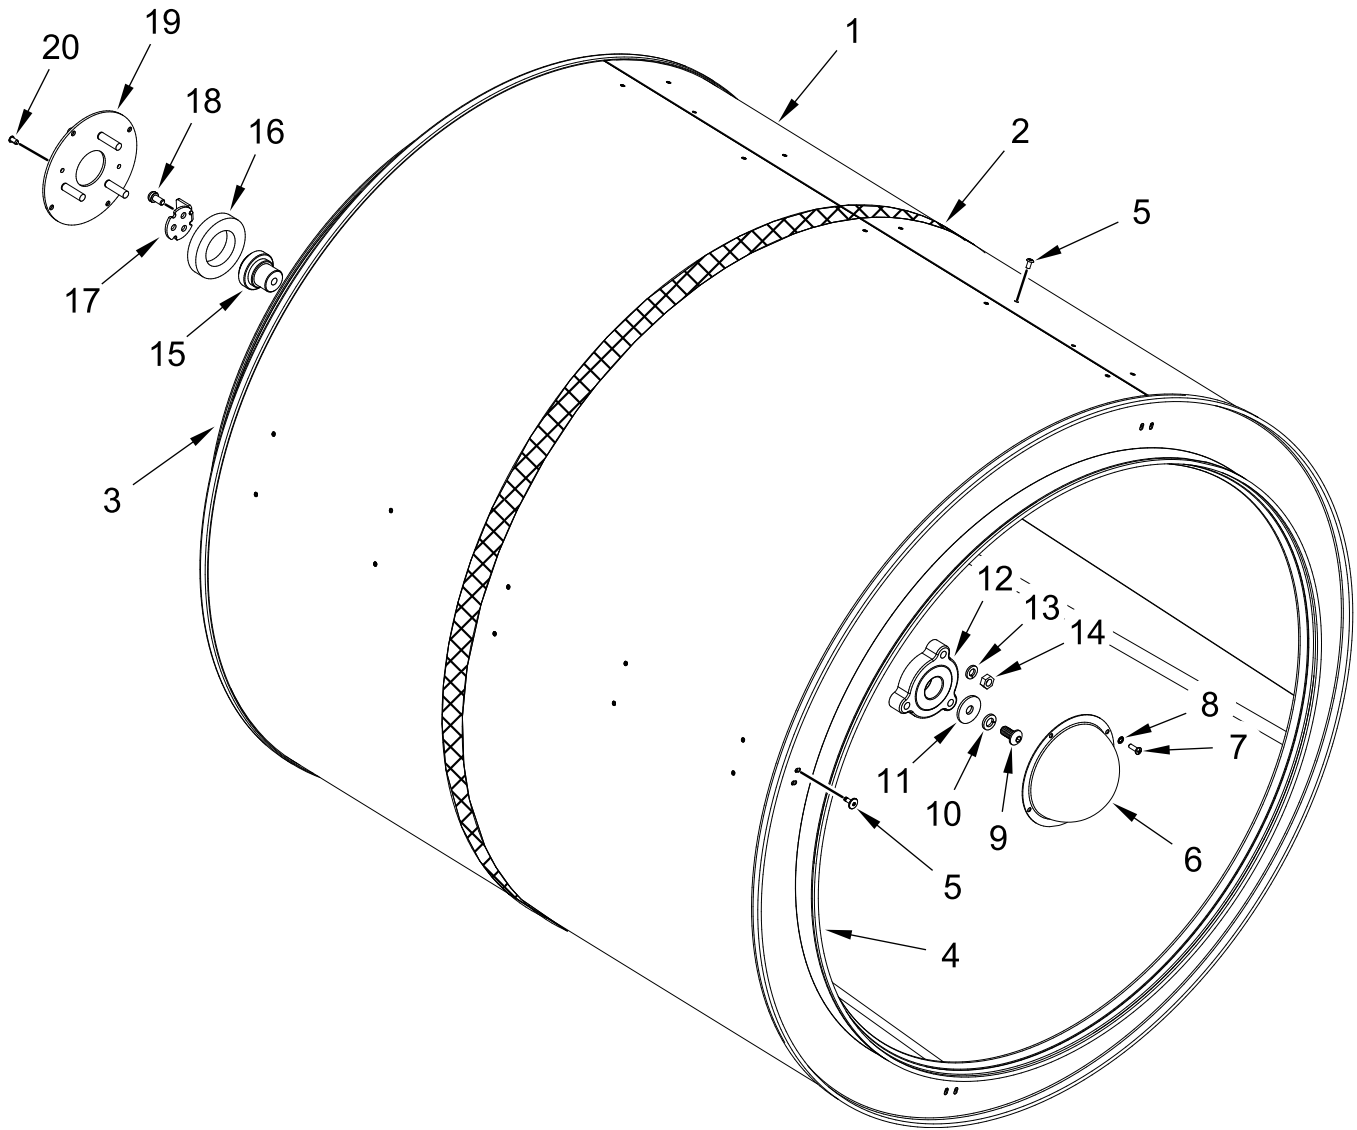

TUMBLER / SUPPORT ASSEMBLIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR815473	Tumbler Galvanized Assembly	9	WFR184241	Screw 3/8-16 x 3/4 in	16	WFR115919	Tumbler Bearing Felt Ring
2	WFR102418	Tumbler Belt	10	WFR153005	Split Lock Washer 3/8 in	17	WFR315588	Tumbler Shaft Washer
3	WFR115920	Rear Tumbler Felt	11	WFR346029	Washer Stainless Steel OD 1.22 in ID 0.38 in	18	WFR150636	Screw 1/4-20 x 1/2 in
4	WFR115921	Front Tumbler Felt	12	WFR100296	Flange Bearing	19	WFR846011	Tumbler Bearing Studded Plate Assembly
5	WFR154211	Rivet 5/32 in	13	WFR153002	Split Lock Washer 5/16 in	20	WFR153570	Self-Clinch Pilot Pin 3/16 x 3/8 in
6	WFR185597	Tumbler Bearing Cover	14	WFR152004	Nut 5/16-18			
7	WFR150108	Screw 8-32 x 1/2 in	15	WFR346119	Tumbler Shaft			
8	WFR153012	Washer #8						


MOTOR ASSEMBLY

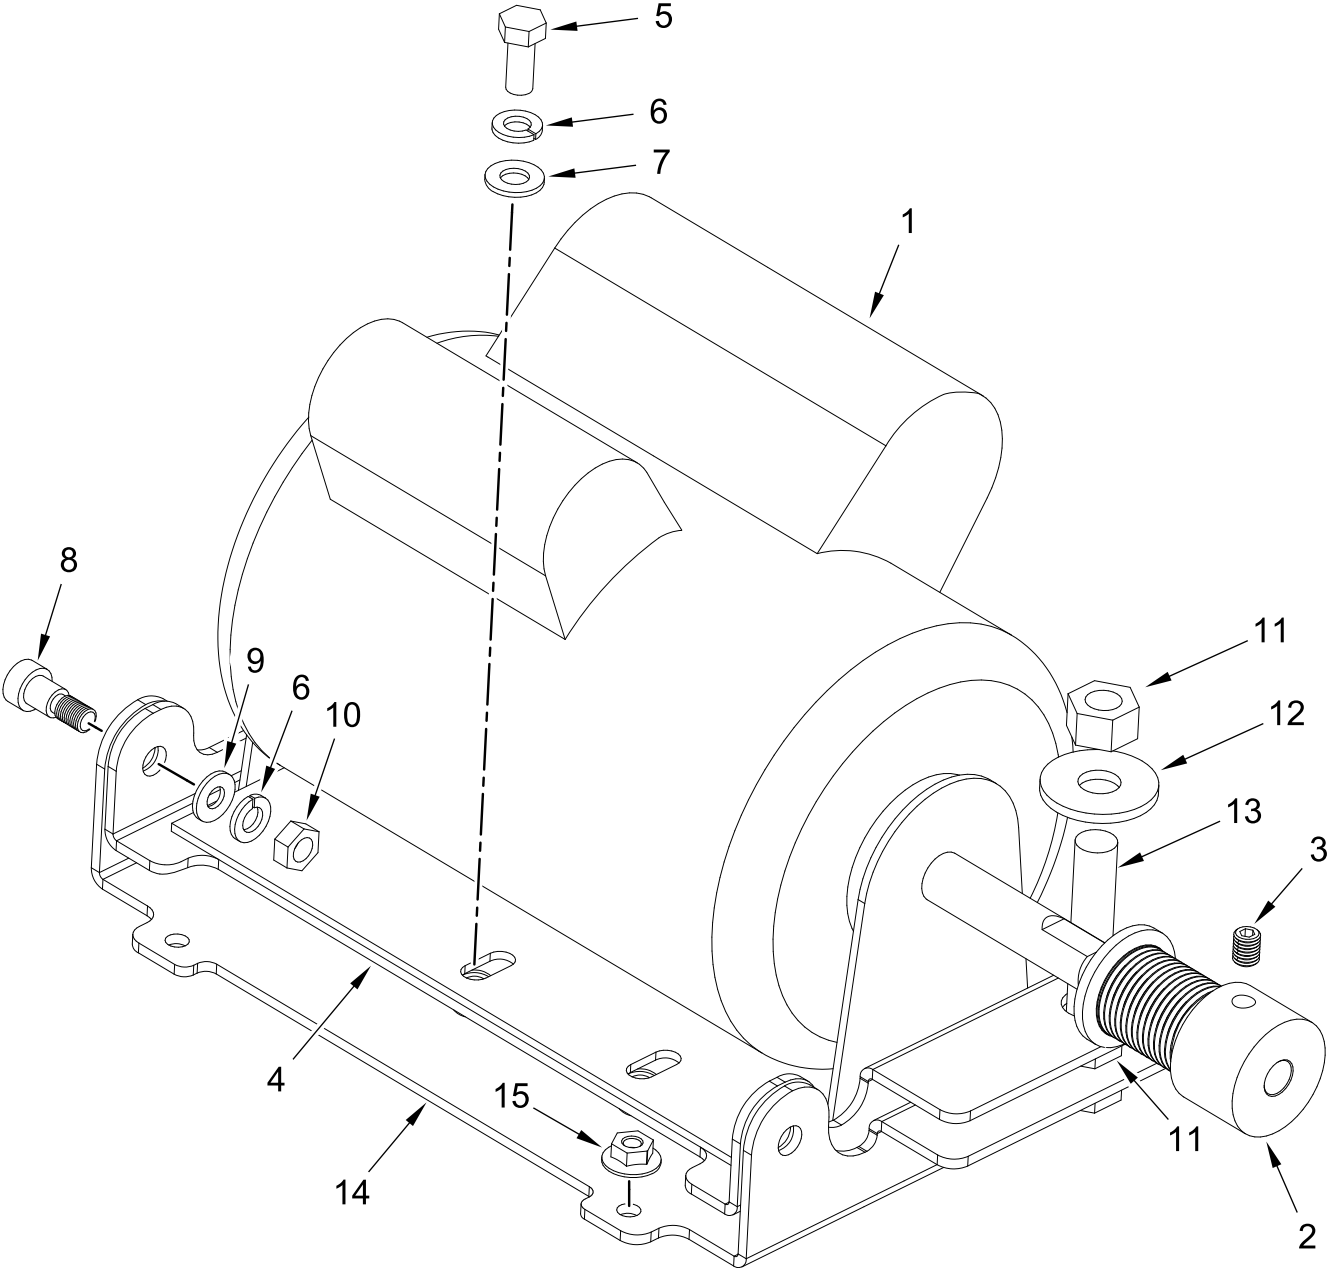

MOTOR ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR884393	Motor Complete (includes Motor Pulley and Set Screw)	5	WFR150501	Tap Bolt 5/16-18 x 3/4 in	10	WFR152004	Nut 5/16-18
	WFR181135	Motor ONLY	6	WFR153002	Split Lock Washer 5/16 in	11	WFR152011	Nut 1/2-13
2	WFR315696	Motor Pulley	7	WFR153001	Washer 5/16 in	12	WFR153033	Flat Washer 1/2 x 1-3/8 in
3	WFR829184	Set Screw	8	WFR154266	Shoulder Bolt 5/16-18 x 3/8 in	13	WFR150641	Tap Bolt 1/2-13 x 3 in
4	WFR846016	Motor Mount Assembly	9	WFR153018	Flat Washer 1/4 in	14	WFR346037	Motor Mount Base
						15	WFR152014	Serrated Hex Flange Nut 1/4-20


GAS TRAIN ASSEMBLY

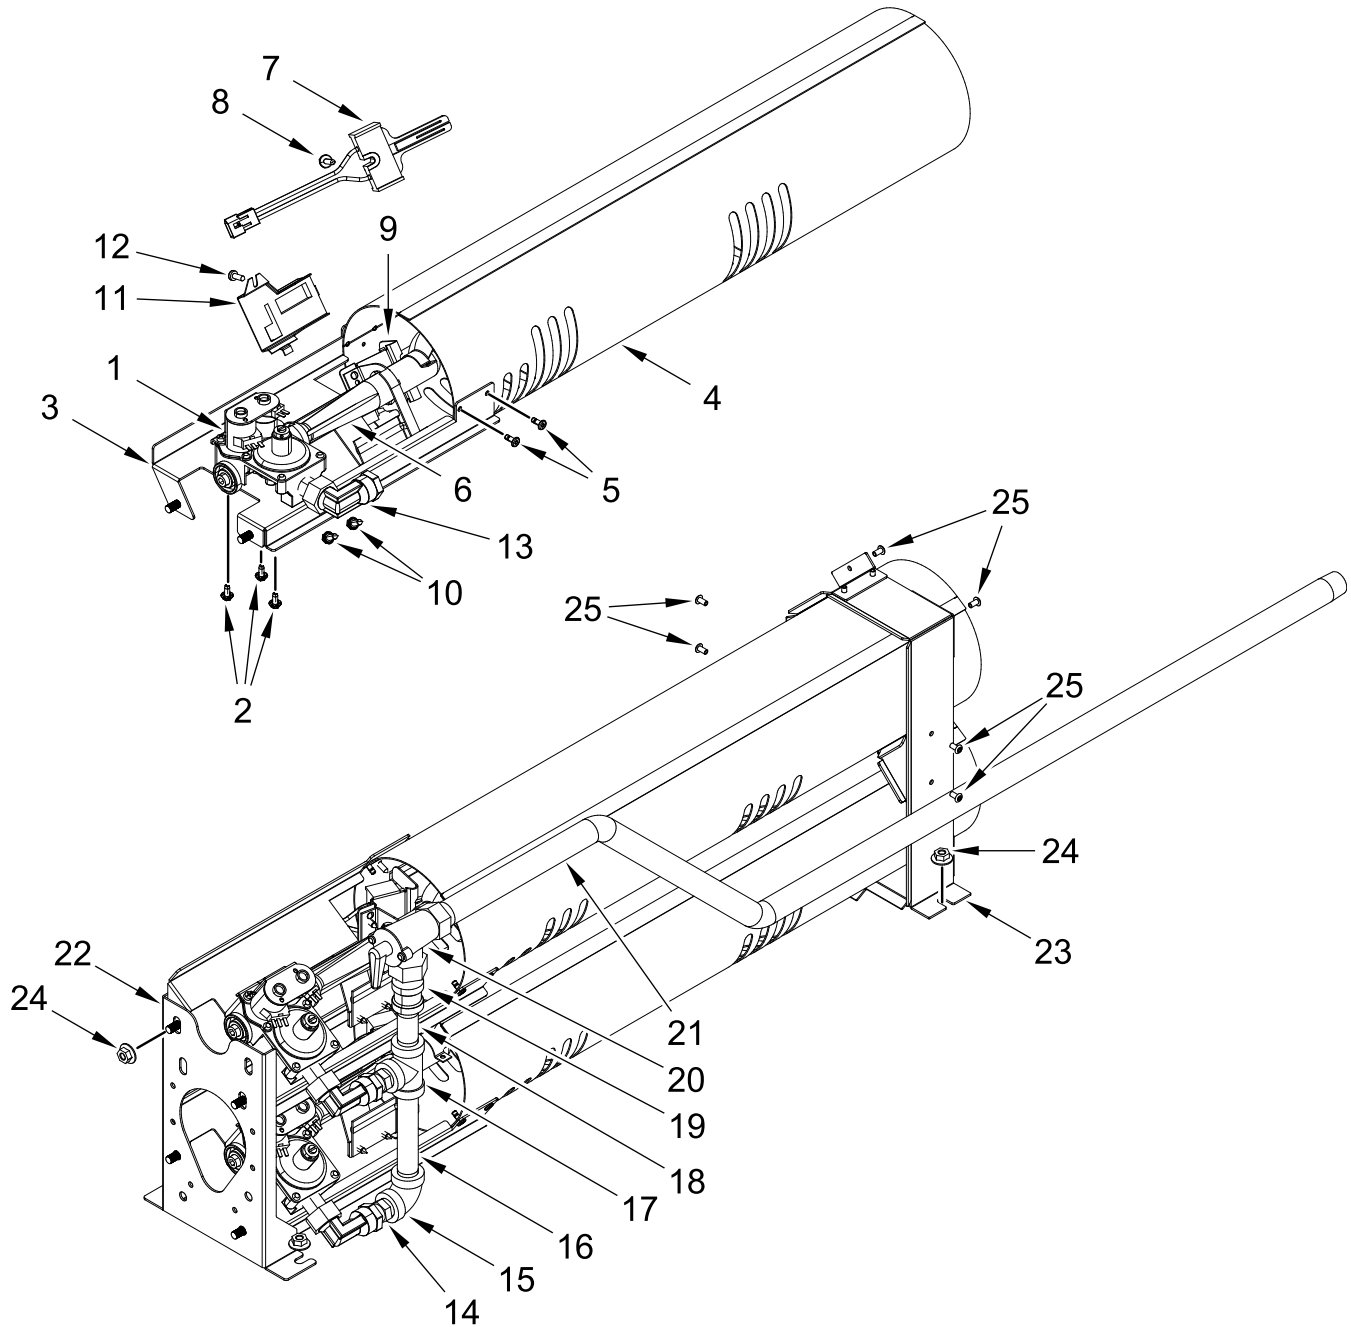

GAS TRAIN ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR128944	Gas Valve 120 VAC 60 Hz	12	WFR150331	Screw 8-18 x 1/2 in	21	WFR185676	Gas Pipe
2	WFR152209	Screw 8-18 x 3/8 in	13	WFR141319	Brass Elbow 3/8 in	22	WFR315604	Front Gas Burner Mounting Bracket
3	WFR815308	Gas Valve Bracket	14	WFR182579	Brass Nipple 3/8 MPT x 3/8 MPT in	23	WFR884390	Gas Oven Acceptor Assembly
4	WFR315548	Tube, Burner	15	WFR143359	Elbow 3/8 NPT 90	24	WFR152014	Serrated Hex Flange Nut 1/4-20
5	WFR154205	Rivet Stainless Steel 5/32 x 1/4 in	16	WFR142764	Black Iron Pipe Nipple 3/8 x 4 in	25	WFR154200	Rivet 5/32 in
6	WFR183144	Tube, Burner	17	WFR143358	Black Iron Tee 3/8 NPT			
7	WFR128910	Ignitor	18	WFR142631	Black Iron Pipe Nipple 3/8 x 2 in			
8	WFR183145	Screw 8-32 x 7/8 in	19	WFR143027	Black Iron Coupling 1/2 x 3/8 in			
9	WFR185063	Bracket, Ignitor	20	WFR141320	Union-Shutoff Valve 1/2M x 1/2F in			
10	WFR152208	Screw 10-16 x 1/2 in						
11	WFR130500	Radiant Control						


REAR PANEL ASSEMBLY

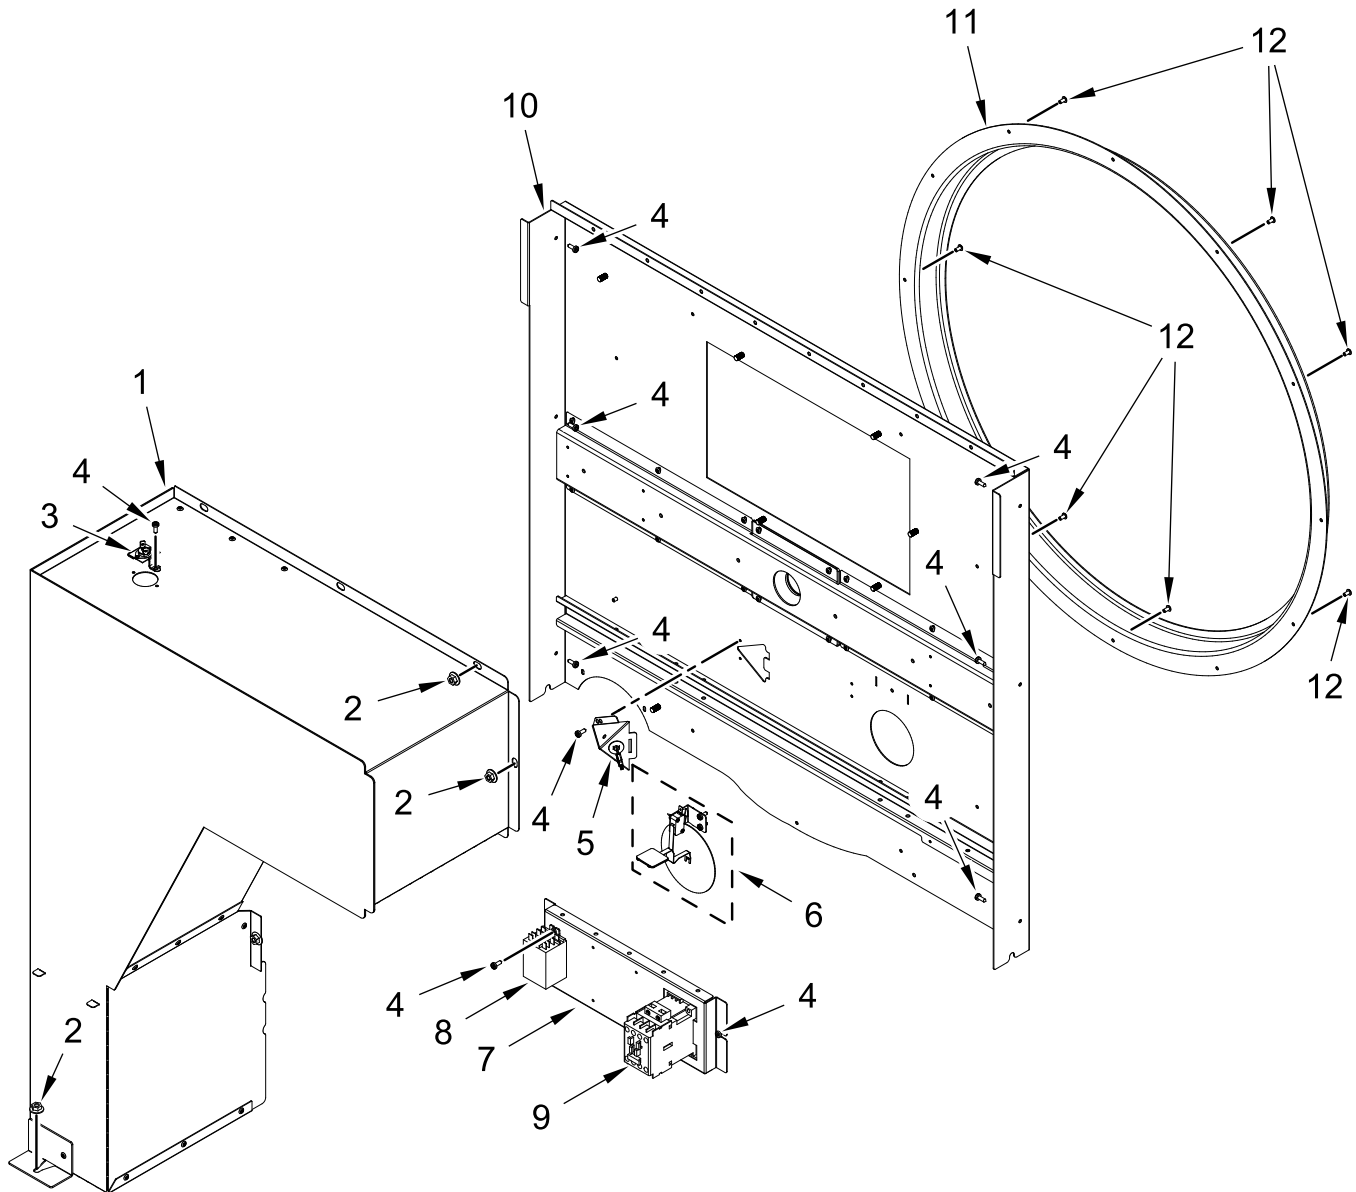

REAR PANEL ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR815287	Heat Duct	6	WFR828238	Sail Switch Assembly	10	WFR815380	Rear Support Panel
2	WFR152014	Serrated Hex Flange Nut 1/4-20	7	WFR315726	Relay Panel Assembly 120V	11	WFR185673	Rear Bulkhead
3	WFR183112	Thermostat High Limit	8	WFR131819	Relay, Reversing 120V 25A	12	WFR154200	Rivet 5/32 in
4	WFR150331	Screw 8-18 x 1/2 in	9	WFR132414	DPDT Contactor 120V			
5	WFR851258	Axial Probe Assembly						

WHEEL ASSEMBLY

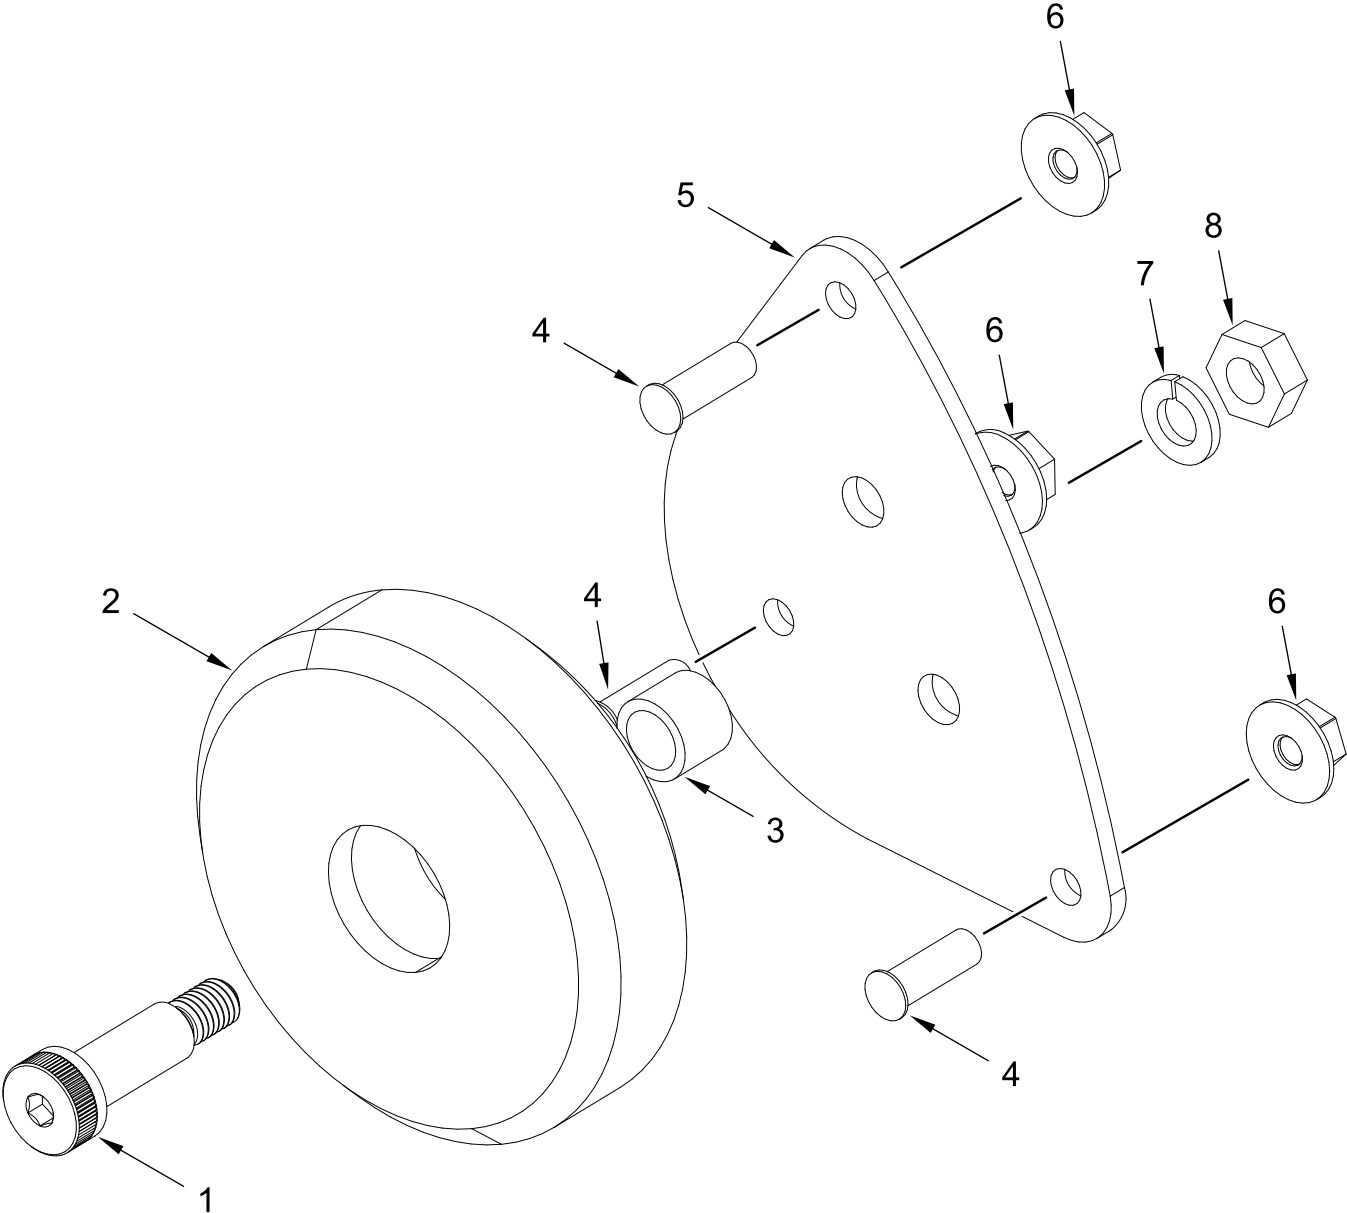

WHEEL ASSEMBLY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	WFR154264	Screw M8 x 25mm	5	WFR315536	Wheel Bracket Front	7	WFR153002	Split Lock Washer 5/16 in
2	WFR180060	Tumbler Support Wheel 3-1/2 in	6	WFR152014	Serrated Hex Flange Nut 1/4-20	8	WFR154013	Nut M8
3	WFR154284	Tumbler Wheel Spacer						
4	WFR153557	Self-Clinching Stud 1/4-20 x 3/4 in						