



PHASE 7.5 NON-COIN USER'S MANUAL (S.A.F.E.)

American Dryer Corporation
88 Currant Road
Fall River, MA 02720-4781
Telephone: (508) 678-9000 / Fax: (508) 678-9447
E-mail: techsupport@amdry.com
www.amdry.com

Retain This Manual In A Safe Place For Future Reference

Please read this manual carefully to thoroughly familiarize yourself with the Phase 7.5 non-coin computer system features, operational instructions, and programming characteristics. This manual contains important information on how to employ ALL the features of your new **ADC** dryer in the safest and most economical way.

American Dryer Corporation products embody advanced concepts in engineering, design, and safety. If this product is properly maintained, it will provide many years of safe, efficient, and trouble free operation.

We have tried to make this manual as complete as possible and hope you will find it useful. **ADC** reserves the right to make changes from time to time, without notice or obligation, in prices, specifications, colors, and material, and to change or discontinue models.

NOTE: If power to the dryer is off, the S.A.F.E. system is disabled.

Table of Contents

SECTION I

INTRODUCTION	3
---------------------------	----------

SECTION II

FEATURES	4
-----------------------	----------

A. Dependable Microprocessor Solid State Integrated Circuitry	4
B. Sensor Activated Fire Extinguishing (S.A.F.E.) System	4
C. Program Changes Are Easily Made At The Keyboard (Touch Pad)	4
D. Automatic Drying Cycle (Patent No. 4,827,627)	4
E. Timed (Manual) Drying Cycle	4
F. Preprogrammed Cycles	4
G. Manually Loaded Cycles	4
H. Variable (Programmable) Fabric/Temperature Selections	4
I. Cool Down/Controlled Cool Down Program	4
J. L.E.D. Display	4
K. Wrinkle Guard Program	4
L. Diagnostics	4
M. Audio Alert Signal	4
N. Temperature Conversion Status	5
O. Axial Mode	5
P. High-Temperature Protection	5
Q. Cycle Preview	5
R. Reversing Option	5
S. RPM	5
T. Clean Lint	5
U. Language Selection	5
V. Model Selection	5
W. Default Factory Settings	5
X. Keyboard (Touch Pad) Symbols	5

SECTION III

PROGRAM SELECTIONS	6
---------------------------------	----------

A. Preprogrammed Cycles	6
B. Manually Loaded Cycles	7
C. Automatic Drying Cycle (Patent No. 4,827,627) Operations	8
D. Timed (Manual) Drying Cycle Operation	8
E. Light Emitting Diode (L.E.D.) Dot Matrix Display	8
F. Cycle In Progress Temperature Display	9
G. Temperature Conversion Status	9
H. Wrinkle Guard Program	9
I. Audio Alert On Times 0 to 10	10
J. Preprogrammed Cycle Preview	10
K. Reversing Option	10
L. Diagnostics	11
M. Program Locations	11

SECTION IV	
OPERATING INSTRUCTIONS	14
A. Operating Sequence	14
B. Operating Notes	18
C. Sensor Activated Fire Extinguishing (S.A.F.E.) System Theory Of Operation	19
SECTION V	
L.E.D. DISPLAY MESSAGES	21
A. L.E.D. Display Operating Status	21
SECTION VI	
PROGRAMMING INSTRUCTIONS	22
A. Introduction to Programming	22
B. Programming Flowcharts	24
SECTION VII	
FACTORY PRESET PARAMETERS (PROGRAMS).....	65
A. Cycle “A-F” Parameters (Programs) Preset By The Factory	65
B. Cycle “0-40” Parameters (Programs) Preset By The Factory	66
SECTION VIII	
PHASE 7.5 NON-COIN PROGRAMMING LIMITS	67
A. Preprogrammed Cycles	67
B. System Parameters (Program Locations)	68
C. Fixed Parameters	68
SECTION IX	
PHASE 7.5 AUTO CYCLE (PATENT NO. 4,827,627) CYCLE ADJUSTMENT VALUES.....	69
SECTION X	
PHASE 7.5 NON-COIN SYSTEM DIAGNOSTICS.....	70
A. Diagnostic (L.E.D. Display) Fault Messages	70
B. S.A.F.E. System Diagnostic Conditions	71
C. Input/Output (I/O) Board Light Emitting Diode (L.E.D.) Indicators	72
D. Keyboard (Touch Pad) Layout	73
SECTION XI	
CUSTOMER CUSTOM PARAMETER SETTINGS	74

SECTION I

INTRODUCTION

PHASE 7.5 “NON-COIN” MICROPROCESSOR DRYING SYSTEM

The **American Dryer Corporation’s** Phase 7.5 Non-Coin Drying System has been designed with super performance in mind to provide for better temperature regulation, efficiency, performance, consistency, and faster drying times.

Among its many amenities, **ADC’s** Phase 7.5 Non-Coin Drying System has a true Automatic Drying Cycle. The Phase 7.5 Non-Coin Automatic Drying Cycle (**Patent No. 4,827,627**) principle is based on one (1) of the most fundamental laws of thermodynamics, which governs the flow of heat in thermal systems.

Utilizing this microprocessor technology, the user simply has to place the load in the dryer and push one (1) single button to start the drying cycle. The Phase 7.5 non-coin microprocessor controller (computer) will directly monitor the moisture content in the load and stop the drying cycle automatically when the selected dryness level is reached.

The **ADC** Phase 7.5 Non-Coin Automatic Drying Cycle (**Patent No. 4,827,627**) virtually eliminates **ALL** guesswork. The Phase 7.5 non-coin microprocessor controller (computer) determines how much drying time is needed and compensates for various types of fabrics and load sizes, thus, avoiding damage to fabrics by over drying, as well as avoiding wasted time and energy for any given load. Once the Phase 7.5 non-coin microprocessor controller (computer) determines the load is dry, the microprocessor controller (computer) will go into Cool Down Cycle until the preprogrammed time or temperature is reached, and then shuts the dryer off automatically.

SECTION II

FEATURES

- A. **Dependable Microprocessor Solid State Integrated Circuitry** – To eliminate as many moving parts as possible.
- B. **Sensor Activated Fire Extinguishing (S.A.F.E.) System** – A standard feature, which continually monitors the basket (tumbler) for fires, in the event of a fire a water supply to the basket (tumbler) will suppress the fire. The Phase 7.5 non-coin microprocessor controller (computer) will also notify the user that a fire has taken place.
- C. **Program Changes Are Easily Made At The Keyboard (Touch Pad)** – Actual programs are viewed at the light emitting diode (L.E.D.) display for verification.
- D. **Automatic Drying Cycle (Patent No. 4,827,627)** – Computerized monitoring of load dryness for precise, fast, and efficient drying.
- E. **Timed (Manual) Drying Cycle** – For special loads, programming allows for a specific amount of time in minutes for both drying and Cool Down Cycles.
- F. **Preprogrammed Cycles** – The Phase 7.5 non-coin microprocessor controller (computer) can store in its memory six (6) preprogrammed cycles in either the Automatic Drying Mode (**Patent No. 4,827,627**) or Manual Drying Mode in the “A-F” keys and an additional 41 in the numerical memory of “0-40.”
- G. **Manually Loaded Cycles** – For occasional or onetime special loads, the user can set a specific program in either the Automatic Drying Cycle (**Patent No. 4,827,627**) or Manual Timed Drying Cycle.
- H. **Variable (Programmable) Fabric/Temperature Selections** – Accommodates the type of fabric to be dried.
- I. **Cool Down/Controlled Cool Down Program** – Cool down lowers the temperature of the exhaust to make the material cool enough to handle. Controlled cool down slowly lowers the temperature over 10 minutes for materials sensitive to shrinking.
- J. **L.E.D. Display** – Informs user of cycle status, programs and displays important diagnostic and fault codes.
- K. **Wrinkle Guard Program** – Helps keep items wrinkle-free when they are not removed from the dryer promptly at the end of the drying and cooling cycles.
- L. **Diagnostics** – Major circuits, including the door switch(es), microprocessor temperature sensor and heat output circuits, and more are individually monitored, give precise messages of your failure.
- M. **Audio Alert Signal** – The tone will sound at the end of a complete drying cycle at a 1-second rate for the duration programmed. It will also sound for any fault conditions at a quarter second rate for 4-beeps. Finally, there is a 3-beep warning at the beginning of every Wrinkle Guard On Cycle. A continuous rapid pulse is used for the entire duration of S.A.F.E. system activation.

- N. **Temperature Conversion Status** – Temperature related programs can be set in either Fahrenheit (°F) or Celsius (°C). **ALL** temperatures will automatically convert to the corresponding values (+/- 1°) when changes are made.
- O. **Axial Mode** – When in Axial Mode, the maximum temperature is limited to 150° F (66° C), **ALL** of the temperature menus will adjust accordingly.
- P. **High-Temperature Protection** – If the Phase 7.5 non-coin microprocessor controller (computer) senses that the temperature in the basket (tumbler) has exceeded 170° F (77° C) for axial airflow, 220° F (104° C) for radial airflow, it will end the drying cycle and a fault code **will be** displayed, indicating an overheating problem.
- Q. **Cycle Preview** – Entire dryer parameters (programs) or the preprogrammed cycles are displayed for verification upon a coded entry to the keyboard (touch pad).
- R. **Reversing Option** – Helps reduce the balling up or tangling of large items. A cycle can be set to have the reversing option where the basket (tumbler) will turn in the forward direction from 30- to 120-seconds, stop from 5- to 10-seconds, and then proceed in the reverse direction for the same time. This process is repeated throughout the drying and cooling cycles.
- S. **RPM** – The Phase 7.5 non-coin microprocessor controller (computer) also displays basket (tumbler) RPM by pressing and holding the “DOWN ARROW” key while the basket (tumbler) is on. (The basket [tumbler] **must be** rotating for approximately 30-seconds before getting a true RPM reading).
- T. **Clean Lint** – This feature monitors the value of the “Lint Cleaning Frequency” timer. The timer keeps track of how long the dryer’s blower/fan has been on and compares it to the Lint Cleaning Frequency setting. Once the timer equals the Lint Cleaning Frequency setting, the microprocessor will begin to prompt the user to “CLEAN LINT.” The microprocessor will allow two (2) additional hours of run time before the control is locked-out in “CLEAN LINT” state. The dryer **will not be** cleared from this state until the lint drawer has been cleaned. When the lint drawer is opened, the display will read “Lint Access Open” and when the lint drawer is closed, the display will read “READY.” (NOTE: The lint drawer **must be** opened for 15-seconds or more for the reset to occur. The dryer circuit is now active and can be programmed.)
- U. **Language Selection** – Phase 7.5 has the ability to display five (5) different languages, English, French, Spanish, Italian, and German.
- V. **Model Selection** – The Phase 7.5 can be programmed to be used on three (3) modes of heat, gas, steam, and electric. It can also be configured for reversing and non-reversing dryers.
- W. **Default Factory Settings** – This feature will set **ALL** programmed parameters to their default values.

X. **Keyboard (Touch Pad) Symbols**



= “STOP/CLEAR” key



= “START/ENTER” key



= “UP ARROW” key (scroll up)



= “DOWN ARROW” key (scroll down)

SECTION III


PROGRAM SELECTIONS

A. PREPROGRAMMED CYCLES

“A-F” CYCLES


The Phase 7.5 non-coin microprocessor controller (computer) can store in its memory six (6) preprogrammed cycles (keys “A-F” on the keyboard [touch pad]). This allows the user to have the six (6) most commonly used cycles, requiring only the push of a single keyboard (touch pad) entry to start the dryer.

“0-40” CYCLES

The Phase 7.5 non-coin microprocessor controller (computer) can store 41 preprogrammed cycles in its numerical memory. (Use keys “0-9” on the keyboard [touch pad]). This allows the user to have up to 41 customized programmed cycles that may not be as commonly used as the six (6) “A-F.” These are not one (1) touch entries to start the dryer like the “A-F.” They are selected by entering the number, which represents the cycle desired and pressing the “START/ENTER”  key to start the cycle.

Both types of the preprogrammed cycles can be set in either the Automatic Drying Mode (**Patent 4,827,627**), where the drying cycle will end when the selected dryness level has been reached, or in the Manual Timed Drying Mode where the dryer will operate for the specific drying time programmed. These cycles can be programmed in any combination.

Once the heating cycle is completed, the Phase 7.5 non-coin microprocessor controller (computer) then goes into the Cool Down Cycle where the articles are tumbled at room temperature or a controlled cool down where the dryer goes into a slow cool down mode for 10 minutes sloping the temperature 10° F (-12° C) every minute.

When the cooling cycle is completed, the dryer will go into the Wrinkle Guard Cycle. For the first 15 minutes of wrinkle guard, the control will remain idle with the display reading “CYCLE DONE.” After the 15 minutes have elapsed, the control will beep three (3) times and will activate the basket (tumbler) for 15-seconds without heat. At this point, the display will read “WRINKLE GUARD.” Once the 15-seconds are over, the control will display “CYCLE DONE” and will remain idle for 5 minutes, at which point the control will reactivate the basket (tumbler) for 15-seconds while displaying “Wrinkle Guard.” The control will continue with the process of 15-seconds “ON” 5 minutes “OFF” until either the doors are opened, the “STOP/CLEAR”  key is pressed, or 99 minutes has elapsed, whichever comes first. Once the Wrinkle Guard routine has ended, the display will read “CYCLE DONE.” At this point, the dryer is locked out from drying again until the doors are opened. This will insure that if a cycle has been completed, the operator will attend to it before starting another heat cycle.

NOTE: To enter program mode, press “STOP/CLEAR”  key and the  “UPARROW” key.

PREPROGRAMMED CYCLE MENU SELECTIONS (CYCLES “A-F” OR “0-40”):

1. Automatic Drying Cycle (Patent No. 4,827,627)
 - a. The Phase 7.5 non-coin microprocessor controller (computer) can be programmed to reverse or not reverse. This is done in “DRYER SETUP” parameter.

- b. Drying Temperature – Programmable from 160° F to 200° F (71° C to 93° C) in one-degree increments for radial dryers and fixed at 150° F (66° C) for axial dryers.
- c. Dryness Level – Programmable for finishing, dry, and extra dry.
- d. Cool Down Time – Programmable from 0 to 99 minutes in 1 minute increments.
- e. Cool Down Temperature – Programmable from 70° F to 100° F (21° C to 38° C) in one-degree increments.
- f. Cycle Adjustment – Programmable from 0 to 99.

2. Timed (Manual) Cycle

- a. The Phase 7.5 non-coin microprocessor controller (computer) can be programmed to reverse or not reverse. This is done in “DRYER SETUP” parameter.
- b. Drying Time – Programmable from 0 to 99 minutes in 1 minute increments.
- c. Drying Temperature – Programmable from 100° F to 200° F (38° C to 93° C) in one-degree increments and preset at 150° F (66° C) for axial.
- d. Cool Down Time – Programmable from 0 to 99 minutes in 1 minute increments.
- e. Cool Down Temperature – Programmable from 70° F to 100° F (21° C to 38° C) in one-degree increments.
- f. The Spin Time can be programmed from 30-seconds to 120-seconds in 1-second increments.
- g. The Stop Time can be programmed from 5-seconds to 10-seconds in 1-second increments.

ALL six (6) “A-F” preprogrammed cycles along with cycles “0-40” have been programmed by the factory as outlined in **Section VII**. However, even though cycles “A-F” are the most common cycles used, they **should be** reviewed to ensure they meet the location application or needs. Should changes be found necessary, refer to the Programming Section of this manual.

B. MANUALLY LOADED CYCLES

For occasional or onetime special loads, the operator must enter the specific program features needed. This cycle is not stored within the Phase 7.5 non-coin microprocessor controller (computer) and **must be** entered each and every time.

The Manually Loaded Cycle can be set in either the Automatic Drying Mode (**Patent No. 4,827,627**) or the Timed (Manual) Drying Mode. These are selected by pressing the “AUTO” or “MAN” keys on the keyboard (touch pad).

C. AUTOMATIC DRYING CYCLE (PATENT NO. 4,827,627) OPERATIONS

In this mode, the Phase 7.5 non-coin microprocessor controller (computer) determines how much drying time is needed and compensates for various types of fabrics and load sizes, **ALL** automatically. The Phase 7.5 non-coin microprocessor controller (computer) accomplishes this by calculating the dryness level (percentage of extraction) using the temperature selected, as well as, the dryness level preset by the factory.

The Phase 7.5 non-coin microprocessor controller (computer) monitors the first three (3) heat peaks (slopes), at which time it calculates the dryness level (heat loss) along with the percentage of extraction selected. When the Phase 7.5 non-coin microprocessor controller (computer) determines that **ALL** the factors are met, the drying cycle will end, and the dryer will go into the Cool Down Cycle.

D. TIMED (MANUAL) DRYING CYCLE OPERATION

This drying cycle is intended for special loads where a specific amount of drying time and cooling time is needed, especially for fine, delicate items which require very low temperatures and long drying and/or Cool Down Time periods.

ALL the parameters set in “COOL DOWN SETUP” pertain to the Manually Loaded Manual and Auto Cycles. The “A-F” and “0-40” cycles that have been selected to be manual, have separate settings for **ALL** the parameters contained in the “COOL DOWN SETUP” menu.

The program limitation is the same as in **Section III**, A2.

NOTE: The Cool Down Cycle will run either until the Cool Down Temperature is reached or until the Cool Down Time has expired, whichever comes first.

NOTE: If there has been no Drying Time selected, then the Cool Down Cycle will ignore the Cool Down Temperature and do the Cool Down Time only.

E. LIGHT EMITTING DIODE (L.E.D.) DOT MATRIX DISPLAY

The L.E.D. display informs the user of cycle status, program verification, and displays important diagnostic and fault information. A complete listing of the various display messages and their meanings are shown in **Section V** of this manual.

CYCLE IN PROGRESS DISPLAY STATUS

During the Drying Cycle, the display will indicate the type of cycle in progress by presenting either one (1) of the following:

1. “AUTO DRYING CYCLE” – Manually Loaded Auto Cycle.
2. “AUTO DRYING CYCLE #” – The “#” is replaced with “A-F” or “0-40.”
3. “MANUAL DRYING CYCLE” – Manually Loaded Manual Cycle.

4. “MANUAL DRYING CYCLE #” – The “#” is replaced with “A-F” or “0-40.”

F. CYCLE IN PROGRESS TEMPERATURE DISPLAY

While the dryer cycle is in progress, the temperature in the basket (tumbler) can be displayed by pressing and holding the “UP ARROW” key. The temperature will be displayed in either Fahrenheit (°F) or Celsius (°C), depending on what the system temperature has been set for in “DRYER SETUP.”

G. TEMPERATURE CONVERSION STATUS


Temperature related programs are programmable to be operated in either Fahrenheit (°F) or Celsius (°C). The temperature selection is made in “SYSTEM TEMP.” Programs affected are:

1. Temperature Display Mode
2. Drying Temperatures
3. Cool Down Temperatures

IMPORTANT: When changing the temperature conversion status from Fahrenheit to Celsius or vice versa, **ALL** the Temperature Selections and Cool Down Temperatures **will be** changed accordingly. The Phase 7.5 non-coin microprocessor controller (computer) automatically calculates and converts the temperatures in these programs to the previously set value. For example, when changing from °F to °C, if the preprogrammed Cycle “A” drying temperature was set for 160° F, the Phase 7.5 non-coin microprocessor controller (computer) will change to 71° C (+/- one-degree Celsius).

H. WRINKLE GUARD PROGRAM

This program keeps items wrinkle-free when they are not removed from the dryer promptly at the end of the drying cycle and/or cooling cycle.

When the drying and cooling cycles are completed, the dryer will shut off, the tone will sound, and the light emitting diode (L.E.D.) display will read “CYCLE DONE.” If the door is not opened or the cycle stopped, the Phase 7.5 non-coin microprocessor controller (computer) will wait an initial 15 minutes delay time. Once the initial 15 minute delay time has expired, the fan will start and the basket (tumbler) will rotate (without heat) for an ON time of 15-seconds. When the fan and basket (tumbler) start, the display will read “WRINKLE GUARD.” Immediately following the 15-second ON time, the control will go into a 5 minute OFF time at which point it will display “CYCLE DONE.” The Phase 7.5 non-coin microprocessor controller (computer) will repeat this process of 15-seconds “ON” and 5 minutes “OFF” until either the doors are opened, the “STOP/CLEAR”  key is pressed, or 99 minutes has elapsed, whichever comes first. Prior to each ON time, there is a 3-beep warning that the fan and basket (tumbler) rotation are about to start. The beeps at the end of the Wrinkle Guard Cycle can be programmed to be ON/OFF. This is done in “WRINKLE GUARD SETUP.”

WRINKLE GUARD PROGRAM SELECTIONS:




1. Wrinkle Guard Audio Alert On/Off

The operator can select to turn on or off the beeps at the end of each Wrinkle Guard Cycle. The amount of beeps is programmed in “AUDIO ALERT ON TIMES.”

I. AUDIO ALERT ON TIMES 0 TO 10

The tone will sound at the end of the Cool Down Cycle to indicate that the cycle is complete. Programming allows for the elimination of the tone during the Wrinkle Guard Cycle. This is done in “WRINKLE GUARD SETUP.” Programming also allows the beeps to be set from 0 to 10 times in increments of one (1). This is done in “DRYER SETUP.”

J. PREPROGRAMMED CYCLE PREVIEW

The parameters of the preprogrammed cycles can be displayed for verification. To view an “A-F” preset program (parameter), simply press the “START/ENTER”  key and the desired preset program “A-F.” The light emitting diode (L.E.D.) display will read the program parameter settings, then return to the “READY” display mode. To view a “0-40” preset program parameter, simply press the “START/ENTER”  key and the desired preset program number “0-40” followed by “START/ENTER”  key again. The L.E.D. display will read the program parameter settings, then return to the “READY” display mode.

K. REVERSING OPTION

This feature helps reduce balling up or tangling of large items.

REVERSING OPTION SELECTIONS:




1. Reverse On or Reverse Off
2. This Is Set For Each Cycle
3. Basket (Tumbler) Spin Time and Stop Time
 - a. Fixed in the Automatic “AUTO” Mode and **cannot** be changed.
 - 1) Spin Time – 2 minutes forward and 2 minutes reverse.
 - 2) Stop Time – 5-seconds.
 - b. Programmable in the Manual Mode.
 - 1) Spin Time – Programmable from 30-seconds to 120-seconds in 1-second increments.
 - 2) Stop Time – Programmable from 5-seconds to 10-seconds in 1-second increments.

L. DIAGNOSTICS

The Phase 7.5 non-coin microprocessor controller (computer) monitors “Drying function,” which is the following:

1. Drying Functions: These include temperatures, burners, sail switches, blower, basket (tumbler), and lint drawer.

M. PROGRAM LOCATIONS

This is where system parameters are programmed. These system parameters (programs) are stored in memory. Access to this location is acquired by pressing the “STOP/CLEAR”  and the “UP ARROW” together. To exit the Programming Location, simply press the “STOP/CLEAR”  key. If you are several menu layers deep, continue to press the “STOP/CLEAR”  key to back up the menu until you are **ALL** the way out of the programming mode.

0. SELECT LANGUAGE – This menu allows the selection of five (5) different languages to operate the dryer. The language that is selected will be used for every displayed message as well as faults and menus.

ENGLISH
FRENCH
SPANISH
ITALIAN
GERMAN

1. SELECT SYSTEM PARAMETERS – This menu level has four (4) sections. **ALL** programmable parameters other than preprogrammed cycles are done here.

0. DRYER SETUP – **ALL** parameters that pertain to drying are in this menu level.

0. SELECT MODEL – This allows the selection of the heat source applied to the dryer as well as if the dryer is reversing or non-reversing.

GAS (reversing)
STEAM (reversing)
ELECTRIC (reversing)

GAS (non-reversing)
STEAM (non-reversing)
ELECTRIC (non-reversing)

1. SYSTEM TEMP – This selection controls whether the temperature related programs will be operated in Fahrenheit (°F) or Celsius (°C). The programs affected are as follows:

- 1) Temperature Display Mode
- 2) Drying Temperatures
- 3) Cool Down Temperatures

IMPORTANT: The Phase 7.5 non-coin microprocessor controller (computer) automatically calculates and converts the temperatures in these programs to the previously set value. For example, when changing from °F to °C, if the preprogrammed Cycle “A” drying temperature was set for 160° F, the Phase 7.5 non-coin microprocessor controller (computer) will change to 71° C (+/- one-degree Celsius).

2. ENTER LINT CLEANING FREQUENCY 1 TO 10 HOURS – This selection sets how long the lint cleaning timer will run before prompting the user to “CLEAN LINT.” Once the user is prompted to “CLEAN LINT,” the control will allow an additional 2 hours of run time before the dryer is placed into a locked out state, waiting for the lint drawer to be cleaned.

NOTE: A minimum of 15-seconds is required to have the lint drawer opened in order to return to the “READY” state once it is closed.

3. ENTER AUDIO ALERT ON TIMES 0 TO 10 – This selection allows the operator to adjust the amount of signal tones. This parameter (program) affects the tone at the end of the Cool Down Cycle, as well as, at the end of the Wrinkle Guard On Time.
 4. ROTATION SENSOR – This selection is used to turn the rotation sensor on or off.
 5. AXIAL THERMISTOR INPUT – This selection is used to turn the axial thermistor on or off.
 6. ENTER AXIAL TRIP TEMP 100° TO 400° F (38° TO 204° C) – This selection allows the operator to select the trip temperature of the axial thermistor.
1. REVERSING SETUP – The parameters that pertain to the reversing mode are in this menu level.
 0. ENTER SPIN TIME 30- TO 120-SECONDS – This parameter (program) is fixed at 2 minutes in the forward direction and 2 minutes in the reverse direction for the Automatic Mode. In the Manual Mode, it is programmable. This Spin Time is programmed here for the Manually Loaded Manual Cycle only.
 1. ENTER STOP TIME 5- TO 10-SECONDS – This parameter (program) is fixed at 5-seconds in the Automatic Mode and programmable in the Manual Mode. This Stop Time is programmed here for the Manually Loaded Manual Cycle only.
 2. WRINKLE GUARD SETUP – The parameters that pertain to the Wrinkle Guard is in this menu level.
 0. WRINKLE GUARD AUDIO ALERT – This parameter (program) allows the operator to turn the Audio Alert tone on or off at the end of each Wrinkle Guard Cycle. The amount is the same that is selected in “DRYER SETUP” for AUDIO ALERT ON TIMES 0 TO 10.

AUDIO ALERT ON
AUDIO ALERT OFF
 2. PROGRAM “A-F” CYCLE – This menu allows the programming of cycle “A-F.” The parameters selected in this menu for each letter will be stored in memory for that key. This will allow the operator to utilize one (1) touch drying through keys “A-F.”
 3. PROGRAM “0-40” CYCLE – This menu allows the programming of cycle “0-40.” The parameters selected in this menu for each number will be stored in memory for that number key(s). This will allow the operator to utilize preprogrammed drying cycles stored in memory under a numerical location.

NOTE: BOTH THE “A-F” AND “0-40” ALLOWS FOR A TOTAL OF 47 PREPROGRAMMED LOCATIONS FOR CUSTOM DRYING.

4. DEFAULT SETTINGS – This menu allows the operator to set ALL the programmable parameters to the default settings. This option has a password selection of 1 2 3. It will then ask to confirm settings. It will default to “NO.” Use the arrow keys to select “YES.”

CAUTION: Once the settings have been set to their default settings, there is no way to retrieve the old settings. Use caution when using this feature.

SECTION IV

OPERATING INSTRUCTIONS

The Phase 7.5 non-coin microprocessor controller (computer) allows the operator to choose from six (6) preprogrammed cycles (keys “A-F”). These have been preprogrammed by the factory with the parameters (programs) shown in **Section VII**. There are an additional (“0-40”) preprogrammable cycles that are preprogrammed by the factory with the parameters (programs) shown in **Section VII**. For occasional or onetime special loads, the Manually Loaded Cycles can be used where the operator must set the specific program(s) needed.

NOTE: Refer to **Section III** of this manual for a complete explanation of the various cycles/selections available.


After the load is put into the basket (tumbler) and the dryer is ready to dry, determine which cycle will best suit the application (type of load). We recommend using the Automatic Drying Cycle (**Patent No. 4,827,627**) for most loads. This cycle provides for the best drying in the shortest time, **ALL** automatically.

A. OPERATING SEQUENCE

1. Preprogrammed Cycles



a. Automatic Drying Cycle (**Patent No. 4,827,627**)


- 1) Light emitting diode (L.E.D.) display reads “READY” (no cycle in progress).
- 2) Press the letter on the keyboard (touch pad) corresponding to the cycle desired (i.e., key “A”).

NOTE: “0-40” will require the “START/ENTER”  key to be pressed after the number is selected in order to accept the selection and start drying.

- 3) The dryer will then start. (I.E., blower, basket [tumbler], and heat).
- 4) L.E.D. display reads AUTO DRYING CYCLE “A,” ELAPSED TIME __ MIN 00:00. During the drying cycle, the Phase 7.5 non-coin microprocessor controller (computer) will monitor the amount of moisture in the load. Once the temperature is above 160° F (71° C), the Cycle Status portion of the L.E.D. will change from ELAPSED TIME __ MIN to __ % DRY. The display will count upward until the percentage of extraction programmed is reached.

NOTE: Press and hold the “UPARROW” to view the basket (tumbler) temperature at any time.

NOTE: The dryer can be stopped at any time by pressing the “STOP/CLEAR”  key, at this time the dryer will go into a cycle pause. If the “STOP/CLEAR”  key is pressed again at this point, the cycle that was in progress **will be** cancelled and returned to the “READY” state.

- 5) Once the preprogrammed percentage of extraction (dryness level) is reached, the drying cycle will end and the Cool Down Cycle will begin.
- 6) Once the Cool Down Cycle begins at the end of the heat cycle, the light emitting diode (L.E.D.) display will read COOL DOWN TEMP ___/___ MINUTES REMAINING. At the end of the heat cycle, the dryer will shut off the heat and continue the fan and basket (tumbler) until the Cool Down Time or temperature is reached.
- 7) Once the Cool Down Cycle is completed, the Phase 7.5 non-coin microprocessor controller (computer) will proceed into the Wrinkle Guard Cycle. The Audio Alert tone will sound for the amount set in Audio Alert On Time. The L.E.D. display will read "CYCLE DONE." The dryer will wait an initial 15 minutes delay before going into a 15-second ON, 5 minute OFF cycle. These times are fixed and are not programmable. During the ON time, the blower (fan) and the basket (tumbler) will start to rotate without heat for 15-seconds, during this time the display will read "WRINKLE GUARD." After the 15-seconds are completed, the display will read "CYCLE DONE" and the dryer will go into a 5 minute OFF cycle. The Phase 7.5 non-coin microprocessor controller (computer) will repeat this process of 15-seconds "ON" and 5 minutes "OFF" until either the doors are opened, the "STOP/CLEAR"  key is pressed, or 99 minutes has elapsed, whichever comes first. Once the 99 minutes has elapsed, the L.E.D. display will then read "CYCLE DONE" and will lockout the dryer functions until the doors are opened. It will then return to "READY."



b. Timed (Manual) Drying Cycle

- 1) L.E.D. display reads "READY" (no cycle in progress).
- 2) Press the letter on the keyboard (touch pad) corresponding to the cycle desired (i.e., key "D").

NOTE: "0-40" WILL REQUIRE THE "START/ENTER"  KEY TO BE PRESSED AFTER THE NUMBER IS SELECTED IN ORDER TO ACCEPT THE SELECTION AND START DRYING


- 3) The dryer will then start. (I.E., blower, basket [tumbler], and heat).
- 4) The L.E.D. display will read MANUAL DRYING CYCLE D, 00:00 MIN REMAIN.

NOTE: Press and hold the "UP ARROW" to view the basket (tumbler) temperature at any time.

NOTE: The dryer can be stopped at any time by pressing the "STOP/CLEAR"  key, at this time the dryer will go into a cycle pause. If the "STOP/CLEAR"  key is pressed again at this point, the cycle that was in progress **will be** cancelled and returned to the "READY" state.



NOTE: Press and hold the "DOWN ARROW" to view the basket (tumbler) RPM.

- 5) When the programmed drying time has expired, the Phase 7.5 non-coin microprocessor controller (computer) will proceed into the Cool Down Cycle.
- 6) Once the Cool Down Cycle begins at the end of the heat cycle, the L.E.D. display will read COOL DOWN TEMP ___/___ MINUTES REMAINING. At the end of the heat cycle, the dryer will shut off the heat and continue the fan and basket (tumbler) until the Cool Down Time or temperature is reached.


- 7) Once the Cool Down Cycle is completed, the Phase 7.5 non-coin microprocessor controller (computer) will proceed into the Wrinkle Guard Cycle. The Audio Alert tone will sound for the amount set in Audio Alert On Time. The light emitting diode (L.E.D.) display will read "CYCLE DONE." The dryer will wait an initial 15 minutes delay before going into a 15-second ON, 5 minute OFF cycle. These times are fixed and are not programmable. During the ON time, the blower (fan) and the basket (tumbler) will start to rotate without heat for 15-seconds, during this time the display will read "WRINKLE GUARD." After the 15-seconds are completed, the display will read "CYCLE DONE" and the dryer will go into a 5 minute OFF cycle. The Phase 7.5 non-coin microprocessor controller (computer) will repeat this process of 15-seconds "ON" and 5 minutes "OFF" until either the doors are opened, the "STOP/CLEAR"  key is pressed, or 99 minutes has elapsed, whichever comes first. Once the 99 minutes has elapsed, the L.E.D. display will then read "CYCLE DONE" and will lockout the dryer functions until the doors are opened. It will then return to "READY."

2. Manually Loaded Cycles



a. Automatic Drying Cycle (**Patent No. 4,827,627**)

- 1) L.E.D. display reads "READY" (no cycle in progress).
- 2) Press AUTO key.
- 3) L.E.D. display will now read ENTER DRY TEMP 160 TO 200. (Defaults to 160° F [71° C]). Enter the temperature desired (from 160° F to 200° F [71° C to 93° C] in one-degree increments). I.E., for 180° F (82° C), press key "1," key "8," key "0," and then press the "START/ENTER"  key to accept the value.
- 4) L.E.D. display will now read ENTER DRY LEVEL finishing, dry, and extra dry. Enter the amount of extraction (dryness level desired). Finishing has the most moisture content to extra dry, which has little or no moisture content.
- 5) L.E.D. display will now read "REVERSE MODE" (defaults to ON). The ON/OFF selection can be toggled with the "UP ARROW" and "DOWN ARROW." Once selected, press the "START/ENTER"  key to accept selection.


NOTE: In addition to entering a value by pressing the number keys, the "UPARROW" and "DOWN ARROW" can be used to scroll to the number desired or toggle between selections.


- 6) The dryer will now display "PRESS START." Press the "START/ENTER"  key to start the dryer. The L.E.D. display will read AUTO DRYING CYCLE, ELAPSED TIME __ MIN. During the Drying Cycle, the Phase 7.5 non-coin microprocessor controller (computer) is monitoring the moisture in the load. Once the temperature is above 160° F (71° C), the Cycle Status portion of the L.E.D. will change from ELAPSED TIME __ MIN to DRYNESS LEVEL__.

NOTE: Press and hold the "UPARROW" to view the basket (tumbler) temperature at any time.





NOTE: The dryer can be stopped at any time by pressing the "STOP/CLEAR"  key, at this time the dryer will go into a cycle pause. If the "STOP/CLEAR"  key is pressed again at this point, the cycle that was in progress **will be** cancelled and returned to the "READY" state.


NOTE: Press and hold the “DOWN ARROW” to view the basket (tumbler) RPM.



- 7) Once the preprogrammed percentage of extraction (dryness level) is reached, the drying cycle will end, and the Cool Down Cycle will begin.
- 8) Once the Cool Down Cycle begins at the end of the heat cycle, the light emitting diode (L.E.D.) display will read COOL DOWN TEMP ___/___ MINUTES REMAINING. At the end of the heat cycle, the dryer will shut off the heat and continue the fan and basket (tumbler) until the Cool Down Time or temperature is reached.
- 9) Once the Cool Down Cycle is completed, the Phase 7.5 non-coin microprocessor controller (computer) will proceed into the Wrinkle Guard Cycle. The Audio Alert tone will sound for the amount set in Audio Alert On Time. The L.E.D. display will read “CYCLE DONE.” The dryer will wait an initial 15 minutes delay before going into a 15-second ON, 5 minute OFF cycle. These times are fixed and are not programmable. During the ON time, the blower (fan) and the basket (tumbler) will start to rotate without heat for 15-seconds, during this time the display will read “WRINKLE GUARD.” After the 15-seconds are completed, the display will read “CYCLE DONE” and the dryer will go into a 5 minute OFF cycle. The Phase 7.5 non-coin microprocessor controller (computer) will repeat this process of 15-seconds “ON” and 5 minutes “OFF” until either the doors are opened, the “STOP/CLEAR”  key is pressed, or 99 minutes has elapsed, whichever comes first. Once the 99 minutes has elapsed, the L.E.D. display will then read “CYCLE DONE” and will lockout the dryer functions until the doors are opened. It will then return to “READY.”


NOTE: Mechanical functions of the dryer **are not** allowed during the ON time. The blower (fan) **must be** OFF to perform mechanical functions. However, the “STOP/CLEAR”  key may be pressed at any time to end the Wrinkle Guard Cycle. Mechanical functions of the dryer are allowed during the OFF time.

b. Timed (Manual) Drying Cycle





- 1) L.E.D. display reads “READY” (no cycle in progress).
- 2) Press MAN key.
- 3) L.E.D. display will now read “ENTER DRY TIME 0 TO 99 MINUTES” (defaults to 0). I.E., for 40 minutes, press key “4,” key “0,” and then press the “START/ENTER”  key to accept the value.
- 4) L.E.D. display will now read “ENTER DRY TEMP ___ TO ___” (defaults to 100° F [38° C]). Enter the temperature desired (from 100° F to 200° F [38° C to 93° C] in one-degree increments). I.E., for 142° F (61° C), press key “1,” key “4,” key “2,” and then press the “START/ENTER”  key to accept the value.
- 5) L.E.D. display will now read “ENTER COOL DOWN TIME 0 TO 99 MINUTES.” I.E., for 10 minutes, press key “1,” key “0,” and then press the “START/ENTER”  key to accept the value.
- 6) L.E.D. display will now read “REVERSE MODE” (defaults to ON). The ON/OFF selection can be toggled with the “UP ARROW” and “DOWN ARROW.” Once selected, press the “START/ENTER”  key to accept selection.






- 7) The dryer will now display “PRESS START.” Press the “START/ENTER”  key to start the dryer. The light emitting diode (L.E.D.) display will read MANUAL DRYING CYCLE, __ MINUTES REMAIN.

NOTE: The dryer can be stopped at any time by pressing the “STOP/CLEAR”  key, at this time the dryer will go into a cycle pause. If the “STOP/CLEAR”  key is pressed again at this point, the cycle that was in progress will be cancelled and returned to the “READY” state.

- 8) Once the programmed drying time has expired, the Phase 7.5 non-coin microprocessor controller (computer) will proceed into the Cool Down Cycle (Mode).
- 9) Once the Cool Down Cycle begins at the end of the heat cycle, the L.E.D. display will read COOL DOWN TEMP __/ __ MINUTES REMAINING. At the end of the heat cycle, the dryer will shut off the heat and continue the fan and basket (tumbler) until the Cool Down Time or temperature is reached.
- 10) Once the Cool Down Cycle is completed, the Phase 7.5 non-coin microprocessor controller (computer) will proceed into the Wrinkle Guard Cycle. The Audio Alert tone will sound for the amount set in Audio Alert On Time. The L.E.D. display will read “CYCLE DONE.” The dryer will wait an initial 15 minutes delay before going into a 15-second ON, 5 minute OFF cycle. These times are fixed and are not programmable. During the ON time, the blower (fan) and the basket (tumbler) will start to rotate without heat for 15-seconds, during this time the display will read “WRINKLE GUARD.” After the 15-seconds are completed, the display will read “CYCLE DONE” and the dryer will go into a 5 minute OFF cycle. The Phase 7.5 non-coin microprocessor controller (computer) will repeat this process of 15-seconds “ON” and 5 minutes “OFF” until either the doors are opened, the “STOP/CLEAR”  key is pressed, or 99 minutes has elapsed, whichever comes first. Once the 99 minutes has elapsed, the L.E.D. display will then read “CYCLE DONE” and will lockout the dryer functions until the doors are opened. It will then return to “READY.”

B. OPERATING NOTES

1. The RPM of the basket (tumbler) can be displayed by pressing and holding the “DOWN ARROW” key while a cycle is in progress. If cycle has not been started, the display will read CPU Board Voltage Value. (23-26 Volts is normal).
2. The dryer can be stopped at any time by pressing the “STOP/CLEAR”  key, at this time the dryer will go into a cycle pause. If the “STOP/CLEAR”  key is pressed again at this point, the cycle that was in progress will be cancelled and returned to the “READY” state.
3. When programming a Manually Loaded Cycle, if an error is made making an entry, press the “STOP/CLEAR”  key ONCE, and the entry will be cancelled. Reenter the selection. If the selection is entered and an error is made, the “STOP/CLEAR”  key will cancel the program and return to the “READY” state.
4. Use the “UP ARROW” and “DOWN ARROW” to scroll through menus or increase/decrease number values or toggle between choices.

5. In the programming mode, the number of keys can be used to jump to menu levels without scrolling through them **ALL**. I.E., from 0 select Model in “DRYER SETUP”; you can jump to menu level five (5). Enter lint count under “DRYER SETUP” by pressing the two (2) keys followed by the “START/ENTER”  key to accept value. Light emitting diode (L.E.D.) display will read 2: ENTER LINT CLEANING FREQUENCY 1 TO 10 HOURS.
6. The basket (tumbler) temperature can be displayed by pressing and holding the “UP ARROW” key.
7. The programmed cycle parameter can be viewed by pressing the “START/ENTER”  key followed by the “A-F” key. To view “0-40” cycles, press “START/ENTER”  key followed by the number desired to view followed by “START/ENTER”  key. The viewing can be stopped by pressing the “STOP/CLEAR”  key at any time.

C. SENSOR ACTIVATED FIRE EXTINGUISHING (S.A.F.E.) SYSTEM

THEORY OF OPERATION


While the dryer is in an idle state or 20-seconds after the heat turns off, the Phase 7.5 control monitors the thermistor probe located in the top of the basket (tumbler) chamber and records the minimum temperature. If the minimum recorded thermistor probe temperature is greater than 120° F (49° C) and the control detects a 50° rise in temperature, this will be the trip point and the S.A.F.E. system routine will activate.

While a drying cycle is in process and the heat has turned on at least once, the Phase 7.5 control monitors the exhaust temperature transducer. If the drying cycle temperature set point is set greater than 160° F (71° C) and the control detects an exhaust temperature rise 25° F greater than set point, this will be the trip point and the S.A.F.E. system routine will activate. If set point is below 160° F (71° C), the trip point will be 185° F (85° C).

Once the S.A.F.E. system routine is activated, the control will display “S.A.F.E. SYSTEM ACTIVATED” and water will be injected into the basket (tumbler) chamber. Any time water is being injected into the basket (tumbler); the basket (tumbler) drive will turn the load for 1-second every 15-seconds. This process will continue for a minimum of 2 minutes. After the 2 minutes has elapsed, the control will check if the temperature remained above trip point, if so water will remain on. The control will continue to check if the temperature is above trip point every 30-seconds. If the water has been on for a constant 10 minutes, the water will be turned off regardless of the temperature and the control will display “S.A.F.E. System was Activated.” If the temperature has dropped below trip point, the control will turn off the water prior to 10 minutes.

SYSTEM RESET


After the microprocessor determines that the situation is under control and shuts the water being injected into the basket (tumbler) off, the microprocessor display will read “S.A.F.E. SYSTEM WAS ACTIVATED,” and the horn/tone will sound until reset manually.


To reset the microprocessor once the control displays “S.A.F.E. SYSTEM WAS ACTIVATED,” press the red “STOP/CLEAR”  key on the keyboard (touch pad).

NON-COIN S.A.F.E. SYSTEM VALVE CHECK

The operation of the water solenoid valve can be tested to insure that the water supply system and valve are functional. Before attempting a system check, be sure that **ALL** water supply shutoff valves to the dryer are in the OPEN position, and the dryer **must be** in the “READY” mode where no cycle is loaded or in progress.


The procedure is as follows:

1. Press and hold the red “STOP/CLEAR”  key (while in “READY” mode and no cycle is in progress).
2. Press and hold the “A” key.
3. Water valve will open and water will be dispensed into basket (tumbler) area as long as both keys are held.

The Phase 7.5 non-coin microprocessor controller (computer) will prompt the user to perform a Sensor Activated Fire Extinguishing (S.A.F.E.) system valve check at every 4000 hours to ensure proper functionality. At the 4000 hour mark, the control will wait for end of the cycle and then will prompt the user to “PLEASE EMPTY TUMBLER, THEN PRESS THE ‘STOP/CLEAR’ AND ‘A’ KEYS TO TEST THE WATER VALVE.” When the “STOP/CLEAR”  and “A” keys are pressed, the control will activate the S.A.F.E. system water valve for 2-seconds, at which point the control will prompt the user with the following message “IF WATER DID NOT TURN ON, CALL FOR SERVICE. THANK YOU.”

NOTE: The control will not let the user continue until the valve test has been completed.

S.A.F.E. SYSTEM DIAGNOSTICS MESSAGES

In the event that the Phase 7.5 non-coin microprocessor controller (computer) detects a fault in the S.A.F.E. system, the control will display the message “S.A.F.E. SYSTEM DISABLED...READY.” To find out the reason for the S.A.F.E. system disabling, press and hold the red “STOP/CLEAR”  and green “START” keys. This will cause the control to display one (1) of the following diagnostic messages:

OPEN THERMISTOR PROBE – This message indicates that the S.A.F.E. system thermistor probe is either not connected or is damaged. If this condition is detected, the Phase 7.5 non-coin control will immediately enter S.A.F.E. SYSTEM DISABLED mode.

SHORTED THERMISTOR PROBE – This message indicates that the S.A.F.E. system thermistor probe is damaged or the wiring is shorted. If this condition is detected, the Phase 7.5 non-coin control will immediately enter S.A.F.E. SYSTEM DISABLED mode.

DISCONNECTED WATER VALVE – This indicates that the water valve is open or that it is not connected to the control. If this condition is detected, the Phase 7.5 non-coin control will continue to monitor the condition for a period of 5 minutes before entering S.A.F.E. SYSTEM DISABLED mode. Once the condition is corrected, the control will continue to monitor the condition for 1 minute before exiting S.A.F.E. SYSTEM DISABLED mode.

SHORTED WATER VALVE – This indicates the water valve is shorted or the wiring to the valve is shorted. If this condition is detected, the Phase 7.5 non-coin control will continue to monitor the condition for a period of 5 minutes before entering S.A.F.E. SYSTEM DISABLED mode. Once the condition is corrected, the control will continue to monitor the condition for 1 minute before exiting S.A.F.E. SYSTEM DISABLED mode.

WATER NOT CONNECTED – This indicates that there is no water pressure at the water valve. This will occur if water is not connected to the dryer or if there is low water pressure in the water line coming to the dryer. This could also be a defective pressure switch or wiring to the pressure switch. If this condition is detected, the Phase 7.5 non-coin control will continue to monitor the condition for a period of 5 minutes before entering S.A.F.E. SYSTEM DISABLED mode. Once the condition is corrected, the control will continue to monitor the condition for 1 minute before exiting S.A.F.E. SYSTEM DISABLED mode.

When the S.A.F.E. system is disabled, the user can still start a cycle, however when a cycle is started, the control will display the following message: “S.A.F.E. SYSTEM IS DISABLED. PRESS ‘START’ TO CONTINUE.” This message will be displayed every time a cycle is started until the disabling condition has been corrected.

SECTION V

L.E.D. DISPLAY MESSAGES

The light emitting diode (L.E.D.) display informs the operator of cycle status, program verification, and displays important diagnostic messages and fault information.

A. L.E.D. DISPLAY OPERATING STATUS

1. Cycles in Progress

- a. While the dryer is operating, the L.E.D. display will read which cycle is in progress. I.E., in a Manual Drying Cycle (Mode), the L.E.D. display will read “MANUAL DRYING CYCLE.” In the Cool Down Cycle (Mode) the L.E.D. display will read “COOL DOWN TEMP __ , __ MINUTES REMAIN.”

2. Cycle Status

- a. While a cycle is in progress, the L.E.D. display will show the progress of the cycle that is being processed.

1) Automatic Drying Cycle

- a) While a cycle is in progress, the cycle status will display ELAPSED TIME __ MIN. During the Drying Cycle, the Phase 7.5 non-coin microprocessor controller (computer) is monitoring the moisture in the load. Once the temperature has reached set point temperature and cycled ON/OFF three (3) times, the cycle status portion of the L.E.D. will change from ELAPSED TIME __ MIN to __% DRY. The display will count upward until the percentage of extraction programmed is reached.

2) Timed (Manual) Drying Cycle

- a) While a cycle is in progress the cycle status will display __ MINUTES REMAIN.

3. Alternate Display Programs


- a. The basket's (tumbler's) RPM can be displayed by pressing and holding the “DOWN ARROW” key while a cycle is in progress. If a cycle is not in progress, the board voltage is displayed.
- b. The basket (tumbler) temperature and axial temperature (when in Axial Mode) can be displayed by pressing and holding the “UP ARROW” key at any time.

SECTION VI

PROGRAMMING INSTRUCTIONS

A. INTRODUCTION TO PROGRAMMING


The various program selections are stored in the Phase 7.5 non-coin microprocessor controller (computer) and are broken down into five (5) categories:

0. Language (ENGLISH, FRENCH, SPANISH, ITALIAN, and GERMAN)
1. System Parameters (Dryer Setup, Reversing Setup, and Wrinkle Guard Setup)
2. Preprogrammed Cycles (Key “A-F”)
 - a. This feature allows the operator to have six (6) most commonly used cycle selections awaiting the push of a single keyboard (touch pad) entry to start the dryer.
3. Preprogrammed Cycles (“0-40”)
 - a. This feature allows the operator to have an added forty-one (41) preprogrammed cycle selections. These can be started by selecting the number and pressing the “START/ENTER”  key.
4. Default Settings (returns ALL the programmable parameters to the default settings)



Both the preprogrammed cycles and the system parameters (programs) have been preprogrammed by the factory with the parameters shown in **Section VII** of this manual. The various program selections for the preprogrammed cycles and system parameters are outlined in **Section III** of this manual.



ALL program changes for the preprogrammed cycles and system parameters (programs) are done through the keyboard (touch pad) selection keys on the front of the control panel.


ENTERING THE PROGRAMMING MODE:


First, make sure that no cycle is in progress and that the light emitting diode (L.E.D.) display reads “READY,” then press the “STOP/CLEAR”  key and the “UP ARROW” key together. This will put you into the programming mode.


EXITING THE PROGRAMMING MODE:

The “STOP/CLEAR”  key will return you to the previous menu level. Continue to press the “STOP/CLEAR”  key until you are ALL the way out of the Programming Mode.

To alter the programming parameters, the operator will locate the parameter (program) that is to be changed. If the change is a numerical one (i.e., time and/or temperature), the operator will simply enter the numerical value desired. If an error is made, press the “STOP/CLEAR”  key ONCE, and the incorrect entry that was made will be cancelled. Once the entry is made, and the parameter (program) set does not need to be changed, press the “START/ENTER”  key and the Phase 7.5 non-coin microprocessor controller (computer) will advance to the next program selected.

If the parameter (program) change is a feature change, such as changing the temperature conversion from degree Fahrenheit (°F) to degree Celsius (°C) or from “AUTO” (Automatic Drying Cycle [Patent No. 4,827,627]) to “MANUAL” (Timed [Manual] Drying Cycle), the operator will press and hold the “UP ARROW” or “DOWN ARROW” key. This will toggle between choices. Once the entry is made or if the parameter (program) does not need to be changed, press the “START/ENTER”  key and the Phase 7.5 non-coin microprocessor controller (computer) will advance to the next program selection.

When making numerical changes, please keep in mind to stay within the programming limits shown. If an erroneous entry is made, the Phase 7.5 non-coin microprocessor controller (computer) will display “ERROR ERROR” and ignore the entry made when the “START/ENTER”  key is pressed and will return to the numerical value previously set.

The Phase 7.5 non-coin microprocessor controller (computer) allows the operator to scroll through the various parameters (programs) and select the parameter to be changed. At this point, the operator can go to the next Program Location (system parameter) to be changed. If no other programs (parameters) need to be changed, the user can get out of the program mode by pressing the “STOP/CLEAR”  key until it is out of the programming mode. The Phase 7.5 non-coin microprocessor controller (computer) will be returned to the operating mode, and the light emitting diode (L.E.D.) display will read “READY.”

PHASE 7.5 NON-COIN PROGRAMMING LOCATIONS

TO ENTER PROGRAMMING MODE PRESS  AND  KEYS TOGETHER.

TO EXIT PROGRAMMING MODE PRESS  MULTIPLE TIMES UNTIL DISPLAY RETURNS TO 'READY.'

- 0: SELECT LANGUAGE
- 1: SELECT SYSTEM PARAMETERS
 - 0: DRYER SETUP
 - 0: SELECT MODEL
 - 1: SYSTEM TEMP
 - 2: ENTER LINT CLEANING FREQUENCY 1 TO 10 HOURS
 - 3: ENTER AUDIO ALERT ON TIMES 0 TO 10
 - 4: ROTATION SENSOR
 - 5: AXIAL THERMISTOR INPUT
 - 6: ENTER AXIAL TRIP TEMP 100 (38) TO 400°F (204°C)
 - 1: REVERSING SETUP
 - 0: ENTER SPIN TIME 30 TO 120 SECONDS
 - 1: ENTER STOP TIME 5 TO 10 SECONDS
 - 2: WRINKLE GUARD SETUP
 - 0: WRINKLE GUARD AUDIO ALERT
- 2: PROGRAM A - F CYCLES
 - SELECT A - F KEY
 - SELECT CYCLE TYPE
 - AUTO**
 - 0: REVERSE MODE
 - 1: ENTER DRY TEMP 160 (71) TO 200°F (93°C) *
 - 2: ENTER DRYNESS LEVEL
 - 3: ENTER CYCLE ADJUSTMENT VALUE 0 TO 99
 - 4: CONTROLLED COOL DOWN
 - 5: ENTER COOL DOWN TIME 0 TO 99 MINUTES
 - 6: ENTER COOL DOWN TEMP 70 (21) TO 100°F (38°C)
 - MANUAL**
 - 0: REVERSE MODE
 - 1: ENTER DRY TIME 0 TO 99 MINUTES
 - 2: ENTER DRY TEMP 100 (38) TO 200°F (93°C) *
 - 3: CONTROLLED COOL DOWN
 - 4: ENTER COOL DOWN TIME 0 TO 99 MINUTES
 - 5: ENTER COOL DOWN TEMP 70 (21) TO 100°F (38°C)
- 3: PROGRAM 0 - 40 CYCLES
 - SELECT 0 - 40
 - SELECT CYCLE TYPE
 - AUTO**
 - 0: REVERSE MODE
 - 1: ENTER DRY TEMP 160 (71) TO 200°F (93°C) *
 - 2: ENTER DRYNESS LEVEL
 - 3: ENTER CYCLE ADJUSTMENT VALUE 0 TO 99
 - 4: CONTROLLED COOL DOWN
 - 5: ENTER COOL DOWN TIME 0 TO 99 MINUTES
 - 6: ENTER COOL DOWN TEMP 70 (21) TO 100°F (38°C)
 - MANUAL**
 - 0: REVERSE MODE
 - 1: ENTER DRY TIME 0 TO 99 MINUTES
 - 2: ENTER DRY TEMP 100 (38) TO 200°F (93°C) *
 - 3: CONTROLLED COOL DOWN
 - 4: ENTER COOL DOWN TIME 0 TO 99 MINUTES
 - 5: ENTER COOL DOWN TEMP 70 (21) TO 100°F (38°C)
- 4: DEFAULT SETTINGS
 - ENTER PASSWORD
 - (PRESS '1' '2' '3')
 - CONFIRM DEFAULTS

* 150°F (66°C) MAXIMUM TEMP ON AXIAL MODELS

P/N: 114562

B. PROGRAMMING FLOWCHARTS

The following section of this manual explains the programming of the preprogrammed cycles and Program Locations (system parameters) through the use of flowcharts. A flowchart is nothing more than a diagram of the programming process.

Four (4) different symbols will be used in these flowcharts:






display symbol 

key symbol 


START/ENTER


STOP/CLEAR



Each display symbol will represent a readout on the Phase 7.5 non-coin microprocessor controller (computer) light emitting diode (L.E.D.) display, and each key symbol will represent a key that is pressed. For example:

1. If the flowchart shows the symbol  the Phase 7.5 non-coin microprocessor controller (computer) L.E.D. display will read the same.
2. If the flowchart shows the symbol  you will press that specific key on the keyboard (touch pad) label.
3. This symbol  represents “STOP/CLEAR.”
4. This symbol  represents “START/ENTER.”
 - a. The flowchart arrows (i.e., ) represents the program path.
 - b. On the sides of these flowcharts are explanations of the flowchart procedure, and in some cases the programming limits.

Listed below, is an index of the flowcharts on the following pages.

Flowchart Titles

	Page
Entering and Exiting Program Mode	25
System Parameters (Program):	
0 LANGUAGES	30
1 SYSTEM PARAMETERS	31
2 “A-F” CYCLE	54
3 “0-40” CYCLE	54
4 DEFAULT SETTINGS	62

NOTE: To review the preset Program Locations, simply press the “START/ENTER”  key followed by the letter location while the L.E.D. display reads “READY.” To review a number location, simply follow the same process as a letter with the addition of the “START/ENTER”  key being pressed again after the number is selected.

PHASE 7.5

MENU PROGRAMMING PROCEDURE

EVERY INDENTED STEP REPRESENTS THE “START/ENTER” KEY BEING PRESSED TO SELECT A MENU ITEM. EVERY MESSAGE WITH A NUMBER BEFORE IT, INDICATES THAT IT IS A MENU SELECTION CHOICE. EVERY MESSAGE WITHOUT A NUMBER BEFORE IT, INDICATES THAT IT IS THE LAST MENU LEVEL.

I.E. MENU FLOW

FROM (“1: SELECT SYSTEM PARAMETERS”)
PRESSING “START/ENTER” PUTS YOU AT (0: DRYER SETUP)
PRESSING “UP ARROW” PUTS YOU AT (1: COOL DOWN SETUP)
PRESSING “DOWN ARROW” PUTS YOU BACK AT (0: DRYER SETUP)

PROGRAMMING MODE:

ENTERING:

MUST BE IN THE “READY” STATE.
PRESS “STOP/CLEAR” AND “UP ARROW” KEY TOGETHER.
(THIS WILL GET YOU INTO THE PROGRAMMING MODE.)

EXITING:

PRESSING THE “STOP/CLEAR” KEY REPEATEDLY UNTIL YOU ARE BACK TO THE “READY” DISPLAY. THE “STOP/CLEAR” KEY WILL BRING YOU BACK ONE (1) MENU LEVEL AT A TIME. AT THE FIRST MENU LEVEL, IT WILL EXIT YOU FROM THE PROGRAMMING MODE AND RETURN TO THE “READY” STATE.

NOTES:

THE “UP ARROW” AND “DOWN ARROW” KEYS ARE USED TO SCROLL UP AND DOWN A MENU SELECTION.

THE NUMBER KEYS CAN ALSO BE USED TO BRING YOU DIRECTLY TO A KNOWN MENU ITEM. PRESS THE NUMBER YOU WANT FOLLOWED BY THE “START/ENTER” KEY TO BRING YOU RIGHT TO THE MENU CHOICE ASSIGNED TO THE NUMBER SELECTED.

0: SELECT LANGUAGE

ENGLISH
FRENCH
SPANISH
ITALIAN
GERMAN

1: SELECT SYSTEM PARAMETERS

0: DRYER SETUP

0: SELECT MODEL

GAS REVERSING (Default GAS REVERSING)
ELECTRIC REVERSING
STEAM REVERSING
GAS NON-REVERSING
ELECTRIC NON-REVERSING
STEAM NON-REVERSING

1: SYSTEM TEMP

DEG F (Default DEG F)
DEG C

2: ENTER LINT CLEANING FREQUENCY 1 TO 10 HOURS

** (***) Displays The Number Chosen. Defaults To “3”)

3: ENTER AUDIO ALERT ON TIMES 0 TO 10

** (***) Displays The Number Chosen. Defaults To “5”)

4: ROTATION SENSOR

ON (Default ON)
OFF

5: AXIAL THERMISTOR INPUT

ON
OFF (Default OFF)

6: ENTER AXIAL TRIP TEMP 100° TO 400° F

*** (***) Displays The Number Chosen. Defaults To “180”)

1: REVERSING SETUP

NOTE: If a NON-REVERSING model is selected, also display “NOT AVAILABLE.” As soon as a key is pressed, jump to next location.

0: ENTER SPIN TIME 30 TO 120 SECONDS

(Manually Loaded Manual Cycle Only)

** (“**”) Displays The Number Chosen. Defaults To “60”)

1: ENTER STOP TIME 5 TO 10 SECONDS

(Manually Loaded Manual Cycle Only)

** (“**”) Displays The Number Chosen. Defaults To “5”)

2: WRINKLE GUARD SETUP

0: WRINKLE GUARD AUDIO ALERT

(End Of Wrinkle Guard)

ON (Default ON)

OFF

2: PROGRAM A-F CYCLES

SELECT A-F KEY

* (“*”) Displays The Letter Chosen. Defaults To “A”)

SELECT CYCLE TYPE

* (“*”) Displays The Cycle Type “Auto” Or “Manual”
(Default AUTO)

AUTO

0: REVERSE MODE

NOTE: If a NON-REVERSING model is selected, also display “NOT AVAILABLE.” As soon as a key is pressed, jump to next location.

ON (Default ON)

OFF

1: ENTER DRY TEMP 160° TO 200° F

(If axial, display “1: DRYING TEMP 150° F ONLY,” then jump to next message)

*** (“***”) Displays The Number Chosen. Defaults To “150”)

2: ENTER DRYNESS LEVEL.

FINISHING

DRY (Default DRY)

EXTRA DRY

3: ENTER CYCLE ADJUSTMENT VALUE 0 TO 99

** (“**”) Displays The Number Chosen. Defaults To “70”)

4: CONTROLLED COOL DOWN

ON

OFF (Default OFF)

5: ENTER COOL DOWN TIME 0 TO 99 MINUTES

NOTE: (If controlled cool down is ON display “NOT AVAILABLE.” As soon as a key is pressed, jump to the next location.)

**

(“***” Displays The Number Chosen. Defaults To “6”)

6: ENTER COOL DOWN TEMP 70° TO 100° F

(“***” Displays The Number Chosen. Defaults To “100”)

NOTE: When Enter is pressed here, jump back to 2: PROGRAM A - F CYCLE

MANUAL

0: REVERSE MODE

NOTE: If a NON-REVERSING model is selected, also display “NOT AVAILABLE.” As soon as a key is pressed, jump to next location.

ON

(Default ON)

OFF

ENTER SPIN TIME 30 TO 120 SECONDS

(“***” Displays The Number Chosen. Defaults To “60”)

ENTER STOP TIME 5 TO 10 SECONDS

**

(“***” Displays The Number Chosen. Defaults To “5”)

Note: When Enter is pressed here, jump to next location.

1: ENTER DRY TIME 0 TO 99 MINUTES

**

(“***” Displays The Number Chosen. Defaults To “0”)

2: ENTER DRY TEMP 100° TO 200° F

(The max temp will be regulated based on axial / radial. Radial = 200° F, Axial = 150° F)

(“***” Displays The Number Chosen. Defaults To “100”)

3: CONTROLLED COOL DOWN

ON

OFF (Default OFF)

4: ENTER COOL DOWN TIME 0 TO 99 MINUTES

NOTE: (If controlled cool down is ON display “NOT AVAILABLE.” As soon as a key is pressed, jump to the next location.)

**

(“***” Displays The Number Chosen. Defaults To “2”)

5: ENTER COOL DOWN TEMP 70° TO 100° F

("***" Displays The Number Chosen. Defaults To "100")

NOTE: When Enter is pressed here, jump back to 2: PROGRAM A – F CYCLE

3: PROGRAM 0 - 40 CYCLES

ENTER 0 - 40

**

("**" Displays The Number Chosen. Defaults To "0")

SELECT CYCLE TYPE

*

("*" Displays The Cycle Type "Auto" Or "Manual")

(SEE 2: PROGRAMMING A-F CYCLES)

4: DEFAULT SETTINGS

ENTER PASSWORD

(PRESS "1" "2" "3")

CONFIRM DEFAULTS.


NO

(Default NO)


YES


NOTE: Selecting "NO" will return you back to "4: DEFAULT SETTINGS." Selecting "YES" will set ALL the parameters to the default settings and the display will read "DEFAULTS SET" then return to "4: DEFAULT SETTINGS."

Selecting Languages

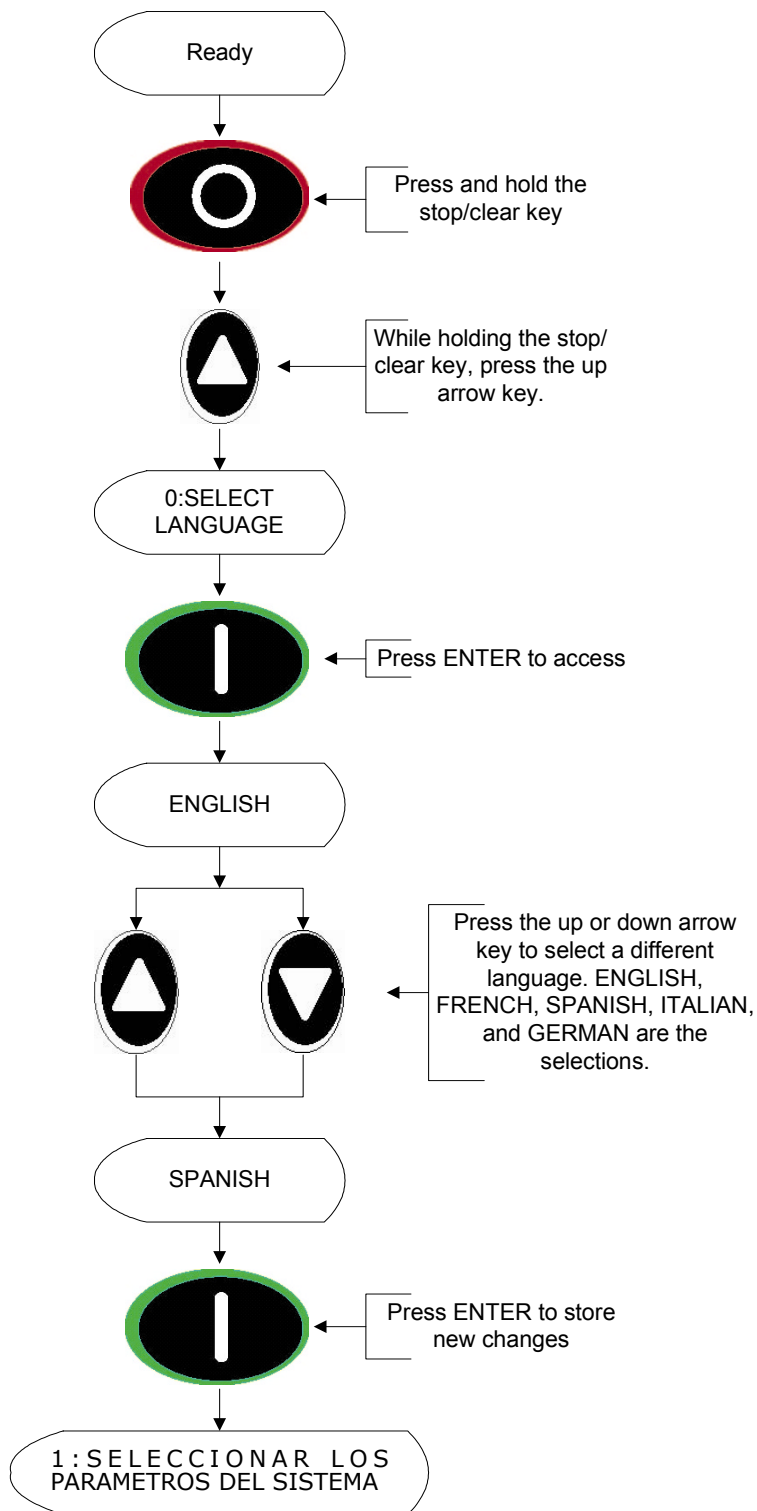



Selecting a Dryer Model

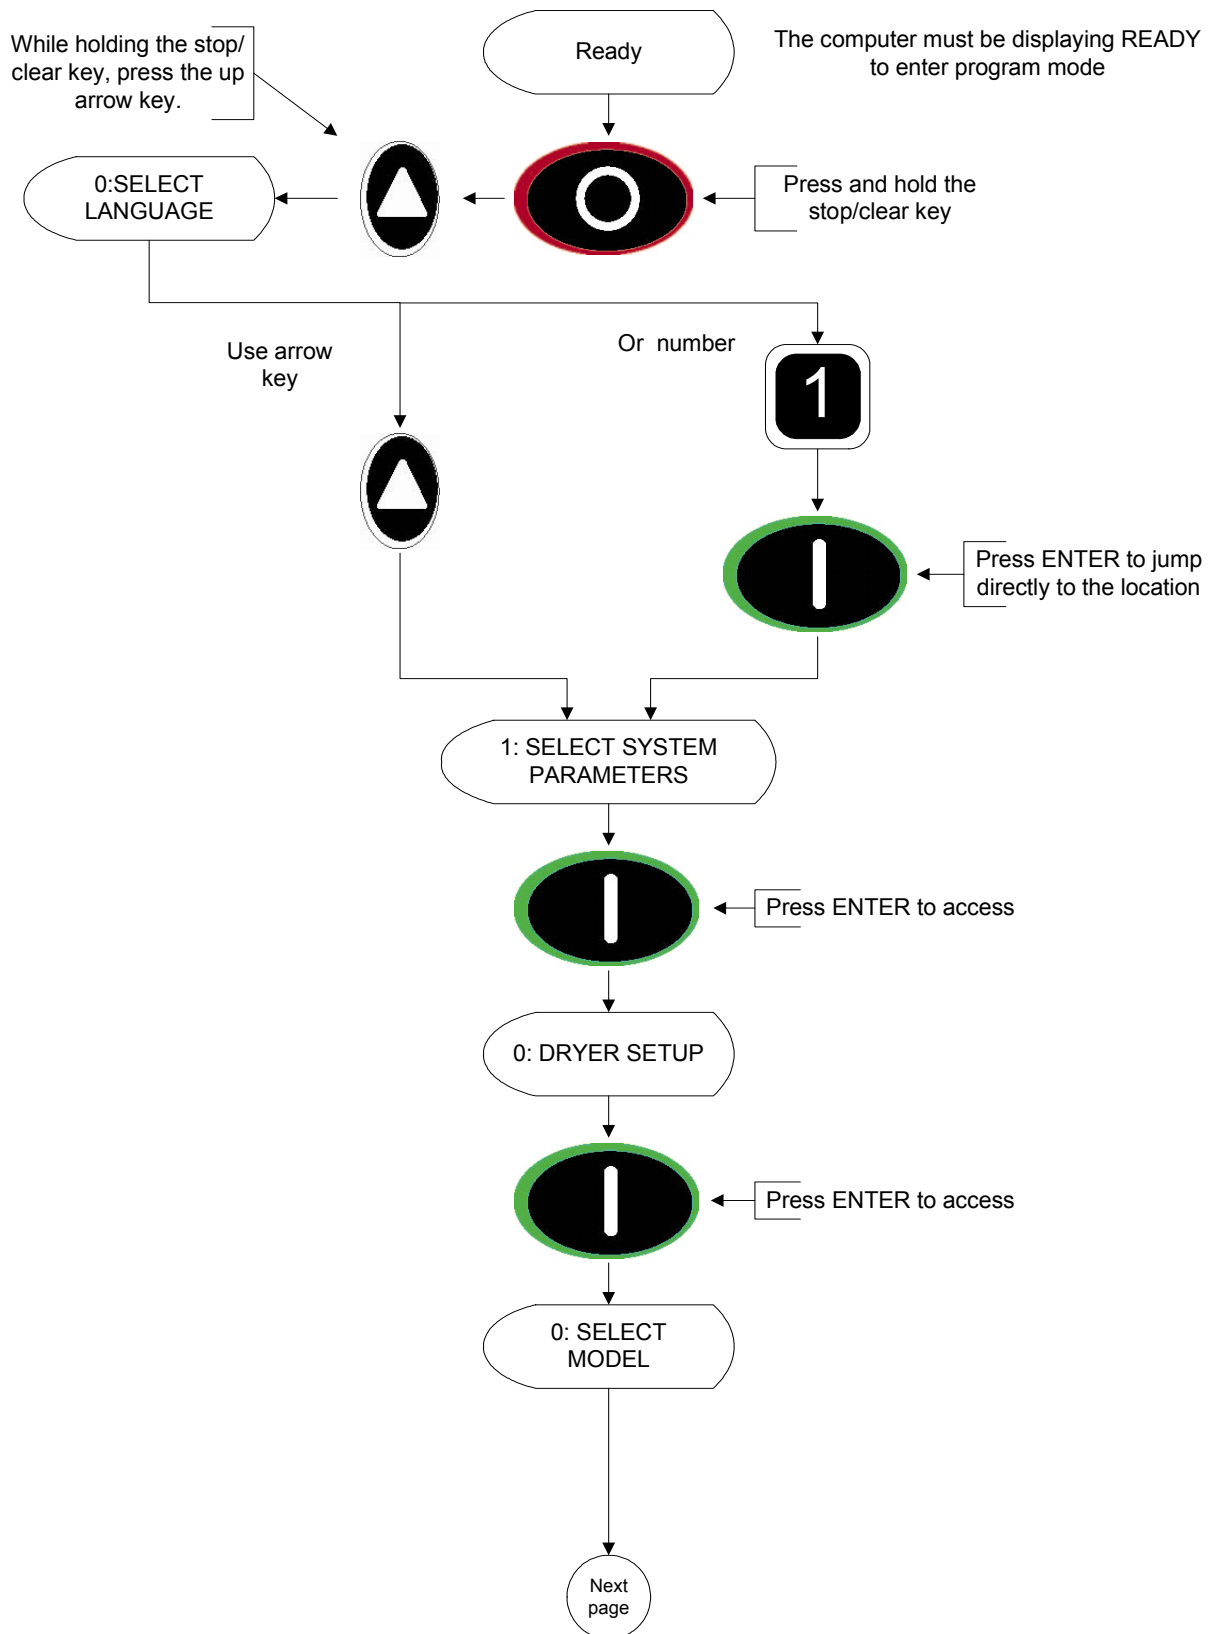

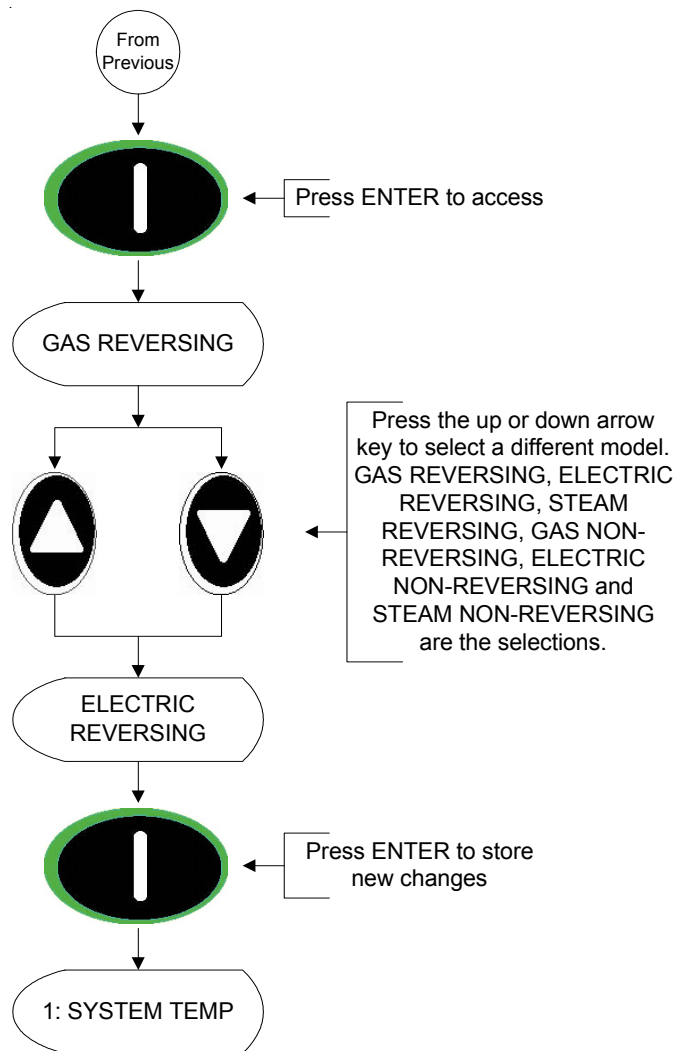



Selecting the System Temperature

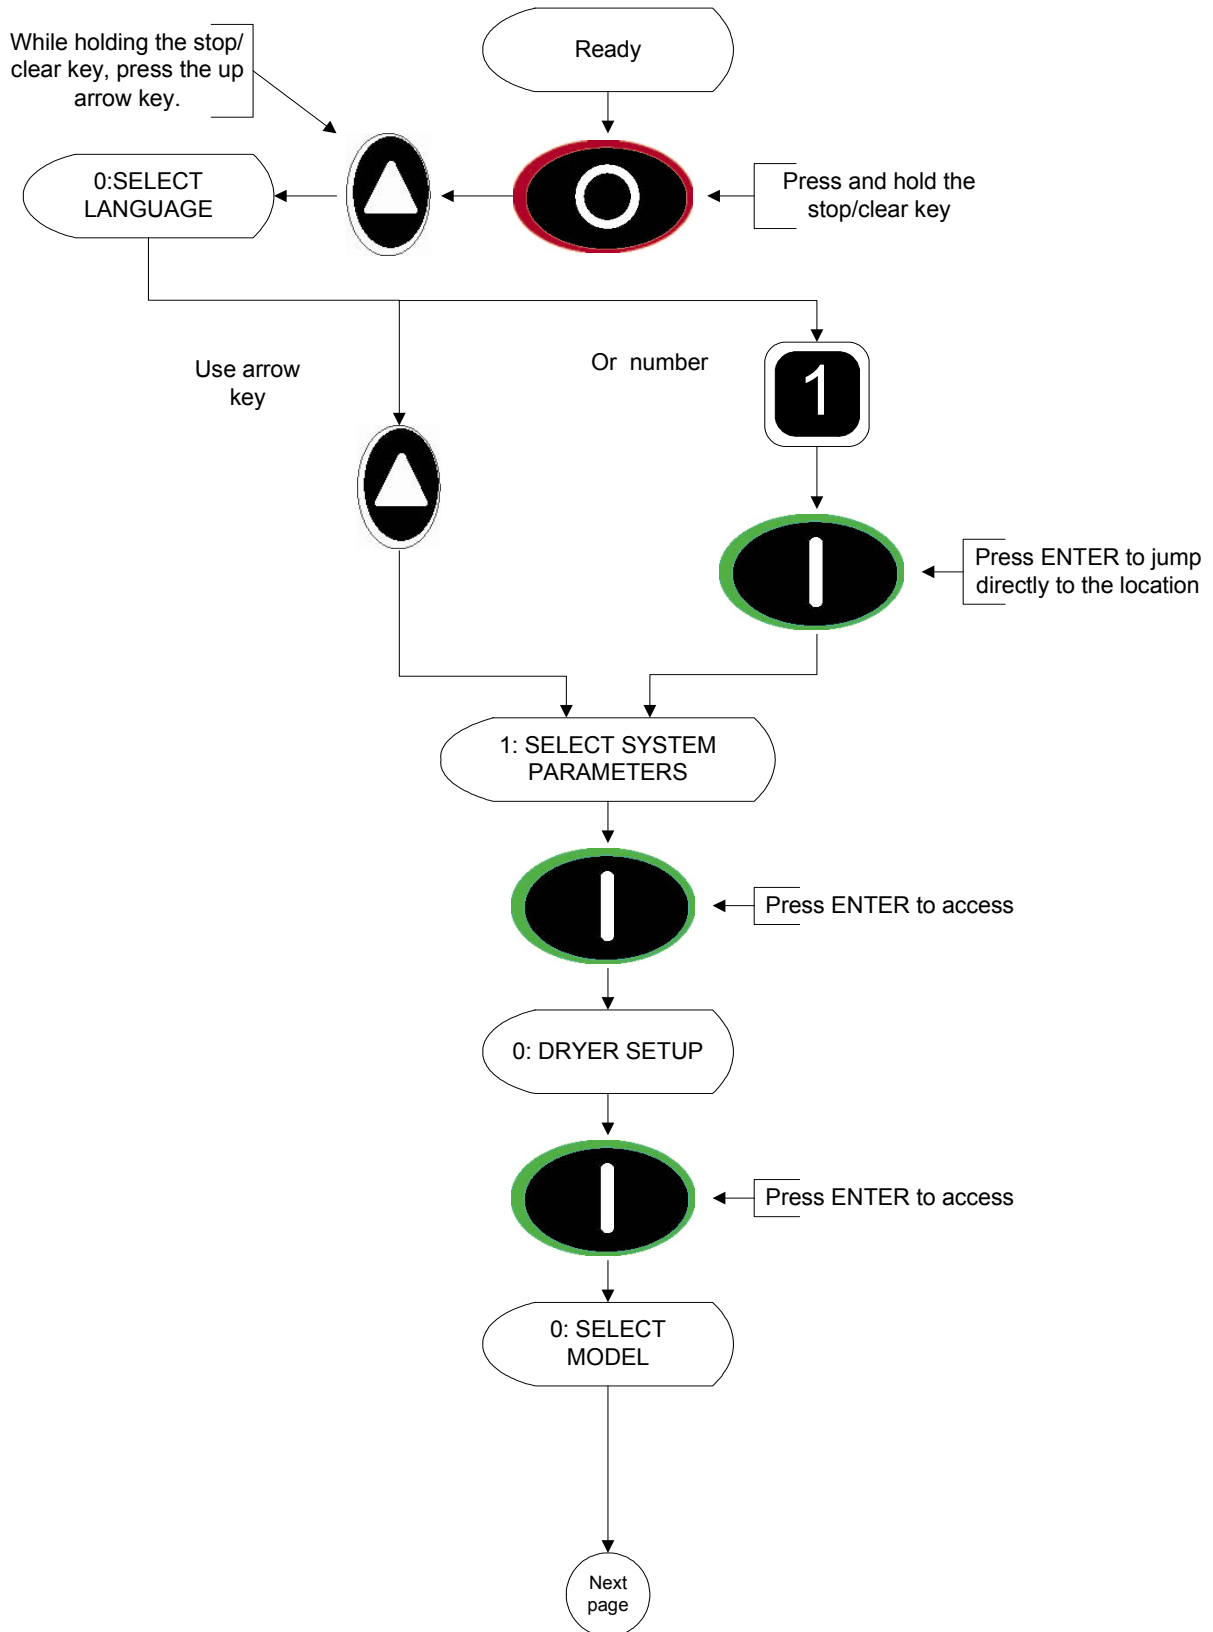

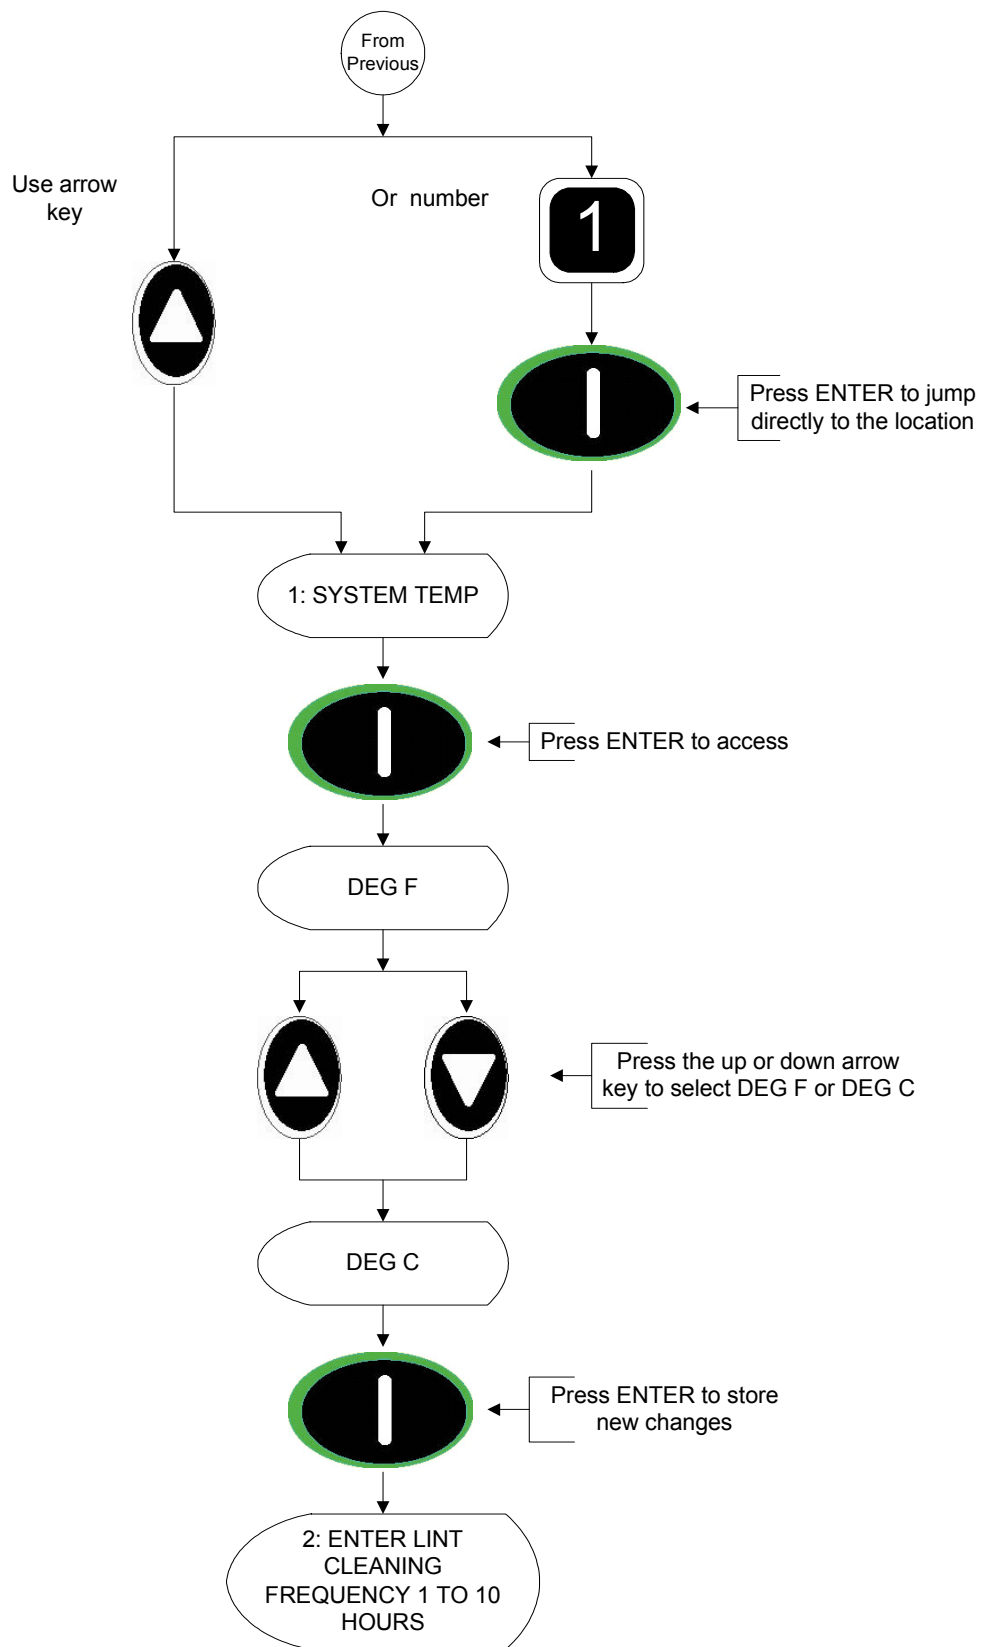



Setting the Lint Frequency

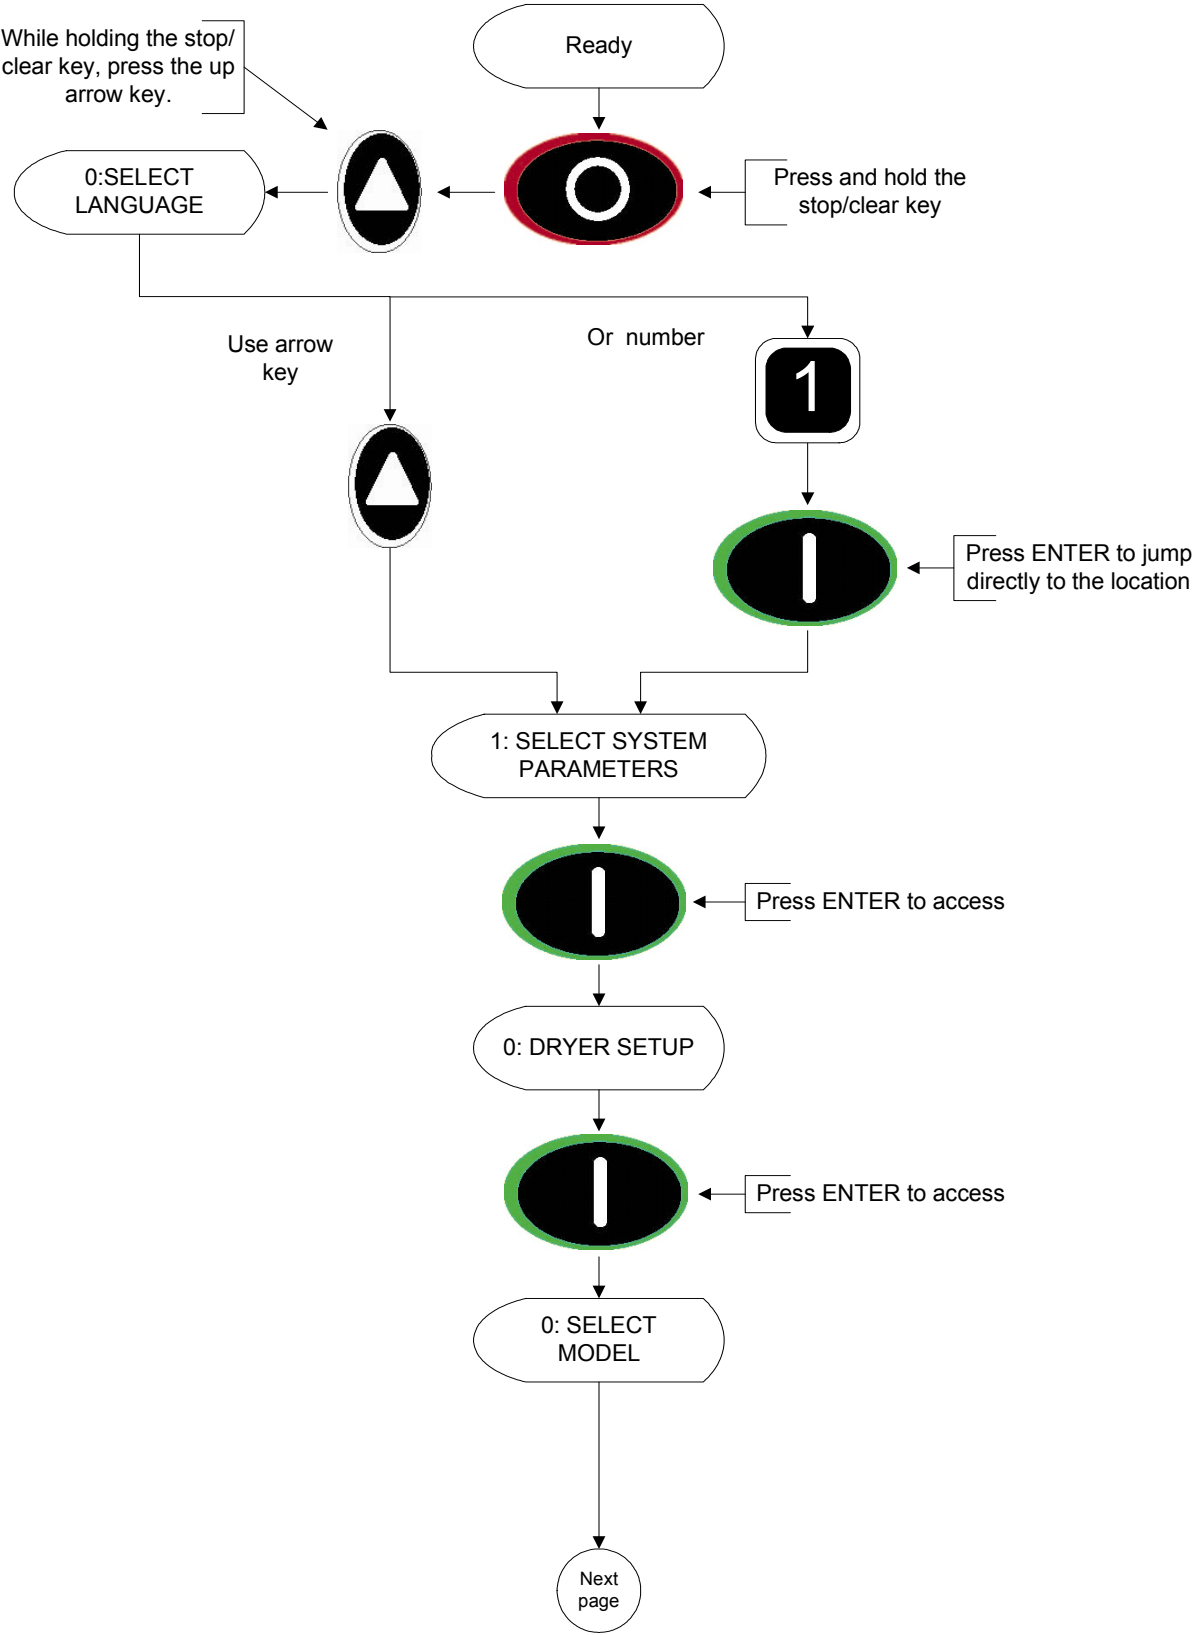


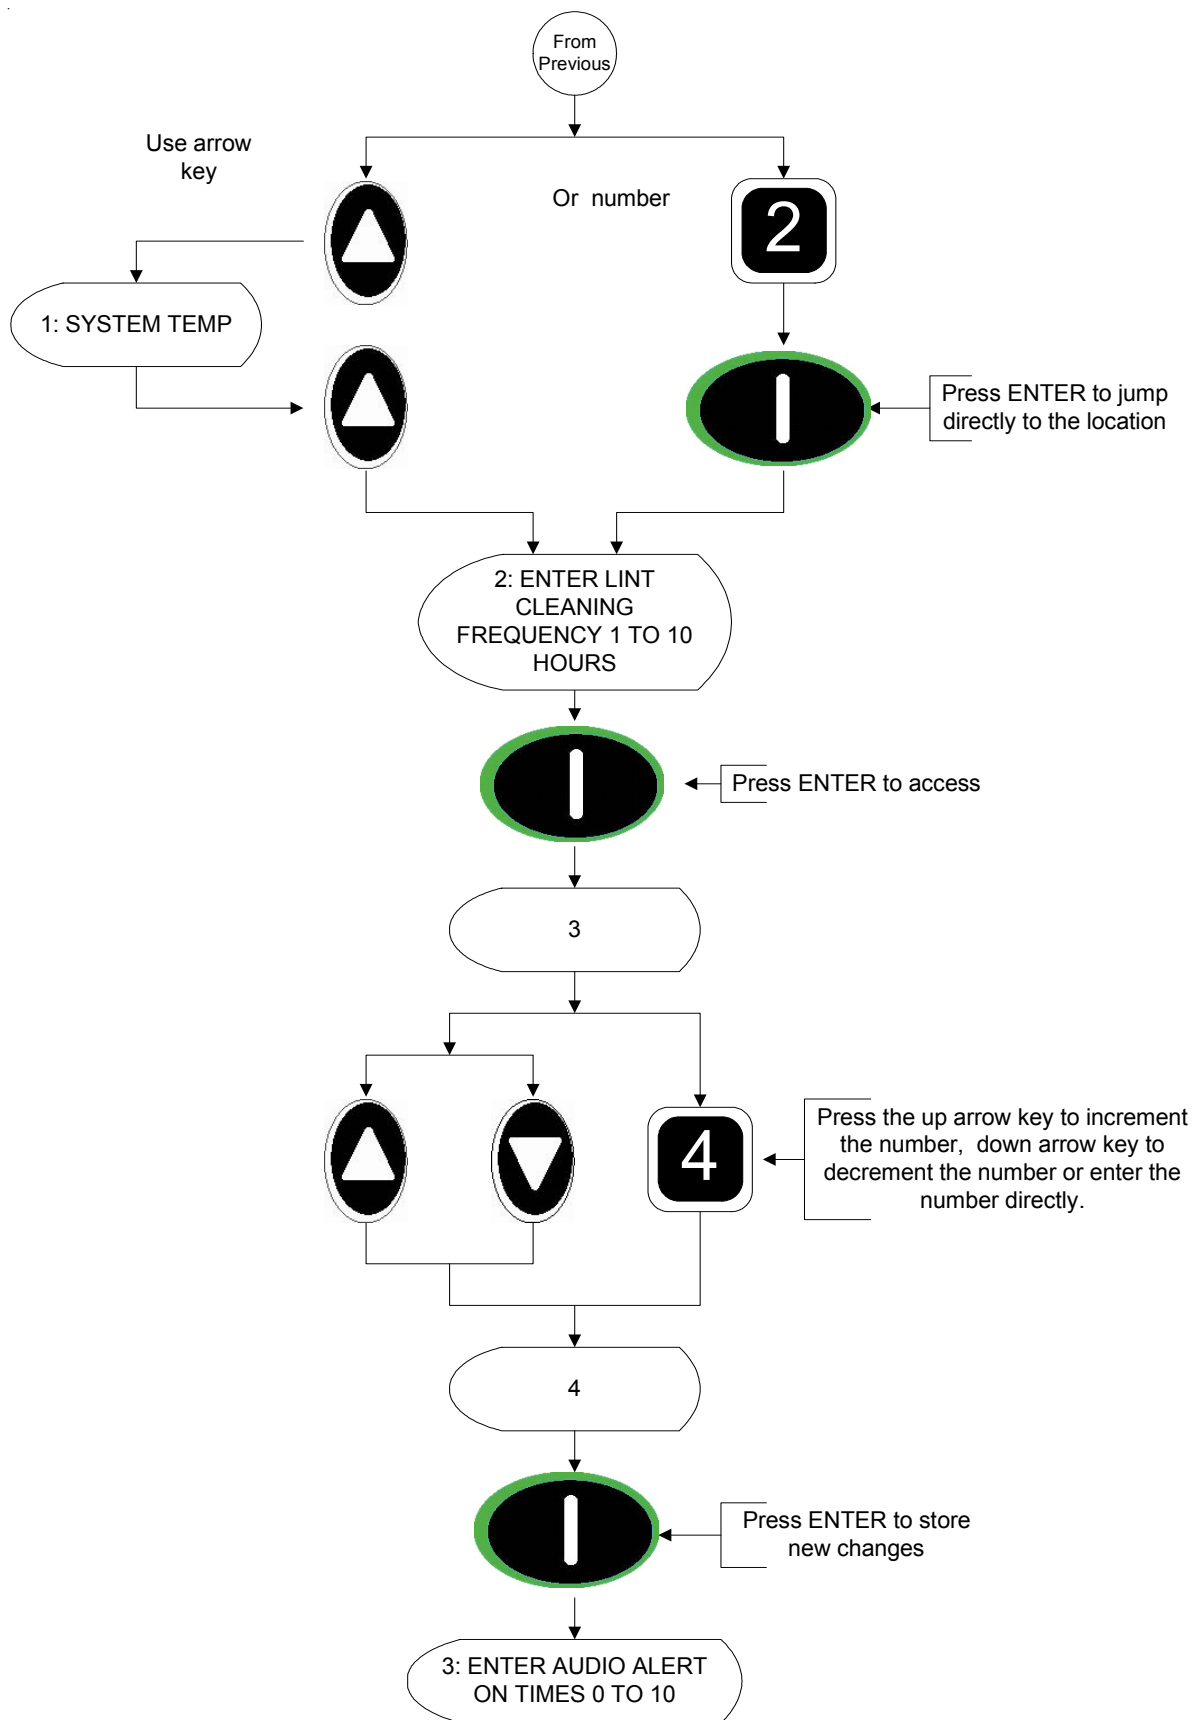


Adjusting the Audio Alert On Times

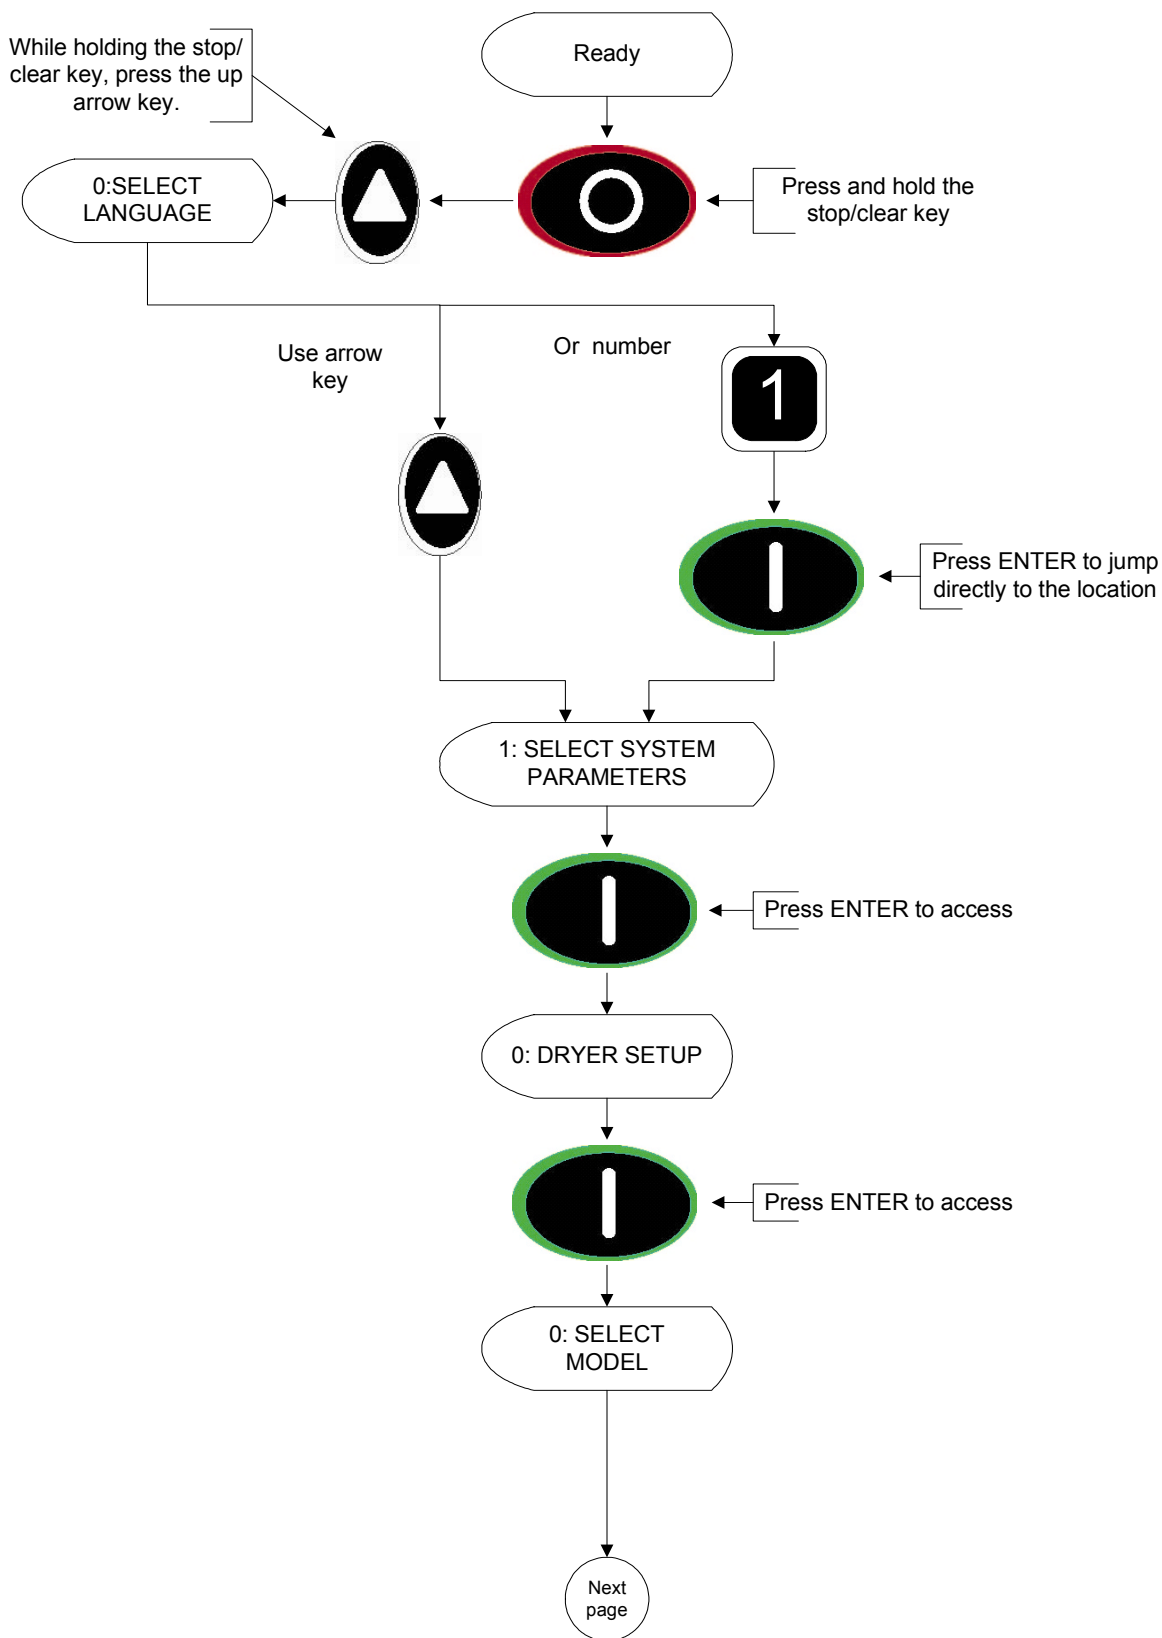


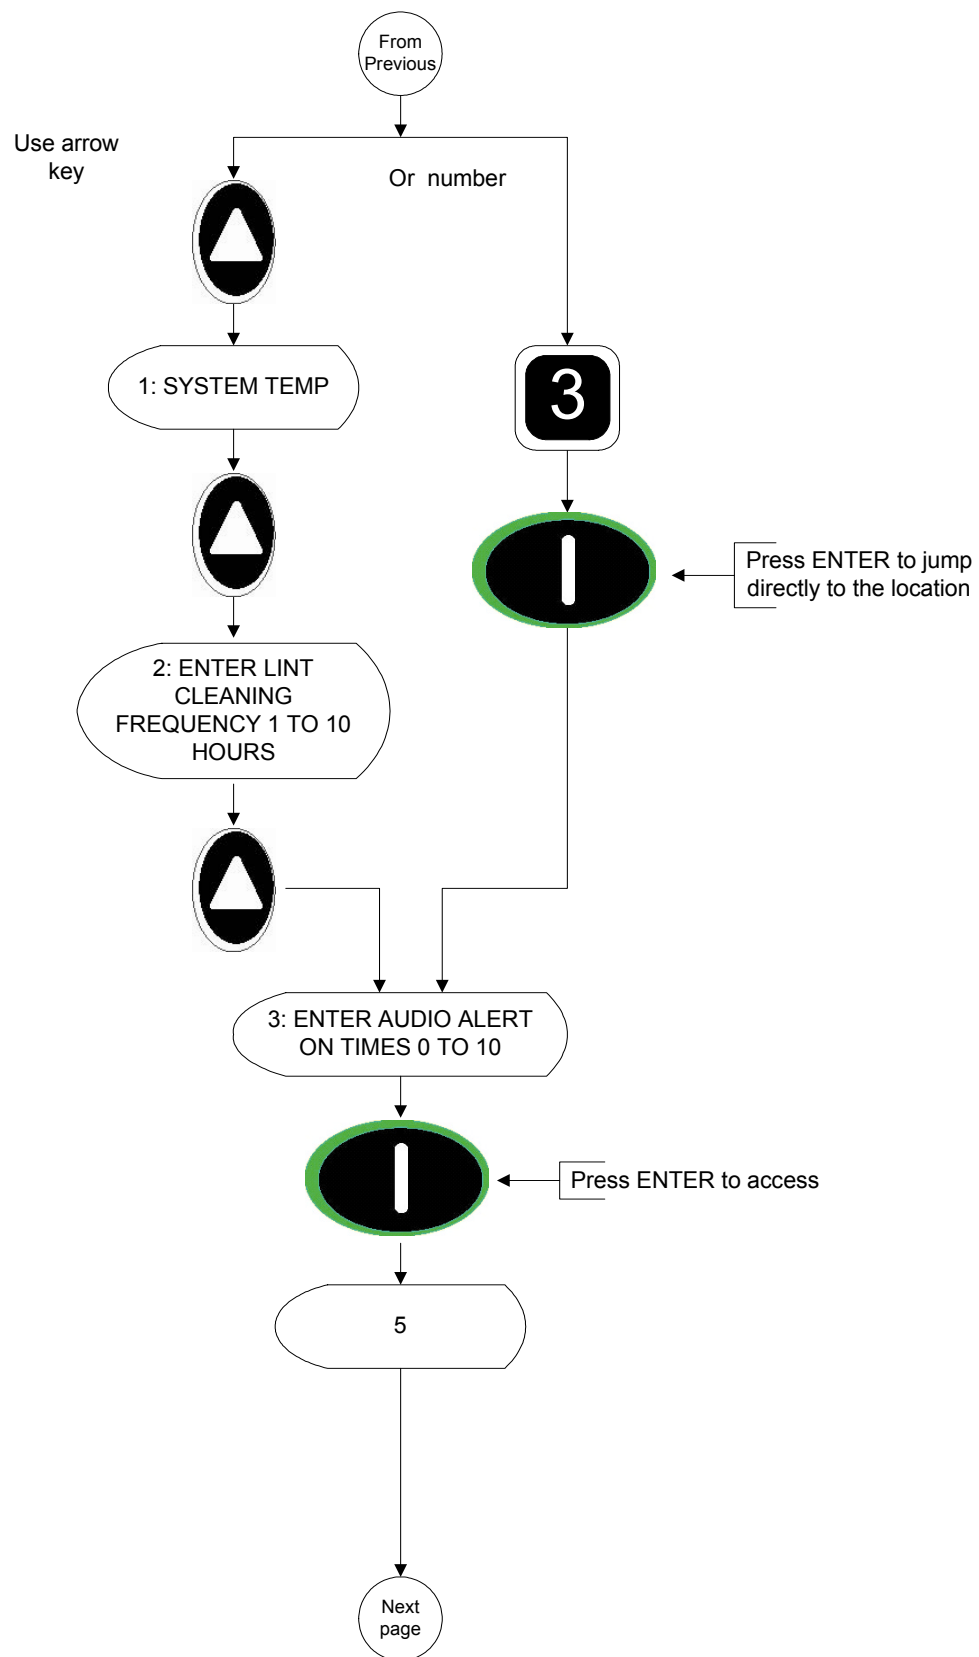


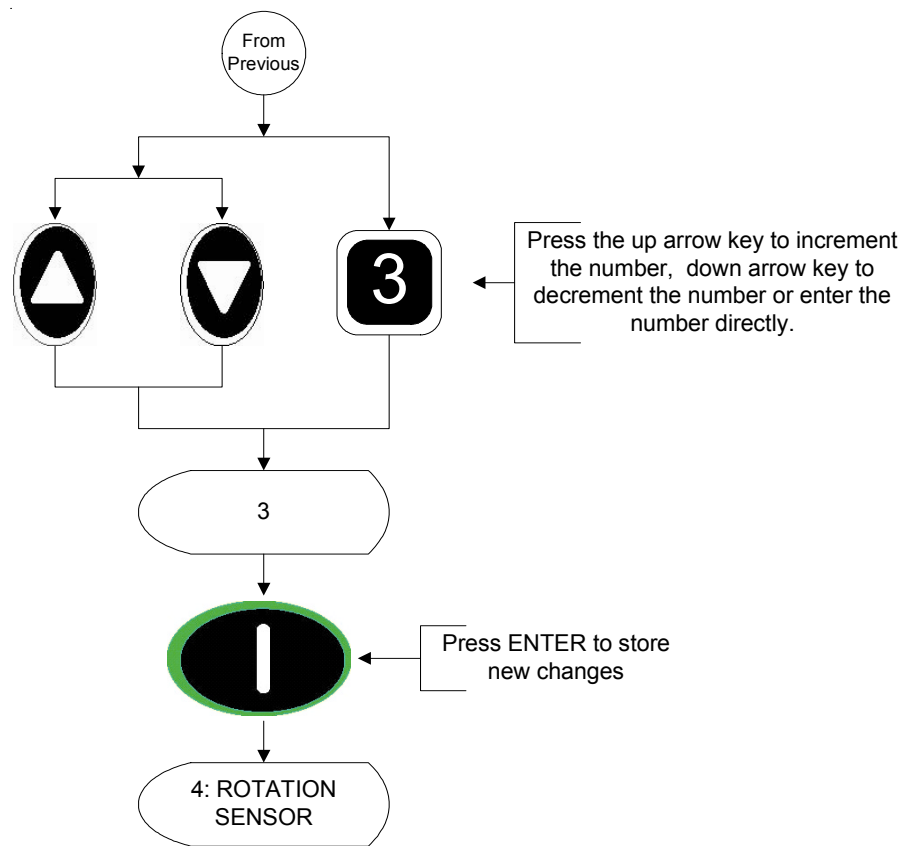


Rotation Sensor

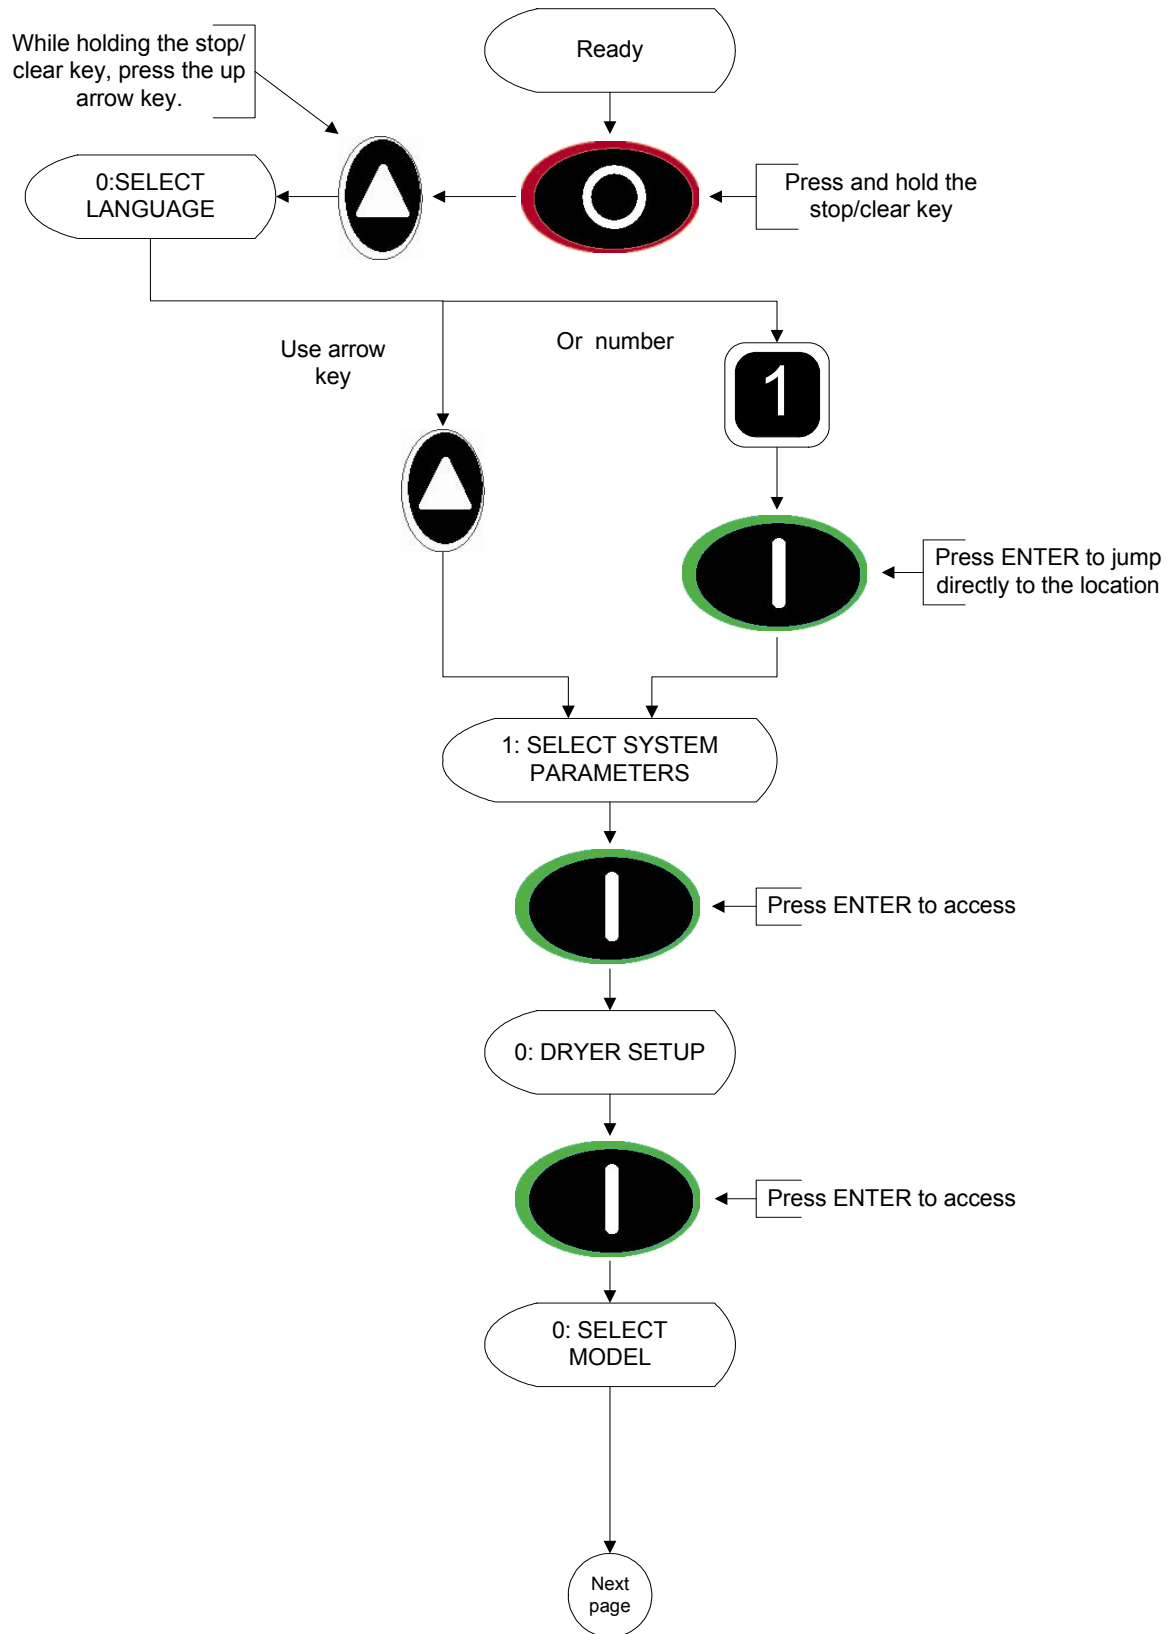


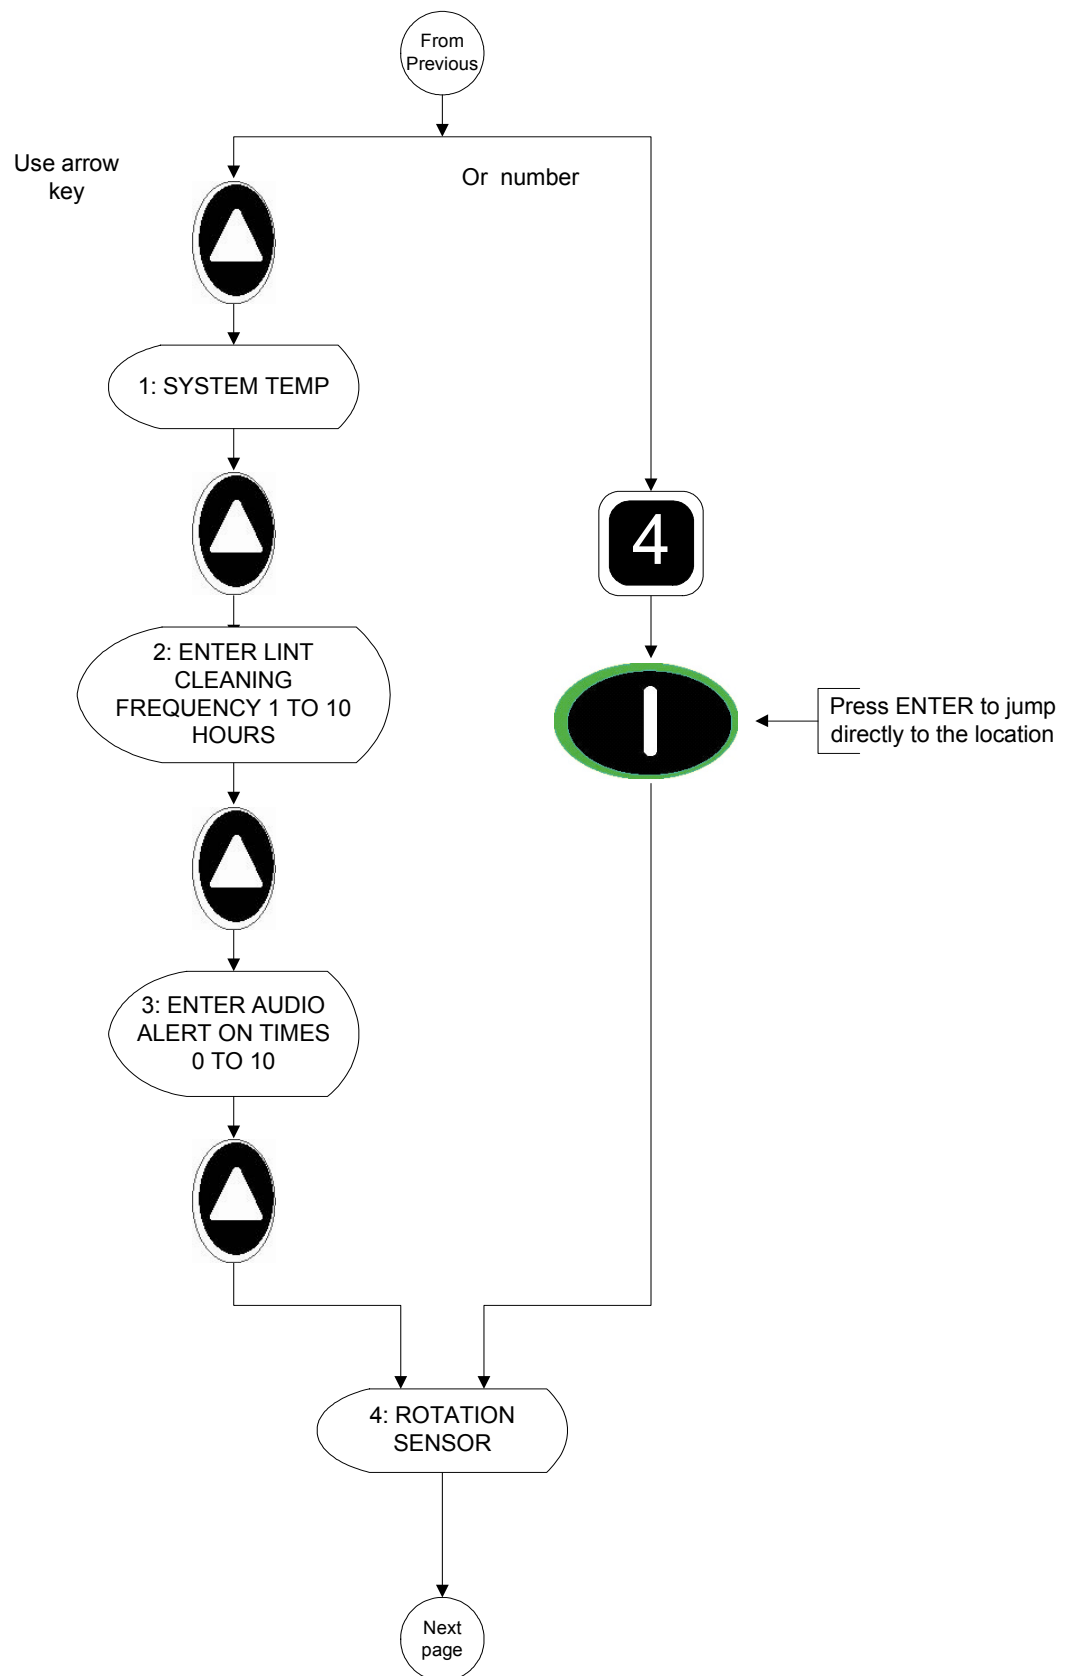


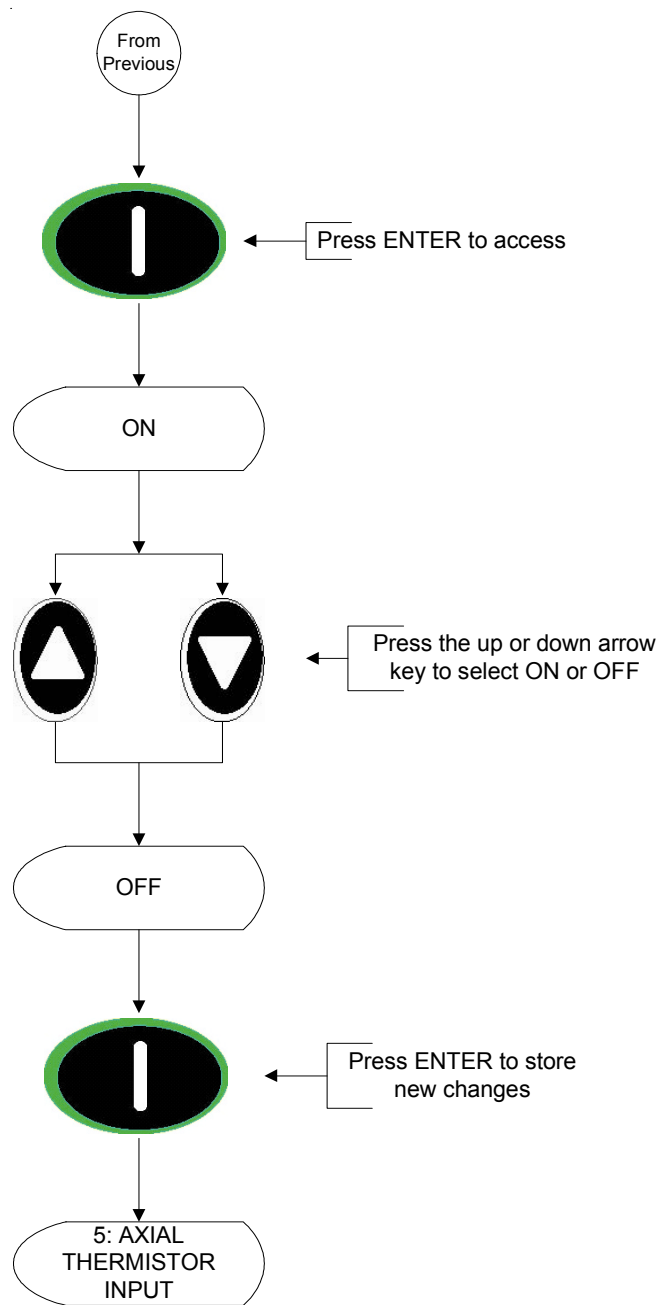


Axial Thermistor

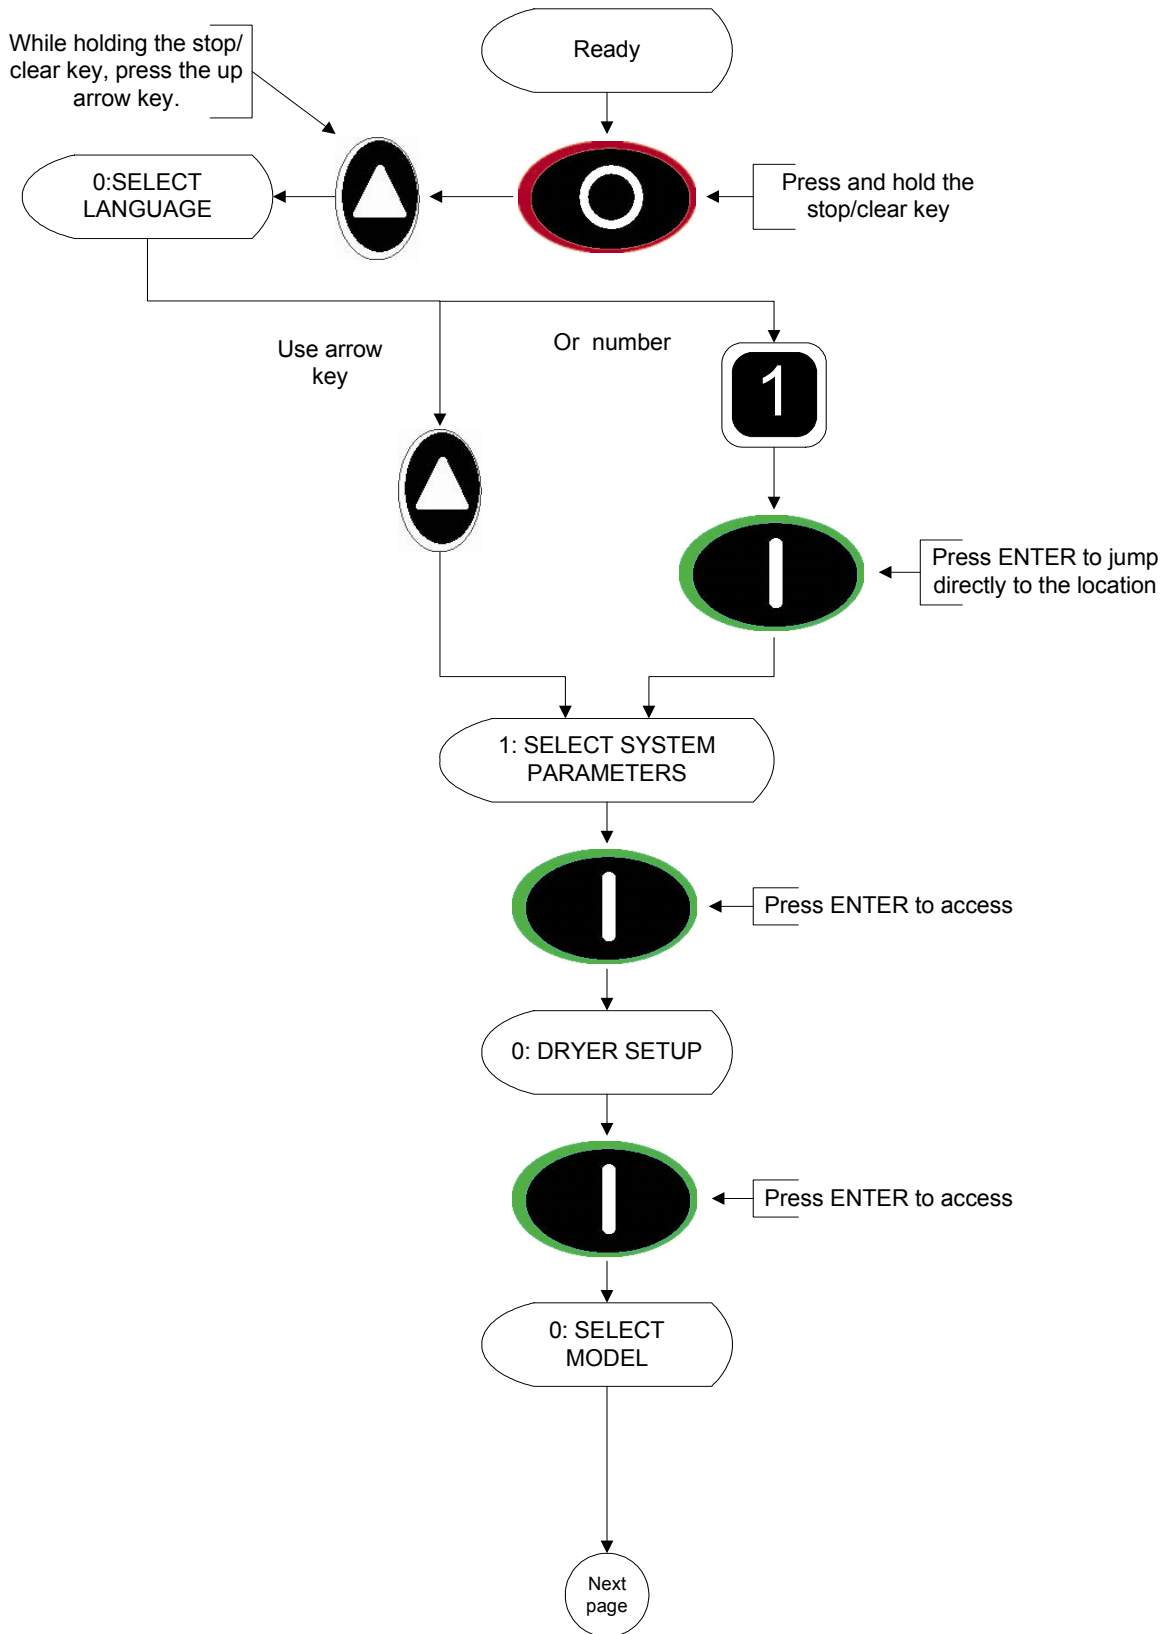


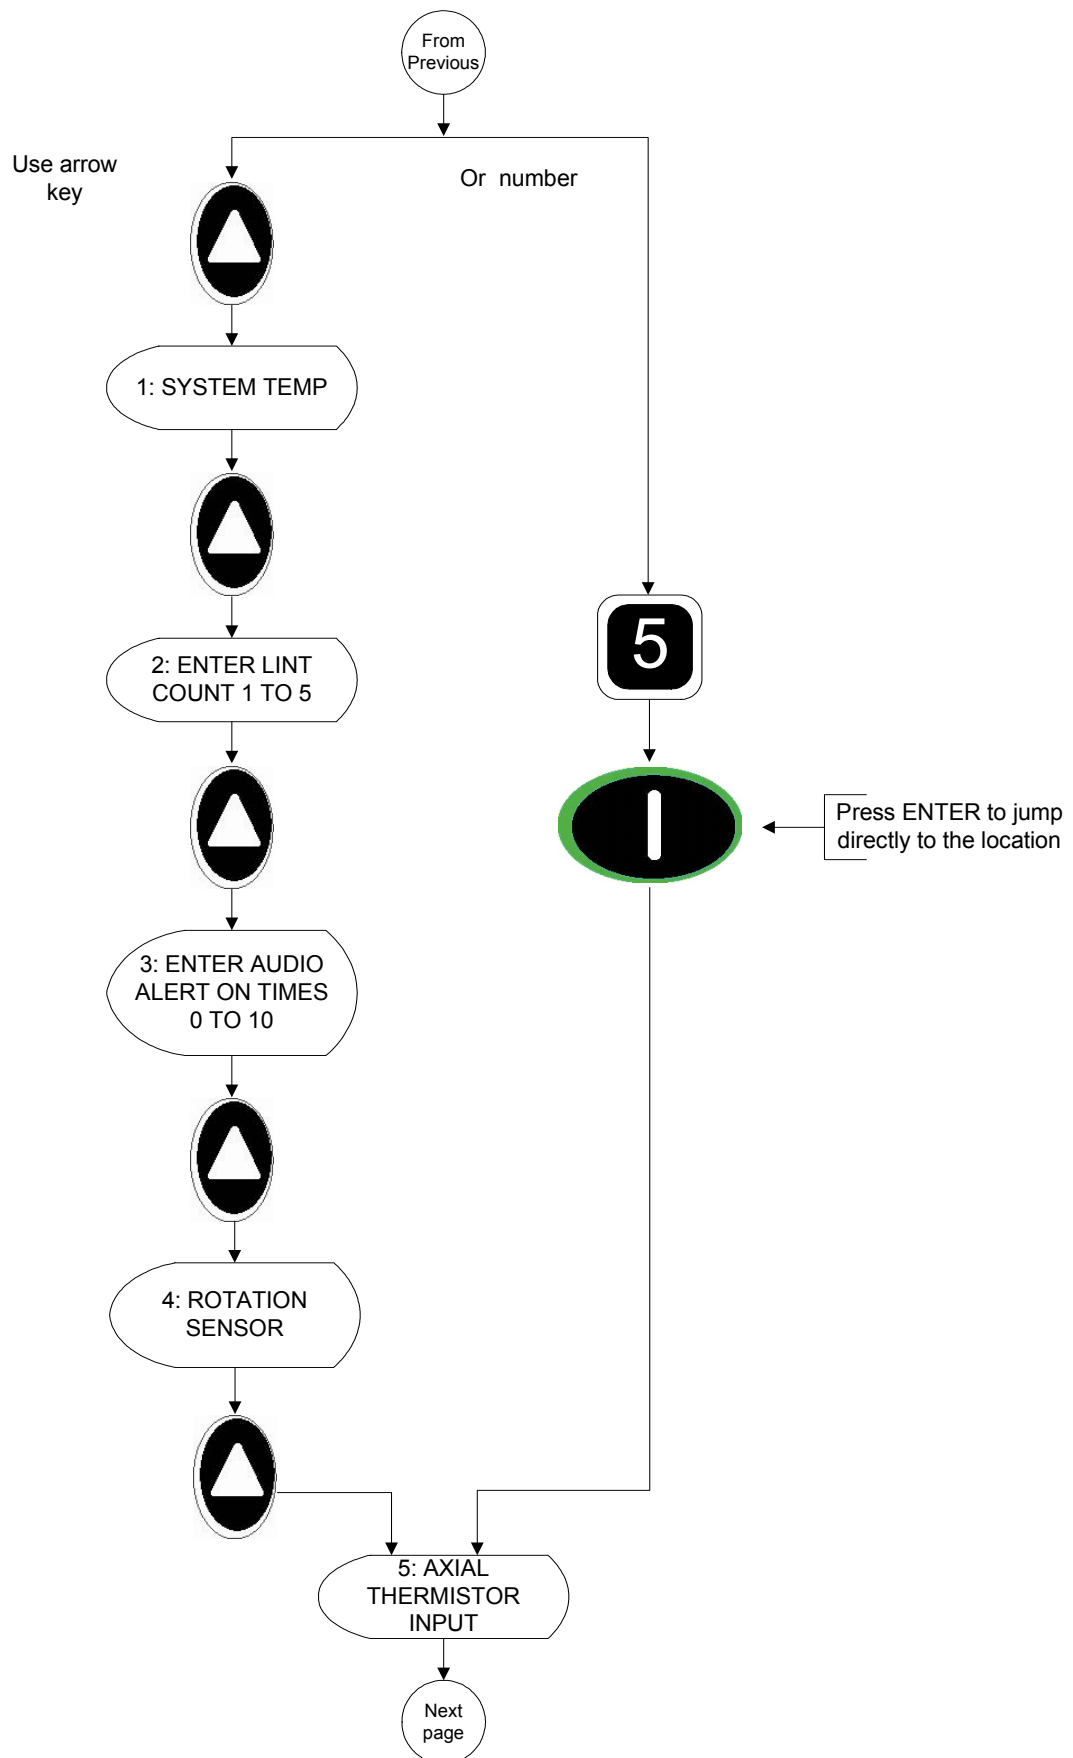


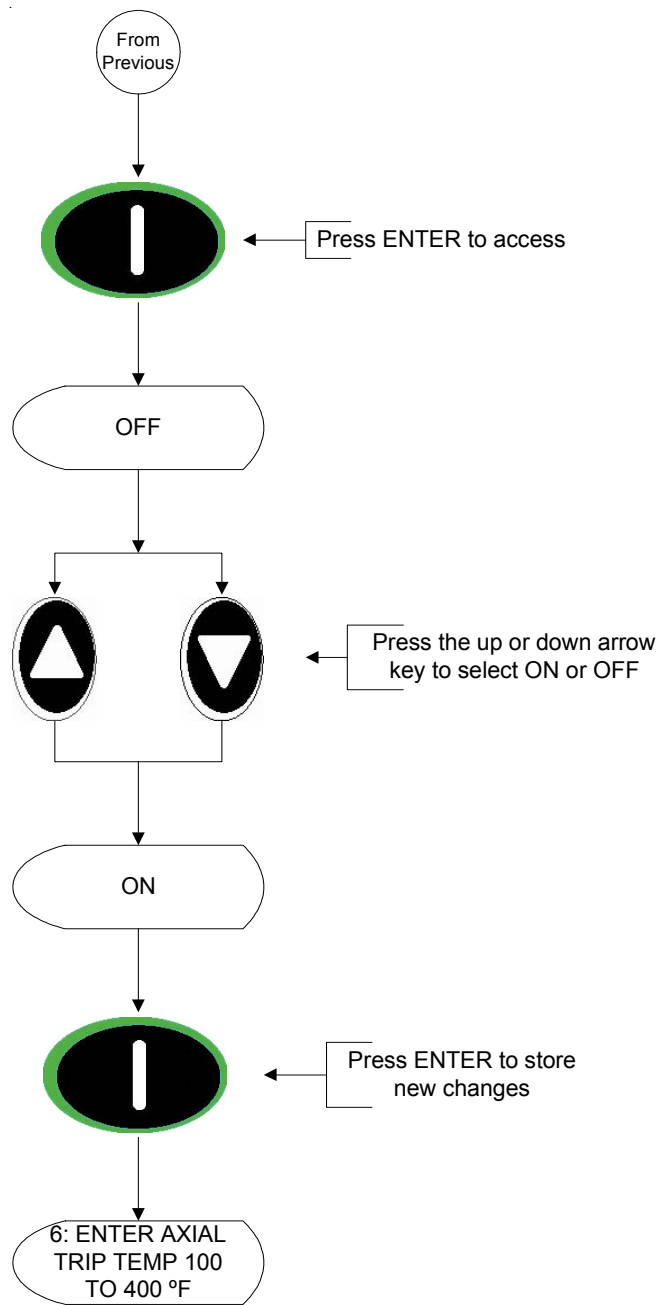


Axial Thermistor Trip Temperature

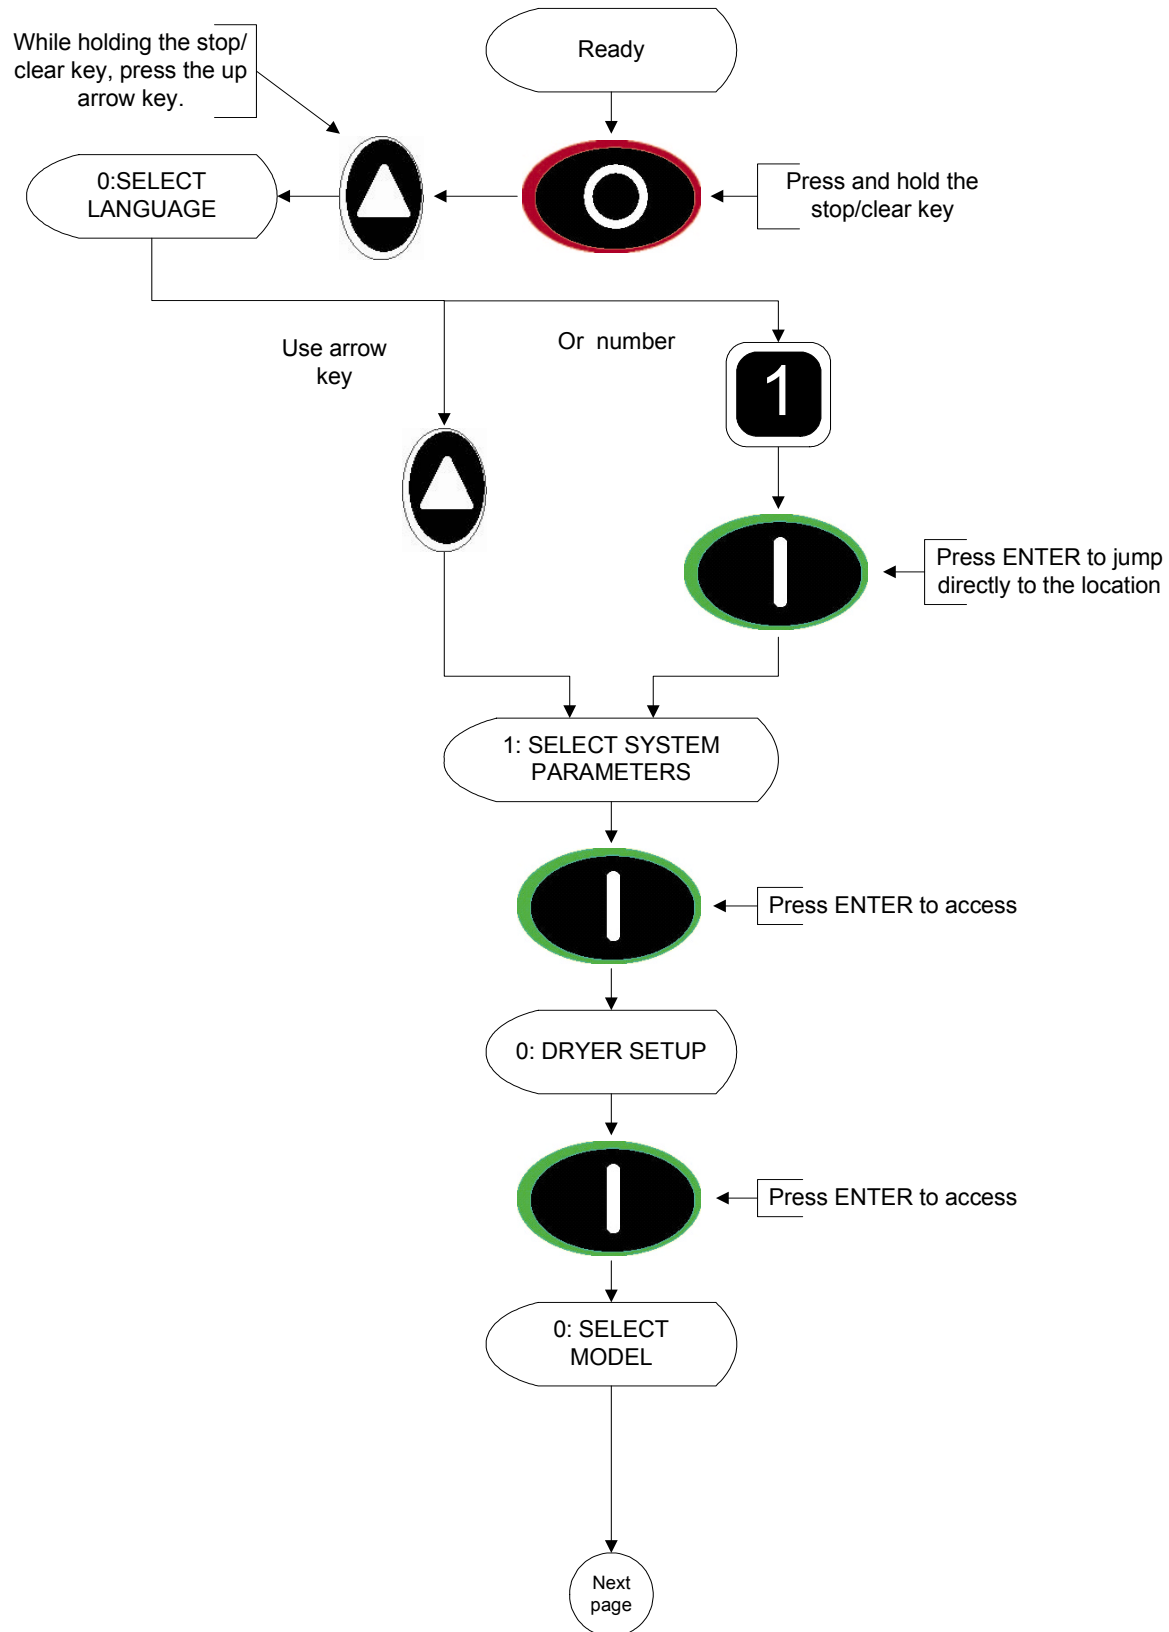


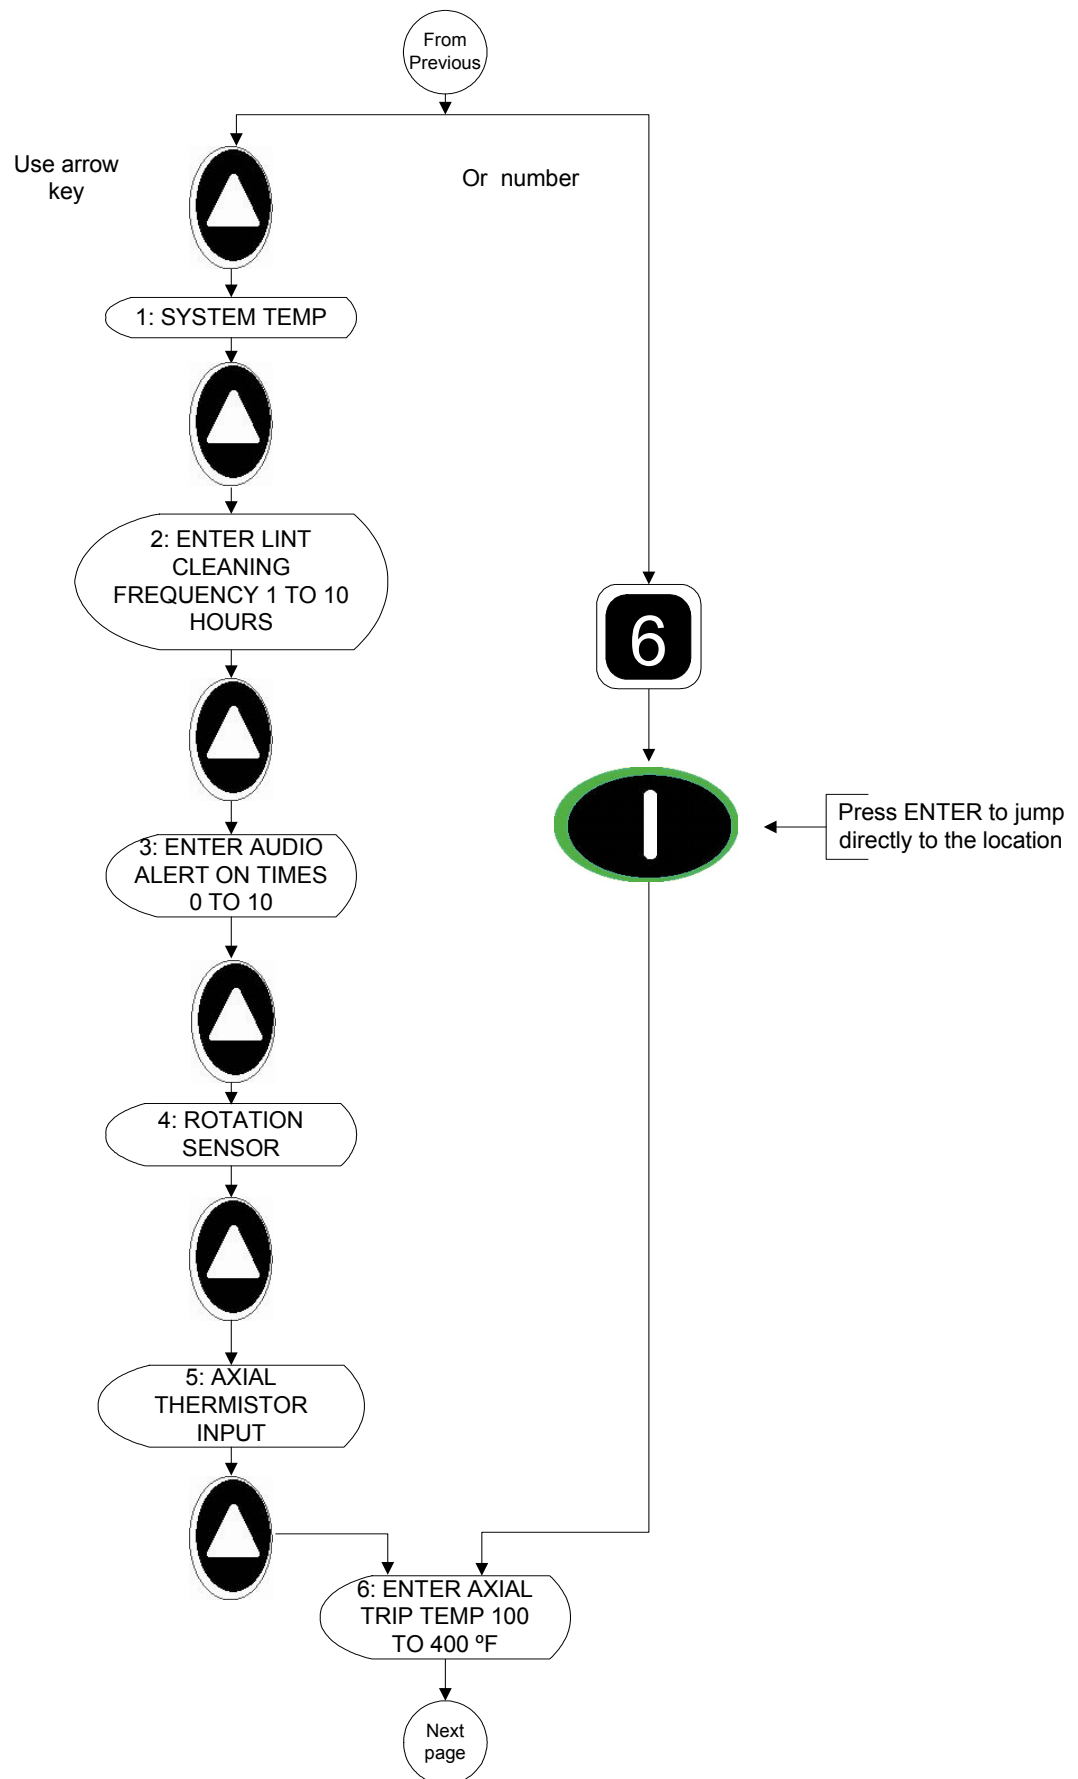


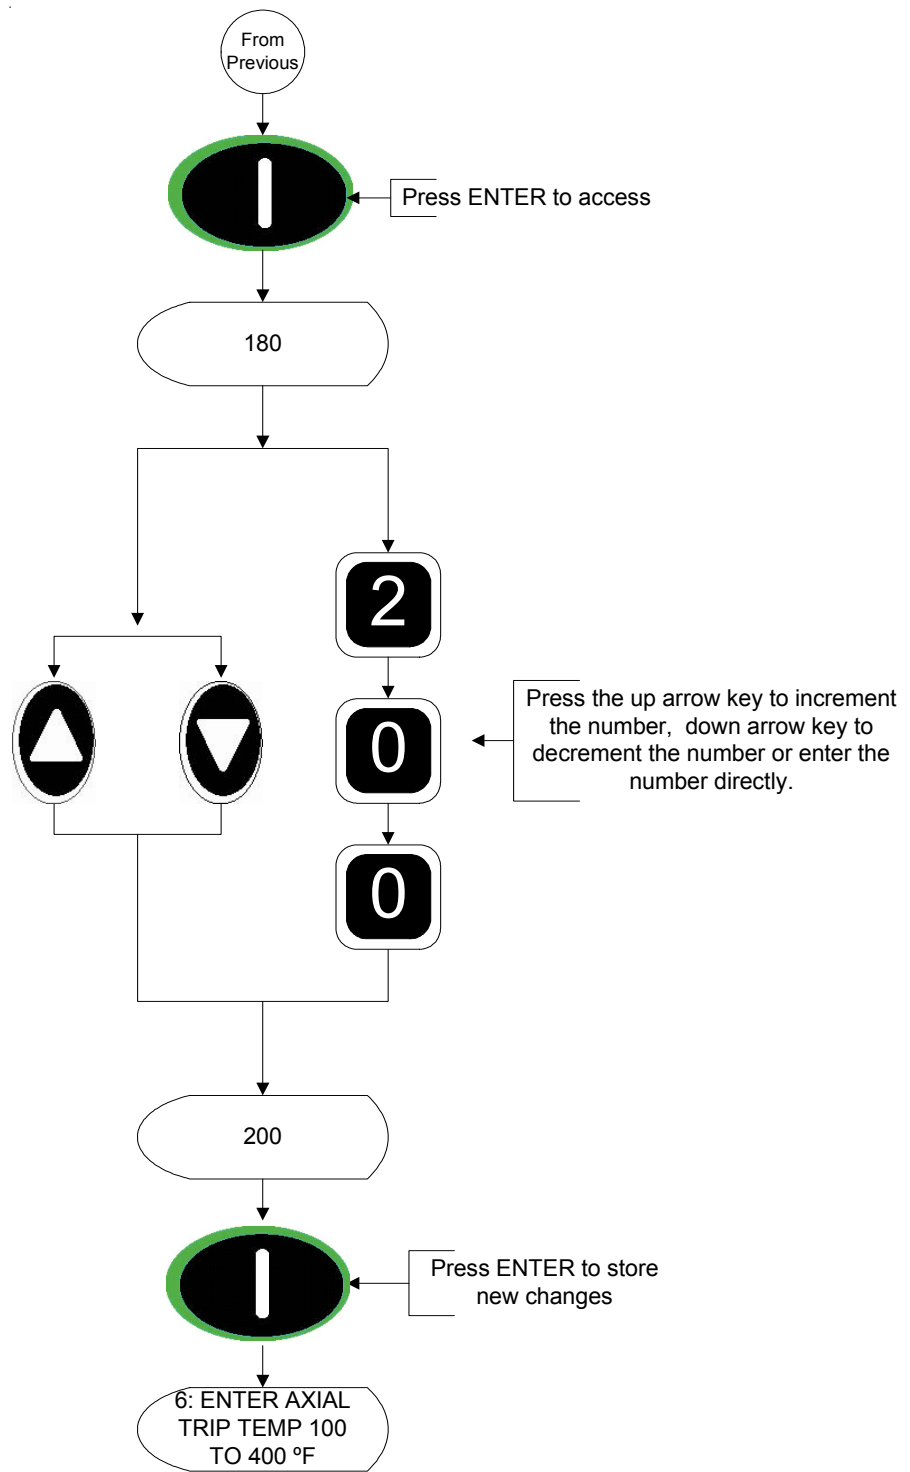


Adjusting Reversing Spin Time and Stop Time

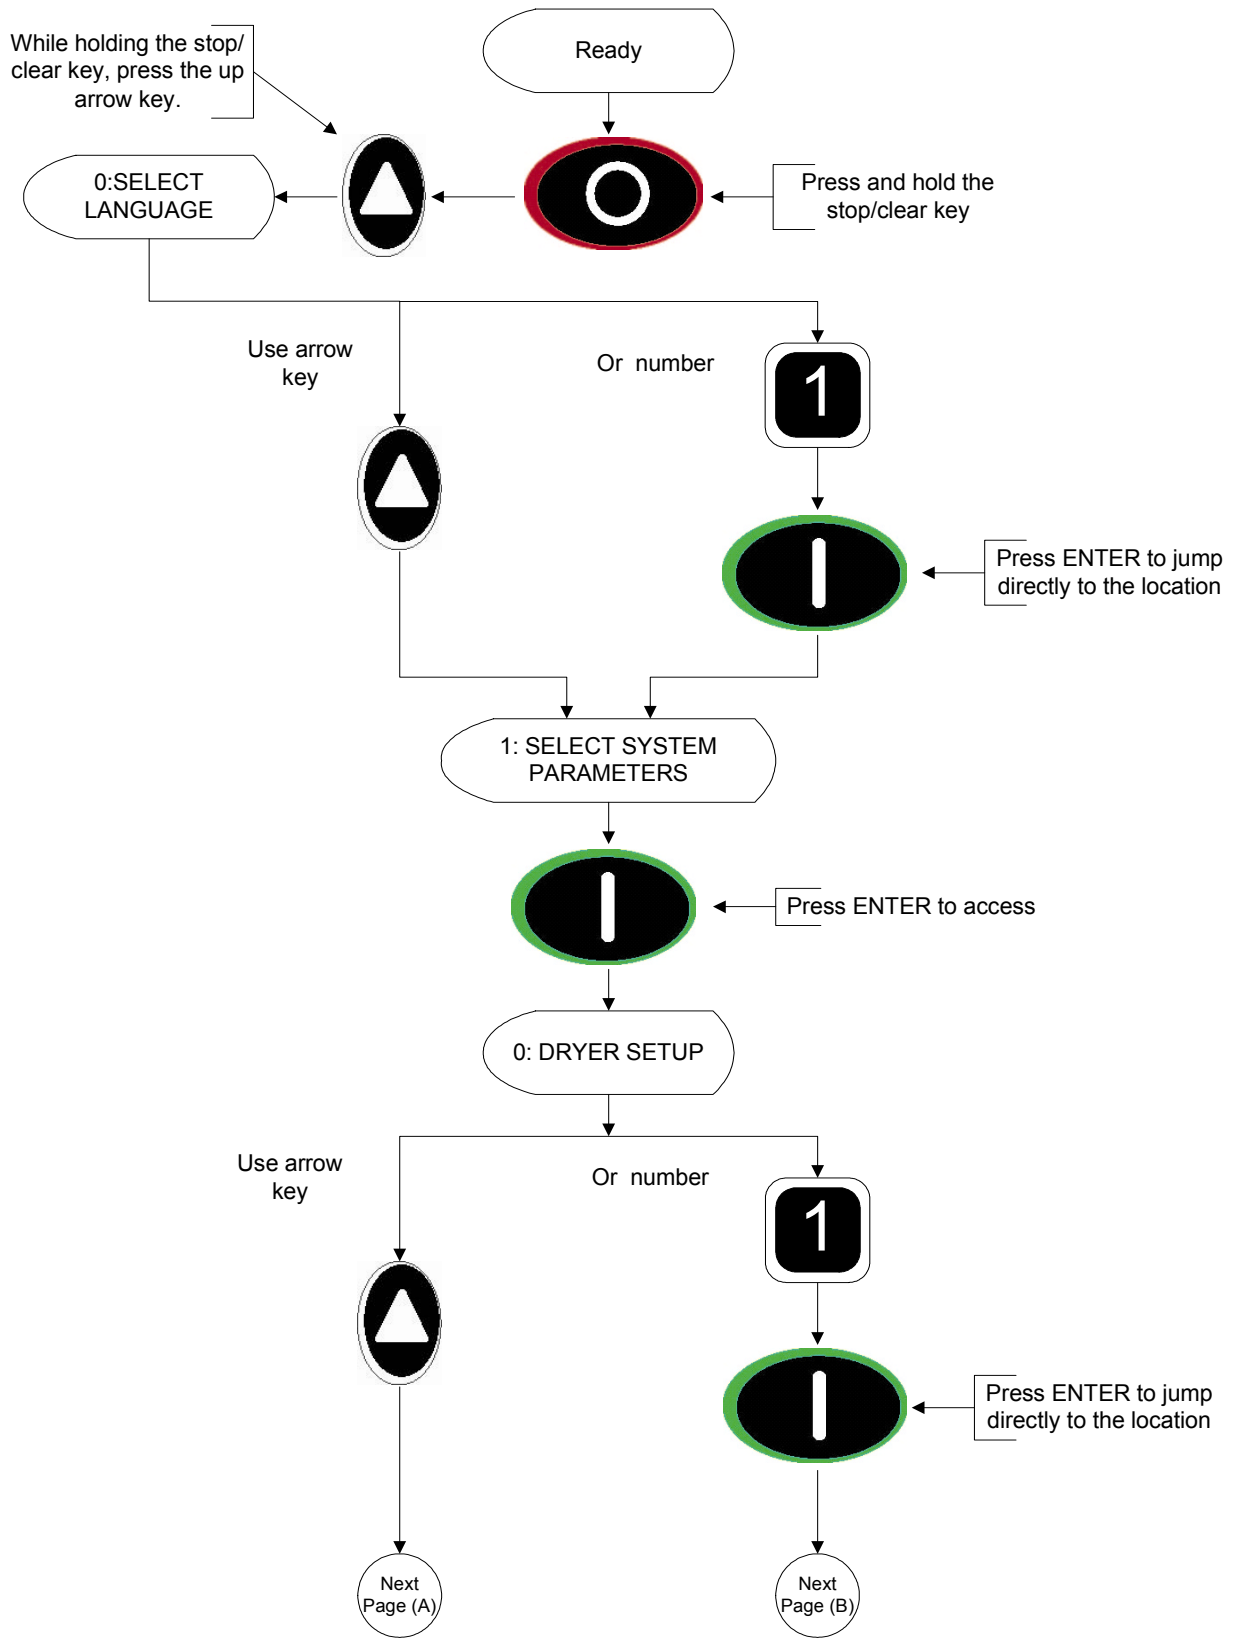


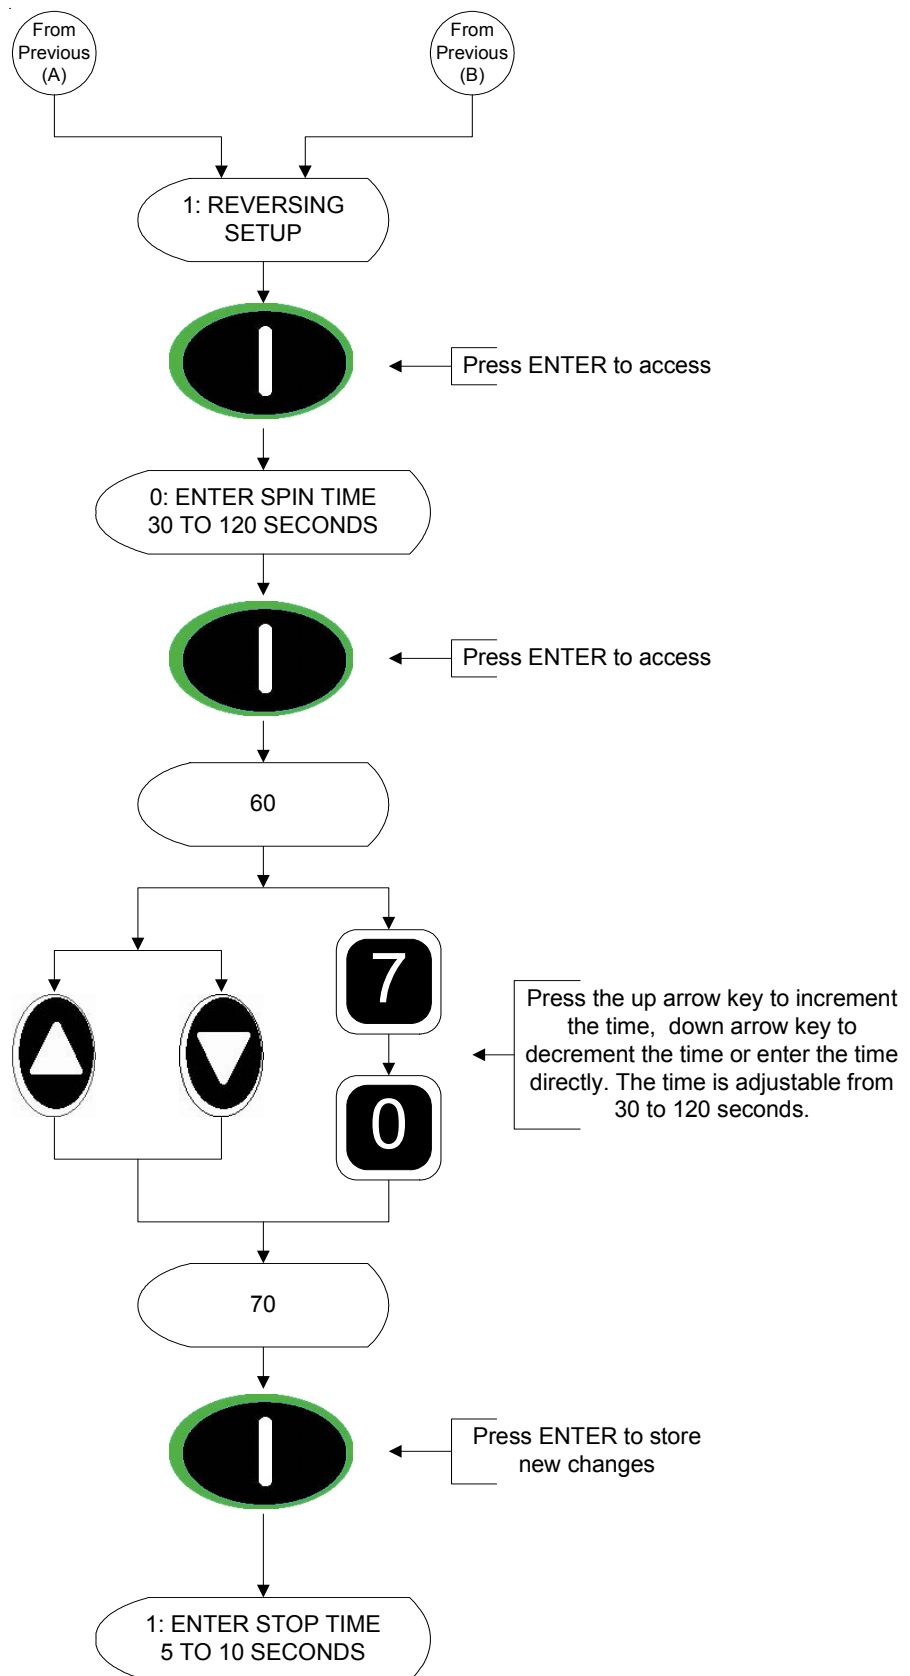

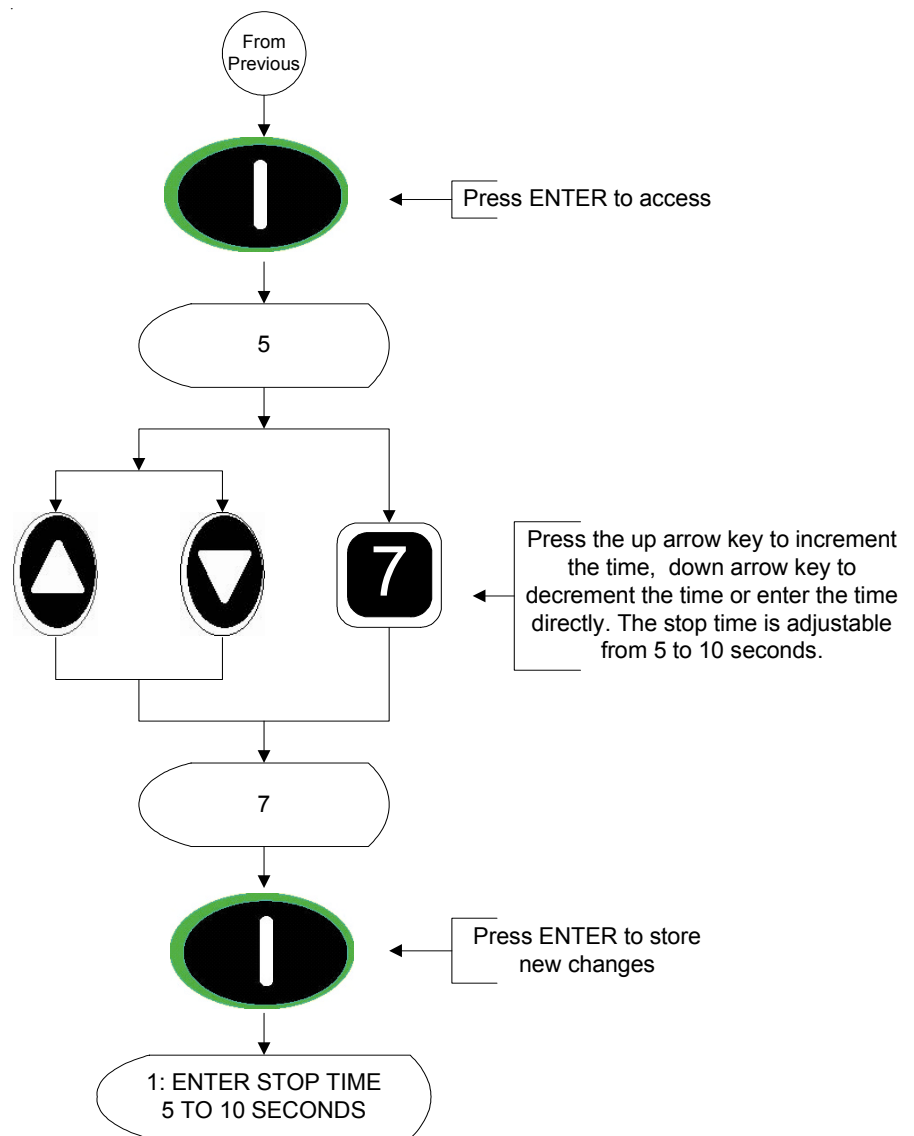



Wrinkle Guard Audio Alert


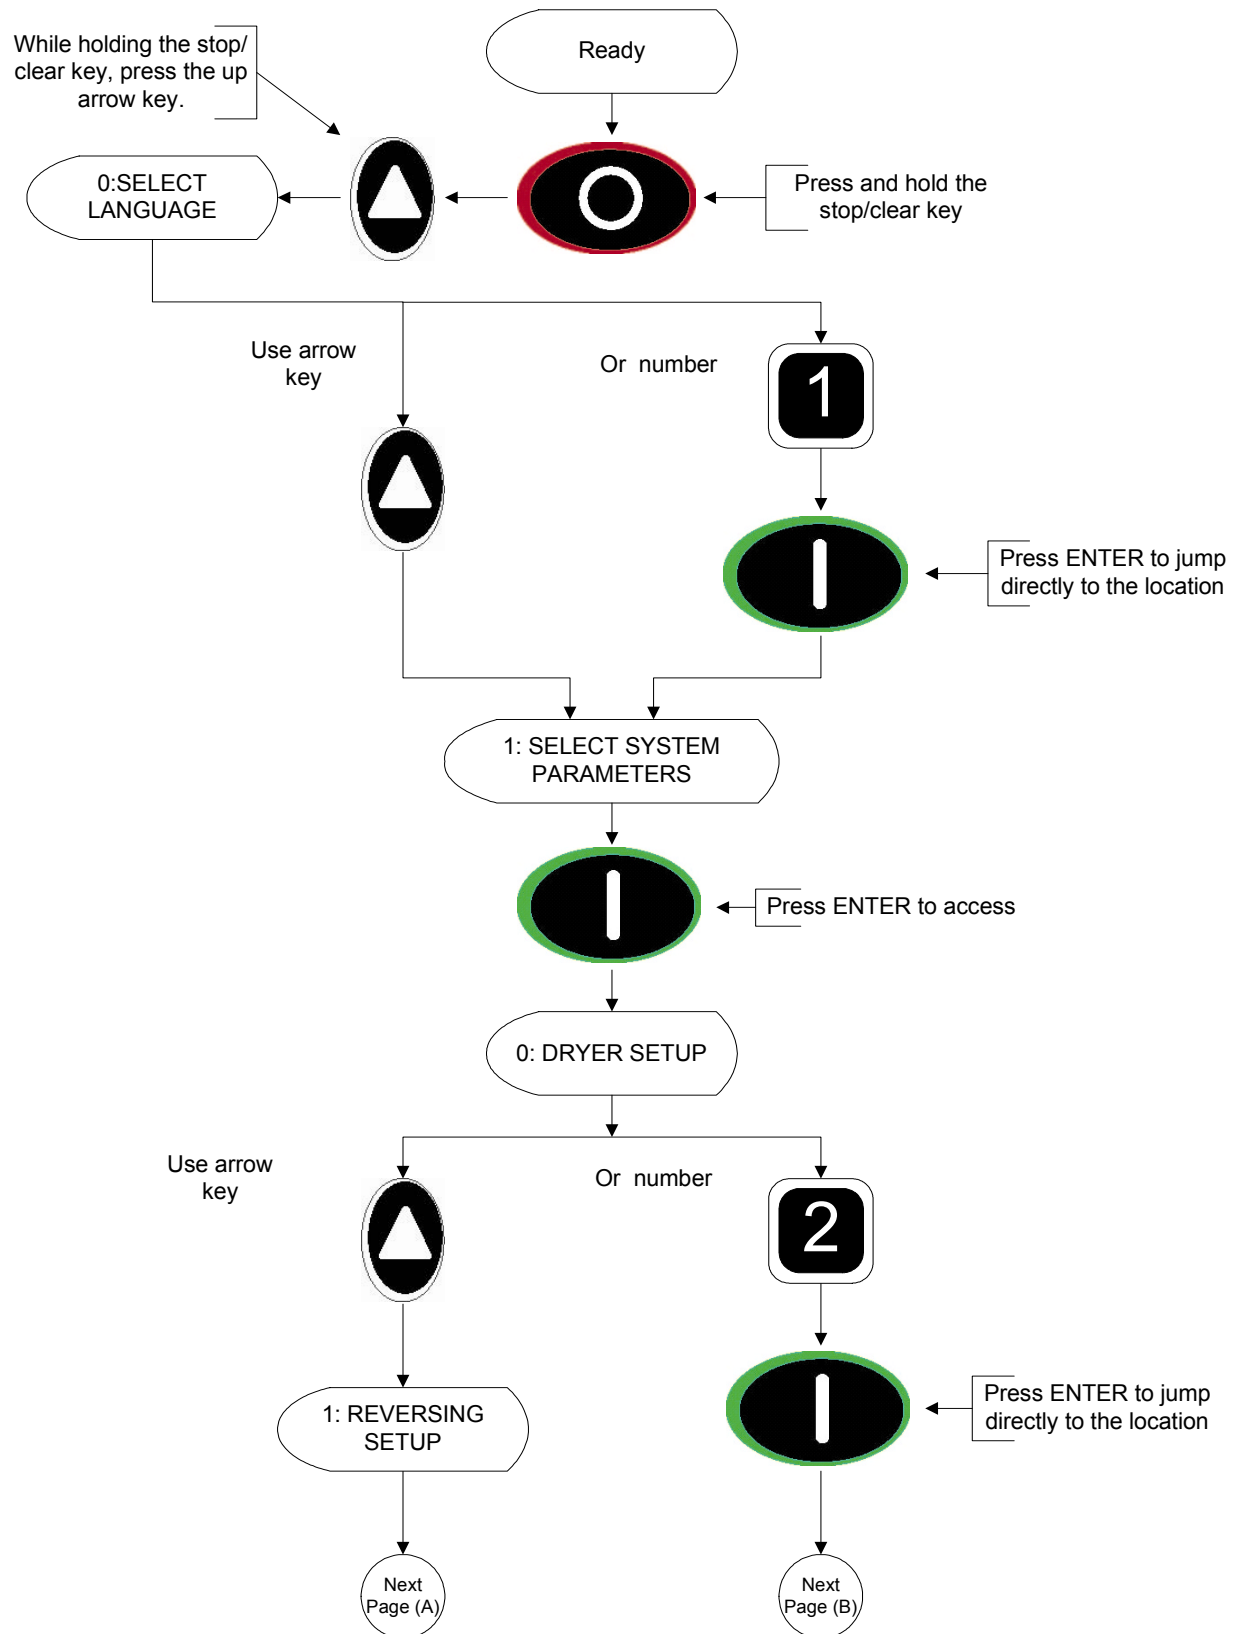


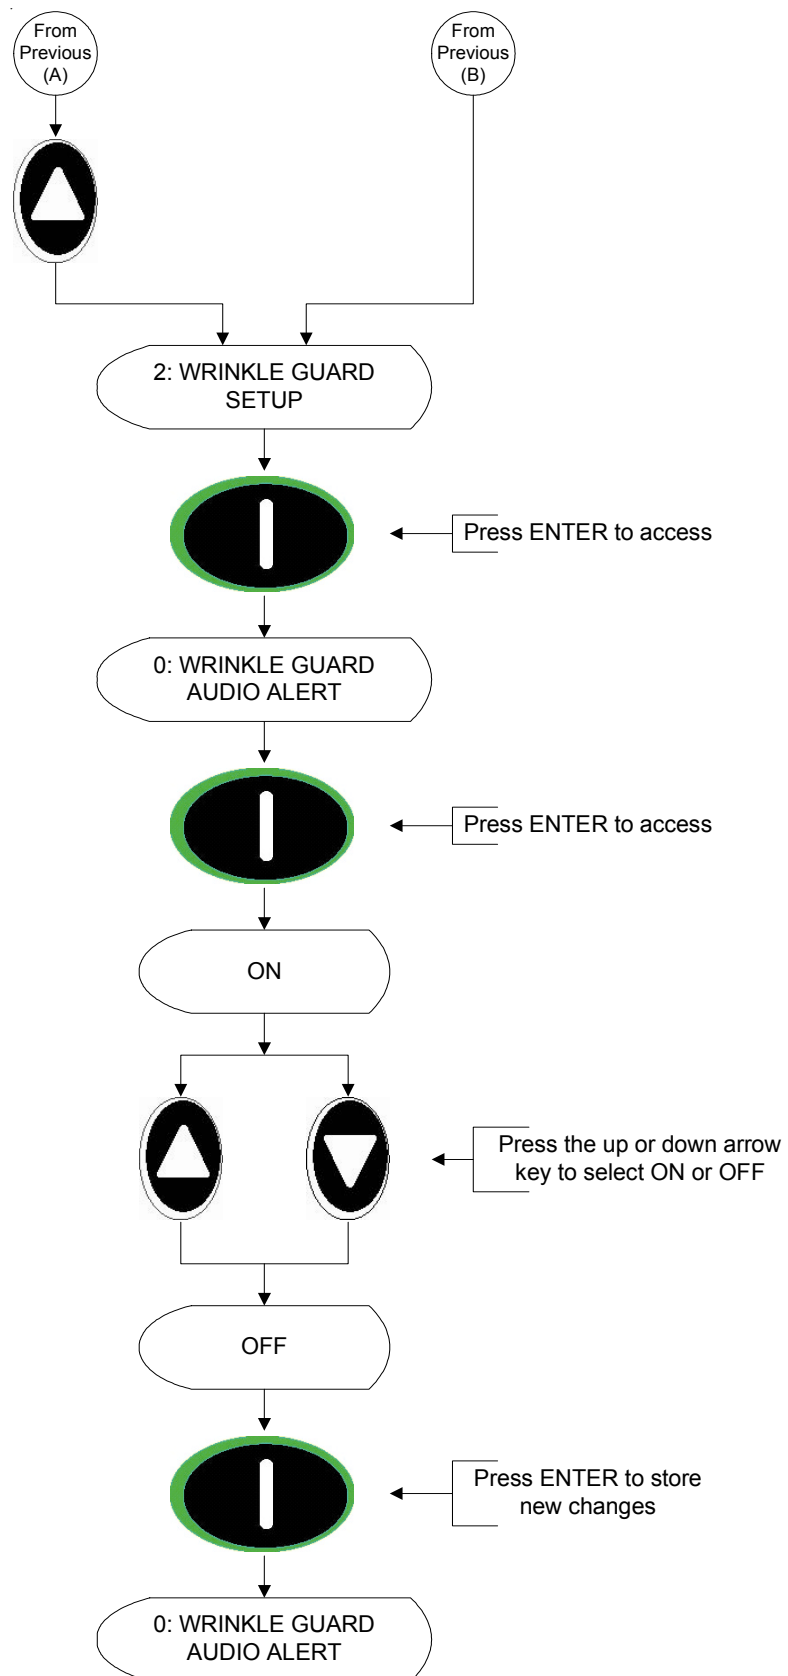



Programming A - F Cycles or 0 - 40 Cycles

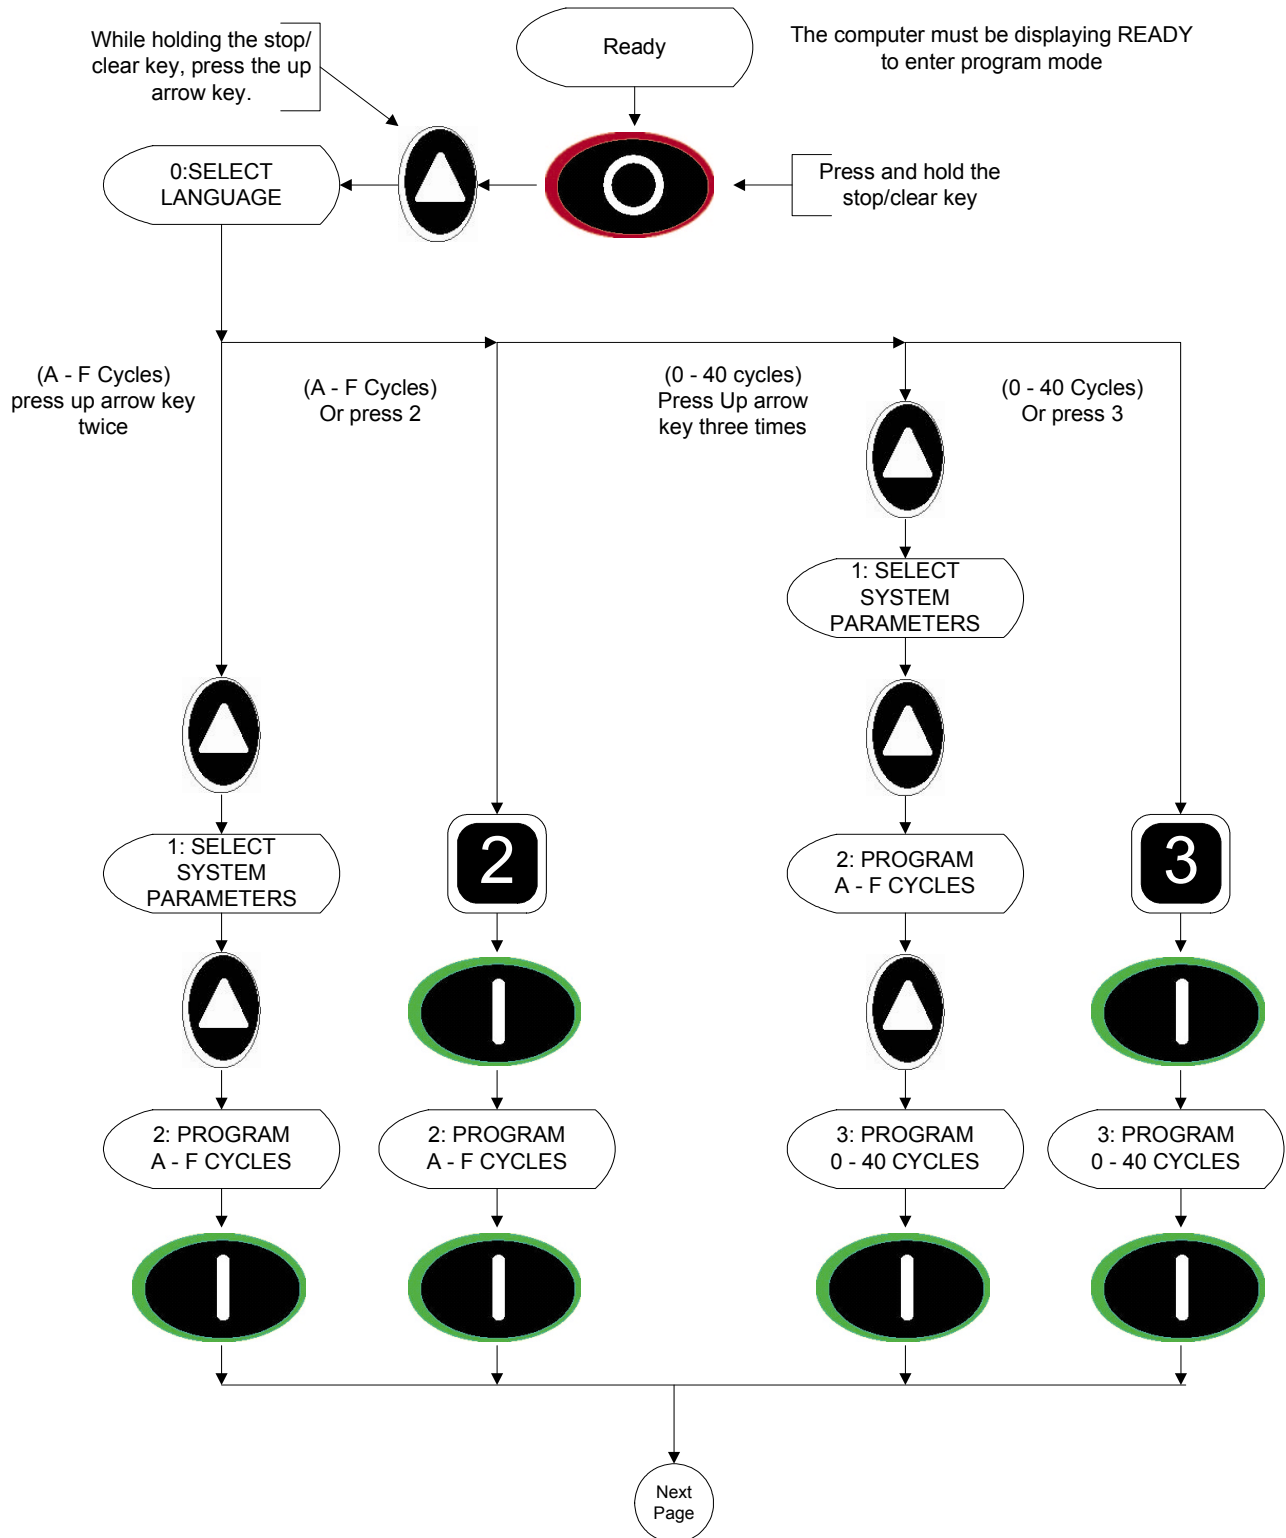



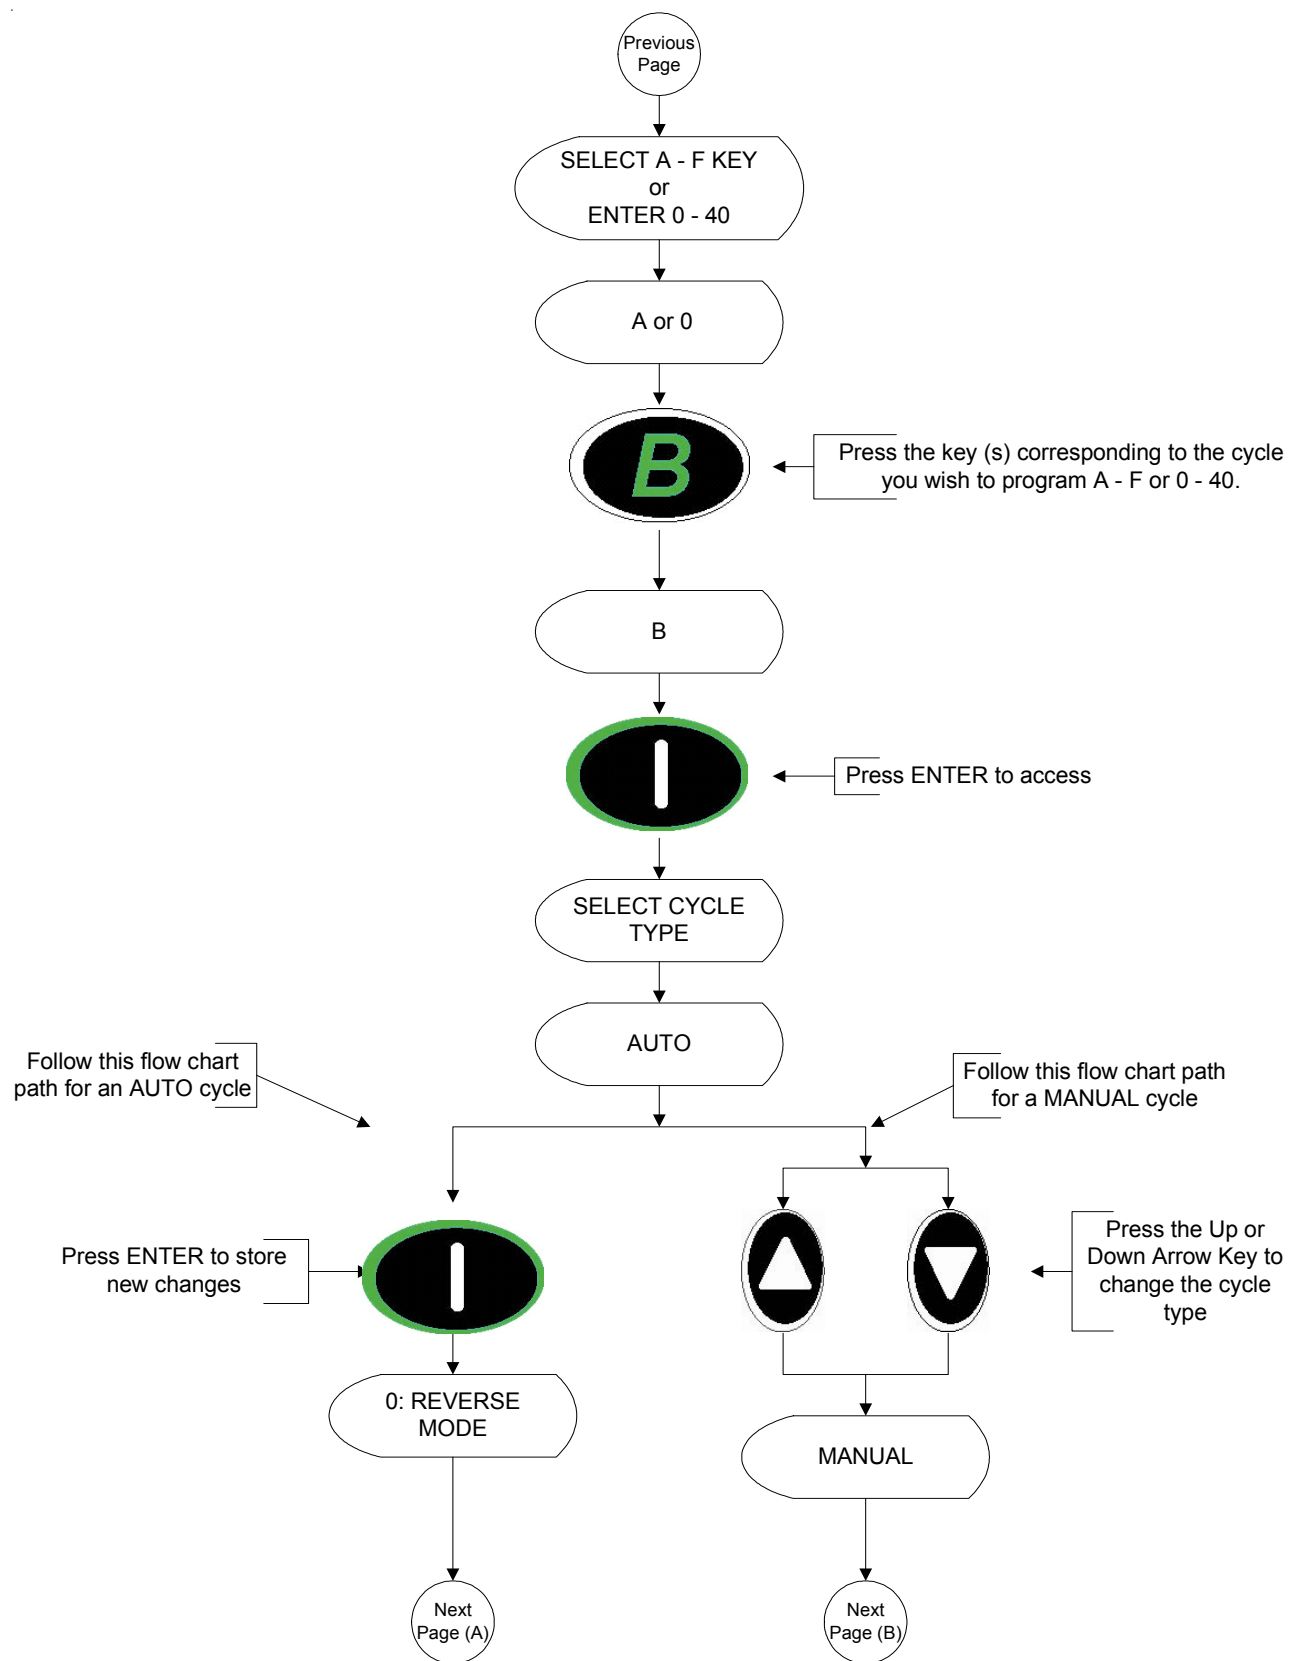


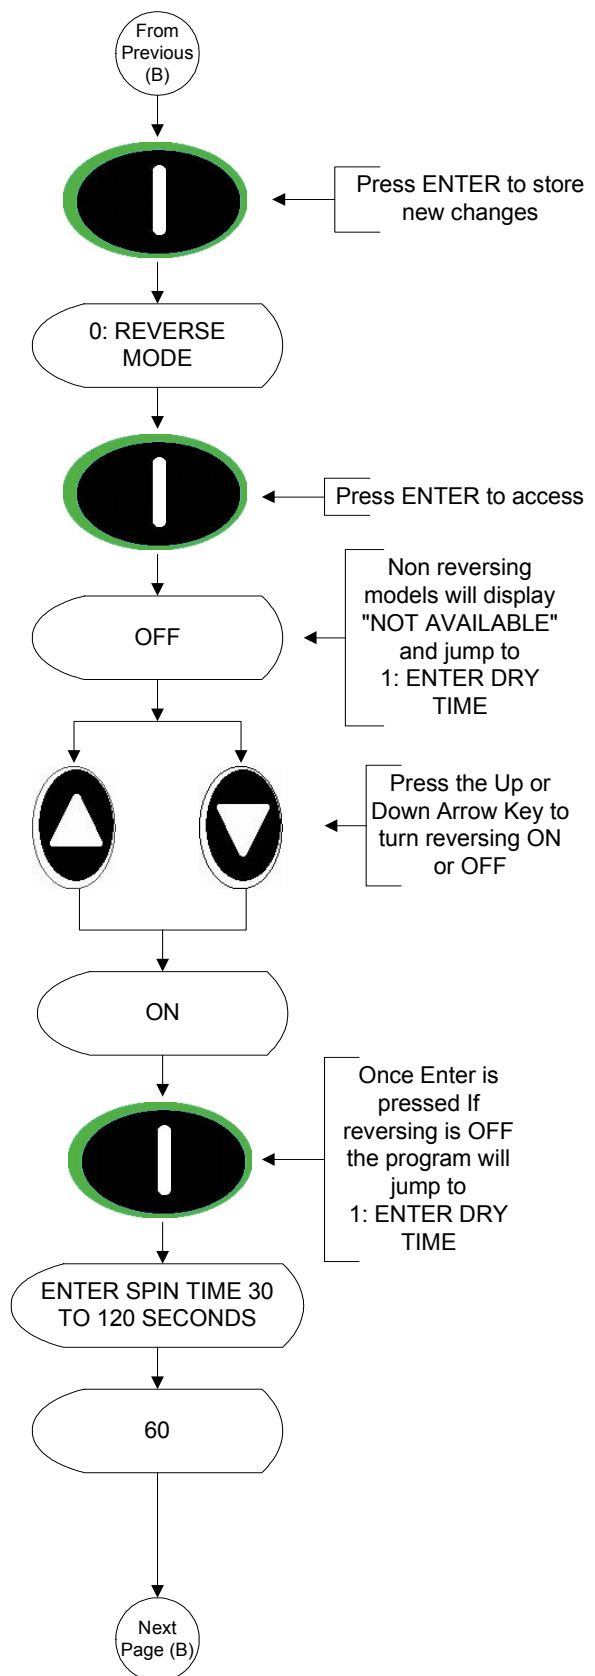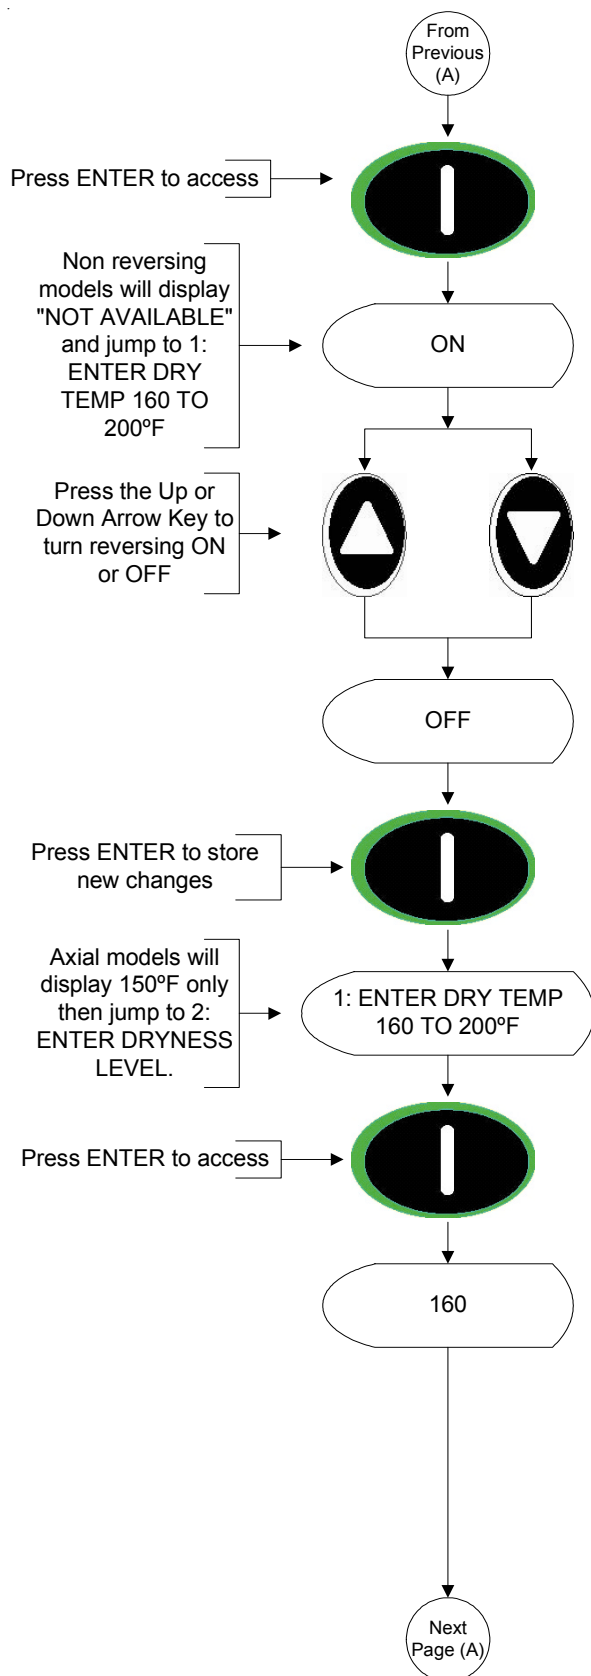


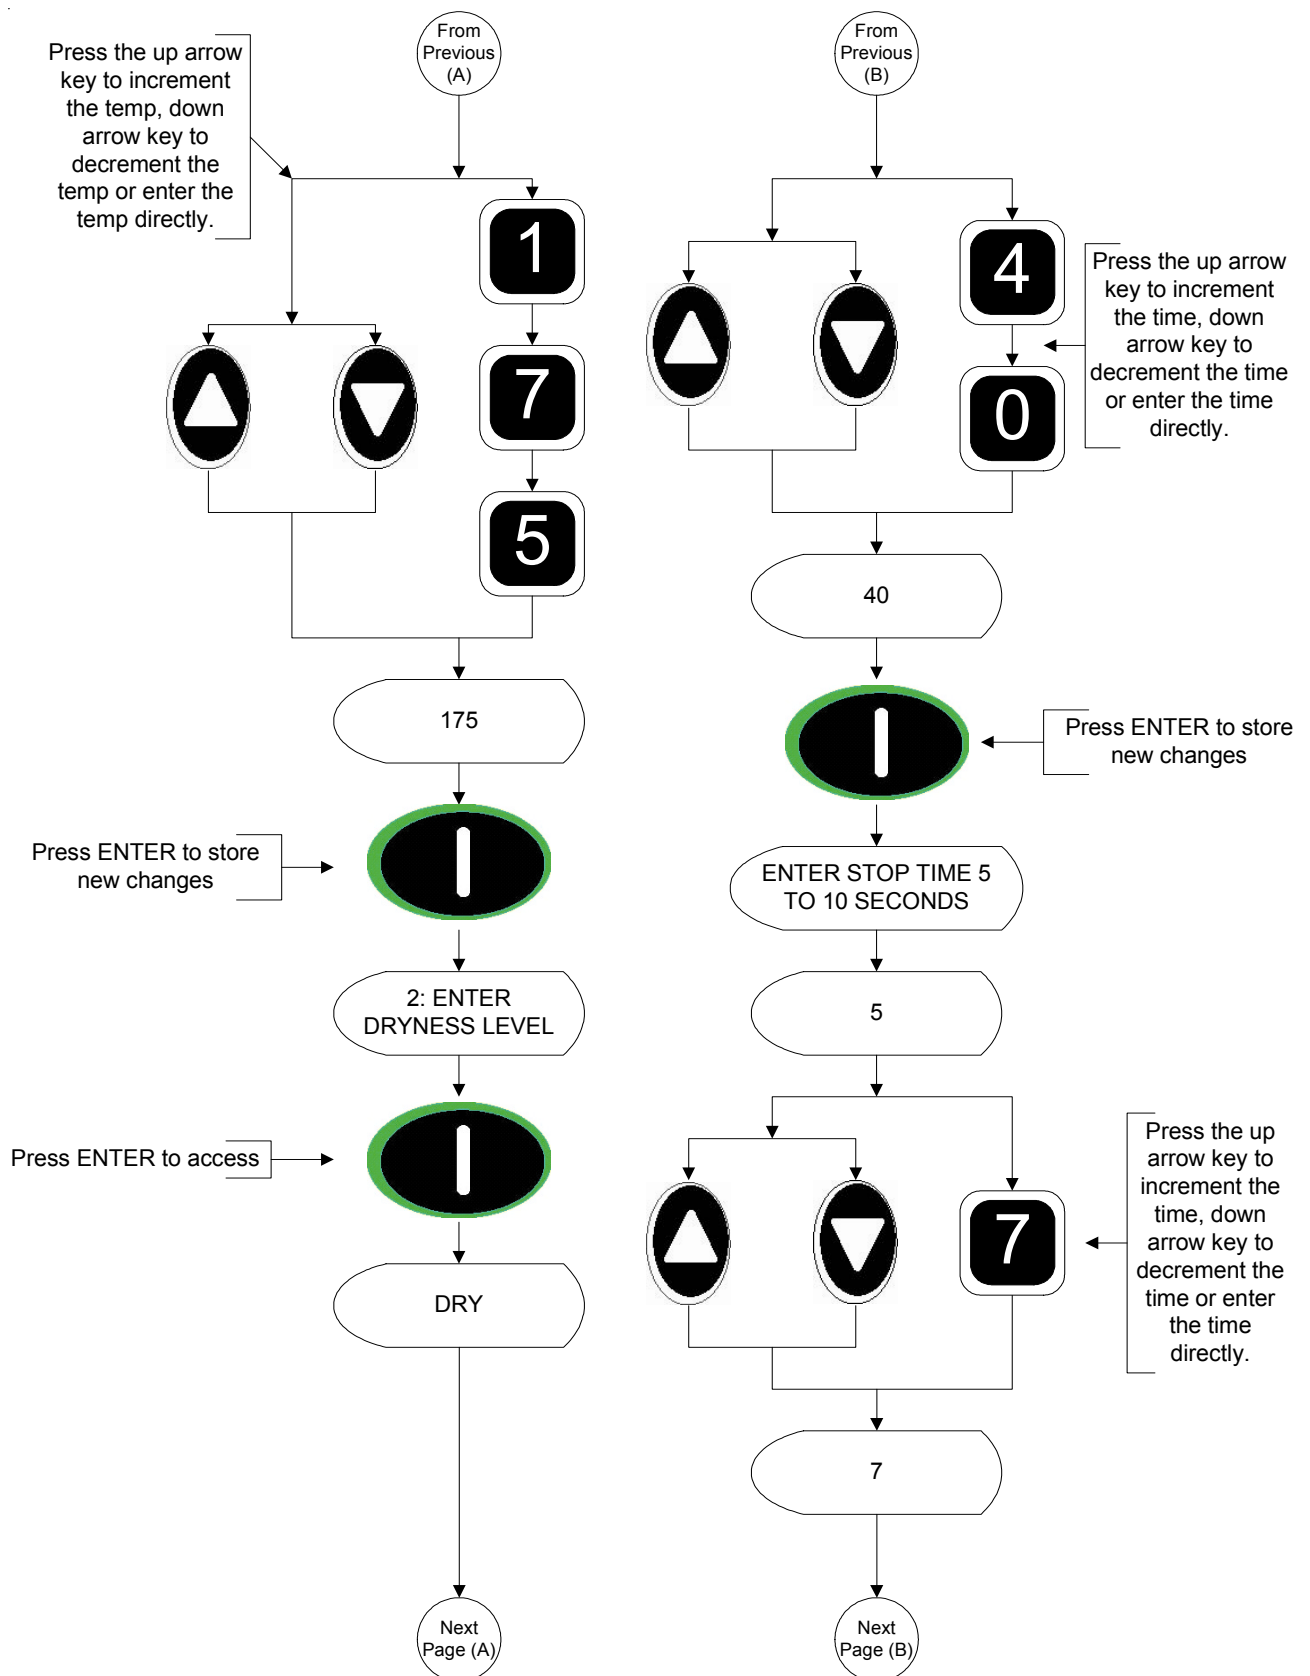

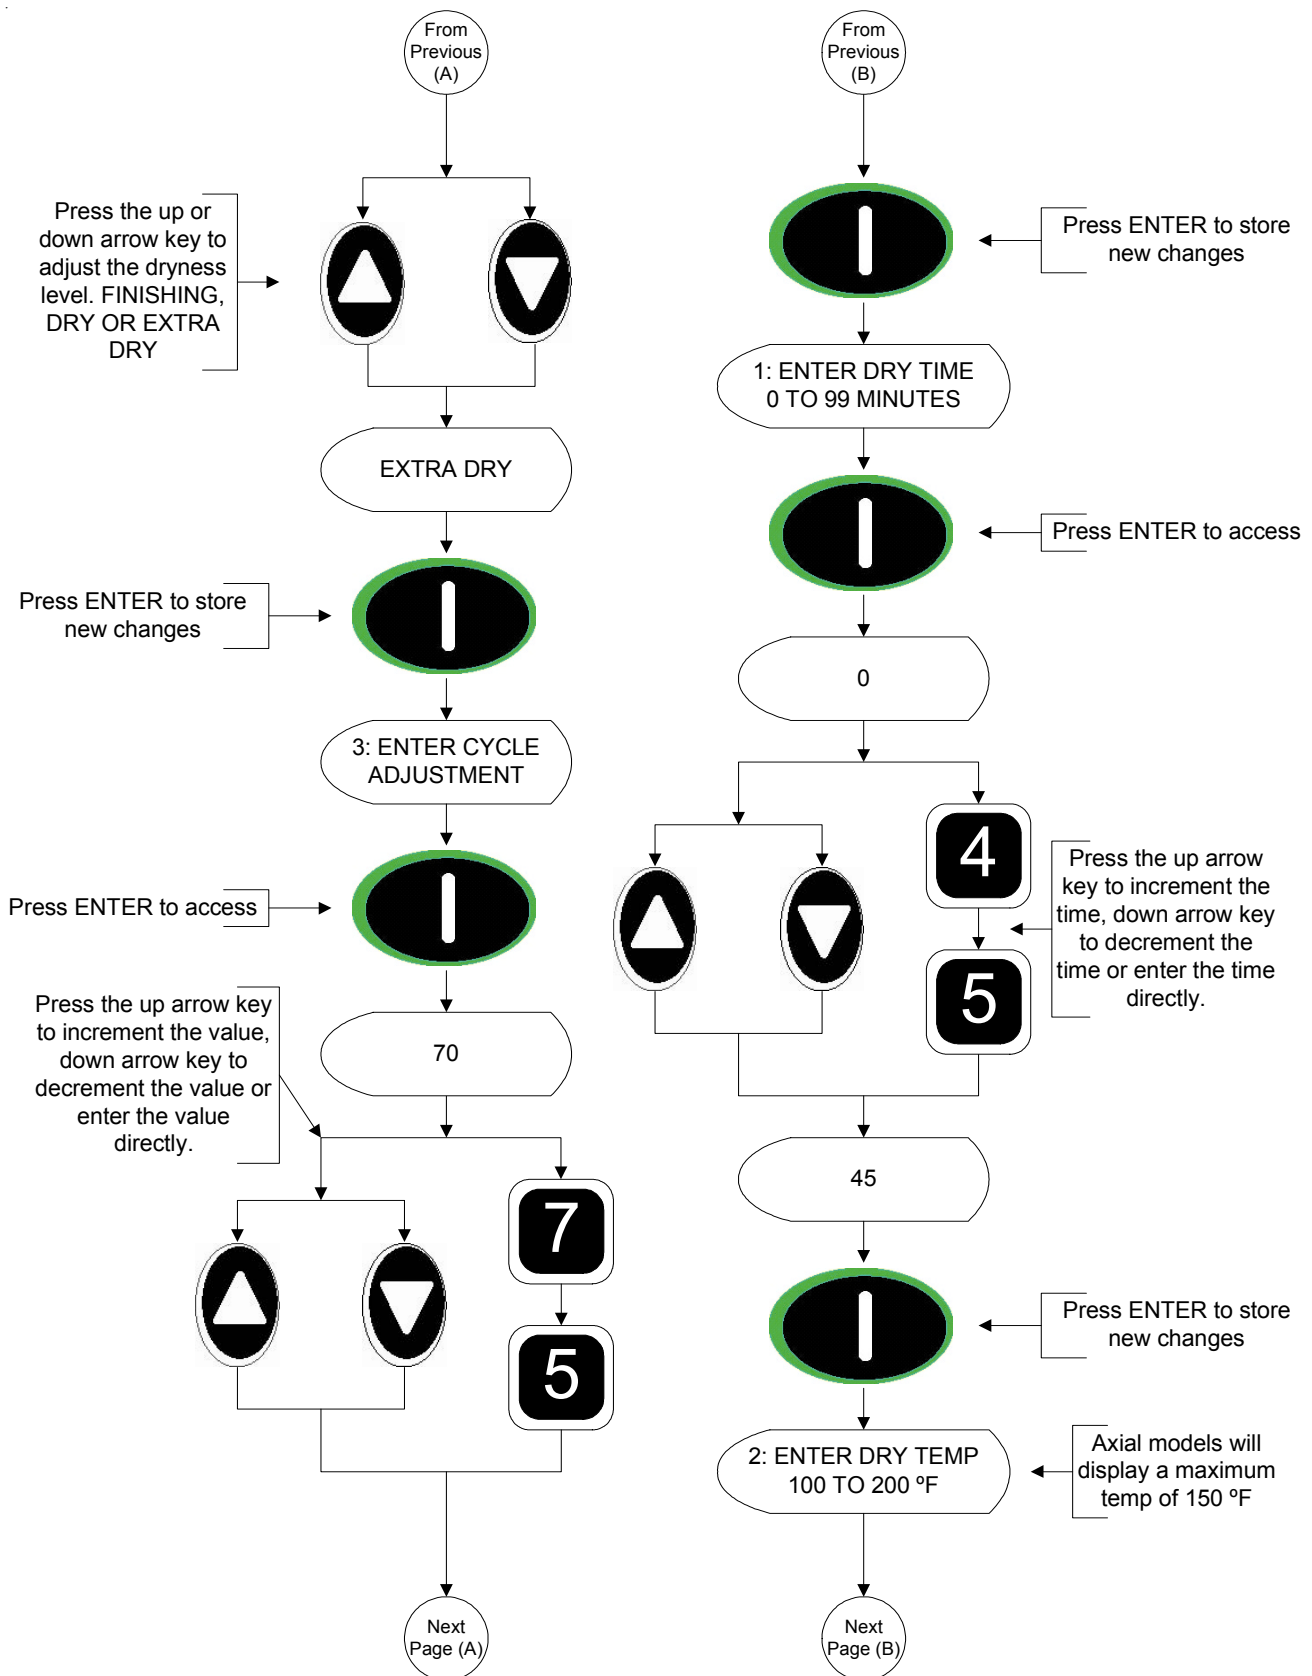


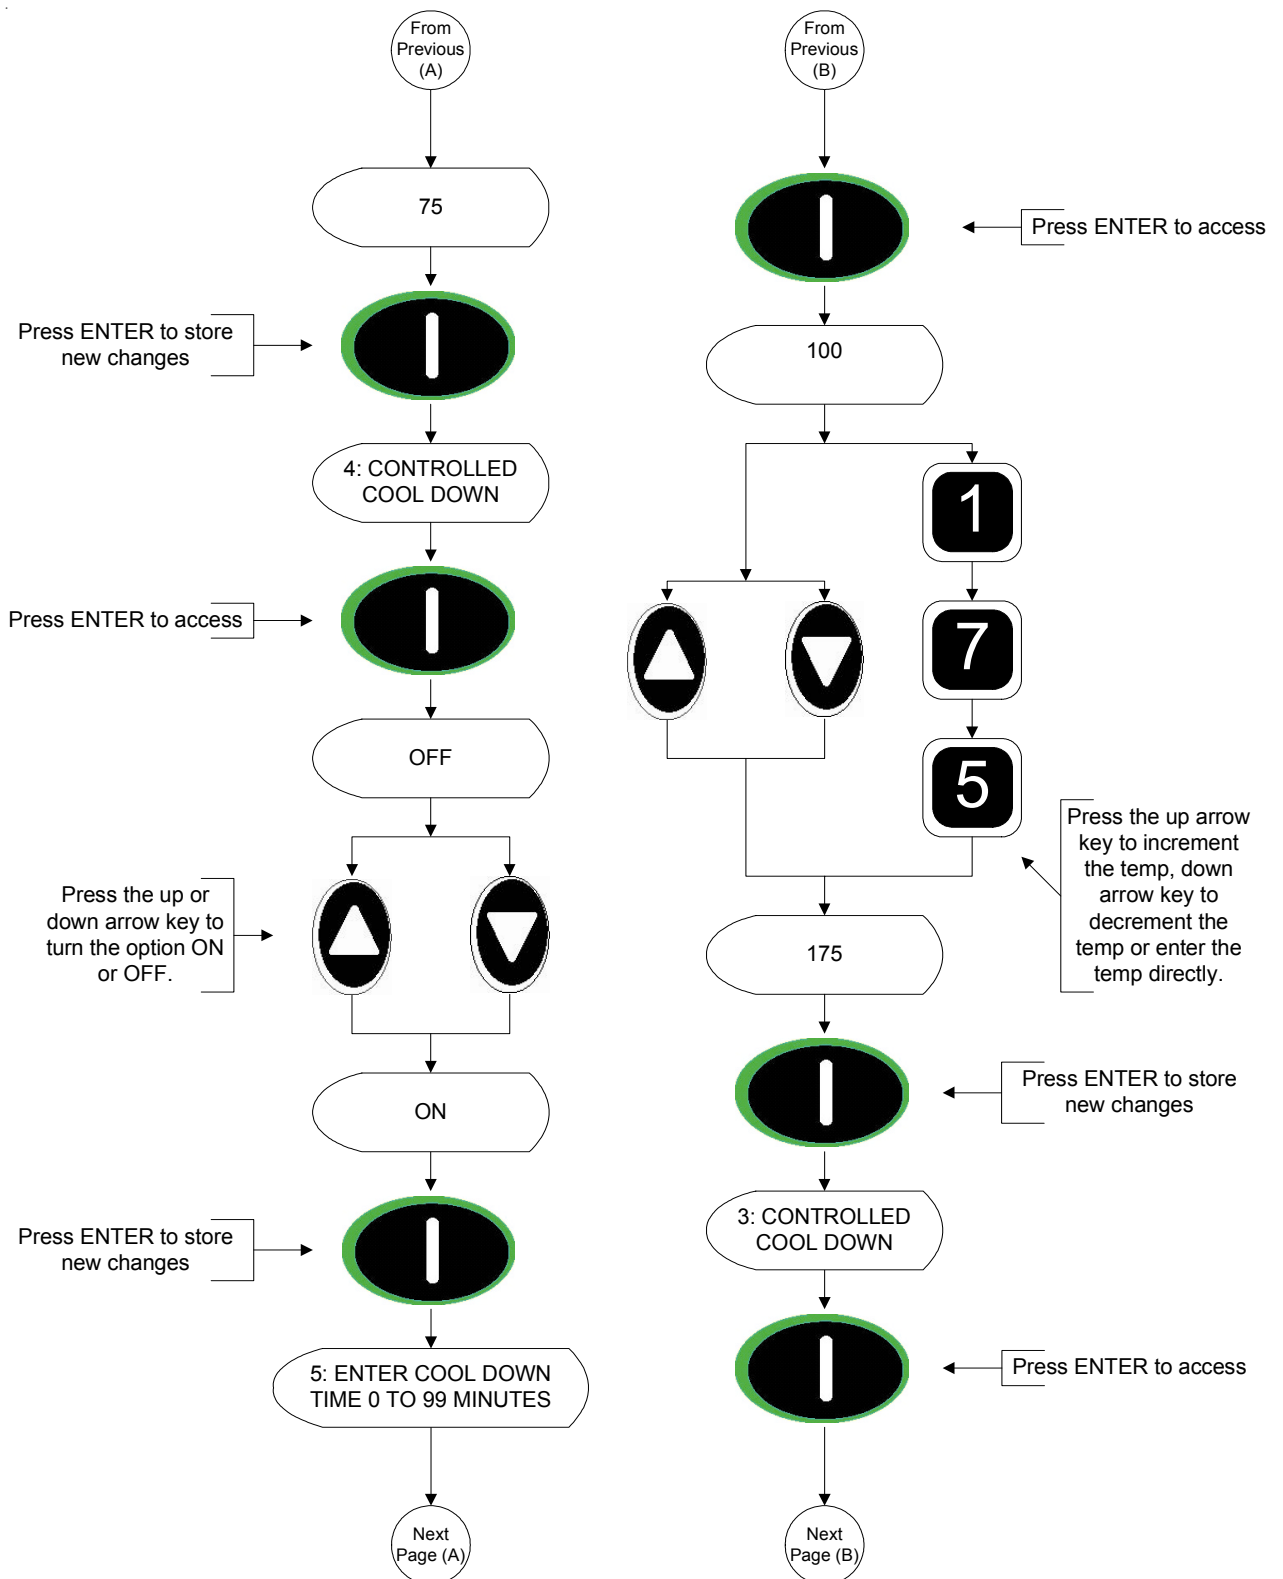


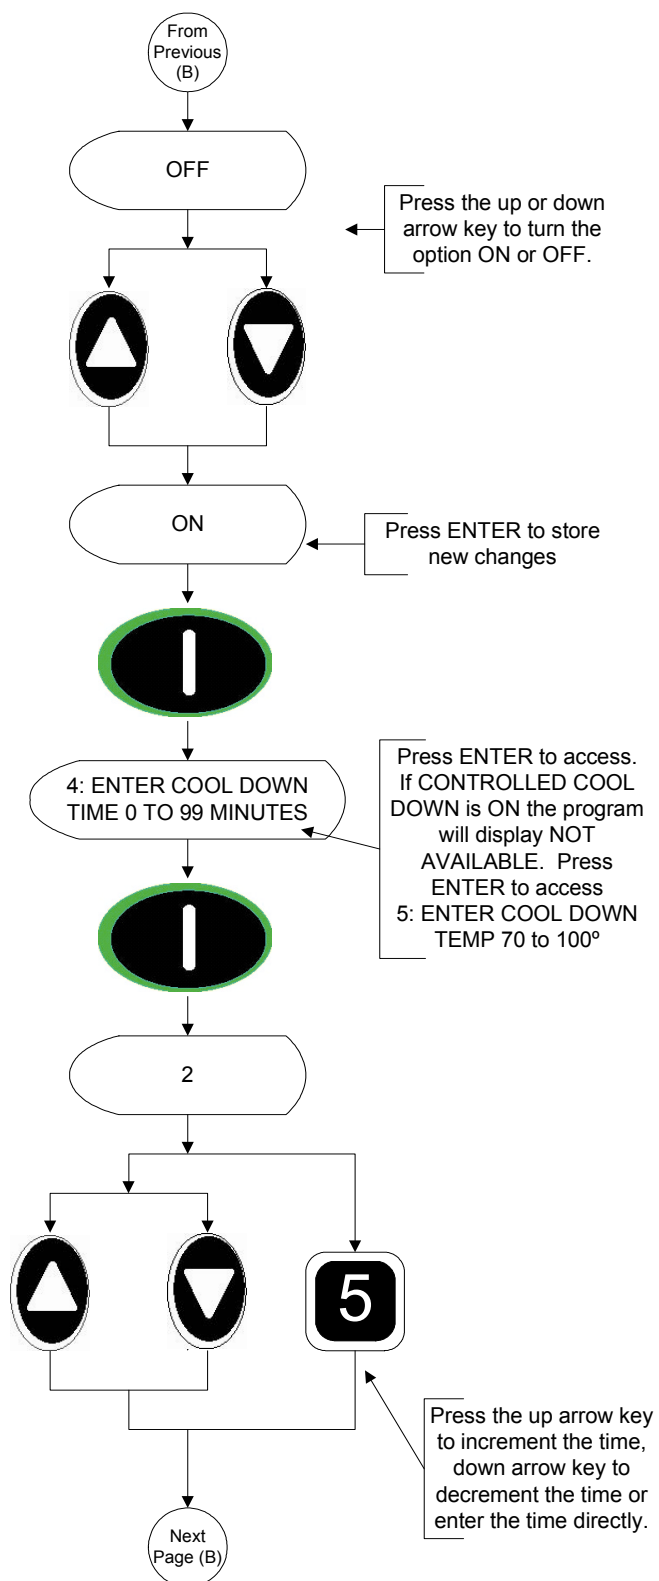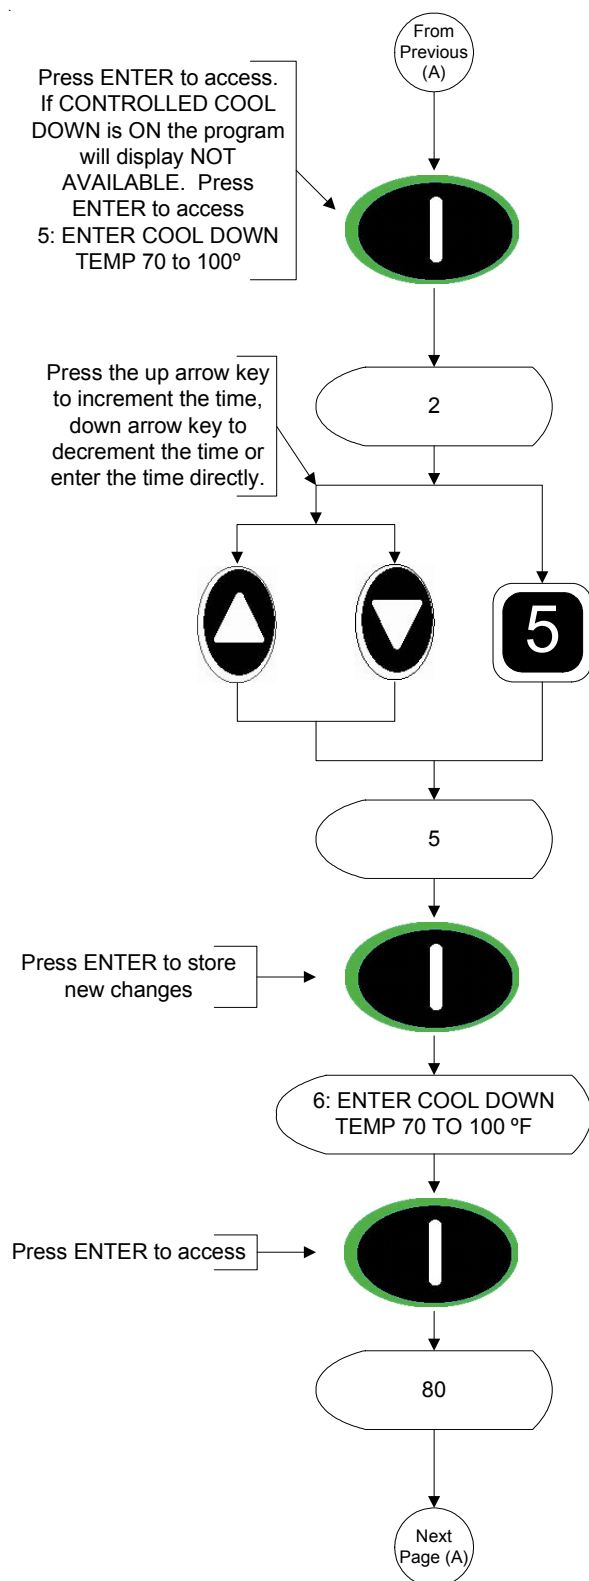


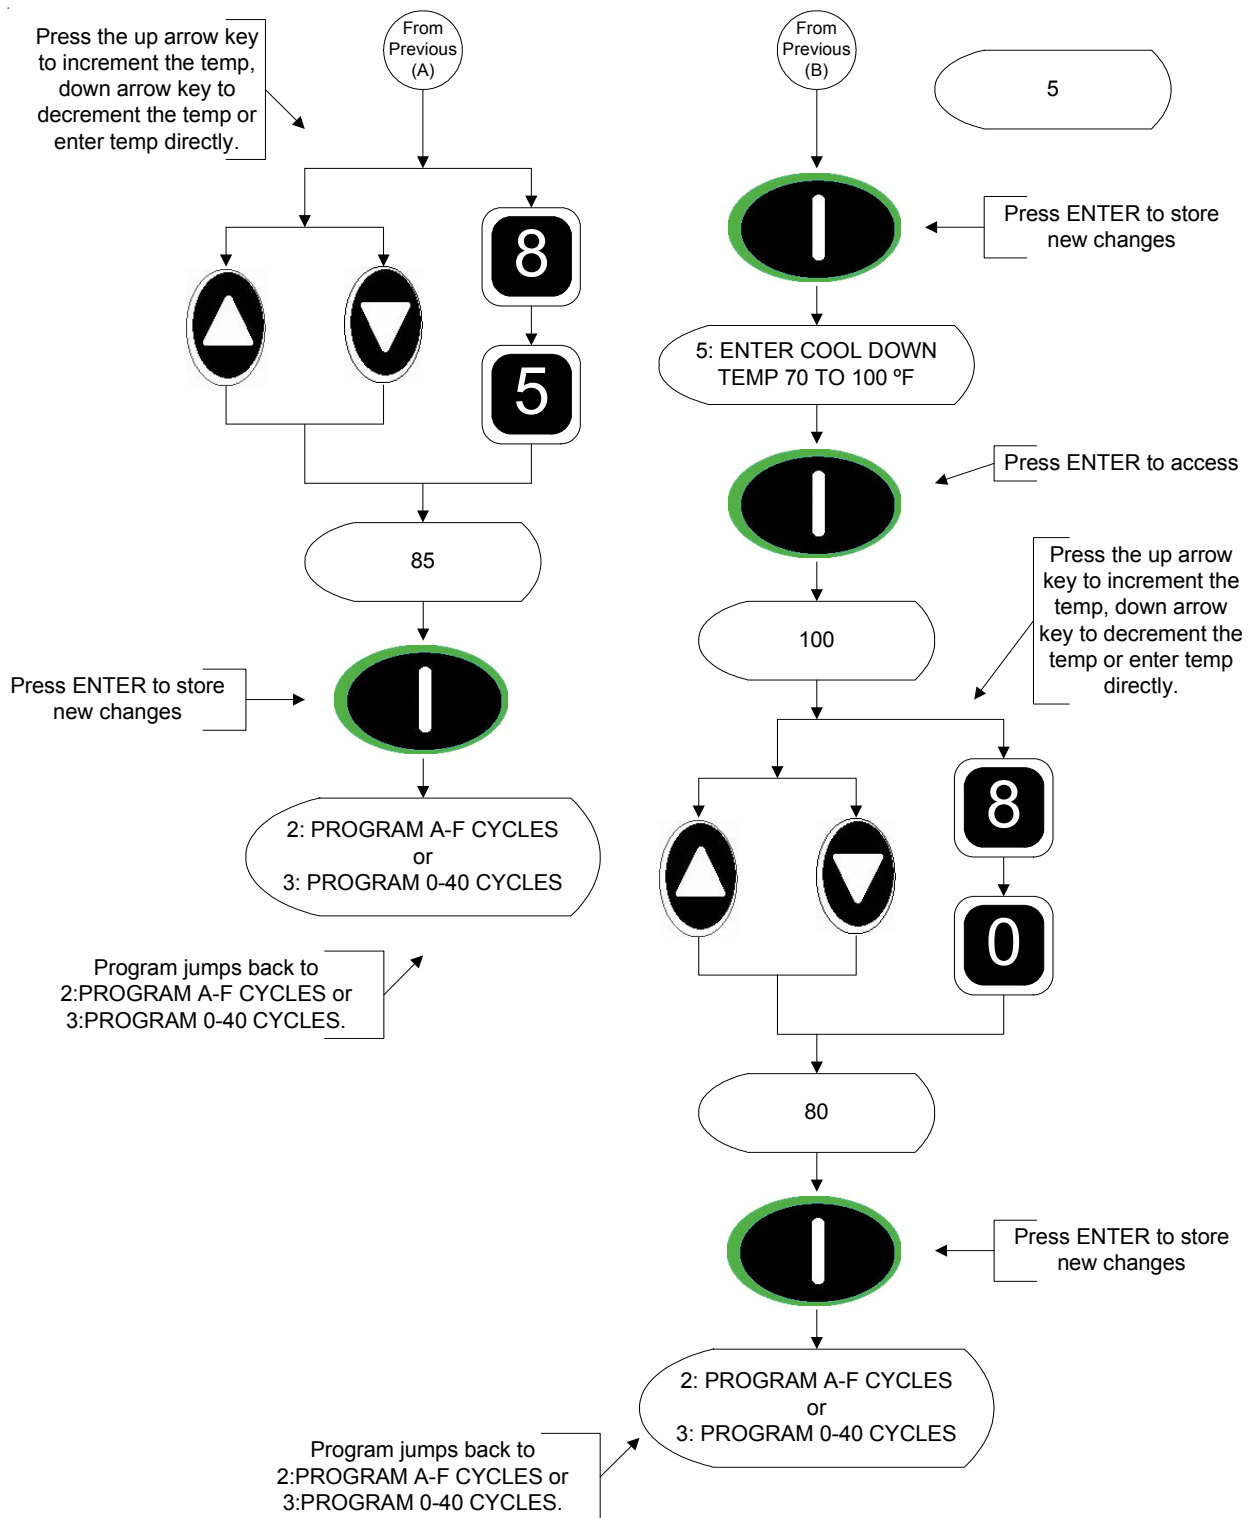

Restoring Factory Default Settings

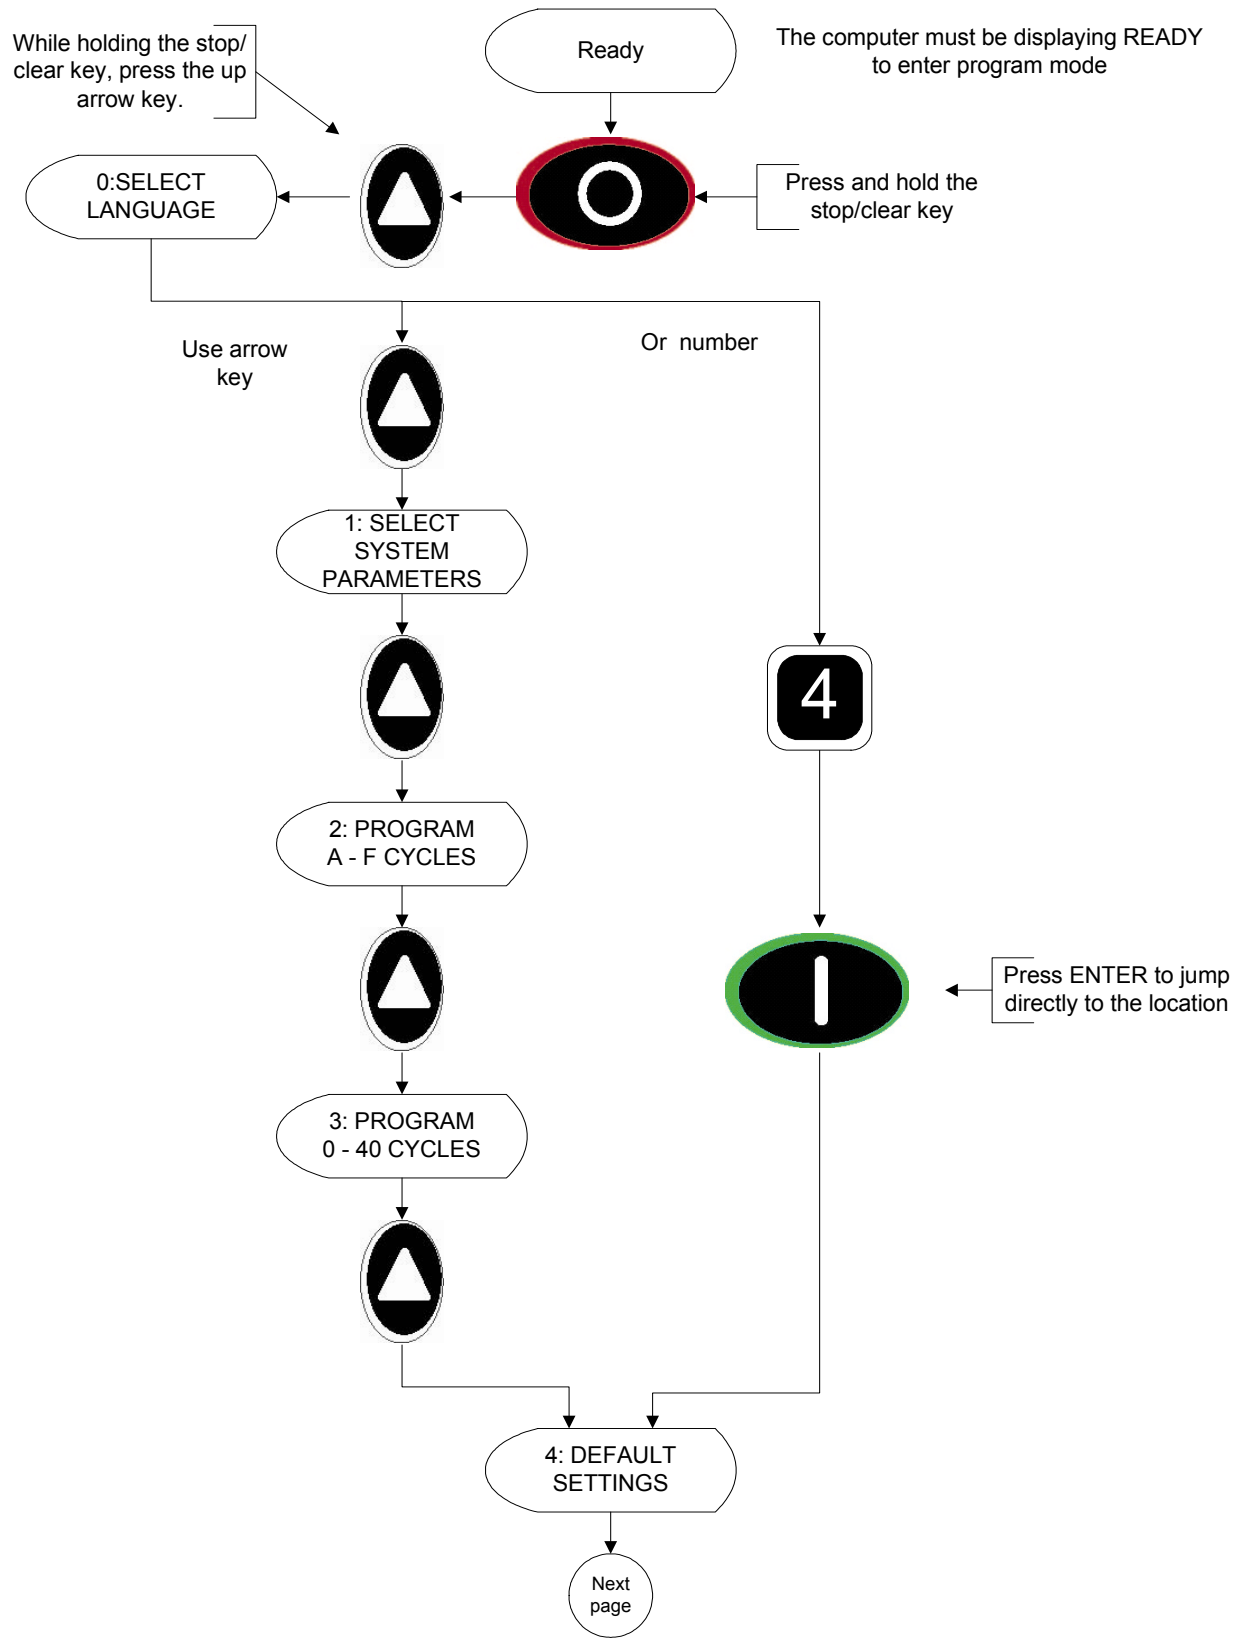

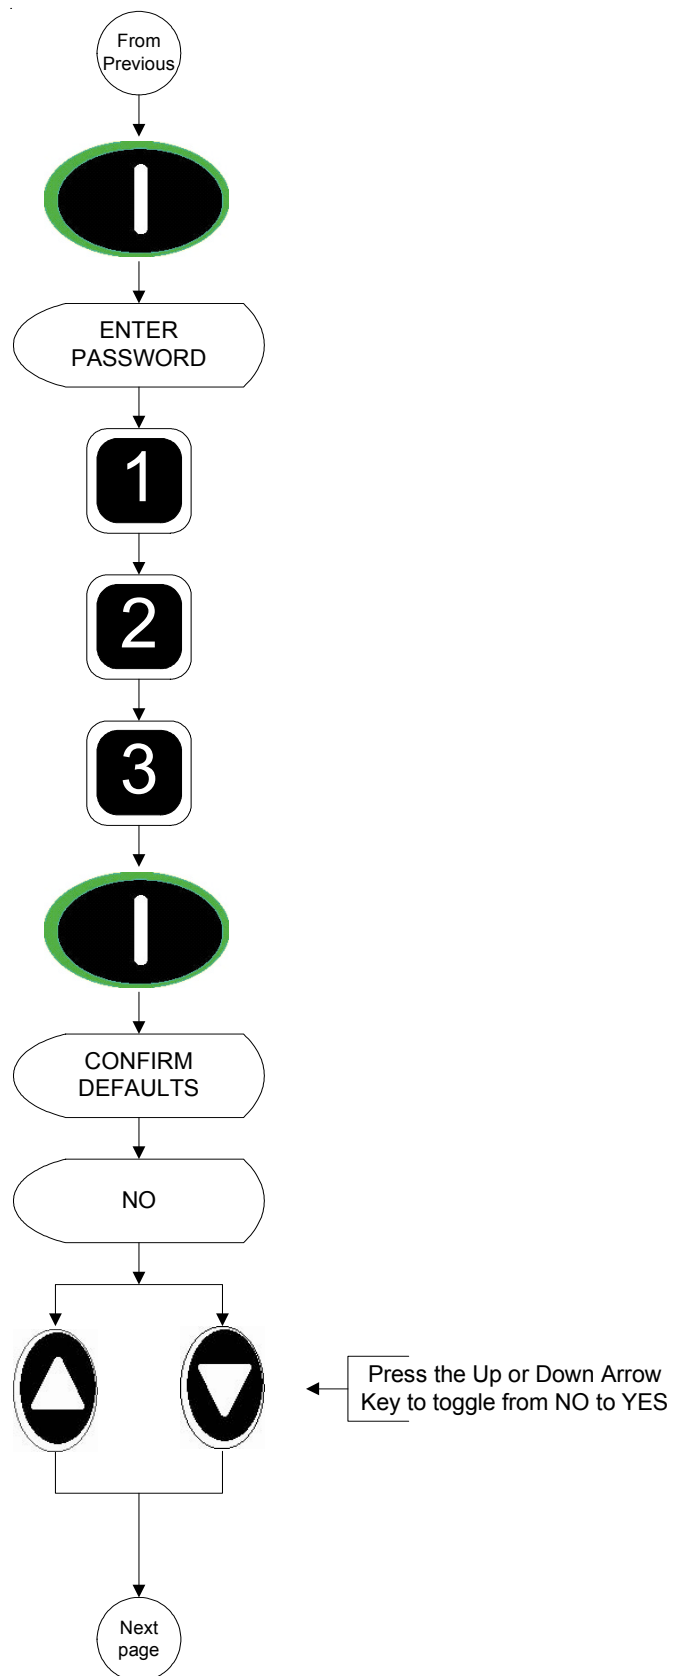

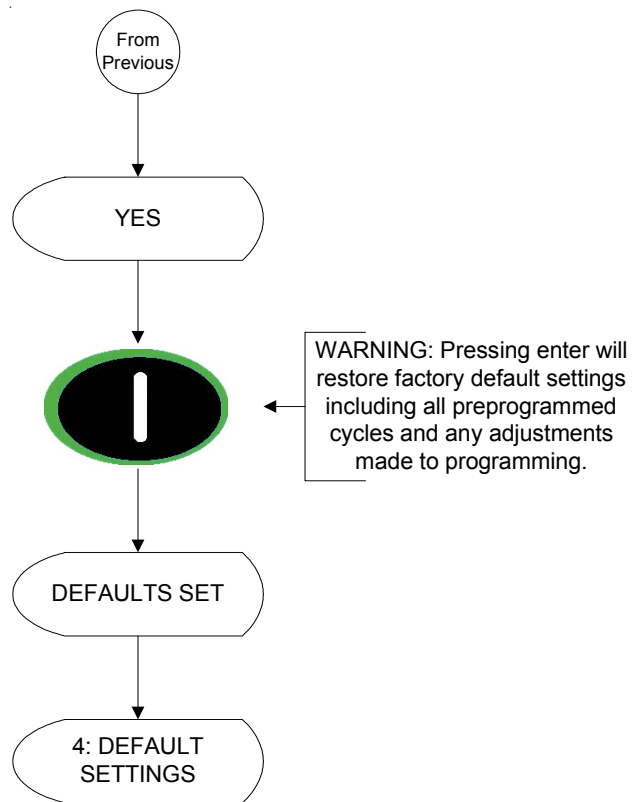



SECTION VII

FACTORY PRESET PARAMETERS (PROGRAMS)

NOTE: To enter program mode press and hold the stop  and press the  up arrow.

A. CYCLE “A-F” PARAMETERS (PROGRAMS) PRESET BY THE FACTORY

CYCLE A:

SELECT CYCLE TYPE = AUTO, 0:REVERSE MODE = ON, 1:ENTER DRY TEMP = 180°F, 2:ENTER DRYNESS LEVEL = EXTRA DRY, 3:ENTER CYCLE ADJUSTMENT VALUE = 70, 4:CONTROLLED COOL DOWN = OFF, 5:ENTER COOL DOWN TIME = 6 MINUTES, 5:ENTER COOL DOWN TEMP = 80°F

CYCLE B:

SELECT CYCLE TYPE = AUTO, 0:REVERSE MODE = ON, 1:ENTER DRY TEMP = 180°F, 2:ENTER DRYNESS LEVEL = DRY, 3:ENTER CYCLE ADJUSTMENT VALUE = 70, 4:CONTROLLED COOL DOWN = OFF, 5:ENTER COOL DOWN TIME = 6 MINUTES, 5:ENTER COOL DOWN TEMP = 80°F

CYCLE C:

SELECT CYCLE TYPE = AUTO, 0:REVERSE MODE = ON, 1:ENTER DRY TEMP = 160°F, 2:ENTER DRYNESS LEVEL = DRY, 3:ENTER CYCLE ADJUSTMENT VALUE = 70, 4:CONTROLLED COOL DOWN = OFF, 5:ENTER COOL DOWN TIME = 4 MINUTES, 5:ENTER COOL DOWN TEMP = 80°F

CYCLE D:

SELECT CYCLE TYPE = MANUAL, 0:REVERSE MODE = ON, ENTER SPIN TIME = 60 SECONDS, ENTER STOP TIME = 5 SECONDS, 1:ENTER DRY TIME = 40 MINUTES, 2:ENTER DRY TEMP = 190°F, 3:CONTROLLED COOL DOWN = OFF, 4:ENTER COOL DOWN TIME = 6 MINUTES, 5:ENTER COOL DOWN TEMP = 80°F

CYCLE E:

SELECT CYCLE TYPE = MANUAL, 0:REVERSE MODE = ON, ENTER SPIN TIME = 60 SECONDS, ENTER STOP TIME = 5 SECONDS, 1:ENTER DRY TIME = 30 MINUTES, 2:ENTER DRY TEMP = 180°F, 3:CONTROLLED COOL DOWN = OFF, 4:ENTER COOL DOWN TIME = 4 MINUTES, 5:ENTER COOL DOWN TEMP = 80°F

CYCLE F:

SELECT CYCLE TYPE = MANUAL, 0:REVERSE MODE = ON, ENTER SPIN TIME = 60 SECONDS, ENTER STOP TIME = 5 SECONDS, 1:ENTER DRY TIME = 10 MINUTES, 2:ENTER DRY TEMP = 170°F, 3:CONTROLLED COOL DOWN = OFF, 4:ENTER COOL DOWN TIME = 2 MINUTES, 5:ENTER COOL DOWN TEMP = 80°F

NOTE: When in Axial Mode, temperature for ALL cycles is limited to 150° F (66° C) ONLY.

B. CYCLE “0-40” PARAMETERS (PROGRAMS) PRESET BY THE FACTORY

CYCLE “0-40”:

Manual (Timed) Mode, Reverse, Dry Time = 0, Dry Temp = 100, Cool Down Time = 4 Minutes, Cool Down Temp = 100, Spin Time = 60, Stop Time = 7.

SECTION VIII

PHASE 7.5 NON-COIN PROGRAMMING LIMITS

A. PREPROGRAMMED CYCLES

1. Automatic Drying Cycle (Patent No. 4,827,627)

- a. Drying Temperature from 160° F to 200° F (71° C to 93° C) in one-degree increments.
- b. Cycle Adjustment Value from 0-99 in increments of one (1).
- c. Cool Down Time from 0 to 99 minutes in 1 minute increments.
- d. Cool Down Temperature from 70° F to 100° F (21° C to 38° C) in one-degree increments.

2. Timed (Manual) Drying Cycle

- a. Drying Temperature from 100° F to 200° F (38° C to 93° C) in one-degree increments.
- b. Drying Time from 0 to 99 minutes in 1 minute increments.
- c. Cool Down Time from 0 to 99 minutes in 1 minute increments for preprogrammed cycle.
- d. Cool Down Temperature from 70° F to 100° F (21° C to 38° C) in one-degree increments.

e. Reversing Models

- 1) Automatic Drying Cycle (**Patent No. 4,827,627**) Spin Time and Stop Time is not programmable. (Refer to **Fixed Parameters** on next page).

2) Manual Timed Cycle

- a) Spin Time (“**SPIN TIME**”) from 30-seconds to 120-seconds in 1-second increments.
- b) Stop Time (“**STOP TIME**”) from 5-seconds to 10-seconds in 1-second increments.

B. SYSTEM PARAMETERS (PROGRAM LOCATIONS)

1. Cycle Adjustment Value from 0 to 99 in increments of one (1).
2. Manually Loaded Auto Cycle (“COOL DOWN TIME”) from 0 to 99 minutes in 1 minute increments.
3. Audio Alert 0-10.
4. Lint Cleaning Frequency 1 to 10 hours.

C. FIXED PARAMETERS

1. Spin Time (“**SPIN TIME**”) is fixed at 2 minutes in forward and 2 minutes in reverse.
2. Stop Time (“**STOP TIME**”) is fixed at 5-seconds (in the Auto Mode) and is not adjustable.

SECTION IX

PHASE 7.5 AUTO CYCLE (PATENT NO. 4,827,627)

CYCLE ADJUSTMENT VALUES

GAS	
MODEL	Adjustment Value
AD\CG\DSL-20	69
ADG-30	68
ADG-50	70
ADG-60	65
ADG-75	70
ADG-78	70
ADG-81	70
ADG-115D	68
ADG-120ES	73
ADG-170SE	68
MLG-55	65
MLG-75	70
MLG-78	70
MLG-82	70
MLG-96	70
MLG-122	70
MLG-130	73
MLG-170/175	68
MLG-190	70
EURO-14	68
EURO-24	70
EURO-35	70

ELECTRIC	
MODEL	Adjustment Value
AD\CG\DSL-20	69
ADE-30	68
ADE-50	70
ADE-60	65
ADE-75	70
ADE-115	60
ADE-120ES	78
MLE-55	65
MLE-75	70
MLE-120ES	78
EURO-14	68
EURO-24	70
EURO-35	70

STEAM	
MODEL	Adjustment Value
ADS-30	68
ADS-60	65
ADS-75	70
ADS-115	68
ADS-120ES	65
ADS-170ES	70
MLS-55	65
MLS-75	70
EURO-14	68
EURO-24	70
EURO-35	70

IMPORTANT: If your particular model/dryer dryness levels **are not** shown in the above charts, contact the **ADC Service Department** for the appropriate factors for your particular dryer. When doing so, please have the dryer **model** and **serial numbers** available.

IMPORTANT: The adjustment values have been preprogrammed by the factory, but can be changed in the field. If the Phase 7.5 non-coin microprocessor controller (computer) should fail and is being replaced. **THE REPLACEMENT PHASE 7.5 NON-COIN MICROPROCESSOR CONTROLLER (COMPUTER) MUST BE REPROGRAMMED FOR THE SPECIFIC MODEL SHOWN IN THE ADJUSTMENT VALUE PARAMETERS CHARTS ABOVE. THE ADJUSTMENT VALUE LABEL IS LOCATED ON THE CONTROL PANEL, BEHIND THE PHASE 7.5 KEYBOARD (TOUCH PAD) DISPLAY DOOR.**

NOTE: When fine-tuning the Auto Cycle for certain loads, if the material comes out wet, ***decrease*** the adjustment value, if the material comes out too dry, ***increase*** the adjustment value.

SECTION X

PHASE 7.5 NON-COIN SYSTEM DIAGNOSTICS

IMPORTANT: YOU MUST DISCONNECT AND LOCKOUT THE ELECTRIC SUPPLY AND THE GAS SUPPLY OR THE STEAM SUPPLY BEFORE ANY COVERS OR GUARDS ARE REMOVED FROM THE MACHINE TO ALLOW ACCESS FOR CLEANING, ADJUSTING, INSTALLATION, OR TESTING OF ANY EQUIPMENT PER OSHA (Occupational Safety and Health Administration) STANDARDS.

ALL major circuits, including door, microprocessor temperature sensor, heat and motor circuits are monitored. The Phase 7.5 non-coin microprocessor controller (computer) will inform the user, via the light emitting diode (L.E.D.) display of certain failure messages, along with L.E.D. indicators on the Input/Output (I/O) board on the back panel of the front right control door.

A. DIAGNOSTIC (L.E.D. DISPLAY) FAULT MESSAGES

MAIN DOOR OPENED – A main door is open when it **should be** closed.

EXHAUST HIGH TEMP FAULT – Indicates the temperature in the basket (tumbler) is above 220° F (104° C).

LINT ACCESS OPEN – Indicates the lint drawer is open and needs to be closed.

EXHAUST HIGH LIMIT FAULT – Indicates the temperature disk in the exhaust has opened.

SAIL SWITCH CLOSED FAULT – Sail switch is closed and **should be** opened.

SAIL SWITCH OPEN FAULT – Sail switch is open and **should be** closed.

BURNER HIGH LIMIT FAULT – Indicates the temperature disk in the burner has opened.

BURNER CONTROL FAULT – No signal to gas valve from Direct Spark Ignition (DSI) module during trial for ignition time.

IGNITION FAULT – Gas valve did not remain open after trial for ignition. Indicates that no flame was detected.

FLAME FAULT – Indicates flame was detected during trial for ignition but failed sometime after. This condition must reoccur for five (5) retries before fault occurs.

ROTATION FAULT – Indicates the basket (tumbler) is not rotating.

EXHAUST PROBE FAULT – Indicates the exhaust temperature probe is open or shorted.

LOW VOLTAGE FAULT – Indicates power has dropped below the operating values and will shutdown.

AXIAL PROBE FAULT- Indicates the axial temperature probe is open or shorted.

BURNER PURGE FAULT – The gas valve signal is present during the prepurge time.

MODEL ERROR, ENTER CORRECT MODEL – The wrong model was selected for the dryer.

EE PROM FAULT ### – Error in memory location. The ### indicates the location of the fault.

S.A.F.E. SYSTEM ACTIVATED – Indicates that the control has detected a fire and is currently extinguishing the flame.

S.A.F.E. SYSTEM WAS ACTIVATED – Indicates that the control detected a fire and has extinguished the flame.

B. S.A.F.E. SYSTEM DIAGNOSTIC CONDITIONS

In the event that the Phase 7.5 non-coin microprocessor controller (computer) detects a fault in the Sensor Activated Fire Extinguishing (S.A.F.E.) system, the control will display the message “S.A.F.E. SYSTEM DISABLED ... READY.” To find out the reason for the S.A.F.E. system disabling, press and hold the red “STOP/CLEAR” and green “START” keys. This will cause the control to display one (1) of the following diagnostic messages.

OPEN THERMISTOR PROBE – This message indicates that the S.A.F.E. system thermistor probe is either not connected or is damaged. If this condition is detected, the Phase 7.5 non-coin control will immediately enter S.A.F.E. SYSTEM DISABLED mode.

SHORTED THERMISTOR PROBE – This message indicates that the S.A.F.E. system thermistor probe is damaged or the wiring is shorted. If this condition is detected, the Phase 7.5 non-coin control will immediately enter S.A.F.E. SYSTEM DISABLED mode.

DISCONNECTED WATER VALVE – This indicates that the water valve is open or that it is not connected to the control. If this condition is detected, the Phase 7.5 non-coin control will continue to monitor the condition for a period of 5 minutes before entering S.A.F.E. SYSTEM DISABLED mode. Once the condition is corrected, the control will continue to monitor the condition for 1 minute before exiting S.A.F.E. SYSTEM DISABLED mode.

SHORTED WATER VALVE – This indicates the water valve is shorted or the wiring to the valve is shorted. If this condition is detected, the Phase 7.5 non-coin control will continue to monitor the condition for a period of 5 minutes before entering S.A.F.E. SYSTEM DISABLED mode. Once the condition is corrected, the control will continue to monitor the condition for 1 minute before exiting S.A.F.E. SYSTEM DISABLED mode.

WATER NOT CONNECTED – This indicates that there is no water pressure at the water valve. This will occur if water is not connected to the dryer or if there is low water pressure in the water line coming to the dryer. This could also be a defective pressure switch or wiring to the pressure switch. If this condition is detected, the Phase 7.5 non-coin control will continue to monitor the condition for a period of 5 minutes before entering S.A.F.E. SYSTEM DISABLED mode. Once the condition is corrected, the control will continue to monitor the condition for 1 minute before exiting S.A.F.E. SYSTEM DISABLED mode.

C. INPUT/OUTPUT (I/O) BOARD LIGHT EMITTING DIODE (L.E.D.) INDICATORS

1. INPUTS


1. ESTOP – (RED L.E.D.) This L.E.D. will indicate the status of the E-STOP. If the E-STOP has been pressed, then the L.E.D. is ON.
2. GAS_V – (RED L.E.D.) This L.E.D. will indicate the status of the gas valve. If the gas valve is open (ON), then the L.E.D. is ON.
3. BRHL – (RED L.E.D.) This L.E.D. will indicate the status of the burner high limit disk. If the disk is closed (temperature below 330° F [166° C]), then the L.E.D. is ON.
4. SAIL – (RED L.E.D.) This L.E.D. will indicate the status of the sail switch. If the switch is closed, then the L.E.D. is ON.
5. EXHL – (RED L.E.D.) This L.E.D. will indicate the status of the exhaust high limit disk. If the disk is closed (temperature below 225° F [107° C]), then the L.E.D. is ON.
6. MAIN – (RED L.E.D.) This L.E.D. will indicate the status of the main door. If the door is closed, then the L.E.D. is ON.
7. LINT – (RED L.E.D.) This L.E.D. will indicate the status of the lint drawer. If the drawer is closed, then the L.E.D. is ON.
8. FUSE – (RED L.E.D.) This L.E.D. will indicate the status of the control voltage. If the POWER ON button is pressed (green button light is on), then the L.E.D. is ON.
9. H₂O – (RED L.E.D.) This L.E.D. will indicate the status of water pressure switch on the Sensor Activated Fire Extinguishing (S.A.F.E.) system water line. If water pressure is present, then the L.E.D. is ON.

2. OUTPUTS

10. F.S.S. – (GREEN L.E.D.) This L.E.D. will indicate the F.S.S./S.A.F.E. system output is activated.
11. HEAT – (GREEN L.E.D.) This L.E.D. will indicate the status of the heat output. If the request to turn on the heater is made, then the L.E.D. is ON.
12. REV – (GREEN L.E.D.) This L.E.D. will indicate the status of the basket (tumbler) reverse direction output. If the request to tumble the drum in the reverse direction is made, then the L.E.D. is ON.
13. FWD – (GREEN L.E.D.) This L.E.D. will indicate the status of the basket (tumbler) forward direction output. If the request to tumble the drum in the forward direction is made, then the L.E.D. is ON.
14. FAN – (GREEN L.E.D.) This L.E.D. will indicate the status of the fan output. If the request to turn on the fan (blower) is made, then the L.E.D. is ON.

D. KEYBOARD (TOUCH PAD) LAYOUT


1. Dot Matrix Display
2. A-F Preprogrammed Cycles
3. Stop/Pause Button
4. Start Button
5. Increment Button
6. Decrement Button
7. One time Auto (Dryness level) and Manual (timed) Cycle

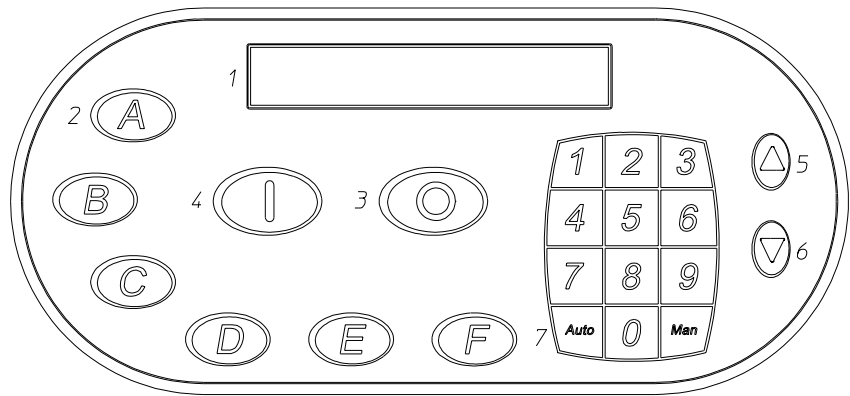

DC 7/7/03

MAN6779

NOTE: Fuse 1 (F1) is a self-resetting upon power cycle. If fuse 1 is opened, the display **will be** blank. Fuse 2 (F3) is for 24V control power rated at 5-amps. If fuse 2 blows it is a 24V control fault.

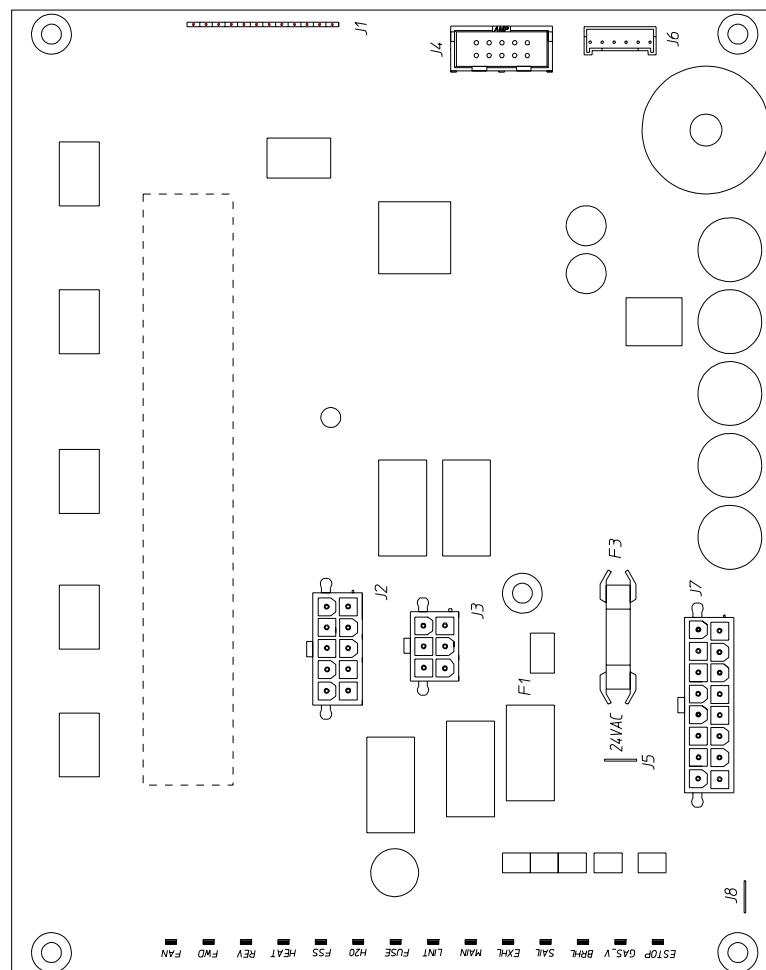

MAN6780

DC 7/8/03

SECTION XI

CUSTOMER CUSTOM PARAMETER SETTINGS

This section is set aside for customer use where customer or specific parameters/settings can be documented, as programmed by them for their specific dryer. It is suggested that any parameter changes or customer cycles be documented here for future reference.

CUSTOMER USE

LANGUAGE: _____

MODEL: _____

SYSTEM TEMP: _____

DRYNESS LEVEL: _____

LINT COUNT: _____

AUDIO ALERT: _____

SPIN TIME: _____

STOP TIME: _____

WRINKLE GUARD AUDIO ALERT: _____

1ST ON TIME: _____

OFF TIME: _____

2ND ON TIME: _____

OFF TIME: _____

3RD ON TIME: _____

OFF TIME: _____

4TH ON TIME: _____

OFF TIME: _____

5TH ON TIME: _____

OFF TIME: _____

PROGRAMMED CYCLE A-F:

Cycle: _____

Cycle Type: **AUTO**

Reverse Mode: _____ (Option)

Dry Temp: _____

Dry Level: _____

Cool Down Time: _____

Cool Down Temp: _____

Controlled Cool Down: _____

Cycle Type: **MANUAL**

Reverse Mode: _____ (Option)

Dry Time: _____

Dry Temp: _____

Cool Down Time: _____

Cool Down Temp: _____

Spin Time: _____

Stop Time: _____

Controlled Cool Down: _____

1ST ON TIME: _____

OFF TIME: _____

2ND ON TIME: _____

OFF TIME: _____

3RD ON TIME: _____

OFF TIME: _____

4TH ON TIME: _____

OFF TIME: _____

5TH ON TIME: _____

OFF TIME: _____

PROGRAMMED CYCLE 0-40:

Cycle: _____

Cycle Type: **AUTO**

Reverse Mode: _____ (Option)

Dry Temp: _____

Dry Level: _____

Cool Down Time: _____

Cool Down Temp: _____

Controlled Cool Down: _____

Cycle Type: **MANUAL**

Reverse Mode: _____ (Option)

Dry Time: _____

Dry Temp: _____

Cool Down Time: _____

Cool Down Temp: _____

Spin Time: _____

Stop Time: _____

Controlled Cool Down: _____

1ST ON TIME: _____

OFF TIME: _____

2ND ON TIME: _____

OFF TIME: _____

3RD ON TIME: _____

OFF TIME: _____

4TH ON TIME: _____

OFF TIME: _____

5TH ON TIME: _____

OFF TIME: _____

