



Member of:



OWNER'S MANUAL

150 Lb. Laundry Dryer



MODELS

GAS

L50CD42G
C150G

STEAM

L50CD42S
C150S

CISSELL MANUFACTURING COMPANY

HEADQUARTERS

831 SOUTH FIRST ST.

P.O. BOX 32270

LOUISVILLE, KY 40232-2270

PHONE: (502) 587-1292

SALES FAX: (502) 585-3625

SERVICE/PARTS FAX: (502) 681-1275

THIS MANUAL MUST BE GIVEN TO THE EQUIPMENT OWNER.

MAN2150 9/99 5C MPC

D0030

IMPORTANT NOTICES—PLEASE READ

For optimum efficiency and safety, we recommend that you read the Manual before operating the equipment. Store this manual in a file or binder and keep for future reference.



WARNING: For your safety, the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury, or loss of life.

- Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS
 - Do not try to light any appliances.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Clear the room, building, or area of all occupants.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach the gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.



WARNING: In the event the user smells gas odor, instructions on what to do must be posted in a prominent location. This information can be obtained from the local gas supplier.



WARNING: Wear Safety Shoes to prevent injuries.



WARNING: Purchaser must post the following notice in a prominent location:



FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.



WARNING: A clothes dryer produces combustible lint and should be exhausted outside the building. The dryer and the area around the dryer should be kept free of lint.



WARNING: Be safe, before servicing machine, the main power should be shut off.



WARNING: To avoid fire hazard, do not dry articles containing foam rubber or similar texture materials. Do not put into this dryer flammable items such as baby bed mattresses, throw rugs, undergarments (brassieres, etc.) and other items which use rubber as padding or backing. Rubber easily oxidizes causing excessive heat and possible fire. These items should be air dried.



WARNING: Synthetic solvent fumes from drycleaning machines create acids when drawn through the dryer. These fumes cause rusting of painted parts, pitting of bright or plated parts, and completely removes the zinc from galvanized parts, such as the tumbler basket. If drycleaning machines are in the same area as the tumbler, the tumbler's make-up air must come from a source free of solvent fumes.



WARNING: Do not operate without guards in place.



WARNING: Check the lint trap often and clean as needed but at least a minimum of once per day.



WARNING: Alterations to equipment may not be carried out without consulting with the factory and only by a qualified engineer or technician. Only **Manufacturer's** parts may be used.



WARNING: Remove clothes from dryer as soon as it stops. This keeps wrinkles from setting in and reduces the possibility of spontaneous combustion.



WARNING: Be Safe - shut main electrical power and gas supply off externally before attempting service.



WARNING: Never use drycleaning solvents, gasoline, kerosene, or other flammable liquids in the dryer.
FIRE AND EXPLOSION WILL OCCUR. NEVER PUT FABRICS TREATED WITH THESE LIQUIDS INTO THE DRYER. NEVER USE THESE LIQUIDS NEAR THE DRYER..



WARNING: Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.



WARNING: Never let children play near or operate the dryer. Serious injury could occur if a child should crawl inside and the dryer is turned on.



WARNING: Never tumble fiberglass materials in the dryer unless the labels say they are machine dryable. Glass fibers break and can remain in the dryer. These fibers cause skin irritation if they become mixed with other fabrics.



WARNING: Before operating gas ignition system - purge air from natural gas or propane gas lines per manufacturer's instructions.



WARNING: To reduce the risk of electric shock, disconnect this appliance from the power supply before attempting any user maintenance other than cleaning the lint trap. Turning the controls to the OFF position does not disconnect this appliance from the power supply.

**ATTENTION: L'ACHETEUR DOIT PLACER L'AVERTISSEMENT
SUIVANT DANS UN ENDROIT CLAIR ET VISIBLE:**

AVERTISSEMENT. Assurez-vous de bien suivre les instructions donnees dans cette notice pour reduire au minimum le risque d'incendie ou d'explosion ou pour eviter tout dommage materiel, toute blessure ou la mort.

— Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables dans le voisinage de cet appareil ou de tout autre appareil.

— **QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ:**

- Ne pas tenter d'allumer d'appareil.
- Ne touchez a aucun interrupteur. Ne pas vous servir des telephones se trouvant dans le batiment ou vous vous trouvez.
- Evacuez la piece, le batiment ou la zone.
- Appelez immediatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur.
- Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le service des incendies.

— l'installation et l'entretien doivent etre assures par un installateur ou un service d'entretien qualifie ou par le fournisseur de gaz.

**ATTENTION: L'ACHETEUR DOIT PLACER L'AVERTISSEMENT
SUIVANT DANS UN ENDROIT CLAIR ET VISIBLE:**

POUR VOTRE SECURITE

Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables dans le voisinage de cet appareil ou de tout autre appareil.

CISSELL DRYER WARRANTY

The Cissell Manufacturing Company (Cissell) warrants all new equipment (and the original parts thereof) to be free from defects in material or workmanship for a period of two (2) years from the date of sale thereof to an original purchaser for use, except as hereinafter provided. With respect to non-durable parts normally requiring replacement in less than two (2) years due to normal wear and tear, and with respect to all new repair or replacement parts for Cissell equipment for which the two (2) year warranty period has expired, or for all new repair or replacement parts for equipment other than Cissell equipment, the warranty period is limited to ninety (90) days from date of sale. The warranty period on each new replacement part furnished by Cissell in fulfillment of the warranty on new equipment or parts shall be for the unexpired portion of the original warranty period on the part replaced.

With respect to electric motors, coin meters and other accessories furnished with the new equipment, but not manufactured by Cissell, the warranty is limited to that provided by the respective manufacturer.

Cissell's total liability arising out of the manufacture and sale of new equipment and parts, whether under the warranty or caused by Cissell's negligence or otherwise, shall be limited to Cissell repairing or replacing, at its option, any defective equipment or part returned f.o.b. Cissell's factory, transportation prepaid, within the applicable warranty period and found by Cissell to have been defective, and in no event shall Cissell be liable for damages of any kind, whether for any injury to persons or property or for any special or consequential damages. The liability of Cissell does not include furnishing (or paying for) any labor such as that required to service, remove or install; to diagnose troubles; to adjust, remove or replace defective equipment or a part; nor does it include any responsibility for transportation expense which is involved therein.

The warranty of Cissell is contingent upon installation and use of its equipment under normal operating conditions. The warranty is void on equipment or parts; that have been subjected to misuse, accident, or negligent damage; operated under loads, pressures, speeds, electrical connections, plumbing, or conditions other than those specified by Cissell; operated or repaired with other than genuine Cissell replacement parts; damaged by fire, flood, vandalism, or such other causes beyond the control of Cissell; altered or repaired in any way that effects the reliability or detracts from its performance, or; which have had the identification plate, or serial number, altered, defaced, or removed.

No defective equipment or part may be returned to Cissell for repair or replacement without prior written authorization from Cissell. Charges for unauthorized repairs will not be accepted or paid by Cissell.

CISSELL MAKES NO OTHER EXPRESS OR IMPLIED WARRANTY, STATUTORY OR OTHERWISE, CONCERNING THE EQUIPMENT OR PARTS INCLUDING, WITHOUT LIMITATION, A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, OR A WARRANTY OF MERCHANTABILITY. THE WARRANTIES GIVEN ABOVE ARE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. CISSELL NEITHER ASSUMES, NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT, ANY OTHER WARRANTY OR LIABILITY IN CONNECTION WITH THE MANUFACTURE, USE OR SALE OF ITS EQUIPMENT OR PARTS.

For warranty service, contact the Distributor from whom the Cissell equipment or part was purchased. If the Distributor cannot be reached, contact Cissell.

IDENTIFICATION NAMEPLATE

The Identification Nameplate is located on the rear wall of the dryer. It contains the dryer serial number, product number, model number, electrical specifications and other important data that may be needed when servicing and ordering parts, wiring diagrams, etc. Do not remove this nameplate.

TABLE OF CONTENTS









150 LB. LAUNDRY DRYER

PAGE





Model Numbers & Company Address	1
Important Notices	2-4
Dryer Warranty	5
Table of Contents	6
Warnings, Cautionary Notes and Symbols	7-8
Unpacking and General Installation	9-10
Gas Fired Dryer Dimensions (Illustration)	11
Gas Fired Dryer Specifications	12
Gas Pipe Size Chart	13
Gas Piping Installation	14-15
Steam Heated Dryer Dimensions	16
Steam Heated Dryer Specifications	17-18
Steam Dryer Installation Instructions	19
Steam Piping Illustration	20
Steam Piping Installation Instructions	21
Control Box & Steam Bonnet Assembly	22
Dryer Installation with Multiple Exhaust	23-25
Dryer Make-Up Air Requirements	26
Dryer Installation with Separate Exhaust (Preferred)	27
Exhaust and Venting	28
Rules for Safe Operation of Dryer	28-30
Two Timer Model Operating Instructions	31-32
Moisture Control Model Operating Instructions	33-34
Service Savers	35
Troubleshooting Chart	36-39
Direct Spark Ignition System	40-41
General Maintenance	42-43
Burner Air Inlet Shutters Adjustment	44
Basket Alignment	45-46
Shimming the Basket and Spider Assembly	47-48
Air Switch Adjustment	49
Dryers with Reversing Control Timer	50-51
Large Gear Reducer Maintenance	52
Front Panel and Door Assembly	53
Front of Dryer - Parts	54-55
Rear of Dryer - Parts	55-56
Permanent Press Control Box Assembly	58
Moisture Control Panel Assembly	59
Gas Bonnet and Burner Assembly	60
Air Switch Assembly	61
Steam Bonnet Assembly	62
Large Gear Reducer Assembly	63
Reversing Control Panel Assemblies	64-65
Temperature Assembly	66

SYMBOLS

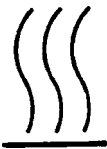The following symbols are used in this manual and/or on the machine. The numbers between () refer to the numbers on the machine surveys.

Symbol	Description	Part/Measurement
	NOTE!	
	Hot! Do Not Touch Heiß! Nicht Berühren Haute temperature! Ne pas toucher Caliente! no tocar Heet! Niet Aanraken	
	dangerous voltage tension dangereuse Gefährliche elektrische Spannung tension peligrosa	
	on marche Ein conectado	
	off arrêt Aus desconectado	
	start demarrage Start arranque de un movimiento	
	emission of heat in general émission de chaleur en general Warmeabgabe allgemein emisión de calor	
	cooling refroidissement Kühlen enfriamiento	

SYMBOLS

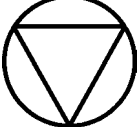Symbol	Description	Part/Measurement
	<p>rotation in two directions rotation dans les deux sens Drehbewegung in zwei Richtungen movimiento rotativo en los dos sentidos</p>	
	<p>direction of rotation sens de mouvement continu de rotation Drehbewegung in Pfeilrichtung movimiento giratorio o rotatorio en el sentido de la flecha</p>	
	End of Cycle	
	<p>caution attention Achtung atencion; precaucion</p>	

Unpacking/General Installation (All Dryers)

UNPACKING

This dryer is packed in a large wooden crate.

Upon arrival of the equipment, any damage in shipment should be reported to the carrier immediately.

Upon locating permanent location of a unit, care should be taken in movement and placement of equipment.

See outline clearance diagrams for correct dimensions.

Remove all packing material such as: tape, manuals, skid, etc.

Leveling: Use spirit level on top of dryer. The use of shims are acceptable for this procedure.

Check voltage and amperes on rating plate before installing the dryer.

GENERAL INSTALLATION (ALL DRYERS)

The construction of the dryers permits installation side-by-side to save space or to provide a wall arrangement. Position dryer for the least amount of exhaust piping and elbows, and allow free access to the rear of dryer for future servicing of belts, pulleys and motors. Installation clearance from all combustible material is 0" ceiling clearance, 0" rear clearance, and 0" side clearance.

IMPORTANT

Opening the clothes loading door deactivates the door switch to shut off the motors, fan, gas, steam, or electric element. To restart the dryer, close the door and press in the push to start button and hold briefly.

IMPORTANT

This dryer is designed for a capacity maximum load. Overloading it will result in long drying times and damp spots on some clothes.

IMPORTANT

Maximum operating efficiency is dependent upon proper air circulation. The lint screen must be kept cleaned daily to insure proper air circulation throughout the dryer.

General Installation (All Dryers)

GENERAL

Before operating dryer, open basket door and remove blocking between front panel and basket. Read the instruction tags, owner's manual, warnings, etc.

IMPORTANT

The dryer is so designed that when an operator opens the dryer door, the basket and exhaust fan stop. You can expect fast drying from this laundry dryer. Hot, dry air is properly and effectively moved through the basket and exhausted through a lint trap to the atmosphere. The dryer comes equipped with an inclined self-cleaning lint screen. In this system, lint accumulates on the underside of the screen until a blanket of lint will fall from the screen to the bottom of the dryer cabinet, and should be removed daily or as required, to prevent an overaccumulation.

REPLACEMENT PARTS

IMPORTANT


Provide adequate clearance for air openings into the combustion chamber.

PROCEDURE FOR DISASSEMBLING THE TOP OF THE DRYER

Replacement parts for this dryer are available from your distributor or by contacting the factory at the address or phone number printed on the cover of this manual.

1. Unscrew two (2) front cover panel hold-down screws and open the front cover panel. If wires enclosed are not color coded or numbered, mark wires before disconnecting. Refer to the wiring diagram.
2. Disconnect the wire plugs in the right and left control boxes. Unscrew the two (2) hold-down bolts from the bottom of the boxes and one screw from the outside rear of the boxes. Remove the two (2) screws that hold the conduit plate to the boxes. Remove the boxes and the top brace as one assembly.
3. Unscrew the six (6) bolts that hold down the heating unit.
4. Remove the air switch box on the rear of the dryer and disconnect the two (2) wires and the box from the rear of the dryer. Leave the air switch fastened to the dryer rear wall.
5. To re-assemble, reverse this procedure.

150 lb. C Models - Gas Fired Dryer (Illustration)

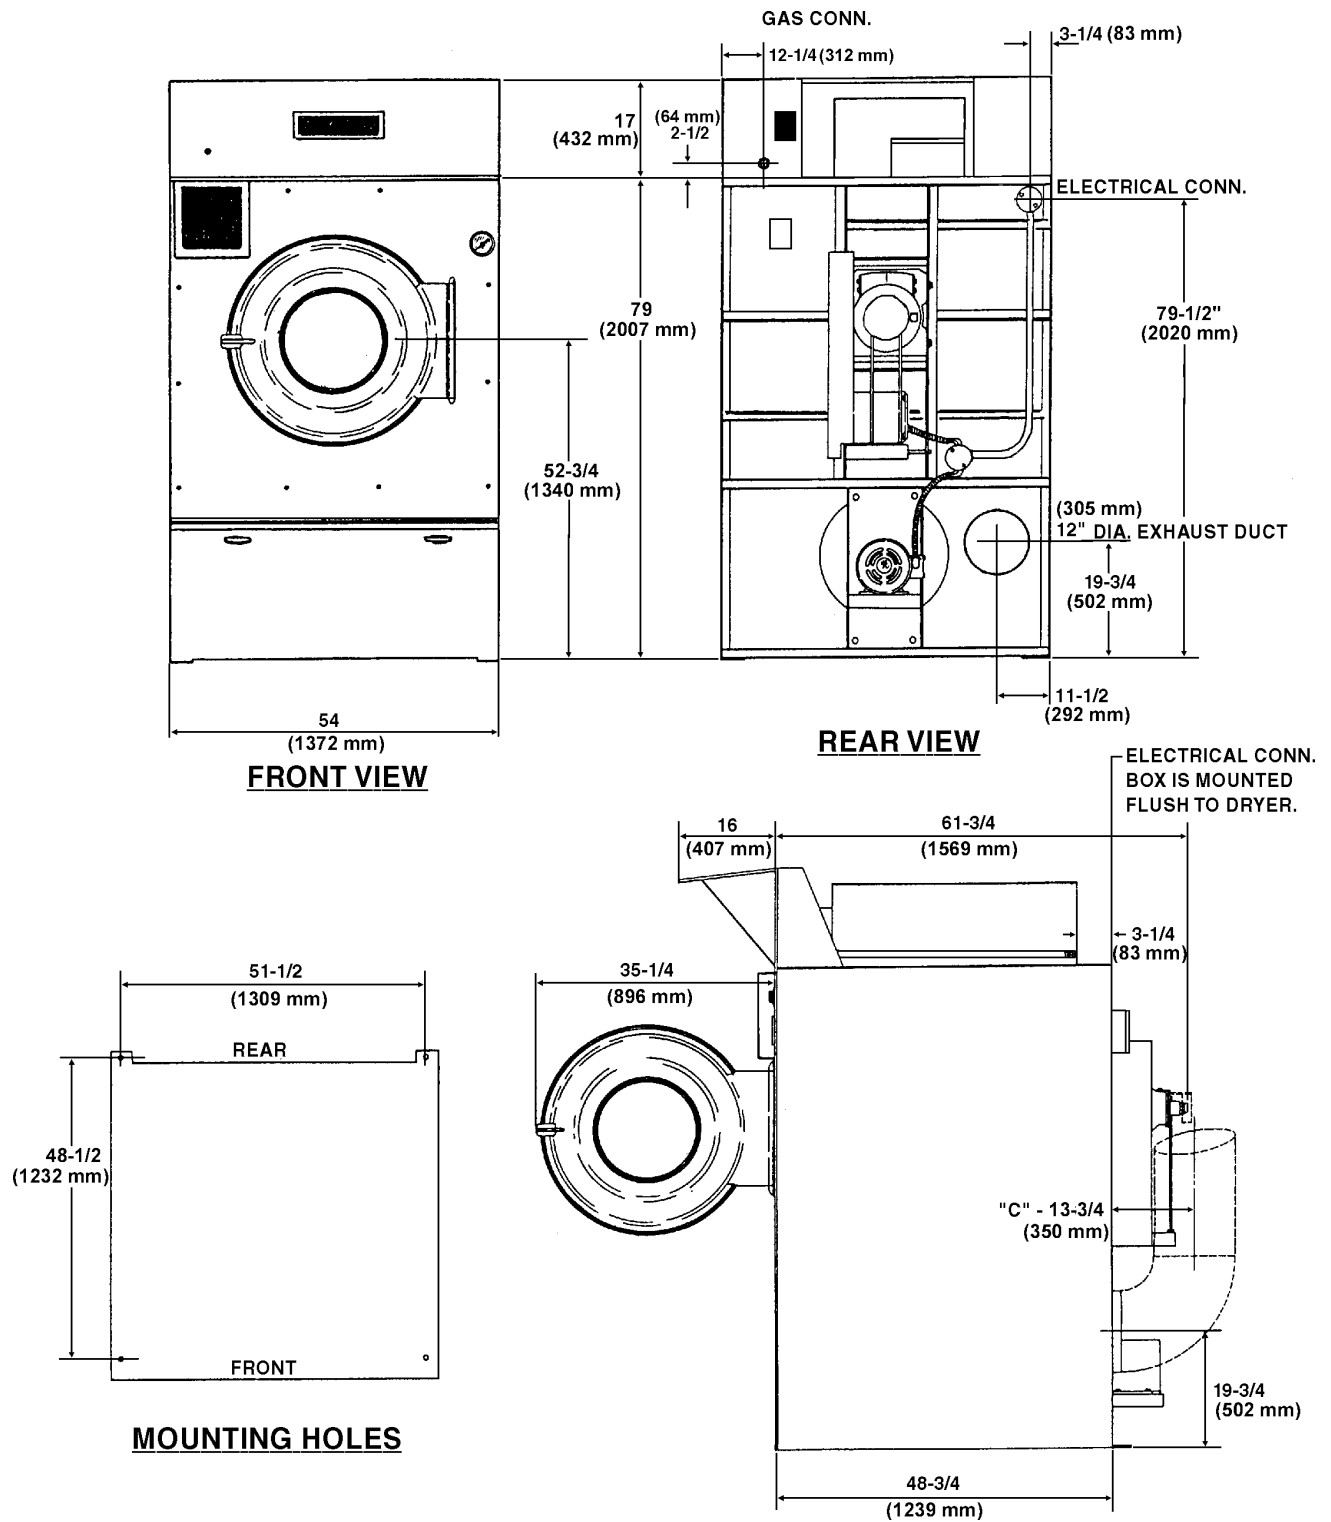

150 lb. Dryers - Specifications



GENERAL SPECIFICATIONS FOR 150 lb. DRYERS

Floor Space.....	64" (1626 mm) Deep x 54" (1372 mm) Wide x 96" (2439 mm) High
Doors	31-1/4" (794 mm) Diameter
Basket Size.....	50" (1270 mm) Diameter x 42" (1067 mm) Deep
Basket Capacity (Dry Weight)	150 lbs. (68.0 kg) Dryweight
Basket Motor	1-1/2 HP (1.12 kW)
Fan Motor	1-1/2 HP (1.12 kW)
Basket RPM (Reversing)	28 - 3.2 reversals per min.
(Non-Reversing)	30
Exhaust Duct	12" (305 mm) Diameter
Maximum Air Displacement.....	2,250 cfm (3825 m ³ /h)
Recommended Operating	1,900 - 2,100 cfm
Range	(3230 - 3570 m ³ /h)
Net Weight (<i>Gas</i>)	1,740 lbs. (789 kg) approx.
(<i>Steam</i>)	1,754 lbs. (796 kg) approx.
Shipping Weight (<i>Gas</i>)	1,890 lbs. (857 kg) approx.
(<i>Steam</i>)	1,944 lbs. (882 kg) approx.
Export Shipping Dimensions.....	104" H (2642 mm) x 60" W (1524 mm) x 74" L (1880 mm)
Export Crate (<i>Gas</i>)	254.5 ft ³ (7.21 m ³)
(<i>Steam</i>)	261.1 ft ³ (7.40 m ³)
Load Weight on Floor Area69 lb./sq. in. (48.5 lb./sq. in.)
BTU Input Rating * (see next page)	370,000 Btu per hour (93,240 kcal/h)
	(Nat., Mixed, Mfg., Butane and Propane Gases)
Steam Consumption	12.5 bhp - 419 lbs. (418,187 Btu/h)
Operating Steam Pressure	100 psi (6.9 bar) max
Gas Supply	1" (3 mm) Pipe Connection
Manifold Pressure	3.5" w.c. (8.7 mbar) (Natural Gas)
	11" w.c. (27 mbar) (LP Gas)
Electric Ignition	Direct Spark Ignition System

Gas Pipe Size Chart

TOTAL BTU/HR (for LP Gas correct total Btu/h below by multiplying by .6)	TOTAL KCAL	GAS PIPE SIZE FOR 1000 Btu (252 kcal/h) NATURAL GAS AT 7" w. c. (17.5 bar) PRESSURE					
		In figuring total length of pipe, make allowance for tees and elbows.					
		(25 ft.) 7,62 m	(50 ft.) 15,24 m	(75 ft.) 22,86 m	(100 ft.) 30,48 m	(125 ft.) 38,1 m	(150 ft.) 45,72 m
60,000	15000	3/4	3/4	3/4	3/4	3/4	3/4
80,000	20000	3/4	3/4	3/4	1	1	1
100,000	25200	3/4	3/4	1	1	1	1
120,000	30200	3/4	1	1	1	1	1
140,000	35200	3/4	1	1	1	1	1 1/4
160,000	40300	3/4	1	1	1 1/4	1 1/4	1 1/4
180,000	45300	1	1	1	1 1/4	1 1/4	1 1/4
200,000	50400	1	1	1 1/4	1 1/4	1 1/4	1 1/2
300,000	75600	1	1 1/4	1 1/4	1 1/2	1 1/2	1 1/2
400,000	100800	1 1/4	1 1/4	1 1/2	1 1/2	1 1/2	2
500,000	126000	1 1/4	1 1/2	1 1/2	2	2	2
600,000	151200	1 1/2	1 1/2	2	2	2	2
700,000	176400	1 1/2	2	2	2	2	2 1/2
800,000	202000	1 1/2	2	2	2	2 1/2	2 1/2
900,000	230000	2	2	2	2 1/2	2 1/2	2 1/2
1,000,000	250000	2	2	2	2 1/2	2 1/2	2 1/2
1,100,000	270000	2	2	2 1/2	2 1/2	2 1/2	2 1/2
1,200,000	300000	2	2	2 1/2	2 1/2	2 1/2	2 1/2
1,300,000	330000	2	2 1/2	2 1/2	2 1/2	2 1/2	3
1,400,000	350000	2	2 1/2	2 1/2	2 1/2	3	3
1,500,000	380000	2	2 1/2	2 1/2	2 1/2	3	3
1,600,000	400000	2	2 1/2	2 1/2	3	3	3
1,700,000	430000	2	2 1/2	2 1/2	3	3	3
1,800,000	450000	2 1/2	2 1/2	3	3	3	3
1,900,000	480000	2 1/2	2 1/2	3	3	3	3
2,000,000	504000	2 1/2	2 1/2	3	3	3	3 1/2
2,200,000	550000	2 1/2	3	3	3	3 1/2	3 1/2
2,400,000	605000	2 1/2	3	3	3	3 1/2	3 1/2
2,600,000	650000	2 1/2	3	3	3 1/2	3 1/2	3 1/2
2,800,000	705000	2 1/2	3	3	3 1/2	3 1/2	3 1/2
3,000,000	750000	2 1/2	3	3 1/2	3 1/2	3 1/2	4
3,200,000	806000	3	3	3 1/2	3 1/2	3 1/2	4
3,400,000	850000	3	3 1/2	3 1/2	3 1/2	4	4
3,600,000	907000	3	3 1/2	3 1/2	3 1/2	4	4
3,800,000	960000	3	3 1/2	3 1/2	4	4	4
4,000,000	1000000	3	3 1/2	3 1/2	4	4	4

Gas Piping Installation (Illustration)

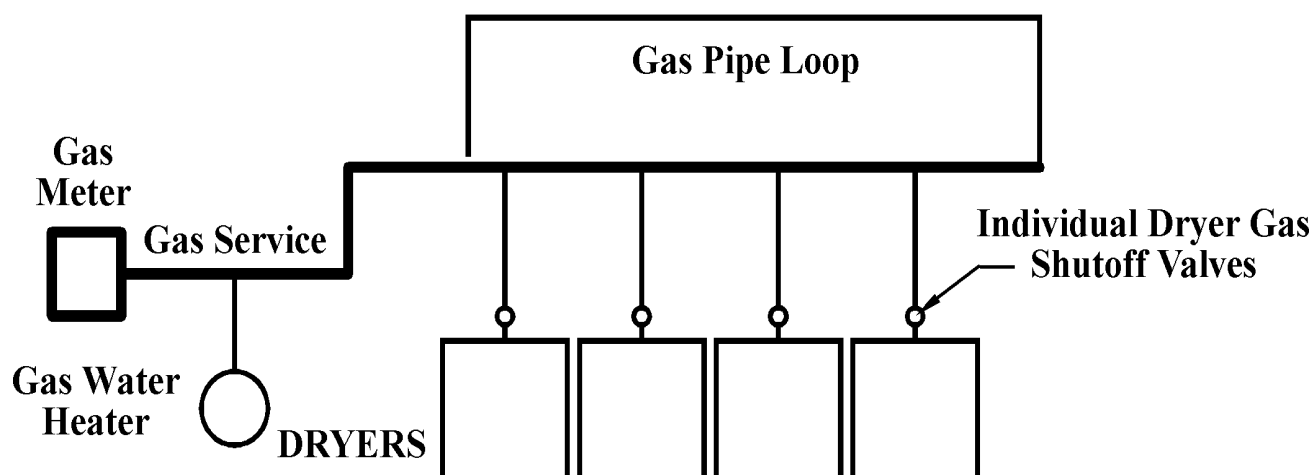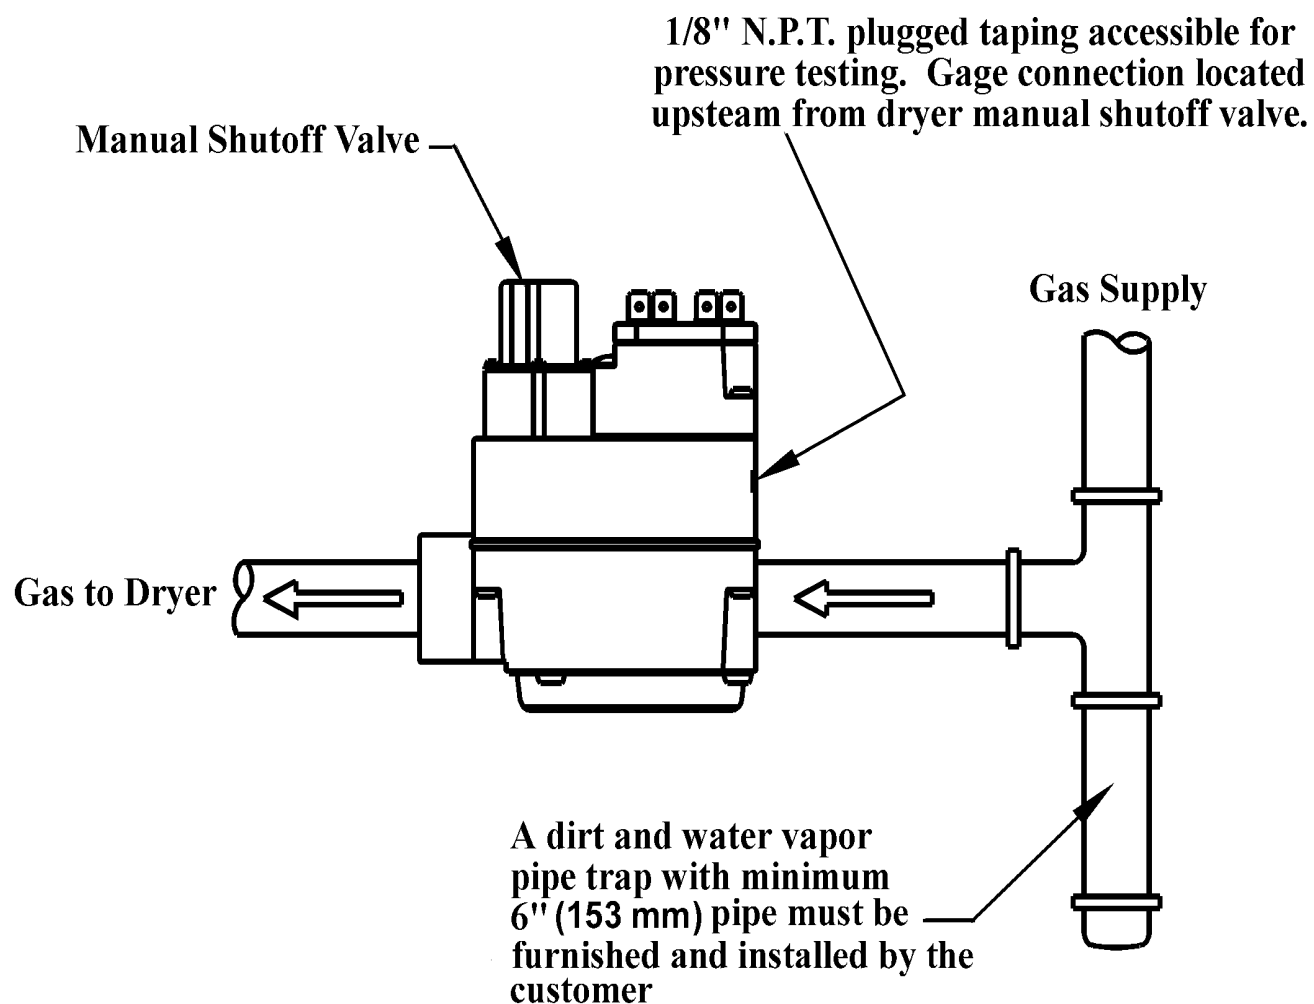

Gas Piping Installation

STEAM PIPING INSTALLATION



1. Gas service installation must conform with local codes, or in the absence of local codes with the *National Fuel Gas Code, ANSI Z223.1* or the *CAN/CGA-B149, Installation Codes*.
2. Check Rating Plate located on rear wall of dryer, for type of gas to equip the dryer and the altitude (elevation).
3. Check with the gas supplier for the gas pressure and the proper gas supply line installation.

NOTE: The dryer and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa).

The dryer must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 PSIG (3.5 kPa).




CAUTION: Low gas pressure and intermittent gas will cause gas ignition problems. This will cause inadequate drying of the clothes load.

NATURAL & LP GASES: Check the gas pressure inlet supply to the dryer, 14" w. c. (34.9 bar) pressure maximum. Check the manifold pressure, 3.5" w. c. (8.8 bar) for natural gas and 11" w. c. (27.4 bar) for LP gas.



CAUTION: Gas loop piping must be installed as shown on the following page, to maintain equal pressure for all dryers connected to a single gas service. Install other gas appliances upstream from the loop.

150 lb. Steam Heated Models (Illustration)

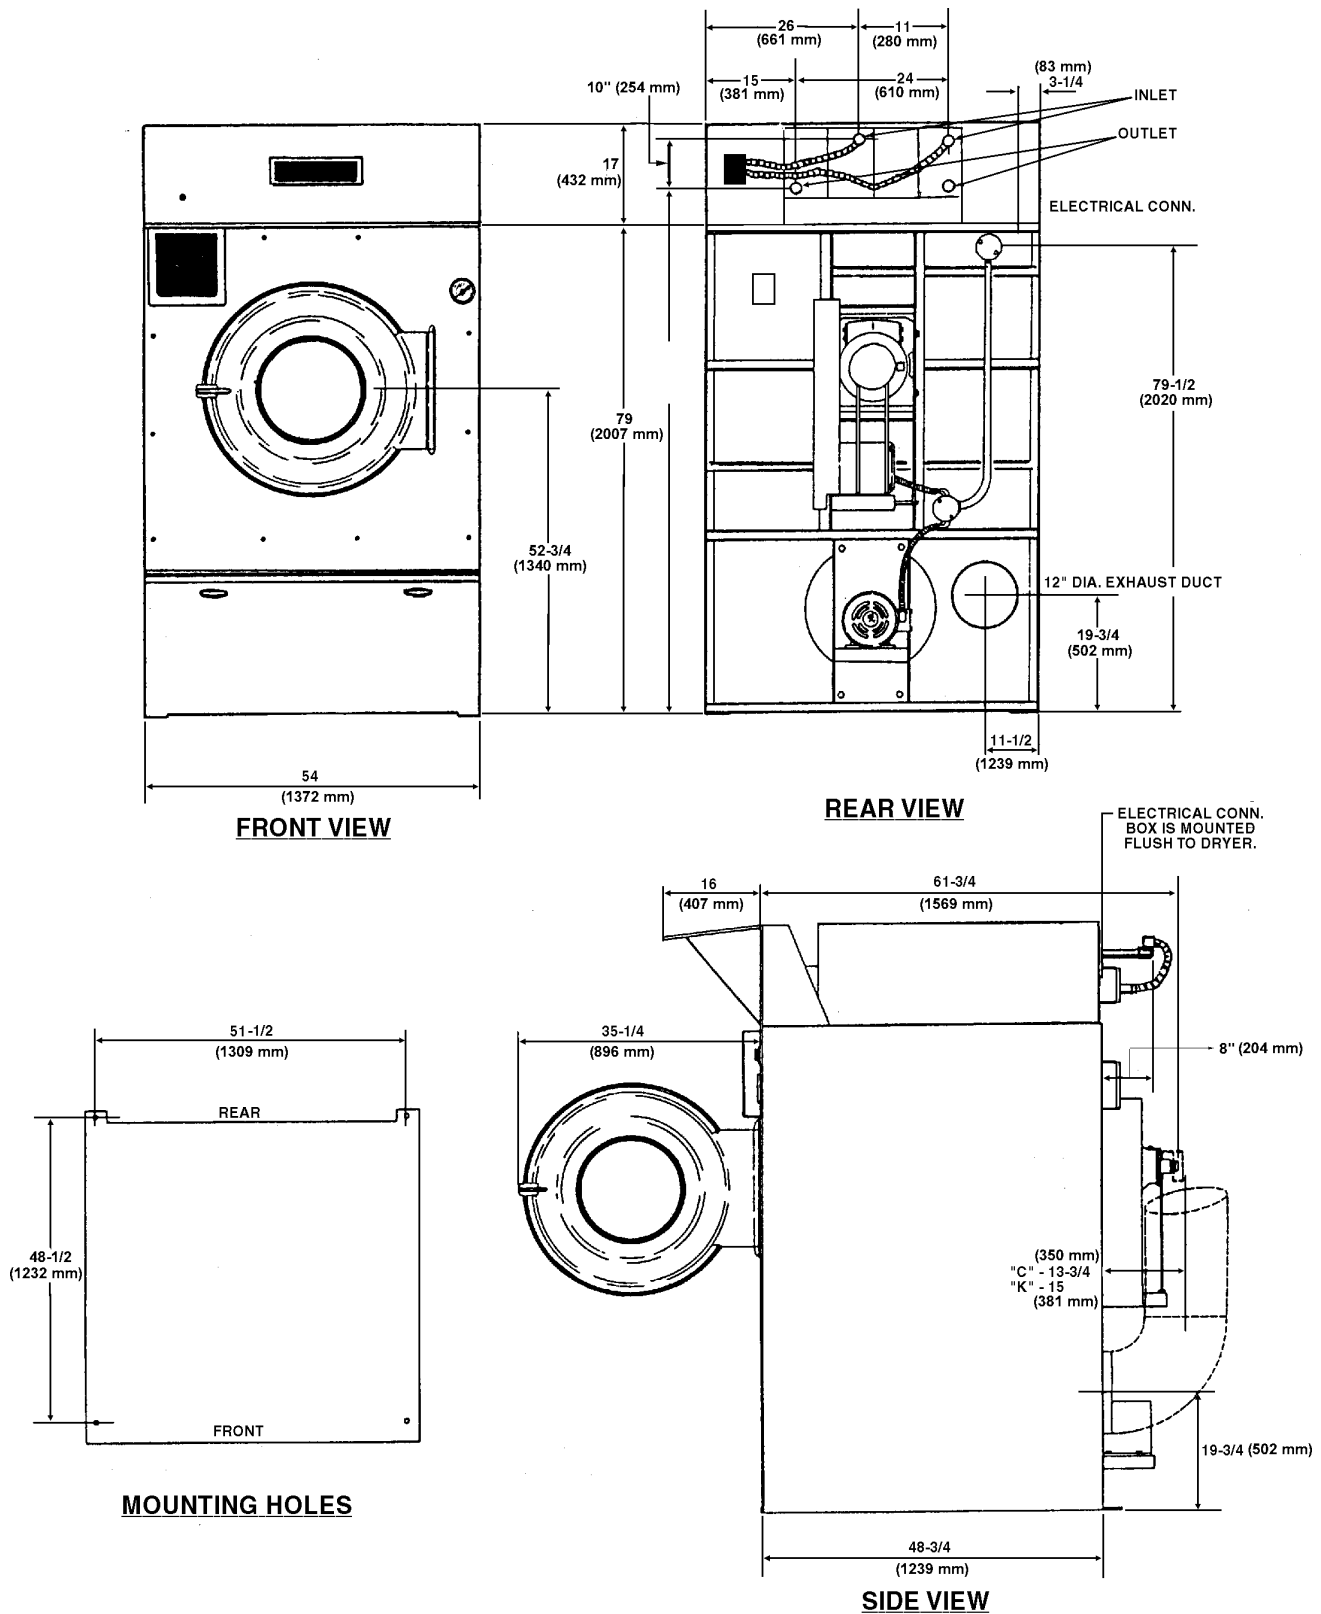

150 lb. Steam Heated Laundry Dryers - Specifications

GENERAL SPECIFICATIONS FOR 150 lb. LAUNDRY DRYERS (STEAM HEATED)	Operating Steam Pressure	100 psig (6.9 bar) Maximum
	Boiler HP	12.5 HP (9.33 kW)
	Heat Capacity	8 Coil
	Steam Coils	(4) 6"(153 mm) x 10 1/4" (261 mm) x 40 1/2"(1029 mm)
	Steam Supply Connection	3/4" (20 mm)
	Steam Return Connection	3/4" (20 mm)
	Trap Connection	(2) 3/4" (20 mm)
	Maximum Air Displacement	2250 cfm (63.7 m ³ /h)
LIST OF MOTORS USED - 150 lb. LAUNDRY DRYERS		

Motor No.	Voltage	Hz.	Phase	HP	kW	Amps	BASKET or FAN
*MTR304	200-240/460-480	60	3	1 1/2	1.12	4.8/2.4	Fan or Basket
MTR100	575	60	3	1 1/2	1.12	2.0	Fan or Basket
*MTR304	240/415	50	3	1 1/2	1.12	4.8/2.4	Fan or Basket
*MTR304	220/380	50/60	3	1 1/2	1.12	4.8/2.4	Fan or Basket

*All MTR30X series motors have internal overload protection. In case of a trip, the overloads are resettable from a button located on the main body of the motor.

TOTAL CONTROLS	Total controls on dryer are 1 to 3 amperes.
INPUT RATINGS	*Input ratings as shown are for elevations up to 2000 ft. (610 m). For high elevations, ratings should be reduced 4% for each 1000 ft. (305 m) above sea level.
ELECTRICAL WIRING	Electrical wiring to dryer must conform to local electrical code requirements.

150 lb. Steam Heated Laundry Dryers - Specifications


ELECTRICAL CONNECTIONS - ALL DRYERS

Dryers must be electrically grounded by a separate #14 or larger green wire from the grounding terminal within the Service Connection Box to a cold water pipe. In all cases, the grounding method must comply with local electrical code requirements; or in the absence of local codes, with the *National Electrical Code, ANSI/NFPA 70 or the Canadian Electrical Code, CA C22.1*.

See wiring diagram furnished with dryer. Your dryer is completely wired at the factory and it is only necessary for the electrician to connect the power leads to the wire connectors with the Service Connection Box on the rear of the dryer. Do not connect the dryer to any voltage or current other than that specified on the Dryer Rating Plate. (Wiring diagrams are located on rear wall of dryer.)

All panels must be in position before operation of dryer.

(ILLUSTRATION) GROUNDING INSTRUCTIONS

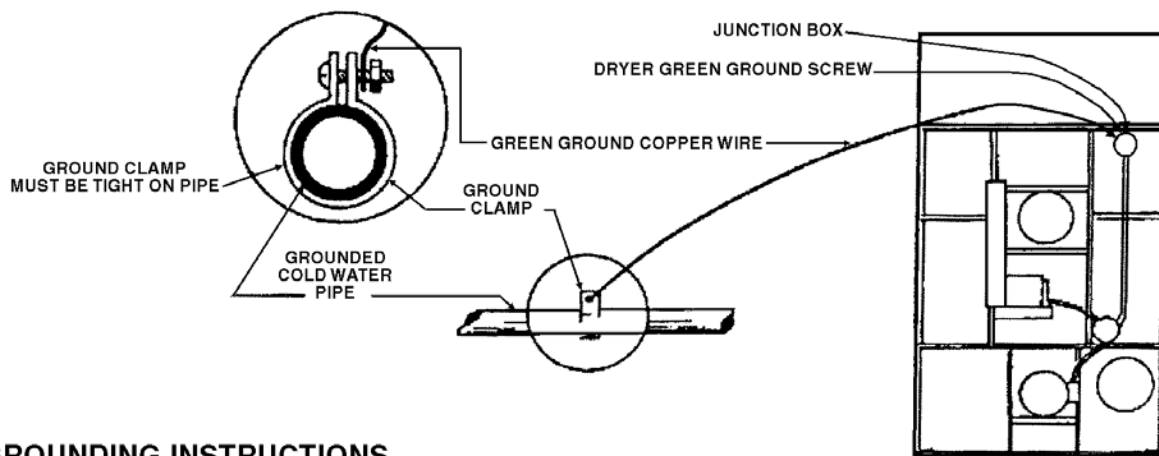

GROUNDING INSTRUCTIONS

«Attention. Lors des opérations d'entretien des commandes, étiqueter tous les fils avant de les déconnecter. Toute erreur de câblage peut être une source de danger et de panne»

Steam Dryers - Installation Instructions


STEAM DRYERS - INSTALLATION INSTRUCTIONS

1. The dryer comes in two wood crates:
 - A - Very large crate
 - B - Smaller crate
2. Open Crate A and lift dryer off the skid and set in place.
3. Open Crate B. It contains two assemblies:
 - I - Control Box Assembly
 - II - Steam Bonnet Assembly
4. Place II - Steam Bonnet Assembly on top of the dryer and slide piped end to rear of dryer. Bolt to top with six 3/8" (10 mm) bolts, flat washers and lockwashers provided. Attach Solenoid Conduits (2) to the Right Front Control Box. Then connect the wires as per diagram on the rear wall of dryer.
5. Place I - Control Box Assembly on top front of the dryer and bolt in place with six 3/8" (10 mm) bolts, flat washers and lockwashers. Snap the electrical connections together.
6. Proceed with steam piping, electrical services and duct work, as specified in technical manual.

I - Control Box Assembly and II - Steam Bonnet Assembly (Illustration)

I - Control Box Assembly

II - Steam Bonnet Assembly

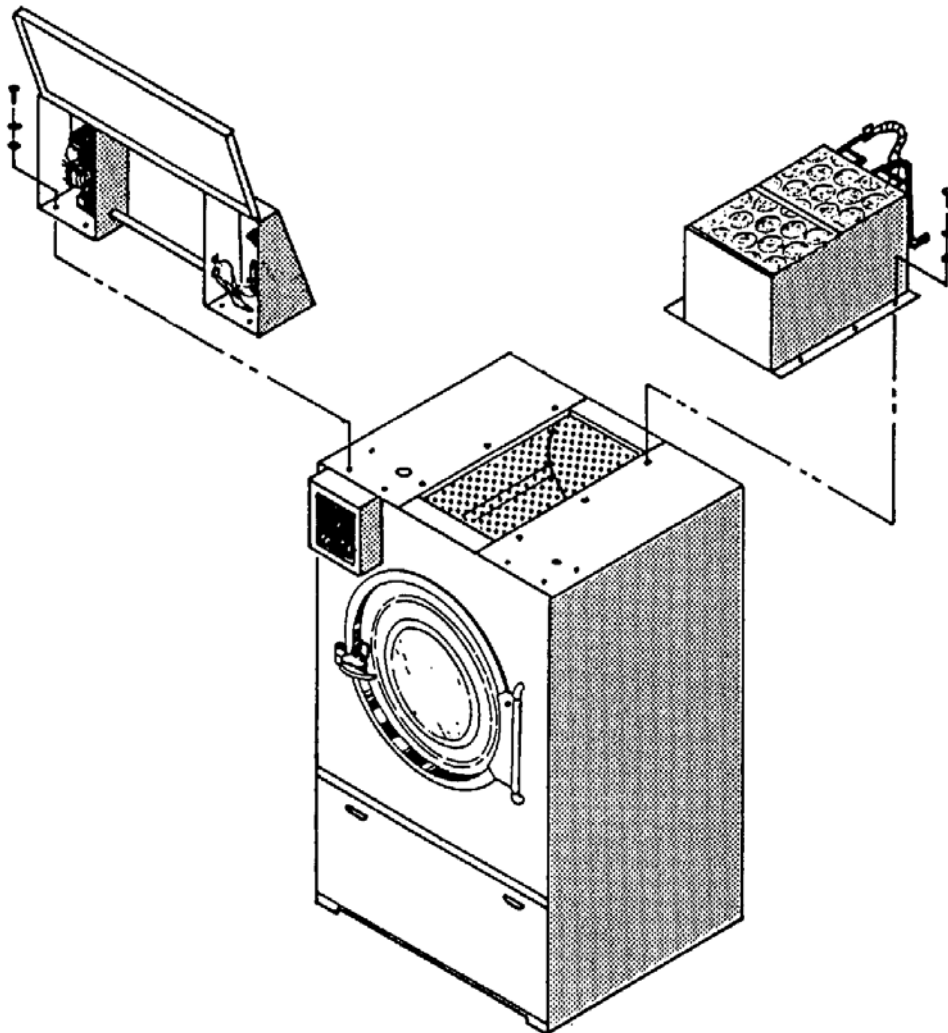

Steam Piping - Installation Instructions


STEAM PIPING - INSTALLATION INSTRUCTIONS

1. Set and anchor dryer in position. Machine should be level assure proper steam circulation.
2. To prevent condensate draining from headers to dryer, piping should have a minimum 12" (305 mm) above respective header. Do not make steam connection to header with a horizontal or downwardly facing tee or elbow.
3. Whenever possible, horizontal runs of steam lines must drain, by gravity, to respective steam header. Water pockets, or an improperly drained steam header will provide wet steam, causing improper operation of dryer. If pockets or improper drainage cannot be eliminated, install a by-pass trap to drain condensate from the low point in the steam supply header to the return.
4. In both steam supply and steam return line, it is recommended that each have a 3/4" (20 mm) union and 3/4" (20 mm) globe valve. This will enable you to disconnect the steam connections and service the dryer while your plant is in operation.
5. Before connecting trap and check valve to dryer, open globe valve in steam supply line and allow steam to flow through dryer to flush out any dirt and scale from dryer. This will assure proper operation of trap when connected.
6. After flushing system, install bucket trap (with built-in strainer) and check valve. For successful operation of dryer, install trap 18" (458 mm) below coil and as near to the dryer as possible. Inspect trap carefully for inlet and outlet markings and install according to trap manufacturer's instructions. If steam is gravity returned to boiler, omit trap but install check valve in return line near dryer.
7. Install union and globe valve in return line and make final pipe connections to return header.

PIPING RECOMMENDATIONS


1. Trap each dryer individually. Always keep the trap clean and in good working condition.
2. When dryer is on the end of a line of equipment, extend header at least 4 feet (2 m) beyond dryer. Install globe valve, union, check valve and by-pass trap at end of line. If gravity return to boiler, omit trap.
3. Insulate steam supply and return line for safety of operator and safety while servicing dryer.
4. Keep dryer in good working condition. Repair or replace any worn or defective parts.

Steam Piping Installation (Illustration)

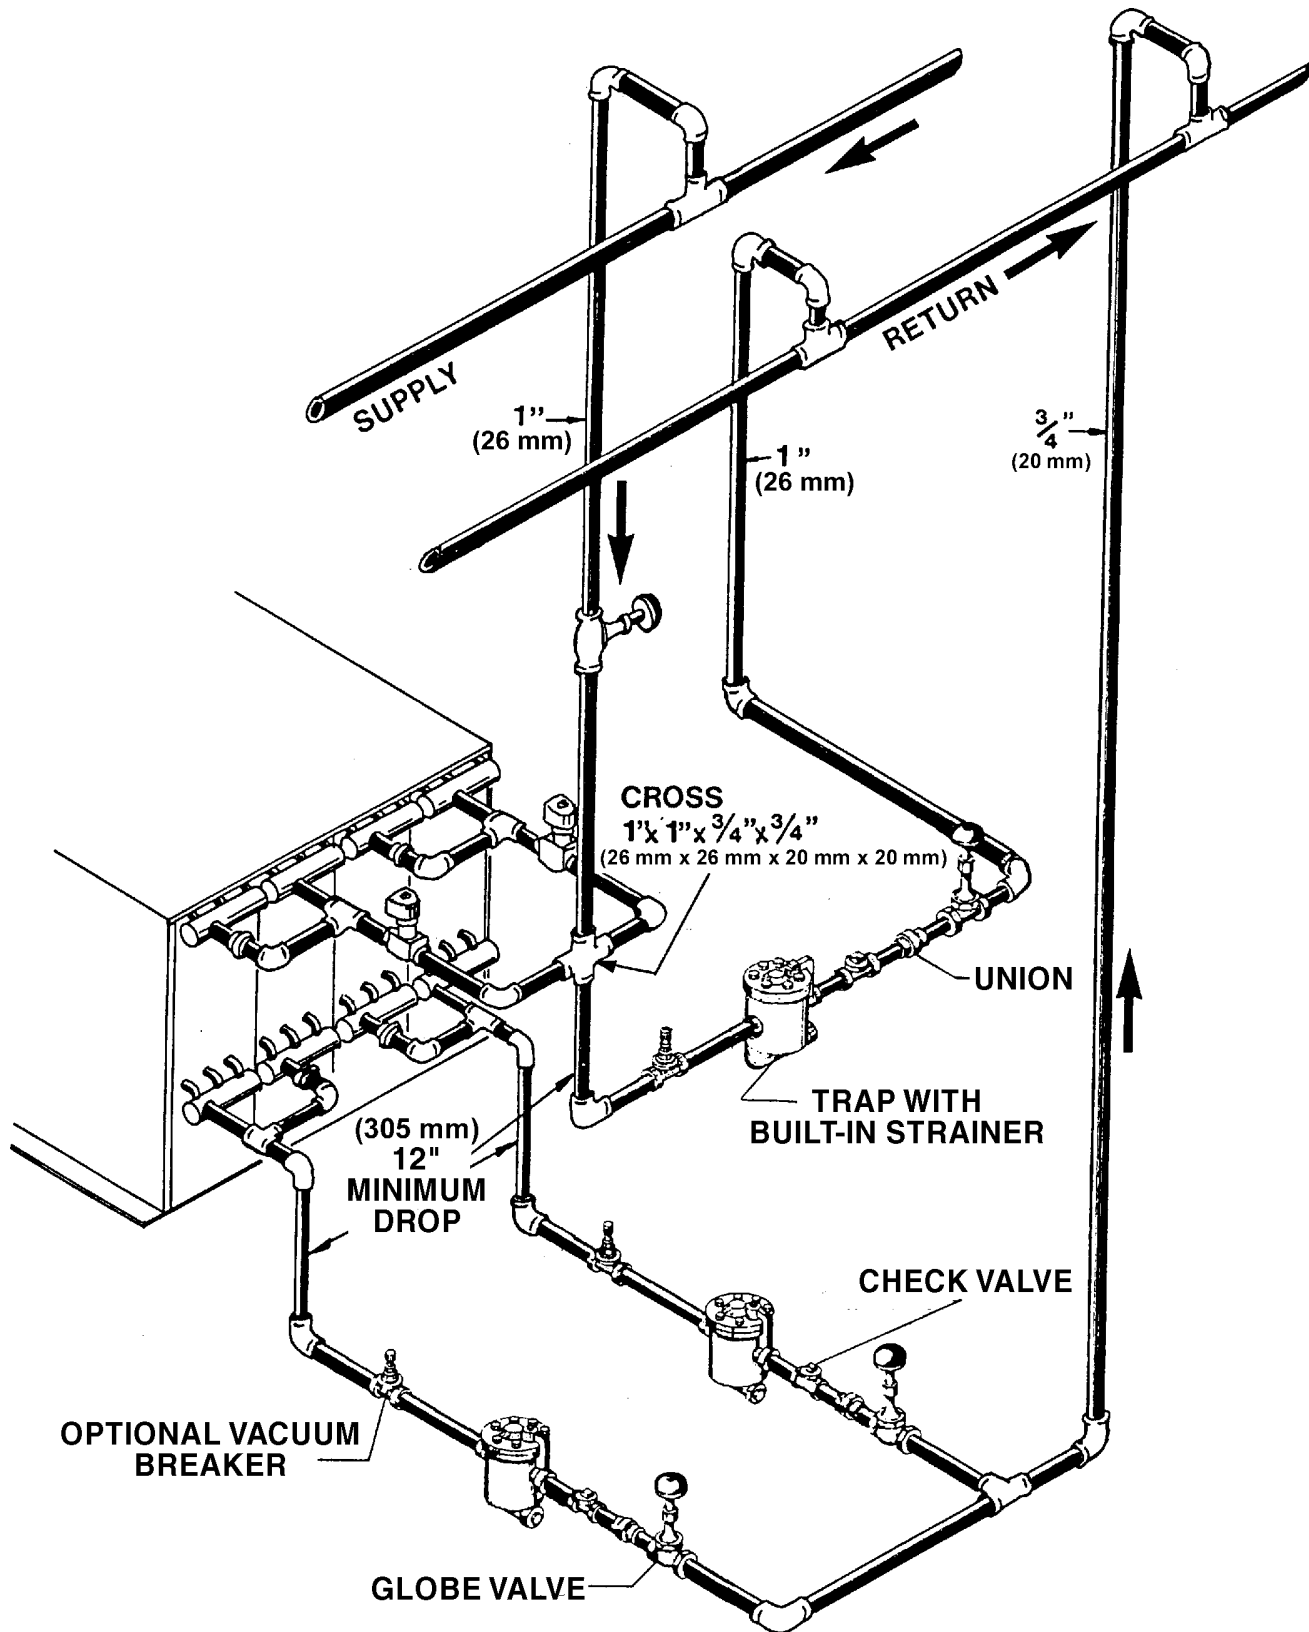

INDIVIDUALLY TRAPPED COILS ARE RECOMMENDED RATHER THAN MANFOLDING RETURN INTO ONE TRAP.

Dryer Installation with Multiple Exhaust (Illustration)

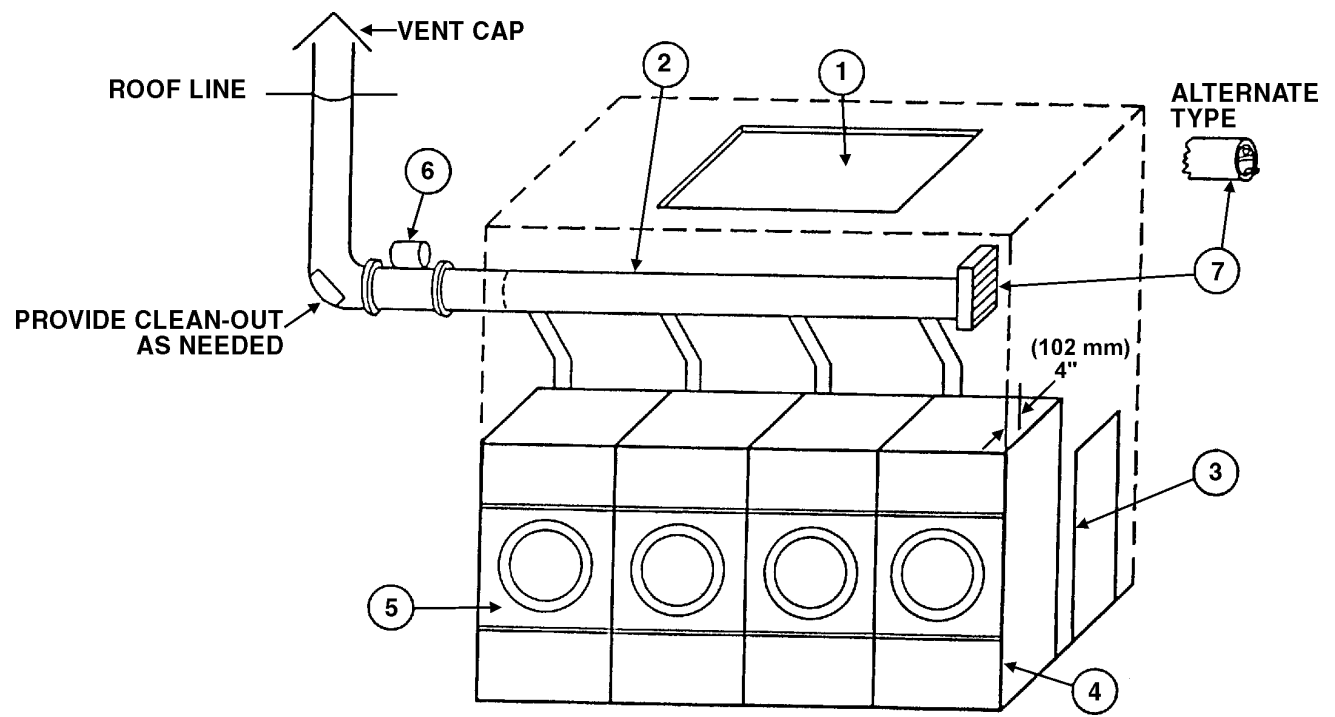

Dryer Installation with Multiple Exhaust

DRYER INSTALLATION WITH MULTIPLE EXHAUST

For Exhaust Duct more than 14 feet (5 m) and 2 elbows equivalent and more than 0.3 inches (8 mm) static pressure. (See illustration on previous page.)

1. Make-up air from outside building may enter enclosure from top or side walls. *(See Dryer Make-up Air Requirements Chart)*
2. Use constant diameter duct with area equal to the sum of dryer duct areas.

EXAMPLE: 6-8 inch (153-204 mm) diameter duct = 1-19.6 inch (26-498 mm) diameter duct in area. Use 20 inch (508 mm) diameter duct or diameter to match tube-axial fan.

EXAMPLE

3. Enclosure (plenum) with service door. This separates the dryer air from room comfort air. If dryers use room air instead of outside air, the heat loss can be another 25 Btu/h (6.3 kcal/h) for each cubic foot per minute (cfm) used.
4. Zero inches clearance to combustible material allowed on sides and at points within 4 inches (102 mm) of front on top.
5. Heat loss into laundry room from dryer fronts *only* is about 60 Btu/h (16 kcal/h) per square foot.
6. Flange mounted, belt driven tube-axial fan. **Fan must be run when one or more dryers are running.** *See suggested Automatic Electrical Control Wiring Diagram on previous page.* Must meet local electrical codes. Fan air flow (cfm) is equal to sum of dryer air flows, but static pressure (sp) is dependent on length of pipe and number of elbows.
7. **Barometric Bypass Damper** - Adjust to *closed flutter position* with all dryers and exhaust fan running. **Must be located with enclosure.**




CAUTION

Never install hot water heaters or other gas appliances in the same room as dryers. Never install cooling exhaust fans in the same room as dryers.

Dryer Installation with Multiple Exhaust

For Exhaust Duct less than 14 feet (5 m) and 2 elbows equivalent and less than 0.3 inches (8 mm) static pressure.

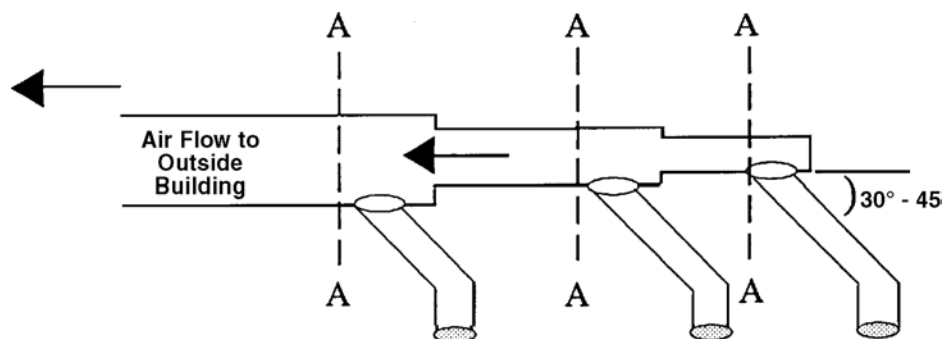

DRYER EXHAUSTS

Area of section “A-A” must be equal to the sum of dryer exhaust pipes entering multiple exhaust pipe. (See chart below.)

No. of Dryers
Duct Diameter
(in inches)
(in CM)

MODELS: L28FD30, L28US30, L36FD30, L36US30, L36US36, L44FD42

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
6	9	11	12	14	15	16	17	18	19	20	21	22	23	23	24	25	26	26	27	28	28	29	30
15	23	27	30	35	38	41	43	46	48	51	53	56	58	58	61	63	66	66	68	71	71	73	76

No. of Dryers
Duct Diameter
(in inches)
(in CM)

MODELS: L28CD30, L28UR30, L36CD30, L36UR30, L36UR36, L36AR36, L44FD42

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
8	12	14	16	18	20	22	23	24	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
20	30	25	41	46	51	56	58	61	66	68	71	73	76	78	81	84	86	89	91	94	97	99	100


No. of Dryers
Duct Diameter
(in inches)
(in CM)

MODELS: L44CD42, L50CD42

1	2	3	4	5	6	7	8	9	10	11	12
12	17	21	24	27	30	32	34	36	38	40	42
30	43	53	61	68	76	81	86	91	97	100	106

AUTOMATIC ELECTRICAL CONTROL FOR EXHAUST FAN

For one or more dryers to start fan.

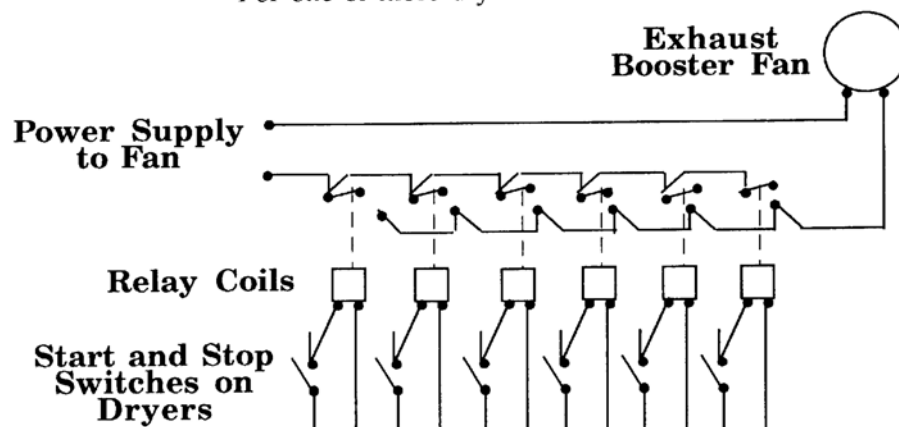


Suggested Minimum Dryer Make-up Air Requirements

Dryer Model	Dryer Pocket Capacity		Maximum Air Flow Rate per Pocket		Duct Size For Service Connection		Required Make-up Air Area per Pocket	
	lb	kg	cfm	m3/h	inch	mm	sq. inch	cm2
C 30 ST	30	13.6	450	765	6	153	87	561
C 75 ST	75	34	1000	1700	12	305	192	1240
C 110	110	50	2200	3740	12	305	422	2723
C 110 E/S	110	50	850	1445	8	203	163	1052
C 125	125	56.7	2000	3400	12	305	384	2477
C 150	150	68	2250	3825	12	305	432	2787
HD175	175	79.4	2780	4726	12	305	534	3445
HD190	190	86.2	3000	5100	12	305	576	3716
HD20.1	20	9.1	450	765	6	153	87	561
HD30SL	30	13.6	600	1020	8	203	116	748
HD30.1	30	13.6	625	1063	8	203	120	774
HD50.1	50	22.7	850	1445	8	203	164	1058
HD75.1	75	34	1000	1700	8	203	192	1240
HD80.1	80	36.3	1000	1700	10	254	192	1240

Notes:

- 1) The Model C 30 ST has 2 pockets per dryer, each pocket has the above listed characteristics; each pocket is exhausted separately with a 6" (153mm) duct.
- 2) The Model C 75 ST has 2 pockets per dryer, each pocket has the above listed characteristics; both pockets have one 8" (203mm) exhaust manifolded into one 12" (305mm) exhaust duct for exhaust connection.
- 3) For the C 30 ST and the C 75 ST Models, the Required Make-up Air Area shown in the table should be doubled since it is shown per pocket, only.

Dryer Installation with Separate Exhaust (Preferred)

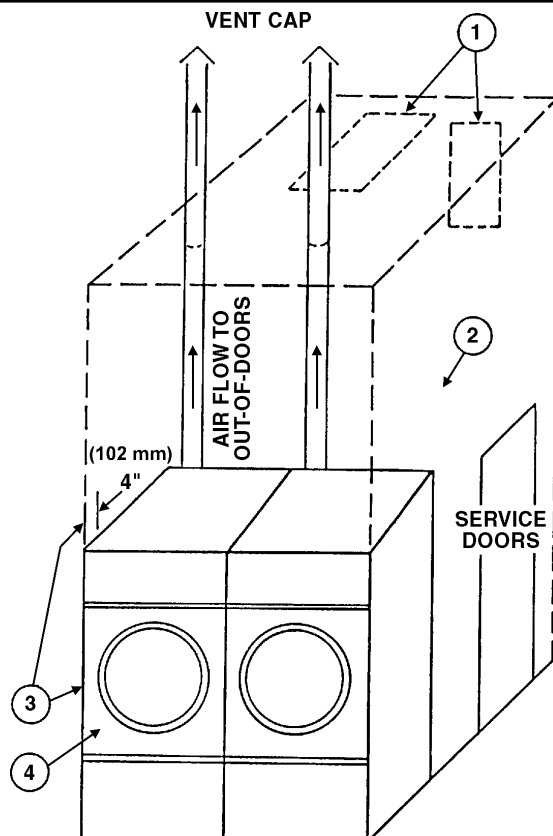

DRYER INSTALLATION WITH SEPARATE EXHAUST (PREFERRED)

For ductwork less than 14 feet (5 m) and 2 elbows equivalent and less than 0.3 inches (8 mm) static pressure.

NEVER exhaust the dryer into a chimney.

NEVER install wire mesh screen over the exhaust or make-up air area.

NEVER exhaust into a wall, ceiling, or concealed space.

1. Make-Up Air opening from outside the building may enter the enclosure from the top or side walls. (*See Dryer Make-up Air Requirements Chart*)
2. Enclosure (plenum) with service door. This separates the dryer air from the room comfort air. If dryers use room air instead of outside air, additional heat loss can be another 25 Btu/h (6.3 kcal/h) for each cubic foot per minute (cfm) used.
3. Zero inches clearance to combustible material allowed on sides and at points within 4 inches (102 mm) of front on top.
4. Heat loss into laundry room from dryer front panels is about 60 Btu/h (16 kcal/h) per square foot.

Exhaust and Venting

DRYER AIR FLOW INSTALLATION

Nothing is more important than air flow for the proper operation of a clothes dryer. A dryer is a pump which draws make-up air from the out-of-doors, through the heater, through the clothes and then forces the air through the exhaust duct back to the out-of-doors. Just as in a fluid water pump, there must be the proper fluid air flow out of the exhaust duct.

In summary, there must be the proper size out-of-doors inlet air opening (4-6 times the combined areas of the air outlet) and an exhaust duct, with appropriate size and length, to allow air flow through the dryer with no more than 0.3" w. c. (.75 mbar) static pressure in the exhaust duct.

In some instances, special fans are required to supply make-up air, and/or boost exhaust fans are required for both regular and energy savings models.

FOR BEST DRYING

FOR BEST DRYING:

1. Exhaust duct maximum length 14 feet (5 m) of straight duct and maximum to two 90° bends.
2. Use 45° and 30° elbows wherever possible.
3. **Exhaust each dryer separately.**
4. **Do not** install wire mesh or other restrictions in the exhaust duct.
5. Use clean-outs in the exhaust duct and clean periodically when needed.
6. **Never** exceed 0.3 inches w. c. (.75 mbar) static pressure in the exhaust duct.
7. Inside surface of the duct **must be smooth.**
8. Recommend pop rivets for duct assembly.

FOR BEST DRYING

FOR BEST DRYING:

1. Provide opening to the out-of-doors in accordance with the following:

For each dryer -

8 inches (204 mm) diameter exhaust requires 2 square feet (.1858 m²) make-up air.

12 inches (305 mm) diameter exhaust requires 4 square feet (.3716 m²) make-up air.

2. Use barometric shutters in the inlet air opening to control air when dryers are not running.

OTHER RECOMMENDATIONS

OTHER RECOMMENDATIONS

To assure compliance, consult local building code requirements.

TROUBLESHOOTING

TROUBLESHOOTING

Hot dryer surfaces, scorched clothes, slow drying, lint accumulations, or air switch malfunction are indicators of exhaust duct and/or make-up air problems.

Rules for Safe Operation of your Dryer

RULES FOR SAFE OPERATION OF YOUR DRYER

RULES

1. Be sure your dryer is installed properly in accordance with the recommended instructions.
2. **CAUTION**
Be safe - Shut main electrical power supply and gas supply off externally before attempting service.
3. **CAUTION**
 - a. **Never use dry cleaning solvents:** gasoline, kerosene, or other flammable liquids in the dryer.
FIRE AND EXPLOSION WILL OCCUR!
 - b. **Never put fabrics treated with these liquids into the dryer.**
 - c. **Never use these liquids near the dryer.**
 - d. **Always keep the lint screen clean;** a full lint screen may be a fire hazard.
 - e. **Never use heat to dry items that contain plastic, foam, or sponge rubber, or rags coated with wax or paint.** The heat may damage the material or create a fire hazard. Rubber easily oxidizes, causing excessive heat and possible fire. Never dry the above items in the dryer.
4. **Never let children play near or operate the dryer.** Serious injury will occur if a child should crawl inside and the dryer is turned on.
5. Never use the dryer door opening and top as a step stool.
6. Read and follow manufacturer's instructions on packages of laundry and cleaning aids. Heed any warnings or precautions.
7. Never tumble fiberglass materials in the dryer unless the labels say they are machine dryable. Glass fibers break and could remain in the dryer causing skin irritation if they become mixed into other fabrics.
8. **Reference** - Lighting and shutdown instructions and wiring diagrams are located on the rear wall of the dryer cabinet.
9. **The dryer must not be installed or stored in an area where it will be exposed to water and/or weather.**

Rules for Safe Operation of your Dryer



CAUTION

Synthetic solvent fumes from dry cleaning machines create acids when drawn through the dryer. These acid fumes cause rusting of painted parts, pitting of bright plated parts and completely removes the zinc from galvanized metal parts, such as the tumbler basket.

If the dry cleaning machines are in the same area as the tumbler, then the tumbler make-up air must come from a source free of solvent fumes.

NOTE

It is best to run a properly sized bag of rags and/or old towels through one or two cycles prior to drying in service. This process will remove any films or residual coatings left by the manufacturing process.

ENERGY SAVING TIPS

ENERGY SAVING TIPS

1. Install dryer so that you can use short, straight venting. Turns, elbows and long vent tubing tend to increase drying time. Longer dry time means the use of more energy and higher operating costs.
2. Operate dryer using full-size loads. Very large loads use extra energy. Very small loads waste energy.
3. Dry lightweight fabrics separately from heavy fabrics. You'll use less energy and get more even drying results by drying fabrics of similar weight together.
4. Clean the lint screen after each load. A clean lint screen helps give faster, more economical drying.
5. Don't open the dryer door while drying. You let warm air escape from the dryer into the room.
6. Unload your dryer as soon as it stops. This saves having to re-start your dryer to remove wrinkles.

ABOVE 2,000 FEET (610 m)

ELEVATIONS ABOVE 2,000 FEET (610 m)

Input ratings shown on the rating plate (serial tag) are for elevations up to 2,000 feet (610 m). For elevations above 2,000 feet (610 m), rating should be reduced at a rate of 4% for each 1,000 feet (305 m) above sea level.

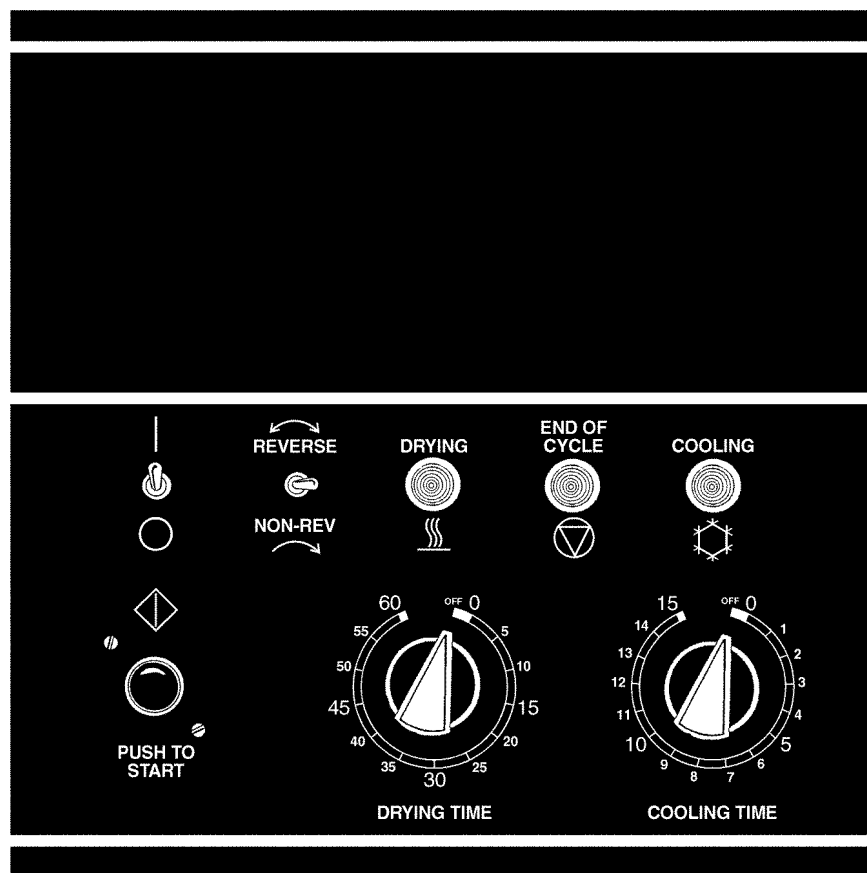


Fig. 1

Fig. 2 Temperature Selection


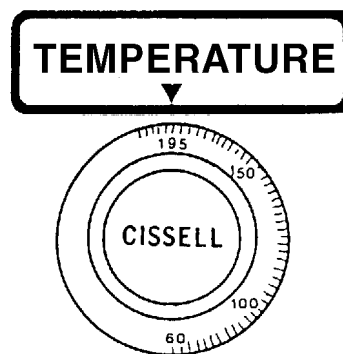


Fig. 3 Thermometer

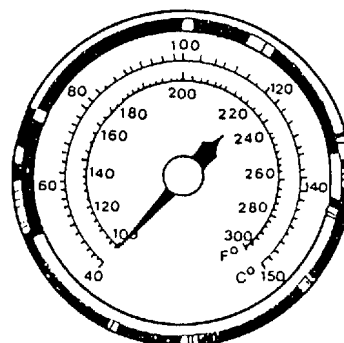

Operating Instructions - Two Timer Models

OPERATING INSTRUCTIONS - TWO TIMER MODELS


1. After loading the dryer tumbler with water washed clothes load, proceed to close the loading door. For better drying, do not load dryer with combination of garments that twist.
2. Turn the 60-minute drying timer to the desired drying time. The drying cycle light will be on and indicate the drying. The light shuts off when drying time is complete. (See figure 1 on page 30.)
3. Turn the 15-minute cooling cycle timer to the desired cool down time. (**Note: Dryer will not start unless some cooling time is selected!**). After the drying cycle is completed, then the cooling cycle time will automatically operate. The cooling light will be on and indicate the cooling of the clothes load. The light shuts off when cooling time is completed. (See figure 1 on page 30.)
4. **Temperature Selector** - Select temperature per type of load being dried in the dryer. (See figure 2 on page 30.)
High Heat - Mixed and heavy fabrics, set dial to 195° F (91° C).
Normal - Cottons and linens, set dial to 170° F (77° C).
Permanent Press Heat - Poly knit synthetics, blends, lightweight fabrics, set dial to 150° F (66° C).
Low Heat - Delicate, sheer fabrics, easy-to-dry, set dial to 135° F (58° C).
5. **Thermometer** - Use this with your temperature selection. Teach yourself what temperature is too hot or too cold. (See figure 3 on page 30.)
6. Turn switch to "start" position. (See figure 1 on page 30.)
7. Close the dryer door, but the basket will not rotate until the **PUSH-TO-START BUTTON** is pressed. Press in the **PUSH-TO-START BUTTON** (approximately 2 seconds) until the dryer starts running and then release button. (See figure 1 on page 30.)

What is happening to the drying operation:

- a. The fan motor will operate.
 - b. The basket will rotate.
 - c. The heat source will be energized.
 - d. The heated air mix with the water washed clothes to evaporate the moisture from the garments.
 - e. The thermostats will function to maintain a safe temperature throughout the drying cycle.
 - f. The heat will be shut off and the motor will continue to run to cool the dry load to a desired handling temperature.
8. When the drying timer completes its time, then the cooling timer will be energized and the cooling light will be "On". When the cooling light will stay "On" and the "End-of-Cycle" light will be "On". The "End-of-Cycle" light will go off when the "Start/Stop" switch is turned to "Off" or "O". At the end of the cool-down cycle, the clothes load is dry.
 9. To shut the dryer "Off", move the "Start/Stop" switch to "Off" or "O" position. This switch is a safety switch to immediately stop the dryer's operation.

Special Reversing Feature - Set the "Reversing/Non-Reversing" switch to "Reversing". See service manual for setting of time of each reversal. Reversing of the basket is designed for loads that twist (example - bed sheets and large mixed loads). "Non-Reversing" is for small or medium-size items that don't twist.

Moisture Control (Illustration)

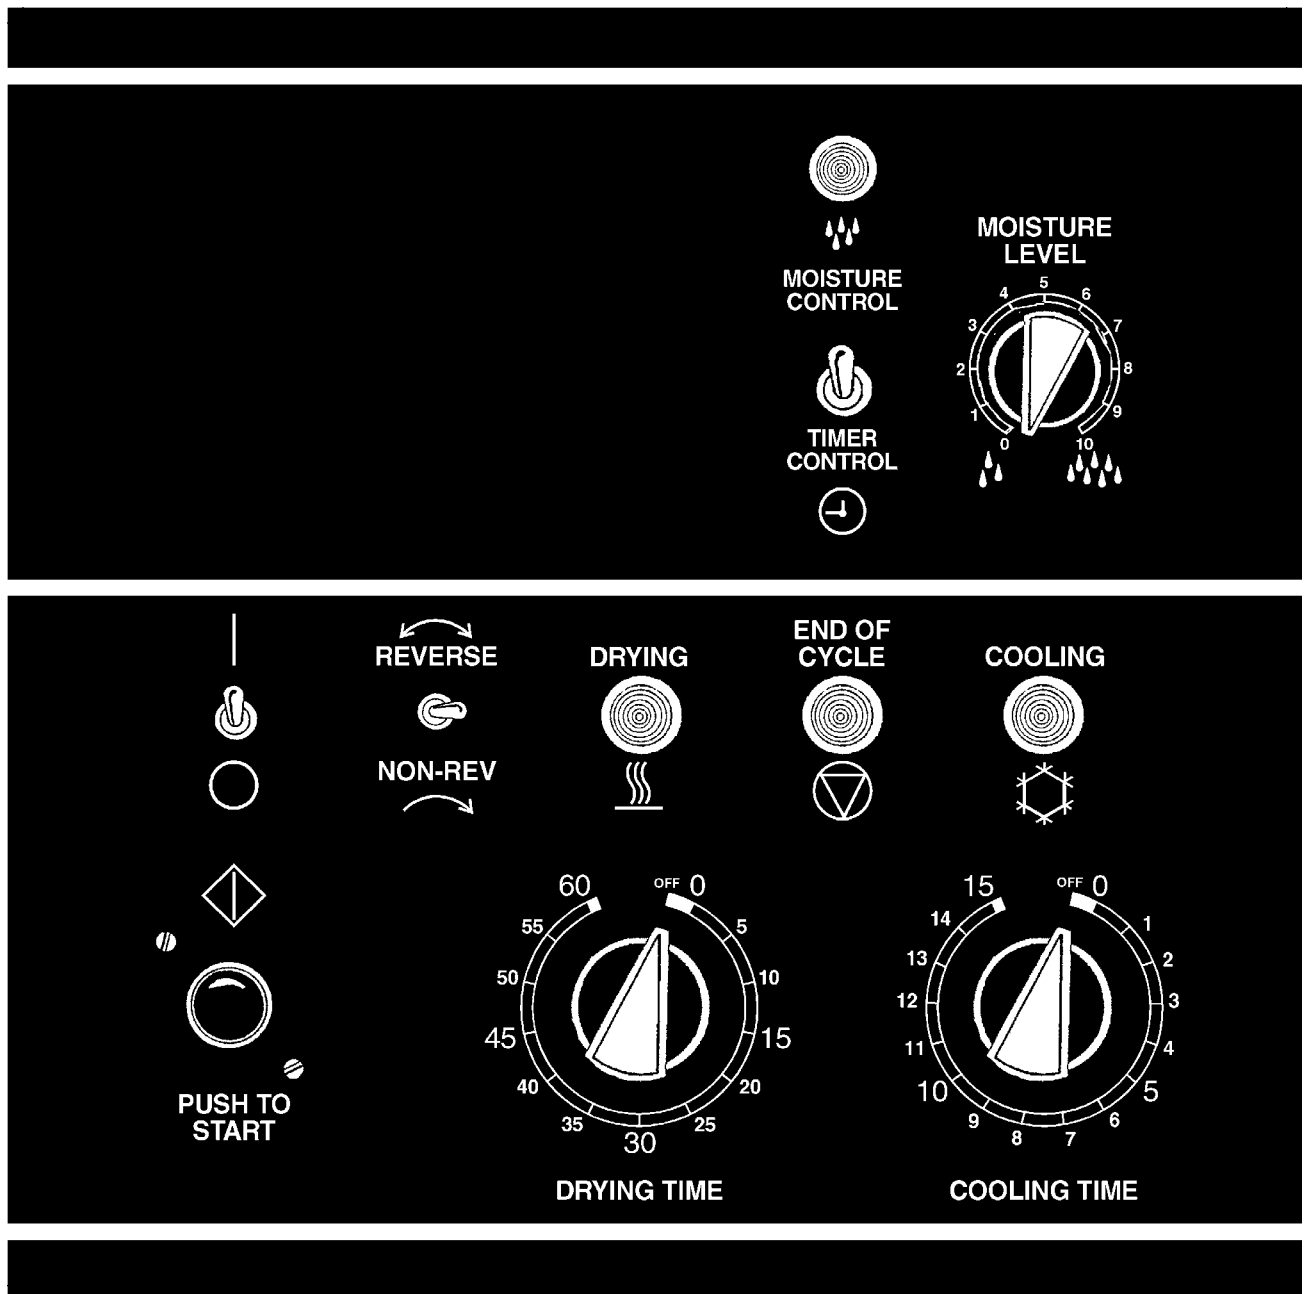

Operating Instructions - Moisture Control Models (Optional)

OPERATING INSTRUCTIONS - MOISTURE CONTROL MODELS (OPTIONAL)

NOTE:

Machines with Moisture Control option can be used like regular two-timer models. To dry with Two Timer method, flip switch on Control Panel to "Time Drying". To dry with the Moisture Control method, flip the switch to "Automatic Drying". The indicator light will be on while the machine is in operation.

1. After loading the dryer tumbler with water washed clothes load, close the loading door. For better drying, do not load dryer with combination of garments that twist.
2. Select desired Moisture level to remain in "the load from the selector switch on the Control Panel (see page 26). The numbers are relative with "10" being the most wet and "0" being the most dry. After a number of loads have been run and desired moisture level has been determined, record and reuse the same setting on similar loads.
3. Turn the 15-minute cooling cycle timer to the desired cool down time. After the drying cycle is completed, then the cooling cycle time will automatically operate. The cooling light will be on and indicate the cooling of the clothes load. The light shuts off when cooling time is completed. (See page 26.)
4. **Temperature Selector** - Select temperature per type of load being dried in the dryer. (See page 23.)
High Heat - Mixed and heavy fabrics, set dial to 195° F (91° C).
Normal - Cottons and linens, set dial to 170° F (77° C).
Permanent Press Heat - Poly knit synthetics, blends, lightweight fabrics, set dial to 150° F (66° C).
Low Heat - Delicate, sheer fabrics, easy-to-dry, set dial to 135° F (35° C).
5. **Digital Temperature Read Out** - Use this with your temperature selection. Note what temperature is too hot or too cold. (See figure 1 on page 23.)
6. Turn switch to "ON" or "I" position. (See page 26.)
7. Close the dryer door. The basket **will not rotate** until the **PUSH-TO-START BUTTON** is pressed. Press the **PUSH-TO-START BUTTON** until the dryer starts running (approximately 2 seconds) and then release button. (See figure 1 on page 26.)
8. The machine cycle will stop drying and switch to cool-down when the desired set moisture level has been reached. The machine will run for the amount of time set on the cool-down timer.

Service Savers

TROUBLESHOOTING

To help you troubleshoot the dryer, we list below the most common reasons for service calls and some answers to the problems.

Before you call service, please review the following items:

DRYER WON'T START

DRYER WON'T START

1. Is the door completely closed?
2. Are the controls set to the “**on**” position?
3. Did you push the “**start**” control?
4. Has a fuse blown or a circuit breaker tripped?
5. Are the fuses tight?
6. Check for low voltage.

DRYER WON'T HEAT

DRYER WON'T HEAT

1. Is the dryer set for “**cooling time**” rather than “**drying time**”?
2. Are the gas valve in the dryer and the valve on the main gas line turned on?
3. Check for low or intermittent **gas pressure**.

CLOTHES ARE NOT SATISFACTORILY DRY

CLOTHES ARE NOT SATISFACTORILY DRY

1. Timed cycle - Did you allow enough heating time before the cool-down part of the cycle?
2. Is the lint screen blocked?
3. Is the exhaust duct to the outside clean and not blocked? (A blocked exhaust will cause slow drying and other problems.)

GAS DRYER IGNITION

GAS DRYER IGNITION

Refer to the page on “Instructions for the Direct Ignition System Operation”. Check to see if the manual gas valve is open. Then reset the dryer controls. **All panels, covers, and doors must be in place and closed before starting the dryer.**

VERY IMPORTANT

When calling the factory for service, always refer to the model number, product number and serial number (found on the rating plate of the dryer).

Troubleshooting Chart

TROUBLE	CAUSE	REMEDY
Dryer runs, but no heat.	Line fuse or heater circuit fuse blown to unit.	Replace fuse.
	Defective door switch.	Replace door switch.
	Air switch not operating.	Clean out lint compartment daily. Check back draft damper for foreign objects, lint accumulation or other causes that may prevent damper from opening. Check duct work for lint build-up. Check installation sheet to insure that duct work and make-up air openings are adequately sized. Check exhaust outlet. If a screen has been improperly installed on the outlet, it may be clogged with lint or frozen during winter. Never install a screen on the exhaust outlet. Vacuum within dryer drops to .09" w. c. (.225 mbar), or less, for normal operation of dryer, vacuum reading (in inches of water column) should range between .15 and .3 inches (.38 and .75 mbar). Vacuum reading can be made with a vacuum U-gauge by removing a sheet metal screw in the front panel of dryer, and inserting the rubber tube of the vacuum gauge into screw opening.
	Air switch out of adjustment.	See air switch adjustment sheet in service section.
	Air switch defective.	Replace air switch.
	Gas pressure too low.	Check manifold pressure and adjust to pressure specified on rating plate. If this pressure cannot be obtained, have gas supplier check main pressure.
	Improper orifice.	Dryer is orificed for type of gas specified on rating plate. Check with gas supplier to determine specifications for gas being used. If different from rating plate, contact factory and obtain proper orifices.
	Electric power to heating unit turned off.	Turn power on.

Troubleshooting Chart

TROUBLE	CAUSE	REMEDY
Dryer runs, but no heat (continued).	Defective relay.	Replace relay.
	Defective thermostat.	Replace thermostat.
	Defective safety overload thermostat.	Replace thermostat.
	Lint compartment door open.	Close door.
	Incorrect voltage.	Check for correct control voltage - 24V.
	No voltage.	Check power supply, check secondary voltage on transformer, check wiring and wiring diagram.
	Lint door OPEN.	CLOSE Lint Door.
	Defective Gas Valve.	Replace Valve Assembly.
	Gas turned OFF.	Turn Manual Gas Valve ON.
	Spark Igniter not igniting gas.	Check ground.
Main burners burning improperly.	Burner air shutters closed.	Open for blue flame.
	Dirt in burner.	Blow out.
	Gas pressure too high.	Check rating plate for correct gas pressure.
	Orifice too large.	Send to factory for correct orifices.
	Restricted or blocked exhaust.	Clean exhaust.
Low gas flame or high gas flame.	Incorrect main burner orifices.	Replace orifices -- check factory for correct size.
Dryer too hot.	Incorrect main burner orifices.	Replace orifices -- check factory for correct size.
	Inadequate make-up air.	Make-up air must be 4 to 6 times the exhaust area of the dryer.
	Lint accumulated.	Remove lint.
	Exhaust duct dampers.	Must be full open or replace.
	Gas pressure too high.	Adjust gas pressure as specified on rating plate.
	Partially restricted or inadequately sized exhaust system.	Check installation sheet in service section for recommended sizes. Check for and remove obstructions or lint build-up from duct work. Never use smaller size exhaust duct. Always use larger size exhaust duct.
	Defective thermostat.	Replace thermostat.

Troubleshooting Chart

TROUBLE	CAUSE	REMEDY
Motors will not start.	No power.	Check fuses on circuit breakers. Make sure main control switch is ON.
	Incorrect power.	Check power source; voltage, phase, and frequency must be the same as specified on electrical rating plate.
	Time off.	Turn timer clockwise to desired time setting.
	Loose wiring connections.	Check wire connections in electrical box on rear of dryer.
	Defective starting relay.	Check coils and contacts.
	Motor internal overloads have tripped (only on MTR30X series).	Reset the internal overloads on the motor by pressing the button located on the body of the motor.
Motor tripping on thermal overload.	Low voltage.	Check voltage at motor terminals. Voltage must be within (plus or minus) 10% of voltage shown on motor rating plate -- if not, check with local power company for recommended corrective measures.
	Inadequate wiring.	Check with local power company to insure that wiring is adequately sized for load.
	Loose connections.	Check all electrical connections and tighten any loose connections.
	Inadequate air.	Check installation sheet in service section for recommended make-up air openings.
	Poor housekeeping.	Clean lint accumulation on and around motors.
Basket motor will not run.	Loading door open.	Close door.
	Door switch out of adjustment.	Adjust switch by removing cover and bend actuator lever to clear switch button 3/8" (10 mm) with cover in place.
	Defective door switch.	Replace switch.
	Defective basket motor contactor.	Replace contactor.
Basket will not reverse.	Reversing timer.	Adjust timer (see page in Maintenance section).
		Check timer to see if working properly.

Troubleshooting Chart


TROUBLE	CAUSE	REMEDY
Dryer does not stop at end of time period (6).	Defective timer.	Replace timer.
Dryer runs, but no steam to coils.	Valve closed.	Check all valves in steam supply and return -- make sure they are open.
	Steam trap blocked.	Remove and clean. Replace if defective.
	Solenoid valve.	On dryers using solenoid temperature control, check operation of solenoid valve by advancing thermostat.
	Thermostat.	On dryers using solenoid temperature control, thermostat controls operation of solenoid valve. If defective, replace thermostat.
	Check valve installed incorrectly.	Check for inlet and outlet marking on check valve, and invert if necessary.
	Strainer clogged.	Remove plug and blow down strainer or remove and clean thoroughly if heavily clogged.
Water in steam line.	Steam piping installed incorrectly.	Check piping per steam installation instructions.
	Trap not functioning.	Check trap for size and capacity. If dirty and sluggish, clean thoroughly or replace. Check return line for high back pressure, or another trap charging against the trap functioning improperly.
Basket motor runs, but basket will not revolve.	V-Belt broken.	Replace V-Belt.
	V-Belt loose.	Adjust belt tension.
	Motor Pulley loose.	Tighten Set Screw.
	Basket overloaded.	Remove load.
Dryer noisy or vibrating.	Not leveled.	Check manual for proper leveling procedures.
	Fan out of balance.	Accidental damage to the fan blade can change the dynamic balance. Damaged fans should be replaced.
	Basket rubbing.	Adjust basket clearance.
	V-Belt sheaves.	Tighten Set Screws, make sure sheaves are in proper alignment.
	Belt.	Adjust belt tension.
	Foreign objects.	Occasionally screws, nails, etc., will hang in the basket perforations and drag against the sweep sheets surrounding the basket. Such foreign objects should be removed immediately.

Direct-Spark Ignition Operation

DIRECT SPARK IGNITION OPERATION

1. When a call for heat is received from the control supplying 24VAC to the Ignition Control Module, the pre-purge delay timer begins. This delay time allows any air/sediment to be ejected prior to burner ignition. Following the pre-purge delay period, the gas valve is energized and the spark ignitor sparks for the trial ignition period.
2. When a flame is detected during the trial for ignition period, the spark ignitor shuts off and the gas valve remains energized.
3. If no flame is detected by the Flame Sense Circuit, the Ignition Control Module will go into safety lockout. The valve will be turned off immediately. If the module has multiple retries and no flame is detected, the gas valve is de-energized and the module goes into an interpurge delay. After this delay, the module will attempt another trial for the ignition period. This will continue until the number of retries has been used up. At the time, the module will go into safety lockout.
4. Recovery from safety lockout requires one of the following:
 - a. A manual reset by opening and closing the loading door.
 - b. After one hour if the Control Thermostat is still calling for heat, the module will automatically reset and the trial for ignition period will start over.
5. Opening the loading door will cause the flame to extinguish. Closing the door and starting the dryer will restart the trial for ignition period.
6. Once the Control Thermostat has been satisfied and/or the Drying Timer has been timed out, the Ignition Control Module(s) will be de-energized, the gas valve(s) will be de-energized and the flames will extinguish.
7. The machine will continue to run in a cooldown mode without heat. This process will cool the load to the touch and help to eliminate wrinkling.

DIRECT SPARK IGNITION OPERATION FLOW CHART

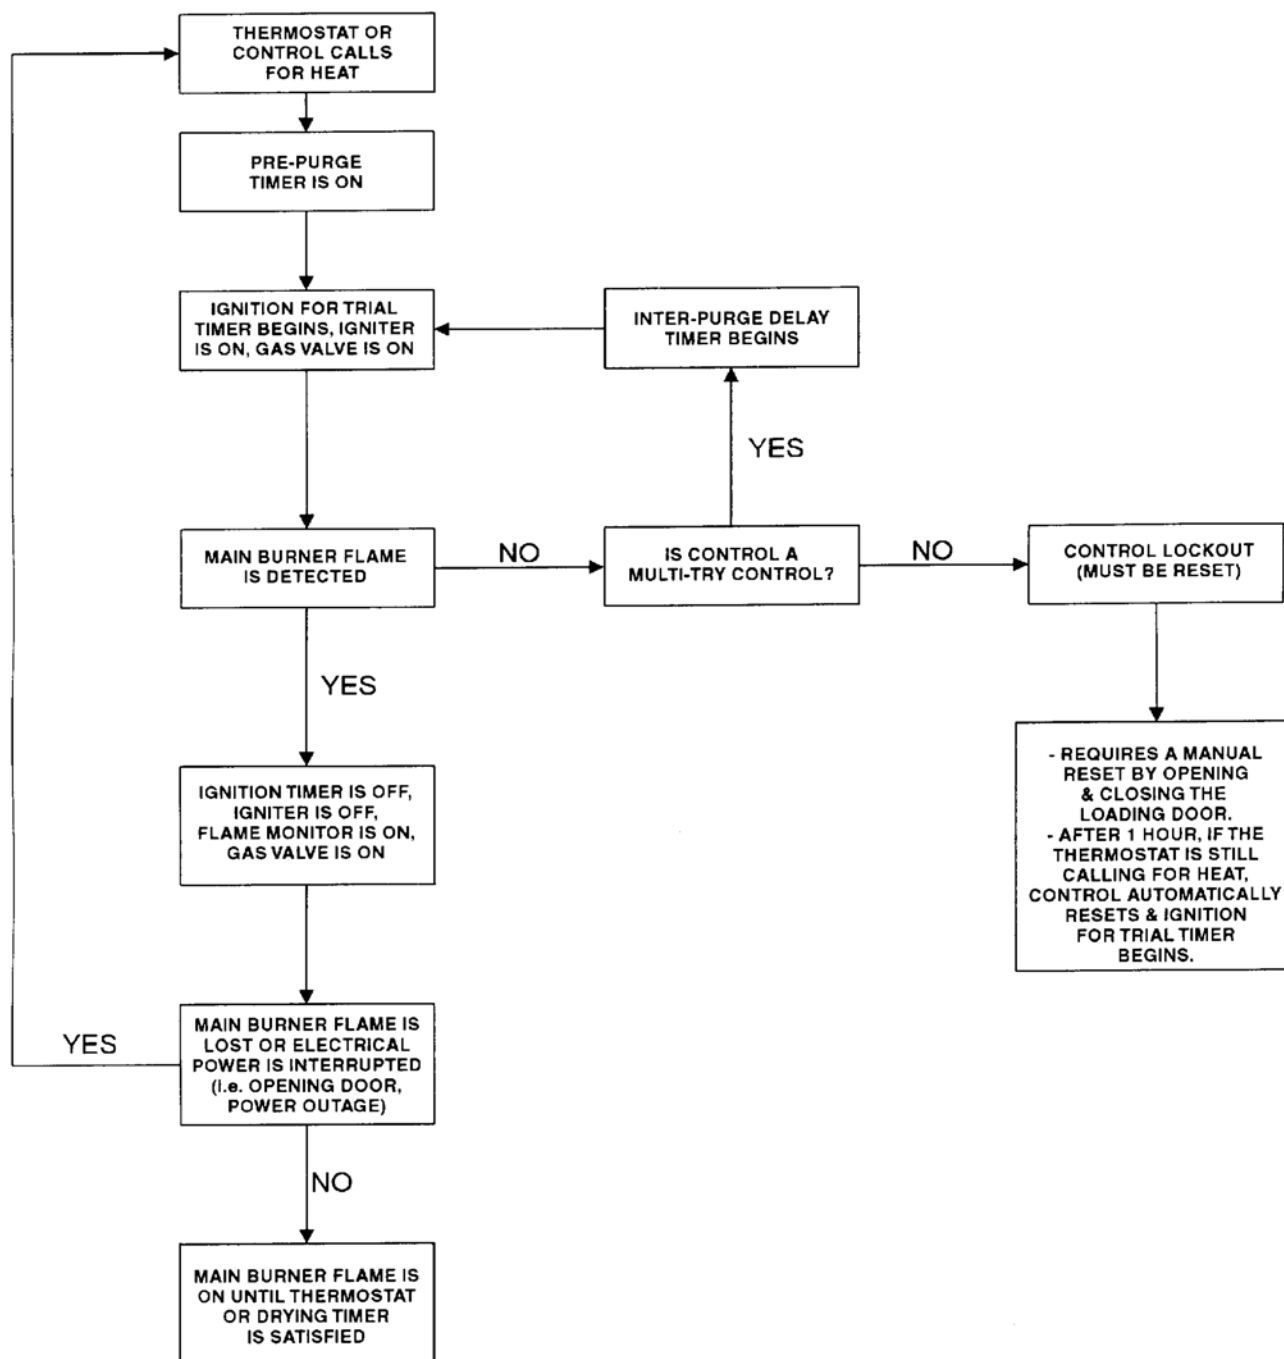

MAINTENANCE

MAINTENANCE

1. **CLEAN LINT TRAP DAILY.** Remove lint before starting day's operation. A clean lint trap will increase the efficiency of the dryer, as the moisture-laden air will be exhausted more quickly.
2. **CLEAN BASKET AND SWEEP SHEETS.** Clean periodically and/or as often as required. The basket and sweep sheets are easily accessible by removing the front panel of the dryer.
3. **GEAR REDUCER.** Maintain the correct oil level. See separate page on Gear Reducer Operation and Maintenance, for detailed information.
4. **PULLEYS AND BELTS.** Keep belts clean. Oil and dirt will shorten the useful life of the belt. Never allow a belt to run against the belt guard. Check periodically for alignment. Pulley shafts must be parallel and the grooves must be aligned. Check and re-tighten pulley set screws periodically. Check belt tension periodically. Lower motor to increase tension by adjusting the nuts fastening the motor plate to the rod connected to the Gear Reducer.
5. **ELECTRIC MOTORS.** Keep motors clean and dry. Motors having ball bearings are packed with sufficient grease for approximately five years of normal operation. After five years, the bearings and housing should be cleaned thoroughly. Repack each bearing and the cavity in back of the bearing on-third full with Chevron Grease No. SR1-2.

Motors having wool packed sleeve bearings are oiled at the factory for one year of normal operation. After one year, add annually one-half teaspoon of electric motor oil or S.A.E.#10 to each bearing. For 24 hour per day operation, add one teaspoon of oil annually.

If motors overheat, check voltage and wiring. Low voltage, inadequate wiring, and loose connections are the main cause of motor failure.

Maintenance—General


MAINTENANCE

MAINTENANCE (continued)

6. **STEAM HEATED UNITS.** Keep steam coils clean. Check periodically and clean often, as required. Remove lint and dirt build-up from fins. Dirty fins decrease the efficiency of steam heated units.
7. **GAS BURNERS.** Keep burners clean. Check and clean often.
8. **GAS PRESSURE.** Gas pressure should be checked periodically per specifications on separate page.
9. **EXHAUST SYSTEM.** Periodically check and clean.
10. **VOLTAGE.** Voltage should be checked periodically per rating plate located on rear wall of dryer.
11. **COMBUSTION (MAKE-UP) AND VENTILATING AIR.** The flow should not be obstructed.
12. **DRYER AREA.** Keep dryer area clean of lint and free from combustible materials, gasoline, and other flammable liquids/vapors

Burner Air Inlet Adjustment (with Illustration)

BURNER AIR INLET ADJUSTMENT

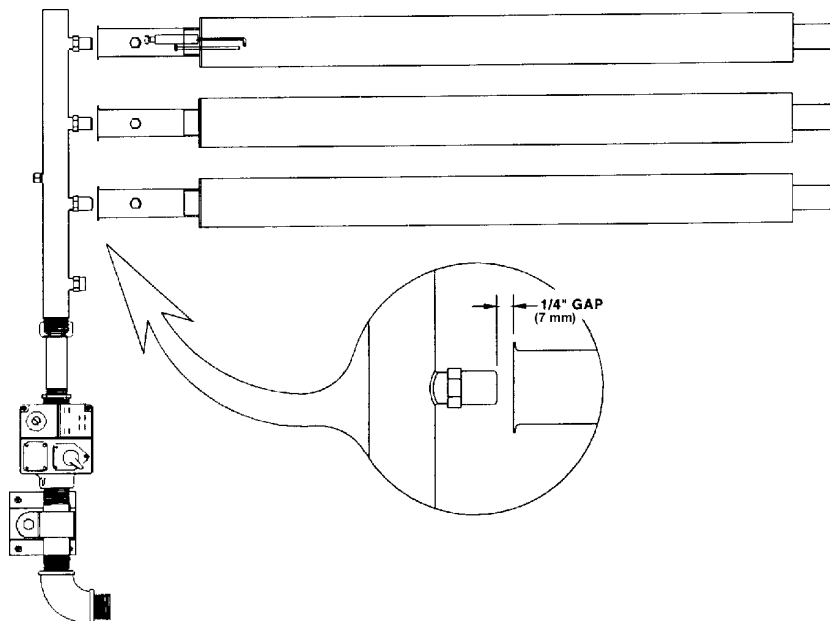

CAUTION

Please insure that there is a 1/4" (7 mm) gap between the orifice and burner opening.

Basket Alignment for 150 lb. Dryers (Illustrations)

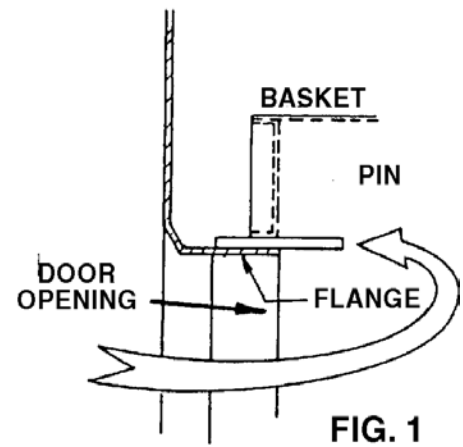
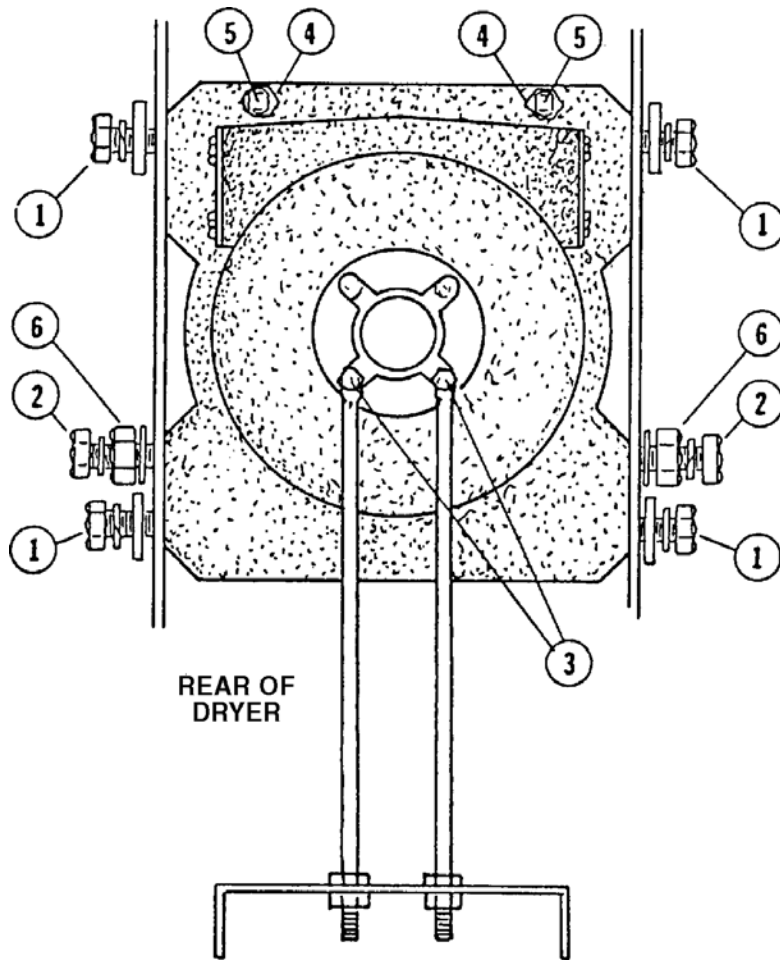


FIG. 1

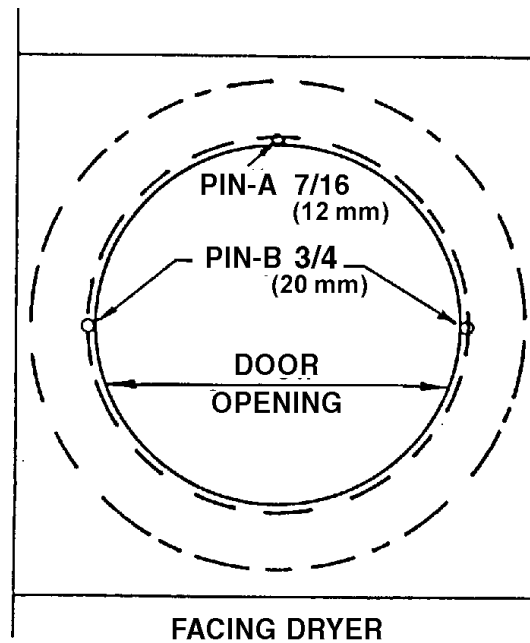


FIG. 2

Basket Alignment for 150 lb. Dryers

INSTRUCTIONS FOR ALIGNING BASKETS ON 150 LB. DRYERS


INSTRUCTIONS

1. Loosen bolts number one (1) through five (5).
2. Place pin "A" in position shown in figures 1 and 2.
3. Check pins "B" at position shown in figures 1 and 2 for equal clearance.
4. If pin "B" clearance is unequal, adjust at nut #6.
5. When clearance at pin "B" is correct, tighten bolts #1 in the following order, as viewed from rear of dryer, top right, bottom left, top left and bottom right.
6. Tighten bolts #5 until flush against back of dryer. Tighten lock nut #4 to secure bolt #5 in position.
7. Tighten bolts #2 and #3.
8. Remove pin "A" and check for proper clearance at points "A" and "B". If clearance is incorrect, repeat the above steps.

NOTE

Use short sections of round steel rod for pins or drill bits may be used in place of round rod.

Shimming the Basket and Spider Assembly (Illustration)

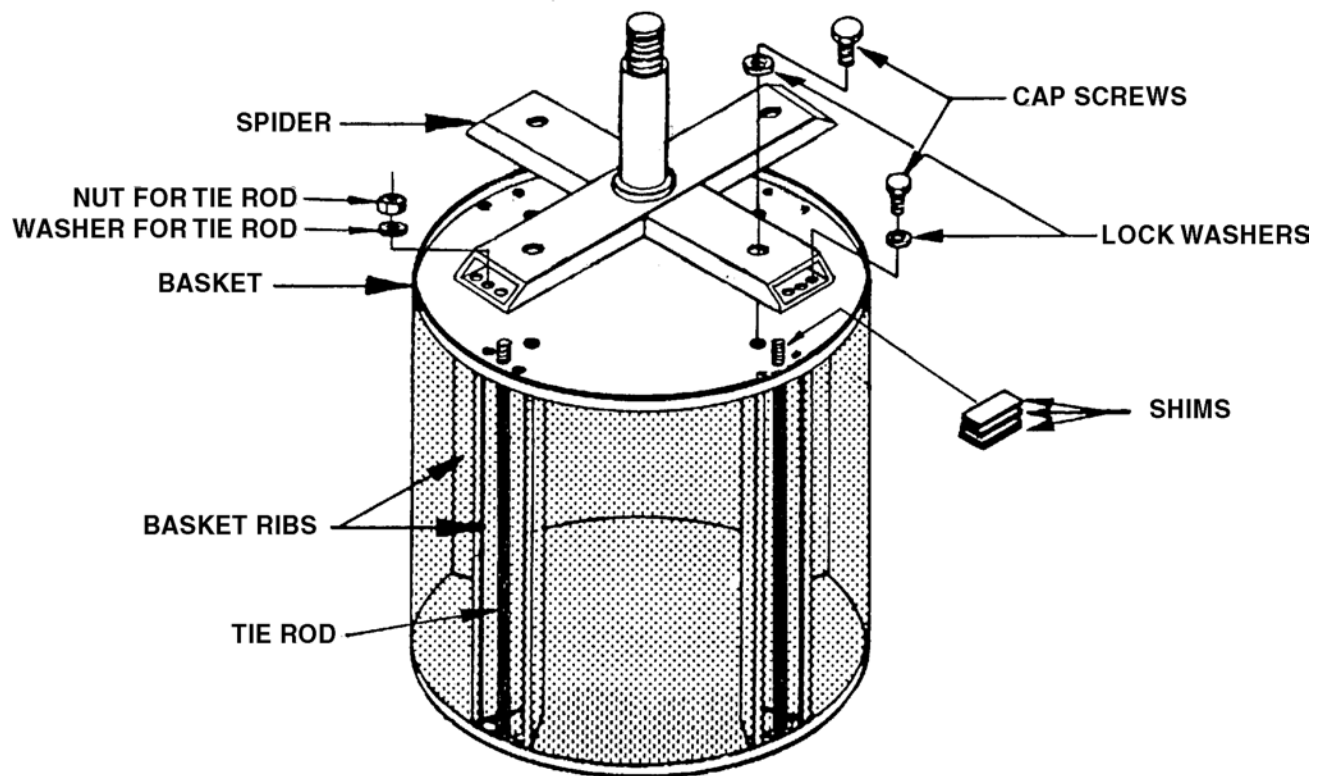




Shimming the Basket and Spider Assembly

INSTRUCTIONS FOR SHIMMING THE BASKET AND SPIDER ASSEMBLY

This procedure is normally necessary when replacing either the basket or the spider assembly on any dryer. The alignment of these two parts is crucial in assuring a true running basket.

- A.** Align the basket as per instructions on the previous page.
- B.** Rotate the basket to determine where the most out-of-round point is (where the basket scrapes or comes closest to scraping the sweep sheet).
- C.** Mark this position and the nearest rib to this position. If it is between two ribs, both ribs may need to be shimmed.
- D.** Remove the basket from the dryer (do not loosen the alignment bolts).
- E.** With the basket on the floor (spider up), loosen the cap screws and tie rod nuts enough to insert one or two shims between the spider leg and the basket at the marked position. With shims in place, tighten the screws and nuts.
- F.** Install spider and basket assembly and check again.
- G.** If basket is still out-of-round, start at *Step B* and repeat procedure.
- H.** When shimming is completed, re-align basket.

Air Switch Adjustment

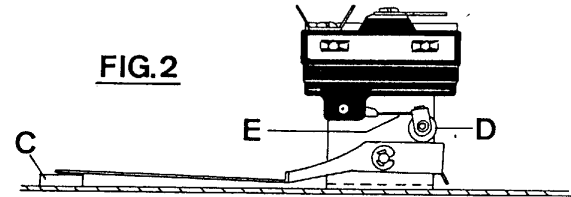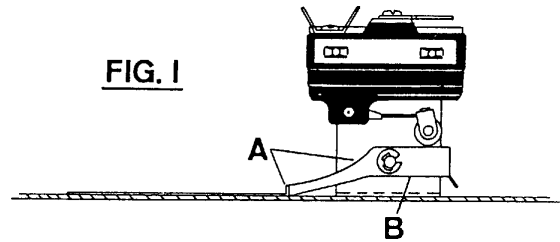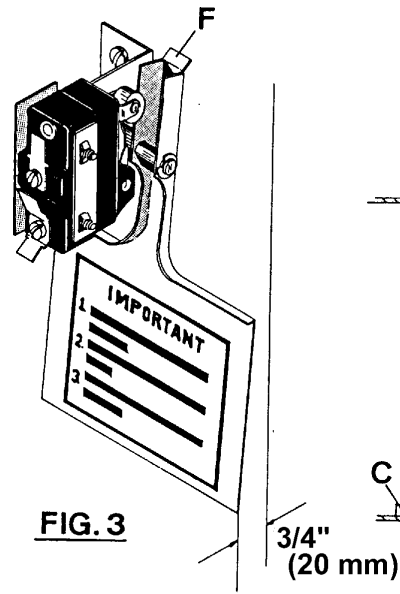

AIR SWITCH ADJUSTMENT

1. Shut off current; disconnect leads and remove air switch.
2. Lay air switch assembly on flat surface. Adjust air blade at "A" (figure 1) so that air blade lays flat and surface "B" is parallel to the flat surface.
3. Place 3/8" x 5/8" (10 mm x 16 mm) spacer bar or equivalent "C" (figure 2) under air blade in position shown; hold switch mounting bracket firmly and adjust switch actuator "D" with needle nose pliers at "E" by twisting actuator right or left, whichever is needed, so that switch closes when end of air blade engages bar "C".
4. Maximum opening of air switch must be no greater than 3/4" (20 mm) (figure 3). Bend tab "F" in or out to maintain this dimension.
5. Re-install air switch assembly on rear of dryer.
6. Re-check operation of air blade. Switch must close before air blade engages face of opening and re-open before stop "F" engages.

Dryers with Reversing Control Timer

INSTRUCTIONS FOR DRYERS WITH REVERSING CONTROL TIMER

Instructions

In operation, coasting of basket increases, making it necessary to readjust reversing timer.

CAUTION

Failure to do this will cause the thermal overload units for the basket to cut-out unnecessarily and probably damage the gear reducer.

Adjustment of Reversing Timer Dwell Time

CAUTION

Dryer power supply must be shut off before adjusting timer.

The dwell time is the time from when the motor turns “off”, to when it turns “on” again in the opposite direction.

Turning the dwell adjustment knob counter-clockwise increases the dwell time and turning it clockwise decreases the dwell time.

Recommended dwell time for the basket to stop completely is 5 to 7 seconds. Minimum basket stopping time is 4 seconds.


NOTE

Select non-reversing or reversing before starting dryer.

NOTE

Fan rotates counter-clockwise as viewed from back end of motor. See arrow on motor support. to change rotation, reverse power leads L1 and L2.

Dryers with Reversing Control (Illustration)

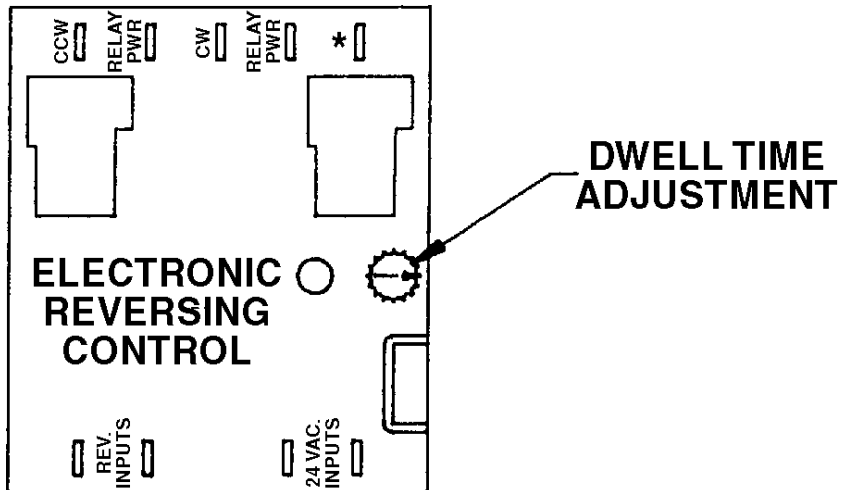

INSTRUCTIONS FOR DRYERS WITHOUT REVERSING CONTROL FAN AND BASKET ROTATION

Instructions

NOTE

Fan rotates counter-clockwise as viewed from back end of motor. See arrow on motor support.

Basket rotates counter-clockwise as viewed from back end of motor. See arrow on motor support.

Basket rotates counter-clockwise as viewed from front of tumbler.

To change rotation of both fan and basket, reverse power leads L1 and L2.

To change rotation of fan only, reverse motor leads F1 and F2.

To change rotation of basket only, reverse motor leads B1 and B2.

Large Gear Reducer Maintenance

LARGE GEAR REDUCER MAINTENANCE


LARGE GEAR REDUCER MAINTENANCE

Before placing the dryer in operation, check the oil level. If the oil level is correct, it can be checked by removing the fill overflow plug on the right hand side of the gear reducer (facing rear).

If oil must be added, remove the vent plug at the top of the gear reducer and add as needed.

CHANGE OIL ONCE EVERY 6 MONTHS.


Parts—Front Panel and Door Assembly

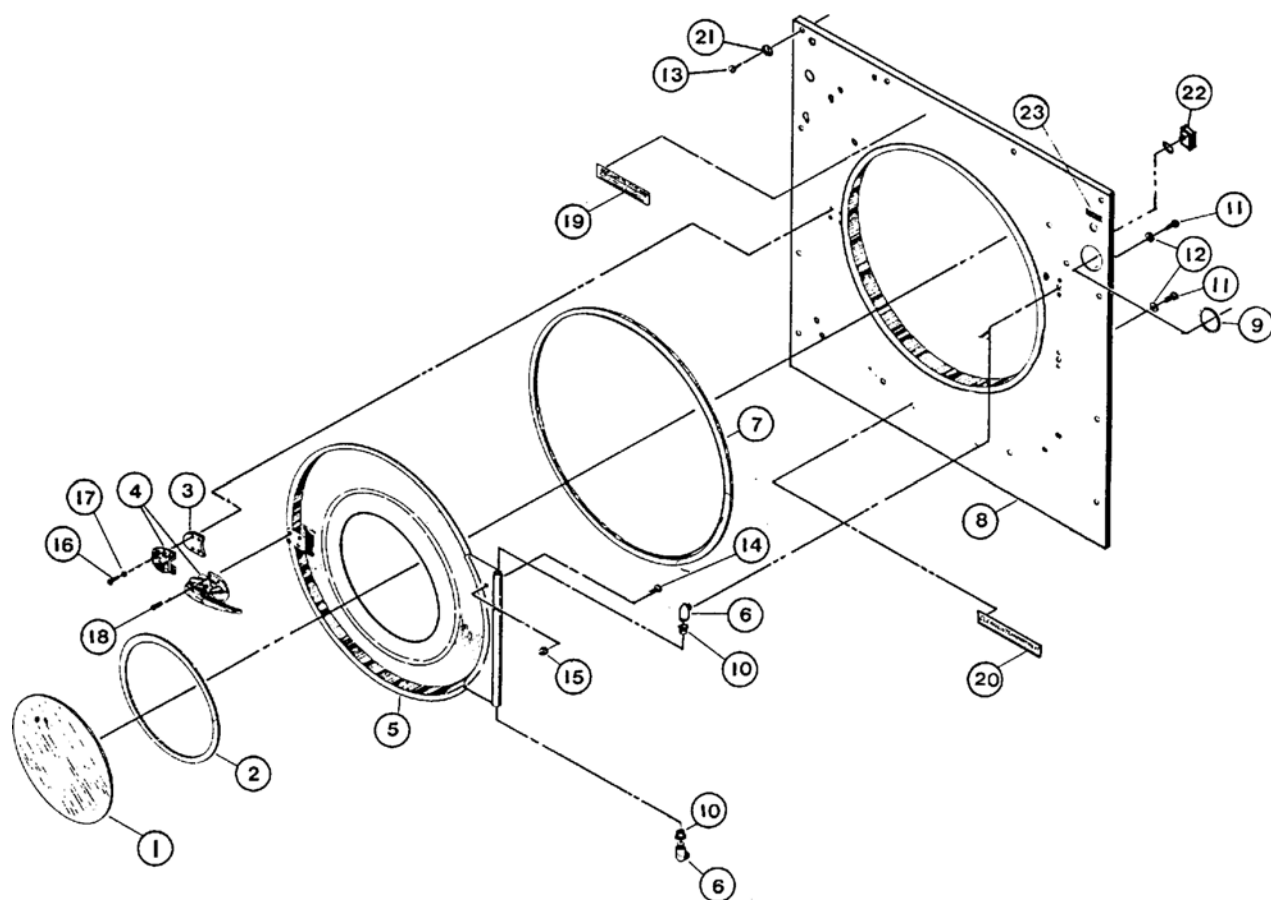

TU14035 - "C" MODEL

1	TU7862	Door Glass 20 1/4"	14	TU4839	#10 - 32 x 3/8" Screw
2	TU7169	Gasket	15	TU4840	#10 - 32 Crown Nut
3	TU5503	Door Latch Spacer	16	TU2687	#8 - 1/2" Ph. Head Screw (4 each)
4	TUA2319H	Door Latch with Keeper	17	TU3785	#8 Cup Ex. T. Lockwasher (4 each)
5	TU14483	Door W/A (specify color)	18	TU2686	#8 - 32 x 3/8" Ph. Head Screw (4 each)
6	TU2236	Hinge Post (2 each)	19	TU7855	Instruction Label
7	TU5288	Door Seal	20	TU7858	Clean Lint . . . Label
8	TU14034	Front Panel (specify color)	21	RC349	1/4" Lockwasher
9	TU2641	Thermometer Gasket	22	FG140	Door Switch
10	PIF172	Hinge Post Bearing (2 each)	23	TU5458	Temp. Label "C" Only
11	TU2836	5/16" - 32 x 3/8" Hex Screw (2 each)			
12	TU3212	5/16" I.T. Lockwasher (2 each)			
13	TU3209	#14 x 5/8" Pan Head Machine Screw			

150 lb. Dryer (Front of Dryer) (Illustration)

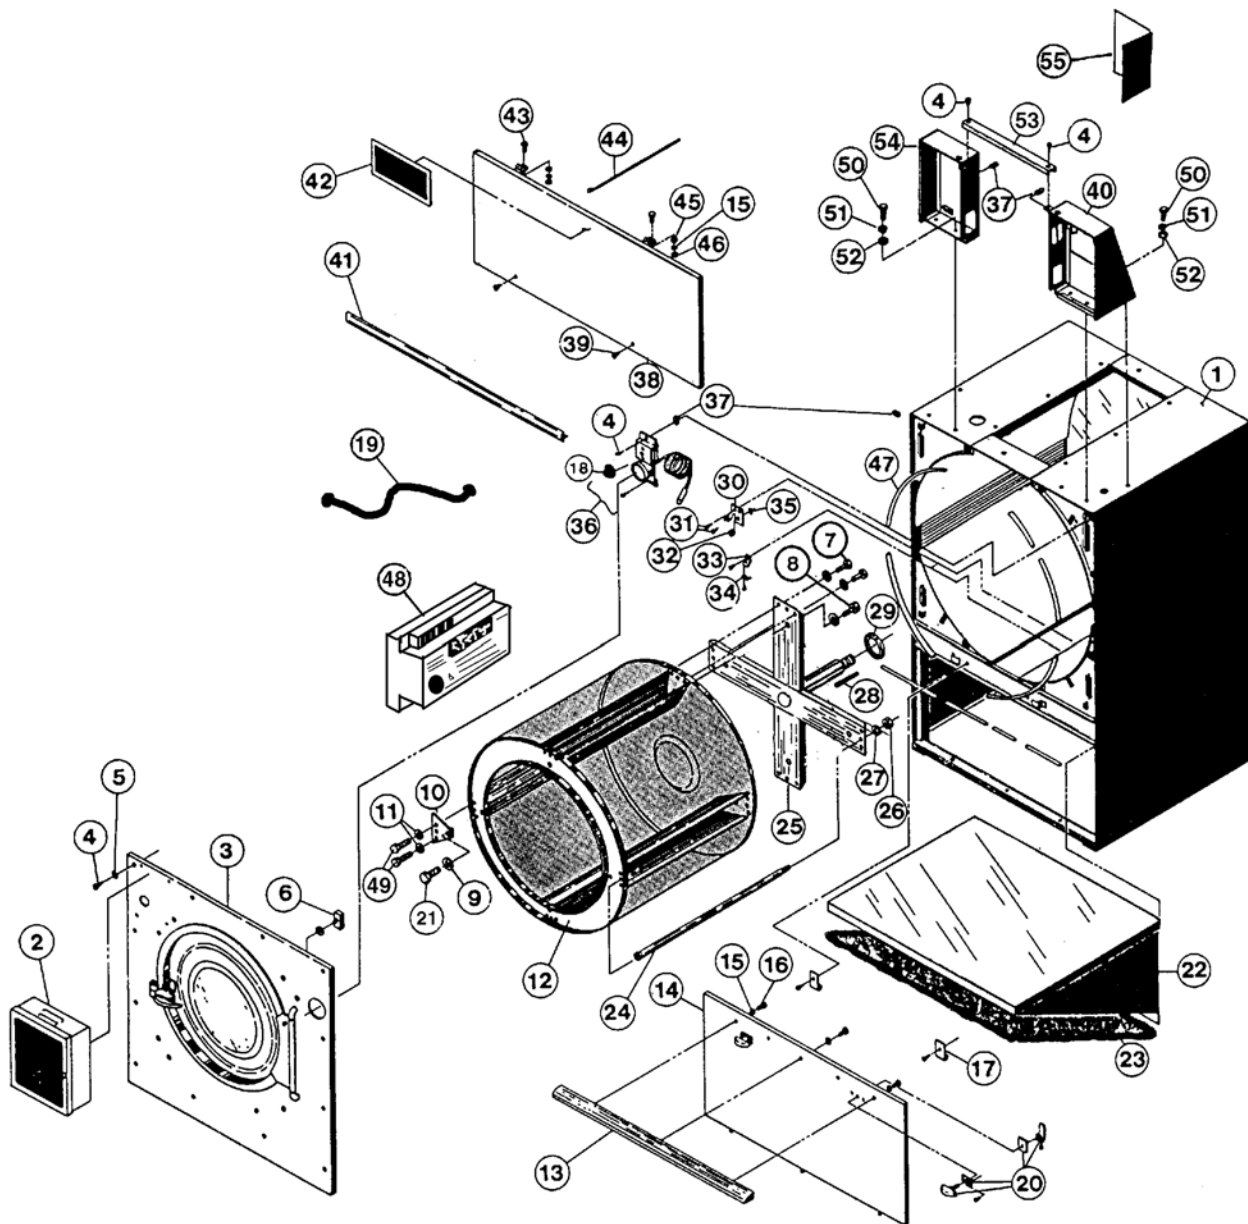

Parts—150 lb. Dryer (Front of Dryer)


1	TU9422	Jacket Weldment	27	TU3418	5/8" Lockwasher
2	- - - -	Control Box*	28	TU9975	Worm Gear Key
3	TU14035	"C" Panel and Door Assembly* (specify color)	29	TU5290	Felt Seal
4	TU6854	#14 x 3/4" Pan Head Screw	30	TU2486	"C" Thermostat Bracket
5	RC349	1/4" I.T. Lockwasher	31	TU7733	#8 - 18 x 1/2" Self Drill Screw (Pkg. of 6)
6	FG140	Door Switch	32	TU2477	"C" Thermostat
7	TU2663	1/2" - 20 x 2" Cap Screw	33	TU5337	Thermostat Bulb Support
8	TU2665	5/8" - 28 x 2" Cap Screw	34	C257	5/16" Clamp
9	TU5801	5/8" I.T. Lockwasher	35	TU3801	Speed Nut
10	TU5397	Outside Rib Plate	36	TU6030	"C" Temperature Assembly
11	OP251	1/2" I.T. Lockwasher	37	LB74	#14 Speed Nut
12	TU9609	"C" Basket Only	38	TU9575	Access Door (specify color)
	K325	"C" Basket/Spider Kit	39	FG343	Screw Fastener
13	TU9444	Door Handle	40	TU14056	Right Control Box
14	TU9472	Lint Trap Door Panel (specify color)	41	TU9610	Chrome Trim
	TU9607	Lint Trap Door Complete Parts 13, 14, 15, 16, & 20 (specify color)	42	TU8013	Cissell Nameplate "C"
15	FB187	#10 Lockwasher (Pkg. of 6)	43	TU3479	#10 - 32 x 7/16" Tr. Head Screw
16	F557	#10 - 24 x 3/8" Round Head Screw	44	TU5739	Support Rod
17	TU6159	Support Clips (Pkg. of 2)	45	P104	1/4" Cut Washer (Pkg. of 6)
18	TU490	"C" Knob—Fahrenheit	46	TU2842	#10 - 32 Hex Nut (Pkg. of 6)
	TU491	"C" Knob—Centigrade	47	TU5302	Sweep Sheet Gaskets
19	TU13629	Cable, Hi-Voltage DSI	48	TU13629	Direct Spark Igniter
20	K169	Handle Assembly Kit	49	TU2662	1/2" - 20 x 1 1/2" Cap Screw
21	TU2664	5/8" - 18 x 1 1/2" Cap Screw	48	TU13409	Spark Ignition Mount, 3 Trial (Gas only)
22	TU10345	Lint Trap Hood Assembly		TU13627	Spark Ignition Mount, 1 Trial (Gas only)
23	K121	Frame Only	50	TU3246	3/8" - 16 x 1 Hex Head Screw (Pkg. of 6)
	K368	Screen Only	51	VSB134	3/8" Lockwasher (Pkg. of 6)
24	TU5911	Tie Rod	52	IB140	3/8" Cut Washer
25	K321	"C" Spider Assembly**	53	TU9522	Top Brace
26	TU2881	5/8" - 18 Hex Nut	54	TU14126	Left Control Box

* See separate page for exploded view

** Consists of: Spider, Key, Jam Nuts,
Felt Gasket

150 lb. Dryer (Rear of Dryer) (Illustration)

MODEL: L50CD42 GAS, STEAM

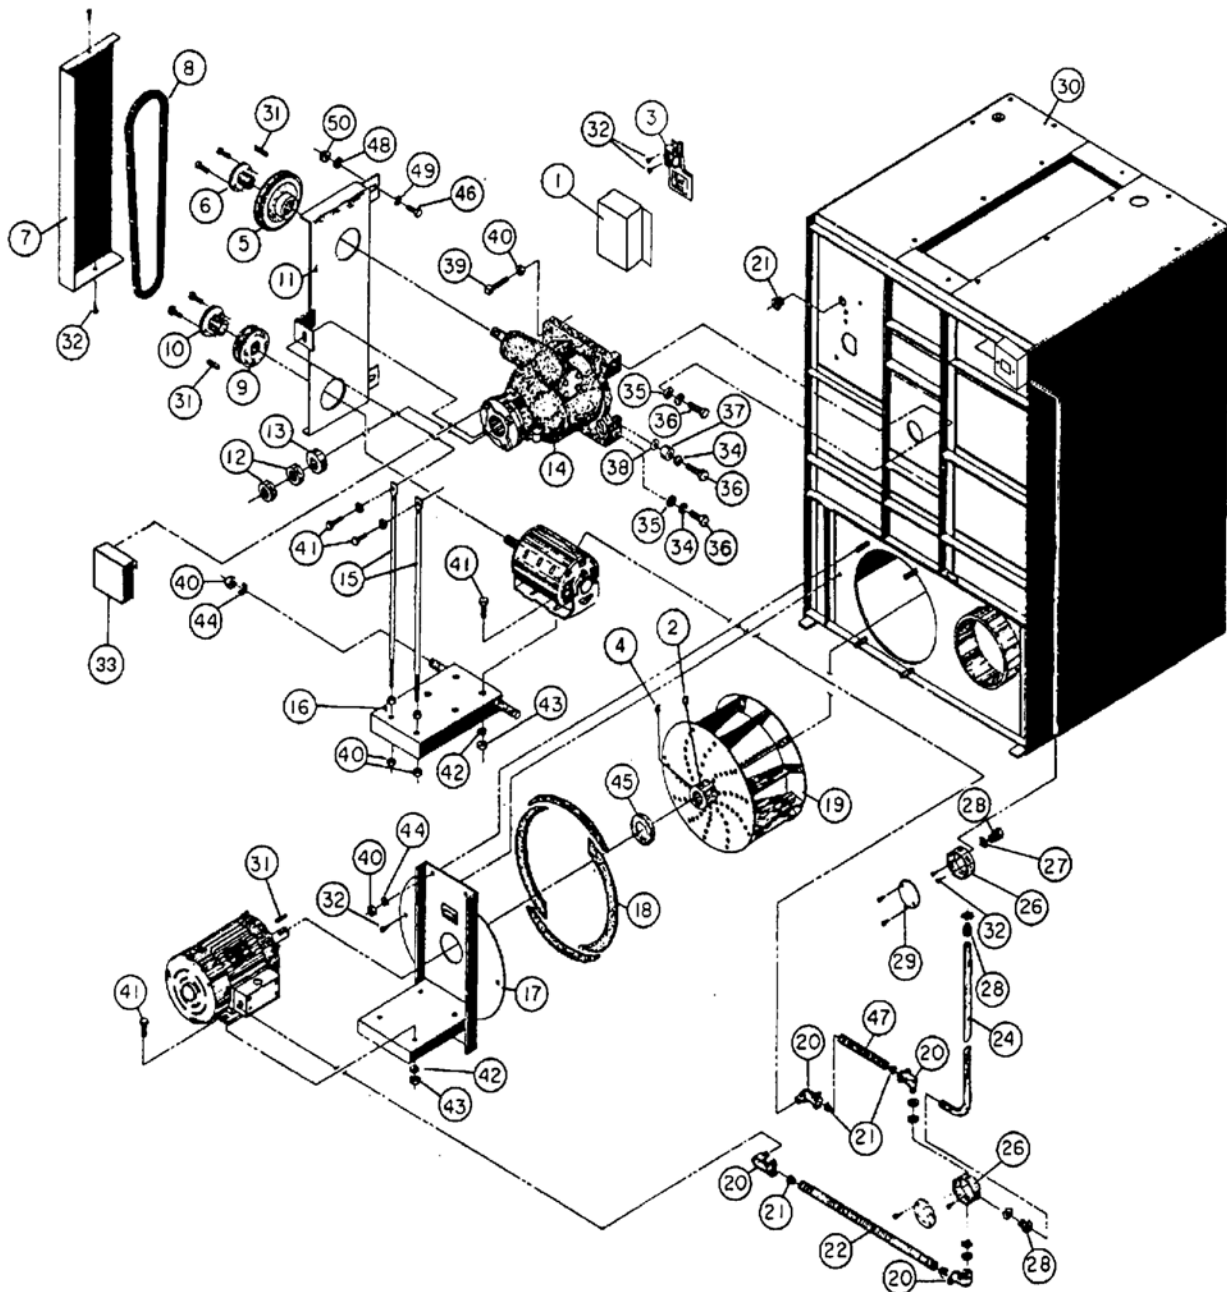


Parts—150 lb. Dryer (Rear of Dryer)

MODELS:		L50CD42	Gas, Steam
1	TUX415	Air Switch Cover	27 TU7130 1/2" Straight Connector (2 each)
2	TU4967	Allen Head Set Screw	28 TU7131 3/4" Straight Connector (2 each)
3	TU8206	Air Switch Assembly	29 SB170 Junction Box Cover (2)
4	AT304	Square Head Set Screw	30 TU9422 Jacket Welded Assembly
5	TU9663	Gear Sheave (50/60 Hz.)	31 TU4684 Key (2 each)
6	TU3807	Sheave Bushing	32 TU7733 #8 - 18 x 1/2" Self Tap Screw (Pkg. of 6)
7	TU14092	Rear Guard Cover Plate	33 TU7517 Shaft Cover "C" Only
8	TU2363	"V" Belt 5L500	34 TU2831 1/2" Split Lockwasher (Pkg. of 6)
9	TU9751	Motor Sheave—60 Hz.	35 TU1851 1/2" Flat Washer
	TU6081	Motor Sheave—50 Hz.	36 TU2195 1/2" - 13 x 1 3/4" Hex Head Cap Screw (Pkg. of 6)
10	TU2007	Sheave Bushing	37 TU455 Cam Adjustment Nut
11	TU9615	Inside Belt Guard	38 TU3575 7/8" I.T. Lockwasher
12	TU470	1 - 3/8" - 12 Hex Nut	39 TU5312 3/8" - 16 x 3" Sq. Hd. Set Screw
13	TU6633	Basket Shaft Washer	40 TU4787 3/8" - 16 Hex Nut (Pkg. of 6)
14	TM200	Gear Reducer	41 TU5439 5/16" - 18 x 3/4" Hex Hd. Cap Screw (Pkg. of 6)
15	TU5328	Belt Adjusting Rod	42 TU2814 5/16" Split Lockwasher (Pkg. of 6)
16	TU4626	Basket Motor Mount Weldment	43 C249 5/16" - 18 Hex Nut (Pkg. of 6)
17	TU5658	*Motor and Fan Mount Weldment (60 Hz.)	44 VSB134 3/8" Split Lockwasher (Pkg. of 6)
18	TU2473	Gasket Set	45 TU108 Felt Seal
19	TU403	*Fan Wheel with Set Screw (60 Hz.)	46 FB189 1/4" - 20 x 1" Hex Head Screw
20	TU4791	90° Elbow Connector	47 CFB1000 1/2" Greenfield Cable—10" L
21	TU2372	Snap Bushing	48 TU2846 1/4" Split Lockwasher (Pkg. of 6)
22	CFB2100	1/2" Greenfield Cable - 21" Long	49 TU2847 1/4" Flat Washer (Pkg. of 6)
23	TU6026	Top Motor Conduit	50 TU4934 1/4" - 20 x 7/16" Hex Nut (Pkg. of 6)
24	TU13834	Back Motor Conduit	
25	TU6028	Power Lead Conduit	
26	500300644	Junction Boxes (2)	

* See next page for 50 Hz.


Permanent Press Control Panel Assembly

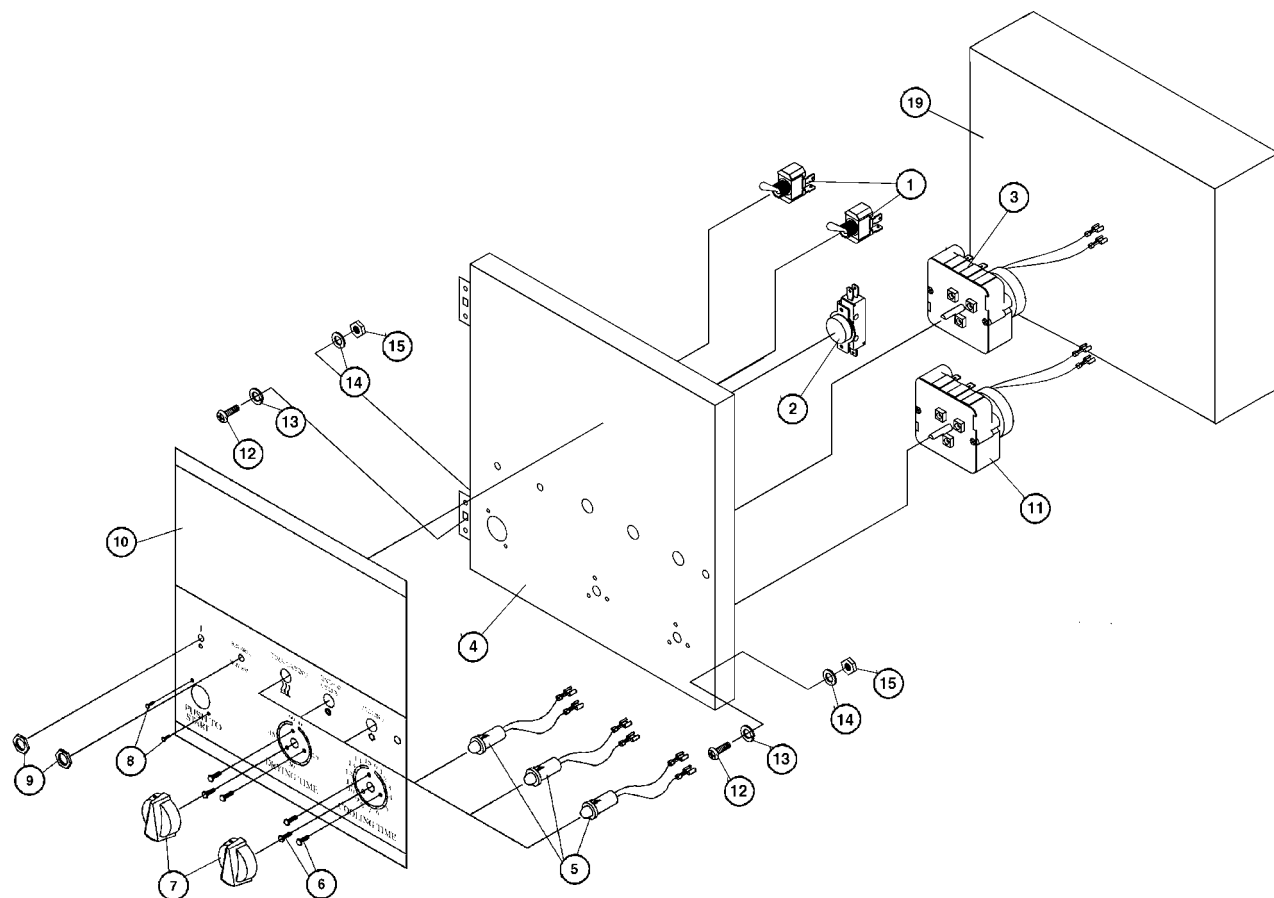

TU13859 - Reversing TU14028 - Non-Reversing

1	FG147	Toggle Switch (2 each)	10	TU13825	Nameplate, Reversing, 2-Timer
2	TU9028	Push Button Switch		TU13974	Nameplate, Non-Reversing, 2 Timer
3	TU12933	Timer (0-15 Minutes)	11	TU12932	Timer (0-60 Minutes)
4	TU13620	Control Panel Weldment	12	TU3479	Pan Head Machine Screw (2 each)
5	TUT316	24V LED Light (3 each)	13	FB187	#10 Split Lock Washer (2 each)
6	TU7733	#8 - 18 x 1/2" Self-Drill Screw (8 each)	14	P104	1/4" Brass Washer (2 each)
7	TU2555	Knob Assembly (2 each)	15	TU2842	#10 - 32 Hex Nut (Pkg 6) (2 each)
8	ET208	#6 - 32 x 1/4" Binding Head Screw (2 each)	16	FG325	Terminal Block
9	TU3805	Hex Nut (2 each)	17	FG343	Steel Screw
			18	FG345	Steel Washer

Moisture Control Panel Assembly

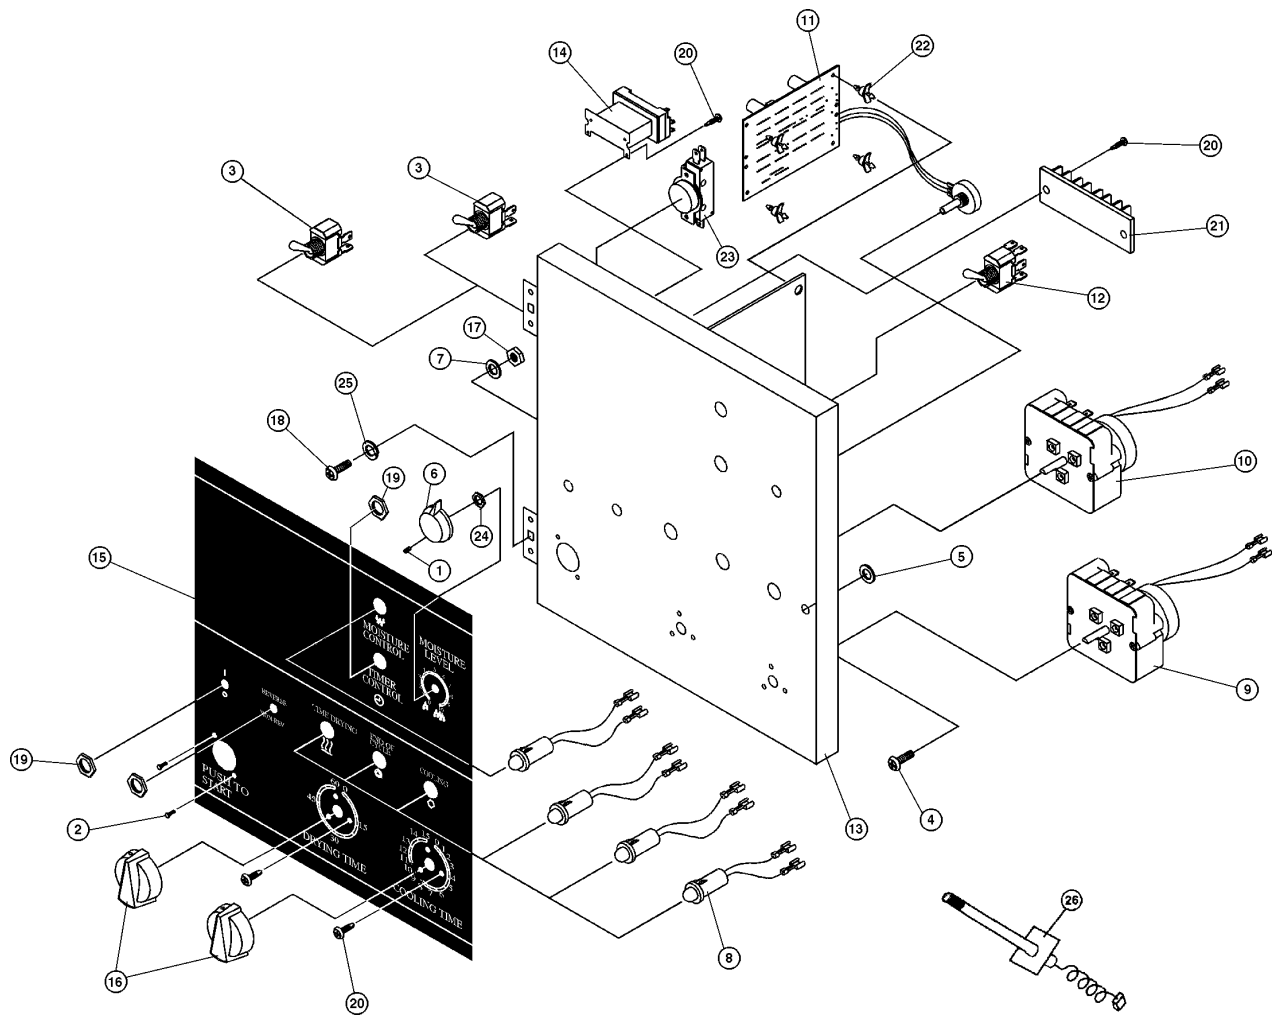

TU13967 Reversing


1	C196	#8-32 x 5/16" Socket Set Screw
2	ET208	6-32 x 1/4" Binding Head Scr. (2 each)
3	FG147	Toggle Switch (2 each)
4	FG343	Steel Screw
5	FG345	Steel Washer
6	PT118	M/C Knob
7	P104	1/4" Brass Washer (Pkg. 6) (2 each)
8	TUT316	24V LED Light (4 each)
9	TU12932	Timer (0-60 Min.) Drying
10	TU12933	Timer (0-15 Min.) Cooling
11	TU13229	24V Humidity-Based Controller
12	TU13345	DPDT Switch
13	TU13620	Timer Control Weldment
14	TU13646	24V Coil Relay

TU14031 Non-Reversing

15	TU13966	Nameplate, Reversing w/Moisture Control
	TU13973	Nameplate, Non-Reversing w/Moisture Control
16	TU2555	Knob (2 each)
17	TU2842	10-32 Hex Nut (Pkg. 6) (2 each)
18	TU3479	10-32 x 7/16" Machine Screw (2 each)
19	TU3805	15/32-32 Hex Lock Nut (3 each)
20	TU7733	#8-18 x 1/2 Self-Drill Screw (10 each)
21	FG325	Terminal Block
22	TU9347	PC Board Support (4 each)
23	TU9028	Push Button Switch
24	TU3243	3/8" Int. Tooth Lockwasher
25	FB187	#10 Split Lockwasher (2 each)
26	TU13978	Moisture Control Probe


Gas Bonnet and Burner Assembly

TU14030 - LP Gas Bonnet TU13836 - Natural Gas Bonnet

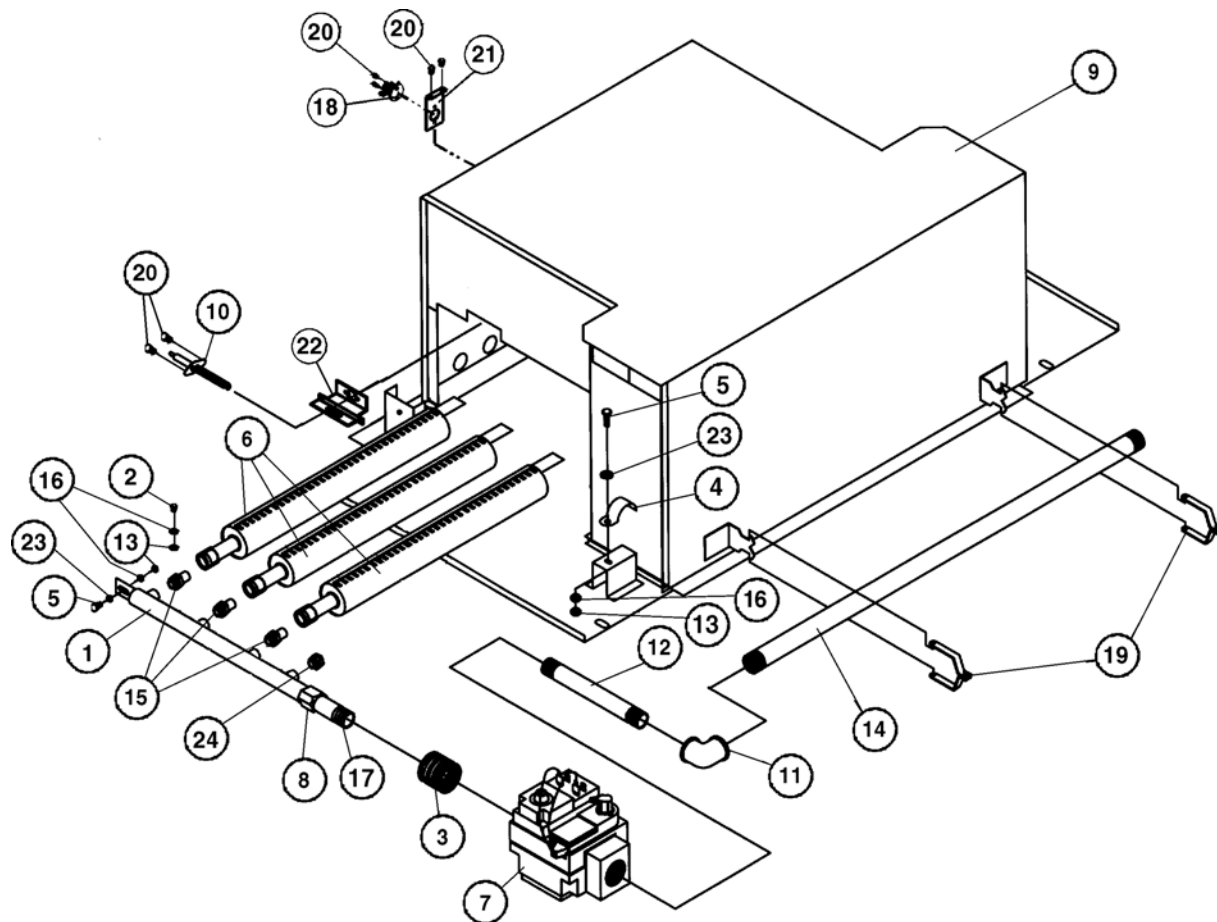


1	TU14058	Gas Manifold	14	TU13823	3/4" x 36" Nipple
2	CB36	1/4" - 20 x 1/2" Hex Head Screw - 4 each	15	TU3539	Burner Orifice - 3 each
3	OP267	3/4" x 1/2" Steel Bushing	16	TU2846	1/4" Lock Washer (Pkg 6) - 6 each
4	PT196	3/4" Strap	17	664946146	Pipe, Tail
5	RC344	1/4" - 20 x 3/4" Hex Head Screw - 2 each	18	TU13678	Thermostat, Man. Reset 300°
6	TUX387	BSI Asm. Burner - 3 each	19	TU2226	Manifold Mounting Bracket - 2 each
7	TUX352	3/4" Natural Gas Valve	20	TU7733	#8 - 18 x 1/2" Self-Drill Screw (Pkg. of 6) - 8 each
	TUX435	3/4" LP Gas Valve	21	TU13695	Bonnet Thermostat Bracket
8	TU6862	Gas Manifold Nut	22	TU13647	Electrode Mounting Bracket
9	TU13613	Bonnet Assembly	23	TU2847	1/4" Flat Washer - 2 each
10	GA-00764-0	Direct Spark Ignition Electrode	24	TU10946	Pipe Plug (Large)
11	TU4605	3/4" Elbow			
12	TU4606	3/4" x 4" Nipple			
13	TU4934	1/4" - 20 Hex Nut (Pkg 6) - 6 each			

**AIR SWITCH ASSEMBLY
TU8206**

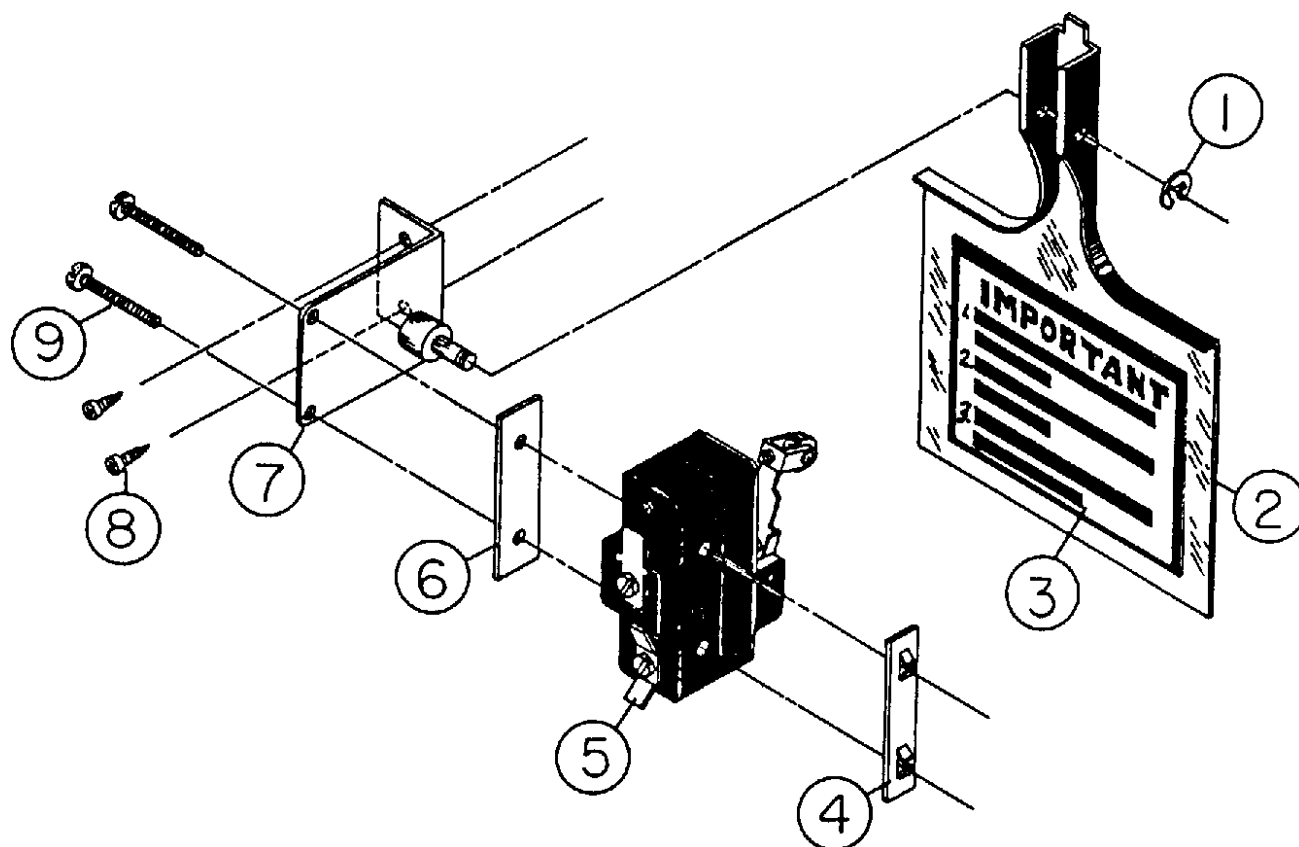


- | | | |
|---|--------|---|
| 1 | F888 | "E" Ring |
| 2 | TU2463 | Actuator Arm |
| 3 | TU3476 | Air Switch Decal |
| 4 | TU1771 | #6 Tinnerman Nut (Pkg. of 12) |
| 5 | TU8155 | Air Switch |
| 6 | TU1770 | Insulator |
| 7 | TU8171 | Air Switch Bracket |
| 8 | TU7733 | #8 - 18 x 1/2" Self Drilling Screw
(Pkg. of 6) |
| 9 | TU3219 | #6 x 1" Round Head S.M.S. |

Parts—150 lb. 24V Steam Bonnet Assembly—TU14027

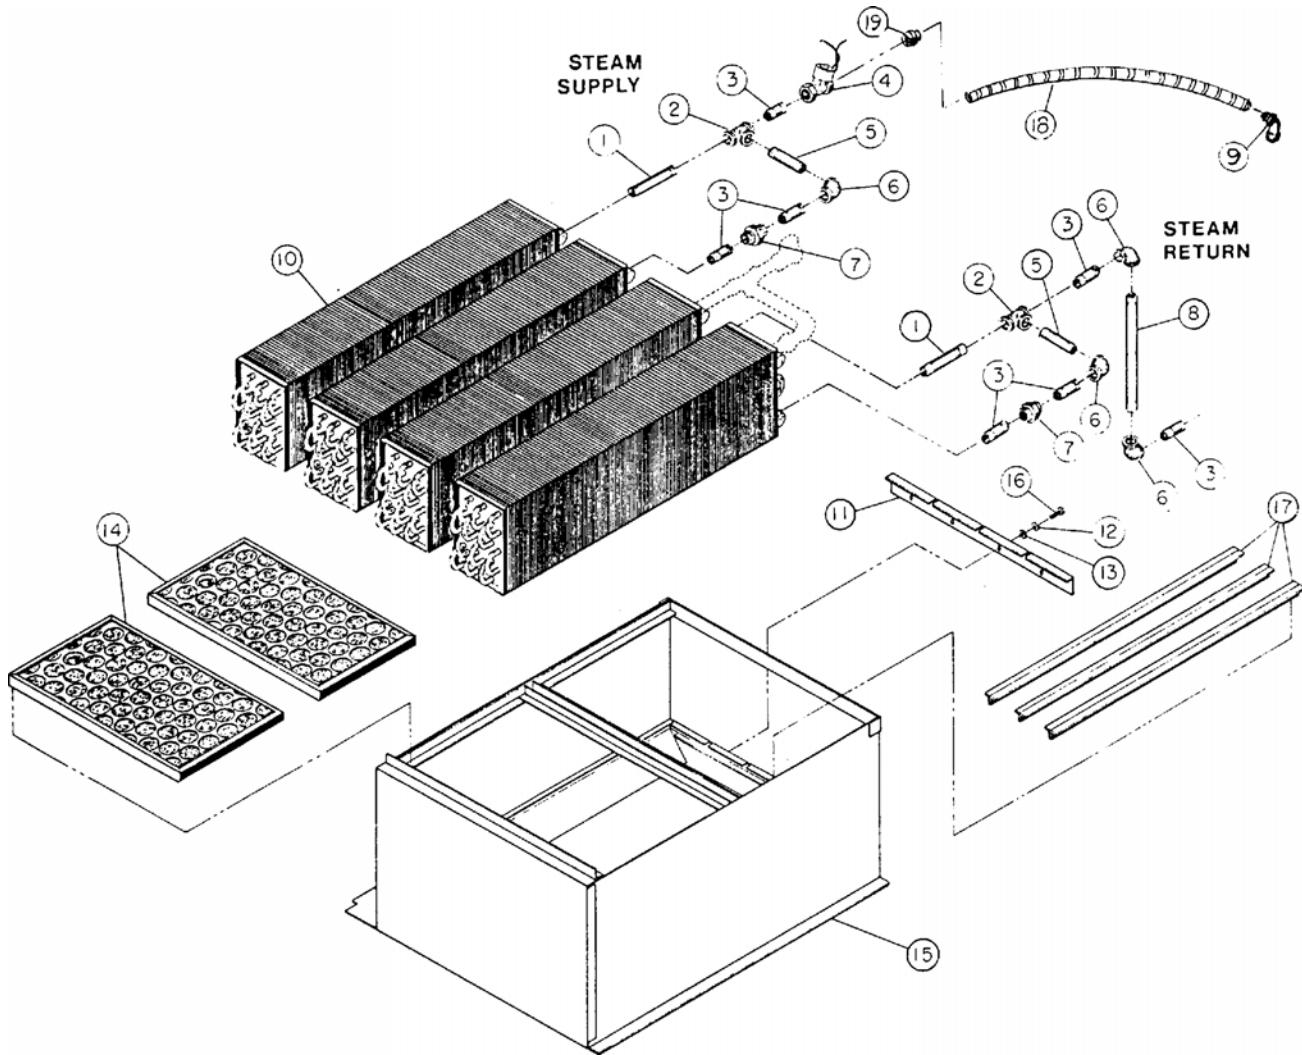

1	TU4610	3/4" x 5" Pipe Nipple (4 each)	13	TU2847	Flat Washer (4 each) (Pkg. of 6)
2	TU4597	3/4" Tee (4 each)	14	TU9953	Air Filter 20" x 24" x 1" (2 each)
3	TU4608	3/4" x 2" Pipe Nipple (14 each)	15	TU9873	Steam Bonnet Weldment
4	TU13517	*Steam Solenoid Valve 24V (2 each)	16	CB36	1/4" - 20 x 1/2" Hex Bolt (4 each) (Pkg. of 6)
5	TU4620	3/4" x 4 1/2" Pipe Nipple (4 each)	17	TU9889	Coil Support Angle (3 each)
6	TU4605	3/4" Elbow (8 each)	18	504641292	1/2" Greenfield Cable (sold by foot) Right Side—72" Left Side—84"
7	TU4600	3/4" Union (4 each)	19	TU4790	Straight Connector (2 each)
8	TU4599	3/4" x 18" Pipe Nipple (2 each)			
9	TU4791	Angle 90° Connector (2 each)			
10	TU1699	Steam Coils (4 each)			
11	TU9890	Hold Down Bracket			
12	TU2846	1/4" Split Lockwasher (4 each) (Pkg. of 6)			

Parts—TM200—Large Gear Reducer with Bronze Teeth

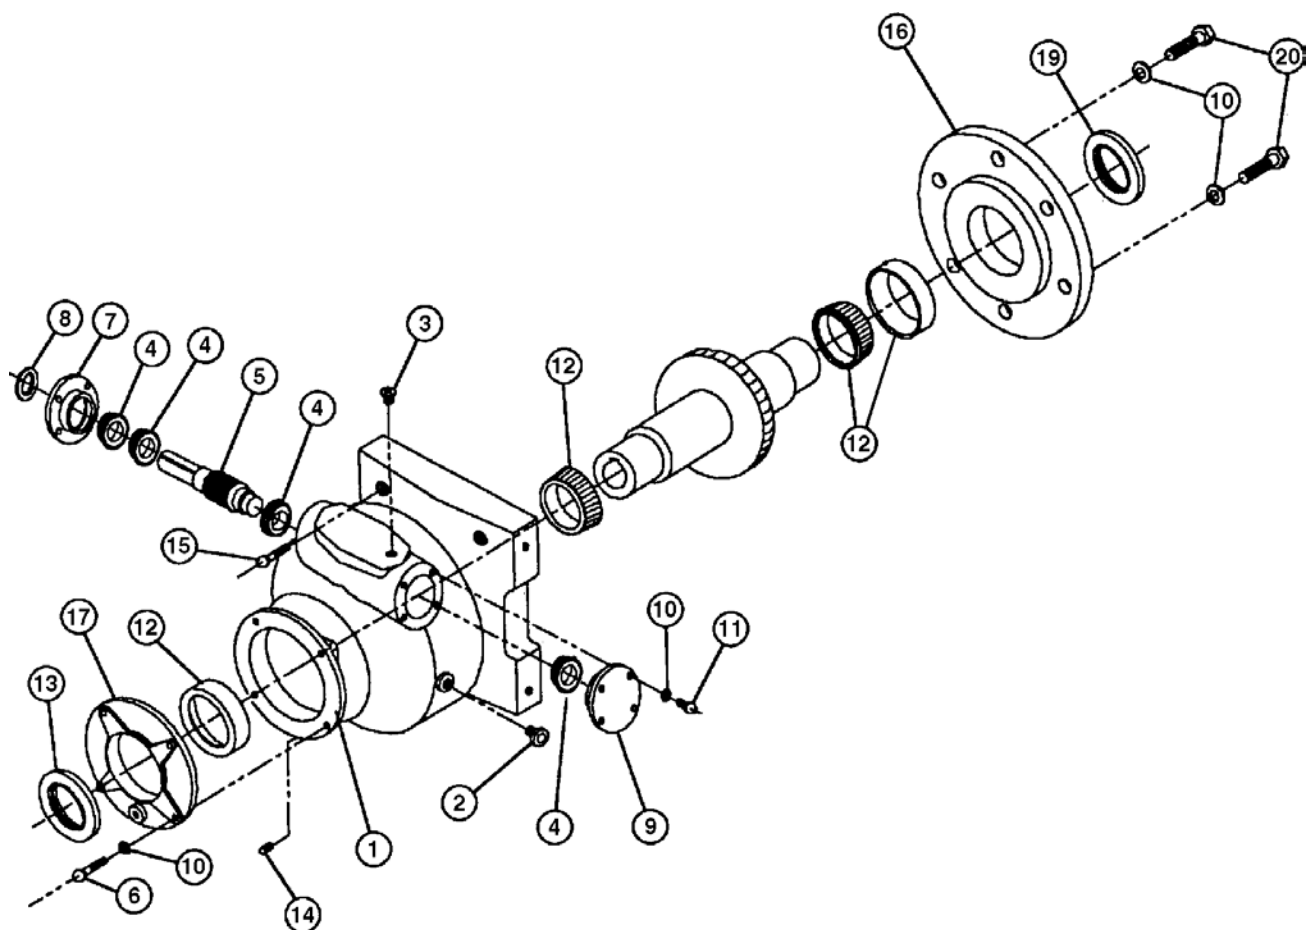


1	TM203	Housing	10	VSB134	3/8" Split Lockwasher (Pkg. of 6)
2	K474	Oil Level Plug Kit	11	TU3246	3/8" - 16 x 1" Cap Screw (Pkg. of 6)
3	TM119	1/4" Vent Plug	12	TM217	Large Bearing Cone & Cup
4	TM208	Small Bearing Cone & Cup	13	TM220	Large Klosure
5	TM225	Worm & Worm Gear	14	TM221	1/4" Pipe Plug
6	IB139	3/8" - 16 x 1 1/4" Cap Screw	15	TU5312	3/8" x 3" Set Screw
7	TM205	Small Open End Cap	16	TM211	Large End Cap 10 1/2 Dia.
8	TM204	Small Klosure	17	TM212	Small End Cap 6 3/4 Dia.
9	TM218	Small Closed End Cap			

TM225 Worm and Worm Gear Set (for TM200 ONLY) (only sold as set)

Not Illustrated—TU3465 one pint of Transmission Oil


Reversing Control Panel Assembly (Gas)

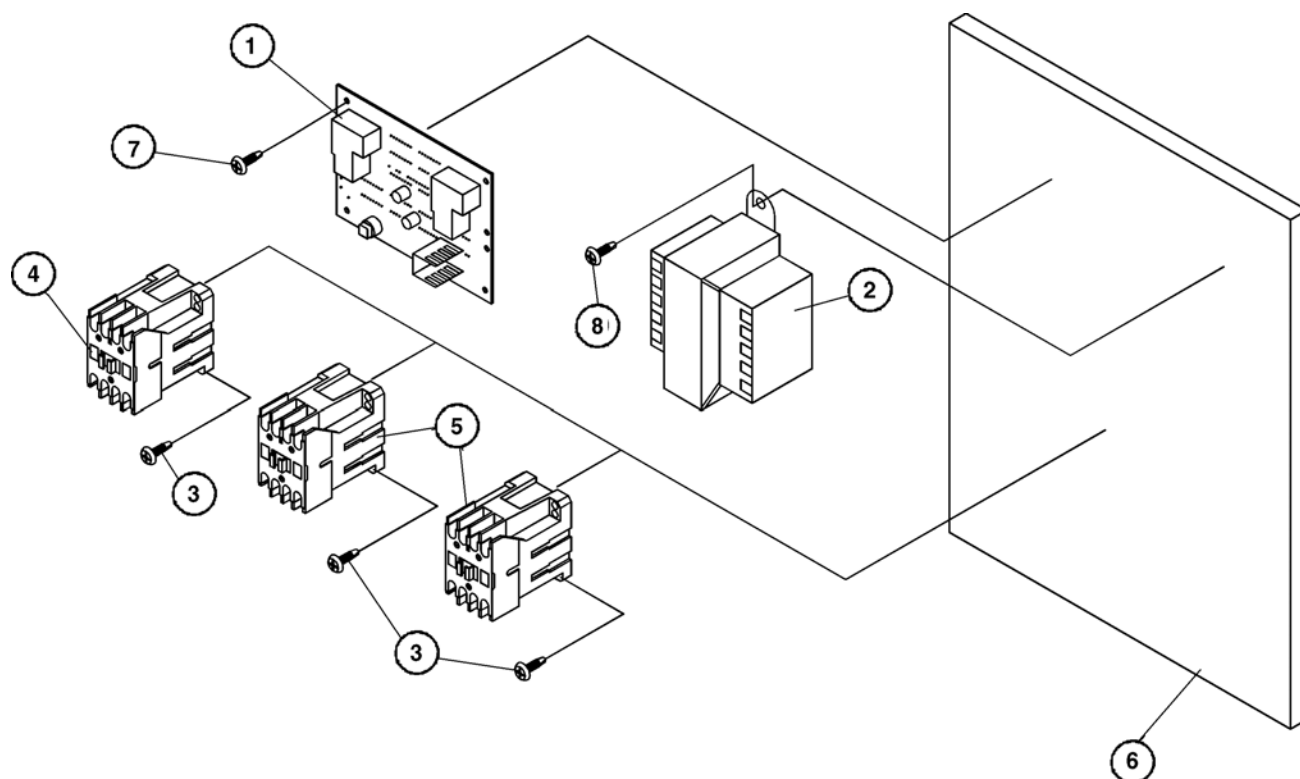

TU14146	Reversing Control Panel 200-240V, 24V Controls
TU14147	Reversing Control Panel 460-480V, 24V Controls
TU14198	Reversing Control Panel 240/415V, 24V Controls
TU14149	Non-Reversing Control Panel 460-480V, 24V Controls
TU14148	Non-Reversing Control Panel 200-240V, 24V Controls
TU14199	Non-Reversing Control Panel 240/415V, 24V Controls


1	TU12874	Timer, Solid State Reversing
2	TU13480	Transformer 200-240V/24V w/Reset
	TU13514	Transformer, 480/24V w/Reset
3	F540	#6 x 5/8" Phillips Head Screw
4	TU13516	Contactor, 24V
5	TU13526	Contactor Assembly, 24V
6	TU14026	Motor Control Plate
7	TU2793	8 - 18 x 3/4" Self-Drill Screw (Pkg 6)
8	TU7733	8 - 18 x 1/2" Self-Drill Screw (Pkg 6)

Reversing Control Panel Assembly (Steam)

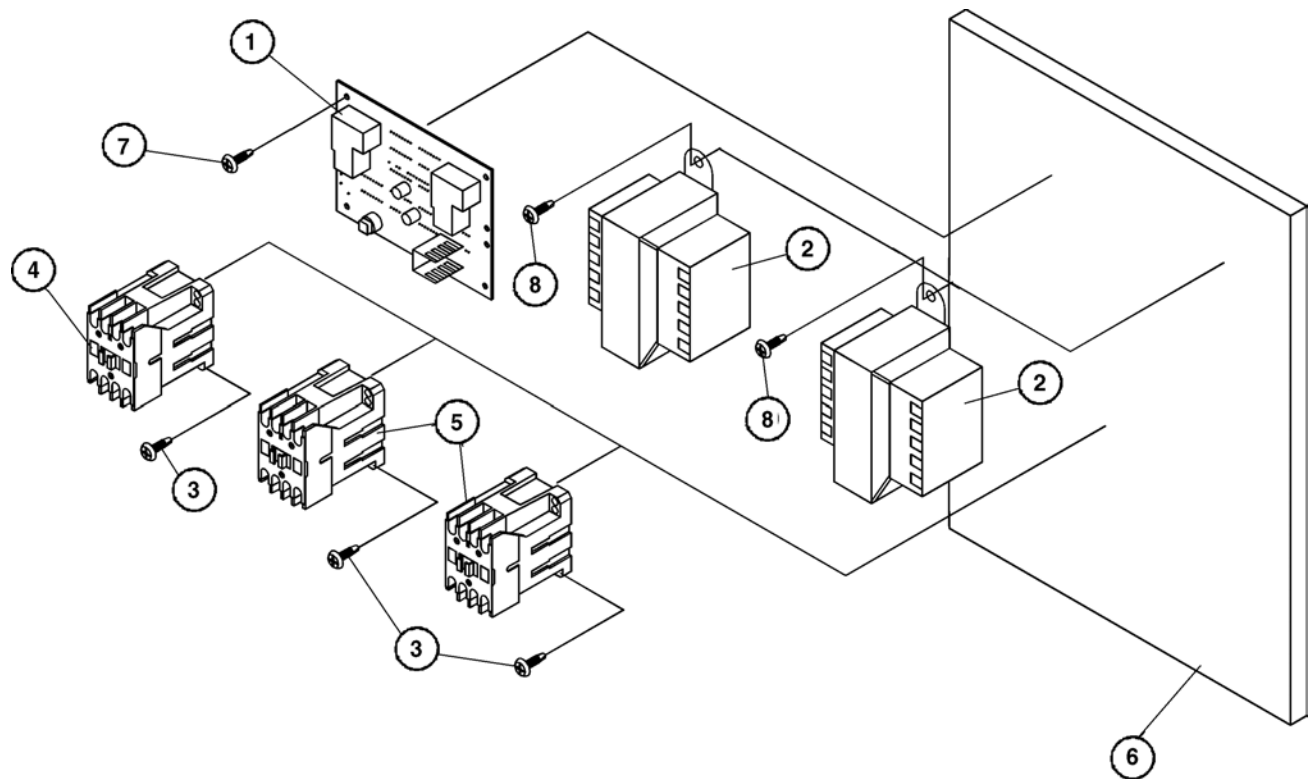

TU14150	Reversing Control Panel 200-240V, 24V Controls
TU14151	Reversing Control Panel 460-480V, 24V Controls
TU14197	Reversing Control Panel 240/415V, 24V Controls
TU14152	Non-Reversing Control Panel 200-240V, 24V Controls
TU14153	Non-Reversing Control Panel 460-480V, 24V Controls
TU14196	Non-Reversing Control Panel 240/415V, 24V Controls

1	TU12874	Timer, Solid State Reversing
2	TU13480	Transformer 200-240V/24V w/Reset
	TU13514	Transformer, 480/24V w/Reset
3	F540	#6 x 5/8" Phillips Head Screw
4	TU13516	Contactor, 24V
5	TU13526	Contactor Assembly, 24V
6	TU14026	Motor Control Plate
7	TU2793	8 - 18 x 3/4" Self-Drill Screw (Pkg 6)
8	TU7733	8 - 18 x 1/2" Self-Drill Screw (Pkg 6)

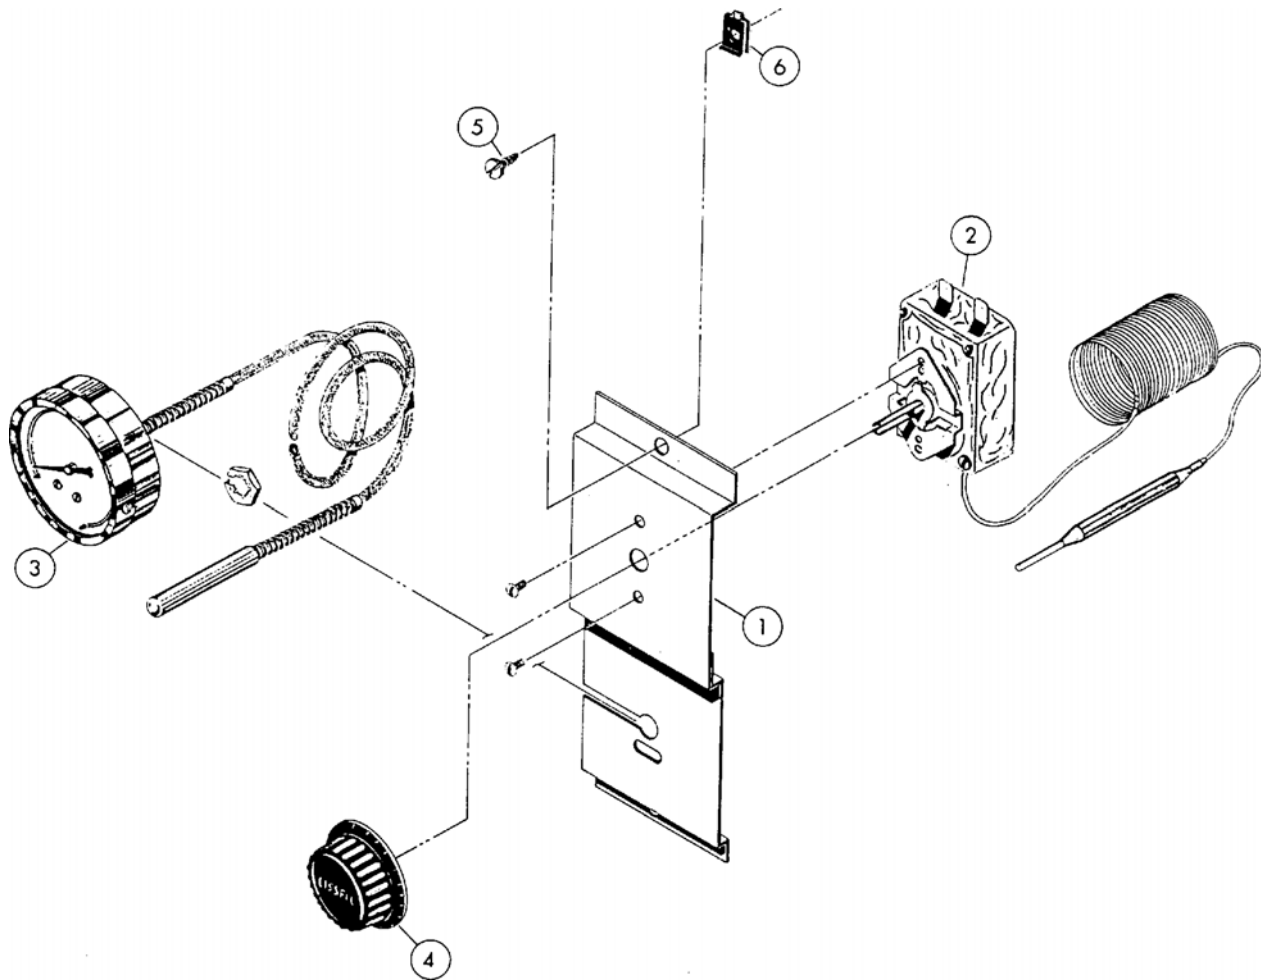

TU6030—"C" Model—Consists of Ref. No. 1, 2, 3

- | | | |
|---|---------|--|
| 1 | TU5530 | Mounting Bracket |
| 2 | TU1980 | Thermostat |
| 3 | TU3593 | Thermometer |
| | TU3816 | Lens Replacement (Texas Gage ONLY) |
| | TU8475 | Lens Replacement (Marshalltown Inst. ONLY) |
| | TU11193 | Lens Replacement (Weiss—consult factory) |
| | TU13213 | Lens Replacement (Weiss—consult factory) |
| 4 | TU490 | Thermostat Knob—Fahrenheit |
| | TU491 | Thermostat Knob—Centigrade |
| 5 | TU3209 | #14 x 5/8" S.M.S. (Pkg. of 6) |
| 6 | LB74 | #14 Tinnerman Clip (Pkg. of 6) |

