



2-78 BREAK DOWN, \$135 LIST DEL. ATR.

\$150 LIST
SINGLE ATR.

Cissell 50

SERVICE
b. MANUAL

C, F, K, R - MODELS LAUNDRY DRYERS


GAS FIRED

**ENERGY SAVER
GAS FIRED**

ELECTRIC HEATED

STEAM HEATED

**Installation
Operation
Trouble Analysis
Maintenance
Illustrated Parts**

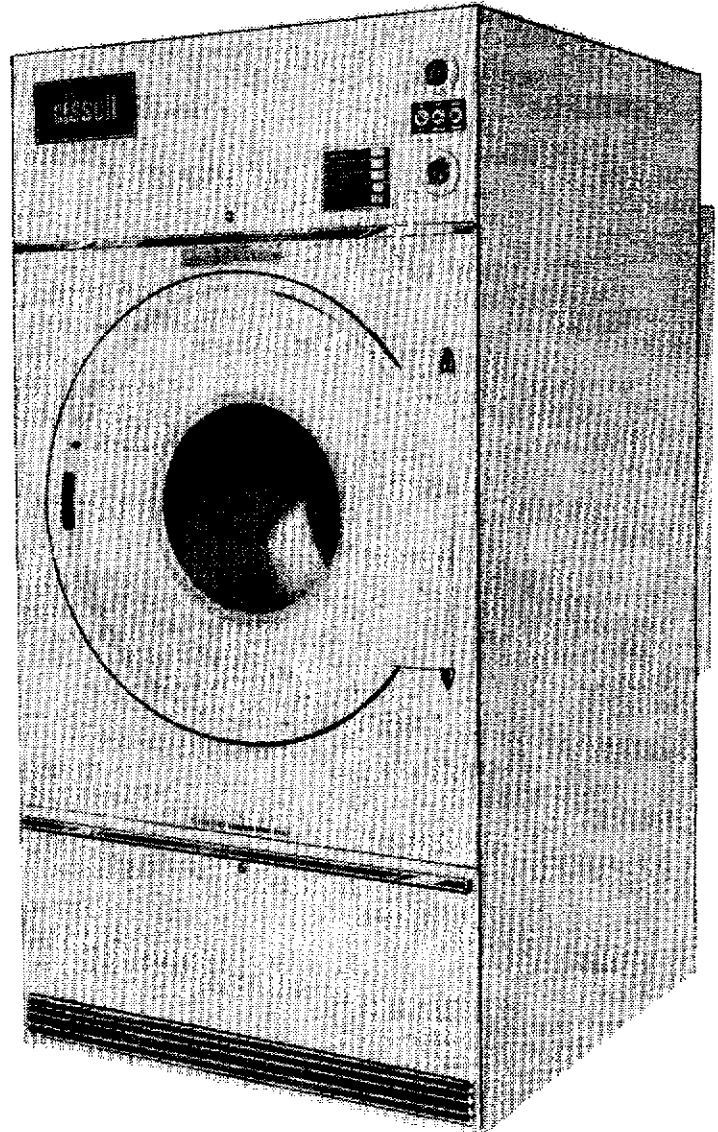

Cissell Manufacturing Company

P.O. Box 32270, Louisville, KY 40232-2270
502/587-1292

Pacific Coast Office: 4823 West Jefferson Blvd.
Los Angeles, CA 90016 213/731-2196

Foreign Distributors write Export Dept., Cable Code
"Cissell" Telex No. 204158

European Headquarters: Pantex-Cissell B.V., P.O. Box 53,
9670 AB Winschoten, Holland, Telex No. 53535

MAN14

8/87
1500 B&K

"Ask Your Distributor"

D0791R1

2/07

Addendum

L36CS30, L36CD30, L36FS30, L36FD30, L36KD30, L36RD30 Models

| PART NO. | DESCRIPTION | COMMENTS | PAGE NO. |
|-----------|------------------------|--------------------------------------|----------|
| TU3240H | Thermostat | 2 required; Hi & Safety, 185 degrees | |
| TU5150H | Thermostat | Medium; 150 degrees | |
| TU7244H | Thermostat | Low; 135 degrees | |
| TU2045H | Thermostat | Cool down; 155 degrees | |
| TU1979H | Door Switch | Includes hardware | |
| K189 | Timer Replacement Kit | 15 minute; 120 Volt | |
| K188 | Timer Replacement Kit | 60 minute; 120 Volt | |
| K194 | Timer Replacement Kit | 15 minute; 240 Volt; 60 Hertz | |
| K193 | Timer Replacement Kit | 60 minute; 240 Volt; 60 Hertz | |
| K190 | Timer Replacement Kit | 15 minute; 240 Volt; 50 Hertz | |
| K192 | Timer Replacement Kit | 60 minute; 240 Volt; 50 Hertz | |
| CM6760 | Coin Meter | 120 Volt; 25 cents; No cam | |
| CM6860 | Coin Meter | 240 Volt; 25 cents; No cam | |
| TU5447 | Belt | Single motor; Upper | |
| TU4794 | Belt | Single motor; Lower; 60 Hertz | |
| TU6725 | Belt | Single motor; Lower; 50 Hertz | |
| TU2317 | Belt | Double motor | |
| TU15173 | Sheave | Basket | |
| TU5217 | Sheave | Idler | |
| TU7184 | Bronze Bearing | | |
| TU7603 | Sheave | Motor; 60 Hertz | |
| TU7525 | Sheave | Replaced by TU12802 Sheave | |
| TU2323 | Sheave | Basket; Double motor | |
| F1304 | Wire Harness | | |
| TU12803 | Idler Bracket Assembly | Single motor only | |
| TU7019 | Bearing | 2 required; Includes locking collar | |
| TU7018 | Bearing | 4 required | |
| TU8587 | Bearing | 2 required; 9/21/81 Serial No. 2614 | |
| TU8588 | Bearing Housing | 4 required; 9/21/81 Serial No. 2614 | |
| TU10677 | Basket Flange Bearing | Approximately 1985 | |
| TU10676 | Pillow Block Bearing | Approximately 1985 | |
| TM100 | Gear Reducer | Double motor only | |
| TU8740 | Fan | | |
| TU8206 | Air Switch Kit | | |
| TU14482 | Switch | | |
| TU6557 | Gas Valve | Natural Gas | |
| TU8596 | Ignitor | Glow bar | |
| TU8599 | Relay | Ignition | |
| TU8598 | Radiant Sensor | | |
| TU2405 | Steam Coil | 9 section | |
| TU6041 | Steam Solenoid Valve | 120 Volt | |
| TU5924 | Steam Solenoid Valve | 240 Volt | |
| TU5859WH | Door | | |
| TU217 | Door Glass | 15-3/4 | |
| TU1692 | Door Glass Gasket | 15-3/4 | |
| TU5288 | Door Gasket | | |
| TU2874 | Door Handle | | |
| TU10784WH | Front Panel | Coin; Includes catch; Add color | |
| TU10785 | Front Panel | OPL; Includes catch; Add color | |
| TU5566 | Lint Door | Add color | |
| K633 | Basket Kit | Excludes spider | |

| | | |
|---------|-------------------|---|
| TU7187 | Basket and Spider | Single motor |
| TU6544 | Basket and Spider | Double motor |
| K106 | Spider | Single motor; 1-1/4 inches; Includes key and seal |
| K21 | Spider | Single motor |
| K108 | Spider | Double motor; Includes key and seal |
| TU10362 | Lint Screen | |
| TU5106 | Switch | Temperature selector |

Addendum

L36URS30, L36URD30, L36USS30, L36USD30, L36USP30, L36URP30 Models

| PART NO. | DESCRIPTION | COMMENTS | PAGE NO. |
|-----------|------------------------|---|----------|
| TU3240H | Thermostat | 2 required; Hi & Safety, 185 degrees | |
| TU5150H | Thermostat | Medium; 150 degrees | |
| TU7244H | Thermostat | Low; 135 degrees | |
| TU2045H | Thermostat | Cool down; 155 degrees | |
| TU11991 | Thermistor | Computer models | |
| TU1979H | Door Switch | Includes hardware | |
| K189 | Timer Replacement Kit | 15 minute; 120 Volt | |
| K188 | Timer Replacement Kit | 60 minute; 120 Volt | |
| K194 | Timer Replacement Kit | 15 minute; 240 Volt; 60 Hertz | |
| K193 | Timer Replacement Kit | 60 minute; 240 Volt; 60 Hertz | |
| K190 | Timer Replacement Kit | 15 minute; 240 Volt; 50 Hertz | |
| K192 | Timer Replacement Kit | 60 minute; 240 Volt; 50 Hertz | |
| CM6760 | Coin Meter | 120 Volt; 25 cents; No cam | |
| CM6860 | Coin Meter | 240 Volt; 25 cents; No cam | |
| TU5447 | Belt | Single motor; Upper | |
| TU6725 | Belt | Single motor; Lower | |
| TU2317 | Belt | Double motor | |
| TU15173 | Sheave | Basket; Single motor | |
| TU5217 | Sheave | Idler; Single motor | |
| TU7184 | Bronze Bushing | Single motor | |
| TU7603 | Sheave | Motor; 60 Hertz; Single motor | |
| TU7525 | Sheave | Replaced by TU12802 Sheave | |
| TU12802 | Sheave | Motor; 50 Hertz; Single motor | |
| TU2323 | Sheave | Basket; 60 Hertz; Nonreversing; Double motor | |
| TU6722 | Sheave | Basket; 60 Hertz; Reversing; Double motor | |
| TU2211 | Sheave | Basket; 50 Hertz; Nonreversing; Double motor | |
| 510101040 | Sheave | Basket; 50 Hertz; Reversing; Double motor | |
| F1304 | Wire Harness | | |
| TU7334 | Sheave | Motor; 60 Hertz; Reversing; Double motor | |
| TU1952 | Sheave | Motor; 50 Hertz; Nonreversing; Double motor | |
| TU12803 | Idler Bracket Assembly | Single motor only | |
| TU10677 | Flange Bearing | Basket; 3 hole | |
| TU10850 | Flange Bearing | 4 hole; Approximately 4/87 | |
| TU10676 | Pillow Block Bearing | | |
| TM100 | Gear Reducer | Double motor only | |
| TU8740 | Fan | | |
| TU8206 | Air Switch Kit | | |
| TU14482 | Switch | | |
| TU6557 | Gas Valve | Natural Gas | |
| TU13187 | Gas Valve | Natural Gas; 120 Volt; Approximately 1994; Baso | |
| TU13373 | Gas Valve | L.P. Gas; 120 Volt; Approximately 1994; Baso | |
| TU8596 | Ignitor | Glow bar | |
| TU8599 | Relay | Ignition | |

| | | |
|-----------|----------------------|---|
| TU8598 | Radiant Sensor | |
| TU2405 | Steam Coil | 9 section; 7-3/4x5/8x26 |
| TU6041 | Steam Solenoid Valve | 120 Volt |
| TU5924 | Steam Solenoid Valve | 240 Volt |
| TU5859WH | Door | 20 inch opening |
| TU217 | Door Glass | 15-3/4 |
| TU15107 | Door Glass | 20-1/4 |
| TU1692 | Door Glass Gasket | 15-3/4 |
| TU15966 | Door Glass Gasket | 20-1/4 |
| TU5288 | Door Gasket | |
| TU2874 | Door Handle | |
| TU10784WH | Front Panel | Coin; Includes catch; Add color |
| TU10785 | Front Panel | OPL; Includes catch; Add color |
| TU5566 | Lint Door | Add color |
| K633 | Basket Kit | Excludes spider |
| TU7187 | Basket and Spider | Single motor |
| TU6544 | Basket and Spider | Double motor |
| K106 | Spider | Single motor; 1-1/4 inches; Includes key and seal |
| K21 | Spider | Single motor |
| TU10362 | Lint Screen | |
| TU5106 | Switch | Temperature selector |

Obsolete Parts – No Longer Available

| PART NO. | DESCRIPTION | COMMENTS | PAGE NO. |
|-----------|-------------|--|----------|
| K373 | Timer | Electronic coin board | |
| 510101041 | Sheave | Motor; 50 Hertz; Reversing; Double motor | |

- WARNING: The Dryer Must Be Used Only For Water Washed Fabrics.
- WARNING: To Avoid Fire Hazard, Do Not Dry Articles Containing Foam Rubber Or Similarly Textured Rubber-like Materials.
- CAUTION: A Clothes Dryer Produces Combustible Lint And Should Be Exhausted Outside.
- CAUTION: A Clothes Dryer Produces Combustible Lint And The Area Around The Clothes Dryer Should Be Kept Free Of Lint.
- CAUTION: Remove Clothes From Dryer As Soon As It Stops. This Keeps Wrinkles From Setting In And Reduces The Possibility Of Spontaneous Combustion.

CAUTION!
FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. NOTE! THE PURCHASER TO POST THE CAUTION IN A PROMINENT LOCATION.

For optimum efficiency and safety, we recommend that you read the owner's manual before operating your Cissell commercial clothes dryer.

RETAIN THIS MANUAL FOR FUTURE REFERENCE. STORE MANUAL IN A FILE OR BINDER.

INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE USER SMELLS GAS MUST BE POSTED IN A PROMINENT LOCATION. INFORMATION TO BE POSTED CAN BE OBTAINED BY CONSULTING THE LOCAL GAS SUPPLIER.

CAUTION

"DO NOT PUT INTO THIS DRYER FLAMMABLE ITEMS SUCH AS: BABY BED MATTRESSES THROW RUGS, UNDERGARMENTS (BRASSIERES, ETC.) AND OTHER ITEMS WHICH USE RUBBER AS A PADDING OR BACKING." RUBBER EASILY OXIDIZES CAUSING EXCESSIVE HEAT AND POSSIBLE FIRE. FLAMMABLE ITEMS SHOULD BE AIR DRIED.

DO NOT DRY ITEMS CONTAINING FOAM RUBBER OR ANY RUBBER-LIKE MATERIALS IN THIS DRYER.

RUBBER EASILY OXIDIZES CAUSING EXCESSIVE HEAT AND POSSIBLE FIRE. ALL ITEMS CONTAINING RUBBER SHOULD BE AIR DRIED.

CAUTION

Synthetic solvent fumes from drycleaning machines create acids when drawn through the dryer. These acid fumes cause rusting of painted parts, pitting of bright plated parts and completely removes the zinc from galvanized metal parts, such as the tumbler basket.

If the drycleaning machines are in the same area as the tumbler, then the tumbler make-up air must come from a source free of solvent fumes.

NOTE

BE SAFE - SHUT MAIN POWER OFF EXTERNALLY TO MACHINE BEFORE SERVICING.

WARRANTY

Cissell Manufacturing Company, (Cissell) warrants all new equipment (and the original parts thereof) to be free from defects in material or workmanship for a period of one (1) year from the date of sale thereof to an original purchaser for use, except as hereinafter provided. With respect to non-durable parts normally requiring replacement in less than one (1) year due to normal wear and tear, including, but not limited to, cloth goods, valve discs, hoses and iron cords, and with respect to all new repair or replacement parts for Cissell equipment for which the one (1) year warranty period has expired or for all new repair or replacement parts for equipment other than Cissell equipment, the warranty period is limited to ninety (90) days from date of sale. The warranty period on each new replacement part furnished by Cissell in fulfillment of the warranty on new equipment or parts shall be for the unexpired portion of the original warranty period on the part replaced.

With respect to electric motors, coin meters and other accessories furnished with the new equipment, but not manufactured by Cissell, the warranty is limited to that provided by the respective manufacturer.

Cissell's total liability arising out of the manufacture and sale of new equipment and parts, whether under the warranty or caused by Cissell's negligence or otherwise, shall be limited to Cissell repairing or replacing, at its option, any defective equipment or part returned f.o.b. Cissell's factory, transportation prepaid, within the applicable warranty period and found by Cissell to have been defective, and in no event shall Cissell be liable for damages of any kind, whether for any injury to persons or property or for any special or consequential damages. The liability of Cissell does not include furnishing (or paying for) any labor such as that required to service, remove or install; to diagnose troubles; to adjust, remove or replace defective equipment or a part; nor does it include any responsibility for transportation expense which is involved therein.

The warranty of Cissell is contingent upon installation and use of its equipment under normal operating conditions. The warranty is void on equipment or parts: that have been subjected to misuse, accident, or negligent damage; operated under loads, pressures, speeds, electrical connections, plumbing, or conditions other than those specified by Cissell; operated or repaired with other than genuine Cissell replacement parts; damaged by fire, flood, vandalism, or such other causes beyond the control of Cissell; altered or repaired in any way that effects the reliability or detracts from its performance, or; which have had the identification plate, or serial number, altered, effaced, or removed.

No defective equipment or part may be returned to Cissell for repair or replacement without prior written authorization from Cissell. Charges for unauthorized repairs will not be accepted or paid by Cissell.

CISSELL MAKES NO OTHER EXPRESS OR IMPLIED WARRANTY, STATUTORY OR OTHERWISE, CONCERNING THE EQUIPMENT OR PARTS INCLUDING, WITHOUT LIMITATION, A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, OR A WARRANTY OF MERCHANTABILITY. THE WARRANTIES GIVEN ABOVE ARE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. CISSELL NEITHER ASSUMES, NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT, ANY OTHER WARRANTY OR LIABILITY IN CONNECTION WITH THE MANUFACTURE, USE OR SALE OF ITS EQUIPMENT OR PARTS.

For warranty service, contact the Distributor from whom the Cissell equipment or part was purchased. If the Distributor cannot be reached, contact Cissell.

REPLACEMENTS PARTS ARE AVAILABLE FROM DISTRIBUTORS OR:



P.O. Box 32270
Louisville, KY
40232-2270
502/587-1292

Pacific Coast Office:
4823 W. Jefferson Blvd.
Los Angeles, CA 90016
213/731-2196

Foreign Distributors
write Export Dept.,
Cable Code "Cissell"
Telex No. 204158

European Headquarters:
Pantex-Cissell B.V.
P.O. Box 53, 9670 AB
Winschoten, Holland
Telex No. 53535

TABLE OF CONTENTS

INSTALLATION

PAGE

| | |
|---|-------|
| Cissell Dryers Model Numbers. | 5 |
| Unpacking, General Information. | 6 |
| Clearance & Dimension Drawings. | 7-8 |
| Specifications - C & K Models | 9 |
| Specifications - Steam Heated | 10 |
| Motor Number List | 10 |
| Specifications - F & R Models | 11 |
| Electric Heating Circuit Wire Size. | 11 |
| Electric Power Supply | 12 |
| Electrical Connections - All Dryers | 12 |
| Gas Supply Piping System Information. | 13 |
| Gas Piping Installation & Pipe Size | 14 |
| Gas Service Installation. | 15 |
| Steam Piping Installation Information | 16 |
| Exhaust Duct Installation | 17-20 |

OPERATION

| | |
|---|-------|
| Operating Instructions. | 21-22 |
| Two Timer Models Instructions | 23-24 |
| "Prompter" Models Control Board Switches. | 25 |
| Setting Switches on the "Prompter" Control Board. | 26 |
| Set-Up Procedure for "Prompter" Non-Coin Operation. | 27 |
| "Prompter" Operating Instructions | 28 |
| Rules for Safe Operation. | 29-30 |
| Burner Air Inlet Shutters Adjustment. | 31 |

TROUBLE SHOOTING

| | |
|---|-------|
| Dryer Diagnostics | 32 |
| Motors. | 33 |
| Noise, Dryer Runs But No Heat | 34-35 |
| Burners, Dryer Too Hot. | 36 |
| Steam, Reversing Basket | 37 |

SILICON CARBIDE IGNITION SYSTEM

| | |
|---|-------|
| General Information | 38 |
| Operation | 40-41 |
| Testing & Trouble Analysis. | 42 |
| Direct Ignition System Operation. | 43-44 |
| Wiring Diagram - K & R Models | 45 |
| Wiring Diagram - C & F Models | 46 |

MAINTENANCE


| | |
|---|----|
| Cleaning Dryer, Lint Trap & Basket. | 47 |
| Oil Gear Reducer, Leveling Bolts. | 47 |
| Pulley & Belts, Electric Motors | 47 |
| Gas Burners, Steam Units. | 47 |
| Basket Alignment - Single Motor | 48 |
| Basket Alignment - Double Motor | 49 |
| Shimming the Basket | 50 |
| Replacing the Bearings. | 51 |
| Air Switch Adjustment | 52 |
| Gear Reducer. | 53 |
| Gear Reducer - Replacing the Seals. | 54 |

ILLUSTRATED PARTS

| | |
|---|-------|
| Front View of Dryer - Double Motor Model. | 55-56 |
| Rear View of Dryer - Single Motor Model | 57-58 |
| Rear View of Dryer - Double Motor | 59-60 |
| Gear Reducer. | 61 |
| Prompter Basket & Sensor Assembly | 62 |
| Duct Work Assembly. | 63 |
| Air Switch Assembly | 63 |
| Front Panel & Door Assembly | 64 |
| Control Panel & Access Door - Single Timer. | 65 |
| Control Panel & Access Door - Double Timer. | 66 |
| Control Panel & Access Door - Coin Meter. | 67 |
| Control Panel & Access Door - Prompter. | 68 |
| Thermostat Assembly - C & F Models. | 69 |
| Thermistor Assembly - Prompter Models | 70 |
| Gas Bonnet & Burner Assembly - C & K Models | 71 |
| Gas Bonnet & Burner Assembly - F & R Models | 72 |
| Steam Bonnet Assembly | 73 |
| Electric Bonnet Assembly. | 74 |
| Electric Heating Unit Specifications. | 75 |
| Reversing Control Box Assembly. | 76 |
| Reversing Timer Assembly. | 77 |

CISSELL DRYERS MODEL NUMBERS

The model number of your Cissell Dryer is very important. It tells the size and type of dryer as detailed below. Refer to this number in all correspondence and when ordering parts. Also refer to the voltage, hertz and phase as marked on the rating plate.

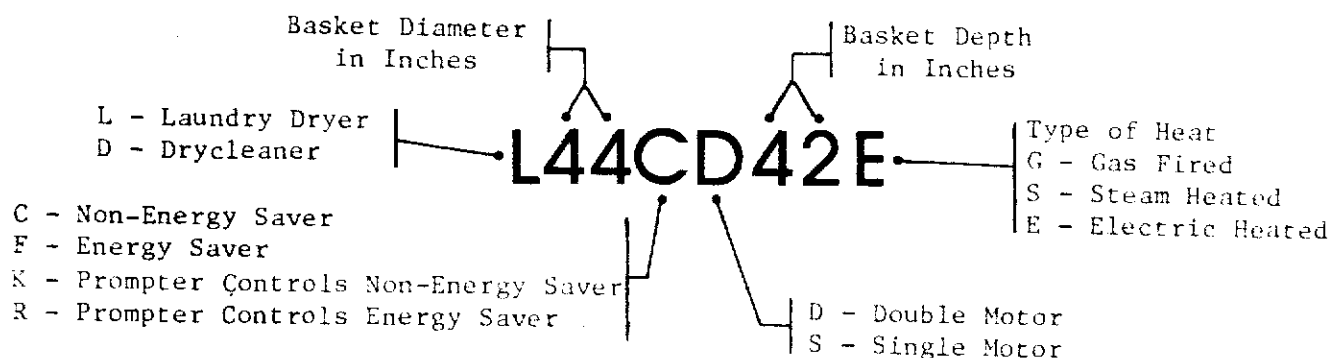

The 50 lb. Cissell dryers can be identified by the following list of model numbers. Throughout this manual the dryers may be referred to as the "50 lb. C Model, "K" model etc.

List of 50 lb. Dryer Model Numbers

| | |
|----------|----------|
| L36CD30E | L36FD30E |
| L36CD30G | L36FD30G |
| L36CD30S | L36FD30S |
| L36KD30E | L36RD30E |
| L36KD30G | L36RD30G |
| L36KD30S | L36RD30S |


STEAM PIPING INSTALLATION INSTRUCTIONS:

1. Set and anchor dryer in position. Machine should be level to assure proper steam circulation.
2. To prevent condensate draining from headers to dryer, piping should have a minimum 12" above respective header. Do not make steam connection to header with a horizontal or downwardly facing tee or elbow.
3. Whenever possible, horizontal runs of steam lines must drain, by gravity, to respective steam header. Water pockets, or an improperly drained steam header will provide wet steam, causing improper operation of dryer. If pockets or improper drainage cannot be eliminated, install a by-pass trap to drain condensate from the low point in the steam supply header to the return.
4. In both steam supply and steam return line, it is recommended that each have a 3/4" union and 3/4" globe valve. This will enable you to disconnect the steam connections and service the dryer while your plant is in operation.
5. Before connecting trap and check valve to dryer, open globe valve in steam supply line and allow steam to flow through dryer to flush out any dirt and scale from dryer. This will assure proper operation of trap when connected.
6. After flushing system, install bucket trap (w/built in strainer) and check valve. For successful operation of dryer, install trap 18" below coil and as near to the dryer as possible. Inspect trap carefully for inlet and outlet markings and install according to trap manufacturer's instructions. If steam is gravity returned to boiler, omit trap but install check valve in return line near dryer.
7. Install union and globe valve in return line and make final pipe connections to return header.

PIPING RECOMMENDATIONS:

1. Trap each dryer individually. Always keep the trap clean and in good working condition.
2. When dryer is on the end of a line of equipment extend header at least 4 feet beyond dryer. Install globe valve, union, check valve and by-pass trap at end of line. If gravity return to boiler, omit trap.
3. Insulate steam supply and return line for safety of operator and safety while servicing dryer.
4. Keep dryer in good working condition. Repair or replace any worn or defective parts.

RECOMMENDED
STEAM PIPING INSTALLATION
ILLUSTRATION

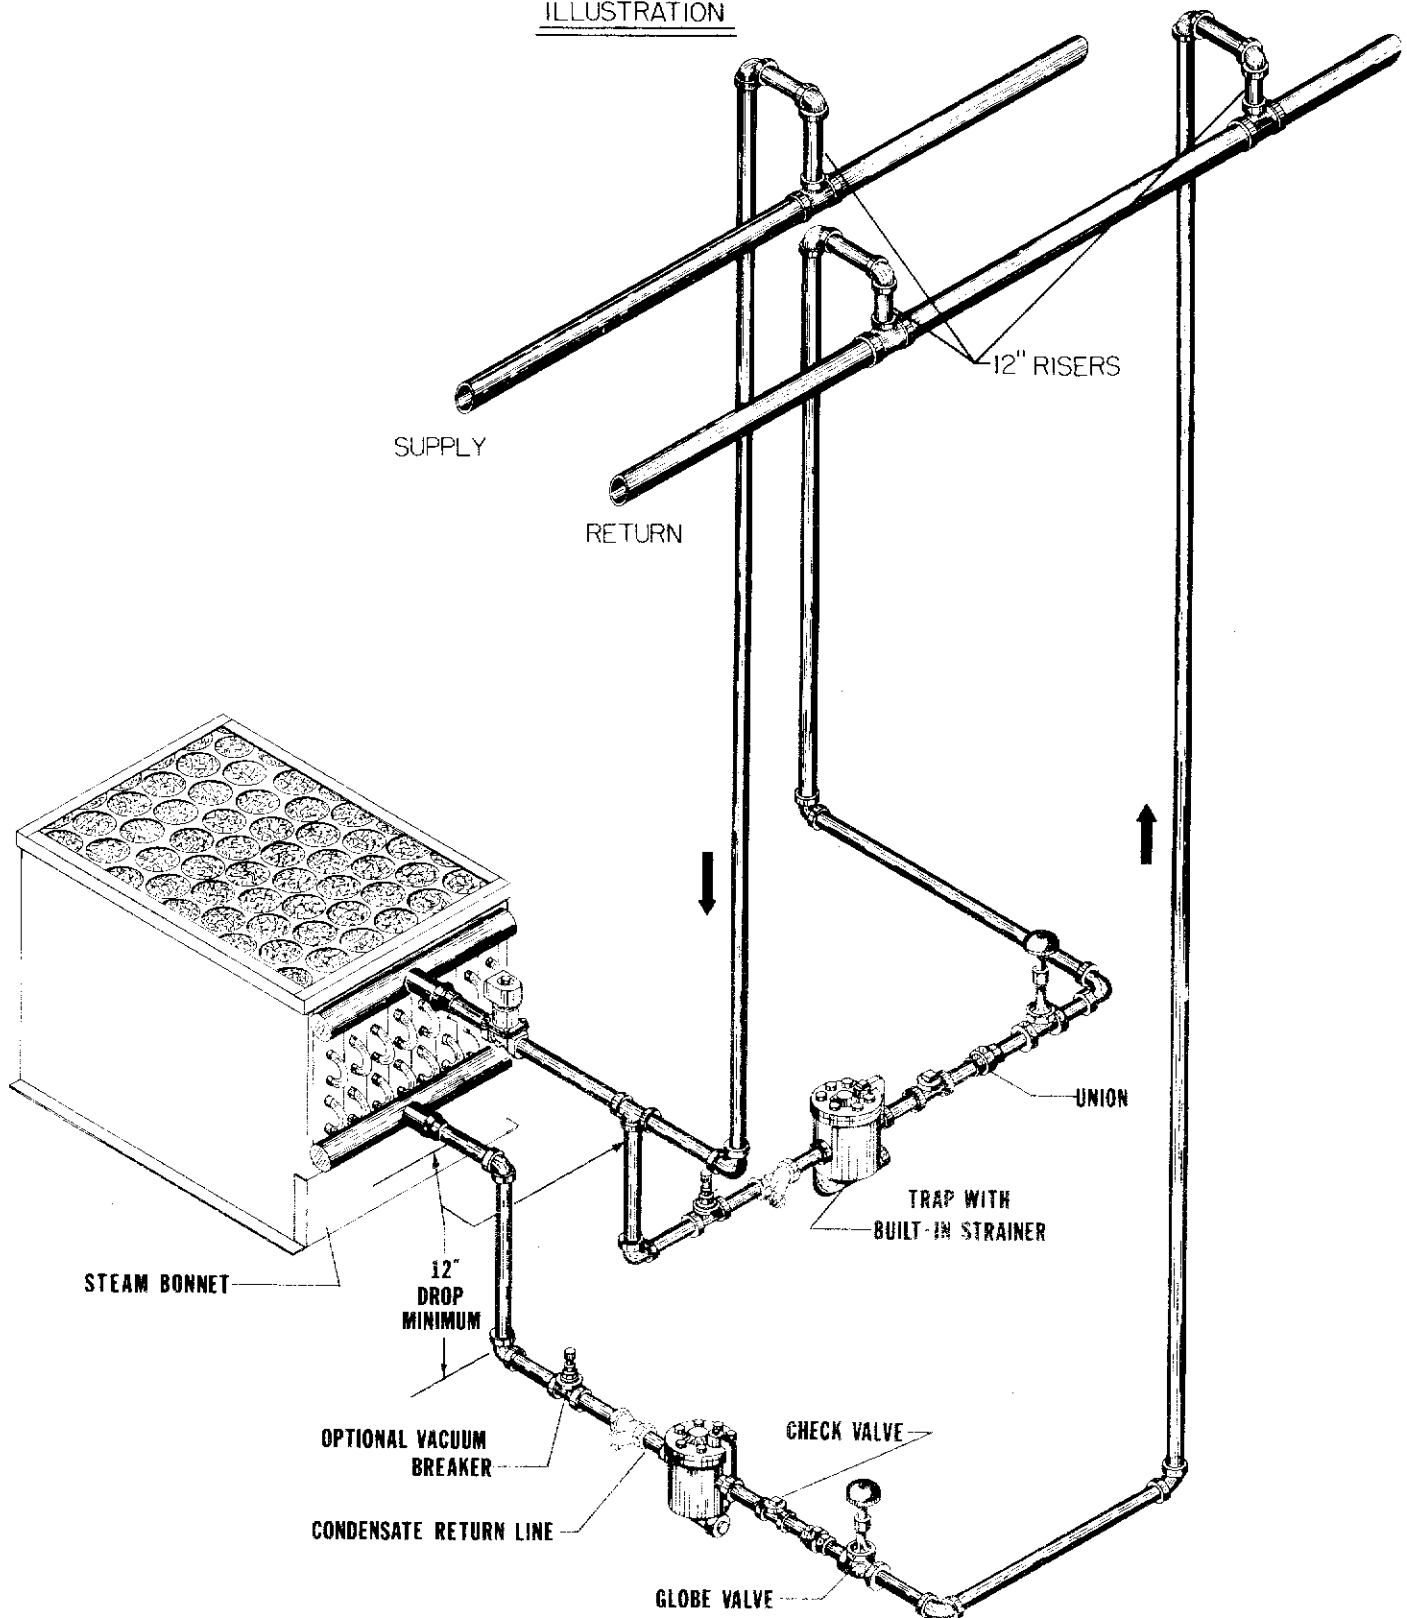

UNPACKING

All Cissell dryers are packed in a protective (heavy-duty) plastic bag.

Upon arrival of the equipment, any damage in shipment should be reported to the carrier immediately.

When locating permanent location of unit, care should be taken in movement and placement of equipment.

See outline clearance diagrams for correct dimensions.

Remove all packing material such as: tapes, manuals, skid, etc. On gear reducer models, remove screw from air vent and cork from oil reserve well.

Leveling: Use spirit level on top of dryer. Adjust leveling bolts on dryer (see adjustable leveling bolts in maintenance section).

Check voltage and amperes on rating plate before installing the dryer.

GENERAL INSTALLATION - ALL DRYERS

The construction of Cissell dryers permits installation side by side to save space or to provide a wall arrangement. Position dryer for the least amount of exhaust piping and elbows, and allow free access to the rear of dryer for future servicing of belts, pulleys and motors. Installation clearances from all combustible construction is 0" ceiling clearance, 0" rear clearance, and 0" side clearance.

Before operating dryer, open basket door and remove blocking between front panel and basket. Read all instruction tags, etc.

GENERAL INFORMATION

The Cissell Dryer is so designed that when an operator opens the dryer door, the basket and exhaust fan stops. You can expect fast drying from a Cissell Laundry Dryer. Hot, dry air is properly and effectively moved through basket and exhausted through a lint trap to atmosphere. The Cissell Dryer comes equipped with an inclined self-cleaning lint screen. In this system, lint accumulates on the underside of the screen until a blanket approximately 1/4" thick is formed. This blanket of lint will fall from the screen to the bottom of the dryer cabinet, and should be removed daily, or as required, to prevent an over accumulation.

IMPORTANT: Provide adequate clearance for air openings into the combustion chamber.

CISSELL "COOL-DOWN" CYCLE



Permanent press, durable press and other modern day fabrics require the care that your Cissell Laundry Dryers now provide.

At the end of the drying cycle, a timed "cool-down" control automatically takes over and continues the rotation of the fan and basket without heat until the garment load reaches a safe cool temperature. This function is performed at the end of each drying cycle and continues for two minutes.




50 LB. F & R MODELS (ENERGY-SAVERS)
 DRYER DIMENSIONS

(36FS30 ILLUSTRATED)

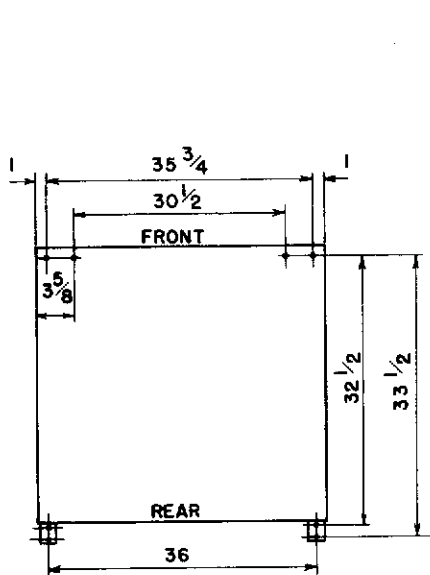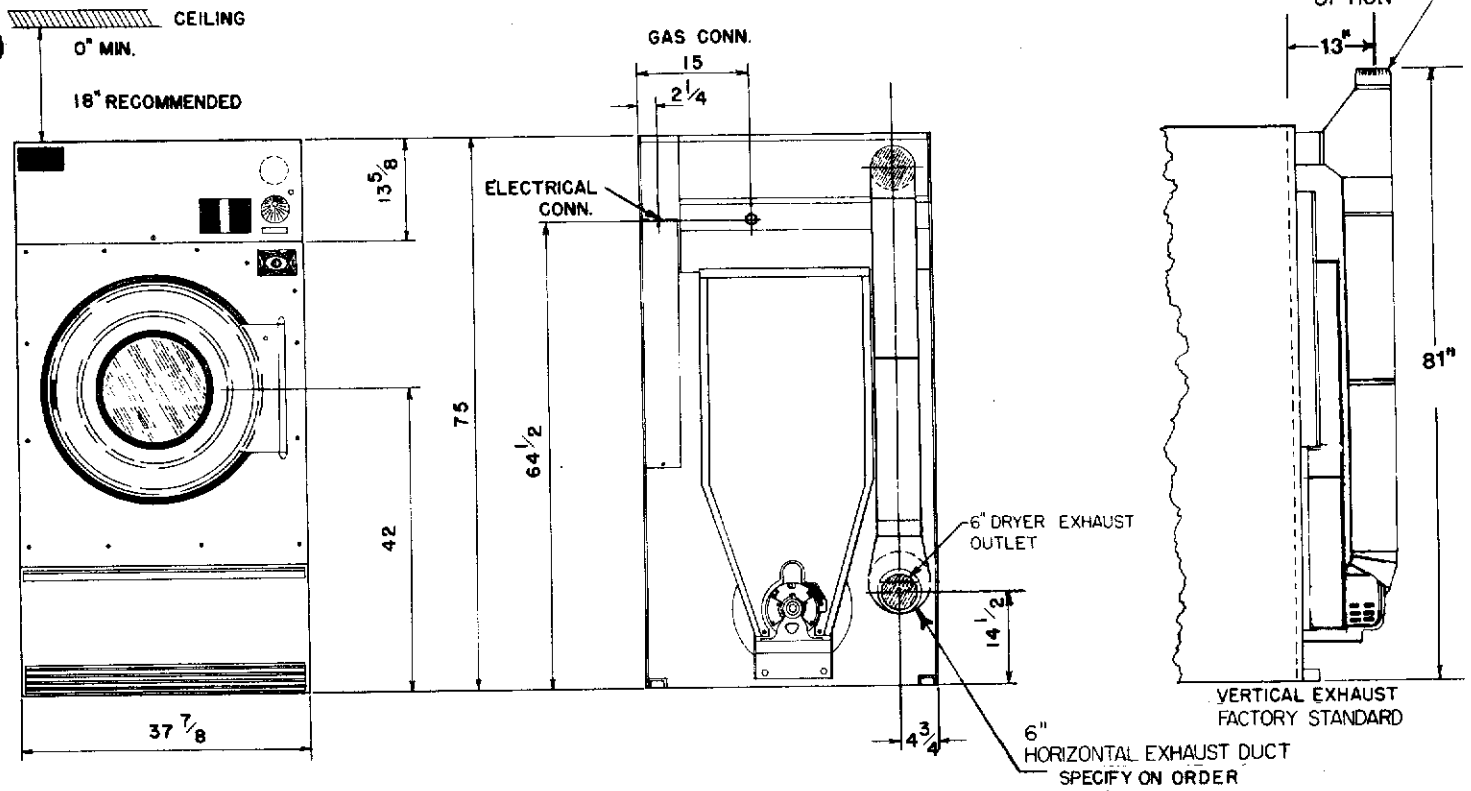

MOUNTING HOLES

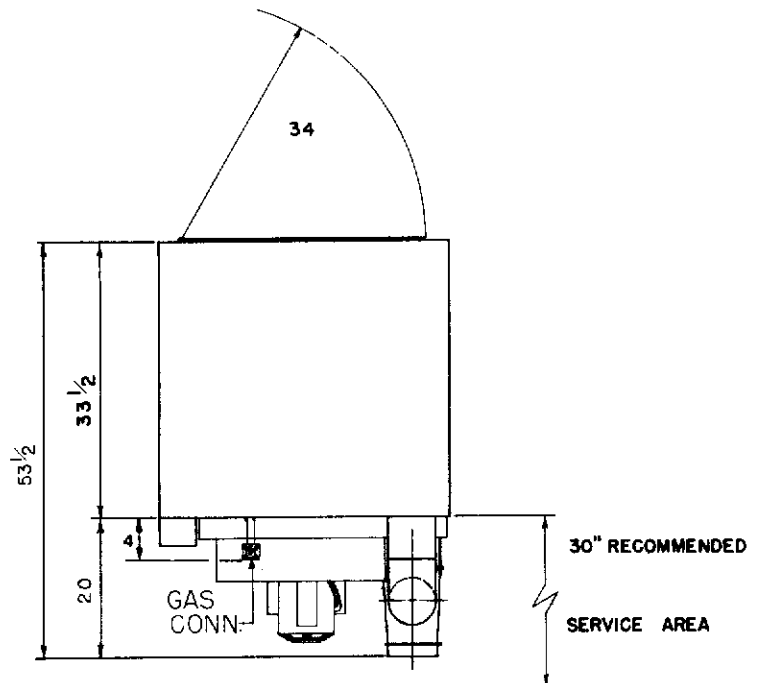

TOP VIEW

ALL DIMENSIONS GIVEN IN INCHES $\pm \frac{1}{4}$

SPECIFICATIONS 50 LB. C & K MODELS

General Specifications

| | |
|--|---|
| Basket Load Capacity... | 50 lbs (22.68 KG) Dryweight |
| Floor Space (Double Motor)... | 75" (190.5CM) High x 45 1/8" (114.63CM) Deep x 37 7/8" (96.22CM) Wide |
| Floor Space (Single Motor)... | 75" (190.5CM) x 46 1/2" (118.11CM) Deep x 37 7/8" (96.22CM) Wide |
| Basket Size... | 36" (91.44CM) Diameter x 30" (76.2CM) Deep |
| Exhaust Duct... | 8" (20.32CM) Diameter |
| Motor Size (Fan Motor)... | 1/3 H.P. (36CD30) |
| Motor Size (Basket Size)... | 1/2 H.P. (36CD30) |
| Motor Size (Single Motor)... | 3/4 H.P. (36CS30) |
| Maximum Air Displacement... | 800 C.F.M (22.65 M ³ /Min.) |
| Recommended Operating Range... | 630-730 C.F.M. (17.84-20.67 M ³ /Min.) |
| Net Weight (Approximate)... | 590 lbs. (267.62 KG) Model "CS" 640 lbs. (290.3 KG) Model "CD & KD" |
| Domestic Shipping Weight (1 carton)... | 655 lbs. (297.1 KG) Model "CS" |
| Export Shipping Weight (1 Box)... | 705 lbs. (319.78 KG) Model "CD & KD" |
| Export Shipping Weight (1 Carton)... | 1130 lbs. (512.56 KG) Model "CS" 1180 lbs. (535.24 KG) Model "CD & KD" |
| Export Shipping Dimensions... | 83" (210.82CM) Long x 45" (114.3CM) Wide x 55" (139.7CM) High |
| Basket R.P.M. | Reversing- 42-3.2 Reversals per minute Non- Rev.- 42 |

For total amps, check Electrical Rating Plate on dryer.

1. Can be designed for any voltage.

2. 50 HZ or 60 HZ

3. 1 or 3 Phase

Electrical wiring to dryer must comply with local electrical code requirements.

GAS FIRED DRYERS

| | |
|------------------------------|--|
| Gas Supply... | 1/2" (1.27CM) Pipe Connection |
| *B.T.U. Input (3 Burners)... | 130,000/Hour (Natural Gas) 130,000/Hour (Liquid Petroleum Gases) |
| Electronic Ignition... | Silicon Carbide Gas Ignition System |
| Drying Time (Approximate)... | 10 lbs. (4.54KG) dryweight (Indianhead) 100% moisture retention- 10 Minutes |

*Input ratings as shown are for elevations up to 2,000 ft. (609.6 M). For higher elevations, ratings should be reduced 4% for each 1,000 ft (304.8 M) above sea level.

ELECTRICALLY HEATED DRYERS

| | |
|------------------------------|---|
| Heater Input... | 30 Kilowatts per Hour |
| Total Heater Current... | See page 62 |
| Drying Time (Approximate)... | 12 lbs. (5.44KG) dryweight (IndianHead) 80% Moisture retention- 12 Minutes |

STEAM HEATED - NINE SECTION

| | |
|--|--|
| Maximum Air Displacement..... | 800 C.F.M. (22.65 M ³ /Minute) |
| Recommended Operating Range..... | 630-730 C.F.M. (17.84-20.67 M ³ /Minute) |
| Steam Supply Connection..... | 3/4" (1.91 CM) |
| Steam Return Connection..... | 3/4" (1.91 CM) |
| Operating Steam Pressure..... | 7-15 PSIG (3.18-6.8KG) low pressure 100 PSIG (45.36 KG) Max. high pressure |
| Drying Time (approximate)..... | 25 lbs. (11.34KG) dryweight (Indian Head) 80% moisture retention - 30 minutes low pressure, 22 minutes high pressure |
| Steam Consumption..... | 2.7 B.H.P. - 90 lbs. (40.7 KG) / Hour with normal load - Low pressure3.4 B.H.P. - 117.3 lbs. (53.21 KG) / Hour with normal load - High pressure |
| Net Weight (approximate)..... | 640 lbs. (290.3 KG) Model "CS" 690 lbs. (312.98 KG) Model "CD & KD" |
| Domestic Shipping Weight - 1 carton..... | 705 lbs. (319.78 KG) Model "CS" 755 lbs. (342.46 KG) Model "CD & KD" |
| Export Shipping Weight - 1 box..... | 1182 lbs. (535.24 KG) Model "CS" 1230 lbs. (557.92 KG) Model "CD & KD" |
| Export Shipping Dimensions..... | 83"(210.82 CM) Long x 45"(114.3 CM) Wide x 55"(139.7 CM) High |

MOTOR NUMBER LIST FOR CLOTHES DRYER 50 LB. MODELS

CD, FD, RD, KD MODELS

| <u>MOTOR NO.</u> | <u>VOLTAGE</u> | <u>CYC.</u> | <u>PH</u> | <u>H.P.</u> | <u>BASKET/FAN MOTOR</u> | <u>MOTOR AMPS</u> |
|------------------|----------------|-------------|-----------|-------------|-------------------------|-----------------------|
| MTR210 | 115/208-230 | 60 | 1 | 1/2 | Basket | 5.6/2.8 |
| MTR213 | 208-230/460 | 60 | 3 | 1/2 | Basket | 1.9/.96 |
| MTR138 | 120 | 50 | 1 | 1/2 | Basket | 7.8 |
| MTR139 | 240 | 50 | 1 | 1/2 | Basket | 4.1 |
| MTR151 | 208/240/480 | 50/60 | 3 | 1/2 | Basket | 2.0/1.0 |
| MTR187 | 240/415 | 50 | 3 | 1/2 | Basket | 1.9/1.1 |
| MTR111 | 575 | 60 | 3 | 1/2 | Basket | .77 |
| MTR209 | 115/208-230 | 60 | 1 | 1/3 | Fan | 5.2/2.6 |
| MTR140 | 120 | 50 | 1 | 1/3 | Fan | 5.6 |
| MTR141 | 240 | 50 | 1 | 1/3 | Fan | 3.4 |
| MTR184 | 240/415 | 50 | 3 | 1/3 | Fan | 1.6/.9 |
| MTR218 | 208/220/440 | 50/60 | 3 | 1/3 | Fan | 1.7/.85 |
| MTR36 | 575 | 60 | 3 | 1/3 | Fan | .59 |
| MTR232 | 208/220/440 | 50 | 3 | 1/3 | Fan | 1.5/.75 |

CS,FS Models

| | | | | | | |
|--------|-------------|----|---|-----|--------------|---------|
| MTR202 | 115/208-230 | 60 | 1 | 3/4 | Basket & Fan | 7.2/3.6 |
| MTR126 | 120 | 50 | 1 | 3/4 | Basket & Fan | 12.0 |
| MTR127 | 240 | 50 | 1 | 3/4 | Basket & Fan | 6.0 |
| MTR211 | 208-230/460 | 60 | 3 | 3/4 | Basket & Fan | 2.6/1.3 |
| MTR186 | 240/415 | 50 | 3 | 3/4 | Basket & Fan | 2.4/1.4 |

SPECIFICATIONS

50 LB. F & R MODELS

| | |
|------------------------------------|---|
| Basket Capacity. | .50 lbs.(22.68 KG) dryweight |
| Floor Space. | .75"(190.5 CM) High x 53½"(135.89 CM)Deep x 37 7/8"(96.22 CM) Wide |
| Basket Size. | .36"(91.44 CM) Diameter x 30"(76.2 CM) Deep |
| *Exhaust Duct. | 6"(15.24 CM) Diameter (Exhaust air pressure max. 0.3"(.76 CM) static pressure) |
| Motor Size(Fan). | 1/3 H.P. (36FD30) |
| Motor Size(Basket) | 1/2 H.P. (36FD30) |
| Motor Size(single motor) | 3/4 H.P. (36FS30) |
| Basket R.P.M. | Reversing- 42-3.2 Reversals per minute Non-Rev. - 42 |

For total amps check electrical rating plate on dryer.

1. Can be designed for any voltage.
2. 50 or 60 HZ.
3. 1 or 3 Phase.

Maximum air displacement. 450 C.F.M (12.74 M³/ Min.)
Recommended Operating Range. 300-350 C.F.M (8.8-9.4 M³/Min.)

*B.T.U. Input 104,000 BTU/ Hour

Dryer (set at factory) gas burners built-in 3.5" (8.89 CM) regulated pressure (natural gas only).

Models can be equipped for use with natural gas or liquid petroleum gases (L.P.)

Gas Supply. 1/2" (1.27 CM) Pipe Connection

Drying Time (Approximate) 10 lbs.(4.54 KG) dry weight (Indian Head)
100% moisture retention- 10 Minutes

Net Weight (Approximate) 640 lbs.(290.3 KG) Model FS

690 lbs. (312.98 KG) Model FD & RD

Domestic Shipping Weight (Approximate). . 705 lbs.(319.78 KG) Model FS

755 lbs. (342.46 KG) Model FD & RD

Export Shipping Weight (Approximate) . . .1180 lbs.(535.24 KG) Model FS

1230 lbs. (557.92 KG) Model FD & RD

* Input ratings as shown are for elevations up to 2,000ft.(609.6 M). For higher elevations, ratings should be reduced 4% for each 1,000 ft.(304.8 M) above sea level.

Electrical wiring to dryer must conform to local electrical code requirements.

****Remove 5" (12.7 CM) I.D. exhaust ring for high altitude installations.**

WIRE SIZE OF POWER SUPPLY FOR ELECTRIC HEATING CIRCUIT

| Rated Heater Output | Heater Amperes, Motor Amperes Control Amperes Total Amperes at Rated Voltage | Minimum Size Supply Wire Based on 60°C. (140°F.) Insulated Copper Conductor AWG/MCM | Conduit Trade Size | Controls Phase |
|------------------------|--|--|--------------------------|-------------------|
| 30 KW @ 208V/3PH. | 91 Amps. | 2 AWG | 1½" | 1 PH |
| 30 " " " | 87 Amps. | 2 AWG | 1½" | 1 PH |
| 30 " " 240V/3PH. | 79 Amps. | 3 AWG | 1½" | 1 PH |
| 30 " " " | 76 Amps. | 3 AWG | 1½" | 1 PH |
| 30 " " 480V/3PH. | 39 Amps. | 8 AWG | 1" | 1 PH |
| 30 " " 240/415V/3PH | 76A./45 Amps | 3 AWG/6 AWG | 1½"/1½" | 1 PH |
| 30 " " 575V/3PH | 35 Amps. | 8 AWG | 1" | 1 PH |


CAUTION: This machine has one power supply connection point. Disconnect power supply before servicing.


ELECTRICAL CONNECTIONS - ALL DRYERS

Dryers must be electrically grounded - by a separate #14 or larger green wire from the grounding terminal within the service connection box to a cold water pipe, or through the fourth green wire properly grounded and connected to the grounding terminal. In all cases, the grounding method must comply with local electrical code requirements; or in the absence of local codes, with the National Electrical Code as ANSI/NFPA No. 70-1984.

See wiring diagram furnished with dryer. Your Cissell dryer is completely wired at the factory and it is only necessary for the electrician to connect the power leads to the wire connectors within the service connection box on the rear of the dryer. Do not change wiring without consulting factory as you may void the factory warranty. Do not connect the dryer to any voltage or current other than that specified on the dryer rating plate. (Wiring diagram is located on rear wall of dryer).

GROUNDING INSTRUCTIONS

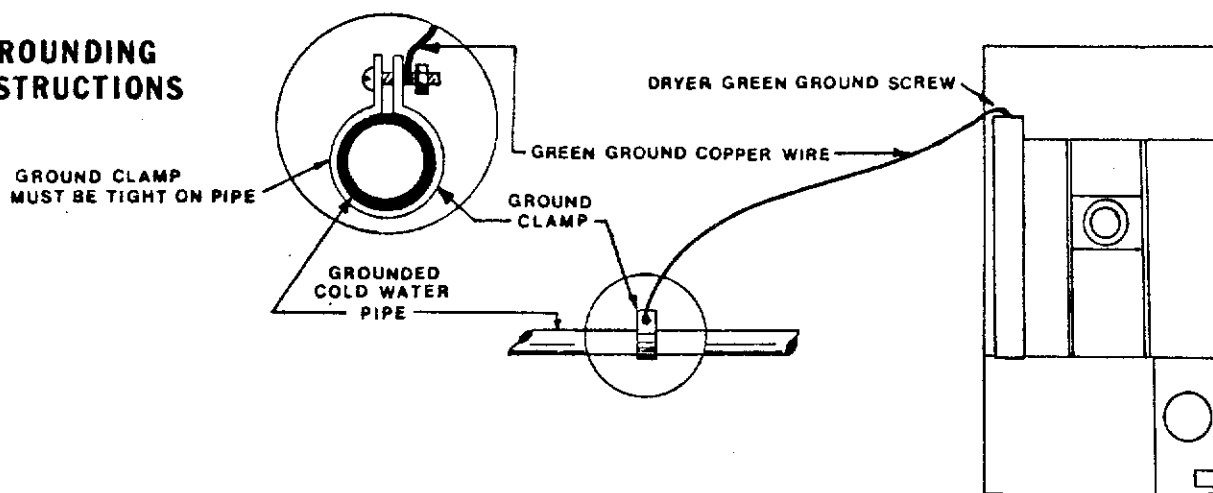

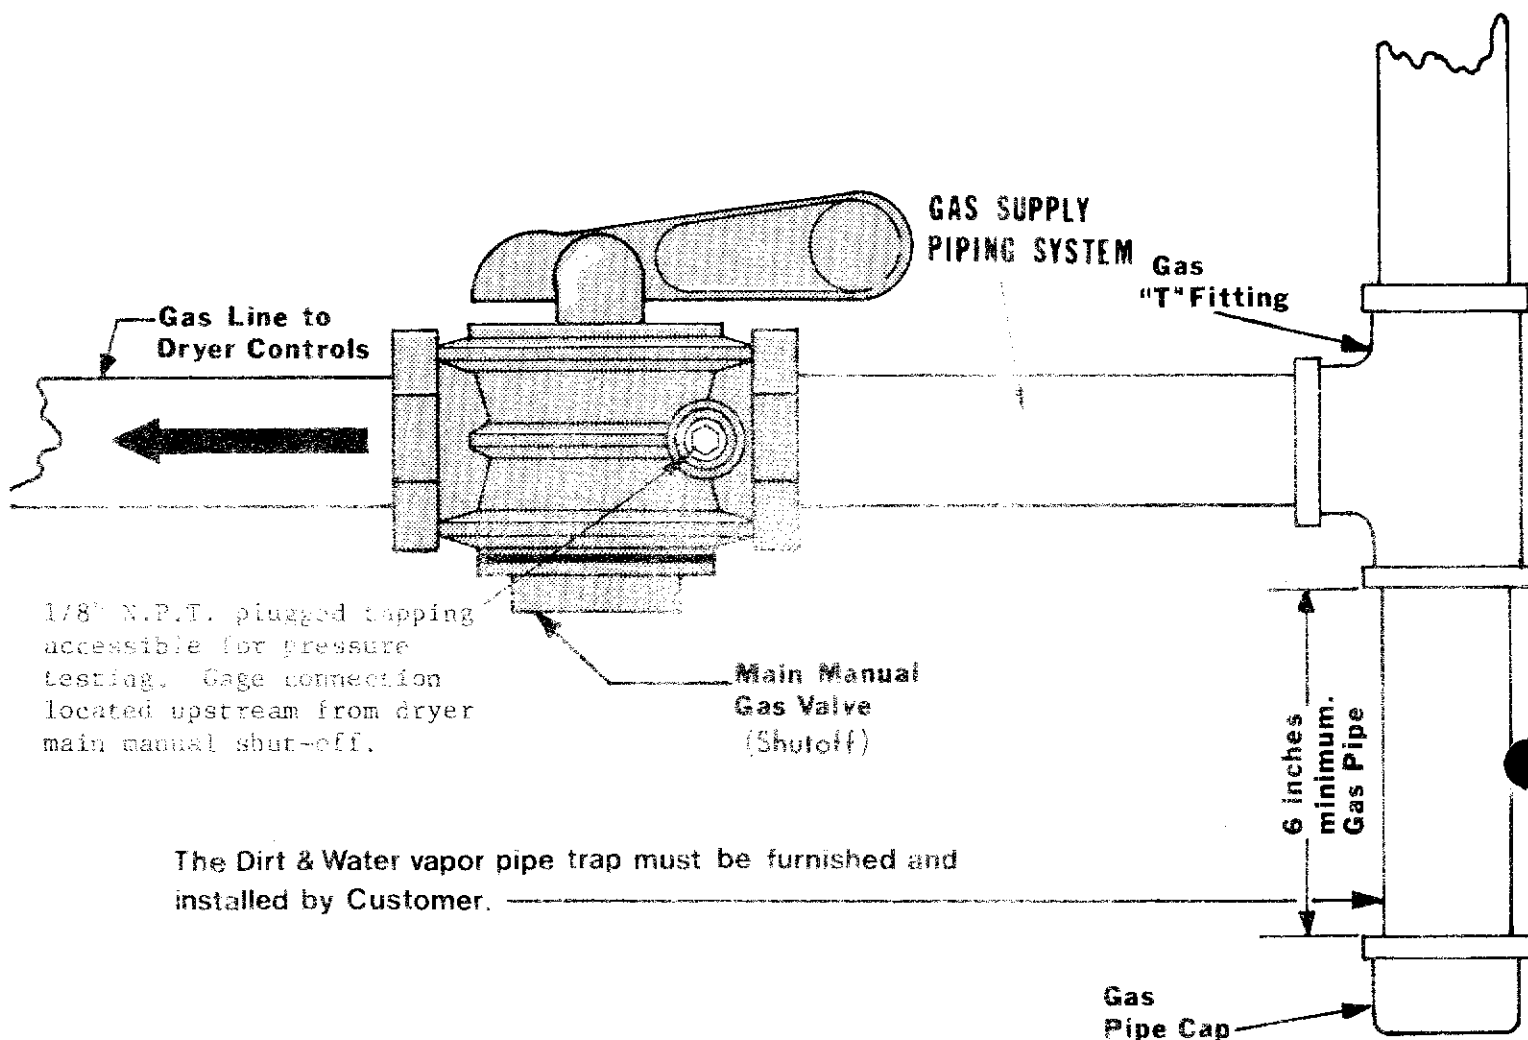

The dryer and it's individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of $\frac{1}{2}$ psig.

The dryer must be isolated from the gas supply piping system by closing it's individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than $\frac{1}{2}$ psig.

| TOTAL BTU/HR (for L.P. gas correct total BTU/HR below by multiplying by .6) | GAS PIPE SIZE FOR 1000 BTU NATURAL GAS AT 7" W.C. PRESSURE | | | | | |
|--|--|--------|--------|---------|---------|---------|
| | In figuring total length of pipe, make allowance for tees and elbows. | | | | | |
| | 25 Ft. | 50 Ft. | 75 Ft. | 100 Ft. | 125 Ft. | 150 Ft. |
| 60,000 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 |
| 80,000 | 3/4 | 3/4 | 3/4 | 1 | 1 | 1 |
| 100,000 | 3/4 | 3/4 | 1 | 1 | 1 | 1 |
| 120,000 | 3/4 | 1 | 1 | 1 | 1 | 1 |
| 140,000 | 3/4 | 1 | 1 | 1 | 1 | 1 1/2 |
| 160,000 | 3/4 | 1 | 1 | 1 1/2 | 1 1/2 | 1 1/2 |
| 180,000 | 1 | 1 | 1 | 1 1/2 | 1 1/2 | 1 1/2 |
| 200,000 | 1 | 1 | 1 1/2 | 1 1/2 | 1 1/2 | 1 1/2 |
| 300,000 | 1 | 1 1/2 | 1 1/2 | 1 1/2 | 1 1/2 | 1 1/2 |
| 400,000 | 1 1/2 | 1 1/2 | 1 1/2 | 1 1/2 | 1 1/2 | 2 |
| 500,000 | 1 1/2 | 1 1/2 | 1 1/2 | 2 | 2 | 2 |
| 600,000 | 1 1/2 | 1 1/2 | 2 | 2 | 2 | 2 |
| 700,000 | 1 1/2 | 2 | 2 | 2 | 2 | 2 1/2 |
| 800,000 | 1 1/2 | 2 | 2 | 2 | 2 1/2 | 2 1/2 |
| 900,000 | 2 | 2 | 2 | 2 1/2 | 2 1/2 | 2 1/2 |
| 1,000,000 | 2 | 2 | 2 | 2 1/2 | 2 1/2 | 2 1/2 |
| 1,100,000 | 2 | 2 | 2 1/2 | 2 1/2 | 2 1/2 | 2 1/2 |
| 1,200,000 | 2 | 2 | 2 1/2 | 2 1/2 | 2 1/2 | 2 1/2 |
| 1,300,000 | 2 | 2 1/2 | 2 1/2 | 2 1/2 | 2 1/2 | 3 |
| 1,400,000 | 2 | 2 1/2 | 2 1/2 | 2 1/2 | 3 | 3 |
| 1,500,000 | 2 | 2 1/2 | 2 1/2 | 2 1/2 | 3 | 3 |
| 1,600,000 | 2 | 2 1/2 | 2 1/2 | 3 | 3 | 3 |
| 1,700,000 | 2 | 2 1/2 | 2 1/2 | 3 | 3 | 3 |
| 1,800,000 | 2 1/2 | 2 1/2 | 3 | 3 | 3 | 3 |
| 1,900,000 | 2 1/2 | 2 1/2 | 3 | 3 | 3 | 3 |
| 2,000,000 | 2 1/2 | 2 1/2 | 3 | 3 | 3 | 3 1/2 |
| 2,200,000 | 2 1/2 | 3 | 3 | 3 | 3 1/2 | 3 1/2 |
| 2,400,000 | 2 1/2 | 3 | 3 | 3 | 3 1/2 | 3 1/2 |
| 2,600,000 | 2 1/2 | 3 | 3 | 3 1/2 | 3 1/2 | 3 1/2 |
| 2,800,000 | 2 1/2 | 3 | 3 | 3 1/2 | 3 1/2 | 3 1/2 |
| 3,000,000 | 2 1/2 | 3 | 3 1/2 | 3 1/2 | 3 1/2 | 4 |
| 3,200,000 | 3 | 3 | 3 1/2 | 3 1/2 | 3 1/2 | 4 |
| 3,400,000 | 3 | 3 1/2 | 3 1/2 | 3 1/2 | 4 | 4 |
| 3,600,000 | 3 | 3 1/2 | 3 1/2 | 3 1/2 | 4 | 4 |
| 3,800,000 | 3 | 3 1/2 | 3 1/2 | 4 | 4 | 4 |
| 4,000,000 | 3 | 3 1/2 | 3 1/2 | 4 | 4 | 4 |

GAS PIPING INSTALLATION

The installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code as ANSI Z223.1-1984.

Check gas rating plate for type of gas to equip the dryer.

Check for altitude elevation of the dryer.

Check utilities for proper installation of gas supply line and gas pressure.

Natural Gas Only

Check the gas pressure inlet supply to dryer, 7 inches W. C. Pressure maximum.


Check the manifold pressure, 3.5 inches W.C. Pressure inside the dryer.

CAUTION: Low gas pressure and intermittent gas will cause gas ignition problems and inadequate drying of the clothes load.

GAS SERVICE INSTALLATION INFORMATION

The size of the gas service pipe is dependant upon many variables, such as tees, lengths, etc. Specific pipe size should be obtained from the gas supplier. Refer to the "Gas Pipe Size" chart in this manual for general gas pipe size information.

Caution: Gas loop piping must be installed as illustrated to maintain equal gas pressure for all dryers connected to a single gas service. Gas loop pipe should be a 3/4" pipe. Other gas using appliances should be connected upstream from the loop.

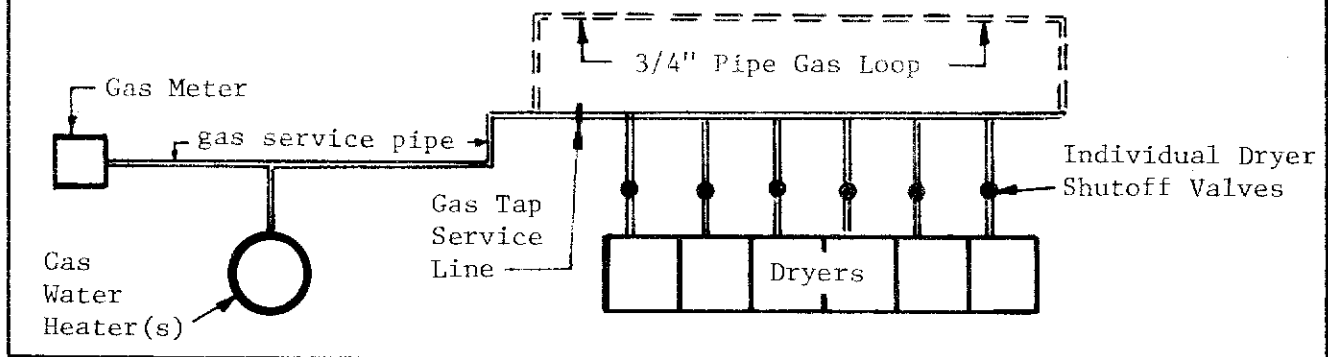


WARNING: If the dryer is to be connected to liquified petroleum (L.P.) gas, a vent to the outdoors must be provided.

DRYER INSTALLATION WITH MULTIPLE EXHAUST

For Exhaust Duct more than 14 ft. and 2 elbows equivalent and more than 0.3 in. static pressure.


1. Make-Up air from outside building may enter enclosure from top or side walls. Area of opening should be equal to 4 - 6 times the sum of dryer duct areas. Provide 1 sq. ft. for each 6 in. diameter; 2 sq. ft. for each 8 in. diameter; and 4 sq. ft. for each 12 in. diameter.
2. Use constant diameter duct with area equal to the sum of dryer duct areas. Example: 6 - 8 in. diameter duct = 1 - 19.6 in. diameter duct in area. Use 20 in. diameter duct or diameter to match tube-axial fan.
3. Enclosure (plenum) with service door. This separates the dryer air from room comfort air. If dryers use room air instead of outside air, the heat loss can be another 25 B.T.U./hr. for each cubic foot per minute (CFM) used. Example: 110 lb. dryer, 2000 CFM = 50,000 B.T.U./hr. loss.
4. Zero inches clearance to combustible material allowed on sides and at points within 4 inches of front on top.
5. Heat loss into laundry room from dryer fronts only is about 60 B.T.U./hr. per sq. ft.
6. Flange mounted, belt driven tube-axial fan. Fan must run when one or more dryers are running. See suggested automatic electrical control wiring diagram on previous page. Must meet local electrical codes. Fan air flow (CFM) is equal to sum of dryer air flows, but static pressure (S.P.) is dependent on length of pipe and number of elbows.
7. Barometric By-Pass Damper - adjust to closed flutter position with all dryers and exhaust fan running. Must be located within enclosure.

CAUTION: No two installations are the same. For assistance, consult factory (502) 587-1292. Never install hot water heaters or other gas appliances in the same room as dryers. Never install cooling exhaust fans in the same room as dryers.

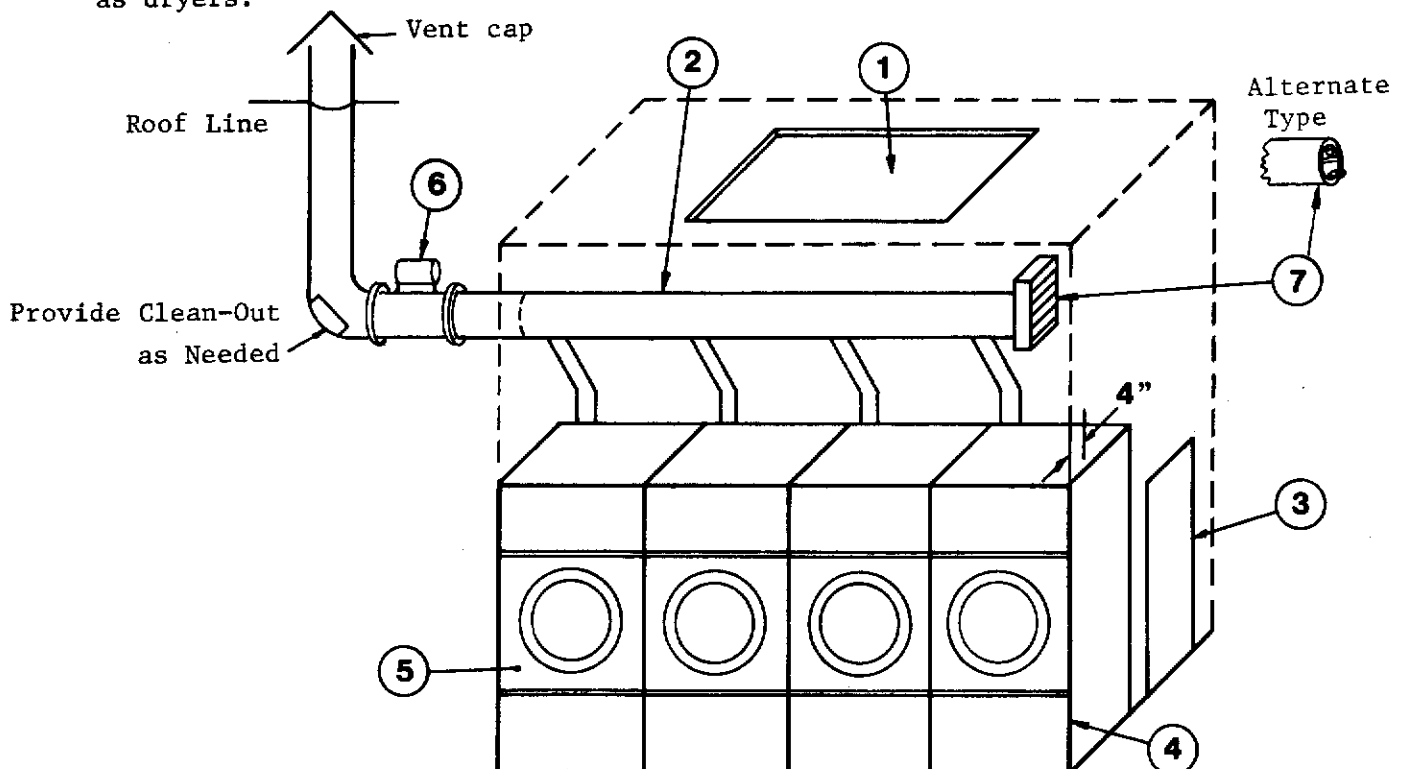

DRYER INSTALLATION WITH MULTIPLE EXHAUST

For Exhaust Duct less than 14 ft. and two elbows equivalent and less than 0.3 in. static pressure.

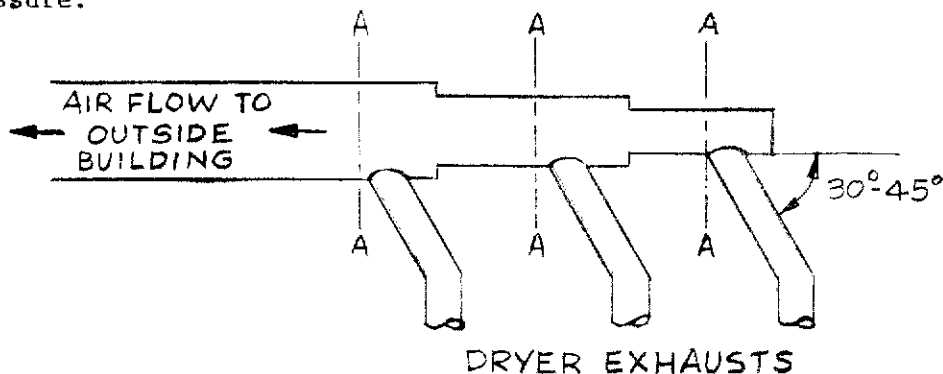

Area of section "A-A" must be equal to the sum of dryer exhaust pipes entering multiple exhaust pipe. See chart below.


| | | | | | | | | | | | | | | | | | | | | | | | | |
|-------------------------|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| NO. OF DRYERS | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
| DUCT DIAMETER in inches | 6 | 9 | 11 | 12 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 23 | 24 | 25 | 26 | 26 | 27 | 28 | 28 | 29 | 30 |

| | | | | | | | | | | | | | | | | | | | | | | | | |
|-------------------------|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| NO. OF DRYERS | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
| DUCT DIAMETER in inches | 8 | 12 | 14 | 16 | 18 | 20 | 22 | 23 | 24 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |

| | | | | | | | | | | | | |
|-------------------------|----|----|----|----|----|----|----|----|----|----|----|----|
| NO. OF DRYERS | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
| DUCT DIAMETER in inches | 12 | 17 | 21 | 24 | 27 | 30 | 32 | 34 | 36 | 38 | 40 | 42 |

AUTOMATIC ELECTRICAL CONTROL FOR EXHAUST FAN

For one or more dryers to start fan.

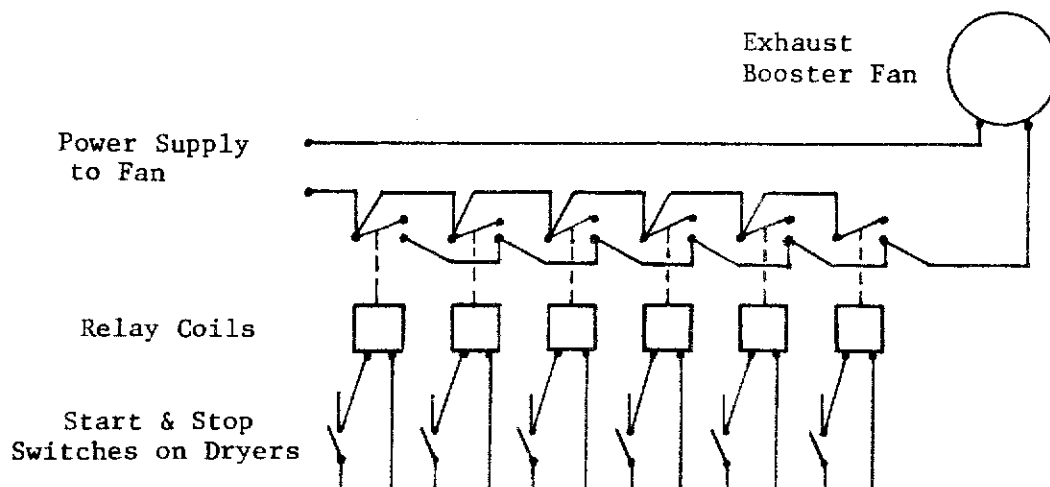

DRYER INSTALLATION WITH SEPARATE EXHAUST (PREFERRED)


For ductwork less than 14 ft. and 2 elbows equivalent and less than 0.3 in. static pressure.

Never exhaust the dryer into a chimney.

Never install wire mesh screen over the exhaust or make-up air area.

Never exhaust into a wall, ceiling, or concealed space.

- ①. Make-Up Air opening from outside the building may enter the enclosure from the top or side walls. The area of the opening should be equal to 4 to 6 times the sum of the dryer duct areas. Provide 1 sq. ft. for each 6 in. diameter; 2 sq. ft. for each 8 in. diameter; and 4 sq. ft. for each 12 in. diameter.
- ②. Enclosure (plenum) with service door. This separates the dryer air from the room comfort air. If dryers use room air instead of outside air, additional heat loss can be another 25 B.T.U./hr. for each cubic foot per minute (CFM) used. Example: a 110 lb. dryer with 2000 CFM = heat loss of 50,000 B.T.U./hr.
- ③. Zero inches clearance to combustible material allowed on sides and at points within 4 inches of front on top.
- ④. Heat loss into laundry room from dryer front panels is about 60 B.T.U./hr. per square foot.

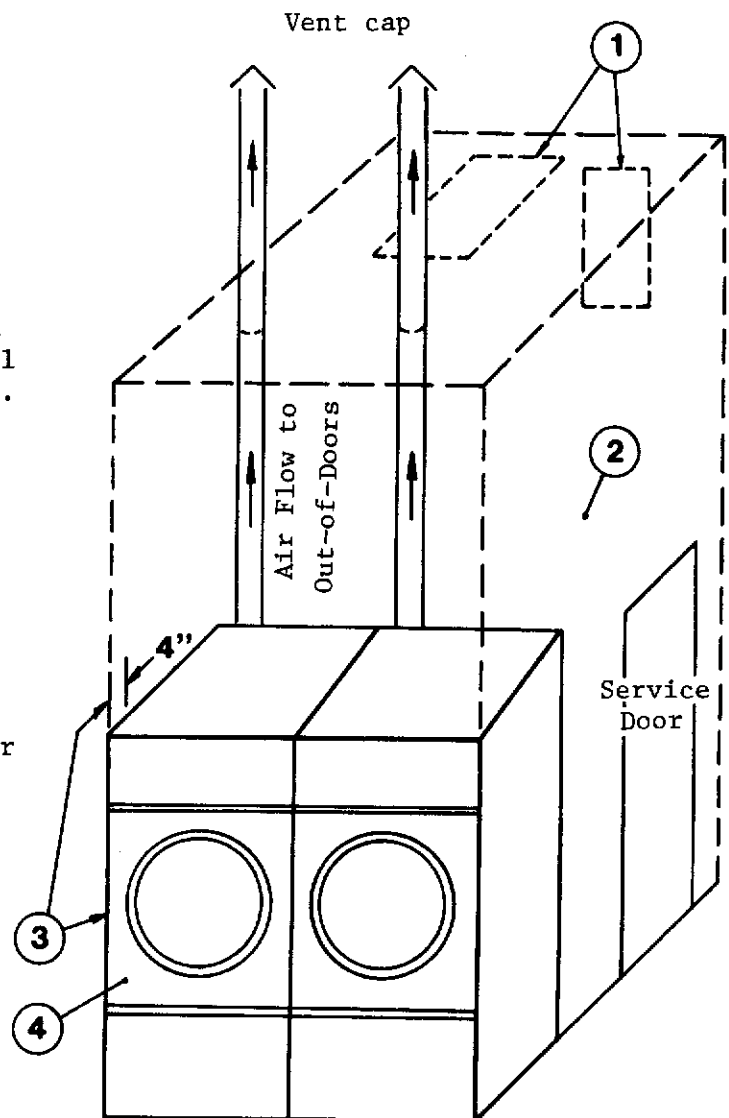

DRYER AIR FLOW INSTALLATION

Nothing is more important than air flow for the proper operation of a clothes dryer. A dryer is a pump which draws make-up air from the out-of-doors, through the heater, through the clothes and then forces the air through the exhaust duct back to the out-of-doors. Just as in a fluid water pump, there must be a fluid air flow to the inlet of the dryer if there is to be the proper fluid air flow out of the exhaust duct. In summary, there must be the proper size out-of-doors inlet air opening (4 to 6 times the combined areas of the air outlet) and an exhaust duct size and length which allows flow through the dryer with no more than 0.3 inches water column static pressure in the exhaust duct.

Energy-saving dryer models require less inlet air area and smaller exhaust ducts than the regular dryers because there is about half as much air flow through the dryer. However, the importance of the proper inlet air area and the correct exhaust duct size is twice as important on energy saving models. The huge savings of an energy-saver dryer is offset only by the attention required to provide the proper air flow. Once this proper air flow is provided, it lasts for the life of the installation.

CISSELL WILL PROVIDE FREE ENGINEERING ADVICE FOR ANY SPECIFIED INSTALLATION.

In some instances, special fans are required to supply make-up air and/or boost exhaust fans are required for both regular and energy saving models.

EXHAUSTING DUCT

For best drying:

1. Exhaust duct maximum length 14 feet of straight duct and maximum of two 90 degree bends.
2. Use 45 deg. and 30 deg. elbows wherever possible.
3. Exhaust each dryer separately.
4. Use 2 feet of straight duct on dryer before installing an elbow on Energy Saver models only.
5. Do not install wire mesh or other restrictions in the exhaust duct.
6. Use clean-outs in the exhaust duct and clean periodically when needed.
7. Never exceed 0.3 inches water column static pressure in the exhaust duct.
8. Inside surface of the duct must be smooth.
9. Recommend pop rivets for duct assembly.

MAKE-UP AIR

For best drying:

1. Provide opening to the out-of-doors in accordance with the following: For each dryer -
6" dia. exhaust req. 1 sq. ft. make-up air
8" dia. exhaust req. 2 sq. ft. make-up air
12" dia. exhaust req. 4 sq. ft. make-up air
2. Use barometric shutters in the inlet air opening to control air when dryers are not running.

Other Recommendations

To assure compliance, consult local building code requirements.

FOR HELP, consult Cissell Engineering on tough installations.

Trouble Shooting: Hot dryer surfaces, scorched clothes, slow drying, lint accumulations, or air switch malfunction are indicators of exhaust duct and/or make-up air problems.

OPERATING INSTRUCTIONS

- Step 1. After loading the dryer tumbler with the washed clothes load, proceed to close the loading door.
- Step 2. A. Timer Models - Turn timer knob to the desired drying time. See fig. 1




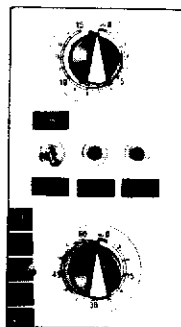


Fig. 1

- B. Coin Meter Models - Insert proper coin in correct slot. Turn knob completely until it stops for desired drying time.

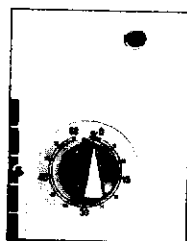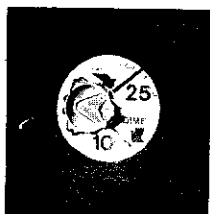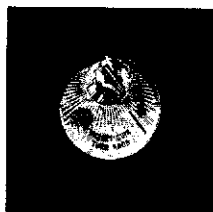

1. INSERT PROPER COIN IN CORRECT SLOT.
2. MUST, FULL TURN KNOB CLOCKWISE.
3. FULL TURN KNOB AFTER EACH COIN IS INSERTED.

- Step 3. Temperature Selector - Select temperature per type of load being dried in the dryer.
- High heat - mixed and heavy fabrics - 180°F. exhaust temperature
- Normal - cottons and linens - 170°F. exhaust temperature
- Permanent Press - poly knit synthetic-blends-light weight fabrics. 160°F exhaust temperature
- Low Heat - delicate-sheer fabrics-easy to dry-140 °F. exhaust temperature.
- Step 4. Turn switch to "on" position if dryer is equipped with "on-off" switch.

Step 5. Push in "Push to Start" button until the dryer starts running and then release button.

What is happening after step 5:

1. The fan motor will operate.
2. The clothes tumbler will revolve.
3. The heated energy-gas-electric-steam will be energized.
4. The heated air will mix with the water washed clothes to evaporate the moisture from the garments.
5. The thermostats will function at a safe temperature at the end of the drying cycle.
6. The heat will be shut off and the motor will continue to run to cool the dry load to a desired handling temperature.

IMPORTANT: If tumbler door is opened during the drying cycle, it stops the fan motor and the heated energy is shut off. To restart the dryer, close the door and press in the "Push to Start" button for approximately three seconds.

IMPORTANT: The light will stay on until the therm-o-cool thermostat cools below 135°F. before the contacts open to shut off dryer. This is only on "Therm-O-Cool" models.

IMPORTANT: On coin meter models only, see the label for information.

IMPORTANT: This dryer is designed for a capacity maximum load. Overloading it will result in long drying time and damp spots on some clothes.

IMPORTANT: Maximum operating efficiency is dependent upon proper air circulation. The lint screen must be kept clean daily to insure proper air circulation throughout the dryer.

IMPORTANT: This is a commercial dryer. It has keys to open the lower lint area panel and the upper control and burner area panel. This is equipped for the user's safety.

COOL-DOWN: Cissell Dryers with one timer are furnished with Therm-O-Cool which reduces heat in the basket through temperature control, rather than by time. Time limit of this cool-down is flexible--requiring whatever period is necessary to reduce the load to a satisfactory cool state.

Cool-down immediately follows the drying cycle, to minimize wrinkling and reduce heat in the basket for more comfortable unloading.

Cissell coin-meter and double timer dryer models have a timed cool-down.

1. The coin-meter cool-down period is controlled internally.
2. The two timer model permits operator/customer to set cool-down manually to a predetermined period ranging from 0 to 15 minutes.

TWO TIMER MODEL OPERATING INSTRUCTIONS

- STEP 1 After loading the dryer tumbler with the water washed clothes load, proceed to close the loading door.
- STEP 2 Turn the 60 minute drying timer to the desire drying time. The drying cycle light will be on and indicate the drying. The light shuts off when drying time is complete. See Fig. 1.
- STEP 3 Turn the 15 minute cooling cycle timer to the desired cool down time. After the drying cycle is completed, then the cooling cycle time will automatically operate. The cooling light will be on and indicate the cooling of the clothes load. The light shuts off when cooling time is completed. See Fig. 1.
- STEP 4 Temperature Selector - Select temperature per type of load being dried in the dryer.
High Heat - Mixed and heavy fabrics - 180⁰F. exhaust temperature.
Normal - Cottons and linens 170⁰F. exhaust temperature.
Permanent Press Heat - Poly knit snythetic-blends-light weight fabrics, 155⁰F. exhaust temperature.
Low Heat - Delicate-sheet fabrics-easy to dry, 140⁰F . exhaust temperature.
- STEP 5 Turn switch to "on" position if dryer is equipped with "on-off" switch. See Fig. 1.
- STEP 6 Press in "Push to Start" button (approximately 2 seconds) until the dryer starts running and then release button.

What is happening to the drying operation?






1. The fan motor will operate.
 2. The clothes tumbler will revolve.
 3. The heated energy-gas-will be energized.
 4. The heated air will mix with the water washed clothes to evaporate the moisture from the garments.
 5. The thermostats will function at a safe temperature at the end of the drying cycle.
 6. The heat will be shut off and the motor will continue to run to cool the dry load to a desired handling temperature.
- STEP 7 At the end of the cool down cycle the clothes load is dry.
- STEP 8 To shut the dryer off and the electricity off from the dryer, turn the "On & Off" switch to "Off" position. This switch is a safety switch to immediately stop the dryer's operation.


TIME and TEMPERATURE Control Panel

Fig. 1

LIGHT WILL INDICATE
AIR DRYING 15 MINUTES


LIGHT WILL INDICATE
HEAT DRYING
60 MINUTES

| | | |
|---------------------------------|---|---|
| HIGH HEAT | MIXED LOADS HEAVY FABRICS HARD TO DRY |  |
| NORMAL | COTTONS LINENS |  |
| PERM PRESS POLY KNIT | PERMANENT PRESS SYNTHETIC-BLENDS LIGHT WEIGHT FABRICS |  |
| LOW HEAT | DELICATE SHEER FABRICS EASY TO DRY |  |
| PUSH | TO START |  |

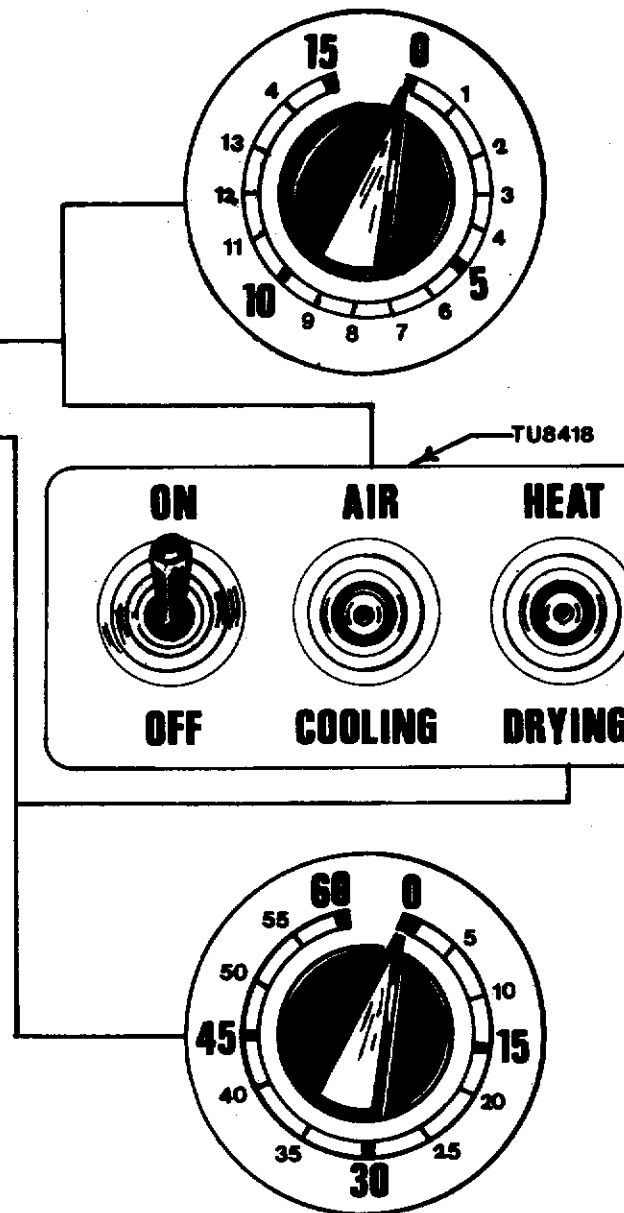

Important: This is a commercial dryer. It has keys to open the lower lint area panel and the upper control and burner area panel. This is equipped for the user's safety.

PROMPTER™ CONTROL BOARD SWITCHES

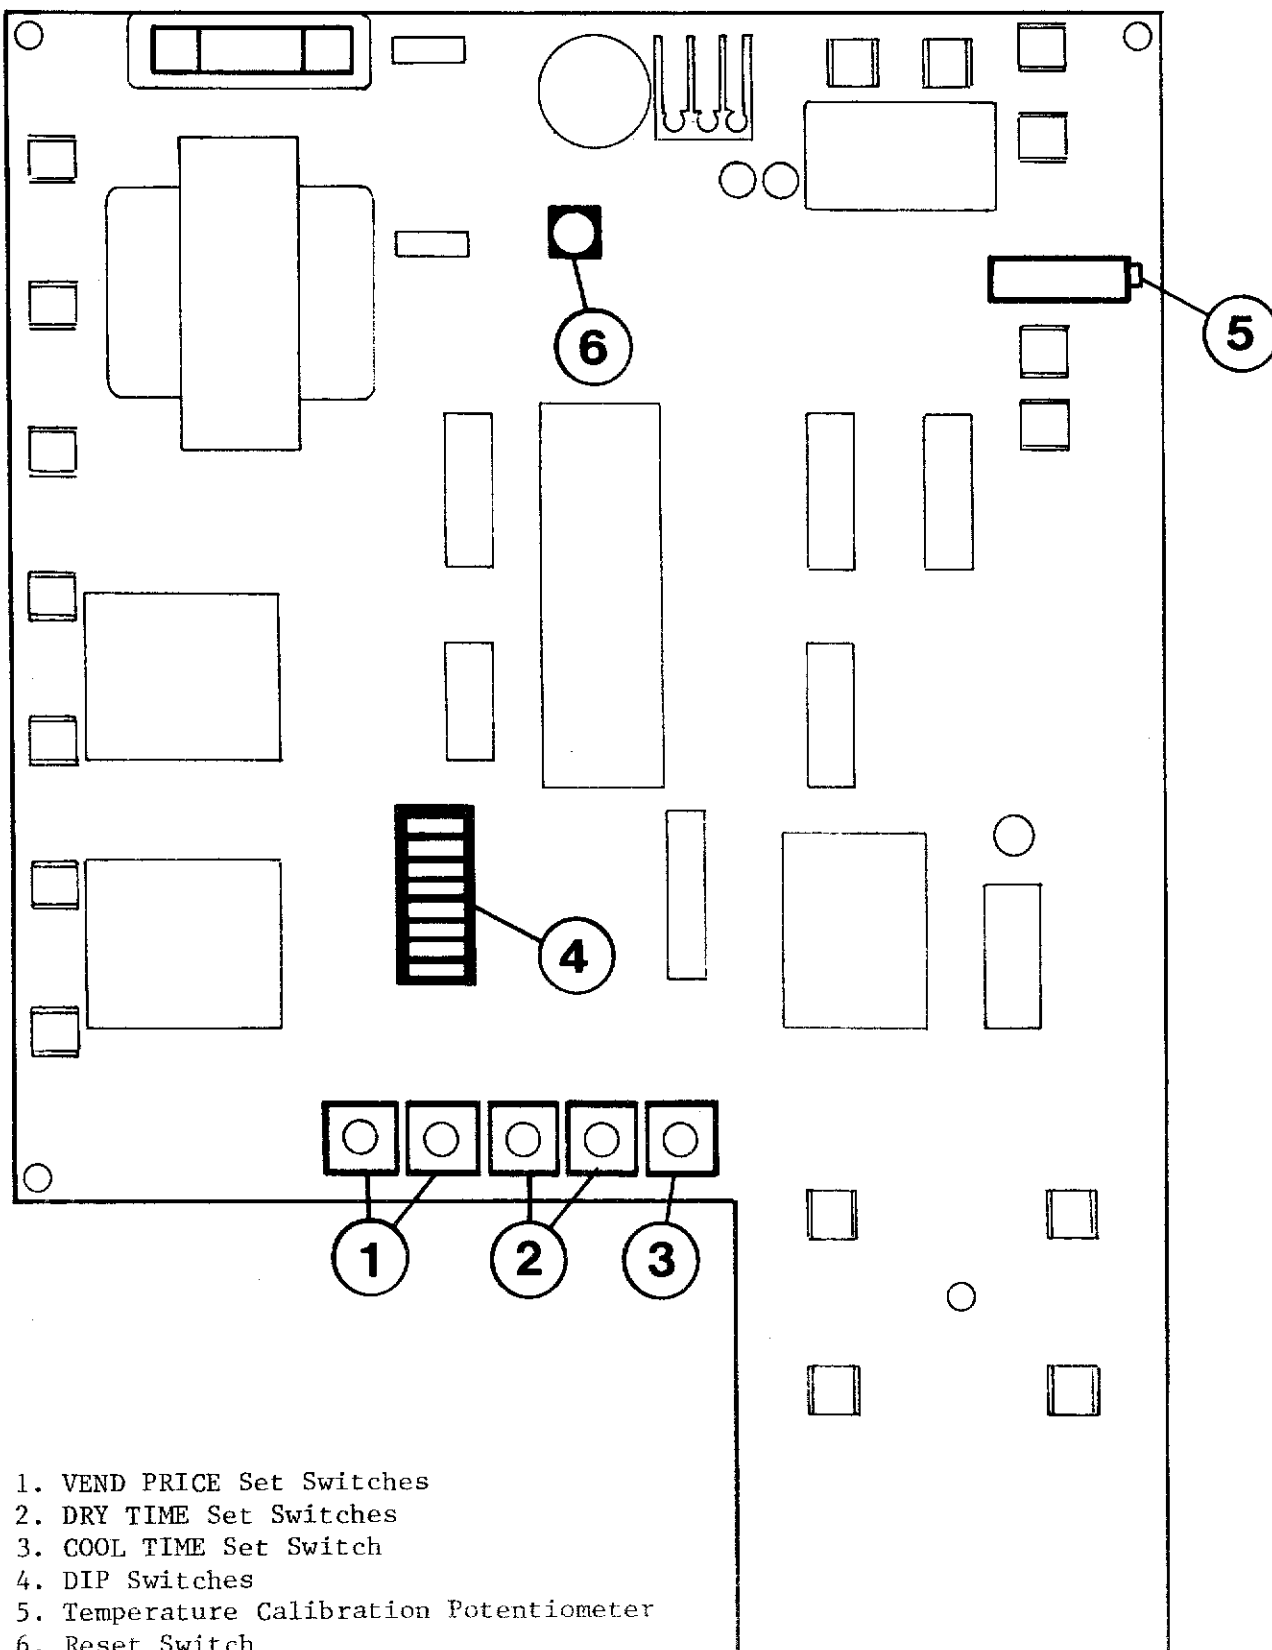

INSTRUCTIONS FOR SETTING SWITCHES ON THE PROMPTER CONTROL BOARD COMMERCIAL USE ONLY

1. VEND PRICE Set Switches - Not applicable for commercial use.
2. DRY TIME Set Switches - These two switches determine how many minutes are in the drying cycle. The left switch is divided into increments of 10 minutes and the right switch is divided into one minute increments.

Example: To set 23 minutes:



$$20 + 3 = 23 \text{ minutes} \\ (2 \times 10) (1 \times 3)$$

3. COOL TIME Set Switch - This switch determines the maximum minutes in the cooling cycle. It can be set from 0-18 minutes in 2 minute increments.

Example: To set 14 minutes.



4. DIP Switches - These switches number 1-8 denote various functions of the control panel. Only switches 1-7 are operational, 8 is not. If two or more "Display" (3-6) are on at a given time, the highest number switch is given precedence. The functions of the switches are as follows:

"OFF" POSITION

1. Coin Operation
2. Auto-Dry on
3. No Function
4. No Function
5. No Function
6. No Function
7. Therm-O-Cool
8. No Function



"ON" POSITION

1. Commercial Operation (Non-Coin)
2. Auto-Dry Off
3. Display Even Dollars Accumulated
4. Display Dry Time Setting
5. Display Cool Time Setting
6. Display Temperature
7. Timed Cool
8. No Function

5. Temperature Calibration Potentiometer - Factory set.
6. Reset Switch - Resets control panel back to start position.


SET UP PROCEDURE FOR THE "PROMPTER" COMMERCIAL (NON-COIN) OPERATION

1. Read instructions for Setting Switches on the Prompter Control Board and refer to the illustration.
2. Turn on/off switch to on position.
3. Set DIP Switch #1 to "on" for commercial use.
4. This dryer can be set for a Timed Dry Cycle or an Automatic Dry Cycle (with a moisture sensor to determine when load is dry.) For the Timed Dry Cycle, set the DIP Switch #2 to "on". For the Automatic Dry Cycle, Set DIP Switch #2 to "off".
5. Adjust "Dry Time Set Switch" for desired time in Timed Cycle or maximum dry time in Automatic Dry Cycle. Set DIP Switch #4 to "on" to display the set time and to "off" after correctly adjusting.
6. Adjust "Cool Time Set Switch" for desired time in Timed Dry Cycle or maximum cool time in Automatic Cycle. Set DIP Switch #5 to "on" to display the set time and to "off" after correctly adjusting.
7. Before operating dryer, check:
 - For Automatic Dry Cycle - DIP Switch #1 "on"
DIP Switch #2-6 "off"
 - For Timed Dry Cycle - DIP Switch #1 & 2 "on"
DIP Switch #3 - 6 "off"

PROMPTER OPERATING INSTRUCTIONS- COMMERCIAL MODELS

This dryer has a Control Panel with lights that will blink on and off to tell the operator what to do next, step by step.

1. Read the "Set Up Procedure" before operating the dryer.
2. Turn the On/Off switch to On.
3. Load the dryer with water washed clothes and close the dryer door.
4. Push One Fabric Selector for the appropriate type of load to be dried. This setting may be changed at any time during the cycle by pushing another selection. The corresponding lamp will remain on during the cycle.
5. Push To Start will begin the drying cycle.
6. Dry Rite lamp will come on and the drying will begin. The lamp will stay lit until the expiration of the pre-set drying time (Timed Dry) or until the load is dry (Automatic Dry) which is determined by the moisture sensor.
7. Therm-O-Cool lamp will come on after the drying cycle is completed and will remain lit for the duration of the pre-set cooling time or until the temperature drops to 135°F.
8. Minutes (digital display) With the dryer in the Timed Dry Cycle, the display will show the total number of minutes at the beginning of the dry cycle and will count down in one minute intervals as the dryer runs. With the dryer in the Automatic Dry Cycle, the display shows "000" minutes at the beginning of the cycle and will count up as the dryer runs.
9. Computer Reset- use to reset the control panel to "start" position.
10. Reversing/ Non-Reversing- Reversing is designed for loads that may tangle (bed sheets, large items, etc.). Non-Reversing is designed for loads that may not tangle (small or medium size items).

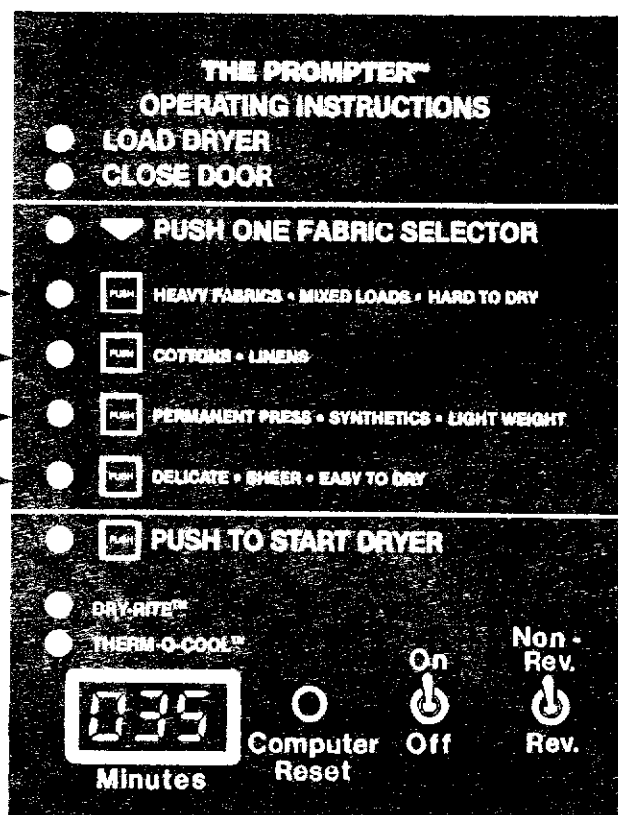

RULES FOR SAFE OPERATION OF YOUR CISSELL DRYER

1. Be sure your dryer is installed properly in accordance with the recommended instructions.
2. CAUTION: Be safe - shut main electrical power supply and gas supply off externally before attempting service.
3. CAUTION:
 - a. Never use drycleaning solvents: gasoline, kerosene, or other flammable liquids in the dryer. Fire and explosion will occur.
 - b. Never put fabrics treated with these liquids into the dryer.
 - c. Never use these liquids near the dryer.
 - d. Always keep the lint screen clean.
 - e. Never use heat to dry items that contain plastic, foam or sponge rubber, or rags coated with oils, waxes or paints. The heat may damage the material or create a fire hazard. Rubber easily oxidizes causing excessive heat and possible fire. Never dry the above items in the dryer.
4. Never let children play near or operate the dryer. Serious injury will occur if a child should crawl inside and the dryer is turned on.
5. Never use dryer door opening and top as a step stool.
6. Read and follow manufacturer's instructions on packages of laundry and cleaning aids. Heed any warnings or precautions.
7. Never tumble fiberglass materials in the dryer unless the labels say they are machine dryable. Glass fibers break and can remain in the dryer and could cause skin irritation if they become mixed into other fabrics.
8. Reference - Lighting and shutdown instructions and wiring diagrams are located on the rear wall of the dryer cabinet.

ENERGY SAVING TIPS:

1. Install dryer so that you can use short, straight venting. Turns elbows and long vent tubing tend to increase drying time. Longer dry time means the use of more energy and higher operating costs.
2. Operate dryer using full-size loads. Very large loads use extra energy. Very small loads waste energy.
3. Dry light weight fabrics separately from heavy fabrics. You will use less energy and get more even drying results by drying fabrics of similar weight together.
4. Clean the lint screen area daily. A clean lint screen helps give faster, more economical drying.

5. Do not open the dryer door while drying, you let warm air escape from the dryer into the room.
6. Unload your dryer as soon as it stops. This saves having to re-start your dryer to remove wrinkles.

SERVICE SAVERS:

To help you troubleshoot the dryer, we list below the most common reasons for service calls and some answers to the problems. Before you call service please review the following items:

DRYER WON'T START:

1. Is the door completely closed?
2. Are the controls set to a drying position and not to off?
3. Did you push the start control?
4. Has a fuse blown or a circuit breaker tripped? Are fuses tight?
5. Check for low voltage.

DRYER WON'T HEAT:

1. Is the dryer set for a heat rather than an air only position?
2. Is the gas valve in the dryer and the valve on the main gas line turned on?
3. Check for low or intermittent gas pressure.

CLOTHES ARE NOT SATISFACTORILY DRY:

1. Timed cycle - Did you allow enough heating time before the cool-down part of the cycle?
2. Is the lint screen blocked?
3. Is the exhaust duct to the outside clean and not blocked? (A blocked exhaust will cause slow drying and other problems.)
4. Venting, air switch closing and make-up air for each drying.

GAS DRYER IGNITION:

Refer to page 35 "Instructions for the Direct Ignition System Operation."
Check to see if the manual gas valve is open. Then reset the dryer controls.
If dryer still fails to heat, call for service. All panels, covers, and doors must be in place and closed before starting dryer.


VERY IMPORTANT:

When calling the factory for service, always refer to the model number and serial number.

BURNER AIR INLET SHUTTERS ADJUSTMENT

Burners Air Inlet Shutters are correctly adjusted when the flame is primarily blue.


| TYPE OF GAS | BURNER AIR INLET SHUTTERS ADJUSTMENT |
|------------------|--------------------------------------|
| Natural gas | 1/2 Open |
| Liquid Petroleum | 1/4 Open |
| Manufactured gas | 1/16 Open |

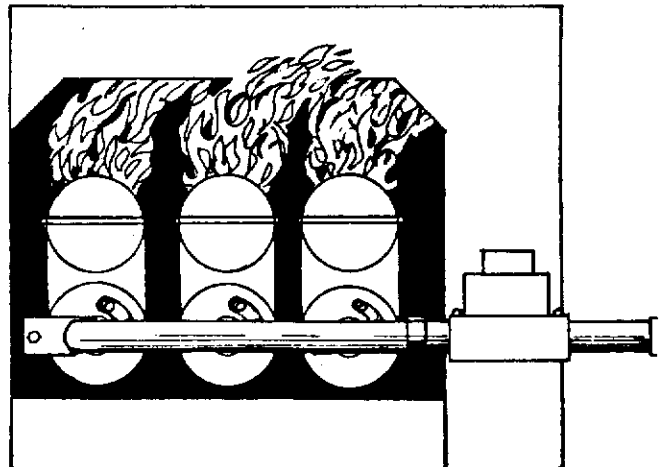

RIGHT

Air Shutters Adjustment

Proper Method: Close air shutters to yellow tip, then open air shutters to blue flame tip. Orange tips are impurities in the air such as lint, dust, etc.

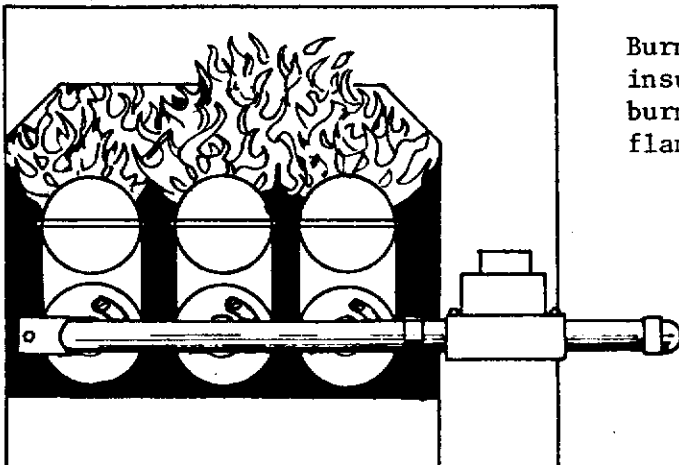

Burners Air Inlet Shutters are adjusted insufficient, air is admitted through the burner. Flame pattern is straight up and flame is yellow.


WRONG

NEED TO ADJUST SHUTTER

This flame pattern indicates the Burner Air Inlet Shutters are correctly adjusted, but air through the dryer is insufficient. This condition indicates excessive lint in the lint compartment, lack of make-up air in the room, restricted exhaust duct, or a vacuum in the room caused by a exhaust fan.


WRONG

NEED TO PROVIDE CORRECT AIRFLOW THROUGH THE DRYER

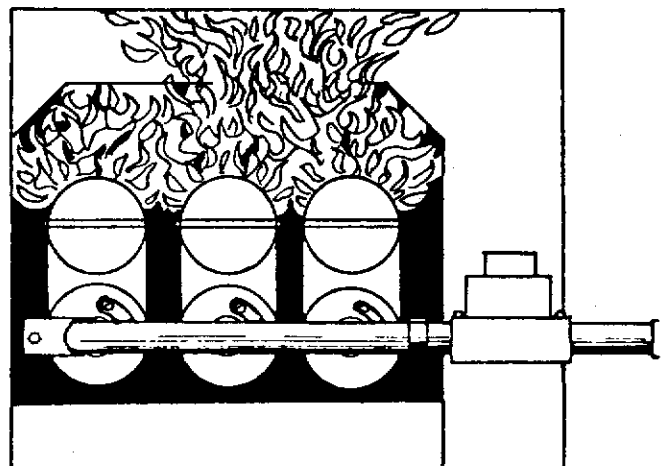


DRYER DIAGNOSTICS

This Prompter Dryer is equipped with two Dryer Diagnostic circuit boards, upper and lower, which are located in the control box in the front of the dryer behind the control panel. The lamps are a valuable aid in detecting problems in the dryer. The functions of the two boards are outlined below:

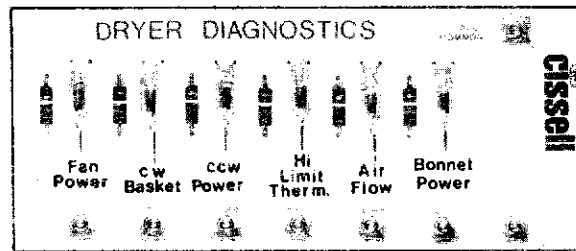

UPPER DIAGNOSTIC BOARD

1. Fan Power - indicates the power to the fan is on.
2. Basket Power - indicates power to the basket motor is on for either reversing/non-reversing operation (clockwise or counterclockwise rotation).
3. Hi Limit Thermostat - indicates the safety thermostat is closed, which is the first element in the safety control circuit.
4. Air Flow - this lamp glows when the air flow switch is closed; the lamp blinks if the air flow switch is fluttering. Power is available to the control thermostats when the air flow switch is closed.
5. Bonnet Power - this lamp glows when a control thermostat circuit is closed and whenever the timer is not in the cool-down cycle.

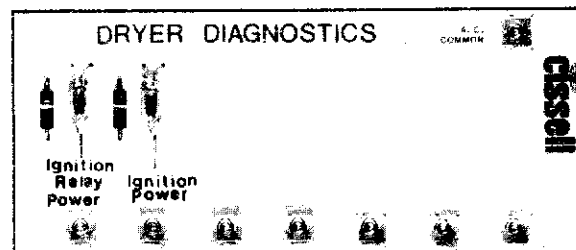

LOWER DIAGNOSTIC BOARD

1. Ignition Relay Power - this lamp will glow when the ignition relay coils is energized. This lamp is the key to trouble shooting the ignition components. First, when the radiant sensor is cool, the lamp indicates the radiant sensor switch is closed and that the normally closed (NC) contacts of the relay are now open and that the normally open (NO) contacts are now closed, which indicates that the relay coil is o.k. and operating. At this time, when the radiant sensor is cool, the igniter should be glowing and the Ignition Power lamp should be lit. Second, when the radiant sensor is hot, the lamp indicates that the NO contacts of the relay are now closed and power is available for the operating gas valve. At this time, when the radiant sensor is hot, the operating gas valve should be energized and the gas should be burning.
2. Ignition Power - this lamp indicates the power is flowing to the igniter through the radiant sensor and the igniter should be glowing red hot. If this lamp is not lit, and the Ignition Relay Power lamp is lit, then the gas should be burning which means that the operating gas valve has been energized by means of a circuit through the non-glowing igniter.

TROUBLE SHOOTING CHART--GAS, STEAM, AND ELECTRIC DRYERS

| TROUBLE | CAUSE | REMEDY |
|------------------------------------|----------------------------------|--|
| Motors will not start | No Power | Check fuses on circuit breakers. Make sure main control switch is <u>on</u> . |
| | Incorrect power | Check power source: voltage, phase, and frequency must be the same as specified on electrical rating plate. |
| | Time off | Turn timer clock wise to desired time setting. |
| | Loose wiring connections | Check wire connections in electrical box on rear of Dryer. |
| | Defective starting relay | Check coils and contacts. |
| Motor tripping on thermal overload | Low voltage | Check voltage at motor terminals. Voltage must be within (plus or minus) 10% of voltage shown on motor rating plate--it not, check with local power company for recommended corrective measures. |
| | Inadequate wiring | Check with local power company to insure that wiring is adequately sized for load. |
| | Loose connections | Check all electrical connections and tighten any loose connections. |
| | Inadequate air | Check installation sheet in service manual for recommended make up air openings. |
| | Poor housekeeping | Clean lint accumulation on and around motors. |
| Basket motor will not run | Loading door open | Close door. |
| | Door switch out of adjustment | Adjust switch by removing cover and bend actuator lever to clear switch button 3/8" with cover in place. |
| | Defective door switch | Replace switch. |
| | Defective basket motor contactor | Replace contactor. |

| TROUBLE | CAUSE | REMEDY |
|--|---|---|
| Basket motor runs, but basket will not revolve | V-Belt Broken | Replace V-Belt. |
| | V-Belt loose | Adjust Belt Tension. |
| | Motor pulley loose | Tighten set screw. |
| | Basket overloaded | Remove load. |
| Dryer noisy or vibrating | Not leveled | Check manual for proper leveling procedures. |
| | Fan out of balance | Accidental damage to the fan blade can change the dynamic balance. Damaged fans should be replaced. |
| | Basket rubbing | Adjust basket clearance. |
| | V-Belt sheaves | Tighten set screws, make sure sheaves are in proper alignment. |
| | Belt | Adjust belt tension. |
| | Foreign objects | Occasionally screws, nails, etc. will hang in the basket perforations and drag against the sweep sheets surrounding the basket. Such foreign objects should be removed immediately. |
| Dryer runs but no heat | Incorrect voltage | Check for correct control voltage - 120V. |
| | No voltage | Check power supply, check secondary voltage on transformer and check wiring and wiring diagram. |
| | Silicon carbide igniter will not glow - red | Broken or defective igniter--replace. Check for 120 volts to igniter. |
| | Light red silicon carbide igniter | Check for 3.5 minimum amperage. Low amperage not hot enough. Low Voltage |
| | Defective igniter time delay relay | Replace relay. |
| | Lint door open | Close lint door. |
| | Defective gas valve | Replace coil assembly. |
| | Gas turned off | Turn manual gas valve "on." |


| TROUBLE | CAUSE | REMEDY |
|------------------------|--|---|
| Dryer runs but no heat | | |
| | Defective door switch | Replace door switch. |
| | Silicon carbide igniter not igniting gas | Must be 3/16 to 5/16 above burner, Replace radiant sensor |
| | Air switch not operating | Clean out lint compartment daily. Check back draft damper for foreign objects, lint accumulation or other causes that may prevent damper from opening. Check duct work for lint build-up. Check installation sheet to insure that duct work and make up air openings are adequately sized. Check exhaust outlet. If a screen has been improperly installed on the outlet, it may be clogged with lint or frozen over in winter. Never install a screen on the exhaust outlet. Vacuum within dryer drops to .09 inches of water column, or less, for normal operation of dryer, vacuum reading (in inches of water column) should range between .15 and .3 inches. Vacuum reading can be made with a vacuum U-gauge by removing a sheet metal screw in the front panel of dryer, and inserting the rubber tube of the vacuum gauge into screw opening. |
| | Air switch out of adjustment | See air switch adjustment sheet in service manual. |
| | Air switch defective | Replace air switch. |
| | Gas pressure too low | Check manifold pressure and adjust to pressure specified on rating plate. If this pressure cannot be obtained, have gas supplier check main pressure. |
| | Improper orifice | Dryer is orificed for type of gas specified on rating plate. Check with gas supplier to determine specifications for gas being used. If different from rating plate, contact factory and obtain proper orifices. |
| | Electric power to heating unit turned off | Turn power on. |
| | Line fuse or heater circuit fuse blown to unit | Replace fuse. |

| TROUBLE | CAUSE | REMEDY |
|---------------------------------|---|--|
| Dryer runs but no heat | Defective relay | Replace relay. |
| | Defective electric elements | Replace elements. |
| | Defective thermostat | Replace thermostat. |
| | Defective safety overload thermostat | Replace thermostat. |
| | Lint compartment door open | Close door. |
| Main burners burning improperly | Burner air shutters closed | Open for blue flame. |
| | Dirt in burner | Blow out. |
| | Gas pressure too high | Check rating plate for correct gas pressure. |
| | Orifice too large | Send to factory for correct orifices. |
| | Restricted or blocked exhaust | Clean exhaust. |
| Main burner cycling on and off | Radiant sensor | Replace |
| Low gas flame or high gas flame | Incorrect main burner orifices | Replace orifices--check factory for correct size. |
| Dryer too hot | Incorrect main burner orifice | Replace orifices--check factory for correct size. |
| | Inadequate make-up air | Make up air must be 4 to 6 times the exhaust area of the dryer. |
| | Lint accumulated | Remove lint. |
| | Exhaust duct dampers | Must be full open or replace. |
| | Gas pressure too high | Adjust gas pressure as specified on rating plate. |
| | Partially restricted or inadequately sized exhaust system | Check installation sheet in service manual for recommended sizes. Check for and remove obstructions or lint build up from duct work. Never use smaller size exhaust duct. Always use larger size exhaust duct. |
| | Defective thermostat | Replace thermostat. |

| TROUBLE | CAUSE | REMEDY |
|---|------------------------------------|---|
| Dryer does not stop at end of time period (6) | Defective timer | Replace timer. |
| Dryer runs no steam to coils | Valve closed | Check all valves in steam supply and return--make sure they are open. |
| | Steam trap blocked | Remove and clean. Replace if defective. |
| | Solenoid valve | On dryers using solenoid temperature control, check operation of solenoid valve by advancing thermostat. |
| | Thermostat | On dryers using solenoid temperature control, thermostat controls operation of solenoid valve. If defective, replace thermostat. |
| | Check valve installed incorrectly | Check for inlet and outlet marking on check valve, and invert if necessary. |
| | Strainer clogged | Remove plug and blow down strainer or remove and clean thoroughly if heavily clogged. |
| Water in steam line | Steam piping installed incorrectly | Check piping per steam installation in instructions. |
| | Trap not functioning | Check trap for size and capacity. If dirty and sluggish, clean thoroughly or replace. Check return line for high back pressure, or another trap charging against the trap functioning improperly. |
| Basket does not reverse | Reversing timer | Check timer to see if operating. |
| | Reversing timer | Adjust timer (See Furnas control sheet) |



Silicon Carbide Ignition System

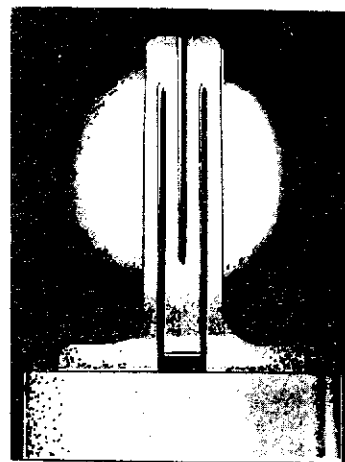

- New radiant sensor.
- TWO gas valves and pressure regulator provide additional safety.
- New igniter
 - Combines unique HIGH PHYSICAL and THERMAL Strength with stable electrical properties.
 - Can be relied upon to give premium performance at operating temperatures up to 2600° F and respond on command.
 - Clean, straightforward design insures easy handling, minimum chance of breakage; dependable, trouble-free operation.

Cissell's NEW Silicon Carbide Ignition System is better than ever!

- More reliable
- Less costly to replace
- Easier to service

Cissell's system reduces gas consumption 6% on the average over dryers with standing pilots based on 40-hour per week usage. There's no standing pilot to burn constantly; no electronic pilot to consume gas before burner ignites. . . either/both of which add high energy costs to your operation.

CISSELL's silicon carbide ignition system saves you up to 53% (dependent upon model dryer and other factors) additional gas costs over certain previous Cissell and competitive dryers of the same type WITHOUT sacrificing drying rate! A MUST — in times of fuel shortages/high costs.

LOOK TO CISSELL for better energy-saving features!

The NEW Silicon Carbide Ignition System is the latest HOT NEWS from Cissell!




ASK YOUR DISTRIBUTOR

OPERATION OF THE NEW NORTON SILICON CARBIDE IGNITION SYSTEM

Power to the ignition system is 120 volts. It is rated voltage or on higher voltage machines the 120 volts is from a transformer. The ignition system is powered through a timer or coin meter and a thermostat which calls for heat.

The two gas valves are plumbed into a single gas line and both must open before the gas can flow into the burners.

The following diagrams are line to line schematics of the ignition system. The numbers 4, 7, 3, 9, and letters A and B are terminals on the ignition relay which serves as a terminal board for the system.

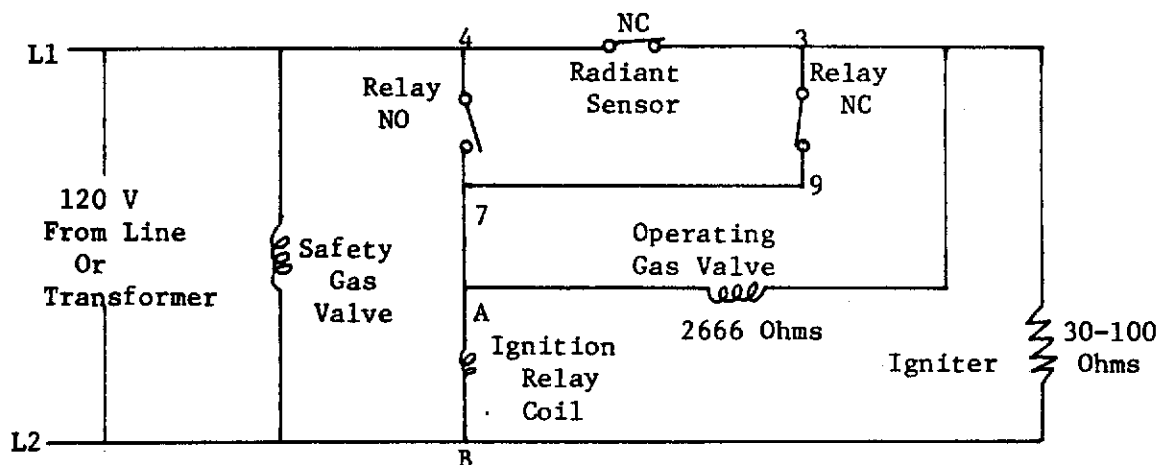


NEW NORTON SILICON CARBIDE IGNITION SYSTEM

Fig. 1 (Start of Cycle)

Step #1 (Start of Cycle), see Fig. 1

- a. The safety gas valve is connected across the lines and opens immediately as soon as a need for heat is indicated by the thermostat.
- b. The ignition relay coin is energized through the normally closed (NC) contacts of the radiant sensor and the NC contacts of the relay. Note! Fig. 1 shows the electrical circuit of the relay just before it is energized. Fig. 2 shows the circuit a moment later.
- c. The igniter is energized through the NC contacts of the radiant sensor.
- d. The operating gas valve is connected such that the same 120 volts is applied to both sides of the gas valve and the valve stays closed.

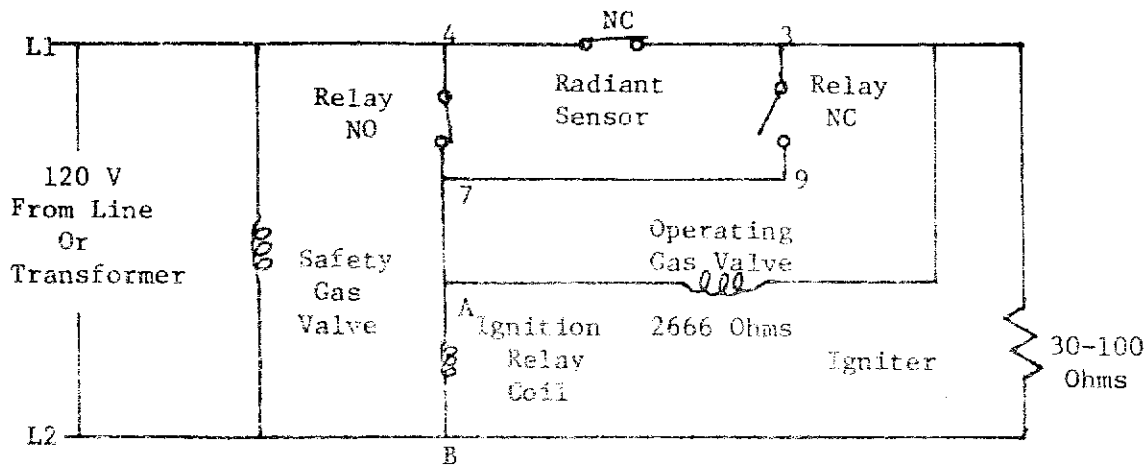


NEW NORTON SILICON CARBIDE IGNITION SYSTEM

Fig. 2 (An Instant Later)

Step #2 (A moment after Step #1), see Fig. 2

- The ignition relay closes now and the relay coil stays energized by being powered through the normally open (NO) contacts of the ignition relay which close before the NC contacts open.
- The operating gas valve still has the 120 volts applied to both sides of the gas valve and the valve stays closed.

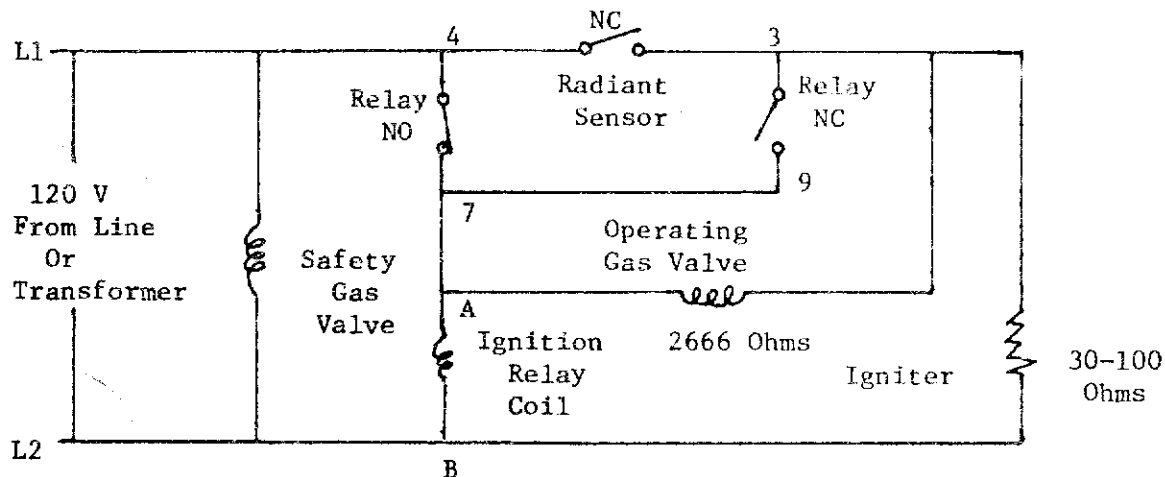

NEW NORTON SILICON CARBIDE IGNITION SYSTEM

Fig. 3 (About 20 Seconds Later)

Step #3 (About 20 seconds after Step #2), see Fig. 3

- The igniter glows red hot which causes the radiant sensor to open its NC contacts which de-energizes the igniter.
- As the radiant sensor NC contacts open, the 120 volt to one side of the operating gas valve coil is removed and an electrical circuit is formed through the NO contacts of the inition relay,

through the gas valve and through the igniter; and the gas valve opens. The relatively low resistance of the igniter allows nearby full voltage to be applied to the operating gas valve and nearby zero voltage to the igniter and the igniter is de-energized for all practical purposes.

- c. As the raw gas flows against the red hot igniter, ignition takes place. The radiant gas flame replaces the radiant glowing of the igniter and the radiant sensor NC contacts remain open.

The flame will burn until the thermostat opens the circuit or until the time on the timer or coin meter expires.

The following summarizes the ignition operation.

Start machine drying cycle. Carbide igniter will get red hot. Then gas valve will open. The gas burners are ignited by the carbide igniter. Igniter will shut off and burners will remain on during drying cycle.

Opening tumbler door will cause gas to extinguish. Shut door and gas will not light until flame sensor cools and normal ignition cycle begins.

Note! Push start switch after door is shut.

If gas does not light, then the sensor will cool down and restart the ignition cycle.

Safety Features

Power Interruptions During Burning of the Gas

Both gas valves are de-energized and the gas is shut off. The ignition relay is also de-energized and returns the contacts to the NO and NC positions. Even with resumption of power, the operating gas valve stays closed until the NC contacts of the radiant sensor close (about 30 seconds from time of power interruption). A normal ignition cycle begins at this time.

Burner Doesn't Light Because of Low Voltage or Low Gas Pressure

The operating gas valve will be energized for about 30 seconds and then the NC contacts of the radiant sensor will be closed. 120 volts is applied to both sides of the operating gas valve and it closes to shut off the gas. A normal ignition cycle begins at this time.

NORTON IGNITION SYSTEM

Test Procedure

1. Glow bar will glow red. If glow bar does not glow red, then check the following:
 - a. Disconnect glow bar wiring from dryer. Test with separate 120 volt. Replace if it does not glow red.
 - b. Also replace glow bar if cracked, broken or does not light burner in 25 seconds.
2. Unit must be wired correctly.
 - a. Front gas valve must always be wired to "A" and "3" on the relay.
 - b. Side or rear gas valve must be wired to "B" and "4" on the relay.
3. Rear or side gas valve must open (click) when dryer is energized.
4. Front gas valve will open and gas will flow to burners after 12 to 25 seconds, when glow bar is glowing red. Red glow bar will light gas from burners.
5. Glow bar will go out when flame is burning.
 - a. If both gas valves do not open (click), then replace.
 - b. If unit does not operate correctly, then replace the relay.
 - c. If glow bar does not shut off, then replace radiant sensor. Also if the radiant glass is broken, replace.

Parts In Norton Ignition System Unit:

6. Norton Glow Bar - TU8596.
Ignition Radiant Sensor - TU8598.
Ignition Relays - TU8599.
Two Gas Valves - TU6557.
Wiring Diagram - TWL679
7. Open and close loading door after gas is burning and glow bar is shut off. Gas should not flow when door is reclosed until radiant sensor has cooled and glow bar recycles.

TROUBLESHOOTING ON EACH NORTON IGNITION PART

- A. Glow bar TU8596
 1. No glow bar red: Check voltage (120 volt).
Cracked or broken, replace.
Check wiring TWL679 Must be connected to No. "B".
and No. "3" on relay.
- B. Radiant Sensor TU8598
 1. No glow bar red: Contacts failed open position, replace.
Sensor N.C. (cold position).
Sensor open (hot position).
Glass broken, replace.
 2. Fails to open after 25 seconds: Low voltage on glow bar.
Not in correct location.
Glass broken, replace.
Failure of contacts to open, replace.

C. Relay (Igniter) TU8599

1. Front gas valve does not turn on: Relay is wired incorrectly - see TWL679.
Relay solenoid not operating.
Relay contacts not operating correctly.
2. Relay contacts should make before break - when the relay coil is energized, the contacts "4 & 7" should close before contacts "3 & 9" open.

D. Gas Valve TU6557

1. If valve does not open when 120V is applied to it, then replace the coil assembly TU3832 (120V).
2. The two gas valves must be wired correctly TWL679. Front gas valve wires connected to "A and 3" on relay. Side or rear gas valve wires connected to "B and 4" on relay.

INSTRUCTIONS FOR THE DIRECT
IGNITION SYSTEM OPERATION

1. Turn on manual gas valve, handle should be parallel with gas line.
2. Start machine's drying cycle. Carbide igniter will get red hot, then gas valve will open. The gas burners are ignited by the carbide igniter. Igniter will shut off and burners remain on during heat cycle.
3. Opening tumbler door will cause gas to extinguish. Shut door and gas will not flow until flame sensor cools and normal cycle begins.
NOTE! Push start button after door is closed.
4. If gas does not light, the sensor will cool down and restart the ignition cycle.
5. To shut off dryer, turn off manual gas valve. Handle should be at right angle to pipe. Turn off main electrical supply switch.
6. A five minute complete shutoff period prior to reignition attempts should initial attempts fail.

CAUTION: Check all Norton Igniters with 120V before installing on dryer.

TROUBLE ANALYSIS FOR ENERGY SAVER DRYERS AND
THE ELECTRONIC SILICON CARBIDE GAS IGNITION SYSTEM

CAUTION: Problems with the electronic silicon carbide ignition can also be the result of the following.

1. Exhaust air flow restriction. Exhaust pipe size must be larger than the exhaust opening. Refer to chart in manual.
2. Dryer inlet air is a must for each unit. It must be 4 to 6 times the combined areas of the dryer exhaust outlet. Refer to chart in manual.
3. All dryer panels must be in place and on machine for proper operation.
4. Gas pressure must be 7-9½ inches W.C. for natural gas and 11 inches W.C. for propane or butane (bottled) gases.
5. Refer to chart for correct gas pipe sizes and lengths. The ¾ inch gas pipe must be the minimum gas supply pipe for the dryer and over 50 ft., 1 inch pipe size.
6. Main burner orifices must be correct size, they are calculated with the following information:
 - (A) Your locality heating value of gas, B.T.U./cu. ft.
 - (B) Local specific gravity of gas.
 - (C) Gas manifold pressure inches of water column.
 - (1) 3.5 inches water column pressure for natural gas
 - (2) 11 inches water column pressure for propane or butane gases.
 - (D) Gas input rate per each burner orifice.
7. Voltage must be the identical as on the electrical rating plate. Prevent low voltage; it causes longer drying operation.
8. Back draft damper must swing full open to prevent air flow restrictions. (Check for full open operation every 6 months). Non-operative or erratic operation of exhaust dampers will cause air flow switches to shut off gas and will result in longer drying time.


The above should be checked and corrected before attempting to trouble shoot the electronic silicon carbide gas ignition system.

WIRING DIAGRAM

TWL 713

NORTON SILICON CARBIDE GAS IGNITION SYSTEM
120 VOLTS: 50/60 HZ: 1 PHASE
GAS DRYERS

MODELS R & K

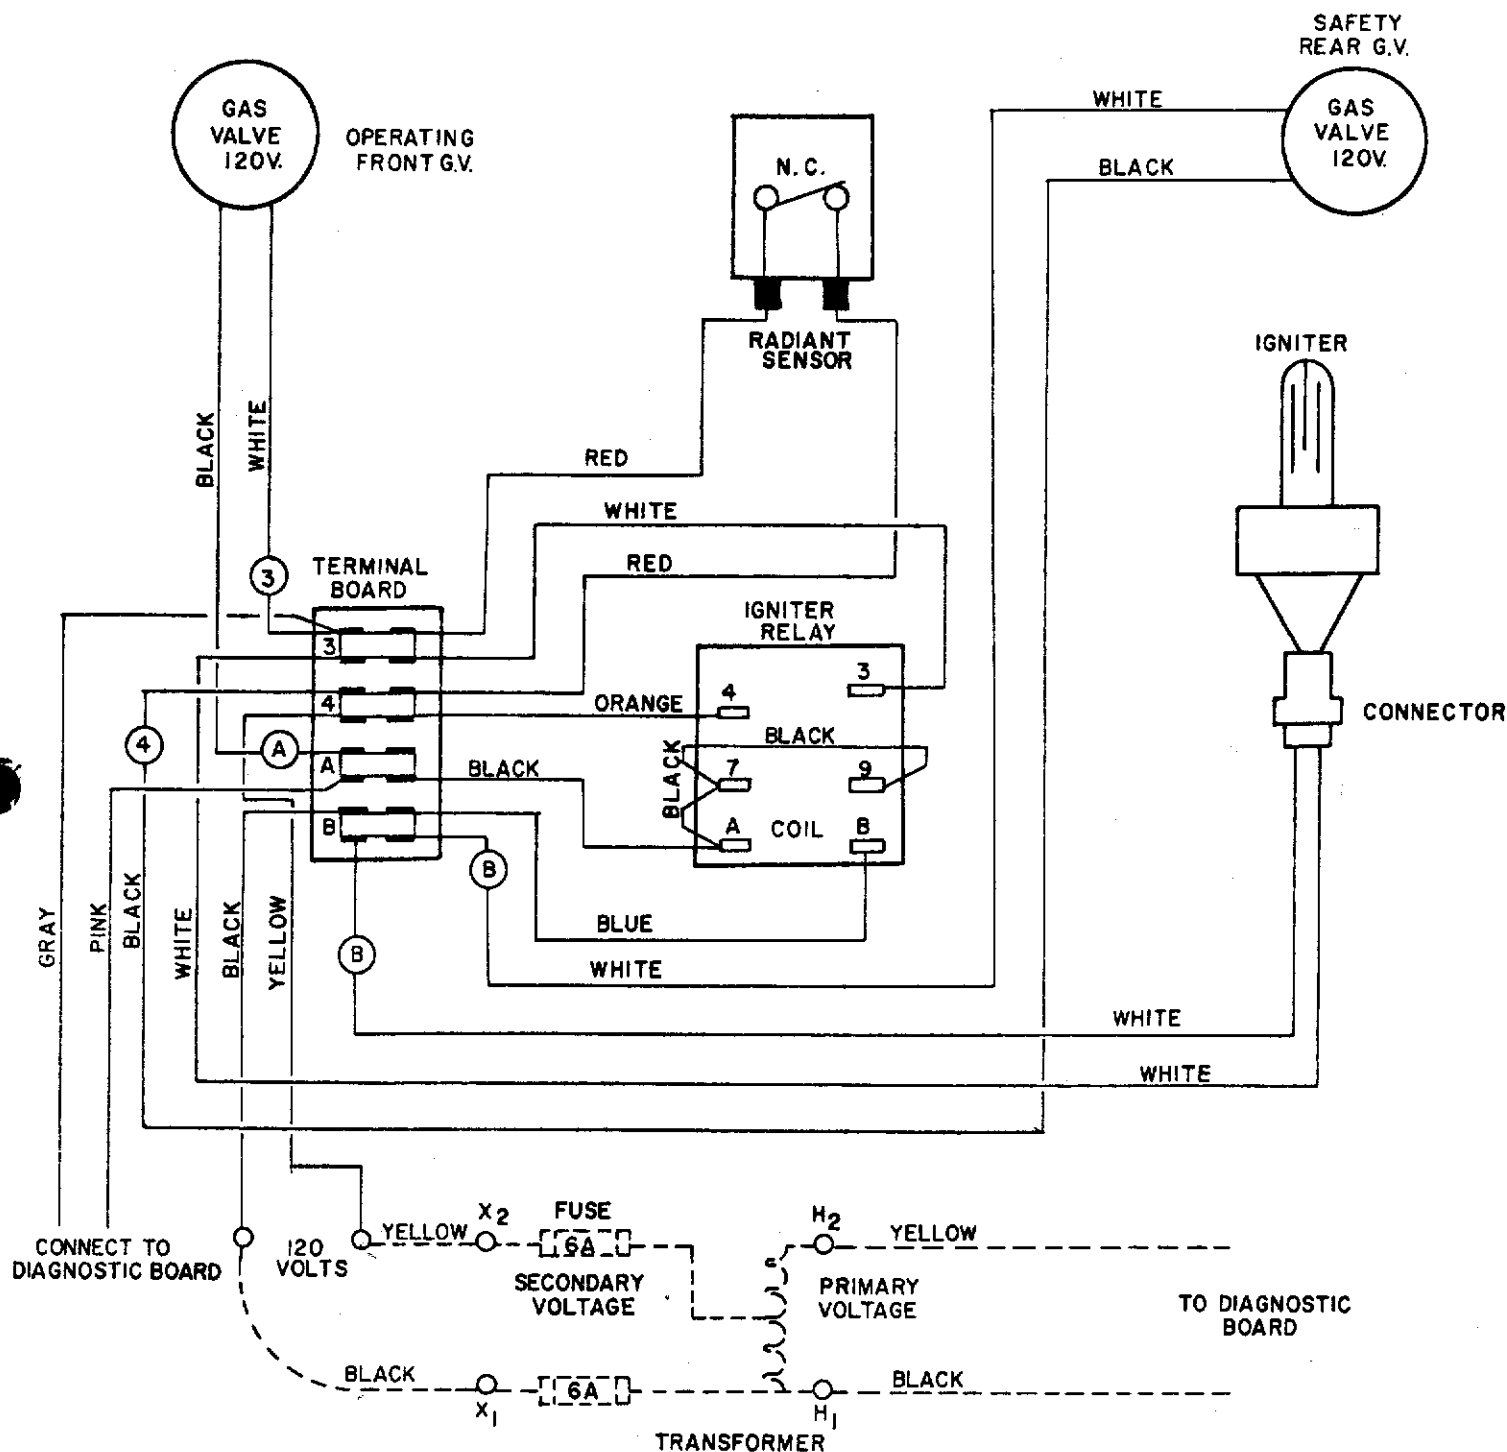


g-30-83

WIRING DIAGRAM

NORTON SILICON CARBIDE GAS IGNITION SYSTEM
120 VOLTS; 50/60 HZ; 1 PHASE
GAS DRYERS

TWL 679*

MODELS C & F

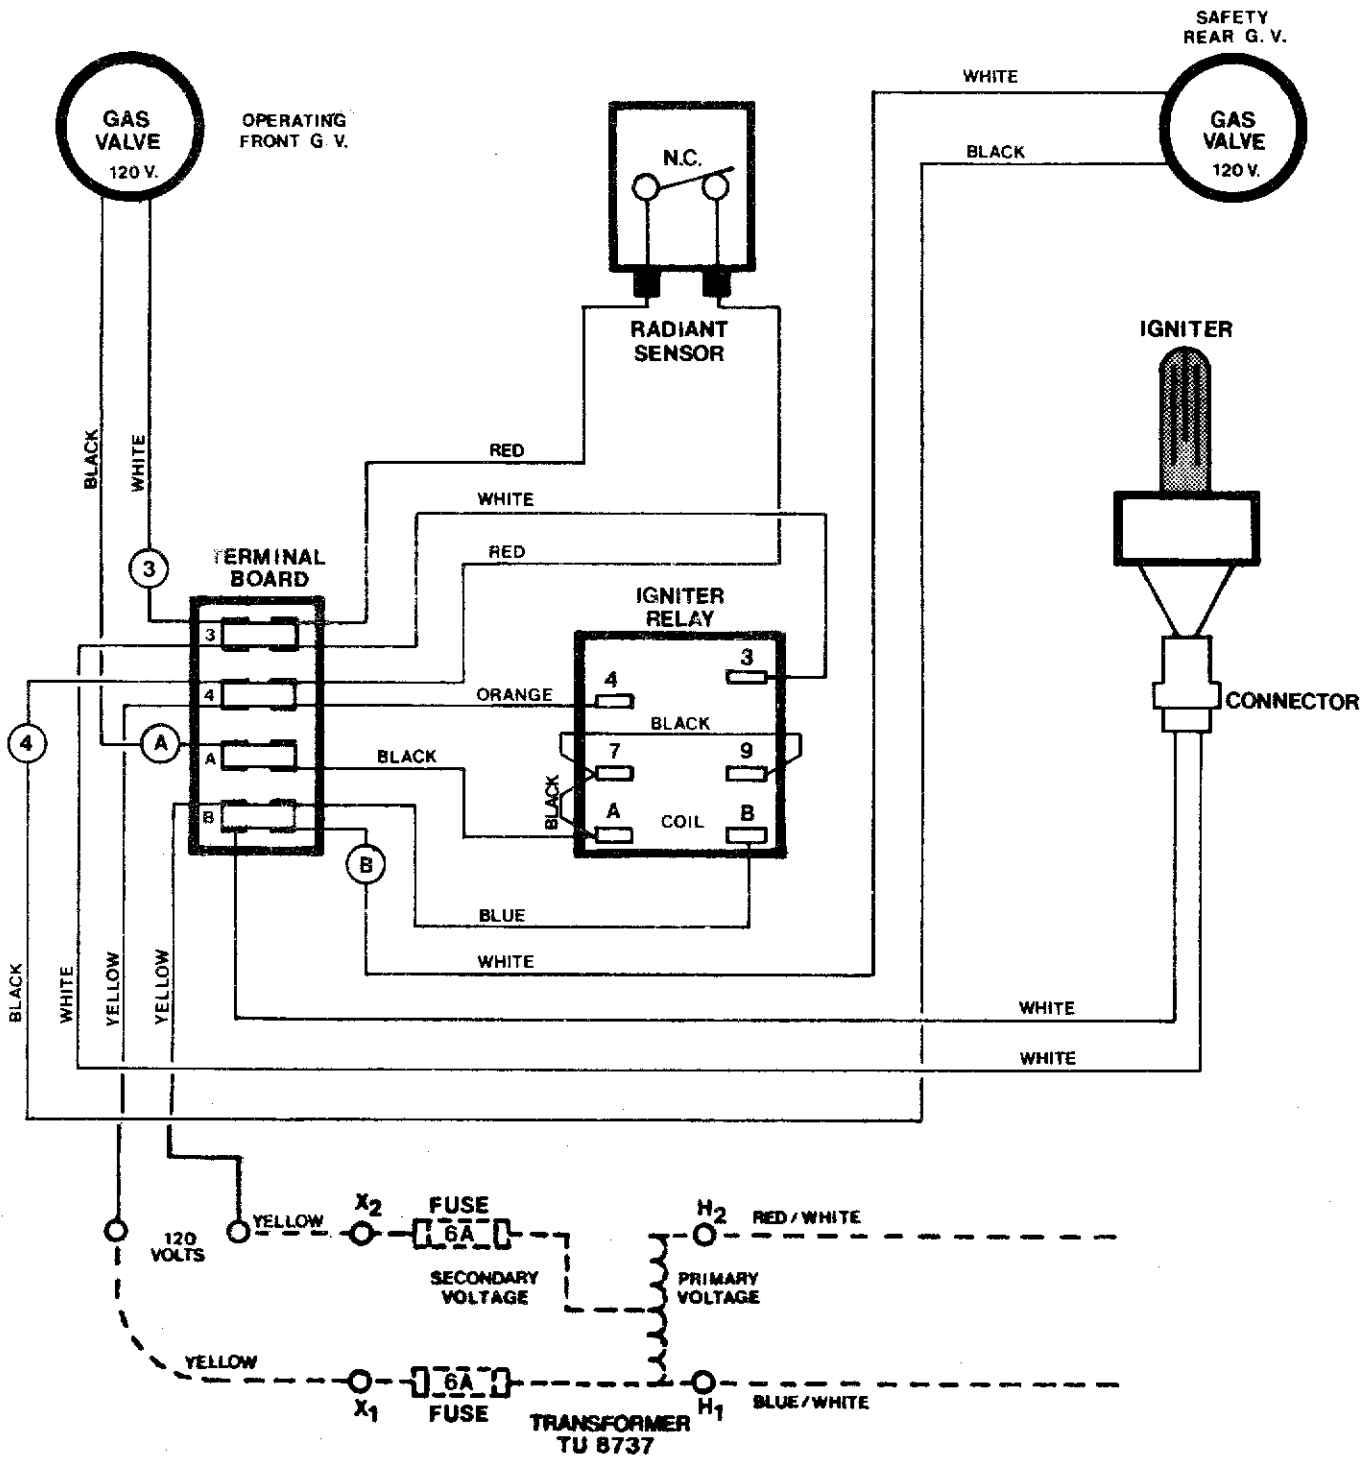

* NOTE

TWL 679 = L28CS30, WEB, CALIF. METER;
TWL 680 = L28F30, L36C30, L36F30, L36C36, L36F36;

MAINTENANCE

1. Clean lint trap daily: Remove lint before starting day's operation. A clean lint trap will increase the efficiency of the dryer, as the moisture laden air will be exhausted to the atmosphere more quickly.
2. Keep basket and sweep sheets clean: Clean periodically and/or as often as required. The basket and sweep sheets within the dryer are easily accessible for cleaning by removing the front panel of the dryer.
3. Gear reducer: Maintain oil level in gear reducer, half the depth of the oil cup. Use Cissell transmission oil. (See Cissell gear reducer sheet.)
4. Pulleys and belts: Keep belts clean. Oil and dirt will shorten the useful life of a belt. Never allow a belt to run against the belt guard. Check periodically for alignment. Pulley shafts must be parallel and the grooves must be in alignment. Check and retighten pulley set screws periodically. Check belt tension periodically. Lower motor to increase tension by adjusting the nuts fastening the motor plate to the 5/16" rod connected to the gear reducer.
5. Electric motors: Keep motors clean and dry. Motors having ball bearings are packed with sufficient grease for approximately five years normal operation. After five years, the bearings and housing should be cleaned thoroughly. Repack each bearing and the cavity back of the bearing one-third full with Chevron Grease No. SR1-2.

Motors having wool packed sleeve bearings are oiled at the factory for one year's normal operation. After one year's normal operation, add annually one-half teaspoon electric motor oil or S.A.E. #10 to each bearing. For 24 hour per day operation, add one teaspoon of oil annually.

If motors overheat, check voltage and wiring. Low voltage, inadequate wiring, and loose connections are the principle causes of motor failure.

6. Adjustable leveling bolts: One at each corner, front and rear permits accurate alignment of dryer.
To adjust: Block corner of dryer up off floor, loosen hex nut. With wrench, turn bolt clockwise to raise dryer, counter-clockwise to lower. Rear bolts are on outside of dryer. Hex nuts for front bolts are inside lint trap.
7. Steam heating units: Keep steam coils clean. Check periodically and clean as often as required. Remove lint and dirt accumulation from coil fins periodically as dirty lint laden coil fins decrease the efficiency of steam-heated dryers.
8. Gas burners: Keep gas burners clean. Check periodically and clean often.
9. Periodically examine and clean the exhaust system.
10. Keep dryer area clean and free from combustible materials, gasoline and other flammable vapors and liquids.
11. Do not obstruct the flow of combustion (make-up) air and ventilating air.
12. Periodically check gas pressure.
13. Periodically check dryer voltage per dryer rating plate.

Instructions for Basket Alignment
Single Motor Models

- Step 1 Loosen both eccentric locking collars on the two basket bearings (flange and pillow block types). Loosen the set screws and turn clockwise. If necessary, use a punch and mallet, striking the punch hole in a clockwise direction to break it loose.
- Step 2 Loosen the four side bolts, "1, 2, 3, 4," on the basket bearing bracket (See Fig. 3). Loosen the two adjusting bolts and locknuts "5, 6," inside the bracket. And loosen the bolts "7," on the pillow block bearing.
- Step 3 Place one "A" and two "B" diameter pins inside the drying compartment between the rim of the basket opening and the rim of the door opening in the positions shown in Figs. 1 & 2. Check the two "B" pins for equal clearance.
Note: Push the basket toward the rear.
- Step 4 With the pins in position, lock the collar nearest the rear wall of the dryer on the shaft by striking the punch hole in a counterclockwise direction. Tighten the set screw.
- Step 5 Tighten the side bolts "1, 2, 3, 4," in numerical order. Tighten the bolts "7" on the pillow block bearing. And tighten the bolts "5" and locknuts "6".
- Step 6 Remove the aligning pins and if alignment is O. K., then tighten the collar on the pillow block bearing the same as in Step 4.
Caution: Check to see that the set screws are wrench tight on the locking collars.

FIG. 1



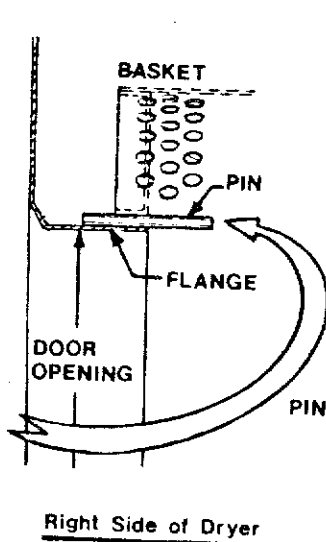


FIG. 2

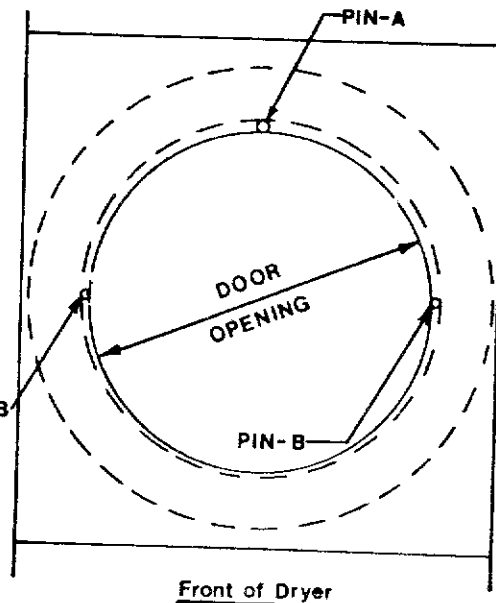

PIN-A-1/2 DIA.
PIN-B-5/16 DIA.

FIG. 3

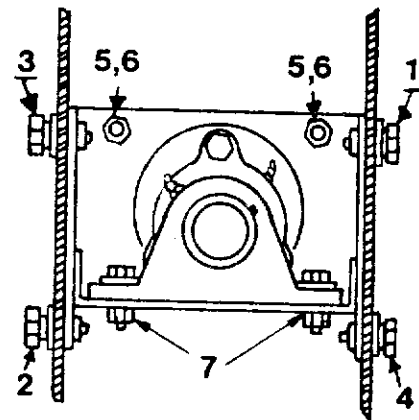

INSTRUCTIONS FOR ALIGNING BASKET ON CISSELL 50 LB. DRYER - DOUBLE MOTOR

1. Loosen the 4 gear reducer mounting bolts (1, 2, 3 & 4) on rear of dryer, and 2 adjusting bolts #5, on gear reducer housing. (Fig. 3).
2. Place one "A" and two "B" diameter pins inside the drying compartment between the rim of the basket opening and the rim of the door opening in the positions shown in Figure 1 and Figure 2. Check the two "B" pins for equal clearance.
3. With the pins in position, tighten the two No. 5 bolts until flush against back of dryer. Retighten gear reducer mounting bolts in the numerical order indicated in Figure 3. Tighten lock nuts No. 6 to secure bolts No. 5 in position. Then remove pins.
4. Check the space between basket and door opening at "A" pin and "B" pin positions (Figure 2). If the gap is not approximately the same on both sides, repeat steps 1, 2 & 3.

NOTE: Use short sections of round steel rod for pins or drill bits may be used in place of round rod.

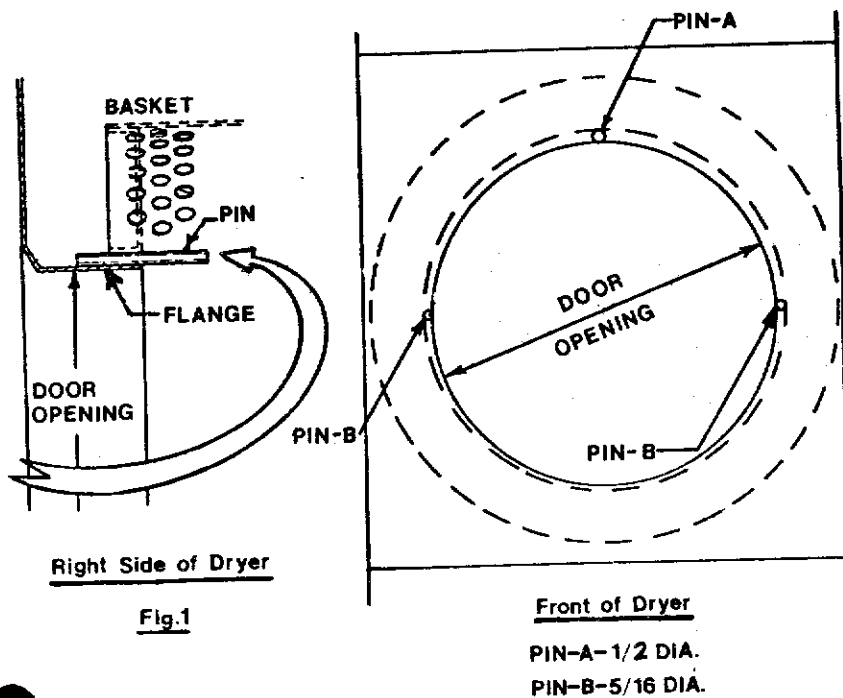


Fig. 2

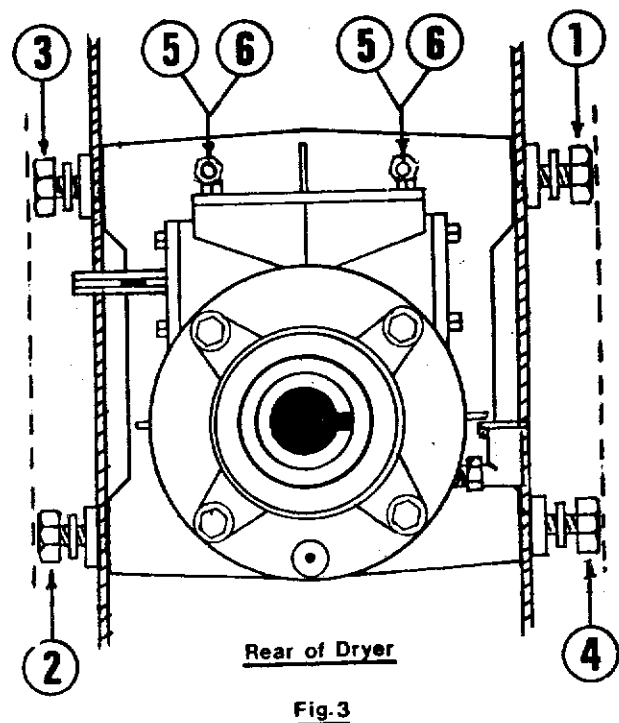


Fig. 3

INSTRUCTIONS FOR SHIMMING A CISSELL
BASKET AND SPIDER ASSEMBLY


This procedure is normally necessary when replacing either the basket or the spider assembly on any Cissell dryer tumbler. The alignment of these two parts is crucial in assuring a true running basket.

- A. Align the basket per instructions.
- B. Rotate the basket to determine where the most out of round point is or where the basket scrapes or comes closest to scraping the sweep sheet.
- C. Mark this position and the nearest rib to this position.
- D. Remove the basket (do not loosen the alignment bolts).

IF ANY EXISTING SHIMS ARE FOUND, REMOVE THEM, REINSTALL BASKET & START 4/13.

- E. With the basket on the floor, spider up, place one or two shims between the spider leg and the back of the basket at the position marked on the rib. See illustration.
- F. Install the spider and basket assembly and re-check cylinder.
- G. If the basket is still out of round at this point, steps B through F must be repeated.
- H. Upon completion of the shimming process, re-alignment of the basket is necessary.

Note: If the point mentioned in Step B is between two ribs, both ribs might have to be shimmed.

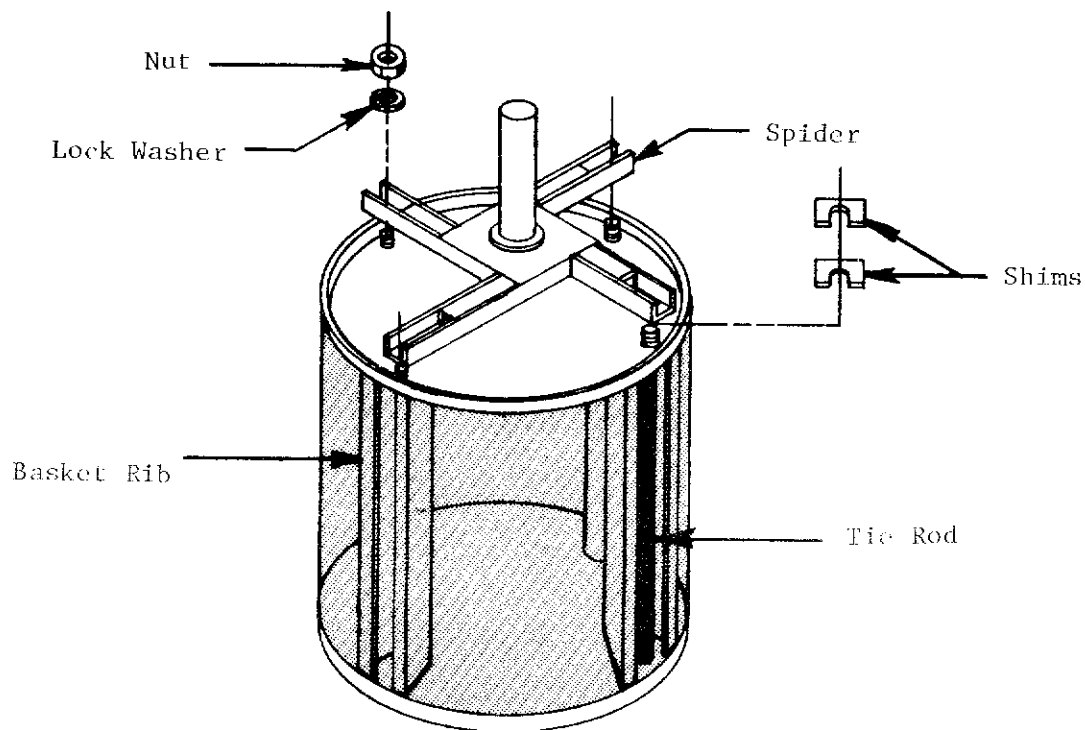


Instructions for Replacing Bearings & Collars (Dryers Equipped with Pillow Block and Flange Basket Bearings)

- Step 1: Remove belt guard, V-Belt, and basket sheave.
- Step 2: Loosen set screw in first locking collar and remove from shaft by rotating clockwise. If necessary, use punch and mallet, hitting in clockwise direction to break collar loose.
- Step 3: Remove the two bolts holding the pillow block bearing and take it off the shaft.
- Step 4: Remove the second locking collar in the same manner as in Step 2.
- Step 5: Remove the three nuts and washers holding the flange basket bearing and take it off the dryer.
- Step 6: Inspect the bearings and collars for damage and replace as necessary in reverse order of removing them. Before tightening securely, align basket per instructions on separate instruction sheet.
- Step 7: Lubrication Guide - Grease bearings at regular intervals shown below. Use #42-032-6015 Lubriplate #310 1 lb. can or 14.5 oz. tube, Lubriplate #930-2 Multi-purpose grease #10098.




Bearings are factory lubricated and ready for use.
They are equipped with fittings for lubricating.
Add grease slowly; when grease begins to come out of the seals, the bearing will contain the correct amount.

| <u>Operating Conditions</u> | <u>Grease Intervals</u> |
|-----------------------------|-------------------------|
| Clean | Every 6 months |
| Dirty | Every month |
| Moisture | Every week |

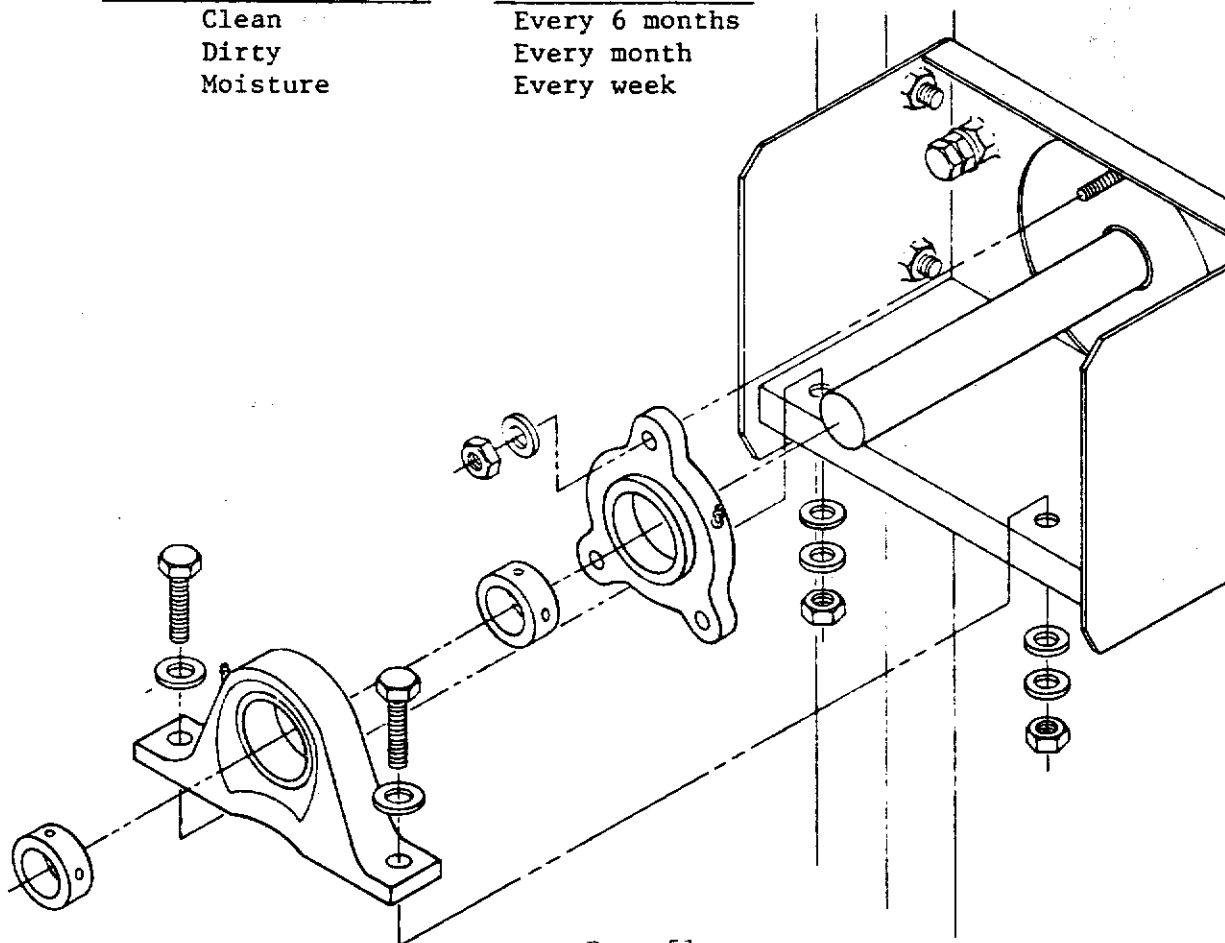

AIR SWITCH ADJUSTMENT

1. Shut off current; disconnect leads and remove air switch.
2. Lay air switch assembly on flat surface. Adjust air blade at "A" (fig. 1) so that air blade lays flat and surface "B" is parallel to the flat surface.
3. Place $3/8" \times 5/8"$ spacer bar or equivalent "C" (fig. 2) under air blade in position shown; hold switch mounting bracket firmly and adjust switch actuator "D" with needle nose pliers at "E" by twisting actuator right or left whichever is needed so that switch closes when end of air blade engages bar "C".
4. Maximum opening of air switch must be no greater than $3/4"$ (fig.3). Bend tab "F" in or out to maintain this dimension.
5. Re-install air switch assembly on rear of dryer.
6. Re-check operation of air blade. Switch must close before air blade engages face of opening and re-open before stop "F" engages.

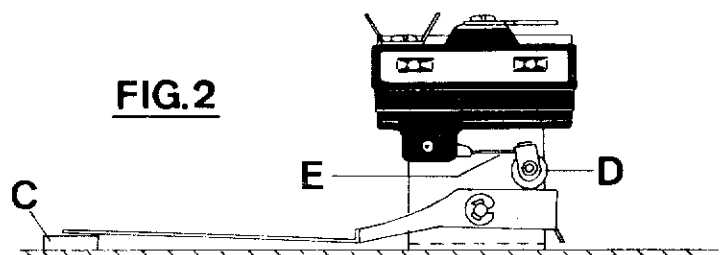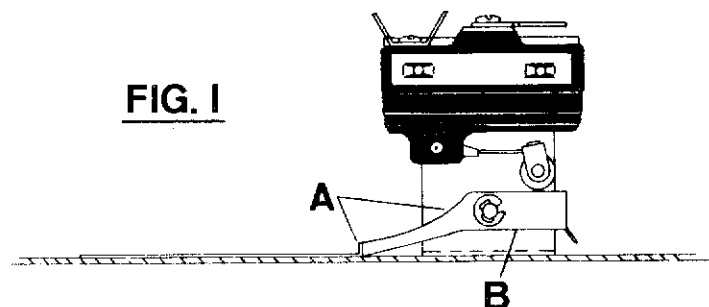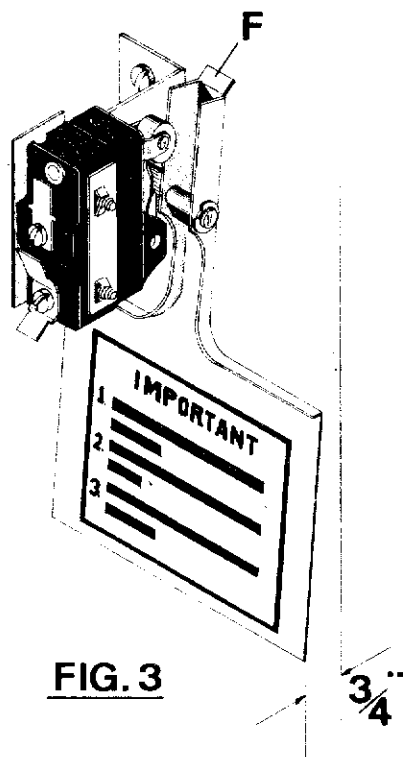


GEAR REDUCER

Vent: Important

Remove this screw before placing machine in operation

Oil Fill:

Remove worm gear cover, pour oil in gear reducer to oil level. (one-half depth of oil cup)

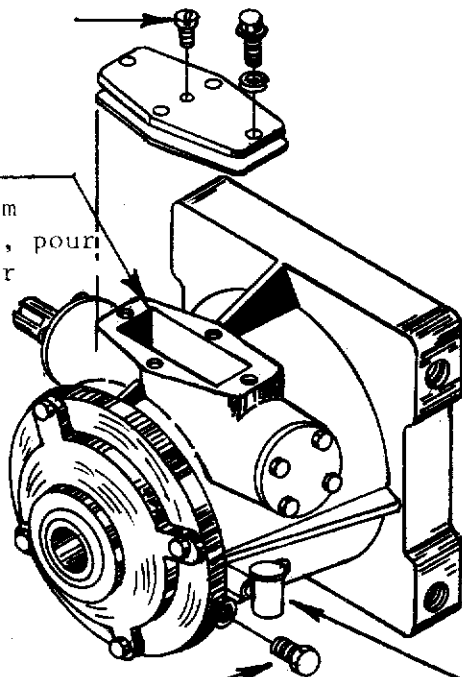

TU3465
Transmission Oil

Drain Plug

Oil Level Cup

Oil level one-half depth of cup. Do not overflow. Remove cork from oil level cup.

Before placing the dryer into operation, remove screw from vent in oil fill atop each gear reducer case. Remove the cork from the oil level inspection cup. If the oil level is correct, the oil level inspection cup will be half filled with oil. If not, add oil. Oil may be added to the gear reducer by removing the worm gear cover in the top rear of the gear reducer case. Do not operate a gear reducer unless the drain plug is tight, and the vent screw removed.

Each gear reducer is filled with one pint of Cissell TU3465 transmission oil before leaving the factory. Change oil once every six months.

The Large Timken Bearings, which support the worm gear and basket load, must operate in a preloaded condition, that is the worm gear must not have end play. The gear reducer is assembled at the factory to provide a 5-8 inch lb. pre-load on the bearings.

The Small Timken Bearings, which carry the worm must operate in a pre-loaded condition, that is, the worm must not have end play. The gear reducer is assembled at the factory to provide a 2-4 inch lb. pre-load on these bearings.

Total torque 8-10 inch lb. on shaft for both gears.

NOTE: On original equipment, the Cissell Gear Reducer is equipped with a Carlock Shaft Seal. If this seal requires replacement, it cannot be replaced with the same type of seal since the original seal would have seated in on the shaft. It must be replaced with a TU2166.

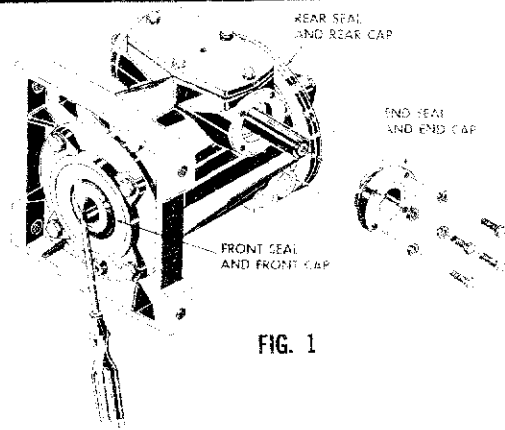


FIG. 1

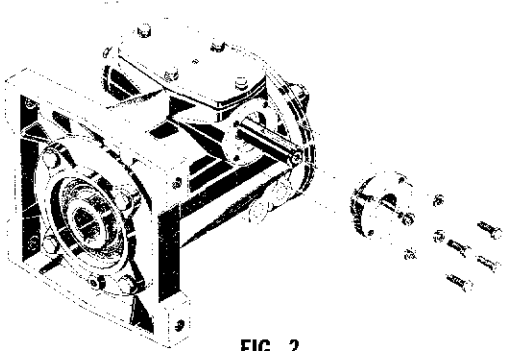


FIG. 2



FIG. 3

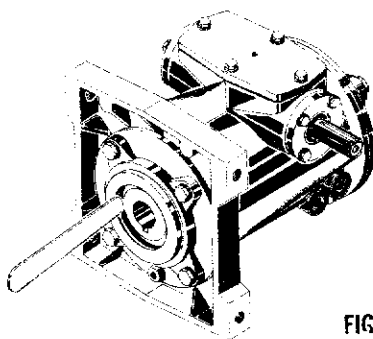


FIG. 4

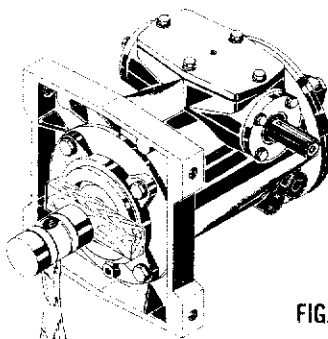


FIG. 5

CAUTION

Drain oil **before** removing seals; replace with **NEW** oil **after** installing new seals (See Cissell Gear Reducer Sheet).

Remove Gear Reducer from rear of dryer **before** removing seals.

TO REMOVE EXISTING FRONT AND REAR SEALS from front and rear caps on Gear Reducer (Fig. 1):

Slip end of screwdriver under seal (front seal illustrated); using end of Gear Shaft as a fulcrum, force seal out. Repeat operation at several different places until seals are removed from gear shaft.

TO REMOVE EXISTING END SEAL and END CAP from Gear Reducer (Fig. 1):

Remove four cap screws and slip end cap and seal from worm gear. Tap seal out of cap from inside.

Clean inside of front, rear, and end caps. Spread permatex evenly over area to receive seal. Clean outside end of large and small gear shafts. Spread vasoline evenly over area to receive seal. (Fig. 2).

Spread permatex evenly over outside rim area, (Fig. 3) of seal. Spread vasoline evenly over inside rim area of seal.

TO INSTALL NEW FRONT AND REAR SEALS:

Hold front (and rear) seal tightly in place over gear shaft with rubber seal in. Run edge of thin, dull instrument (such as wooden spatula, illustrated against front seal, Fig. 4) carefully around rubber wiping edge of seal and chamfer end of gear shaft so that seal is evenly installed all around gear shaft. **DO NOT INJURE RUBBER WIPING EDGE.**

TO INSTALL NEW END SEAL:

Slip seal in end cap. Hold cap and seal tightly in place over small shaft with rubber seal in. Run edge of wooden spatula carefully around rubber wiping edge of end seal and chamfer end of small shaft so that seal is evenly installed all around edge of shaft. **DO NOT INJURE RUBBER WIPING EDGE.**

AFTER SEALS ARE EVENLY INSTALLED ALL AROUND EDGES OF SHAFTS:

Place block of wood over front and rear seals and tap all around with a plastic faced mallet, (Fig. 5) until seal is flush into recess of front (or rear) cap.



Slip end seal and cap into position and tighten four bolts; then with a block of wood over end seal, gently tap with plastic faced mallet, until seal is flush into recess of end cap.

REINSTALL GEAR REDUCER ON REAR OF DRYER

IMPORTANT

While the sealing element or packing ring in a seal is not fragile, care must be taken to prevent damage to the wiping edge during mounting. Do not apply pressure to, nor hammer directly on, the sealing ring or spring; make sure that all mounting tools contact only the metal case of the seal.

FRONT VIEW OF DRYER

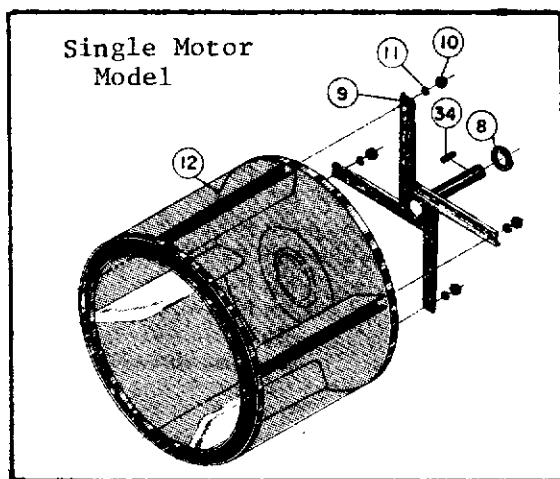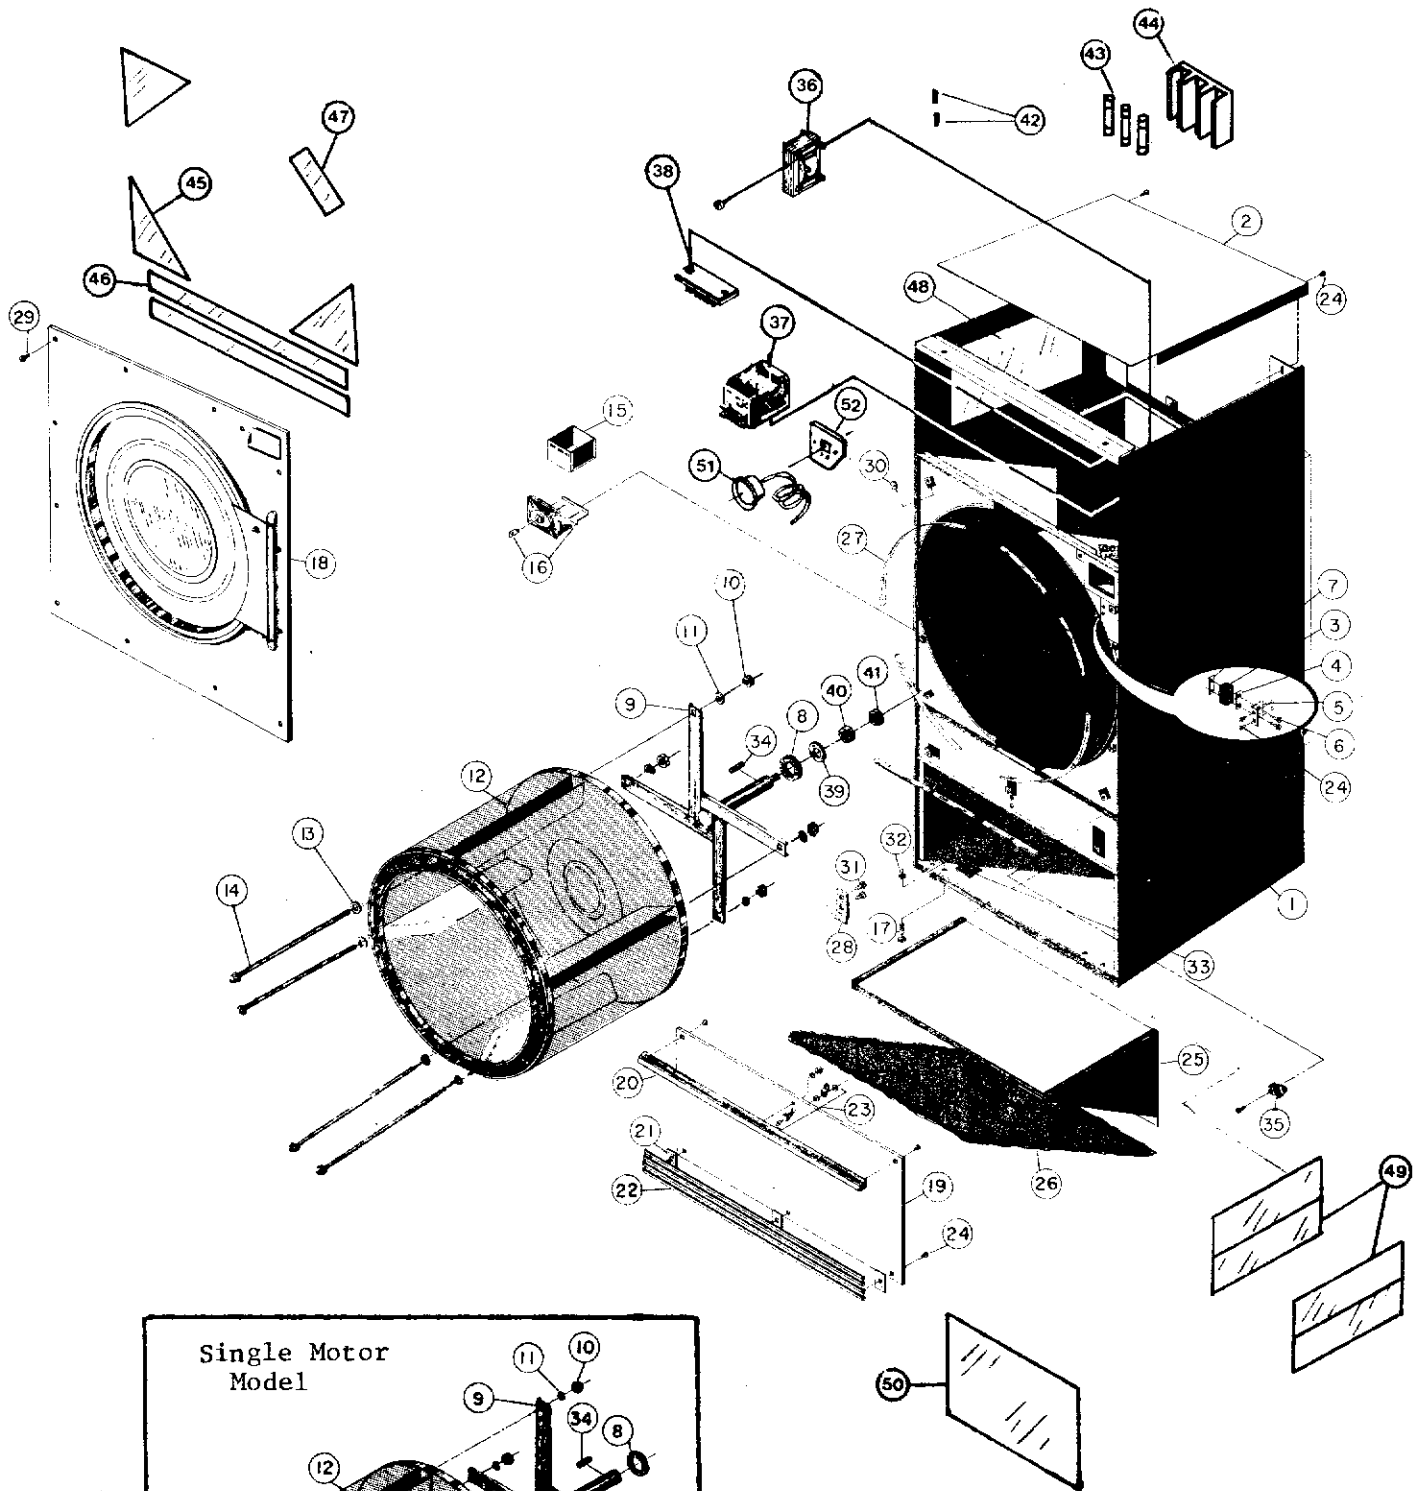

Grease to be applied to all bearing shafts. #42-032-6015 Grease Lubriplate #310- 1 lb. can OR 14.5 Oz. Tubes-Lubriplate No. 930-2 Multipurpose Grease #10098.

FRONT VIEW OF DRYER

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|---|-----------------|-----------------|--|
| 1 | TU8180 | Jacket Welded Assy. (For Coin Vault) | 21 | TU2710 | Trim Holder |
| | TU8181 | Jacket Welded Assy. (For Time & Temp.) | 22 | TU2385 | Trim |
| | TU9594 | Jacket Welded Assy. (For K & R Models) | 23 | TUB1867 | Lock & Key |
| 2 | TU2621 | Solid Top (Gas) | 24 | TU7733 | #8x $\frac{1}{2}$ " Self Drill Screw |
| 3 | TU1979 | Door Switch | 25 | TU8368 | Lint Trap Frame Welded Assy. |
| 4 | TU1770 | Insulator | 26 | TU5261 | Self-Cleaning Lint Screen Assy. |
| 5 | TU2373 | Door Switch | | TU10362 | Self Cleaning Lint Screen <u>Only</u> |
| | | Mounting Bracket | | TU5225 | Lint Screen Frame <u>Only</u> |
| 6 | TU3219 | #6x1" Sheet Metal Screw | 27 | TU5876 | Sweep Sheet Gaskets |
| 7 | TU1771 | #6 Tinnerman Twin Nut | 28 | TU3206 | Lock Plate |
| 8 | TU108 | Felt Seal (CD & FD Model Only) | 29 | TU2878 | #10 x 5/8" S.M.S. |
| 9 | TU7183 | Spider Welded Assy. (CS & FS Model Only) | 30 | TU2877 | #10 Speed Nut |
| | TU5231 | Spider Welded Assy. (CD & FD Model Only) | 31 | TU1978 | #14 x 3/4" S.M.S. |
| | TU9780 | Spider Welded Assy. (K & R Models Only) | 32 | TU4937 | 3/8"-16 Jam Nut |
| 10 | TU2882 | $\frac{1}{2}$ "-20 Hex Nut | 33 | TU2420 | S. N. Plate |
| 11 | TU2831 | $\frac{1}{2}$ " Split Lock Washer | 34 | TU5887 | Key |
| 12 | TU6822 | Basket Weldment (C & F Models Only) | 35 | TU3240 | 185°F Thermostat Mounted to Fan Housing |
| | TU9773 | Basket Weldment (K & R Models Only) | 36 | TU8737 | Transformer 208 or 230V. Primary, 120V. Secondary |
| 13 | TU2883 | $\frac{1}{2}$ " Cut Washer | 37 | TU8599 | Relay 120V. (Igniter) |
| 14 | TU2313 | Tie Rod | 38 | TU8629 | Terminal Board (Igniter) |
| | TU5490 | Shim (3 req'd) See Instructions Shimming | 39 | TU2493 | Flat Washer** |
| 15 | CM35 | Coin Box | 40 | TU3537 | Full Nut** |
| 16 | CM61 | Coin Vault Lock Assy. | 41 | TU3536 | Jam Nut** |
| 17 | TU3211 | 3/8"-16x2 $\frac{1}{2}$ Leveling Bolt | 42 | TU8738 | Fuses |
| 18 | TU5810 | Front Panel & Door Assy. (For Coin Vault) | 43 | TU10065 | Fuses |
| | TU6056 | Front Panel & Door Assy (For Time & Temperature) | 44 | TU7505 | Fuse Holder |
| 19 | TU5566 | Lint Door Welded Assy. | 45* | TU7735 | Insulation (3 ea.) |
| 20 | TU7473 | Handle | 46* | TU8107 | Insulation (2 ea.) |
| | | | 47* | TU8108 | Insulation (1 ea.) |
| | | | 48* | TU7793 | Insulation (1 ea.) |
| | | | 49* | TU8152 | Insulation (4 ea.) |
| | | | 50* | TU8153 | Insulation (1 ea.) |
| | | | 51 | TU3593 | Thermometer (Optional) |
| | | | | TU3816 | Lens Repl. (Texas Gage Only) |
| | | | | TU8475 | Lens Repl. (Marshalltown Inst. Only) |
| | | | 52 | TU6766 | Thermometer Mtg. Plate |


*Used only on "F" or "R" models only.

**Double motor model.

TU5808 Lint door assembly consists of 19-24.

TU8380 Self-cleaning lint trap assembly consists of 25-26.

REAR SECTION OF DRYER - SINGLE MOTOR

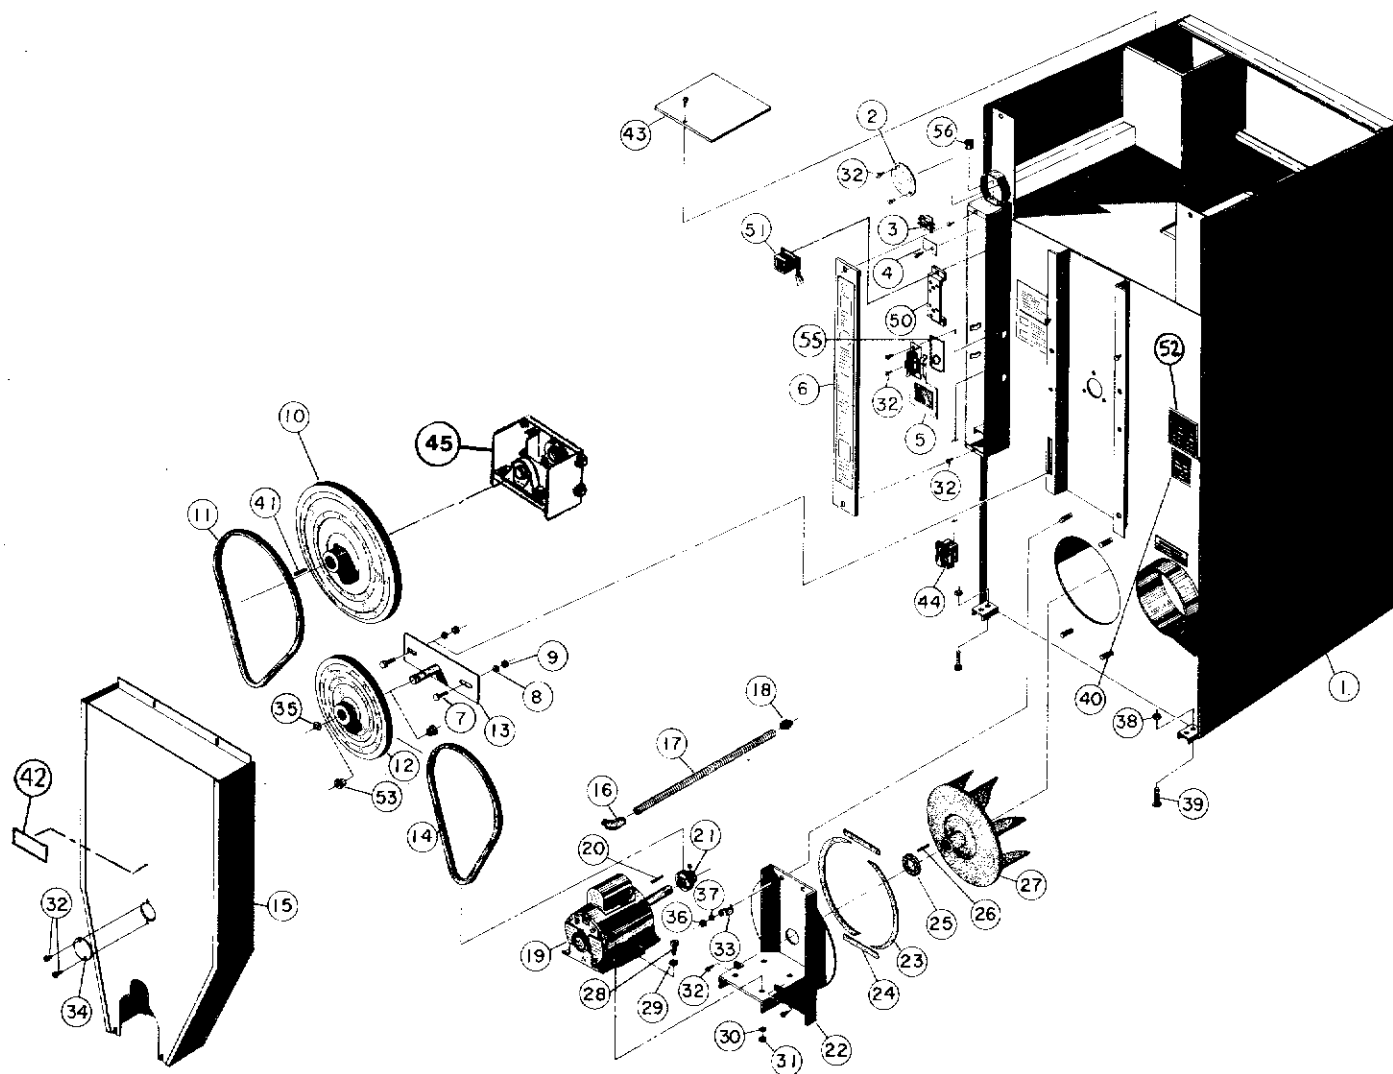

REAR SECTION OF DRYER - SINGLE MOTOR

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|----------|-----------|--------------------------------------|----------|----------|--|
| 1 | TU8180 | Jacket W/A-Coin Meter | 28 | TU5439 | Hex Hd. Screw - 5/16"-18 x 3/4" |
| | TU8181 | Jacket W/A-2 Timer | | | |
| | TU9594 | Jacket W/A-Prompter | 29 | VSB130 | Cut Washer - 5/16" |
| 2 | SB170 | Junction Box Cover | 30 | TU2814 | Split Lockwasher - 5/16" |
| 3 | M155 | Wire Harness Clamp | 31 | C249 | Hex Nut - 5/16" |
| 4 | TU2726 | Strain Relief Plate | 32 | TU3218 | Self-Drilling Screw 7/16" |
| 5 | TU8206 | Air Switch Asm. See Separate Page | 33 | TU6484 | Cable Strap |
| 6 | TU5890 | Control Box Cover | 34 | TU7467 | Cover Plate |
| 7 | TU4936 | Carriage Bolt 3/8" - 16 x 3/4" | 35 | TU3247 | Retaining Ring |
| | | | 36 | TU4787 | Hex Nut - 3/8" |
| 8 | TU3243 | 3/8" I.T. Lockwasher | 37 | VSB134 | Lockwasher - 3/8" |
| 9 | TU3188 | 3/8" Hex Nut - Nylok | 38 | TU4937 | Jam Nut - 3/8" |
| 10 | TU5446 | Basket Sheave | 39 | TU3211 | Leveling Bolt - 3/8"-16 x 2 1/2" |
| 11 | TU5447 | V-Belt - 4L660 | | | |
| 12 | TU5217 | Idler Sheave | 40 | F1116 | Serial No. Plate |
| 13 | TU10272 | Idler Bracket With Grease Fitting | 41 | TU5887 | Key |
| | | | 42 | TU10418 | Lubrication Label |
| 14 | TU4794 | V-Belt (60HZ)4L590 | 43 | TU5732 | Mechanism Box Cover (Steam Dryer Only) |
| | TU6725 | V-Belt (50HZ)4L600 | | | |
| *15 | TU5074 | Rear Guard - Complete | 44 | TU1984 | Relay-120V. 2 Pole |
| | TU7466 | Rear Guard - W/O Cover Plate | | TU1985 | Relay-240V. 2 Pole |
| | | | | TU3495 | Relay-240V. 3 Pole |
| 16 | TU4791 | Right Angle Connector | | TU3496 | Relay-120V. 3 Pole |
| 17 | 504641292 | Cable - 34" Long | 45 | — | Cast Iron Bearings and Bracket Assembly- See Separate Page for Parts breakdown. |
| 18 | TU4790 | Straight Connector | | | |
| 19 | ** | Motor | | | |
| 20 | TU5241 | Key | | | |
| 21 | TU6761 | Motor Sheave, 60 Hz., W/Set Screw | | | |
| | TU7525 | Motor Sheave, 50 Hz., W/Set Screw | 50 | TU6220 | Relay Mtg. Plate |
| 22 | TU5849 | Motor Mount W/A | 51 | TU4659 | Transformer (380/ 440/550V., 50/60 HZ. |
| 23 | TU2473 | Side Gasket | | | |
| 24 | TU2474 | Top & Bottom Gasket | | TU4660 | Transformer (240/ 480V., 60 HZ. |
| 25 | TU2476 | Felt Seal | | | |
| 26 | TU4684 | Key | 52 | TU6783 | Rating Plate |
| 27 | TU5874 | Fan Wheel - 60 HZ.*** | | | Electric Heat Only |
| | TU8740 | Fan Wheel - 50 HZ.*** | 53 | TU7184 | Bronze Bushing (2 ea.) |
| 28 | TU5439 | Hex Hd. Screw 5/16" - 18 x 3/4" | 54 | TU9600 | Idler Pulley Label |
| | | | 55 | TU9180 | Air Switch Plate |
| | | | 56 | TU7372 | Bushing |

*For Double Capacitor Motors Only:

TU9294 - Rear Guard Complete


TU9292 - Rear Guard W/O Cover Plate

**Specify Motor No., Voltage, H.P. and Phase

***Set Screws - TU3282 (Round)

F819 (Square)

REAR SECTION OF DRYER - DOUBLE MOTOR

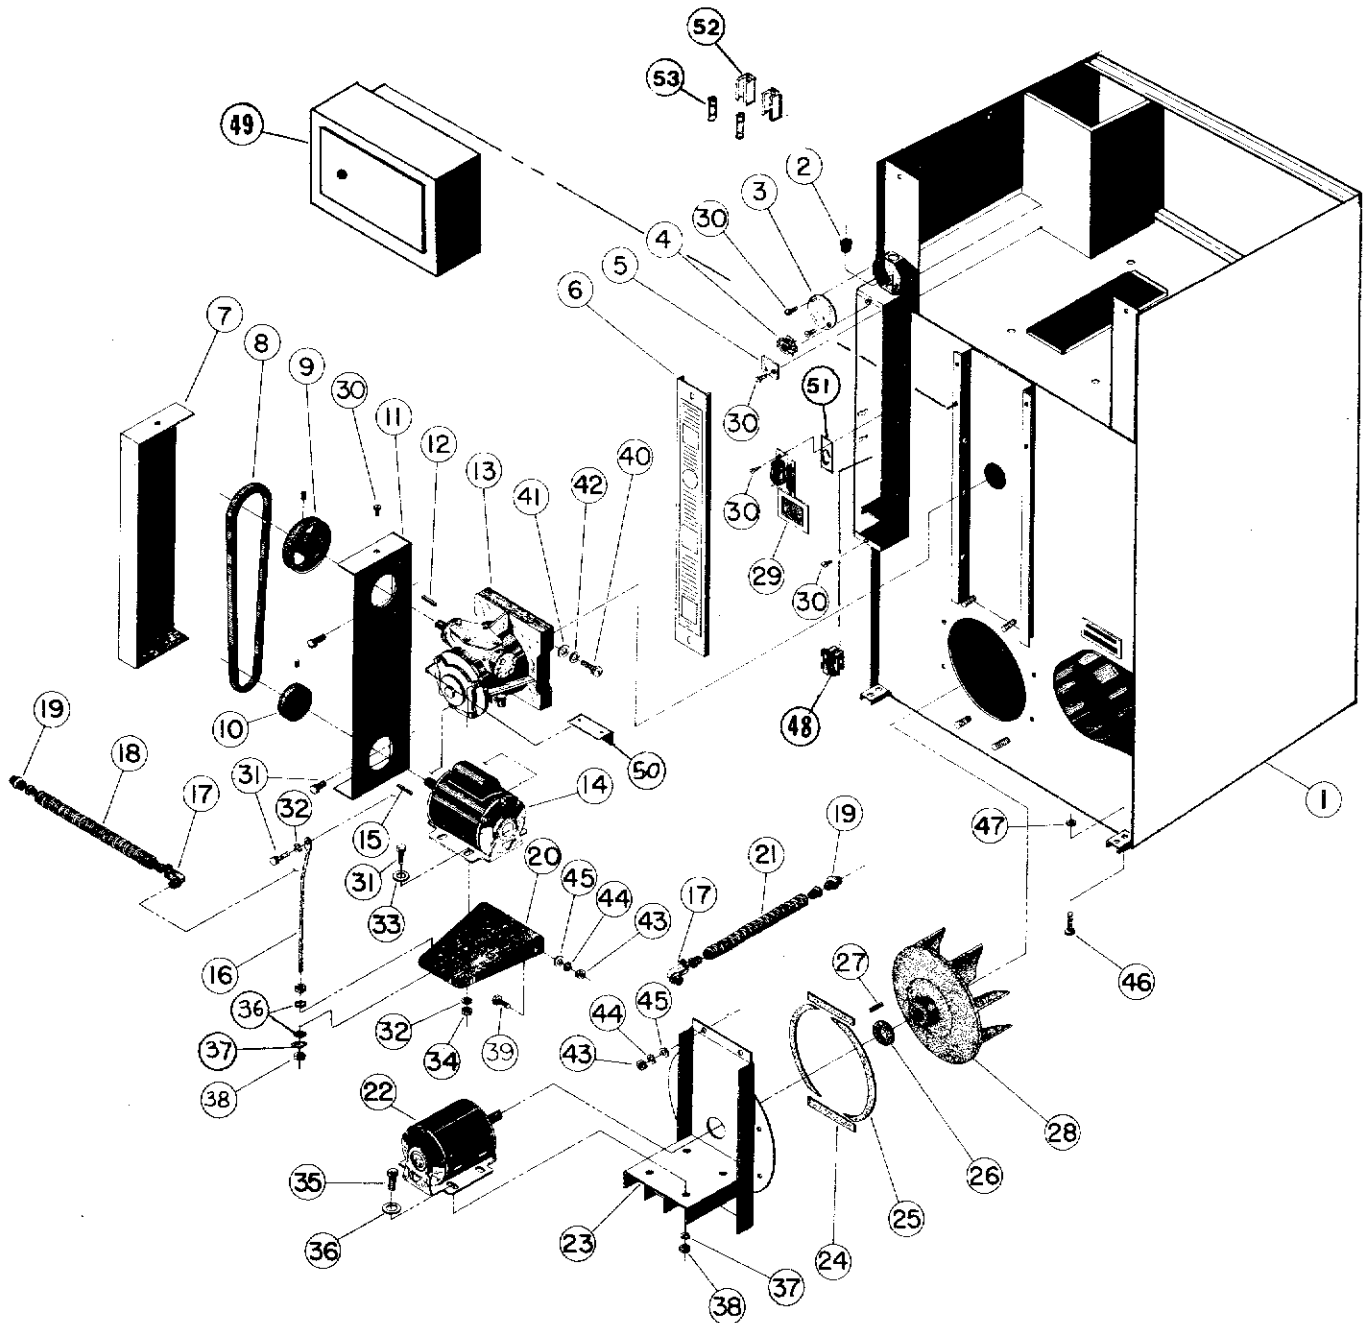


REAR SECTION OF DRYER - DOUBLE MOTOR MODEL

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|----------|-----------|----------------------------------|----------|-----------|---|
| 1 | TU8180 | Jacket (Coin Vault) | 30 | TU7733 | 8X $\frac{1}{2}$ " Sh. Met. Scr. |
| | TU8181 | Jacket (Time & Temp.) | 31 | RC344 | $\frac{1}{4}$ "-20X3/4" Cap Scr. |
| 2 | TU2372 | Bushing | 32 | TU2846 | $\frac{1}{4}$ " Lockwasher |
| 3 | SB170 | Junction Box Cover | 33 | TU2847 | $\frac{1}{4}$ " Cut Washer |
| 4 | ML55 | Wire Harness Clamp | 34 | TU4934 | $\frac{1}{4}$ "-20 Hex Nut |
| 5 | TU2726 | Strain Relief Plate | 35 | TU5439 | 5/16"-18X3/4" Cap Sc. |
| 6 | TU5890 | Control Box Cover | 36 | VSB130 | 5/16" Flat Cut Wshr. |
| 7 | TU3857 | Belt Guard Cover | 37 | TU2814 | 5/16" Split Lockwshr. |
| 8 | TU2317 | V-Belt 46-380 | 38 | C249 | 5/16"-18 Hex Nut |
| 9 | TU2323 | Gear Sheave (AK-51) | 39 | TU3124 | 3/8"-16X3/4" Cap Scr. |
| | | w/Set Screw | 40 | RC347 | $\frac{1}{2}$ "-13X1 $\frac{1}{4}$ " Cap Scr. |
| 10 | F1034 | Motor Sheave (AK-34) | 41 | TU1851 | $\frac{1}{2}$ " Cut Washer |
| | | w/Set Screw | 42 | TU2831 | $\frac{1}{2}$ " Lockwasher |
| 11 | TU5254 | Belt Guard Mounting | 43 | TU4787 | 3/8"-16 Hex Nut |
| 12 | TU5241 | Shaft Key | 44 | VSB134 | 3/8" Lockwasher |
| 13 | TU8363 | Small Gear Reducer | 45 | IB140 | 3/8" Cut Washer |
| 14* | See Pg 11 | Basket Motor | 46 | TU3211 | 3/8"-16X2 $\frac{1}{2}$ " Lev.Bolts |
| 15 | TU5241 | Key | 47 | TU4937 | 3/8"-16X3/4" Cap Scr. |
| 16 | TU8608 | Belt Adjusting Rod | 48 | TU1984 | Relay-120V 50/60 Cy. |
| 17 | TU4791 | Right Angle Connector | | | (2 Pole) |
| 18 | 504641292 | $\frac{1}{2}$ " Greenfield Cable | | TU1985 | Relay-240V 50/60 Cy. |
| | | (Specify 17" Long) | | | (2 Pole) |
| 19 | TU4790 | Straight Connector | | TU3495 | Relay-208/240V |
| 20 | TU33 | Motor Drive Bracket | | | 50-60 Cy. (3 Pole) |
| 21 | 504641292 | $\frac{1}{2}$ " Greenfield Cable | | TU3496 | Relay-120V 50/60 Cy. |
| | | (Specify 29" Long) | | | (3 Pole) |
| 22* | See Pg 11 | Fan Motor | 49 | See Pg 76 | Rev Contr Box Asm |
| 23 | TU2376 | Motor Mount Weldment | | | (3 Ph. only) |
| 24 | TU2474 | Top and Bottom Gasket | 50 | TU9840 | Housing Mtg. Bracket |
| 25 | TU2473 | Side Gasket | | | (Promoters Only) |
| 26 | TU2476 | Felt Seal | 51 | TU9180 | Air Switch Plate |
| 27 | TU4684 | Key | 52 | TU7505 | Fuse Holder (2) |
| 28** | TU5874 | Fan Assembly 60 Hz. | 53 | TU8279 | Fuse (2) |
| | TU8740 | Fan Assembly 50 Hz. | 54 | TU10640 | Power Conn. Label |
| 29 | TU8206 | Air Switch Asm. | | | |
| | | (See Separate Page) | | | |

* When ordering motors: Specify Motor No., Voltage, Horsepower & Phase

** Set Screws - TU3282 (Round) - F819 (Square)

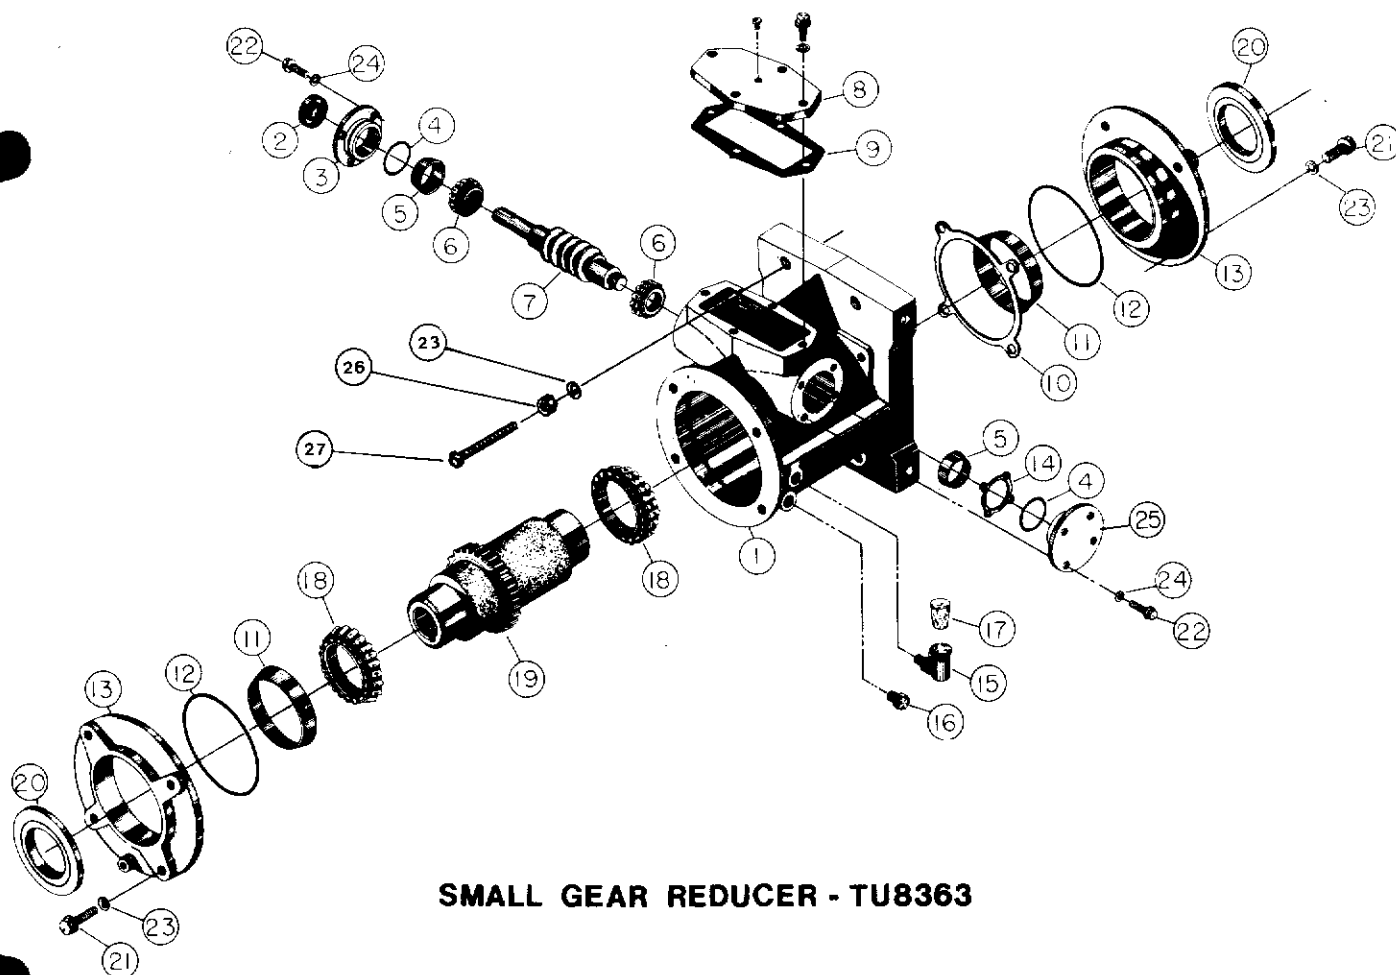


SMALL GEAR REDUCER - TU8363


| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|---|
| 1. | TU8362 | Housing |
| 2. | TU86 | Small Klosure |
| 3. | TU25 | Small Open End Cap |
| 4. | TU88 | Small "O" Ring |
| 5. | TU91 | Small Bearing Cup |
| 6. | TU90 | Small Bearing Cone |
| 7. | TU23 | Worm 1 1/2" X 7 1/8" |
| 8. | TU8350 | Worm Gear Cover Assembly |
| 9. | TU1796 | Worm Gear Cover Gasket |
| 10. | TU 1828 | Large Shims (Set of 4) .005" and .007, 2 of each |
| 11. | TU93 | Large Bearing Cup |
| 12. | TU1830 | Large "O" Ring 4 5/8" |
| 13. | TU26 | Large End Cap |
| 14. | TU21 | Small Shims (Set of 4) |
| 15. | TU70 | Oil Cup |
| 16. | X170 | 1/4" Pipe Plug |
| 17. | TU3199 | #10 Cork |
| 18. | TU92 | Large Bearing Cone |
| 19. | TU22 | Worm Gear |
| 20. | TU2166 | Oil Seal Field Replacement |
| 21. | TU2623 | Cap Screw 3/8" - 16" X 1 1/2" |
| 22. | TU2839 | Cap Screw 1/4" - 20" X 7/8" |
| 23. | TU3243 | 3/8" Internal Tooth Lockwasher |
| 24. | RC349 | 1/4" Internal Tooth Lockwasher |
| 25. | TU24 | Small Closed End Cap |
| 26. | TU4787 | 3/8-16 Hex Nut |
| 27. | TU8448 | 3/8-16 x 2 1/2 Screw |

PROMPTER BASKET & SENSORY ASSEMBLY - 50 & 70 LB. MODELS

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|-----------------------------|-----------------|-----------------|-----------------------|
| 1 | TU9616 | Tip | 12 | TU3266 | #8-32 Hex Nut |
| 2 | TU9618 | Insulator Washer | 13 | TU9776 | Conductor Rod |
| 3* | TU9773 | 50 lb. Prompter Basket Asm. | 14 | TU9647 | Contact Button |
| | TU9796 | 70 lb. Prompter Basket Asm. | 15 | TU9648 | Wiper Strip |
| 4 | TU9617 | Insulator Disc | 16 | TU3624 | Machine Screw |
| 5 | AT388 | Terminal Connector | 17 | TU9944 | Washer |
| 6 | TU9910 | Ext. Tooth Lockwasher | 18 | TU9649 | Wiper Insulator |
| 7 | TU9949 | Machine Screw | 19 | TU9838 | Wiper Housing |
| 8 | TU3400 | #6-32 Brass Hex Nut | 20 | TU9628 | Jumper Wire |
| 9 | TU9621 | Rod Insulator | 21 | TU9839 | Housing Side |
| 10 | TU9780 | Prompter Spider Weldment | 22 | TU9786 | Push Nut |
| 11 | TU9782 | Sleeve | 23 | M271 | Int. Tooth Lockwasher |


*See Separate Page for Exploded View

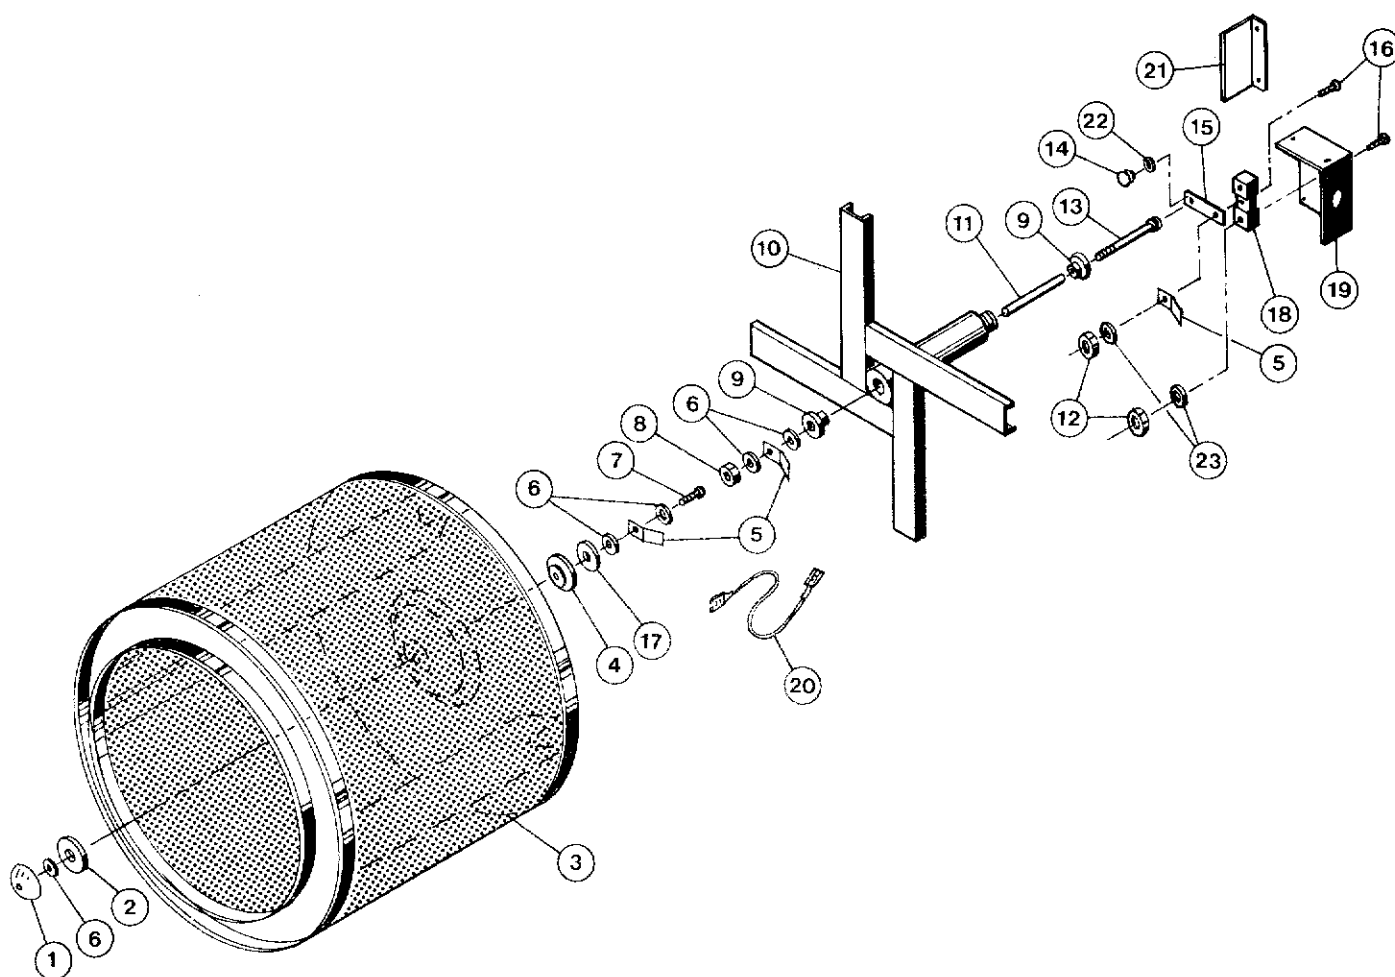

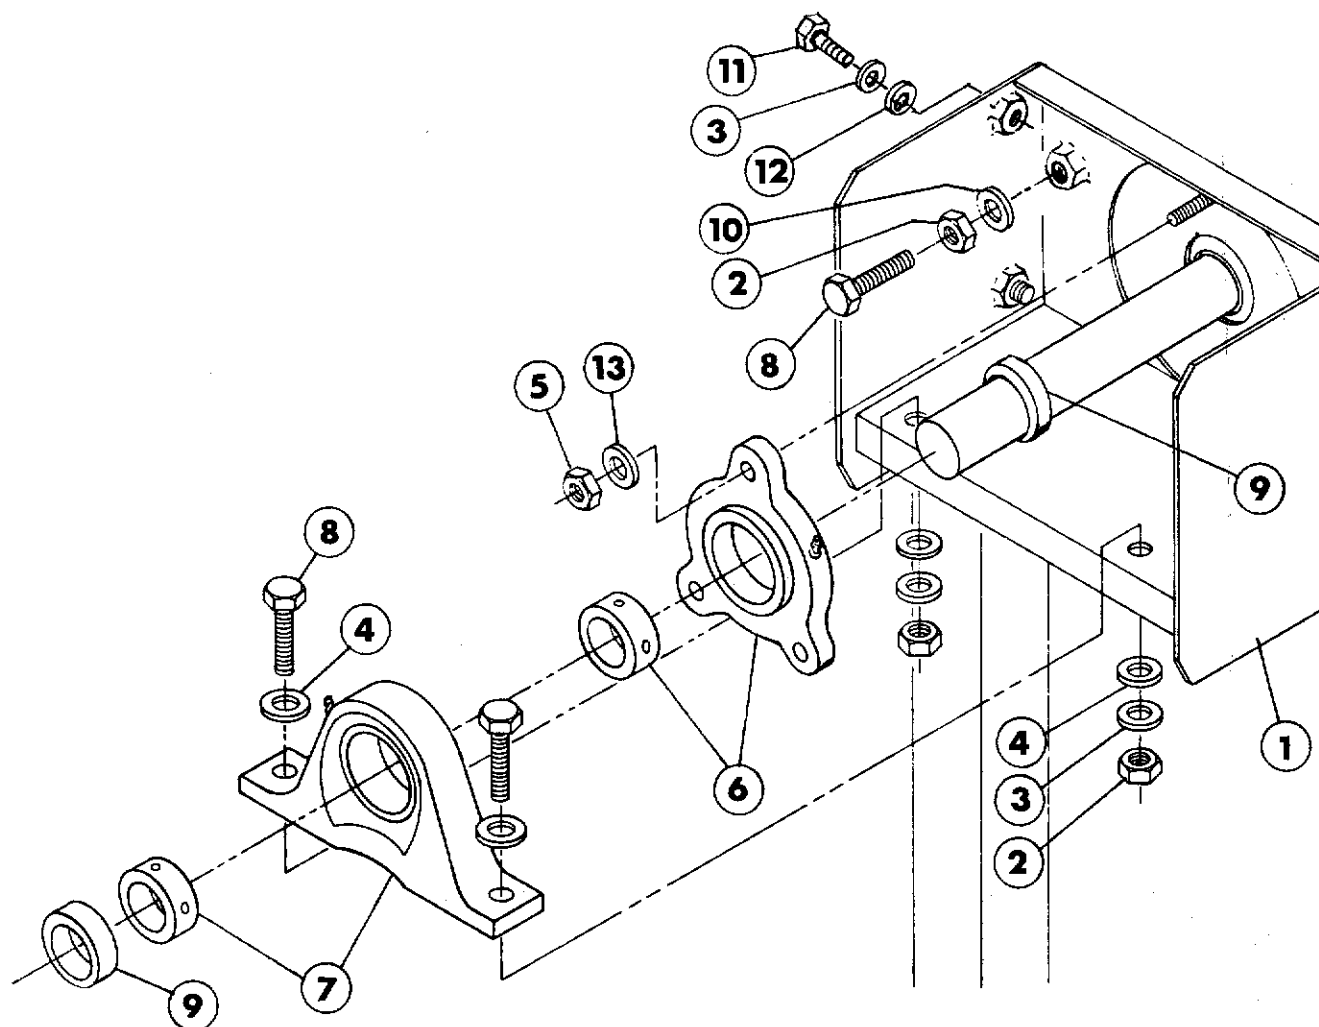

CAST IRON BEARINGS AND PARTS


| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|---|
| 1 | TU10674 | Bearing Support Bracket |
| 2 | OP233 | 1/2" Hex Nut |
| 3 | TU2831 | 1/2" Lockwasher |
| 4 | TU2883 | 1/2" Flat Washer |
| 5 | TU4787 | 3/8" Hex Nut |
| 6 | TU10677 | Cast Iron Flange Bearing W/Collar |
| | TU10644 | 3/8-16X7/16 Nylok Set Screw |
| 7 | TU10676 | Cast Iron Pillow Block Bearing W/Collar |
| | TU10644 | 3/8-16X7/16 Nylok Set Screw |
| 8 | TU2195 | 1/2"-13X1-3/4" Cap Screw |
| 9 | TU10177 | Spacer |
| 10 | OP251 | 1/2" Int. Tooth Lockwasher |
| 11 | RC347 | 1/2-13X1-1/4 Cap Screw |
| 12 | TU1851 | 1/2"X1/4" Cut Washer |
| 13 | VSB134 | 3/8" Lock Washer |

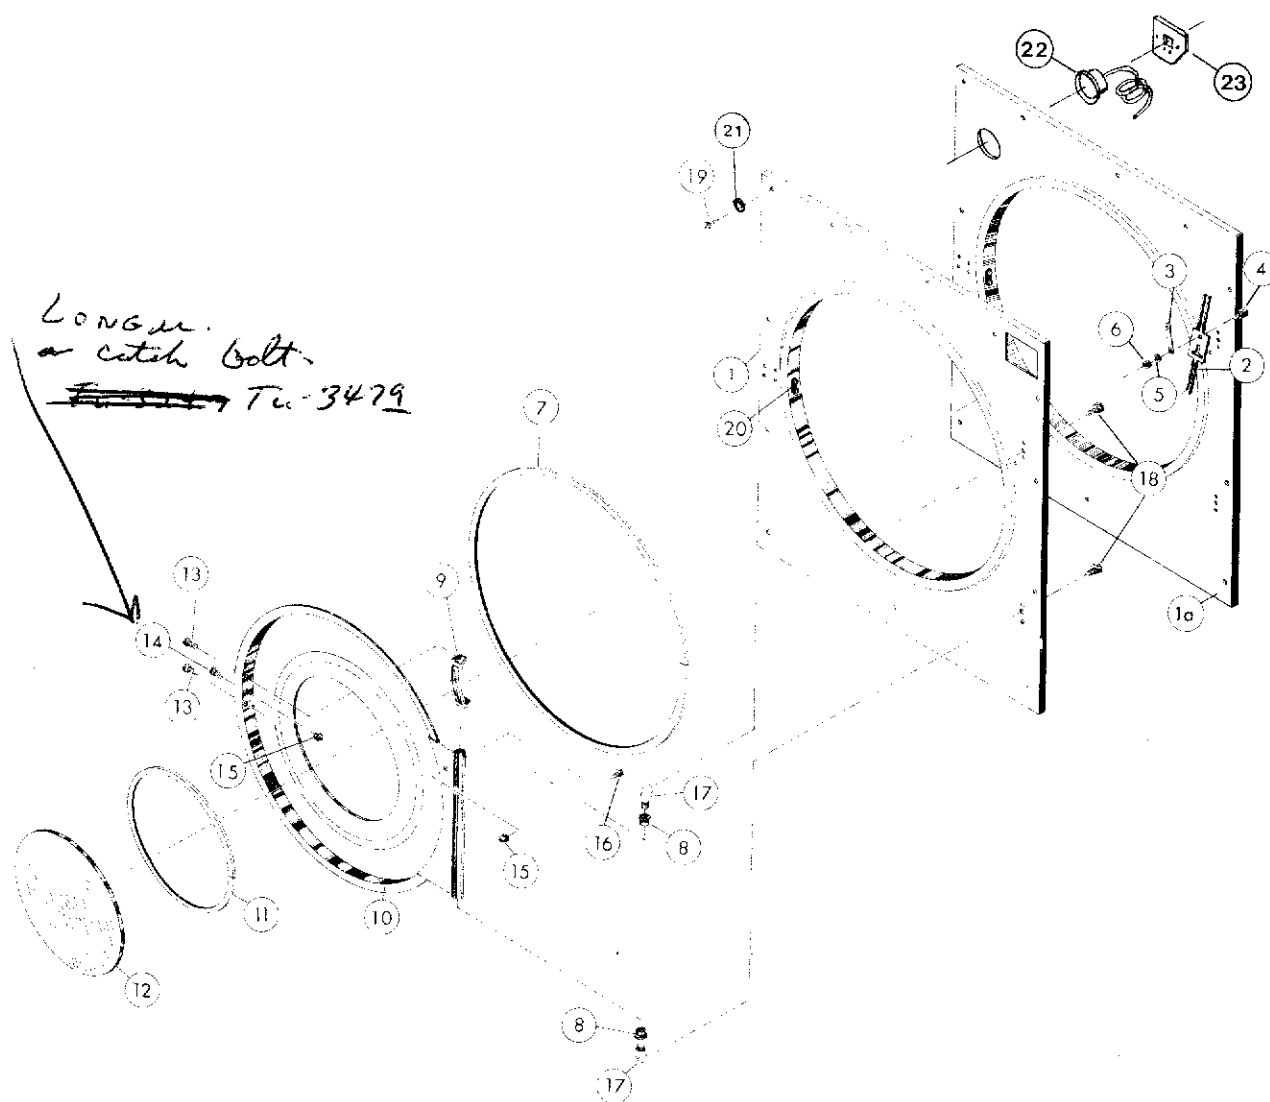

TU5810 Front Panel and Door Assembly (Coin Vault)
TU6056 Front Panel and Door Assembly (Time & Temp)

| Ref.No. | Part No. | Description | Ref.No. | Part No. | Description |
|---------|----------|-------------------------------|---------|----------|--------------------------------------|
| 1 | TU5534 | Front Panel (for Coin Vault) | 13 | TU3215 | #10-32x3/8" Taptite Screw |
| 1a | TU6058 | Front Panel (for Time&Temp) | 14 | TU3163 | Catch Pin |
| | TU7627 | Front Panel (for Thermometer) | 15 | TU4840 | #10-32 Hex Crown Nut |
| 2 | TU2194 | Door Switch Actuator | 16 | TU4839 | #10-32x3/8" Machine Screw |
| 3 | TU2105 | Actuator Spring | 17 | TU2236 | Hinge Posts |
| 4 | M262 | #8-32 Truss Head Screw | 18 | TU2836 | 5/16"-18x1/2" Hex Head Cap Screw |
| 5 | FB187 | #8 Split Lock Washer | 19 | TU2878 | #10x5/8" Sheet Metal Screw |
| 6 | TU3266 | #8-32 Hex Nut | 20 | TU7456 | Door Catch Asm. (w/rivets) |
| 7 | TU5288 | Basket Door Seal | 21 | FB187 | #10 Lock Washer |
| 8 | PIF172 | Delrin Bearing | 22 | TU3597 | Thermometer (Optional) |
| 9 | TU2874 | Basket Door Handle | | IU3816 | Lens Repl. (Texas Gage Only) |
| 10 | TU5859 | Basket Door | | TU8475 | Lens Repl. (Marshalltown Inst. Only) |
| 11 | TU1692 | Rubber Gasket | 23 | TU6766 | Thermometer Mtg. Plate |
| 12 | TU217 | Door Glass | | | |


TU4827 Actuator Ass'y. consists of ref. no's. 2, 3, 4, 5 & 6.
TU5857 Basket Door Ass'y. consists of ref. no's. 7, 8, 9, 10, 11, 12, 13, 14, 15 & 16.

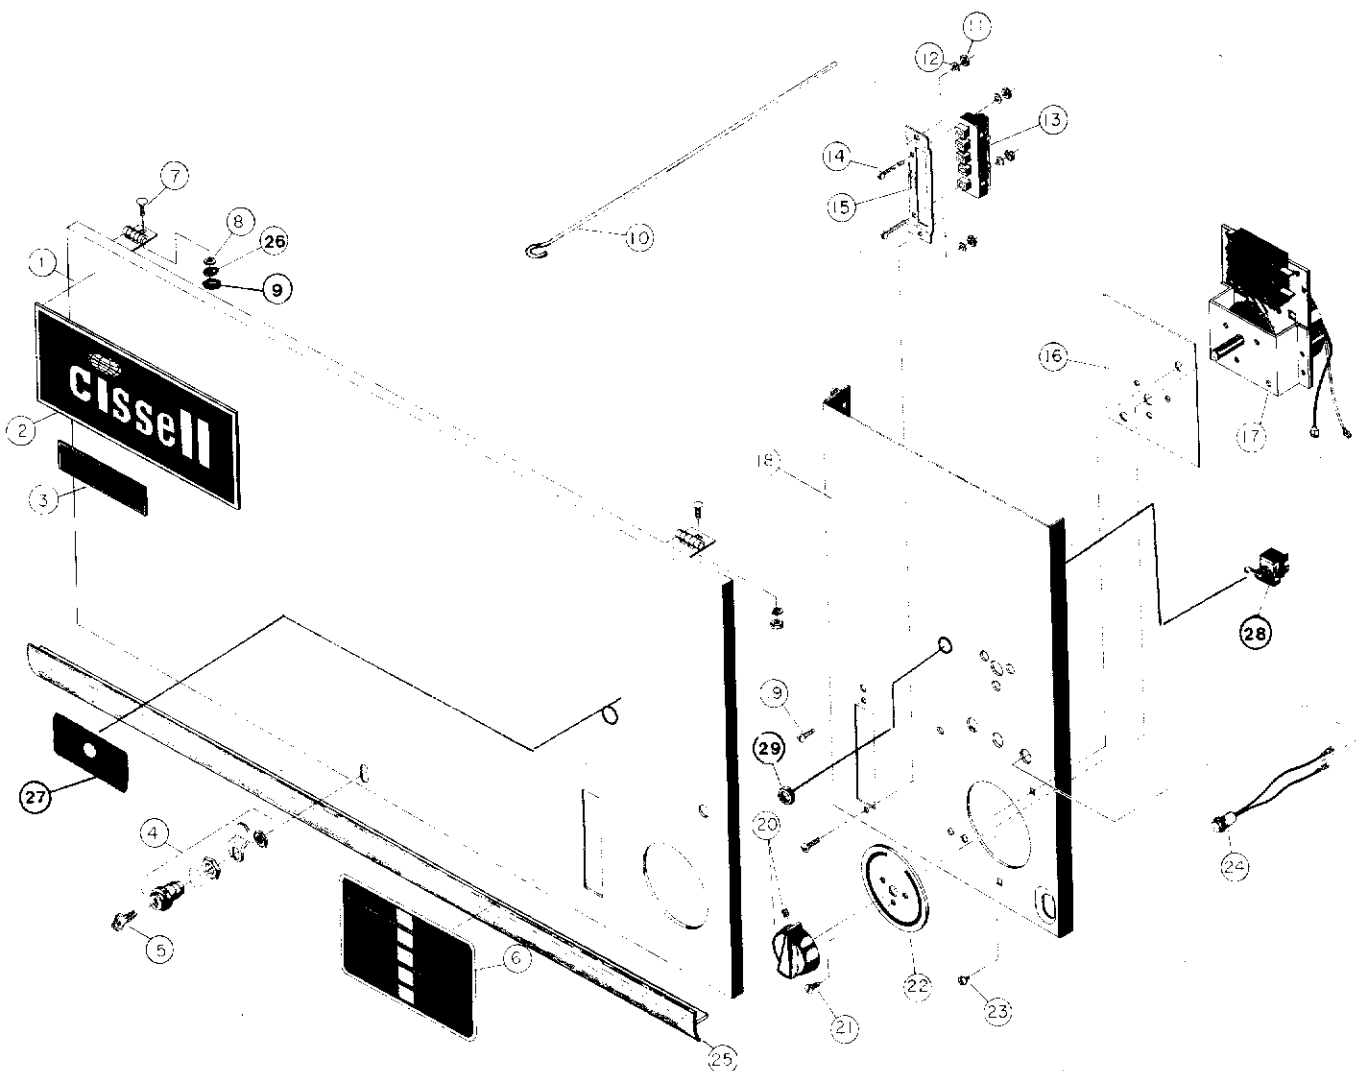

SINGLE TIMER CONTROL PANEL AND ACCESS DOOR PARTS


ALL HARDWARE SOLD ONLY IN PACKAGES OF 6

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|---------------------------------|-----------------|-----------------|-------------------------------------|
| 1. | TU8127 | Access Door W/A | 16. | TU6019 | Timer Mounting Plate |
| | TU9365 | Access Door W/A(Rev.Models) | 17. | TU6109 | Timer 0-60,120V./60 Hz. |
| 2. | TU8013 | Cissell Nameplate | | TU5842 | Timer 0-60,240V./60 Hz. |
| 3. | TU8014 | Therm-O-Cool Nameplate | | TU6083 | Timer 0-60,240V./50 Hz. |
| 4. | TU4822 | Lock #3186 | 18. | TU8393 | Single Timer Control Panel Weldment |
| 5. | TU2844 | Key JWC2 | 19. | TU3624 | #6-32 x 1/4" Round Head Screw |
| 6. | TU8351 | Push Button Control Plate | 20. | TU2555 | Knob Complete |
| 7. | TU3479 | #10-32 x 7/16" Truss Head Screw | 21. | TU3624 | #6-32 X 1/4" Truss Head Screw |
| 8. | P104 | 1/4" Cut Washer | 22. | TU5444 | 60 Minute Dial |
| 9. | TU2842 | #10-32 Hex Nut | 23. | TU7241 | #8 x 1/4" Sheet Metal Screw |
| 10. | TU5739 | Support Rod | 24. | TU5421 | Pilot Light 120V. |
| 11. | TU3400 | #6-32 Hex Nut | | TU5639 | Pilot Light 240V. |
| 12. | M270 | #6 Int. Tooth Lock Washer | 25. | TU7983 | Upper Front Trim |
| 13. | TU5106 | Push Button Switch | 26. | FB187 | #10 Lock Washer |
| 14. | SV136 | #6-32 x 15/16" Round Head Screw | 27. | TU9382 | Rev./Non-Rev. Label |
| 15. | TU5153 | Push Button Plate | 28. | FG147 | Toggle Switch |
| | | | 29. | TU3805 | 15/32"-32 Lock Nut |

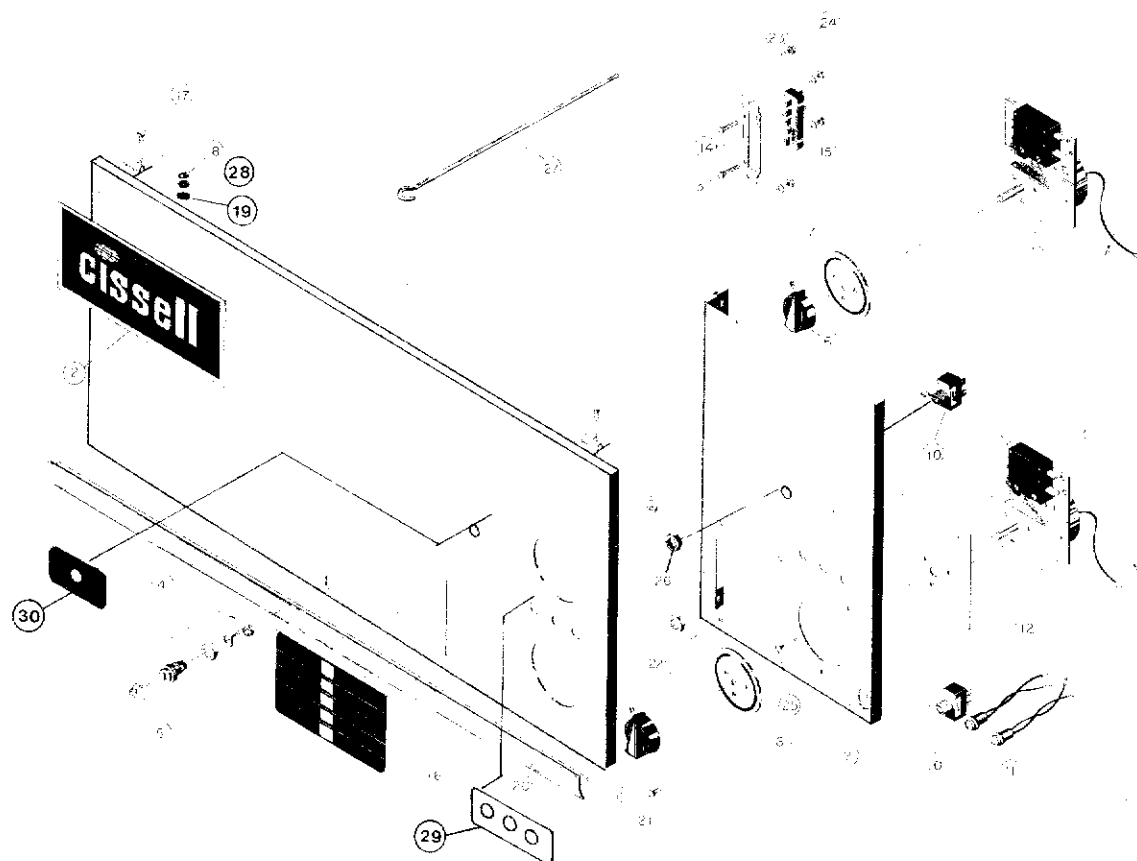

DOUBLE TIMER CONTROL PANEL AND ACCESS DOOR PARTS
All hardware sold only in packages of 6


| Ref.No. | Part No. | Description | Ref.No. | Part No. | Description |
|---------|----------|-------------------------------|---------|----------|----------------------|
| 1 | TU8131 | Access Door W/A | 17 | TU3479 | #10-32 x 7/16" Truss |
| | TU9369 | Access Door W/A (Rev. Models) | | | Head Screw |
| 2 | TU8013 | Cissell Nameplate | 18 | P104 | 1/4" Cut Washer |
| 3 | SV136 | #6-32 x 15/16" Round | 19 | TU2842 | #10-32 Hex Nut |
| | | Head Screw | 20 | TU7983 | Upper Front Trim |
| 4 | TU4822 | Lock #3186 | 21 | LB68 | #8-32 x 3/8" Flat |
| 5 | TU2844 | Key JWC2 | | | Head Screw |
| 6 | TU2555 | Knob w/set screw | 22 | TU3624 | #6-32 x 1/4" Round |
| 7 | TU5445 | Dial 0-15 Min. | | | Head Screw |
| 8 | TU5444 | Dial 0-60 Min. | 23 | M270 | #6 Internal Tooth |
| 9 | TU8393 | Control Panel W/A | | | Lock Washer |
| 10 | FG147 | Toggle Switch | 24 | TU3400 | #6-32 Hex Nut |
| 11 | TU5421 | Pilot Lamp 120 V. | 25 | TU7241 | #8 x 1/4" S.M.Screw |
| | TU5639 | Pilot Lamp 240 V. | 26 | TU3805 | 15/32"-32 Lock Nut |
| 12 | TU6019 | Timer Mounting Plate | 27 | TU5739 | Support Rod |
| 13 | TU6110 | Timer 0-15,120V./60 Hz. | 28 | FB187 | #10 Lock Washer |
| | TU6109 | Timer 0-60,120V./60 Hz. | 29 | TU8418 | On/Off Label |
| | TU5843 | Timer 0-15,240V./60 Hz. | 30 | TU9382 | Rev./Non-Rev. Label |
| | TU5842 | Timer 0-60,240V./60 Hz. | | | |
| | TU6082 | Timer 0-15,240V./50 Hz. | | | |
| | TU6083 | Timer 0-60,240V./50 Hz. | | | |
| 14 | TU5153 | Push Button Plate | | | |
| 15 | TU5106 | Push Button Switch | | | |
| 16 | TU8351 | Push Button Label | | | |

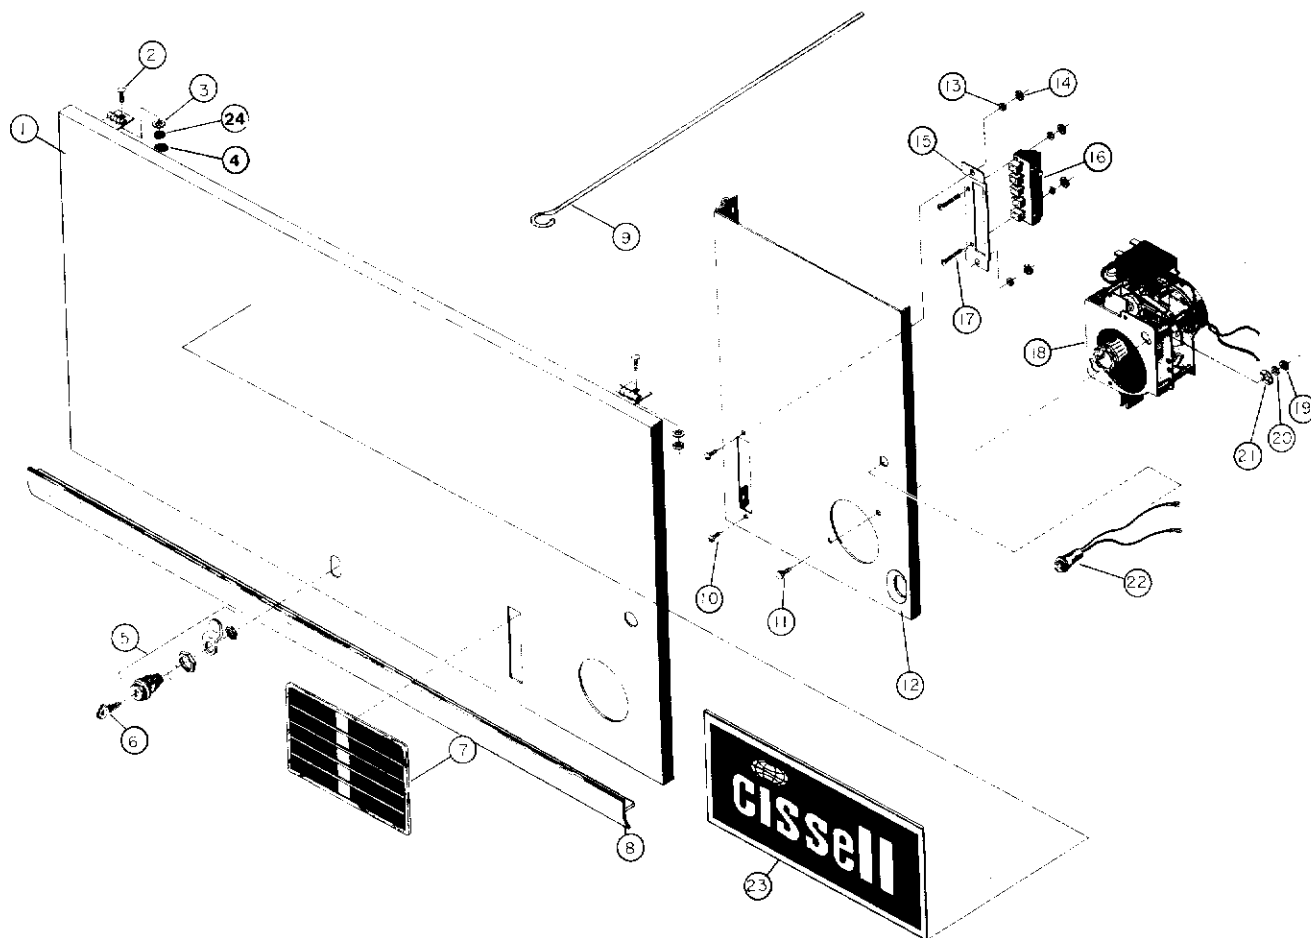

COIN METER CONTROL PANEL AND ACCESS DOOR PARTS

ALL HARDWARE SOLD ONLY IN PACKAGES OF 6


| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|--|-----------------|-----------------|---|
| 1 | TU8127 | Access Door Welded Assembly | 13 | M270 | #8 Int. Tooth Lock Washer |
| 2 | TU3479 | #10-32 x 7/16" Truss Head Screw | 14 | TU3400 | #6-32 Hex Nut |
| 3 | P104 | 1/4" Cut Washer | 15 | TU5153 | Push Button Plate |
| 4 | TU2842 | #10-32 Hex Nut | 16 | TU5106 | Push Button Switch |
| 5 | TU4822 | Lock #3186 | 17 | SV136 | #6-32 x 15/15" Round Head Screw |
| 6 | TU2844 | Key JWC2 | 18 | | Coin Meter (Specify Voltage, Coin Denomination, and Single or Double Slot Coin Meter) |
| 7 | TU8351 | Push Button Control Plate | 19 | TU3266 | #8-32 Hex Nut |
| 8 | TU7983 | Upper Front Trim | 20 | FB187 | #10 Lock Washer |
| 9 | TU5739 | Support Rod | 21 | P104 | 1/4" Cut Washer |
| 10 | TU3624 | #6-32 x 1/4" Machine Screw | 22 | TU5421 | Pilot Light 120V. |
| 11 | TU4958 | #8-32 x 3/8" Machine Screw | | TU5639 | Pilot Light 240V. |
| 12 | TU8393 | Single Coin Meter Control Panel Weldment | 23 | TU8013 | Cissell Nameplate |
| | | | 24 | FB187 | #10 Lock Washer |

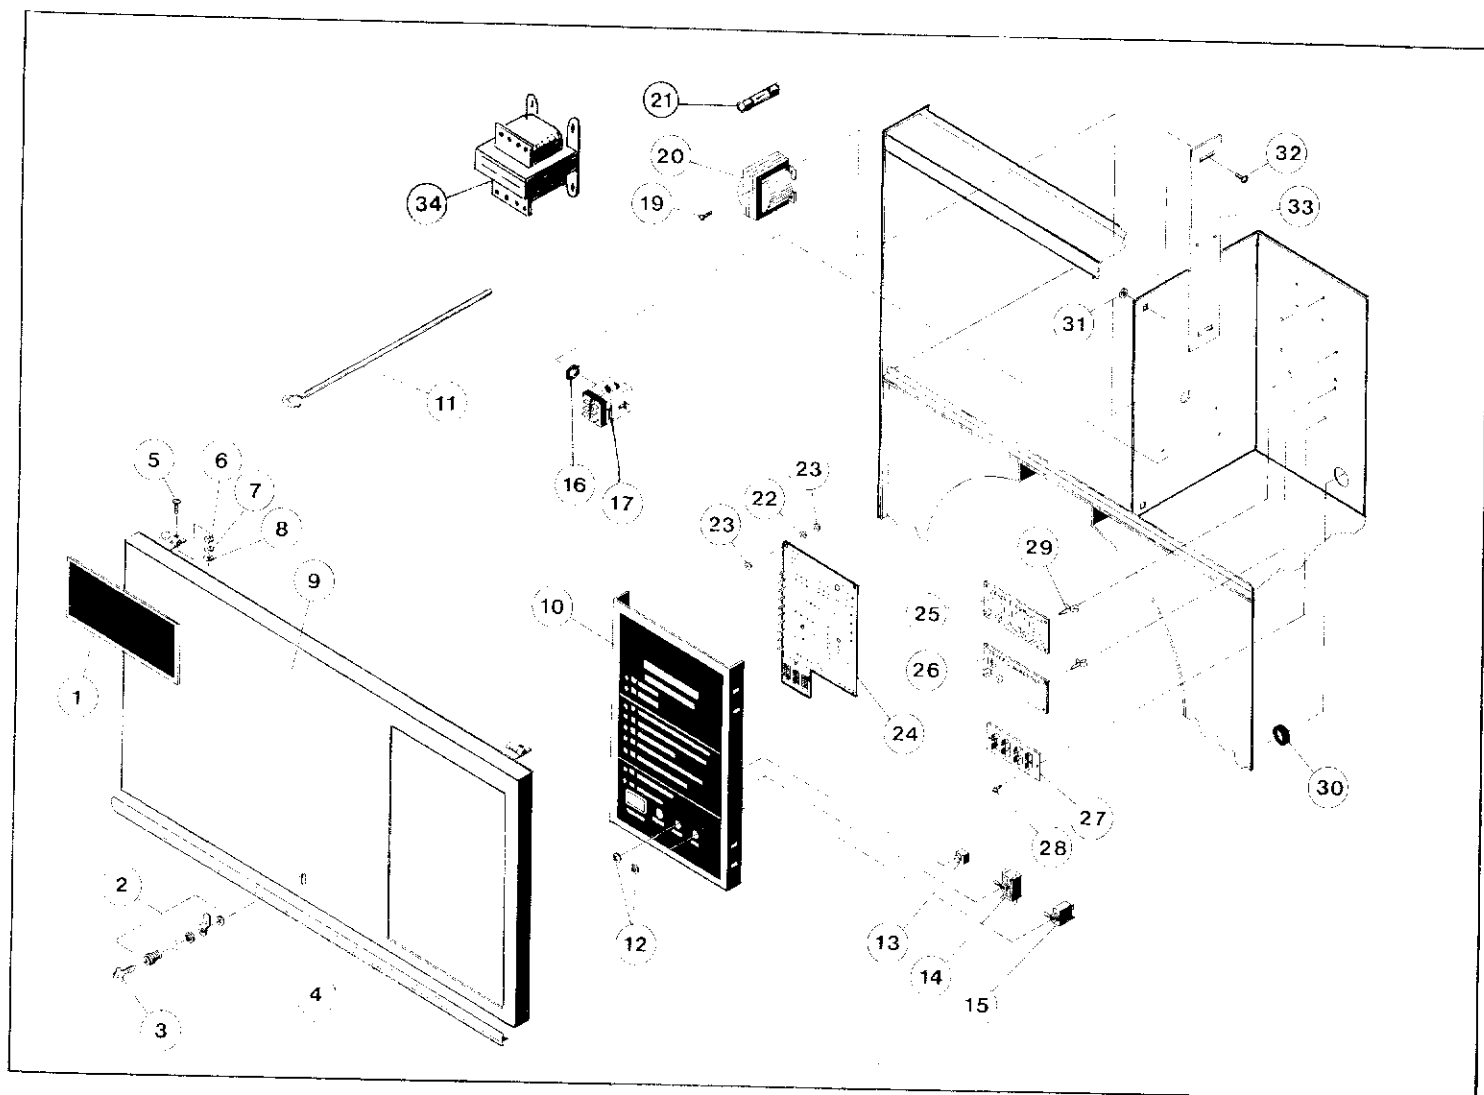

50 & 70 LB. PROMPTER CONTROLS


Access Door, Control Panel, & Mechanism Box Assemblies

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|----------|----------|---|----------|----------|--|
| 1 | TU9591 | Cissell Nameplate | 18 | | |
| 2 | TU4822 | Lock #3186 | 19 | TU7733 | 8X $\frac{1}{2}$ Self Tap Screw |
| 3 | TU2844 | Key - JWC2 | 20 | TU8737 | Transformer |
| 4 | TU7983 | Upper Front Trim | 21 | TU8738 | Fuse |
| 5 | TU3479 | 10-32X7/16" Tr. Hd. Scr. | 22 | M270 | I. I. Lockwasher |
| 6 | P104 | $\frac{1}{2}$ " Cut Washer | 23 | TU3400 | 6-32 Hex Nut |
| 7 | FB187 | #10 Lockwasher | 24 | TU9682 | Prompter Con. P.C. Board |
| 8 | TU2842 | 10-32 Hex Nut | | TU10095 | P.C. Board W/Reset Sw. |
| 9 | TU9799 | Access Door W/A | 25 | TU9684 | Upper Diag. Board (Rev) |
| 10 | TU9778 | Contr. Panel Assy. (Rev. Models) | 26 | TU9777 | Lower Diag. Board (Gas) |
| | TU9806 | Contr. Panel Assy. (Non-Rev. Models) | | TU10434 | Diag. Board - Non-Rev. Steam or Elec. |
| 11 | TU5739 | Support Rod | 27 | TU8629 | Terminal Board |
| 12 | TU3805 | Lock Ring | 28 | TU7733 | 8X $\frac{1}{2}$ Self Tap Screw |
| 13 | TU9500 | Reset Switch | 29 | TU9347 | P.C. Board Support |
| 14 | TU264 | Toggle Switch (On/Off) | 30 | TU9693 | Bushing |
| 15 | FG147 | Toggle Switch (Rev. Only) | 31 | TU2842 | Hex Nut |
| 16 | TU3400 | 6-32 Hex Nut | 32 | TU3479 | 10-32X7/16 Tr. Hd. Scr. |
| 17 | TU8599 | Ign. Relay | 33 | TU9384 | Adjustment Strip |
| | | | 34 | TU9804 | Transformer (480V Only) |

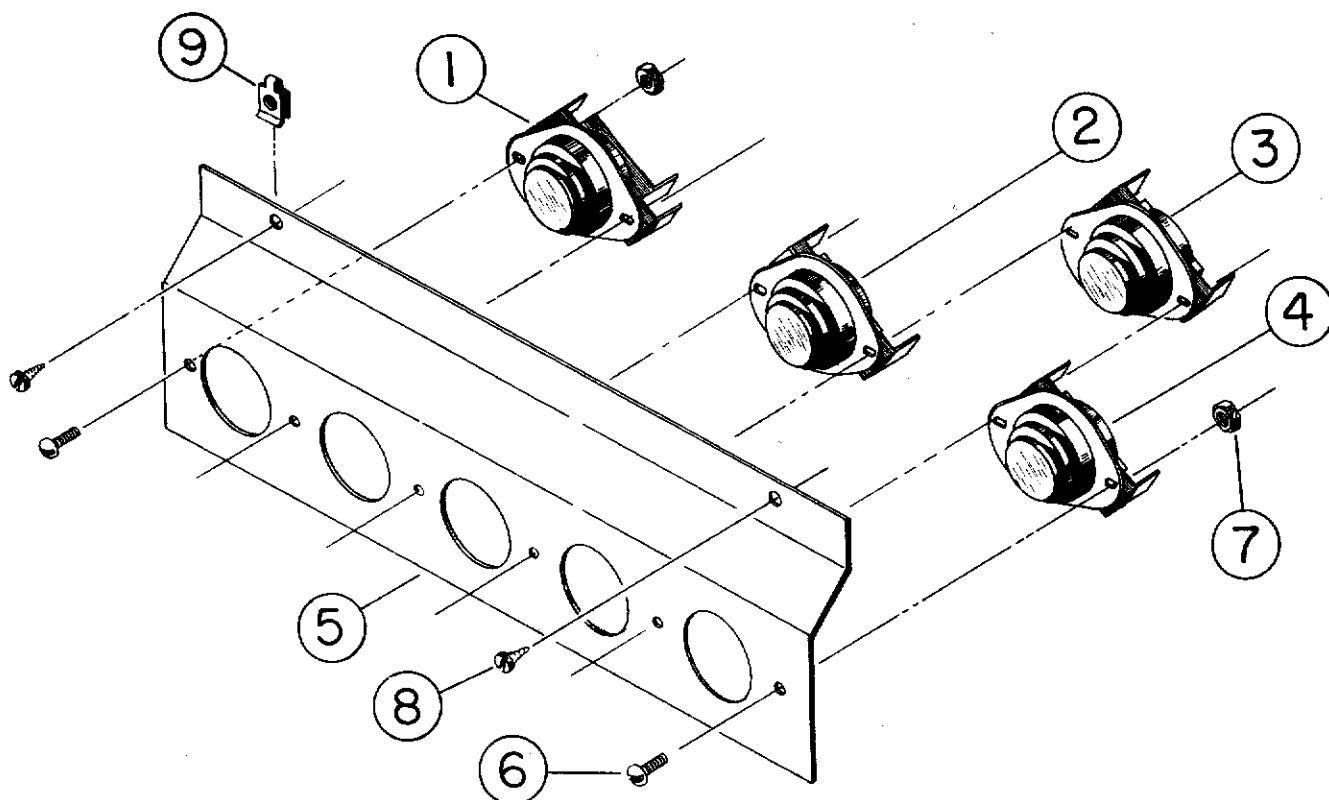

THERMOSTAT ASSEMBLY
(C & F MODELS)
ALL HARDWARE SOLD ONLY IN PACKAGES OF 6

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|---|
| 1. | TU2045 | Thermostat (Cool-Down) 1-Timer Models only |
| 2. | TU3240 | 185 Degrees Fahrenheit Thermostat (High) Heat |
| 3. | TU5150 | 150 Degrees Fahrenheit Thermostat (Medium) Heat |
| 4. | TU7244 | 135 Degrees Fahrenheit Thermostat (Low) Heat |
| 5. | TU5143 | Mounting Bracket |
| 6. | TU3624 | #6-32 x 1/4" Round Head Machine Screw (6 req'd) |
| 7. | TU3400 | #6-32 Hex Nut |
| 8. | TU7733 | #8 x 1/2" Self-Drilling Screw |
| 9. | TU6067 | #8 Tinnerman Clip (2 req'd) |

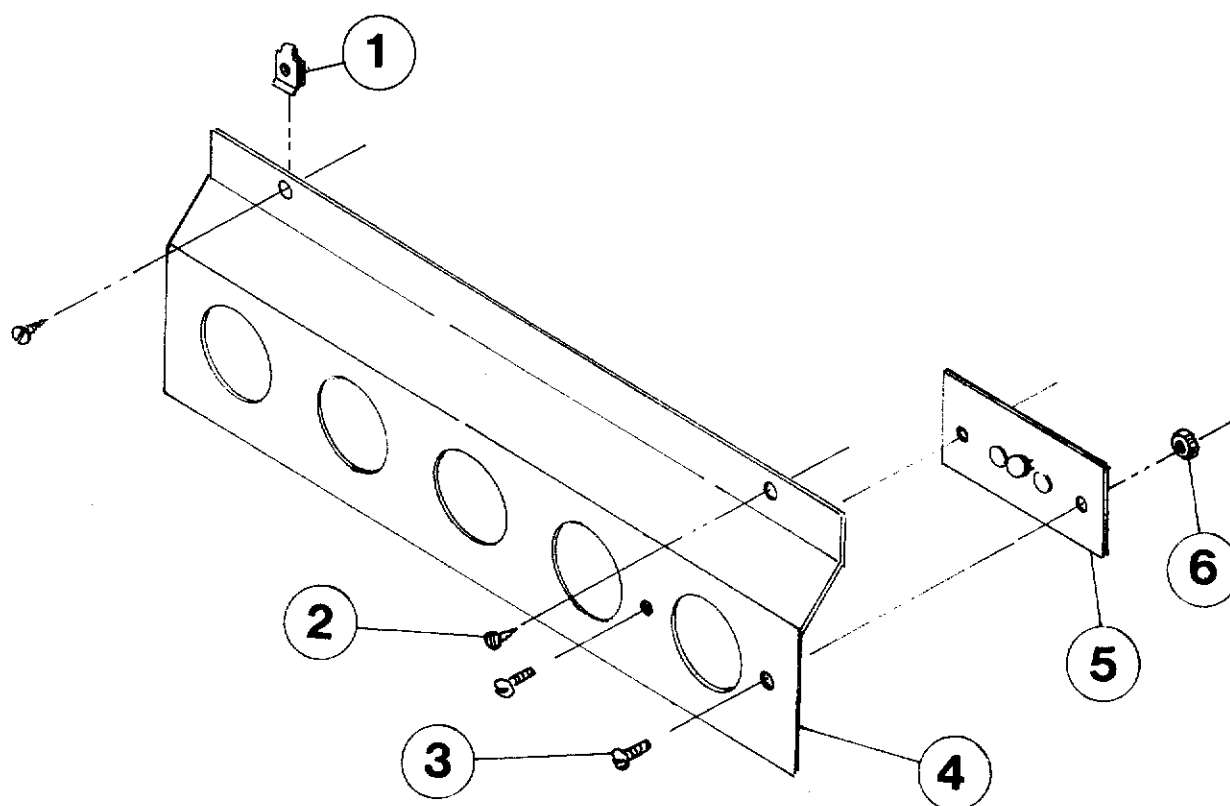

TU9810 -THERMISTOR ASSEMBLY - PROMPTER MODELS


| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|--------------------------|
| 1 | TU6067 | #8 Tinnerman Clip |
| 2 | TU2878 | #10 x5/8 S.M.S. |
| 3 | TU3624 | #6-32x1/4" Rd. Hd. Screw |
| 4 | TU5143 | Mounting Bracket |
| 5 | TU9688 | Thermistor |
| 6 | TU3400 | #6-32 Hex Nut |

50LB SUPPLEMENT


FOR DRYERS USING THE NEW 4 HOLE FLANGE BEARING
 MODEL NO. L36UR30, START WITH SERIAL NUMBER 46-487
 MODEL NO. L36US30, START WITH SERIAL NO. 129-487

BEARINGS AND RELATED PARTS

| REF. NO. | PART NO. | DESCRIPTION |
|----------|----------|----------------------------------|
| 1 | TU 10674 | Bearing Support Bracket |
| 2 | OP 233 | 1/2" Hex Nut |
| 3 | TU 2831 | 1/2" Lockwasher |
| 4 | TU 2883 | 1/2" Flat Washer |
| 5 | TU 10854 | Spacer |
| 6 | TU 10850 | Flange Bearing w/ Collar |
| 7 | TU 2195 | 1/2 - 13 X 1 3/4" Cap Screw |
| 8 | TU 10676 | Pillow Block Bearing w/ Collar |
| 9 | TU 10177 | Spacer |
| 10 | OP 251 | 1/2" I.T. Lockwasher |
| 11 | RC 347 | 1/2 - 13 X 1 1/4" Cap Screw |
| 12 | TU 1851 | 1/2 x 1/4 Cut Washer |
| 13 | TU 10644 | 3/8 - 16 X 7/16 Nylock Set Screw |

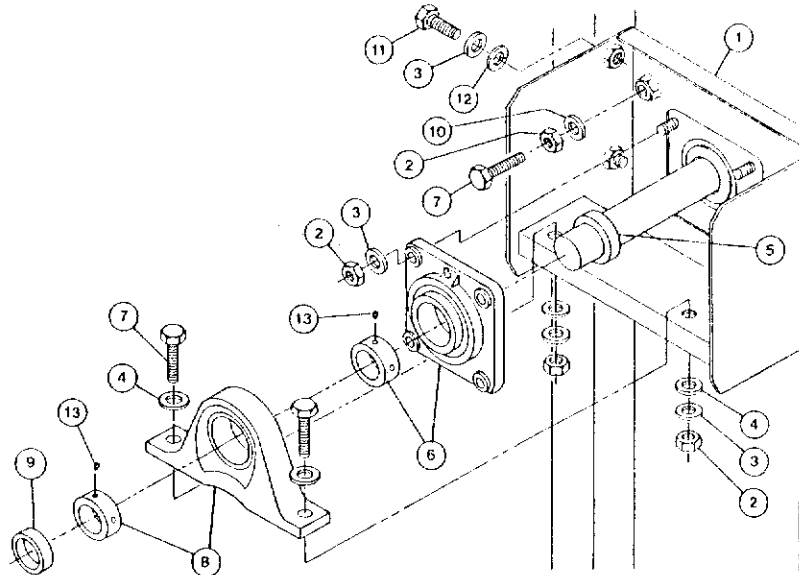


INSTRUCTIONS TO REMOVE ECCENTRIC LOCKING BEARING COLLARS

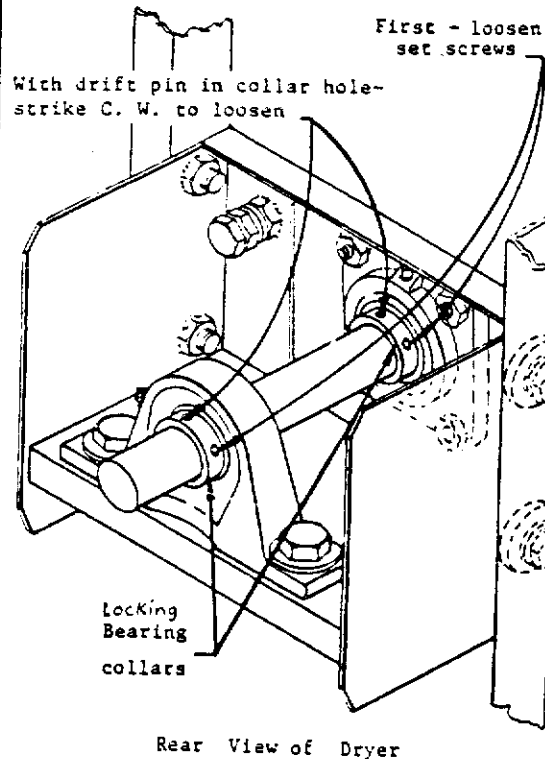

Rear View of Dryer


TU10433

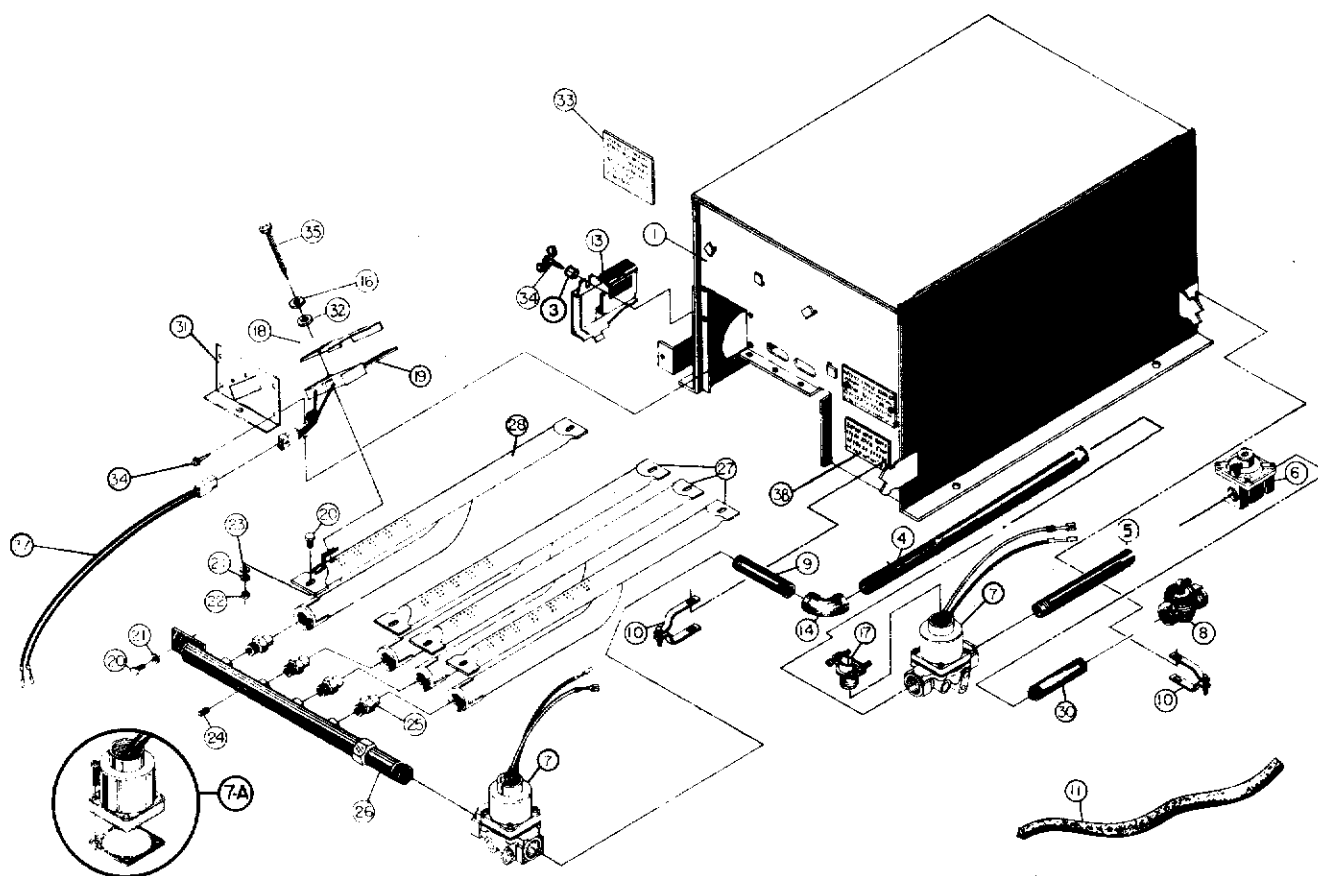

GAS BONNET & BURNER ASSEMBLY - TU8674 (Natural Gas)
 GAS BONNET & BURNER ASSEMBLY - TU8836 (L.P. GAS)

MODELS:
 L36CS30G & L36CD30G


| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|----------|-----------|---|----------|----------|---|
| 1 | TU8683 | Bonnet Welded Assembly | 21 | TU2846 | 1/4" Split Lock Washer |
| 2 | TU7733 | #8-18x1/2 Self Drill Screw | 22 | TU4934 | 1/4"-20 Hex Nut |
| 3 | TU10286 | Spacer | 23 | TU2847 | 1/4" Flat Washer |
| 4 | TU2724 | 1/2" Pipe Nipple 25" | 24 | TU2224 | 1/8" Pipe Plug |
| 5 | OP308 | 1/2" Pipe Nipple-4" Lg. | 25 | TU3539 | Gas Burner Orifice (Specify Size) |
| 6 | TU9177 | Regulator 1/2 x 1/2 (Natural Gas Only) | 26 | TU8288 | Manifold Assembly |
| 7 | TU6557 | Baso Gas Valve | 27 | TU7840 | Burner Assy. (Right Side) |
| 7A | TU3832 | Baso Gas Valve Coil Assy. | 28 | TU8760 | Burner Ignition (Left Side) |
| 8 | TU6321 | Gas Cock 1/2 x 1/2 | 29 | TU8613 | Norton Igniter Instructions |
| 9 | 390401012 | Pipe Nipple 1/2 x 3 1/2 | 30 | OP290 | Nipple 1/2" x 2" (Natural Gas Only) |
| 10 | TU2226 | Manifold Mounting Bracket | 31 | TU8690 | Norton Igniter Plate |
| 11 | 136067752 | Fiberglass Tubing | 32 | P104 | 1/4" Cut Washer Brass |
| 12 | TU6089 | Pipe Bushing | 33 | TU8645 | Installation Instructions |
| 13 | TU8598 | Radiant Sensor | 34 | TU10292 | Wing Nut |
| 14 | 390501053 | 1/2" Elbow | 35 | TU3416 | #8x1 1/4 S.M.S. |
| 15 | TU3266 | 8-32 Hex Nut | 36 | SV332 | #8-32 x 3/8 Round Head Machine Screw |
| 16 | M271 | Brass Lock Washer | 37 | TU8605 | Molex Connector |
| 17 | C1365 | Connector T & B | 38 | | Gas Rating Plate |
| 18 | TU9540 | Heat Shield | | | |
| 19 | TU8596 | Norton Igniter | | | |
| 20 | CB36 | 1/2"-20 x 1/2 Hex Head Screw | | | |

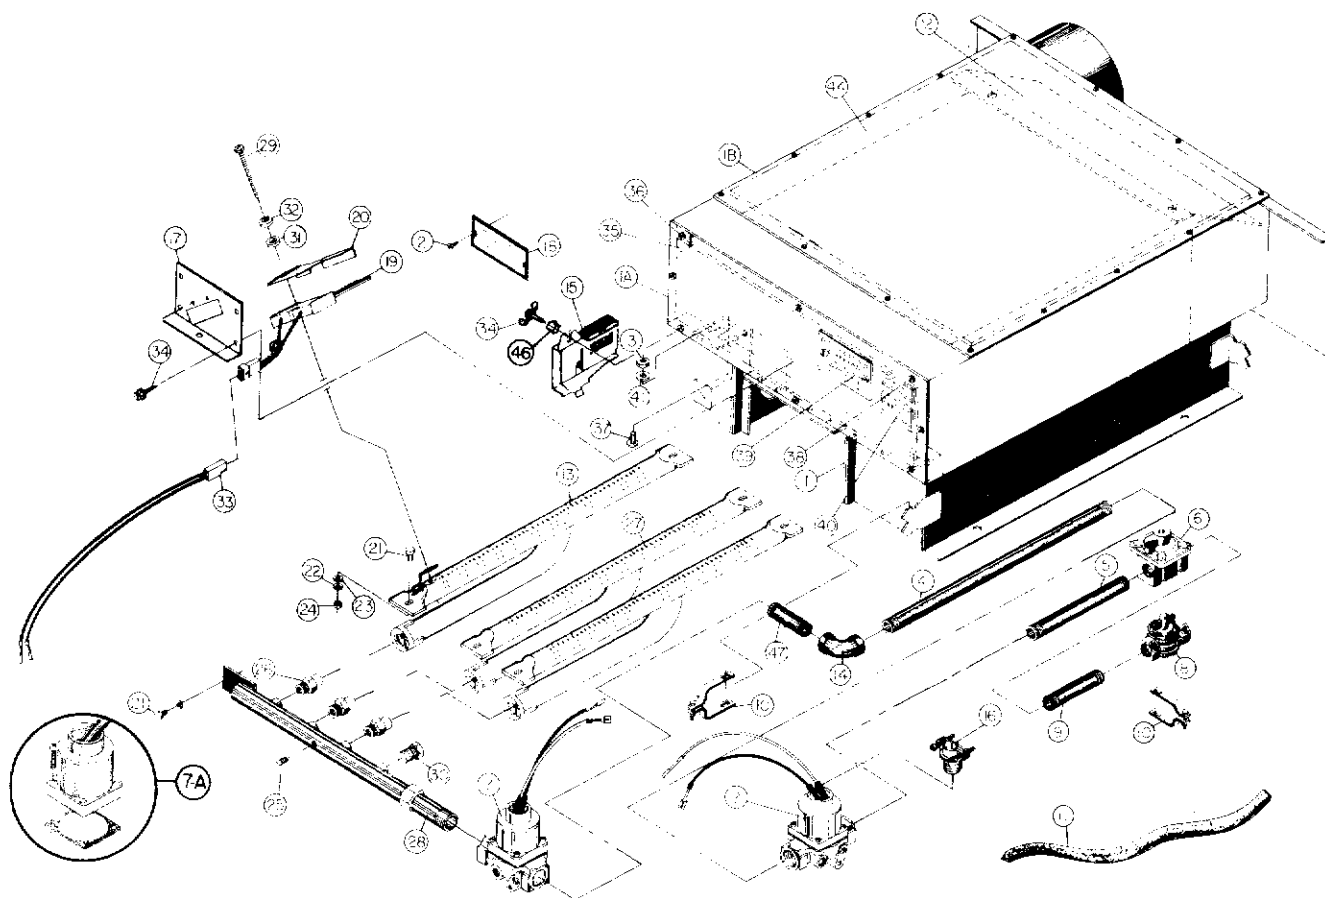

GAS BONNET & BURNER ASSEMBLY - TU8698 (Natural Gas)
 GAS BONNET & BURNER ASSEMBLY - TU8837 (L.P. Gas)

MODELS:
 L36FS30G & L36FD30G


| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|----------|-----------|---|----------|----------|--------------------------------------|
| 1 | TU8697 | "F" Bonnet Welded Assy. | 23 | TU2847 | 1/4" Flat Washer |
| 1A | TU8561 | Front Plate Hinge Assy. | 24 | TU4934 | 1/4"-20 Hex Nut |
| 1B | TU7787 | Top Panel | 25 | TU2224 | 1/8" Pipe Plug |
| 2 | TU7733 | #8x1/2 Self Drill Screw | 26 | TU3539 | Gas Burner Orifice (Specify Size) |
| 3 | TU2842 | 10-32 Hex Nut | 27 | TU7840 | Burner Assembly |
| 4 | TU2724 | Pipe Nipple 1/2" x 25" | 28 | TU8288 | Manifold Assembly |
| 5 | OP308 | 1/2" Pipe Nipple-4" Lg. | 29 | TU3416 | #8x1 1/4 S.M.S. |
| 6 | TU7935 | Regulator (Nat'l. Gas Only) | 30 | X170 | Plug |
| 7 | TU6557 | Baso Gas Valve | 31 | M271 | Brass Lock Washer |
| 7A | TU3832 | Baso Gas Valve Coil Assy. | 32 | P104 | 1/4" Cut Washer Brass |
| 8 | TU6321 | Gas Cock | 33 | TU8605 | Molex Connector |
| 9 | OP290 | Pipe Nipple 1/2" x 2" (Natural Gas Only) | 34 | TU10292 | Wing Nut |
| 10 | TU2226 | Manifold Mount. Bracket | 35 | TU2877 | #10 Tinnerman Nut |
| 11 | 136067752 | Fiberglass Tubing | 36 | TU2878 | #10x5/8 Sheet Metal Screw |
| 12 | TU7294 | Upper Rear Air Deflector | 37 | TU3479 | 10-32x7/16" Truss Hd. Screw |
| 13 | TU8760 | Burner Ignition (Left Side) | 38 | TU8613 | Norton Igniter Instructions |
| 14 | OP291 | 1/2" Street Elbow | 39 | | Gas Rating Plate |
| 15 | TU8598 | Radiant Sensor | 40 | TU8645 | Installation Instructions |
| 16 | C1365 | Connector T&B (Gas Valve) | 41 | P104 | Cut Washer |
| 17 | TU8690 | Igniter Mounting Plate | 42 | TU3266 | 8-32 Hex Nut |
| 18 | TU7373 | Clean Out Panel Nameplate | 44 | TU2853 | Gasket |
| 19 | TU8596 | Norton Igniter | 45 | SV332 | 8-32x3/8 Round Head Machine Screw |
| 20 | TU9540 | Heat Shield | 46 | TU10286 | Spacer |
| 21 | CB36 | 1/4"-20x1/2" Hex Head Screw | 47 | OP290 | 1/2" Pipe Nipple-2" Lg. |
| 22 | TU2846 | 1/4" Split Lock Washer | | | |

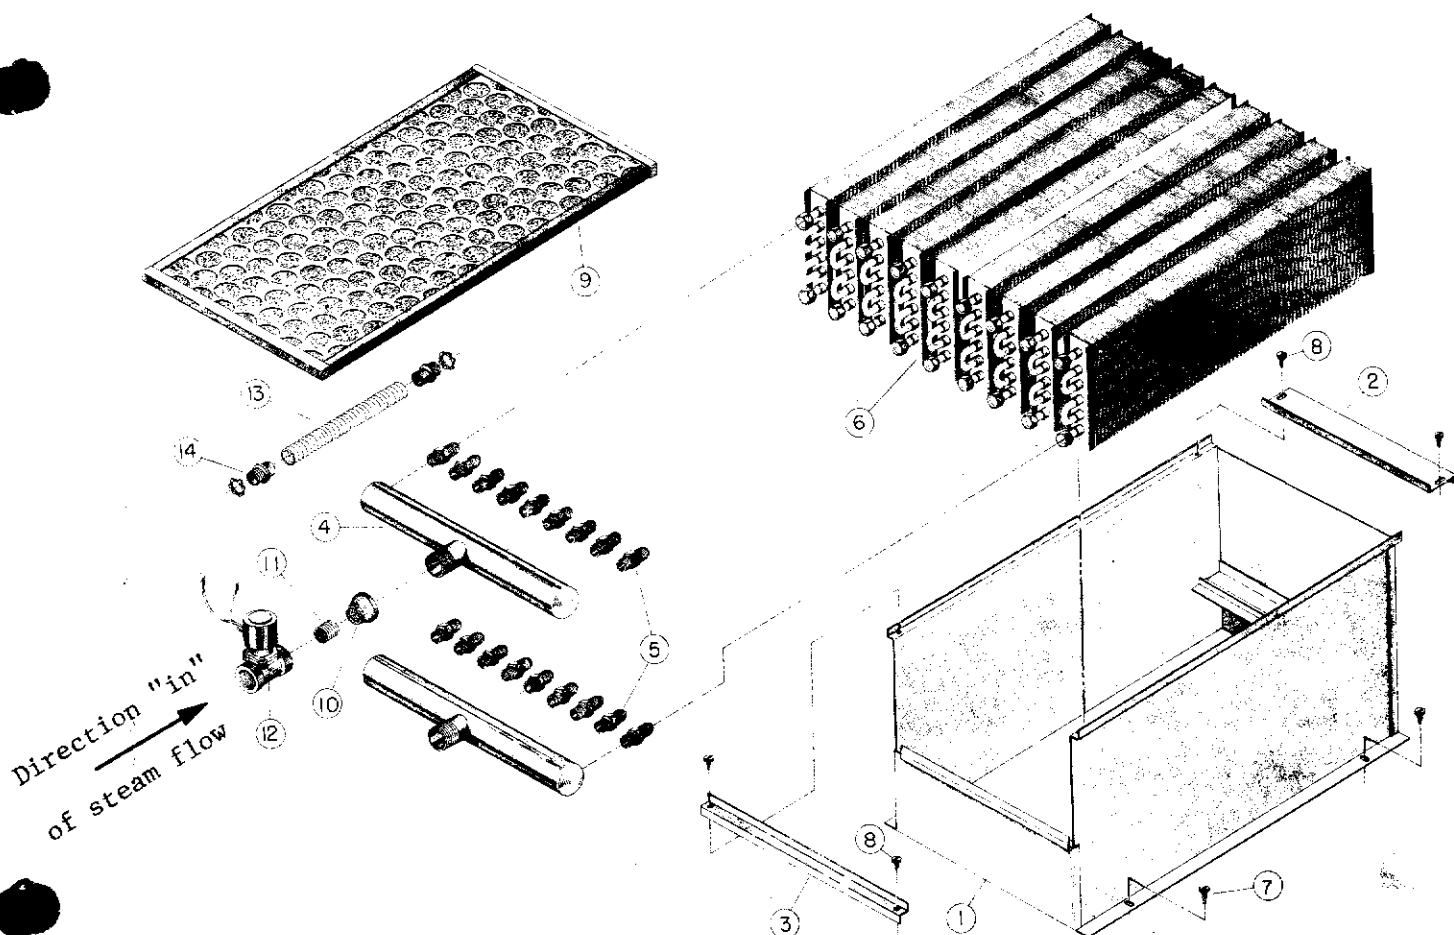

NINE SECTION STEAM BONNET ASSEMBLY

TU7461 9 Section Steam Bonnet Assembly w/ solenoid valve 120V
 TU7462 9 Section Steam Bonnet Assembly w/ solenoid valve 240V

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-------------------|---|
| 1 | TU2546 | Housing Weldment |
| 2 | TU2547 | Front Coil Retainer |
| 3 | TU2548 | Rear Coil Retainer |
| 4 | TU2413 | Steam Coil Manifold |
| 5 | TU2414 | 3/4"-16 x 3/8" Straight Connector |
| 6 | TU2405 | Steam Coil (9 req'd.) 7 3/4" W x 1 5/8" H x 26" Lg. |
| 7 | TU3209 | #14 x 5/8" S.M.S. |
| 8 | M263 | #8 x 3/8" S.M.S. |
| 9 | TU2598 | Air Filter 16" x 25" x 1" |
| 10 | TU2735 | 1" x 3/4" Reducer |
| 11 | TU4608 | 3/4"x2" Pipe Nipple |
| 12* | TU6041 | Solenoid Valve 120V, 50 or 60 Cycle |
| | TU5924 | Solenoid Valve 240V, 50 or 60 Cycle |
| 13 | 50-4641-292 | Greenfield Cable, 1/2" (Specify 21" Long) |
| 14 | TU4790 | 1/2" Straight Conn. (2 req'd) |
| * | TU5939 | 240V Coil for TU5924 |
| | TU7151 | 120V Coil for TU6041 |

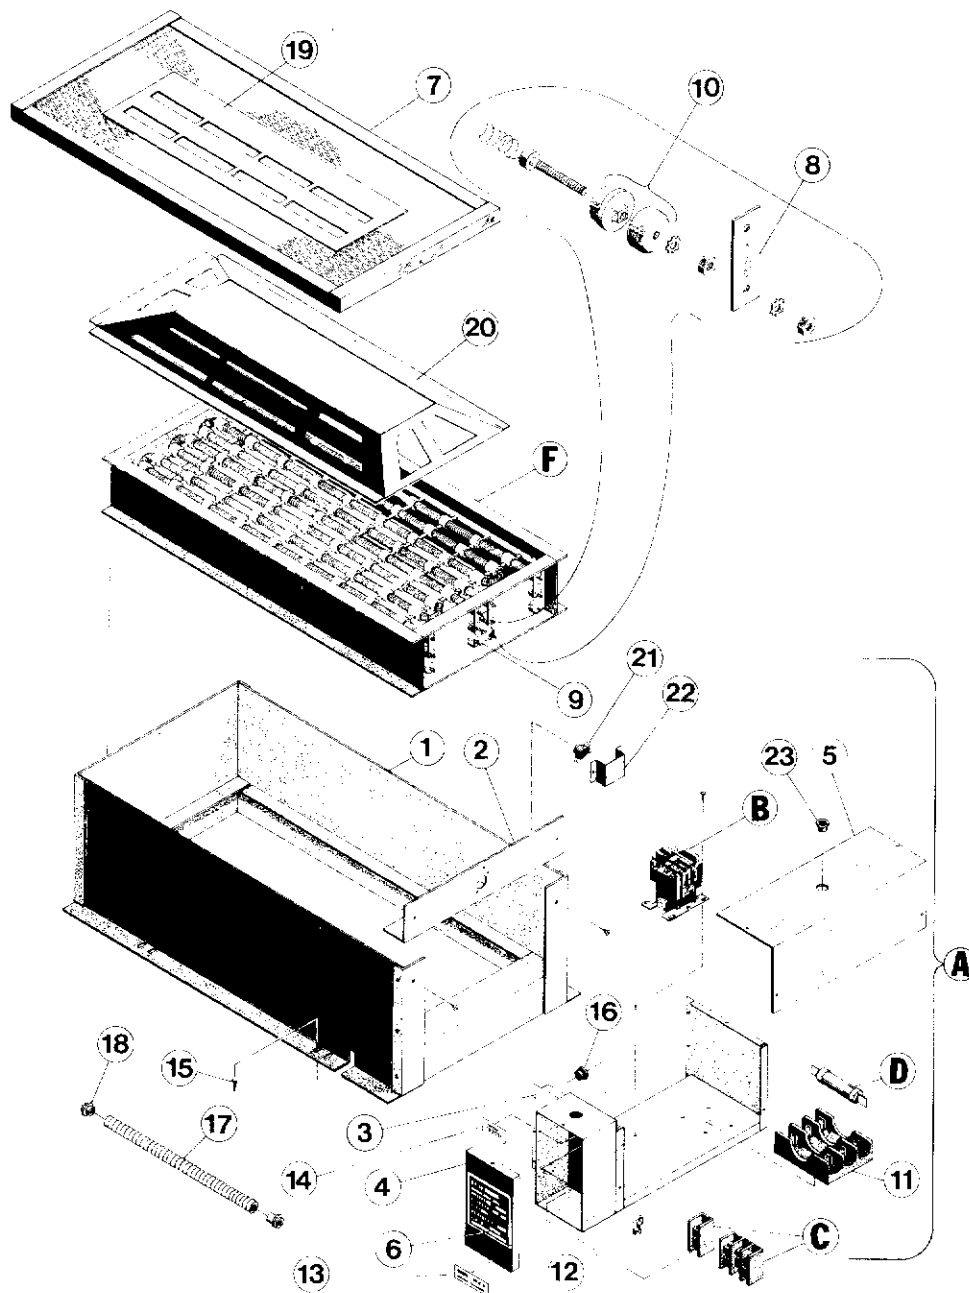

ELECTRIC BONNET ASSEMBLY "C" MODEL

All Hardware Sold Only in Packages of 6

| Ref.No. | Part No. | Description | Ref. No. | Part No. | Description |
|---------|----------|--|----------|---------------|-------------------------------|
| 1 | TU3103 | Bonnet Weldment | 13 | TU9254 | High Voltage Label-415V. |
| 2 | TU3102 | Hold Down Plate | 14 | TU9258(D-1A) | Grounding Label |
| 3 | TU9205 | Control Box Weldment | 15 | TU3209 | #14 x 5/8" S.M.S. |
| 4 | TU9207 | Terminal Box Cover | 16 | TU5958 | Bushing (2 req'd.) |
| 5 | TU9206 | Top Cover | 17 | 504641292 | 1/2" Greenfield Cable 8" Long |
| 6 | TU8518 | Branch Circuit Label (Single Motor) | 18 | TU4790 | Straight Connector(2 req'd.) |
| | TU8519 | Branch Circuit Label (Double Motor) | 19 | TU10420 | Baffle Cover |
| 7 | TU3104 | Air Inlet Cover | 20 | TU10411 | Air Baffle |
| 8 | TU3767 | Contact Strap(4 req'd.) | 21 | TU7244 | Thermostat - 135° |
| 9 | TU3768 | Contact Strap(1 req'd.) | 22 | TU10535 | Thermostat Cover |
| 10 | TU3253 | Insulators(Pkg. of 6) | 23 | TU8595 | Bushing |
| 11 | TU9141 | Fuse Holder | A | See next page | Control Box L/Wiring |
| 12 | TU7738 | Grounding Lug | B | " | Contactor |
| | | | C | " | Terminal Block |
| | | | D | " | Fuse |
| | | | F | " | Heater Elements |

50 Lb. Dryer Electrical Specifications *




| Rated Heater Input | Heater Amperes, Motor Amperes | Minimum Size Supply Wire Based on 60°C (140F) Insulated Copper Conductor | Single Motor Circuit Phase | Two Motor Circuit Phase | Circuit Minimum Conduit Trade Size | Basket Fan | | | Heat Element | | |
|------------------------|-------------------------------|--|----------------------------|-------------------------|------------------------------------|------------|--------|-------|----------------|------|------|
| | | | | | | Motor | Heater | Size | Heater Element | Fuse | Size |
| 30 KW 208V/3Ph/60Hz | 88.4 Amps | 2 AWG | 1 Phase | 1 Phase | 1 1/4 | H-27 | H-27 | 30 KW | 30 KW | 60 | 60 |
| 30 KW 208V/3Ph/60Hz | 86.6 Amps | 2 AWG | 1 PH | 1 Phase | 1 1/4 | H-27 | B&F | 30 KW | 30 KW | 60 | 60 |
| 30 KW 208V/3Ph/60Hz | 86.6 Amps | 2 AWG | 3 Phase | 3 Phase | 1 1/4 | H-16 | H-16 | 30 KW | 30 KW | 60 | 60 |
| 30 KW 208V/3Ph/60Hz | 85.6 Amps | 2 AWG | 3 PH | 1 Phase | 1 1/4 | H-22 | B&F | 30 KW | 30 KW | 60 | 60 |
| 30 KW 240V/3Ph/60Hz | 77.4 Amps | 3 AWG | 1 PH | 1 Phase | 1 1/4 | H-20 | H-20 | 30 KW | 30 KW | 60 | 60 |
| 30 KW 240V/3Ph/60Hz | 75.6 Amps | 3 AWG | 1 PH | 3 Phase | 1 1/4 | H-23 | B&F | 30 KW | 30 KW | 60 | 60 |
| 30 KW 240V/3Ph/60Hz | 75.6 Amps | 3 AWG | 3 PH | 1 Phase | 1 1/4 | H-16 | H-16 | 30 KW | 30 KW | 60 | 60 |
| 30 KW 240V/3Ph/60Hz | 74.6 Amps | 3/6 AWG | 3 Phase | 3 Phase | 1 1/4 | H-20 | B&F | 30 KW | 30 KW | 50 | 50 |
| 30 KW 240/415/3Ph/50Hz | 76/45 Amps | 8 AWG | 3 Phase | 3 Phase | 1 | H-11 | H-11 | 30 KW | 30 KW | 35 | 35 |
| 30 KW 480/3Ph/60Hz | 38.4 Amps | 8 AWG | 3 Phase | 3 Phase | 1 | H-11 | H-11 | 30 KW | 30 KW | 35 | 35 |
| 30 KW 575/3Ph/60Hz | 33.9 Amps | 8 AWG | 3 Phase | 3 Phase | 1 | H-8 | H-8 | 30 KW | 30 KW | 35 | 35 |


* For Branch Circuit Nameplates: TU8518 (Single Motor) & TU8519 (Double Motor)

ELECTRIC BONNET "C" MODEL FOR 30 KW HEATING ELEMENTS ONLY, 50 LB. DRYER

| A | B | C | D | E | F |
|----------------------|--------------------------|------------------|---------------|--------------------------------|---|
| CONTROL BOX L/WIRING | CONTACTOR (COIL VOLTAGE) | TERMINAL BLOCK | FUSE 3 req'd. | BONNET W/ ELEMENTS | HEATER ELEMENT |
| TU9242 (240V) | TU9170 (240V) 60 Amp | TU9143 | TU7476 60 Amp | TU7589 (30KW) 208V. - 3 PH | TU7056, 240V, 40KW USED FOR 208V, 30KW |
| TU9243 (240V) | TU9169 (240V) 50 Amp | TU9143 | TU7090 50 Amp | TU7590 (30KW) 240V. - 3 PH | TU6946 30KW - 240V. |
| TU9244 (240V) | TU9169 (240V) 50 Amp | TU9143* TU9142** | TU7090 50 Amp | TU7590 (30KW) 240 or 415V-3 PH | TU6946 30KW - 240V. |
| TU9245 (480V) | TU9140 (240V) 40 Amp | TU9143 | TU7071 35 Amp | TU7590 (30KW) 480V. - 3 PH | TU6946, 30KW, 240V USED FOR 30KW, 480V |
| TU9245 (575V) | TU9140 (240V) 40 Amp | TU9143 | TU7071 35 Amp | TU7590 (30KW) 575V. - 3 PH | TU8864, 30KW, 287V USED FOR 30KW, 575V. |

** 3-Pole ** 1-Pole (Neutral)

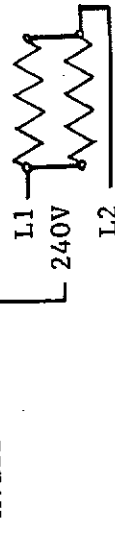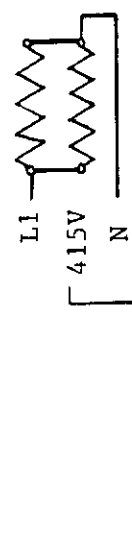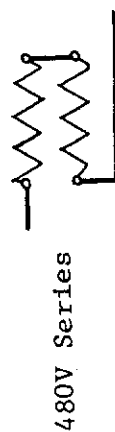

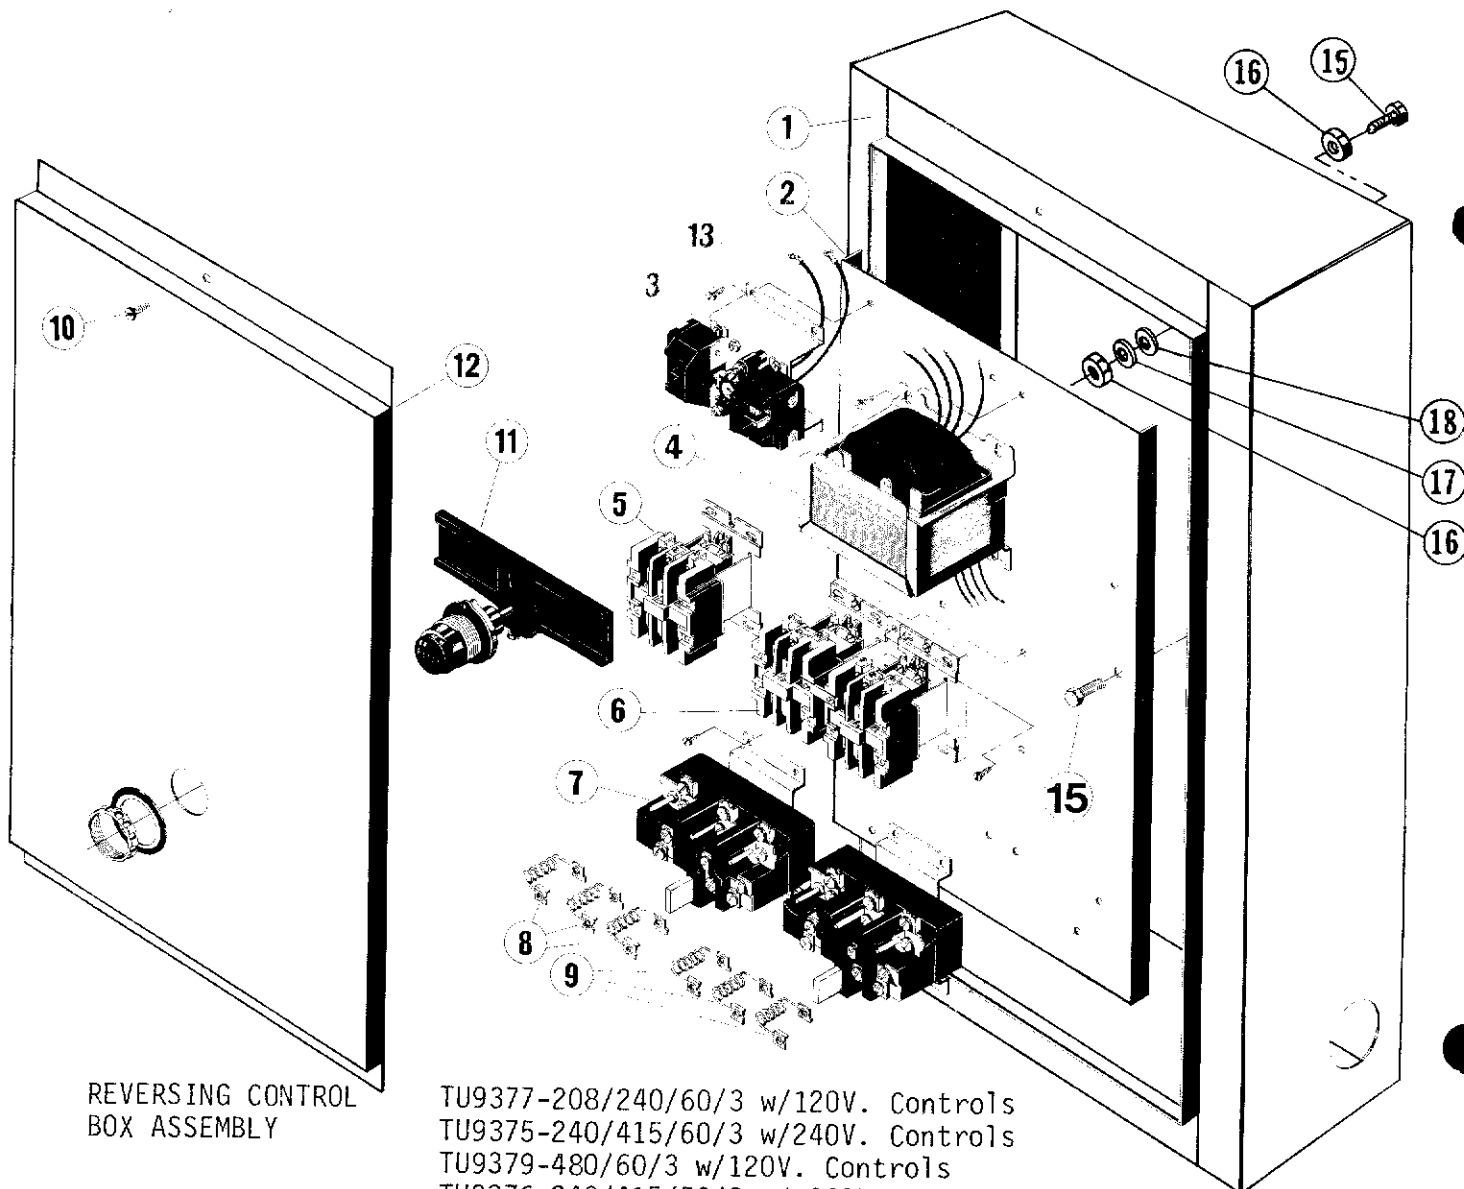

REVERSING CONTROL BOX ASSEMBLY

| Ref.No. | Part No. |
|---------|------------|
| 1 | TU9374 |
| 2 | TU6959 |
| 3 | |
| 4 | TU4659 |
| | TU4660 |
| 5 | **TU6965 |
| | ***TU6963 |
| | ****TU8727 |
| 6 | **TU7252 |
| | ***TU6964 |
| | ****TU8728 |
| 7 | TU6774 |
| 8 | *TU267900 |
| 9 | *TU267900 |
| 10 | P274 |
| 11 | TU6808 |
| 12 | TU6834 |
| 13 | M263 |
| 15 | FB189 |

TU9377-208/240/60/3 w/120V. Controls
 TU9375-240/415/60/3 w/240V. Controls
 TU9379-480/60/3 w/120V. Controls
 TU9376-240/415/50/3 w/ 240V. Controls
 TU9378-240/60/3 W/240V. Controls

Description

Control Box Welded Assembly
 Mounting Panel Plate

Transformer(for TU9375 Only)
 Transformer(for TU9377 & TU9379 Only)
 Contactor- 120V./60 Hz.
 Contactor- 208/240V./60 Hz.
 Contactor- 240V./50 Hz.
 Rev. Contactor- 120V./60 Hz.
 Rev. Contactor- 208/240V./60 Hz.
 Rev. Contactor- 240V./50 Hz.
 Overload Unit(2 Req'd.)
 Overload Heater (Fan)
 Overload Heater (Basket)
 1/4"-20x3/4" Truss Head Screw
 Reset Button Kit
 Box Cover Plate
 #8x3/8" S.M.Screw
 1/4"-20x1" Hex Bolt

16 TU4934 1/4-20 Hex Nut
 17 TU2846 1/4 Cut Washer
 18 TU2847 1/4 Flat Washer


* When ordering, specify number on heater,e.g. : H-25 and TU267900.

** TU7281- Contactor Coil Only.

*** TU7282- Contactor Coil Only.


**** TU8689- Contactor Coil Only.

Timer Complete

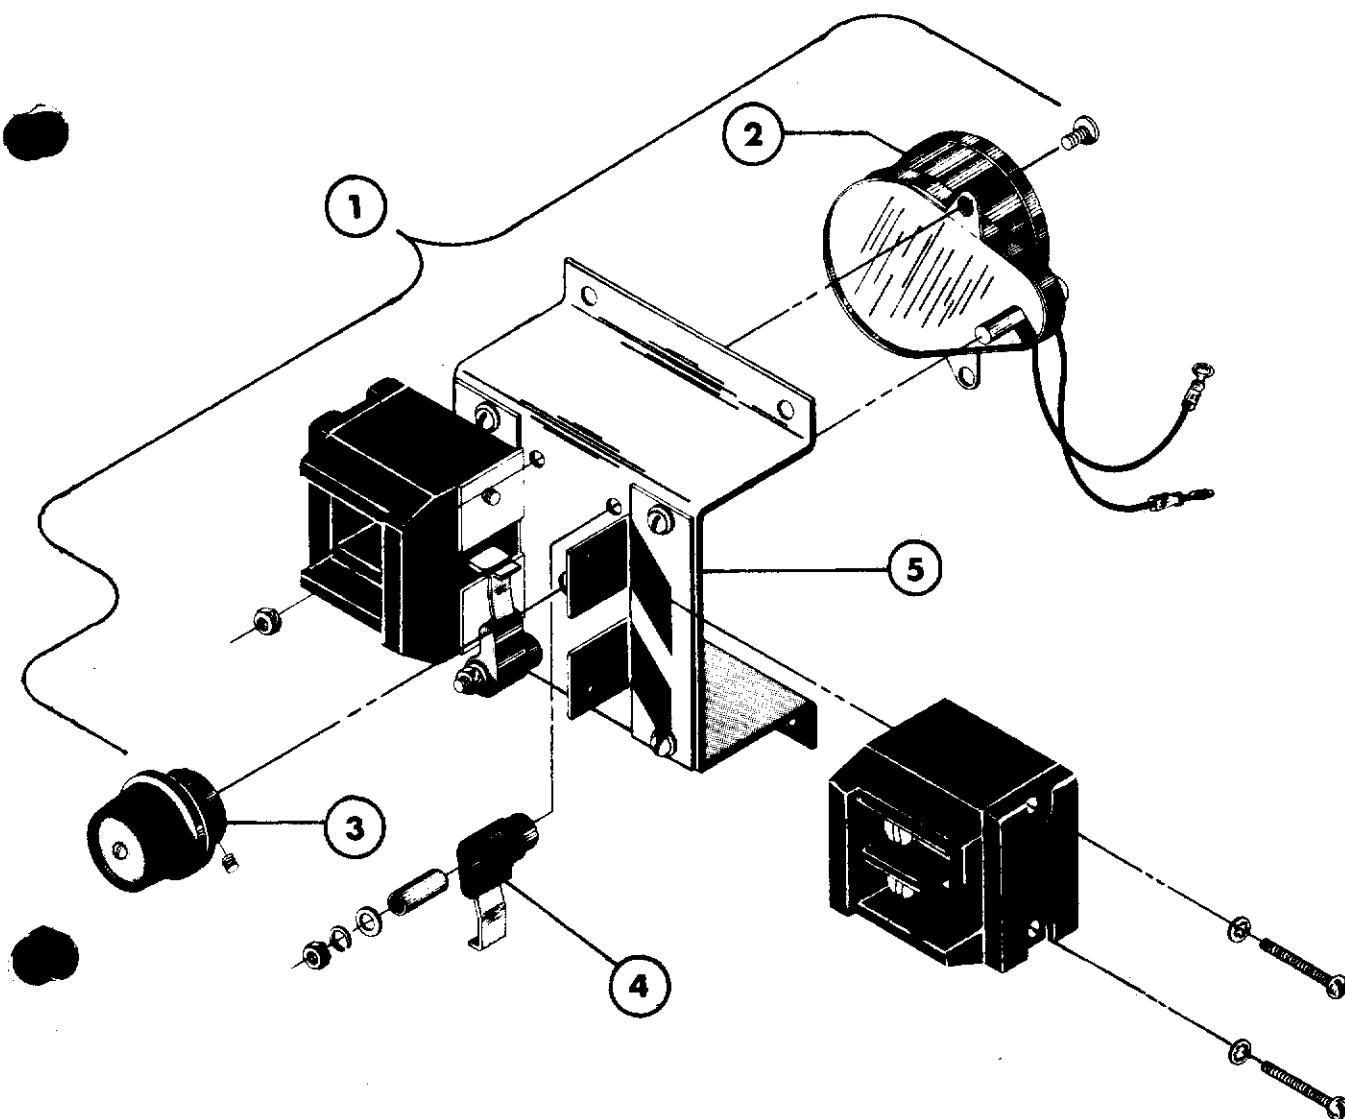


REVERSING TIMER

| REF. NO. | PART NO. | DESCRIPTION |
|----------|---------------|-------------------------------------|
| 1** | TU44131 | Timer (Complete) 120 V., 60 Cy. |
| | TU44132 | Timer (Complete) 240 V., 60 Cy. |
| | TU44133 | Timer (Complete) 120 V., 50 Cy. |
| | TU44134 | Timer (Complete) 240 V., 50 Cy. |
| 2 | TU17371 | Timer Motor 120 V., 60 Cy. |
| | TU17372 | Timer Motor 240 V., 60 Cy. |
| | TU17373 | Timer Motor 120 V., 50 Cy. |
| | TU17374 | Timer Motor 240 V., 50 Cy. |
| 3 | TU4424 | Timer Cam |
| 4 | TU4426 | Timer Lever |
| 5 | TU4425 | Timer Frame |
| ** | <u>TU7502</u> | Reversing Timer Complete Less Motor |

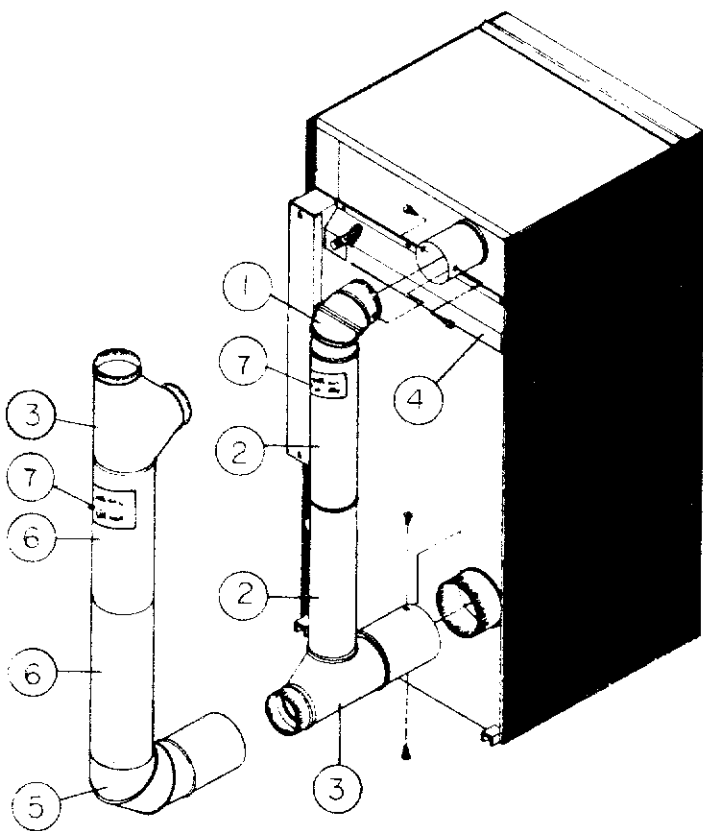

DUCT WORK ASSEMBLY

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|--------------------|
| 1 | TU8053 | Duct Elbow |
| 2 | TU8055 | Duct Long |
| 3 | TU8052 | Duct Tee |
| 4 | TU8499 | Rear Air Guide |
| 5 | TU7375 | Extended Elbow |
| 6 | TU8177 | Duct Short |
| 7 | TU8593 | Installation Label |

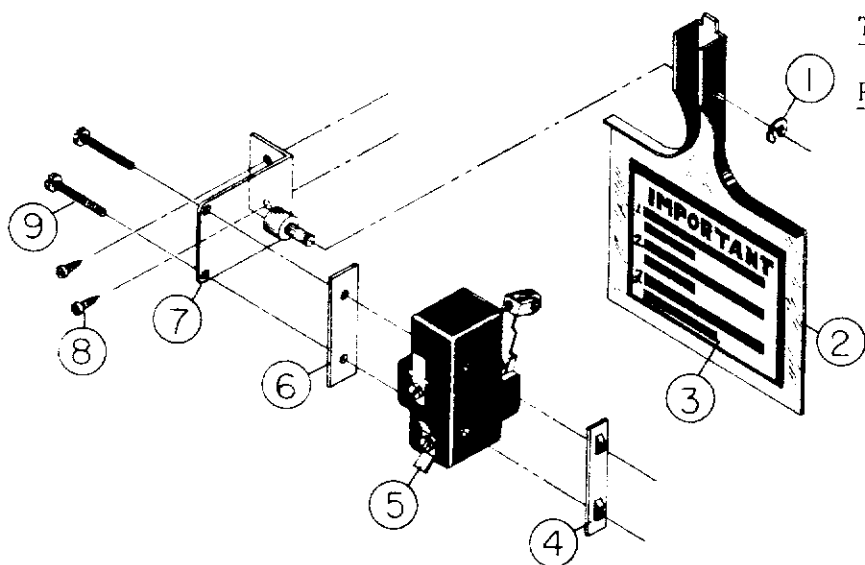

TU8206 AIR SWITCH ASS'Y.

| <u>REF. NO.</u> | <u>PART NO.</u> | <u>DESCRIPTION</u> |
|-----------------|-----------------|--------------------------------|
| 1 | F888 | "E" Ring |
| 2 | TU2463 | Actuator Arm |
| 3 | TU3476 | Air Switch Decal |
| 4 | TU1771 | #6 Tinnerman Nut |
| 5 | TU8155 | Air Switch |
| 6 | TU1770 | Insulator |
| 7 | TU8171 | Air Switch Bracket |
| 8 | TU7733 | #8-18x1/2" Self-Drilling Screw |
| 9 | TU3219 | #6x1" Round Hd. S.M.S |